

**D  
O  
O  
W  
N  
K  
E**

# **NEXEDGE NXR-700/ NXR-800**

VHF DIGITAL BASE-REPEATER/ UHF DIGITAL BASE-REPEATER  
**INSTRUCTION MANUAL**

BASE-RELAIS NUMÉRIQUE VHF/ BASE-RELAIS NUMÉRIQUE UHF  
**MODE D'EMPLOI**

BASE-REPETIDOR DIGITAL VHF / BASE-REPETIDOR DIGITAL UHF  
**MANUAL DE INSTRUCCIONES**

BASE-RIPETITORE DIGITALE VHF/ BASE-RIPETITORE DIGITALE UHF  
**MANUALE DI ISUTRUZIONI**

VHF DIGITAL BASE-REPEATER/ UHF DIGITAL BASE-REPEATER  
**BEDIENUNGSANLEITUNG**

VHF DIGITALE BASIS REPEATER/ UHF DIGITALE BASIS REPEATER  
**GEBRUIKSAANWIJZING**

# NXR-700 / NXR-800 INSTRUCTION MANUAL

## VHF DIGITAL BASE-REPEATER / UHF DIGITAL BASE-REPEATER

### THANK YOU!

We are grateful you purchased this **Kenwood** repeater. We believe this easy-to-program repeater will be highly effective in your communications system, and will keep personnel operating at peak efficiency.

**Kenwood** incorporates the latest in advanced technology into all of our products. As a result, we feel strongly that you will be pleased with the quality and features of this product.

### PRECAUTIONS

- Do not expose the unit to rain or moisture; to prevent fire or electric shock.
- Do not open the unit under any circumstances; to avoid risk of electric shock.
- Do not expose the unit to long periods of direct sunlight, nor place it close to heating appliances.
- Do not place the unit in excessively dusty and/or humid areas, nor on unstable surfaces.
- If you detect an abnormal odor or smoke coming from the unit, disconnect the power from the unit immediately. Contact your **Kenwood** service center or dealer.

### NOTICES TO THE USER

- ◆ Government law prohibits the operation of unlicensed radio transmitters within the territories under government control.
- ◆ Illegal operation is punishable by fine and/or imprisonment.
- ◆ Refer service to qualified technicians only.



- ◆ This repeater is intended for use as a fixed base station with the antenna located outdoors on the rooftop or on an antenna tower. (except U.S.A. and Canada)
- ◆ This repeater is designed for a 13.2 V DC power source! Never use a 24 V DC or higher source to power the repeater.
- ◆ Use only the supplied DC cord.
- ◆ Do not remove the ferrite core attached to the DC cord. Doing so may cause interference with radio communications.

The AMBE+2 voice coding Technology embodied in this product is protected by intellectual property rights including patent rights, copyrights and trade secrets of Digital Voice Systems, Inc. This voice coding Technology is licensed solely for use within this Communications Equipment. The user of this Technology is explicitly prohibited from attempting to extract, remove, decompile, reverse engineer, or disassemble the Object Code, or in any other way convert the Object Code into a human-readable form. U.S. Patent Nos. #5,870,405, #5,826,222, #5,754,974, #5,701,390, #5,715,365, #5,649,050, #5,630,011, #5,581,656, #5,517,511, #5,491,772, #5,247,579, #5,226,084 and #5,195,166.

### UNPACKING AND CHECKING EQUIPMENT

**Note:** The following unpacking information is for use by your **Kenwood** dealer, an authorized **Kenwood** service center, or the factory.

Carefully unpack the repeater. We recommend that you identify the items listed in the following table before discarding the packing material. If any items are missing or have been damaged during shipment, file a claim with the carrier immediately.

Item	Part Number	Quantity
Front glass	B10-2781-XX	1
Dressed screw	N08-0563-XX	1
Bracket	J29-0725-XX	2
Flat head machine screw	N32-4008-XX	4
Handle and screw set	K01-0421-XX	1
DC cord	E30-3344-XX	1
Lead wire with connector (15 pin)	E37-1381-XX	1
Fuse (15 A)	F05-1537-XX	1
Instruction Manual	B62-XXXX-XX	1

### INSTALLATION

To install the handles onto the front panel of the repeater, align the handles with the holes on the front panel, then secure the handles using the supplied screws.

Please consult your dealer for installing the repeater and antenna.

### MICROPHONE


Connect an optional KMC-30, KMC-35, or KMC-9C **Kenwood** microphone to the **MICROPHONE** jack on the front panel.

### OCXO UNIT (KXK-3):Option

The OCXO unit (KXK-3) is an Oven Controlled Crystal Oscillator (OCXO) unit.


## CONTROLS AND FUNCTIONS

### ■ Front Panel

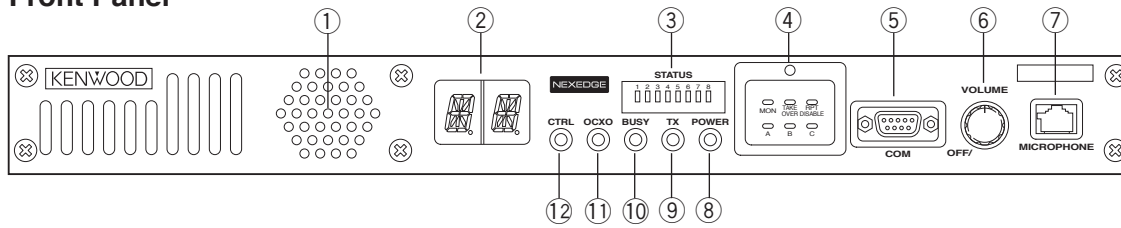

- 1 **Speaker**
- 2 **CH/STATUS Display**  
Two 17-segment digits display the channel number, name, or status.
- 3 **STATUS indicator**  
Indicates the status of the repeater. (NXDN mode)
- 4 **Programmable Function keys**  
Press these keys to activate their programmable functions.
- 5 **COM jack**  
Connect to the PC using a RS-232C standard DB9 (Female) cross cable.
- 6 **VOLUME control**  
Turn clockwise until a click sounds, to unmute the audio. Rotate to adjust the audio. Turn counterclockwise fully to mute the audio.
- 7 **MICROPHONE jack**  
Connect a microphone to this 8-pin modular jack.
- 8 **POWER indicator**  
Lights green when power is supplied to the **DC 13.2V** jack. Blinks red when an abnormal voltage is present.
- 9 **TX indicator**  
Lights red while transmitting.
- 10 **BUSY indicator**  
Lights green while a signal is being received.
- 11 **OCXO indicator**  
The OCXO indicator shows the state of the reference 10 MHz oscillator :  
Lights Green when using a reference signal from an optional OCXO unit (KXK-3).  
Lights Orange when using a reference signal from another repeater.  
Lights red when no reference signal is available or when an error occurs.  
Does not light when the reference signal is an internal VCXO signal.
- 12 **CTRL indicator**  
The CTRL indicator shows the control channel status while using Digital trunking :  
Lights Green when the repeater is used as control channel.  
Blinks Green when using a non-dedicated control channel.

### ■ Rear Panel

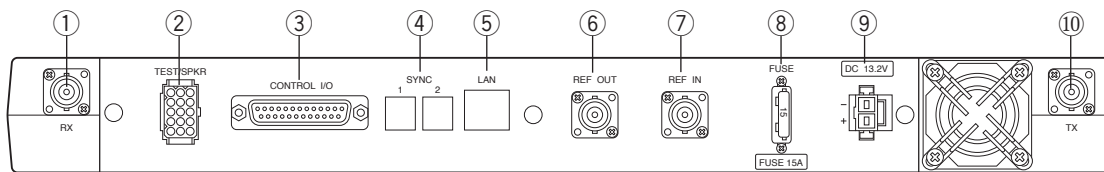

- 1 **RX IN jack**  
Connect an RX antenna or a duplexer to this BNC receptacle.
- 2 **TEST/SPKR jack**  
Test input/output jack. Connect an external speaker to this jack.
- 3 **CONTROL I/O jack**  
Connect a repeater controller or a remote panel to this DB-25 interface.
- 4 **SYNC 1 / 2 jack**  
Connect to another repeater to use synchronous frame signaling for digital trunking.
- 5 **LAN jack**  
Connect to Ethernet.
- 6 **REF OUT jack**  
Connect to another repeater within the site to supply a reference signal.
- 7 **REF IN jack**  
Connect from another repeater within the site to receive a reference signal.
- 8 **FUSE**  
Insert 15 A blade fuse into this fuse holder.
- 9 **DC 13.2V jack**  
Connect a 13.2 V DC power supply to this jack.
- 10 **TX OUT jack**  
Connect a TX antenna or a duplexer to this BNC receptacle.

## REPEATER OPERATION

**Note:** Please consult your dealer for programming the repeater. Due to the frequency stability on the 6.25 kHz bandwidth channel, when operating the repeater using an optional OCXO unit, allow the unit to warm up for 24 hours after turning the power on. After turning on the power, wait for approximately 10 seconds for the VCXO or 5 minutes for the OCXO (when mounting) to warm up. During this time, the CH/STATUS Display will blink. The keys will function when they are pressed.

When power is applied to the unit, the **POWER** indicator lights green. Turn the **VOLUME** control clockwise until a click sounds, to unmute the audio. Rotate to adjust the audio. Turn the **VOLUME** control counterclockwise fully to mute the audio.

The **BUSY** indicator lights green while receiving a signal and the **TX** indicator lights red while transmitting.

## TRANSCEIVER OPERATION

### ■ Receive

Adjust the volume to your desired level. You may need to readjust the volume if you are having interference while receiving a message from your dispatcher or another member in your fleet.

The **BUSY** indicator lights green while a signal is being received.

### ■ Transmit

- 1 Listen to the channel before transmitting, to make sure it is not being used.
- 2 Press the microphone **PTT** switch, then speak in your normal speaking voice.  
The **TX** indicator lights red while transmitting.
- 3 When you finish speaking, release the **PTT** switch.

# KENWOOD

## NOTIFICATION

This equipment complies with the essential requirements of Directive 1999/5/EC.

The use of the warning symbol ⓘ means the equipment is subject to restrictions of use in certain countries.

This equipment requires a licence and is intended for use in the countries as below.

## NOTIFICATION

Cet équipement est conforme aux principales exigences de la Directive 1999/5/CE.

L'usage du symbole d'avertissement ⓘ signifie que l'équipement est soumis à des restrictions d'usage dans certains pays.

Cet équipement nécessite un contrat de licence et il est destiné à être utilisé dans les pays ci-dessous.

## AVISO

Este equipo cumple con los requisitos esenciales de la Directiva 1999/5/CE.

El uso del símbolo de advertencia ⓘ significa que el equipo está sujeto a restricciones de uso en ciertos países.

Este equipo requiere una licencia y está destinado para utilizarse en los siguientes países.

AT	BE	DK	FI	FR	DE	GR	IS
IE	IT	LI	LU	NL	NO	PT	ES
SE	CH	GB	CY	CZ	EE	HU	LV
LT	MT	PL	SK	SI	BG	RO	

ISO3166

## AVVISO

La presente apparecchiatura è conforme ai requisiti fondamentali della Direttiva 1999/5/CE.

L'uso del simbolo di avvertenza ⓘ indica che l'apparecchiatura è soggetta alle limitazioni d'uso in vigore in determinati paesi.

Questa apparecchiatura è concepita per essere utilizzata in tutti i paesi. L'apparecchiatura deve essere provvista di licenza e n'è consentito l'uso nei seguenti paesi.

## HINWEIS

Dieses Gerät erfüllt die grundlegenden Anforderungen der Richtlinie 1999/5/EG.

Das Alert-Zeichen ⓘ bedeutet, dass dieses Gerät in manchen Ländern bestimmten Verwendung-seinschränkungen unterliegt.

Für dieses Gerät ist eine Lizenz erforderlich; es ist für die Verwendung in den unten aufgeführten Ländern vorgesehen.

## KENNISGEVING

Deze apparatuur voldoet aan de vereisten van Richtlijn 1999/5/EG.

Het gebruik van het waarschuwings-symbool ⓘ betekent dat dit apparaat in bepaalde landen aan gebruiksbe-perkingen onderhevig is.

Voor deze apparatuur is een licentie nodig en is bedoeld voor gebruik in onderstaande landen.

AT	BE	DK	FI	FR	DE	GR	IS
IE	IT	LI	LU	NL	NO	PT	ES
SE	CH	GB	CY	CZ	EE	HU	LV
LT	MT	PL	SK	SI	BG	RO	

ISO3166

CE0168 ⓘ

One or more of the following statements may be applicable:

**FCC WARNING**

This equipment generates or uses radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

**INFORMATION TO THE DIGITAL DEVICE USER REQUIRED BY THE FCC**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can generate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer for technical assistance.

# Addendum

## Terminal Description

### MIC (Modular Jack)

Pin NO.	Pin Name	Description	Specification	I/O	Notes
1	NC	Not used	Not used	-	
2	SB	Power Output	13.8 V	O	
3	GND	GND	GND	-	
4	PTT	PTT Signal	Input Impedance 100 kΩ	I	
5	MICG	MIC GND	MIC GND	-	
6	MIC	MIC Input	600 Ω	I	
7	HOOK	Hook Detection	Input Impedance 100 kΩ	I	
8	NC	Not used	Not used	-	

### COM (D-SUB 9 Pin) CONNECTOR

Pin NO.	Pin Name	Description	Specification	I/O	Notes
1	CD	Carrier Detect	Conform to RS-232C standard	I	
2	RD	Receive Data	Conform to RS-232C standard	I	
3	SD	Send Data	Conform to RS-232C standard	O	
4	DTR	Data Terminal Ready	Conform to RS-232C standard	O	
5	SG	GND	GND	-	
6	DSR	Data Set Ready	Conform to RS-232C standard	I	
7	RTS	Request to Send	Conform to RS-232C standard	O	
8	CTS	Clear to Send	Conform to RS-232C standard	I	
9	CI	Ringer DET	Conform to RS-232C standard	I	

### TEST/ SPEAKER CONNECTOR

Pin NO.	Pin Name	Description	Specification	I/O	Notes
1	SB	Power Output	13.8 V	O	
2	SB	Power Output	13.8 V	O	
3	NC	Not used	Not used	-	
4	GND	GND	GND	-	
5	GND	GND	GND	-	
6	SPG	Speaker GND	Speaker GND	-	
7	RD	RX Audio Output	Load impedance 4.7 kΩ	O	not De-emphasis
8	RSSI	RSSI Signal Output	Output Level 0 to 5 V	O	
9	SPI	Internal Speaker Input	Short with "SPO"	I	
10	AO1	Open Collector Terminal	Allowable current value MAX 200mA	O	
11	AO2	Open Collector Terminal	Allowable current value MAX 200mA	O	
12	SPO	External Speaker Output	Output Level 3W (5%Distortion)	O	
13	AO3	Open Collector Terminal	Allowable current value MAX 200mA	O	
14	AO4	Open Collector Terminal	Allowable current value MAX 200mA	O	
15	AO5	Open Collector Terminal	Allowable current value MAX 200mA	O	

### Control I/O (D-SUB 25 Pin) CONNECTOR

Pin NO.	Pin Name	Description	Specification	I/O	Notes
1	NC	Not used	Not used	-	
2	NC	Not used	Not used	-	
3	NC	Not used	Not used	-	
4	AI1	Programmable Function Input 1	Input Impedance 47 kΩ	I	
5	AI2	Programmable Function Input 2	Input Impedance 47 kΩ	I	
6	AI3	Programmable Function Input 3	Input Impedance 47 kΩ	I	
7	DG	Digital GND	Digital GND	-	
8	TD	TX Audio Input	Input Impedance 600 Ω	I	not Pre-emphasis
9	TA	TX Audio Input	Input Impedance 600 Ω	I	Pre-emphasis
10	RD	RX Audio Output	Load Impedance 4.7 kΩ	O	not De-emphasis
11	RA	RX Audio Output	Load Impedance 4.7 kΩ	O	De-emphasis
12	RXG	RX Signal GND	RX Signal GND	-	
13	SPM	Speaker Mute	Input Impedance 47 kΩ	I	
14	BER CLK	For Bit Error Rate Clock	CMOS	O	
15	EMON	External Monitor Switch	Input Impedance 47 kΩ	I	
16	EPTT	External PTT Switch	Input Impedance 47 kΩ	I	
17	SC	Squelch Control	Output level 0 or 3.3 V	O	
18	BER DAT	For Bit Error Rate Data	CMOS	O	
19	TXG	TX Signal GND	TX Signal GND	-	
20	IO1	Programmable Function I/O 1	Input Impedance 47 kΩ	I/O	Output level 0 or 5 V
21	IO2	Programmable Function I/O 2	Input Impedance 47 kΩ	I/O	Output level 0 or 5 V
22	IO3	Programmable Function I/O 3	Input Impedance 47 kΩ	I/O	Output level 0 or 5 V
23	IO4	Programmable Function I/O 4	Input Impedance 47 kΩ	I/O	Output level 0 or 5 V
24	IO5	Programmable Function I/O 5	Input Impedance 47 kΩ	I/O	Output level 0 or 5 V
25	IO6	Programmable Function I/O 6	Input Impedance 47 kΩ	I/O	Output level 0 or 5 V

### LAN (Modular Jack)

Pin NO.	Pin Name	Description	Specification	I/O	Notes
1	TD+	TX Signal +	Conform to IEEE802.3 standard	O	100 Mbps
2	TD-	TX Signal -	Conform to IEEE802.3 standard	O	100 Mbps
3	RD+	RX Signal +	Use Designated Transformer	I	100 Mbps
4	NC	Not used	Not used	-	
5	NC	Not used	Not used	-	
6	RD-	RX Signal -	Use Designated Transformer	I	100 Mbps
7	NC	Not used	Not used	-	
8	NC	Not used	Not used	-	

### SYNC 1, 2 Connector (There are two connectors)

Pin NO.	Pin Name	Description	Specification	I/O	Notes
1	FRMA	RS-485 Differential Signal A	Conform to RS485	I/O	
2	NC	Not used	Not used	-	
3	NC	Not used	Not used	-	
4	FRMB	RS-485 Differential Signal B	Conform to RS485	I/O	

**RX ANT** Impedance 50 Ω

**TX ANT** Impedance 50 Ω

**REF IN** External Reference Signal Input (10 MHz). Impedance : more than 1 kΩ

**REF OUT** Reference Signal Distribution (10 MHz). Load Impedance : more than 20 Ω

# Addendum

## Description de la borne

### MIC (Prise modulaire)

N° de broche	Nom de broche	Description	Caractéristiques	E/S	Remarques
1	NC	Non utilisé	Non utilisé	-	
2	SB	Puissance développée	13,8 V	S	
3	GND	GND (terre)	GND (terre)	-	
4	PTT	Signal PTT (poussez-pour-parler)	Impédance entrée 100 k $\Omega$	E	
5	MICG	MIC GND	MIC GND	-	
6	MIC	Entrée MIC	600 $\Omega$	E	
7	HOOK	Détection de support	Impédance entrée 100 k $\Omega$	E	
8	NC	Non utilisé	Non utilisé	-	

### CONNECTEUR COM (D-SUB 9 broches)

N° de broche	Nom de broche	Description	Caractéristiques	E/S	Remarques
1	CD	Détection de porteuse	Conforme au standard RS-232C	E	
2	RD	Réception de données	Conforme au standard RS-232C	E	
3	SD	Emission de données	Conforme au standard RS-232C	S	
4	DTR	Terminal de données prêt	Conforme au standard RS-232C	S	
5	SG	GND (terre)	GND (terre)	-	
6	DSR	Poste de données prêt	Conforme au standard RS-232C	E	
7	RTS	Demande pour émettre	Conforme au standard RS-232C	S	
8	CTS	Voie libre	Conforme au standard RS-232C	E	
9	CI	Tonalité DET	Conforme au standard RS-232C	E	

### CONNECTEUR TEST/MICROPHONE

N° de broche	Nom de broche	Description	Caractéristiques	E/S	Remarques
1	SB	Puissance développée	13,8 V	S	
2	SB	Puissance développée	13,8 V	S	
3	NC	Non utilisé	Non utilisé	-	
4	GND	GND (terre)	GND (terre)	-	
5	GND	GND (terre)	GND (terre)	-	
6	SPG	Haut parleur GND	Haut parleur GND	-	
7	RD	RX Sortie Audio	Impédance de charge 4,7 k $\Omega$	S	pas de désaccentuation
8	RSSI	RSSI Sortie signal	Niveau de sortie 0 à 5 V	S	
9	SPI	Entrée haut parleur interne	Court avec "SPO"	E	
10	AO1	Borne de collecteur ouvert	Valeur de courant admissible 200mA	S	
11	AO2	Borne de collecteur ouvert	Valeur de courant admissible 200mA	S	
12	SPO	Sortie haut parleur externe	Niveau de sortie 3W (Distorsion 5%)	S	
13	AO3	Borne de collecteur ouvert	Valeur de courant admissible 200mA	S	
14	AO4	Borne de collecteur ouvert	Valeur de courant admissible 200mA	S	
15	AO5	Borne de collecteur ouvert	Valeur de courant admissible 200mA	S	

### CONNECTEUR Commande E/S (D-SUB 25 broches)

N° de broche	Nom de broche	Description	Caractéristiques	E/S	Remarques
1	NC	Non utilisé	Non utilisé	-	
2	NC	Non utilisé	Non utilisé	-	
3	NC	Non utilisé	Non utilisé	-	
4	AI1	Entrée fonction programmable 1	Impédance entrée 47 k $\Omega$	E	
5	AI2	Entrée fonction programmable 2	Impédance entrée 47 k $\Omega$	E	
6	AI3	Entrée fonction programmable 3	Impédance entrée 47 k $\Omega$	E	
7	DG	GND numérique	GND numérique	-	
8	TD	TX Entrée audio	Impédance entrée 600 $\Omega$	E	pas de pré-accentuation
9	TA	TX Entrée audio	Impédance entrée 600 $\Omega$	E	Pré-accentuation
10	RD	RX Sortie Audio	Impédance de charge 4,7 k $\Omega$	S	pas de désaccentuation
11	RA	RX Sortie Audio	Impédance de charge 4,7 k $\Omega$	S	Désaccentuation
12	RXG	GND Signal RX	GND Signal RX	-	
13	SPM	Haut parleur en sourdine	Impédance entrée 47 k $\Omega$	E	
14	BER CLK	Pour l'horloge des taux d'erreur sur les bits	CMOS	S	
15	EMON	Commutateur de moniteur externe	Impédance entrée 47 k $\Omega$	E	
16	EPTT	Commutateur PTT externe	Impédance entrée 47 k $\Omega$	E	
17	SC	Commande du silencieux	Niveau de sortie 0 ou 3,3 V	S	
18	BER DAT	Pour les données des taux d'erreur sur les bits	CMOS	S	
19	TXG	GND Signal de transmission	GND Signal de transmission	-	
20	IO1	Fonction programmable E/S 1	Impédance entrée 47 k $\Omega$	E/S	Niveau de sortie 0 ou 5 V
21	IO2	Fonction programmable E/S 2	Impédance entrée 47 k $\Omega$	E/S	Niveau de sortie 0 ou 5 V
22	IO3	Fonction programmable E/S 3	Impédance entrée 47 k $\Omega$	E/S	Niveau de sortie 0 ou 5 V
23	IO4	Fonction programmable E/S 4	Impédance entrée 47 k $\Omega$	E/S	Niveau de sortie 0 ou 5 V
24	IO5	Fonction programmable E/S 5	Impédance entrée 47 k $\Omega$	E/S	Niveau de sortie 0 ou 5 V
25	IO6	Fonction programmable E/S 6	Impédance entrée 47 k $\Omega$	E/S	Niveau de sortie 0 ou 5 V

### LAN (Prise modulaire)

N° de broche	Nom de broche	Description	Caractéristiques	E/S	Remarques
1	TD+	Signal + TX	Conforme au standard IEEE802.3	S	100 Mbps
2	TD-	Signal - TX	Conforme au standard IEEE802.3	S	100 Mbps
3	RD+	Signal + RX	Utiliser le transformateur désigné	E	100 Mbps
4	NC	Non utilisé	Non utilisé	-	
5	NC	Non utilisé	Non utilisé	-	
6	RD-	Signal - RX	Utiliser le transformateur désigné	E	100 Mbps
7	NC	Non utilisé	Non utilisé	-	
8	NC	Non utilisé	Non utilisé	-	

### Connecteurs SYNC 1, 2 (Il y a deux connecteurs)

N° de broche	Nom de broche	Description	Caractéristiques	E/S	Remarques
1	FRMA	Signal Différentiel A RS-485	Conforme au RS485	E/S	
2	NC	Non utilisé	Non utilisé	-	
3	NC	Non utilisé	Non utilisé	-	
4	FRMB	Signal Différentiel B RS-485	Conforme au RS485	E/S	

**RX ANT** Impédance 50  $\Omega$

**TX ANT** Impédance 50  $\Omega$

**REF IN** Entrée signal de référence externe (10 MHz). Impédance : supérieure à 1 k $\Omega$

**REF OUT** Distribution signal de référence (10 MHz). Impédance de charge : supérieure à 20  $\Omega$

## MANDATORY SAFETY INSTRUCTIONS TO INSTALLERS AND USERS

---

---

- Use only manufacturer or dealer supplied antennas.
- Antenna Minimum Safe Distance: **180 cm (6 feet)**.
- Antenna Gain: **0** dBi referenced to a dipole.

The Federal Communications Commission has adopted a safety standard for human exposure to RF (Radio Frequency) energy which is below the OSHA (Occupational Safety and Health Act) limits.

- Antenna Mounting: The antenna supplied by the manufacturer or radio dealer must not be mounted at a location such that during radio transmission, any person or persons can come closer than the above indicated minimum safe distance to the antenna, i.e. **180 cm (6 feet)**.
- To comply with current FCC RF Exposure limits, the antenna must be installed at or exceeding the minimum safe distance shown above, and in accordance with the requirements of the antenna manufacturer or supplier.
- Vehicle installation: The antenna can be mounted at the center of a vehicle metal roof or trunk lid, if the minimum safe distance is observed.
- Base Station Installation: The antenna should be fixed-mounted on an outdoor permanent structure. RF Exposure compliance must be addressed at the time of installation.

Antenna substitution: Do not substitute any antenna for the one supplied or recommended by the manufacturer or radio dealer.

You may be exposing person or persons to excess radio frequency radiation. You may contact your radio dealer or the manufacturer for further instructions.



Maintain a separation distance from the antenna to person(s) of at least **180 cm (6 feet)**.

You, as the qualified end-user of this radio device must control the exposure conditions of bystanders to ensure the minimum separation distance (above) is maintained between the antenna and nearby persons for satisfying RF Exposure compliance. The operation of this transmitter must satisfy the requirements of Occupational/Controlled Exposure Environment, for work-related use, transmit only when person(s) are at least the minimum distance from the properly installed, externally mounted antenna. Transmit only when people outside the vehicle are at least the recommended minimum lateral distance away from the antenna/vehicle.

B59-2667-00