



© 2005 Lennox Industries Inc.
Dallas, Texas, USA

KITS COMMON TO COOLING AND HEAT PUMP EQUIPMENT

TP Technical
Publications
Litho U.S.A.

505,002M
04/2005

LOSS OF CHARGE KIT

INSTALLATION INSTRUCTIONS FOR LOSS OF CHARGE KIT (LB-110135 / 84M23) USED WITH CONDENSING UNITS AND HEAT PUMPS

Shipping & Packing List

Package 1 of 1 contains:

- 1 - Loss of charge switch (S24)
- 2 - Wire nuts
- 1 - Valve depressor tee fitting

Application

The loss of charge kit (LB-110135A / 84M23) is used with all condensing units and heat pumps which use either R-22 or R-410A refrigerant. The loss of charge switch protects the system compressor from damage due to a loss of charge. The single-pole / single-throw, normally closed switch is permanently adjusted to open at 25 psig (± 5 psig). The switch automatically resets (closes) at 55 psig (± 5 psig).

⚠ WARNING

This kit is to be installed by a qualified Lennox service technician or other qualified agency in accordance with the manufacturer's instructions, all codes, and requirements of the authority having jurisdiction.

Installation

⚠ WARNING

Disconnect power before servicing unit.

NOTE - The depressor tee fitting provided with this kit is used to install the loss of charge switch on the liquid line service valve.

- 1 - Disconnect power to unit.
- 2 - Install the provided loss of charge switch on an open port (no valve core) of the provided valve depressor tee fitting.

NOTE - The pressure switch must be installed before the depressor tee fitting is installed in order to avoid refrigerant loss.

- 3 - Install the depressor tee fitting on the liquid line service port. See figure 1 for illustration of typical installation.
- 4 - Check for leaks.
- 5 - Wire loss of charge switch in series with the compressor contactor coil. Refer to wiring diagram on unit and to field wiring diagrams in figures 2 and 3.
- 6 - Turn on power to unit.

TYPICAL INSTALLATION LOSS OF CHARGE SWITCH

TOP VIEW

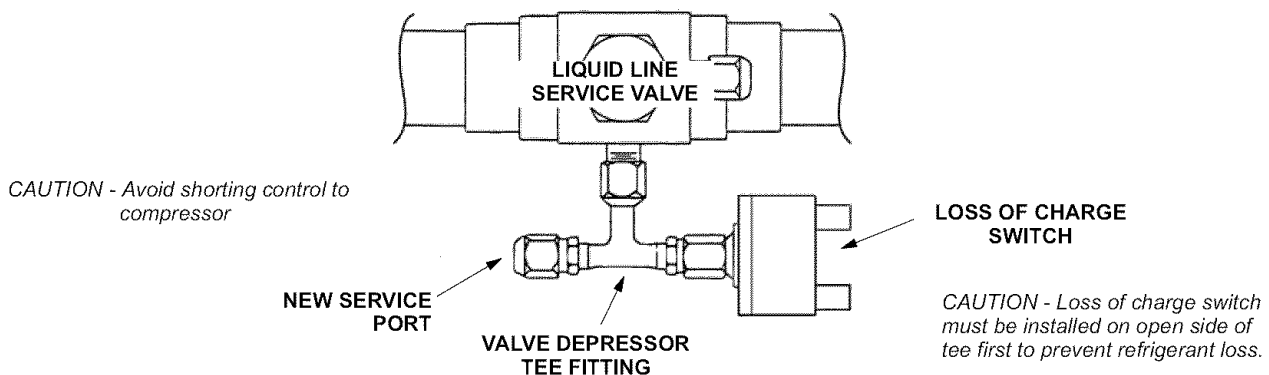


FIGURE 1



LOSS OF CHARGE SWITCH WIRING FOR AIR CONDITIONING UNITS

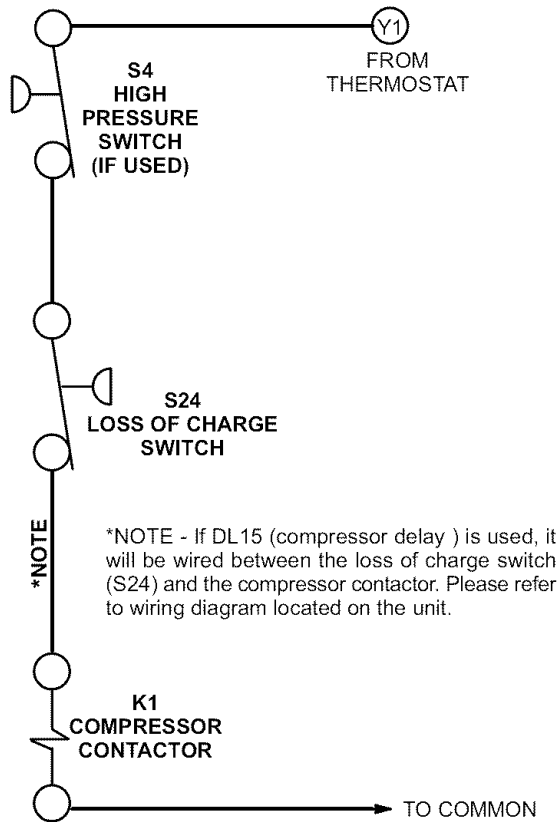


FIGURE 2

LOSS OF CHARGE SWITCH WIRING FOR HEAT PUMP UNITS

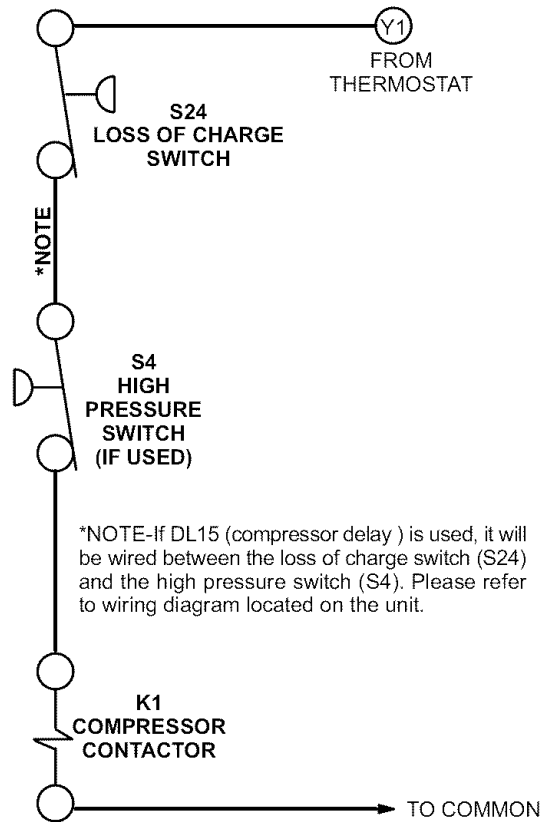


FIGURE 3