
STAREX-BSS IS2000

BSM User's Manual

(STAREX-IS User's Manual)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

These limits are designated to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION :

Do not attempt to modify this product in any way without written authorization from LG Electronics Inc.

Unauthorized modification could void the user's authority to operate this product.

The responsible party for this device compliance is :

Company Name : LGInfoComm U.S.A. Inc.

Address : 10225 Willow Creek RD San Diego, CA, 92131, U.S.A.

Telephone No. : 858-635-5332

Contents

1.	Introduction to BSM	36
1.1.	Overview	36
1.1.1.	Configuration Management of System.....	36
1.1.2.	Fault Management of System.....	36
1.1.3.	Performance Management of System.....	38
1.1.4.	Security Management of System	39
1.1.5.	Account Management of System	39
1.2.	Interoperability and Operation	39
1.2.1.	Configuration Management of System.....	40
1.2.2.	Fault Management of System.....	40
1.2.3.	Performance Management of System.....	40
1.2.4.	Security Management of System	41
1.2.5.	Account Management of System	42
1.3.	BSM Configuration	42
1.3.1.	S/W System Boundary.....	42
1.3.2.	S/W Architecture	43
2.	BSM Environment Setting	45
2.1.	OS Installation	45
2.1.1.	Solaris 2.7 Installation Procedures.....	45
2.1.2.	Network Environment Setting Procedures.....	63
2.2.	DBMS(Informix) Installation.....	66
2.2.1.	Informix Install	66
2.2.2.	Environment Setting	75
2.2.3.	Execution.....	81
2.2.4.	Others	82
2.3.	ATM Adaptor Setup	85
2.3.1.	SunATM Adopter Setup	85
2.3.2.	SunATM S/W Installation and Solaris Setup File Modification	85
2.3.3.	SunATM IPoA Driver Load	91
2.3.4.	System File Changed by atm_setup Tool	92
2.4.	User Environment	129
3.	BSM Package Configuration.....	129
3.1.	Application Configuration.....	129
4.	BSM Command	132
4.1.	User Interface Command	132

4.1.1. User Management Command	132
4.1.2. Command Management Command	139
4.1.3. History Management Command	143
4.2. Loading Command.....	148
4.2.1. Loading Control Command.....	148
4.2.2. Loading Information Display Command.....	154
4.3. Configuration Command.....	163
4.3.1. Parameter Information Display Command (Display_Parameter_Information_1) ..	163
4.3.2. Parameter Information Display (Display_Parameter_Information_2).....	192
4.3.3. NETWORK Information Display (Display_Parameter_Information_3)	213
4.3.4. Parameter Information Change Command (Change_Parameter_Information_1) ..	250
4.3.5. Parameter Information Change Command (Change_Parameter_Information_2) ..	288
4.3.6. Network Parameter Information Change (Change_Parameter_Info_3).....	318
4.3.7. Configuration Information Display(Display_Configuration_Data).....	329
4.3.8. Configuration Information Change (Change_Configuration_Data)	337
4.4. STATUS COMMAND	380
4.4.1 PROCESSOR STATUS CONTROL	380
4.4.2. Network Status Control	385
4.4.3. Can Device Status Control.....	390
4.4.4. BSC Device Status Control	394
4.4.5. Bts Device Status Control.....	403
4.4.6. Status Message Control	411
4.4.7. Overload Status Control.....	414
4.5. Test Command.....	420
4.5.1. On-Line Test-related Command.....	420
4.5.2. Test-related to Channel Element.....	424
4.5.3. Vocoder Test Function	426
4.5.4. Link Test Function	434
4.5.5. Command related to BSC Virtual Call Test.....	441
4.5.6. TRAFFIC PATH TESTING FUNCTION.....	447
4.5.7. Call Trace Testing Function	450
4.5.8. Number of Data Call User Display Function (Active/Dormant)	456
4.5.9. DATA Call User Status Display Function by IMSI	457
4.5.10. IOS Message Display Function	458
4.5.11. POWER MONITORING Function	461
4.6. No.7 Command.....	463
4.6.1. Related Command.....	463

4.6.2. Signaling Link Operation Management Function	465
4.6.3. Maintenance Function Command	486
4.7. Statistics Command.....	491
4.7.1. Traffic related Statistics Command	493
4.7.2. Handoff Related Statistics Function	497
4.7.3. Call Related Statistics Function	503
4.7.4. Packet Related.....	515
4.7.5. Other Statistics Related Commands	518
4.8. Alarm/Fault Command.....	521
4.8.1. Alarm/Fault Display.....	523
4.8.2. Alarm/Fault Inhibition.....	529
4.8.3. Alarm/Fault Control.....	533
4.8.4. Environment Alarm Control	536
4.9. Operation through GUI.....	546
4.9.1. Manager Window.....	546
4.9.2. Interm Window	546
4.9.3. Batch Job	550
4.9.4. Console Window	558
4.9.5. Controller	559
4.9.6. Status Window (stmGUI).....	561
4.9.7. Neighbor Control Window (neighbor).....	576
4.9.8. Call Trace Window	583
4.9.9. BTS Address Search Window.....	594
5. BSM On-Line Message	601
5.1. Fault/Alarm Message	601
5.1.1. Alarm Message.....	601
5.1.2. Fault Message	689
5.2. Status Command	717
5.2.1. Processor Status Change Report.....	717
5.2.2. Overload Status Change Report Function	724
5.3. Loading Message	726
5.3.1. Processor Initialization Start Message	726
5.3.2. Processor Initialization End Message.....	726
5.3.3. Loading Start Message.....	727
5.3.4. Loading Completion Message	728
5.3.5. Loading Failure Message	729
5.3.6. Firmware Update Report Message	729

6.	Trouble Shoot	730
6.1.	If BSM is not operated	730
6.1.1.	If BSM is not initialized	730
6.1.2.	It can not function normally despite of its initialization	732
6.2.	If Graphic Application is not run	732
6.2.1.	Environment Variables	733
6.2.2.	If Manager in Remote Area is not operated	734
7.	CHG- Appendix	736
7.1.	Alarm/Fault Message Description and List	736
7.1.1.	Alarm Message Description and List	736
7.1.2.	Fault Message Description and List	743
7.1.3.	Measures for Alarm Message	744
7.1.4.	Measures for Fault Message	762
7.2.	Status Message Description and LIST Status Definition and LIST	766
7.3.	DCI Debugger Command	769
7.3.1.	Tx/Rx Message Trace Function	769
7.3.2.	Function to test Function	773
7.3.3.	Status Display Funciton	775
7.3.4.	Other Supplementary Function	779
7.4.	Statistic Message	781
7.4.1.	Traffic Related	781
7.4.2.	Handoff Statistic Function	784
7.4.3.	Call Related Statistic Function	785
7.4.4.	Packet	790
7.5.	PLD Data Structure	793
7.5.1.	BSM layer	793
7.5.2.	CNP ONLY	793
7.5.3.	PNP ONLY	798
7.5.4.	PCP ONLY	804
7.5.5.	CCP ONLY	807
7.5.6.	NCP ONLY	824
7.5.7.	SCP ONLY	839
7.5.8.	CCP/BSP COMMON	842
7.5.9.	BSP Layer	857
7.6.	Abbreviations	877

Figures

FIG. 1.3-1 BSM S/W CONFIGURATION	44
FIG. 2.1-1 OS LANGUAGE SELECTION SCREEN.....	45
FIG. 2.1-2 OS INSTALLATION LANGUAGE AND SELECTION SCREEN 2.....	46
FIG. 2.1-3 OS INSTALLATION TIME SETTING	46
FIG. 2.1-4 HOST NAME INPUT SCREEN	47
FIG. 2.1-5 HOST NAME INPUT 2	47
FIG. 2.1-6 NETWORK SETTING SCREEN	48
FIG. 2.1-7 IP ADDRESS INPUT SCREEN	48
FIG. 2.1-8 IP ADDRESS INPUT SCREEN 2.....	49
FIG. 2.1-9 NETWORK BASIC SETTING SUMMARY SCREEN	49
FIG. 2.1-10 DNS SETTING SCREEN.....	50
FIG. 2.1-11 DNS SETTING SCREEN 2.....	50
FIG. 2.1-12 DNS SETTING SUMMARY SCREEN	51
FIG. 2.1-13 SUBNET SETTING SCREEN	51
FIG. 2.1-14 SUBNET SETTING SCREEN 2	51
FIG. 2.1-15 SUBNET SETTING SCREEN 3	52
FIG. 2.1-16 OS TIME SETTING METHOD SCREEN	52
FIG. 2.1-17 OS TIME SETTING REGION SELECTION SCREEN	53
FIG. 2.1-18 OS TIME SETTING REGION SELECTION SCREEN 2	53
FIG. 2.1-19 TIME SETTING SCREEN	54
FIG. 2.1-20 SUBNET AND TIME SETTING SUMMARY SCREEN	54
FIG. 2.1-21 OS INSTALLATION METHOD SELECTION SCREEN.....	54
FIG. 2.1-22 ATTENTION TO THE INSTALLATION OF OS	55
FIG. 2.1-23 X-TERMINAL SETTING SCREEN	55
FIG. 2.1-24 USER LANGUAGE SELECTION SCREEN	56
FIG. 2.1-25 OS INSTALLATION CATEGORY SELECTION SCREEN.....	56
FIG. 2.1-26 OS INSTALLATION CATEGORY SELECTION SCREEN 2.....	57
FIG. 2.1-27 OS INSTALLATION DISK SELECTION SCREEN.....	57
FIG. 2.1-28 WARNING SENTENCE SCREEN RESULTING FROM THE DISK SETTING.....	58
FIG. 2.1-29 SELECTION SCREEN FOR DISK INSTALLATION METHOD	58
FIG. 2.1-30 SELECT SCREEN FOR DISK INSTALLATION METHOD	58
FIG. 2.1-31 SELECTED DISK INFORMATION DISPLAY SCREEN.....	59
FIG. 2.1-32 AREA INFORMATION DISPLAY SCREEN FOR THE DISK DIVISION.....	60
FIG. 2.1-33 DISK ALLOCATION RESULT DISPLAY SCREEN	61

FIG. 2.1-34 REMOTE FILE SERVER INSTALLATION SCREEN	62
FIG. 2.1-35 SET UP INFORMATION DISPLAY SCREEN FOR THE INSTALLATION....	62
FIG. 4.1-1 BSM SYSTEM LOGIN WINDOW.....	132
FIG. 4.1-2 LOG-OUT.....	133
FIG. 4.1-3 USER ID REGISTER	134
FIG. 4.1-4 ERRORS WHEN REGISTERING USER ID.....	134
FIG. 4.1-5 USER ID DELETION	135
FIG. 4.1-6 ERRORS WHEN DELETING USER ID THAT DOES NOT EXIST	135
FIG. 4.1-7 ERRORS WHEN DELETING THE MANAGER CLASS ID.....	136
FIG. 4.1-8 USER CLASS CHANGE	137
FIG. 4.1-9 ERRORS WHEN CHANGING THE USE CLASS OF THE MANAGER	137
FIG. 4.1-10 USER INFORMATION DISPLAY.....	138
FIG. 4.1-11 USER PASSWORD CHANGE	139
FIG. 4.1-12 COMMAND CLASS MODIFICATION.....	140
FIG. 4.1-13 COMMAND CLASS DISPLAY.....	141
FIG. 4.1-14 COMMAND INFORMATION DISPLAY BY NAME	142
FIG. 4.1-15 COMMAND INFORMATION DISPLAY BY CRN	143
FIG. 4.1-16 COMMAND HISTORY DISPLAY.....	144
FIG. 4.1-17 MESSAGE HISTORY DISPLAY START.....	146
FIG. 4.1-18 MESSAGE HISTORY DISPLAY END	147
FIG. 4.2-1 BLOCKING LOADING PERFORMANCE RESULT	149
FIG. 4.2-2 ACTIVATION LOADING PERFORMANCE RESULT	150
FIG. 4.2-3 FLASH MEMORY UPDATE RESULT	151
FIG. 4.2-4 LOADING INFORMATION DISPLAY COMMAND EXECUTION RESULT .	155
FIG. 4.2-5 LOADING HISTORY DISPLAY FUNCTION EXECUTION RESULT	157
FIG. 4.2-6 BLOCK LOADING HISTORY DISPLAY RESULT.....	159
FIG. 4.2-7 LOADING STATE DISPLAY COMMAND EXECUTION RESULT (WHEN THERE IS A PROCESSOR THAT IS PERFORMING LOADING)	160
FIG. 4.2-8 LOADING STATE DISPLAY COMMAND EXECUTION RESULT (WHEN THERE IS NO PROCESSOR THAT IS PERFORMING LOADING).....	160
FIG. 4.2-9 VERSION INFORMATION DISPLAY COMMAND EXECUTION RESULT	162
FIG. 4.3-1 BTS PARAMETER DISPLAY	165
FIG. 4.3-2 SECTOR PARAMETER INFORMATION DISPLAY	166
FIG. 4.3-3 CDMA CHANNEL PARAMETER INFORMATION DISPLAY	167
FIG. 4.3-4 SYSTEM PARAMETER MESSAGE DISPLAY	169
FIG. 4.3-5 EXTENDED SYSTEM PARAMETER MESSAGE DISPLAY	171
FIG. 4.3-6 NEIGHBOR LIST PARAMETER INFORMATION DISPLAY	173

FIG. 4.3-7 BTS QOS(QUALITY OF SERVICE) DISPLAY.....	174
FIG. 4.3-8 DISPLAY OF PARAMETER THAT CONTROLS CHIP POWER	175
FIG. 4.3-9 OCNS STATE DISPLAY	176
FIG. 4.3-10 CURRENT POWER CONTROL DISPLAY.....	177
FIG. 4.3-11 TIC(TRANSCIVER INTERFACE CARD) DATA DISPLAY	178
FIG. 4.3-12 OCNS DISPLAY	179
FIG. 4.3-13 POWER MANAGEMENT PARAMETER INFORMATION DISPLAY	180
FIG. 4.3-14 ACCESS CHANNEL PARAMETER INFORMATION DISPLAY.....	181
FIG. 4.3-15 TXMS DISPLAY.....	182
FIG. 4.3-16 GSRM PARAMETER INFORMATION DISPLAY	184
FIG. 4.3-17 ACCESS PARAMETER MESSAGE DISPLAY.....	186
FIG. 4.3-18 PAGING CHANNEL PARAMETER INFORMATION DISPLAY	187
FIG. 4.3-19 PILOT CHANNEL PARAMETER INFORMATION DISPLAY.....	188
FIG. 4.3-20 SYNC. CHANNEL PARAMETER INFORMATION DISPLAY.....	189
FIG. 4.3-21 QUICK PAGING CHANNEL PARAMETER INFORMATION DISPLAY	190
FIG. 4.3-22 HOPPING PILOT BEACON CHANNEL PARAMETER INFORMATION DISPLAY.....	191
FIG. 4.3-23 BSC INFORMATION VERIFICATION.....	192
FIG. 4.3-24 IOS PARAMETER VERIFICATION	193
FIG. 4.3-25 FORWARD LINK POWER MANAGEMENT INFORMATION (RS1) VERIFICATION.....	195
FIG. 4.3-26 BACKWARD LINK POWER MANAGEMENT INFORMATION (RS1) VERIFICATION.....	197
FIG. 4.3-27 FORWARD LINK POWER MANAGEMENT INFORMATION (RS2) VERIFICATION.....	199
FIG. 4.3-28 BACKWARD LINK POWER MANAGEMENT INFORMATION (RS2) VERIFICATION.....	201
FIG. 4.3-29 SERVICE OPTION FER VERIFICATION.....	203
FIG. 4.3-30 MAHHO VERIFICATION	204
FIG. 4.3-31 LOCATION VERIFICATION	205
FIG. 4.3-32 SCH VERIFICATION	206
FIG. 4.3-33 POWER CONTROL DATA VERIFICATION	208
FIG. 4.3-34 BTS NAME DISPLAY	209
FIG. 4.3-35 PCP TIMER INFORMATION VERIFICATION.....	210
FIG. 4.3-36 PCF PARAMETER INFORMATION VERIFICATION	211
FIG. 4.3-37 PCF MAC ADDRESS INFORMATION VERIFICATION.....	212
FIG. 4.3-38 CAN ATM NODE INFORMATION DISPLAY.....	214

FIG. 4.3-39 CAN PVC SETTING INFORMATION DISPLAY	215
FIG. 4.3-40 CAN NETWORK PARAMETER INFORMATION DISPLAY	216
FIG. 4.3-41 CAN INTER BSC AAL2 SETTING INFORMATION DISPLAY	217
FIG. 4.3-42 CAN INTER BSC AAL5 SETTING INFORMATION DISPLAY	218
FIG. 4.3-43 CAN ATM NODE INFORMATION DISPLAY.....	219
FIG. 4.3-44 PCF ATM NODE INFORMATION DISPLAY	220
FIG. 4.3-45 CAN PVC SETTING INFORMATION DISPLAY.....	221
FIG. 4.3-46 CAN PCF PVC SETTING INFORMATION DISPLAY	222
FIG. 4.3-47 CPN NETWORK PARAMETER INFORMATION DISPLAY.....	223
FIG. 4.3-48 CPN DATA AAL2/5 CONNECTION INFORMATION DISPLAY	224
FIG. 4.3-49 CPN PCF AAK2/5 CONNECTION INFORMATION DISPLAY.....	225
FIG. 4.3-50 BSC ATM NODE INFORMATION DISPLAY	226
FIG. 4.3-51 SLB ATM NODE INFORMATION DISPLAY	227
FIG. 4.3-52 VCB ATM NODE INFORMATION DISPLAY	228
FIG. 4.3-53 ALB ATM NODE INFORMATION DISPLAY	229
FIG. 4.3-54 BTS ATM NODE INFORMATION DISPLAY.....	230
FIG. 4.3-55 BSC-BTS TRUNK INFORMATION DISPLAY	231
FIG. 4.3-56 BSC PVC SETTING INFORMATION DISPLAY	233
FIG. 4.3-57 BSC SLB PVC SETTING INFORMATION DISPLAY.....	234
FIG. 4.3-58 BSC VCB PVC SETTING INFORMATION DISPLAY	235
FIG. 4.3-59 BSC ALB PVC SETTING INFORMATION DISPLAY	236
FIG. 4.3-60 BTS LOCAL PVC SETTING INFORMATION DISPLAY	237
FIG. 4.3-61 BTS OUTER PVC SETTING INFORMATION DISPLAY.....	238
FIG. 4.3-62 BSC NETWORK PARAMETER INFORMATION DISPLAY.....	239
FIG. 4.3-63 BSC ALP NETWORK PARAMETER INFORMATION DISPLAY.....	240
FIG. 4.3-64 BSC INTER BSC AAL2 INFORMATION DISPLAY	241
FIG. 4.3-65 BSC INTER BTS AAL2 INFORMATION DISPLAY	242
FIG. 4.3-66 BSC INTER CAN AAL2/5 INFORMATION DISPLAY	243
FIG. 4.3-67 BSC INTER SLB AAL5 INFORMATION DISPLAY	244
FIG. 4.3-68 BSC INTER VCB AAL5 INFORMATION DISPLAY.....	245
FIG. 4.3-69 BSC INTER ALB AAL5 INFORMATION DISPLAY	246
FIG. 4.3-70 BTS NETWORK PARAMETER INFORMATION DISPLAY	247
FIG. 4.3-71 BTS INTER BTS AAL2 INFORMATION DISPLAY.....	248
FIG. 4.3-72 BTS INTER RCU AAL5 INFORMATION DISPLAY.....	249
FIG. 4.3-73 BTS PARAMETER INFORMATION DISPLAY	253
FIG. 4.3-74 SECTOR PARAMETER INFORMATION CHANGE	253
FIG. 4.3-75 CDMA CHANNEL PARAMETER INFORMATION DISPLAY.....	254

FIG. 4.3-76 SYSTEM PARAMETER CHANGE(1) DISPLAY	256
FIG. 4.3-77 SYSTEM PARAMETER CHANGE(2) DISPLAY	257
FIG. 4.3-78 EXTENDED SYSTEM PARAMETER CHANGE(1) DISPLAY	259
FIG. 4.3-79 EXTENDED SYSTEM PARAMETER CHANGE(2) DISPLAY	261
FIG. 4.3-80 NEIGHBOR CELL ADDITION DISPLAY	263
FIG. 4.3-81 NEIGHBOR CELL INFORMATION DELETION DISPLAY	263
FIG. 4.3-82 HOPPING BEACON PARAMETER CHANGE DISPLAY	265
FIG. 4.3-83 QOS PARAMETER INFORMATION CHANGE DISPLAY	266
FIG. 4.3-84 CHIP POWER CONTROL INFORMATION CHANGE DISPLAY.....	268
FIG. 4.3-85 TIC PARAMETER INFORMATION CHANGE DISPLAY	269
FIG. 4.3-86 OCNS PARAMETER CHANGE DISPLAY.....	270
FIG. 4.3-87 POWER CONTROL PARAMETER INFORMATION DISPLAY.....	272
FIG. 4.3-88 ACCESS CHANNEL PARAMETER INFORMATION CHANGE DISPLAY.	273
FIG. 4.3-89 TXMS PARAMETER INFORMATION CHANGE DISPLAY.....	274
FIG. 4.3-90 BTS CALIBRATION START DISPLAY.....	275
FIG. 4.3-91 BTS CALIBRATION TIME CHANGE DISPLAY	276
FIG. 4.3-92 PC GLOBAL REDIRECT PARAMETER INFORMATION CHANGE DISPLAY	278
FIG. 4.3-93 ACCESS PARAMETER INFORMATION CHANGE DISPLAY.....	280
FIG. 4.3-94 PAGING CHANNEL PARAMETER INFORMATION DISPLAY.....	281
FIG. 4.3-95 PILOT CHANNEL PARAMETER INFORMATION CHANGE DISPLAY.....	282
FIG. 4.3-96 SYNC CHANNEL PARAMETER INFORMATION CHANGE DISPLAY	283
FIG. 4.3-97 QUICK PAGING CHANNEL PARAMETER INFORMATION CHANGE DISPLAY.....	284
FIG. 4.3-98 HOPPING PILOT BEACON CHANNEL PARAMETER INFORMATION CHANGE DISPLAY	285
FIG. 4.3-99 CDMA CHANNEL FA TEST START DISPLAY	286
FIG. 4.3-100 CDMA CHANNEL FA TEST TERMINATION DISPLAY	287
FIG. 4.3-101 DORMANT TIMER CHANGE DISPLAY	290
FIG. 4.3-102 PACKET ZONE DATA CHANGE DISPLAY	290
FIG. 4.3-103 FACILITIES MANAGEMENT TIMER CHANGE DISPLAY.....	291
FIG 4.3-104 HANDOFF TIMER CHANGE DISPLAY.....	292
FIG. 4.3-105 BSC SUPPLEMENT SERVICES TIMER CHANGE DISPLAY	293
FIG. 4.3-106 BSC CALL PROCESSING TIMER CHANGE DISPLAY.....	294
FIG. 4.3-107 BSC MOBILITY MANAGEMENT TIMER CHANGE DISPLAY	295
FIG. 4.3-108 A8 A9 INTERFACE TIMER CHANGE	296
FIG. 4.3-109 A3, A7 INTERFACE TIMER CHANGE	297

FIG. 4.3-110 FORWARD LINK POWER MANAGEMENT INFORMATION (RS1) CHANGE	299
FIG. 4.3-111 BACKWARD LINK POWER MANAGEMENT INFORMATION (RS1) CHANGE.....	299
FIG. 4.3-112 FORWARD LINK POWER MANAGEMENT INFORMATION (RS2) CHANGE	301
FIG. 4.3-113 BACKWARD LINK POWER MANAGEMENT INFORMATION (RS2) CHANGE.....	302
FIG. 4.3-114 SERVICE OPTION FER CHANGE.....	304
FIG. 4.3-115 MAHHO DATA CHANGE.....	306
FIG. 4.3-116 LOCATION PARA INFORMATION CHANGE	307
FIG. 4.3-117 SCH PARAMETER INFORMATION CHANGE	308
FIG. 4.3-118 POWER CONTROL PARAMETER INFORMATION (1) CHANGE	310
FIG. 4.3-119 POWER CONTROL PARAMETER INFORMATION (2) CHANGE	311
FIG. 4.3-120 POWER CONTROL PARAMETER INFORMATION (3) CHANGE	312
FIG. 4.3-121 BTS NAME CHANGE	313
FIG. 4.3-122 PCF TIMER CHANGE.....	314
FIG. 4.3-123 PCP/PMP ADDRESS CHANGE	315
FIG. 4.3-124 PIP ADDRESS CHANGE	316
FIG. 4.3-125 PCF PARAMETER CHANGE	317
FIG. 4.3-126 BSS CONFIGURATION INFORMATION DISPLAY	330
FIG. 4.3-127 SMP CONFIGURATION INFORMATION DISPLAY	331
FIG. 4.3-128 VMP CONFIGURATION INFORMATION DISPLAY	332
FIG. 4.3-129 BTS CONFIGURATION INFORMATION DISPLAY.....	333
FIG. 4.3-130 DBPA CHIP CONFIGURATION INFORMATION DISPLAY.....	334
FIG. 4.3-131 OVHD CHANNEL CONFIGURATION INFORMATION DISPLAY.....	335
FIG. 4.3-132 PDSN CONFIGURATION INFORMATION DISPLAY	336
FIG. 4.3-133 BTS CONFIGURATION INFORMATION CHANGE DISPLAY.....	339
FIG. 4.3-134 CHANNEL CARD CHIP CONFIGURATION INFORMATION (1) CHANGE DISPLAY.....	341
FIG. 4.3-135 CHANNEL CARD CHIP CONFIGURATION INFORMATION (2) CHANGE DISPLAY.....	343
FIG. 4.3-136 PDSN CONFIGURATION ADDITION DISPLAY.....	344
FIG. 4.3-137 PDSN CONFIGURATION DELETION DISPLAY	345
FIG. 4.3-138 PDSN CONFIGURATION CHANGE DISPLAY	346
FIG. 4.3-139 PDSN NODE ADDITION DISPLAY	347
FIG. 4.3-140 PDSN NODE DELETION DISPLAY	348

FIG. 4.3-141	PDSN NODE CHANGE DISPLAY	349
FIG. 4.3-142	BSC NODE MOVEMENT DISPLAY	350
FIG. 4.3-143	SMP NODE MOVEMENT DISPLAY.....	352
FIG. 4.3-144	VMP NODE MOVEMENT DISPLAY	353
FIG. 4.3-145	BTS ID MOVEMENT DISPLAY	354
FIG. 4.3-146	BTS TRUNK MOVEMENT DISPLAY	355
FIG. 4.3-147	LICA LINK MOVEMENT DISPLAY	356
FIG. 4.3-148	OVHD CHANNEL CONFIGURATION INFORMATION MOVEMENT DISPLAY.....	357
FIG. 4.3-149	PCF CONFIGURATION ADDITION DISPLAY	360
FIG. 4.3-150	PCF CONFIGURATION DELETION DISPLAY.....	361
FIG. 4.3-151	SMP CONFIGURATION ADDITION DISPLAY.....	362
FIG. 4.3-152	SMP CONFIGURATION DELETION DISPLAY	363
FIG. 4.3-153	VMP CONFIGURATION ADDITION DISPLAY	364
FIG. 4.3-154	VMP CONFIGURATION DELETION DISPLAY.....	365
FIG. 4.3-155	BTS CONFIGURATION DELETION DISPLAY	367
FIG. 4.3-156	FA CONFIGURATION ADDITION DISPLAY	370
FIG. 4.3-157	FA CONFIGURATION DELETION DISPLAY.....	371
FIG. 4.3-158	CAN PVC CONFIGURATION ADDITION DISPLAY	374
FIG. 4.3-159	CAN PVC CONFIGURATION DELETION DISPLAY.....	375
FIG. 4.3-160	CPN PVC CONFIGURATION ADDITION DISPLAY.....	376
FIG. 4.3-161	CPN PVC CONFIGURATION DELETION DISPLAY.....	377
FIG. 4.3-162	BSC PVC CONFIGURATION ADDITION DISPLAY	378
FIG. 4.3-163	BSC PVC CONFIGURATION DELETION DISPLAY.....	379
FIG. 4.4-1	RESULT OF CAN PROCESSOR STATUS DISPLAY COMMAND	380
FIG. 4.4-2	RESULT OF BSC PROCESSOR STATUS DISPLAY	381
FIG. 4.4-3	RESULT OF BTS PROCESSOR STATUS DISPLAY COMMAND.....	381
FIG. 4.4-4	RESULT OF PROCESSOR RESTART COMMAND.....	382
FIG. 4.4-5	CAN PROCESSOR H/W COMMAND RESULT	383
FIG. 4.4-6	BSC PROCESSOR H/W COMMAND RESULT.....	384
FIG. 4.4-7	BTS PROCESSOR H/W RESET(ISOLATION) COMMAND DISPLAY RESULT	384
FIG. 4.4-8	PROCESSOR SWITCH OVER(SWITCH) COMMAND DISPLAY RESULT	385
FIG. 4.4-9	RESULT OF NETWORK STATUS DISPLAY COMMAND.....	387
FIG. 4.4-10	RESULT OF ALPA NETWORK STATUS DISPLAY.....	387
FIG. 4.4-11	RESULT OF PDSN NODE STATUS DISPLAY	388
FIG. 4.4-12	RESULT OF PCFU NETWORK STATUS DISPLAY COMMAND	388

FIG. 4.4-13 RESULT OF ALPA NETWORK BLOCK COMMAND	389
FIG. 4.4-14 RESULT OF ALPA NETWORK UNBLOCK COMMAND	390
FIG. 4.4-15 RESULT OF CAN DEVICE STATUS DISPLAY COMMAND.....	392
FIG. 4.4-16 RESULT OF GPS(CAN) STATUS DISPLAY COMMAND.....	393
FIG. 4.4-17 RESULT OF H/W RESET CAN DEVICE COMMAND	394
FIG. 4.4-18 RESULT OF BSC DEVICE STATUS DISPLAY.....	395
FIG. 4.4-19 RESULT OF SLPA STATUS DISPLAY COMMAND	395
FIG. 4.4-20 RESULT OF VCPA STATUS DISPLAY COMMAND.....	396
FIG. 4.4-21 RESULT OF E1 LINK STATUS DISPLAY COMMAND.....	397
FIG. 4.4-22 RESULT OF TS NETWORK LINK STATUS DISPLAY COMMAND	397
FIG. 4.4-23 RESULT OF VCE(VOCODER CHANNEL ELEMENT) STATUS DISPLAY COMMAND	398
FIG. 4.4-24 RESULT OF SLPA BLOCK COMMAND.....	399
FIG. 4.4-25 RESULT OF SLPA UNBLOCK COMMAND	399
FIG. 4.4-26 RESULT OF VCPA BLOCK COMMAND.....	400
FIG. 4.4-27 RESULT OF VCPA UNBLOCK COMMAND.....	401
FIG. 4.4-28 RESULT OF VLIA BLOCK COMMAND	401
FIG. 4.4-29 RESULT OF VLIA UNBLOCK COMMAND	402
FIG. 4.4-30 RESULT OF BSC DEVICE H/W RESET COMMAND	403
FIG. 4.4-31 RESULT OF H/W RESET ALPA COMMAND.....	403
FIG. 4.4-32 RESULT OF BTS DEVICE STATUS DISPLAY COMMAND	404
FIG. 4.4-33 RESULT OF FA STATUS DISPLAY COMMAND.....	405
FIG. 4.4-34 RESULT OF BLOCK DBPA COMMAND.....	406
FIG. 4.4-35 RESULT OF UNBLOCK DBPA COMMAND.....	407
FIG. 4.4-36 RESULT OF BLOCK OVERHEAD CHANNEL ELEMENT DISPLAY.....	407
FIG. 4.4-37 RESULT OF UNBLOCK OVERHEAD CHANNEL ELEMENT	408
FIG. 4.4-38 RESULT OF H/W RESET BTS DEVICE COMMAND.....	409
FIG. 4.4-39 RESULT OF H/W RESET LPA DEVICE COMMAND	409
FIG. 4.4-40 RESULT OF LPA COMBINER H/W RESET COMMAND.....	410
FIG. 4.4-41 RESULT OF BTS SHELF POWER H/W RESET COMMAND	411
FIG. 4.4-42 RESULT INHIBITED STATUS MESSAGE DISPLAY COMMAND	413
FIG. 4.4-43 RESULT OF STATUS MESSAGE DISPLAY INHIBITION COMMAND	413
FIG. 4.4-44 RESULT OF INHIBITED MESSAGE DISPLAY ALLOW COMMAND	414
FIG. 4.4-45 RESULT OF PROCESSOR OVERLOAD STATUS DISPLAY COMMAND...	415
FIG. 4.4-46 RESULT OF OVERLOAD THRESHOLD VALUE DISPLAY COMMAND	416
FIG. 4.4-47 RESULT OF OVERLOAD THRESHOLD VALUE CHANGE COMMAND	417
FIG. 4.4-48 RESULT OF OVERLOAD GENERATION TEST COMMAND	417

FIG. 4.4-49 RESULT OF OVERLOAD GENERATION TEST STOP COMMAND.....	418
FIG. 4.4-50 COMMAND TO DETERMINE WHETHER TO PERFORM THE OVERLOAD GENERATION TEST	419
FIG. 4.5-1 RESULT OF TEST INHIBIT COMMAND EXECUTION	421
FIG. 4.5-2 RESULT OF TEST ALLOW COMMAND EXECUTION	422
FIG. 4.5-3 RESULT OF TEST INHIBIT/ALLOW LIST DISPLAY COMMAND EXECUTION	423
FIG. 4.5-4 RESULT OF CE BIT TEST EXECUTION	425
FIG. 4.5-5 RESULT OF ON-DEMAND VOCODER TEST(CHANNEL TYPE) EXECUTION	428
FIG. 4.5-6 RESULT OF ON-DEMAND VOCODER TEST(DSP TYPE) EXECUTION	429
FIG. 4.5-7 RESULT OF ON-LINE VOCODER TEST PARAMETER CHANGE COMMAND EXECUTION	430
FIG. 4.5-8 RESULT OF ON-LINE TEST AT THE TIME OF ON-LINE VOCODER TEST EXECUTION	430
FIG. 4.5-9 RESULT OF ON-LINE VOCODER TEST PARAMETER DISPLAY COMMAND EXECUTION	431
FIG. 4.5-10 ON-LINE VOCODER TEST RESULT DISPLAY COMMAND.....	432
FIG. 4.5-11 ON-LINE VOCODER TEST END COMMAND, STATUS DISPLAY COMMAND EXECUTION RESULT	433
FIG. 4.5-12 RESULT OF TRUNK BER TEST PERFORMANCE.....	435
FIG. 4.5-13 RESULT OF PING TEST PERFORMANCE.....	436
FIG. 4.5-14 RESULT OF IPC TEST PERFORMANCE	437
FIG. 4.5-15 RESULT OF ATM PATH(PM) TEST PERFORMANCE.....	438
FIG. 4.5-16 RESULT OF ATM PATH(CC) TEST PERFORMANCE.....	439
FIG. 4.5-17 RESULT OF ATM PATH(LB) TEST EXECUTION	440
FIG. 4.5-18 BSC VIRTUAL CALL SETUP COMMAND INTERM DISPLAY	443
FIG. 4.5-19 CONSOLE WINDOW DISPLAY AT THE SETUP OF BSC VIRTUAL CALL	443
FIG. 4.5-20 DISPLAY AT THE TERMINATION OF BSC VIRTUAL CALL.....	444
FIG. 4.5-21 RESULT OF BSC VIRTUAL CALL RELEASE COMMAND EXECUTION ..	444
FIG. 4.5-22 PRESENTLY REGISTERED TESTING MS DISPLAY	445
FIG. 4.5-23 TESTING MS INSERT RESULT DISPLAY	446
FIG. 4.5-24 DELETE MS EXECUTION RESULT	446
FIG. 4.5-25 TRAFFIC PATH SETUP COMMAND EXECUTION RESULT DISPLAY(INTERM WINDOW).....	448
FIG. 4.5-26 TRAFFIC PATH SETUP COMMAND EXECUTION RESULT DISPLAY(CONSOLE WINDOW)	448

FIG. 4.5-27 TRAFFIC PATH RELEASE COMMAND EXECUTION RESULT DISPLAY(INTERM WINDOW).....	449
FIG. 4.5-28 TRAFFIC PATH RELEASE COMMAND EXECUTION RESULT DISPLAY(CONSOLE WINDOW).....	449
FIG. 4.5-29 CALL TRACE START COMMAND INPUT SCREEN	451
FIG. 4.5-30 CALL TRACE DISPLAY IN THE PROCESS OF CALL SET.....	452
FIG. 4.5-31 DISPLAY OF CALL SET PROCESS AND ELEMENTS OF COMMUNICATION QUALITY	453
FIG. 4.5-32 DISPLAY OF COMMUNICATION QUALITY AND RELEASE REASON	454
FIG. 4.5-33 CALL TRACE STOP RESULT	454
FIG. 4.5-34 TERMINAL DISPLAY IN USE OF CALL TRACE.....	455
FIG. 4.5-35 RESULT OF THE NUMBER OF DATA CALL USER DISPLAY	456
FIG. 4.5-36 RESULT OF DATA CALL USER STATUS DISPLAY BY IMSI.....	457
FIG. 4.5-37 IOS MESSAGE DISPLAY START RESULT	458
FIG. 4.5-38 IOS DISPLAY MESSAGE	459
FIG. 4.5-39 STOP RESULT OF IOS MESSAGE DISPLAY FUNCTION.....	460
FIG. 4.5-40 POWER MONITORING START RESULT.....	461
FIG. 4.5-41 POWER MONITORING RESULT.....	462
FIG. 4.5-42 POWER MONITORING STOP RESULT	462
FIG. 4.6-1 SIGNALING POINT INFORMATION DISPLAY.....	466
FIG. 4.6-2 CHANGE OF INTRA-SWITCHING OFFICE SIGNALING POINT	466
FIG. 4.6-3 CHANGE OF REMOTE SWITCHING OFFICE SIGNALING POINT.....	467
FIG. 4.6-4 ACTIVATION OF SIGNALING LINK SET	468
FIG. 4.6-5 DEACTIVATION OF SIGNALING LINK SET	468
FIG. 4.6-6 SIGNALING LINK CREATE.....	469
FIG. 4.6-7 DELETION OF SIGNALING LINK	470
FIG. 4.6-8 ACTIVATION OF SIGNALING LINK	471
FIG. 4.6-9 DEACTIVATION OF SIGNALING LINK	472
FIG. 4.6-10 SIGNALING LINK INFORMATION DISPLAY	472
FIG. 4.6-11 SIGNALING LINK INHIBIT.....	473
FIG. 4.6-12 SIGNAL LINK ALLOW.....	474
FIG. 4.6-13 SIGNALING TERMINAL GENERATION	474
FIG. 4.6-14 SIGNALING TERMINAL DELETION	475
FIG. 4.6-15 DISPLAY OF SIGNALING TERMINAL INFORMATION.....	475
FIG. 4.6-16 SIGNALING DATA LINK GENERATION	476
FIG. 4.6-17 SIGNALING DATA LINK DELETION	477
FIG. 4.6-18 SIGNALING DATA LINK INFORMATION DISPLAY	478

FIG. 4.6-19 SCCP NETWORK CONFIGURATION DATA DISPLAY.....	478
FIG. 4.6-20 SCCP LOCAL SUBSYSTEM STATE DATA DISPLAY.....	479
FIG. 4.6-21 SIGNALING LINK STATUS DISPLAY.....	480
FIG. 4.6-22 SIGNALING TERMINAL STATUS DISPLAY.....	481
FIG. 4.6-23 SIGNALING LINK SET STATUS DISPLAY.....	481
FIG. 4.6-24 MTP LEVEL2 TIMER DISPLAY.....	482
FIG. 4.6-25 MTP LEVEL2 TIMER CHANGE.....	483
FIG. 4.6-26 MTP LEVEL3 TIMER DISPLAY.....	484
FIG. 4.6-27 MTP LEVEL E 3 TIMER CHANGE.....	485
FIG. 4.6-28 SCCP TIMER CHANGE.....	486
FIG. 4.6-29 SIGNALING LINK TEST.....	487
FIG. 4.6-30 SIGNALING TERMINAL TEST.....	488
FIG. 4.6-31 TEST CYCLE DISPLAY.....	488
FIG. 4.6-32 TEST CYCLE CHANGE.....	489
FIG. 4.6-33 OUTPUT POSSIBLE STATUS MESSAGE DISPLAY.....	489
FIG. 4.6-34 STATUS MESSAGE DISPLAY ALLOWED.....	490
FIG. 4.6-35 STATUS MESSAGE DISPLAY INHIBIT.....	490
FIG. 4.7-1 CONFIGURATION OF STATISTICS COMMAND.....	493
FIG. 4.7-2 TRAFFIC STATISTICS FUNCTION.....	493
FIG. 4.7-3 TRAFFIC STATISTICS DATA DISPLAY RESULT.....	495
FIG. 4.7-4 HOURLY TRAFFIC STATISTICS DISPLAY RESULT.....	496
FIG. 4.7-5 HANDOFF RELATED STATISTICS FUNCTION.....	497
FIG. 4.7-6 HANDOFF STATISTICS.....	499
FIG. 4.7-7 SOFTER HANDOFF STATISTICS DISPLAY.....	500
FIG. 4.7-8 SOFT HANDOFF DISPLAY RESULT.....	501
FIG. 4.7-9 HARD HANDOFF STATISTICS DISPLAY.....	502
FIG. 4.7-10 STATISTICS FUNCTION RELATED TO CALL.....	503
FIG. 4.7-11 CHANNEL STATISTICS FUNCTION.....	504
FIG. 4.7-12 VOCODER STATISTICS OUTPUT.....	505
FIG. 4.7-13 NETWORK STATISTICS OUTPUT RESULTS.....	506
FIG. 4.7-14 RADIO CHANNEL STATISTICS OUTPUT RESULTS.....	507
FIG. 4.7-15 PROCESSOR STATISTICS DISPLAY RESULTS.....	508
FIG. 4.7-16 SELECTOR STATISTICS DISPLAY RESULTS.....	509
FIG. 4.7-17 CALL DELAY PERFORMANCE STATISTICS DISPLAY RESULTS.....	510
FIG. 4.7-18 PAGING STATISTICS DISPLAY RESULTS.....	511
FIG. 4.7-19 CAI STATISTICS DISPLAY RESULTS.....	512
FIG. 4.7-20 NO.7 SIGNALING STATISTICS DISPLAY RESULTS.....	513

FIG. 4.7-21 RTD STATISTICS DISPLAY RESULTS	514
FIG. 4.7-22 RF MIN/MAX STATISTICS FUNCTION DISPLAY RESULTS	515
FIG. 4.7-23 PACKET STATISTICS FUNCTION.....	515
FIG. 4.7-24 PACKET DATA STATISTICS DISPLAY RESULTS	516
FIG. 4.7-25 PACKET CONTROL STATISTICS FUNCTION RESULTS DISPLAY	517
FIG. 4.7-26 PACKET HANDOFF STATISTICS FUNCTION DISPLAY RESULTS.....	518
FIG. 4.7-27 DISPLAY RESULTS OF STATISTICS LIST UNDER EXECUTION	518
FIG. 4.7-28 RESULTS OF CHANGING ON LINE STATISTICS PERIOD	520
FIG. 4.8-1 DISPLAY RESULT OF THE DISPLAY INHIBITED ALARM MESSAGE LIST	523
FIG. 4.8-2 DISPLAY RESULT OF THE DISPLAY COMMAND FOR AUDIBLE ALARM STATUS	524
FIG. 4.8-3 DISPLAY RESULT OF THE LIST FOR THE DISPLAY INHIBITED FAULT MESSAGE.....	524
FIG. 4.8-4 DISPLAY RESULT OF DISPLAY COMMAND FOR THE PRESENT ALARM STATUS	525
FIG. 4.8-5 DISPLAY RESULT OF DISPLAY COMMAND FOR PRESENT ALARM STATUS	526
FIG. 4.8-6 DISPLAY RESULT OF DISPLAY COMMAND FOR THE SUPPRESSED ALARM MESSAGE.....	526
FIG. 4.8-7 DISPLAY RESULT OF DISPLAY COMMAND FOR INFORMATION ABOUT THE ALARM MESSAGE	527
FIG. 4.8-8 DISPLAY RESULT OF DISPLAY COMMAND FOR THE INFORMATION ABOUT ALARM LIST	528
FIG. 4.8-9 DISPLAY RESULT OF DISPLAY COMMAND FOR THE SUPPRESS FAULT MESSAGE LIST	529
FIG. 4.8-10 DISPLAY RESULT OF DISPLAY INHIBITION FOR ALARM MESSAGE..	530
FIG. 4.8-11 DISPLAY RESULT OF INHIBITION COMMAND FOR AUDIBLE ALARM	530
FIG. 4.8-12 DISPLAY RESULT OF INHIBITION/ALLOWANCE FOR FAULT MESSAGE DISPLAY.....	531
FIG. 4.8-13 DISPLAY RESULT OF THE SUPPRESS ALARM MESSAGE COMMAND .	532
FIG. 4.8-14 DISPLAY RESULT FOR THE FAULT MESSAGE SUPPRESS COMMAND	532
FIG. 4.8-15 DISPLAY RESULT OF ALLOWANCE FOR ALARM MESSAGE DISPLAY INHIBITION	533
FIG. 4.8-16 DISPLAY RESULT OF ALLOWANCE COMMAND FOR INHIBITED AUDIBLE ALARM	534

FIG. 4.8-17 DISPLAY RESULT FOR ALLOWING FAULT MESSAGE DISPLAY INHIBITION	534
FIG. 4.8-18 DISPLAY RESULT OF RELEASE COMMAND FOR SUPPRESSED ALARM MESSAGE.....	535
FIG. 4.8-19 DISPLAY RESULT OF RELEASE COMMAND FOR SUPPRESSED FAULT MESSAGE.....	536
FIG. 4.9-1 MANAGER WINDOW	546
FIG. 4.9-2 LOGIN WINDOW.....	547
FIG. 4.9-3 INTERM CONFIGURATION.....	548
FIG. 4.9-4 CDM TEAR-OFF	549
FIG. 4.9-5 POP-UP WINDOW.....	549
FIG. 4.9-6 BATCH JOB SCREEN.....	550
FIG. 4.9-7 BATCH JOB INPUT.....	554
FIG. 4.9-8 BATCH JOB MODIFICATION	556
FIG. 4.9-9 BATCH JOB DELETION.....	557
FIG. 4.9-10 BATCH JOB STATUS DISPLAY.....	557
FIG. 4.9-11 CONSOLE WINDOW	558
FIG. 4.9-12 CTRL START ICON.....	559
FIG. 4.9-13 CONTROLLER WINDOW	560
FIG. 4.9-14 MESSAGE FILTERING OF CONTROLLER.....	560
FIG. 4.9-15 NETWORK MANAGEMENT OF CONTROLLER.....	561
FIG. 4.9-16 STMGUI START ICON	564
FIG. 4.9-17 STMGUI MAIN SCREEN	564
FIG. 4.9-18 DISPLAY SCREEN OF BTS NAME.....	565
FIG. 4.9-19 MAIN MENU.....	565
FIG. 4.9-20 ALARM COLOR	565
FIG. 4.9-21 STATUS COLOR TONE	567
FIG. 4.9-22 PROCESSOR STATUS (CAN).....	567
FIG. 4.9-23 PROCESSOR STATUS (BSC)	567
FIG. 4.9-24 PROCESSOR STATUS (BTS).....	568
FIG. 4.9-25 BSC SELECTION.....	568
FIG. 4.9-26 BTS SELECTION.....	568
FIG. 4.9-27 CAN RACK SHAPE.....	569
FIG. 4.9-28 BSC RACK.....	570
FIG. 4.9-29 BTS RACK.....	571
FIG. 4.9-30 CARD CLICK EXAMPLE.....	572
FIG. 4.9-31 E.G.)DIALOG BOX- CARD INFORMATION.....	572

FIG. 4.9-32 E.G.)DIALOG BOX-VOCODER ELEMENT STATUS	573
FIG. 4.9-33 E.G.)DIALOG BOX-DBPA CHIP STATUS	573
FIG 4.9-34 DISPLAY STATUS BY BOARD	574
FIG. 4.9-35 ALARM DISPLAY BY BOARD.	574
FIG. 4.9-36 NEIGHBOR INITIAL SCREEN	577
FIG. 4.9-37 MAIN MENU SCREEN	578
FIG. 4.9-38 FULL MAP	578
FIG. 4.9-39 RANDOM BTS SELECTION	579
FIG.4.9-40 INITIAL SCREEN (BEFORE SELECTING BTS)	579
FIG. 4.9-41 AFTER SELECTING BTS.....	579
FIG. 4.9-42 AFTER SELECTING SECTOR(GREEN: NEIGHBOR).	579
FIG. 4.9-43 NEIGHBOR INFORMATION SCREEN.....	580
FIG. 4.9-44 INPUTTING NEIGHBOR BELONGS TO MOTHER MSC	581
FIG. 4.9-45 INPUTTING NEIGHBOR BELONGS TO OTHER MSC	581
FIG. 4.9-46 DEFAULT VALUE UPON INPUT	582
FIG. 4.9-47 CALL TRACE START ICON.....	583
FIG. 4.9-48 CALL TRACE INITIAL SCREEN	584
FIG. 4.9-49 CALL INFORMATION.....	585
FIG. 4.9-50 CALL QUALITY.....	585
FIG. 4.9-51 SCH INFORMATION.....	586
FIG. 4.9-52 PACKET DATA INFORMATION	586
FIG. 4.9-53 COMMAND WINDOW	586
FIG. 4.9-54 EXAMPLE OF EXPAND FLOW BUTTON.....	587
FIG. 4.9-55 EXAMPLE OF SHRINK FLOW BUTTON.....	588
FIG. 4.9-56 VOICE CALL SETUP / ORIGINATION	589
FIG. 4.9-57 VOICE CALL SETUP / TERMINATION.....	590
FIG 4.9-58 PACKET DATA CALL SETUP	591
FIG. 4.9-59 PACKET DATA CALL REACTIVATION / NETWORK INITIATED	592
FIG. 4.9-60 PACKET DATA CALL REACTIVATION / MS INITIATED.....	593
FIG. 4.9-61 BTS ADDRESS SEARCH WINDOW INITIAL SCREEN	595
FIG. 4.9-62 FILE INFORMATION DISPLAY	595
FIG. 4.9-63 SEARCHING WITH BSC	596
FIG. 4.9-64 SEARCHING BY BTS	596
FIG. 4.9-65 SEARCHING WITH BTS NAME-1	597
FIG. 4.9-66 SEARCHING WITH BTS NAME-2	597
FIG. 4.9-67 SEARCHING WITH BTS ADDRESS-1.....	598
FIG. 4.9-68 SEARCHING WITH BTS ADDRESS-2.....	598

FIG. 4.9-69 SEARCHING WITH SEARCH BUTTON.....	600
FIG. 5.1-1 CNP SINGLE FUNCTION FAIL.....	601
FIG. 5.1-2 CNP DUAL FUNCTION FAIL.....	601
FIG. 5.1-3 CNP SINGLE BOARD OPEN FAIL.....	602
FIG. 5.1-4 CNP DUAL BOARD OPEN FAIL.....	602
FIG. 5.1-5 CAN ASCA SINGLE FUNCTION FAIL.....	602
FIG. 5.1-6 CAN ASCA DUAL FUNCTION FAIL.....	603
FIG. 5.1-7 CAN ASCA SINGLE BOARD OPEN FAIL.....	603
FIG. 5.1-8 CAN ASCA DUAL OPEN FAIL.....	603
FIG. 5.1-9 CAN ASIA SINGLE FUNCTION FAIL.....	604
FIG. 5.1-10 CAN ASIA DUAL FUNCTION FAIL.....	604
FIG. 5.1-11 CAN ASIA SINGLE BOARD OPEN FAIL.....	604
FIG. 5.1-12 CAN ASIA SINGLE BOARD OPEN FAIL.....	605
FIG. 5.1-13 CAN AOTA FUNCTION FAIL.....	605
FIG. 5.1-14 CAN AOTA BOARD OPEN FAIL.....	605
FIG. 5.1-15 CAN ATSA FUNCTION FAIL.....	606
FIG. 5.1-16 CAN ATSA BOARD OPEN FAIL.....	606
FIG. 5.1-17 CAMB PRI SINGLE POWER FAIL.....	606
FIG. 5.1-18 CAMB PRI DUAL POWER FAIL.....	607
FIG. 5.1-19 CAMB PRI SINGLE POWER OPEN FAIL.....	607
FIG. 5.1-20 CAMB PRI DUAL POWER OPEN FAIL.....	607
FIG. 5.1-21 CAN ALARM CABLE OPEN.....	608
FIG. 5.1-22 CAN PNP SINGLE FUNCTION FAIL.....	608
FIG. 5.1-23 CAN PNP DUAL FUNCTION FAIL.....	608
FIG. 5.1-24 CAN PNP SINGLE BOARD OPEN FAIL.....	609
FIG. 5.1-25 CAN PNP DUAL BOARD OPEN FAIL.....	609
FIG. 5.1-26 CPNB ASCA SINGLE FUNCTION FAIL.....	609
FIG. 5.1-27 CPNB ASCA DUAL FUNCTION FAIL.....	610
FIG. 5.1-28 CPNB ASCA SINGLE BOARD OPEN FAIL.....	610
FIG. 5.1-29 CPNB ASCA DUAL BOARD OPEN FAIL.....	610
FIG. 5.1-30 CPNB ASIA SINGLE FUNCTION FAIL.....	611
FIG. 5.1-31 CPNB ASIA DUAL FUNCTION FAIL.....	611
FIG. 5.1-32 CPNB ASIA SINGLE BOARD OPEN FAIL.....	611
FIG. 5.1-33 CPNB ASIA DUAL BOARD OPEN FAIL.....	612
FIG. 5.1-34 CPNB PRI SINGLE POWER FAIL.....	612
FIG. 5.1-35 CPNB PRI DUAL POWER FAIL.....	612
FIG. 5.1-36 CPNB PRI SINGLE POWER OPEN FAIL.....	613

FIG. 5.1-37 CPNB PRI DUAL POWER OPEN FAIL	613
FIG. 5.1-38 CPNB ALARM CABLE OPEN	613
FIG. 5.1-39 PCFB PCP SINGLE FUNCTION FAIL	614
FIG. 5.1-40 PCFB PCP DUAL FUNCTION FAIL	614
FIG. 5.1-41 PCFB PCP SINGLE BOARD OPEN FAIL	614
FIG. 5.1-42 PCFB PCP DUAL BOARD OPEN FAIL	615
FIG. 5.1-43 CPNB(PCP) BCRA SINGLE FUNCTION FAIL	615
FIG. 5.1-44 CPNB(PCP) BCRA DUAL FUNCTION FAIL	615
FIG. 5.1-45 CPNB(PCP) BCRA SINGLE BOARD OPEN FAIL	616
FIG. 5.1-46 CPNB(PCP) BCRA DUAL BOARD OPEN FAIL	616
FIG. 5.1-47 CPNB(PCP) PIP FUNCTION FAIL	616
FIG. 5.1-48 CPNB(PCP) PIP BOARD OPEN FAIL	617
FIG. 5.1-49 CPNB(PCP) FERA SINGLE FUNCTION FAIL	617
FIG. 5.1-50 CPNB(PCP) FERA DUAL FUNCTION FAIL	617
FIG. 5.1-51 CPNB(PCP) FERA SINGLE BOARD OPEN FAIL	618
FIG. 5.1-52 CPNB(PCP) FERA DUAL BOARD OPEN FAIL	618
FIG. 5.1-53 CPNB(PCP) FETA FUNCTION FAIL	618
FIG. 5.1-54 CPNB(PCP) FETA BOARD OPEN FAIL	619
FIG. 5.1-55 CPNB(PCP) PRI SINGLE POWER FAIL	619
FIG. 5.1-56 CPNB(PCP) PRI DUAL POWER FAIL	619
FIG. 5.1-57 CPNB(PCP) PRI SINGLE POWER OPEN FAIL	620
FIG. 5.1-58 CPNB(PCP) PRI DUAL POWER OPEN FAIL	620
FIG. 5.1-59 CPNB(PCP) ALARM CABLE OPEN	620
FIG. 5.1-60 LINK FAIL BETWEEN CPNB(PCP) FERA AND FETA	621
FIG. 5.1-61 LINK FAIL BETWEEN CPNB(PCP) FERA AND FETA	621
FIG. 5.1-62 LINK FAIL BETWEEN CPNB(PCP) FETA AND PDSN	621
FIG. 5.1-63 PCFB PCP 1PPS CLOCK FAIL	622
FIG. 5.1-64 PCFB PCP 10MHZ CLOCK FAIL	622
FIG. 5.1-65 PCFB(PMP) PMP SINGLE FUNCTION FAIL	622
FIG. 5.1-66 PCFB(PMP) PMP DUAL FUNCTION FAIL	623
FIG. 5.1-67 PCFB(PMP) PMP SINGLE BOARD OPEN FAIL	623
FIG. 5.1-68 PCFB(PMP) PMP DUAL BOARD OPEN FAIL	623
FIG. 5.1-69 TGDB GPSR SINGLE FUNCTION FAIL	624
FIG. 5.1-70 TGDB GPSR DUAL FUNCTION FAIL	624
FIG. 5.1-71 TGDB GPSR SINGLE POWER FAIL	625
FIG. 5.1-72 TGDB GPSR DUAL POWER FAIL	625
FIG. 5.1-73 TGDB GPSR SINGLE BOARD OPEN FAIL	625

FIG. 5.1-74 TGDB GPSR DUAL BOARD OPEN FAIL.....	626
FIG. 5.1-75 TGDB GPSD SINGLE FUNCTION FAIL.....	626
FIG. 5.1-76 TGDB GPSD DUAL FUNCTION FAIL.....	626
FIG. 5.1-77 TGDB GPSD SINGLE POWER FAIL.....	627
FIG. 5.1-78 TGDB GPSD DUAL POWER FAIL.....	627
FIG. 5.1-79 TGDB AMP ABNORMAL.....	627
FIG. 5.1-80 TGDB GPSR ALARM CABLE OPEN.....	628
FIG. 5.1-81 TGDB GPSD ALARM CABLE OPEN	628
FIG. 5.1-82 TGDB GPSR CONTROL CABLE OPEN	628
FIG. 5.1-83 CAN RACK FAN FAIL.....	629
FIG. 5.1-84 CCSB CCP SINGLE FUNCTION FAIL.....	629
FIG. 5.1-85 CCSB CCP DUAL FUNCTION FAIL.....	629
FIG. 5.1-86 CCSB CCP SINGLE BOARD OPEN FAIL.....	630
FIG. 5.1-87 CCSB CCP DUAL BOARD OPEN FAIL.....	630
FIG. 5.1-88 CCSB SCP SINGLE FUNCTION FAIL	630
FIG. 5.1-89 CCSB SCP DUAL FUNCTION FAIL	631
FIG. 5.1-90 CCSB SCP SINGLE BOARD OPEN FAIL.....	631
FIG. 5.1-91 CCSB SCP DUAL BOARD OPEN FAIL.....	631
FIG. 5.1-92 CCSB STIA FUNCTION FAIL	632
FIG. 5.1-93 CCSB STIA BOARD OPEN FAIL	632
FIG. 5.1-94 CCSB PRI SINGLE POWER FAIL	632
FIG. 5.1-95 CCSB PRI DUAL POWER FAIL	633
FIG. 5.1-96 CCSB PRI SINGLE POWER OPEN FAIL.....	633
FIG. 5.1-97 CCSB PRI DUAL POWER OPEN FAIL.....	633
FIG. 5.1-98 CCSB ABID BOARD OPEN.....	634
FIG. 5.1-99 CCSB 1PPS CLOCK FAIL	634
FIG. 5.1-100 CCSB 10MHZ CLOCK FAIL	634
FIG. 5.1-101 CCSB STIA SHW LINK FAIL	635
FIG. 5.1-102 CCSB ALARM CABLE OPEN	635
FIG. 5.1-103 ASMB NCP SINGLE FUNCTION FAIL.....	635
FIG. 5.1-104 ASMB NCP DUAL FUNCTION FAIL.....	635
FIG. 5.1-105 ASMB NCP SINGLE BOARD OPEN FAIL.....	636
FIG. 5.1-106 ASMB NCP DUAL BOARD OPEN FAIL.....	636
FIG. 5.1-107 ASMB ASCA SINGLE FUNCTION FAIL.....	636
FIG. 5.1-108 ASMB ASCA DUAL FUNCTION FAIL.....	637
FIG. 5.1-109 ASMB ASCA SINGLE BOARD OPEN FAIL	637
FIG. 5.1-110 ASMB ASCA DUAL BOARD OPEN FAIL	637

FIG. 5.1-111 ASMB ASIA SINGLE FUNCTION FAIL	638
FIG. 5.1-112 ASMB ASIA DUAL FUNCTION FAIL	638
FIG. 5.1-113 ASMB ASIA SINGLE BOARD FAIL	638
FIG. 5.1-114 ASMB ASIA DUAL BOARD OPEN FAIL.....	639
FIG. 5.1-115 ASMB ATSA FUNCTION FAIL	639
FIG. 5.1-116 ASMB ATSA BOARD OPEN FAIL	639
FIG. 5.1-117 ASMB PRI SINGLE POWER FAIL.....	640
FIG. 5.1-118 ASMB PRI DUAL POWER FAIL.....	640
FIG. 5.1-119 ASMB PRI SINGLE POWER OPEN FAIL.....	640
FIG. 5.1-120 ASMB PRI DUAL POWER OPEN FAIL.....	641
FIG. 5.1-121 ASMB ALARM CABLE OPEN.....	641
FIG. 5.1-122 ASLB ALP SINGLE FUNCTION FAIL	641
FIG. 5.1-123 ASLB ALP DUAL FUNCTION FAIL	642
FIG. 5.1-124 ASLB ALP SINGLE BOARD OPEN FAIL.....	642
FIG. 5.1-125 ASLB ALP DUAL BOARD OPEN FAIL.....	642
FIG. 5.1-126 ASLB ALMA SINGLE FUNCTION FAIL.....	643
FIG. 5.1-127 ASLB ALP DUAL FUNCTION FAIL	643
FIG. 5.1-128 ASLB ALP SINGLE BOARD OPEN FAIL.....	643
FIG. 5.1-129 ASLB ALP DUAL BOARD OPEN FAIL.....	644
FIG. 5.1-130 ASLB ALPA FUNCTION FAIL	644
FIG. 5.1-131 ASLB ALPA BOARD OPEN FAIL	644
FIG. 5.1-132 ASLB PRI SINGLE POWER FAIL	645
FIG. 5.1-133 ASLB PRI DUAL POWER FAIL	645
FIG. 5.1-134 ASLB PRI SINGLE POWER OPEN FAIL.....	645
FIG. 5.1-135 ASLB PRI DUAL POWER OPEN FAIL.....	646
FIG. 5.1-136 ASLB ALARM CABLE OPEN	646
FIG. 5.1-137 ASLB ALPA LINK FAIL((LOS)).....	646
FIG. 5.1-138 ASLB ALPA LINK FAIL((OOF)).....	647
FIG. 5.1-139 ASLB ALPA LINK FAIL((AIS))	647
FIG. 5.1-140 ASLB ALPA LINK FAIL((RAI)).....	647
FIG. 5.1-141 SLB SMP FUNCTION FAIL.....	648
FIG. 5.1-142 SLB SMP BOARD OPEN FAIL.....	648
FIG. 5.1-143 SLB SLPA FUNCTION FAIL	648
FIG. 5.1-144 SLB SLPA BOARD OPEN FAIL	649
FIG. 5.1-145 SLB PRI POWER FAIL.....	649
FIG. 5.1-146 SLB PRI POWER OPEN FAIL	649
FIG. 5.1-147 SLB ALARM CABLE OPEN	650

FIG. 5.1-148 SLB SMP CLOCK FAIL	650
FIG. 5.1-149 SLB SMP SAID OPEN FAIL	650
FIG. 5.1-150 VCB VMP FUNCTION FAIL.....	651
FIG. 5.1-151 VCB VMP BOARD OPEN FAIL	651
FIG. 5.1-152 VCB VCPA FUNCTION FAIL.....	651
FIG. 5.1-153 VCB VCPA BOARD OPEN FAIL.....	652
FIG. 5.1-154 VCB VLIA FUNCTION FAIL	652
FIG. 5.1-155 VCB VLIA BOARD OPEN FAIL.....	652
FIG. 5.1-156 VCB VLIA LINK FAIL(REMOTE ERROR).....	653
FIG. 5.1-157 VCB VLIA LINK FAIL(LOCAL ERROR).....	653
FIG. 5.1-158 VCB VLIA LINK FAIL(SLIP ERROR).....	653
FIG. 5.1-159 VCB VLIA LINK FAIL(BIT ERROR)	654
FIG. 5.1-160 VCB PRI POWER FAIL	654
FIG. 5.1-161 VCB PRI POWER OPEN FAIL	654
FIG. 5.1-162 VCB ALARM CABLE OPEN	654
FIG. 5.1-163 VCB VMP CLOCK CABLE OPEN FAIL.....	655
FIG. 5.1-164 VCB SAID BOARD OPEN	655
FIG. 5.1-165 VCB RACK FAN FAIL.....	655
FIG. 5.1-166 BSPB BSP SINGLE FUNCTION FAIL	656
FIG. 5.1-167 BSPB BSP DUAL FUNCTION FAIL	656
FIG. 5.1-168 BSPB BSP SINGLE BOARD OPEN FAIL.....	656
FIG. 5.1-169 BSPB BSP DUAL BOARD OPEN FAIL.....	657
FIG. 5.1-170 BSPB PRI SINGLE POWER FAIL	657
FIG. 5.1-171 BSPB PRI DUAL POWER FAIL	657
FIG. 5.1-172 BSPB PRI SINGLE POWER OPEN FAIL.....	658
FIG. 5.1-173 BSPB PRI DUAL POWER OPEN FAIL.....	658
FIG. 5.1-174 BSPB BSP 1PPS CLOCK FAIL.....	658
FIG. 5.1-175 BSPB BSP 10MHZ CLOCK FAIL.....	659
FIG. 5.1-176 BANB ARIA FUNCTION FAIL.....	659
FIG. 5.1-177 BANB ARIA BOARD OPEN FAIL	659
FIG. 5.1-178 BANB BPPA FUNCTION FAIL.....	660
FIG. 5.1-179 BANB BPPA BOARD OPEN FAIL	660
FIG. 5.1-180 BANB BCRA SINGLE FUNCTION FAIL.....	660
FIG. 5.1-181 BANB BCRA DUAL FUNCTION FAIL.....	661
FIG. 5.1-182 BANB BCRA SINGLE BOARD OPEN FAIL.....	661
FIG. 5.1-183 BANB BCRA DUAL BOARD OPEN FAIL	661
FIG. 5.1-184 BANB LICA FUNCTION FAIL.....	662

FIG. 5.1-185 BANB LICA BOARD FAIL	662
FIG. 5.1-186 BSTB BADA ALARM CABLE OPEN	662
FIG. 5.1-187 BSTB BADA POWER FAIL.....	663
FIG. 5.1-188 BSTB BADA FUNCTION FAIL.....	663
FIG. 5.1-189 RISB RISA ALARM CABLE OPEN.....	663
FIG. 5.1-190 RISB RISA POWER FAIL	664
FIG. 5.1-191 RISB RISA FUNCTION FAIL	664
FIG. 5.1-192 BOTB BOTA ALARM CABLE OPEN	664
FIG. 5.1-193 BOTB BOTA POWER FAIL	665
FIG. 5.1-194 BOTB BOTA BOARD OPEN FAIL.....	665
FIG. 5.1-195 BTGB GPS SINGLE FUNCTION FAIL	665
FIG. 5.1-196 BTGB GPS DUAL FUNCTION FAIL	666
FIG. 5.1-197 BTGB GPS SINGLE POWER FAIL.....	666
FIG. 5.1-198 BTGB GPS DUAL POWER FAIL	666
FIG. 5.1-199 BTGB GPS SINGLE BOARD OPEN FAIL	667
FIG. 5.1-200 BTGB GPS DUAL BOARD OPEN FAIL	667
FIG. 5.1-201 BTGB GPS CONTROL CABLE OPEN	667
FIG. 5.1-202 BTGB GPS ALARM CABLE OPEN.....	668
FIG. 5.1-203 DBPB DBPA FUNCTION FAIL.....	668
FIG. 5.1-204 DBPB DBPA BOARD OPEN FAIL.....	668
FIG. 5.1-205 RCCB RCP SINGLE FUNCTION FAIL.....	668
FIG. 5.1-206 RCCB RCP DUAL FUNCTION FAIL.....	669
FIG. 5.1-207 RCCB RCP SINGLE BOARD OPEN FAIL.....	669
FIG. 5.1-208 RCCB RCP DUAL BOARD OPEN FAIL.....	669
FIG. 5.1-209 RCCB BUDA FUNCTION FAIL	670
FIG. 5.1-210 RCCB BUDA BOARD OPEN FAIL	670
FIG. 5.1-211 RCCB PACA FUNCTION FAIL.....	670
FIG. 5.1-212 RCCB PACA BOARD OPEN FAIL.....	671
FIG. 5.1-213 DBPB/RCCB PRI SINGLE POWER FAIL.....	671
FIG. 5.1-214 DBPB/RCCB PRI DUAL POWER FAIL	671
FIG. 5.1-215 DBPB/RCCB PRI SINGLE POWER OPEN FAIL.....	672
FIG. 5.1-216 DBPB/RCCB PRI DUAL POWER OPEN FAIL.....	672
FIG. 5.1-217 DBPB/RCCB ALARM CABLE OPEN.....	672
FIG. 5.1-218 LPAB ALARM CABLE OPEN	673
FIG. 5.1-219 LPAB LPA COMBINER FAIL.....	673
FIG. 5.1-220 LPAB LPA COMBINER FAN FAIL	673
FIG. 5.1-221 LPAB LPA BOARD OPEN FAIL	674

FIG. 5.1-222 LPAB LPA BOARD FUNCTION FAIL.....	674
FIG. 5.1-223 LPAB LPA DC/DC ALARM.....	674
FIG. 5.1-224 LPAB LPA VSWR ALARM.....	674
FIG. 5.1-225 LPAB LPA DISABLE ALARM.....	675
FIG. 5.1-226 LPAB LPA OVER POWER WARNING	675
FIG. 5.1-227 LPAB LPA OVER TEMPERATURE ALARM.....	675
FIG. 5.1-228 LPAB LPA OVER POWER ALARM.....	676
FIG. 5.1-229 HPAB HPA ALARM CABLE OPEN.....	676
FIG. 5.1-230 HPAB HPA BOARD OPEN FAIL.....	676
FIG. 5.1-231 HPAB HPA POWER FAIL	676
FIG. 5.1-232 HPAB HPA POWER SUPPLY ALARM.....	677
FIG. 5.1-233 HPAB HPA VSWR ALARM.....	677
FIG. 5.1-234 HPAB HPA DISABLE ALARM	677
FIG. 5.1-235 HPAB HPA OVER TEMPERATURE ALARM.....	677
FIG. 5.1-236 HPAB HPA OVER POWER ALARM.....	678
FIG. 5.1-237 CFEB LNA ALARM CABLE OPEN FAIL	678
FIG. 5.1-238 CFEB LNA BOARD OPEN FAIL	678
FIG. 5.1-239 CFEB LNA FUNCTION FAIL	678
FIG. 5.1-240 OUTDOOR BTS ENV ALARM CABLE OPEN.....	679
FIG. 5.1-241 OUTDOOR BTS ENV RECTIFIER UNIT ALARM CABLE OPEN.....	679
FIG. 5.1-242 OUTDOOR BTS ENV COLD STARTER FAIL.....	679
FIG. 5.1-243 OUTDOOR BTS ENV RECTIFIER UNIT FAIL	680
FIG. 5.1-244 OUTDOOR BTS ENV VOLTAGE HIGH ALARM	680
FIG. 5.1-245 OUTDOOR BTS ENV VOLTAGE LOW ALARM	680
FIG. 5.1-246 OUTDOOR BTS AC FAIL	680
FIG. 5.1-247 OUTDOOR BTS ENV BATTERY LOW VOLTAGE ALARM.....	681
FIG. 5.1-248 OUTDOOR BTS ENV FUSE/RELAY LOSS ALARM	681
FIG. 5.1-249 OUTDOOR BTS ENV DMC-14 FAIL.....	681
FIG. 5.1-250 OUTDOOR BTS ENV POWER CUT ALARM	682
FIG. 5.1-251 OUTDOOR BTS ENV TEMPERATURE HIGH ALARM.....	682
FIG. 5.1-252 OUTDOOR BTS ENV TEMPERATURE LOW ALARM	682
FIG. 5.1-253 OUTDOOR BTS ENV WATER HIGH ALARM.....	682
FIG. 5.1-254 OUTDOOR BTS ENV WATER LOW ALARM.....	683
FIG. 5.1-255 OUTDOOR BTS ENV FIRE ALARM	683
FIG. 5.1-256 OUTDOOR BTS ENV HUMIDITY HIGH ALARM.....	683
FIG. 5.1-257 OUTDOOR BTS ENV ACU MODULE FAIL	684
FIG. 5.1-258 OUTDOOR BTS ENV HEAT EXCHANGER POWER FAIL.....	684

FIG. 5.1-259 OUTDOOR BTS ENV HEAT EXCHANGER FAIL	684
FIG. 5.1-260 OUTDOOR BTS ENV LPA FAN FAIL	684
FIG. 5.1-261 OUTDOOR BTS ENV AC EQUIPMENT HEATER FAIL	685
FIG. 5.1-262 OUTDOOR BTS ENV FRONT/REAR DOOR OPEN ALARM	685
FIG. 5.1-263 OUTDOOR BTS ENV SIDE DOOR OPEN ALARM.....	685
FIG. 5.1-264 OUTDOOR BTS ENV FAN FAIL	686
FIG. 5.1-265 OUTDOOR BTS ENV AC BATTERY HEATER FAIL.....	686
FIG. 5.1-266 INDOOR BTS ENV TEMPERATURE HIGH ALARM.....	686
FIG. 5.1-267 INDOOR BTS ENV TEMPERATURE LOW ALARM.....	686
FIG. 5.1-268 INDOOR BTS ENV FLOOD ALARM	687
FIG. 5.1-269 INDOOR BTS ENV DOOR #1 OPEN ALARM	687
FIG. 5.1-270 INDOOR BTS ENV DOOR #2 OPEN ALARM	687
FIG. 5.1-271 INDOOR BTS ENV FIRE ALARM	688
FIG. 5.1-272 INDOOR BTS ENV RECTIFIER #1 FAILS.....	688
FIG. 5.1-273 INDOOR BTS ENV RECTIFIER #2 FAIL.....	688
FIG. 5.1-274 INDOOR BTS ENV AIRCON #1 FAIL.....	688
FIG. 5.1-275 INDOOR BTS ENV AIRCON #2 FAIL.....	689
FIG. 5.1-276 INDOOR BTS ENV WATER LEAKAGE ALARM.....	689
FIG. 5.1-277 BTS RACK FAN FAIL	689
FIG. 5.1-278 KEEP-ALIVE FAULT BETWEEN CNP AND NCP.....	690
FIG. 5.1-279 KEEP-ALIVE FAULT BETWEEN PNP AND NCP	690
FIG. 5.1-280 KEEP-ALIVE FAULT BETWEEN PNP AND PCP.....	690
FIG. 5.1-281 KEEP-ALIVE FAULT BETWEEN PCP AND CCP.....	691
FIG. 5.1-282 KEEP-ALIVE FAULT BETWEEN PCP AND PNP.....	691
FIG. 5.1-283 KEEP-ALIVE FAULT BETWEEN CCP AND NCP	691
FIG. 5.1-284 KEEP-ALIVE FAULT BETWEEN CCP AND PCP.....	692
FIG. 5.1-285 KEEP-ALIVE FAULT BETWEEN CCP AND BSP.....	692
FIG. 5.1-286 KEEP-ALIVE FAULT BETWEEN CCP AND SCP.....	692
FIG. 5.1-287 KEEP-ALIVE FAULT BETWEEN CCP AND SMP	693
FIG. 5.1-288 KEEP-ALIVE FAULT BETWEEN CCP AND VMP.....	693
FIG. 5.1-289 KEEP-ALIVE FAULT BETWEEN NCP AND CNP	693
FIG. 5.1-290 KEEP-ALIVE FAULT BETWEEN NCP AND CCP	694
FIG. 5.1-291 KEEP-ALIVE FAULT BETWEEN NCP AND PNP	694
FIG. 5.1-292 KEEP-ALIVE FAULT BETWEEN NCP AND CRP	694
FIG. 5.1-293 KEEP-ALIVE FAULT BETWEEN SCP AND CCP.....	695
FIG. 5.1-294 KEEP-ALIVE FAULT BETWEEN SCP AND STIA.....	695
FIG. 5.1-295 KEEP-ALIVE FAULT BETWEEN BSP AND CCP.....	695

FIG. 5.1-296 KEEP-ALIVE FAULT BETWEEN BSP AND RCP	696
FIG. 5.1-297 KEEP-ALIVE FAULT BETWEEN BSP AND BPP	696
FIG. 5.1-298 KEEP-ALIVE FAULT BETWEEN RCP AND DBPA	696
FIG. 5.1-299 VOCODER CLOCK FAULT.....	697
FIG. 5.1-300 QCELP0 ALGORITHM FAULT.....	697
FIG. 5.1-301 QCELP1 ALGORITHM FAULT.....	697
FIG. 5.1-302 QCELP2 ALGORITHM FAULT.....	698
FIG. 5.1-303 QCELP3 ALGORITHM FAULT.....	698
FIG. 5.1-304 VCPA LOOP-BACK TEST FAULT	698
FIG. 5.1-305 VOCODER DSP ROM TEST FAULT	699
FIG. 5.1-306 VOCODER DSP RAM TEST FAULT	699
FIG. 5.1-307 VOCODER DSP ROM/RAM TEST FAULT	699
FIG. 5.1-308 VOCODER DSP ALU TEST FAULT.....	700
FIG. 5.1-309 VOCODER DSP ROM/ALU TEST FAULT.....	700
FIG. 5.1-310 VOCODER DSP RAM/ALU TEST FAULT.....	700
FIG. 5.1-311 VOCODER DSP ROM/RAM/ALU TEST FAULT.....	701
FIG. 5.1-312 VLIA E1/T1 TRUNK TIME-SLOT TEST FAULT.....	701
FIG. 5.1-313 SCI FAULT.....	701
FIG. 5.1-314 BASE ID FAULT	702
FIG. 5.1-315 BTS ID FAULT.....	702
FIG. 5.1-316 SECTOR ID FAULT.....	702
FIG. 5.1-317 NEIGHBOR LIST FAULT	703
FIG. 5.1-318 MSC OVERLOAD FAULT.....	703
FIG. 5.1-319 CCP OVERLOAD FAULT	703
FIG. 5.1-320 BSP OVERLOAD FAULT	704
FIG. 5.1-321 GET TASK FUNCTION FAULT.....	704
FIG. 5.1-322 FREE TASK FUNCTION FAULT	704
FIG. 5.1-323 GET BUFFER FUNCTION FAULT.....	705
FIG. 5.1-324 AUTHENTICATION FAULT	705
FIG. 5.1-325 STM SYSTEM TIME FAULT	705
FIG. 5.1-326 CDM TX PARITY FAULT.....	706
FIG. 5.1-327 CDM RX PARITY FAULT.....	706
FIG. 5.1-328 CDM TX OVER-FLOW FAULT.....	706
FIG. 5.1-329 CDM TX M2R DATA ERROR.....	707
FIG. 5.1-330 CDM TX R2B DATA ERROR	707
FIG. 5.1-331 CDM RX B2R DATA ERROR	707
FIG. 5.1-332 OVERHEAD CHANNEL CONFIG NO RECEIVED FAULT	707

FIG. 5.1-333 OVERHEAD CHANNEL CONFIG INVALID FAULT	708
FIG. 5.1-334 DBPA INTERNAL EVEN CLOCK FAULT	708
FIG. 5.1-335 DBPA EXTERNAL SYSTEM CLOCK FAULT.....	708
FIG. 5.1-336 DBPA TOD NOT ACTIVE FAULT	709
FIG. 5.1-337 DBPA CMC NO FREE QUEUE FAULT.....	709
FIG. 5.1-338 DBPA INTERNAL SYNC CLOCK FAULT.....	709
FIG. 5.1-339 DBPA CORE NO FREE QUEUE FAULT	710
FIG. 5.1-340 DBPA QUEUE PUT FAULT	710
FIG. 5.1-341 DBPA QUEUE GET FAULT	710
FIG. 5.1-342 DBPA S/W WATCHDOG TIMEOUT FAULT	710
FIG. 5.1-343 DBPA FATAL FAULT	711
FIG. 5.1-344 DBPA BAD CHANNEL MODEM FAULT	711
FIG. 5.1-345 DBPA EXTERNAL TOD FAULT	711
FIG. 5.1-346 DBPA INTERNAL OS CLOCK FAULT	712
FIG. 5.1-347 DBPA BIT FAIL.....	712
FIG. 5.1-348 DBPA TC NO SVC FREE QUEUE FAIL	712
FIG. 5.1-349 DBPA TC NO NORMAL FREE QUEUE FAIL	712
FIG. 5.1-350 DBPA TC TX FWHENO FULL FAIL	713
FIG. 5.1-351 DBPA ACH NO FREE QUEUE FAIL.....	713
FIG. 5.1-352 DBPA PC NO ENCODER FREE QUEUE FAIL.....	713
FIG. 5.1-353 DBPA PC NO PAGE FREE QUEUE FAIL	714
FIG. 5.1-354 DBPA PC NO QUICK PAGE FREE QUEUE FAIL.....	714
FIG. 5.1-355 DBPA PC NO REPLY FREE QUEUE FAIL.....	714
FIG. 5.1-356 DBPA PC WRITE FRAME FAIL.....	715
FIG. 5.1-357 DBPA PC NO GENERAL PAGE FREE QUEUE FAIL.....	715
FIG. 5.1-358 BUDA CHIPX16 FAULT.....	715
FIG. 5.1-359 BUDA FORWARD SYNC FAULT.....	716
FIG. 5.1-360 BUDA TX SATURATION FAULT	716
FIG. 5.1-361 BUDA FRAME ERROR FAULT.....	716
FIG. 5.1-362 BOTA TOD ERROR FAULT	717
FIG. 5.1-363 BOTA TOD NOT ACTIVE FAULT	717
FIG. 5.2-1 CNP PROCESSOR STATUS CHANGE REPORT	718
FIG. 5.2-2 PNP PROCESSOR STATUS CHANGE REPORT.....	718
FIG. 5.2-3 PCP PROCESSOR STATUS CHANGE REPORT.....	719
FIG. 5.2-4 PMP PROCESSOR STATUS CHANGE REPORT	719
FIG. 5.2-5 CCP PROCESSOR STATUS CHANGE REPORT.....	720
FIG. 5.2-6 NCP PROCESSOR STATUS CHANGE REPORT	720

FIG. 5.2-7 SCP PROCESSOR STATUS CHANGE REPORT	721
FIG. 5.2-8 SMP PROCESSOR STATUS CHANGE REPORT	721
FIG. 5.2-9 VMP PROCESSOR STATUS CHANGE REPORT	722
FIG. 5.2-10 ALP PROCESSOR STATUS CHANGE REPORT	722
FIG. 5.2-11 BSP PROCESSOR STATUS CHANGE REPORT	723
FIG. 5.2-12 CRP PROCESSOR STATUS CHANGE REPORT	723
FIG. 5.2-13 RCP PROCESSOR STATUS CHANGE REPORT	724
FIG. 5.2-14 BPP PROCESSOR STATUS CHANGE REPORT	724
FIG. 5.2-15 OVERLOAD STATUS OCCURRED MESSAGE	725
FIG. 5.2-16 OVERLOAD STATUS CHANGE MESSAGE	725
FIG. 5.2-17 OVERLOAD STATUS RELEASED MESSAGE	726
FIG. 5.3-1 PROCESSOR INITIALIZATION START MESSAGE	726
FIG. 5.3-2 PROCESSOR INITIALIZATION END MESSAGE	727
FIG. 5.3-3 LOADING START MESSAGE	728
FIG. 5.3-4 LOADING COMPLETION MESSAGE	728
FIG. 5.3-5 LOADING FAILURE MESSAGE	729
FIGURE 7.3-1 IP INPUT REQUEST WINDOW IN DCI WINDOW	774

Tables

TABLE 3.1-1 ~/PACKAGE/EXEC	129
TABLE 4.3-1 PARAMETER DATA CHANGE COMMAND (1) LIST	251
TABLE 4.3-2 PARAMETER INFORMATION CHANGE COMMAND (2) LIST	288
TABLE 4.3-3 CONFIGURATION INFORMATION DISPLAY	329
TABLE 4.3-4 CONFIGURATION INFORMATION CHANGE.....	337
TABLE 4.4-1 PROCESSOR STATUS LIST	380
TABLE 4.4-2 NETWORK NODE STATUS LIST.....	385
TABLE 4.4-3 DEVICE STATUS LIST	390
TABLE 4.4-4 VOCODER CHANNEL ELEMENT STATUS LIST	397
TABLE 4.4-5 STATUS MESSAGE LIST	411
TABLE 4.5-1 CE TEST RESULT MESSAGE.....	424
TABLE 4.5-2 VOCODER TEST RESULT	426
TABLE 4.6-1 COMMANDS RELATED TO SIGNALING POINT MANAGEMENT	463
TABLE 4.6-2 COMMANDS RELATED TO SIGNALING LINK SET	463
TABLE 4.6-3 COMMANDS RELATED TO SIGNALING LINK	463
TABLE 4.6-4 COMMANDS RELATED TO SIGNALING TERMINAL	464
TABLE 4.6-5 COMMANDS RELATED TO SIGNALING DATA LINK	464
TABLE 4.6-6 DISPLAY COMMANDS FOR SCCP DATA	464
TABLE 4.6-7 SIGNALING LINK STATUS DISPLAY COMMANDS	464
TABLE 4.6-8 COMMANDS RELATED TO TIMER	464
TABLE 4.6-9 TEST RELATED COMMANDS	465
TABLE 4.6-10 STATUS SUPPRESSION RELATED COMMANDS	465
TABLE 4.7-1 STATISTICS COMMAND LIST	491
TABLE 4-4.8-1 ALARM/FAULT RELATED COMMAND LIST	521
TABLE 4-4.8-2 THE MEANING OF INPUT BY BSC NUMBER AND BTS NUMBER..	523
TABLE 7.1-1 CAN GENERATED ALARM MESSAGE LIST	736
TABLE 7.1-2 BSC GENERATED ALARM MESSAGE LIST	738
TABLE 7.1-3 BTS GENERATED ALARM MESSAGE LIST	740
TABLE 7.1-4 FAULT MESSAGE LIST	743
TABLE 7.1-5 MEASURES FOR ALARM MESSAGE	744
TABLE 7.2-1 STATUS MESSAGE LIST	766
TABLE 7.2-2 PROCESSOR STATUS LIST	767
TABLE 7.2-3 NETWORK NODE STATUS LIST.....	767
TABLE 7.2-4 VOCODER CHANNEL ELEMENT STATUS LIST	768
TABLE 7.2-5 NETWORK NODE MODE LIST.....	768

TABLE 7.2-6	DEVICE STATUS LIST	768
TABLE 7.4-1	IS-2000 SERVICE OPTION TYPE	781
TABLE 7.4-2	ORIGINATION CALL TRAFFIC STATISTICS	782
TABLE 7.4-3	TERMINATION CALL TRAFFIC STATISTICS	783
TABLE 7.4-4	HANDOFF STATISTIC TYPE	784
TABLE 7.4-5	HANDOFF STATISTIC COLLECTION ITEM.....	784
TABLE 7.4-6	CHANNEL ELEMENT STATISTICS	785
TABLE 7.4-7	VOCODER STATISTICS	785
TABLE 7.4-8	ATM NETWORK STATISTICS (LINK/PORT STATISTICS)	786
TABLE 7.4-9	TRUNK STATISTIC ITEM BETWEEN MSC-BSC	786
TABLE 7.4-10	RADIO CHANNEL QUALITY STATISTIC ITEM.....	786
TABLE 7.4-11	PROCESSOR STATISTIC ITEM.....	787
TABLE 7.4-12	SELECTOR STATISTIC ITEM.....	787
TABLE 7.4-13	BTS PERFORMANCE STATISTICS (CALL DELAY STATISTICS) ITEM 787	
TABLE 7.4-14	PAGING STATISTICS ITEM.....	788
TABLE 7.4-15	CAI SIGNALING STATISTICS ITEM.....	788
TABLE 7.4-16	NO7 STATISTIC ITEM	789
TABLE 7.4-17	RF MIN-MAX STATISTIC ITEM	790
TABLE 7.4-18	PACKET DATA STATISTIC ITEM.....	790
TABLE 7.4-19	PACKET CONTROL STATISTIC ITEM.....	791
TABLE 7.4-20	PACKET HANDOFF STATISTIC ITEM.....	791
TABLE 7.5-1	ST_BSM_CFG.....	793
TABLE 7.5-2	T_RE_CAN_NODE	793
TABLE 7.5-3	ST_RE_CAN_ADDR.....	794
TABLE 7.5-4	ST_RE_CAN_PVC.....	794
TABLE 7.5-5	ST_RE_CAN_SVC.....	795
TABLE 7.5-6	ST_RE_CAN_NET_CFG.....	796
TABLE 7.5-7	ST_RE_CAN_NET_DATA.....	796
TABLE 7.5-8	ST_RE_CAN_IUR_CON.....	797
TABLE 7.5-9	ST_RE_CAN_RNC5_CON	797
TABLE 7.5-10	ST_RE_CAND_NODE	798
TABLE 7.5-11	ST_RE_PCF_NODE.....	798
TABLE 7.5-12	ST_RE_CAND_ADDR.....	799
TABLE 7.5-13	ST_RE_CAND_PVC	800
TABLE 7.5-14	ST_RE_PCF_PVC	800
TABLE 7.5-15	ST_RE_CAND_SVC	801

TABLE 7.5-16	ST_RE_CAND_NET_CFG	802
TABLE 7.5-17	ST_RE_CAND_NET_DATA	802
TABLE 7.5-18	ST_RE_CAND_DATA5_CON	803
TABLE 7.5-19	ST_RE_CAND_PIF5_CON.....	803
TABLE 7.5-20	ST_PDSN_ADDR_DATA_TYPE.....	804
TABLE 7.5-21	ST_PCF_TIMER_TYPE.....	804
TABLE 7.5-22	ST_PCF_INFO_DATA_TYPE.....	805
TABLE 7.5-23	ST_PIFU_HW_RESET_DATA_TYPE	807
TABLE 7.5-24	ST_FWDPWR_DATA_TYPE	807
TABLE 7.5-25	ST_13_FWDPWR_DATA_TYPE	808
TABLE 7.5-26	ST_REVPWR_DATA_TYPE.....	809
TABLE 7.5-27	ST_13_REVPWR_DATA_TYPE	810
TABLE 7.5-28	ST_SLPSTS_DATA_TYPE	811
TABLE 7.5-29	ST_VCPSTS_DATA_TYPE.....	811
TABLE 7.5-30	ST_TRUNK_DATA_TYPE	812
TABLE 7.5-31	ST_T1_TRUNK_DATA_TYPE.....	812
TABLE 7.5-32	ST_BSC_DATA_TYPE.....	813
TABLE 7.5-33	ST_TARGET_FER_SERVICE_TYPE.....	813
TABLE 7.5-34	ST_MAHHO_DATA_TYPE	815
TABLE 7.5-35	ST_LOCATION_PARA_TYPE.....	816
TABLE 7.5-36	ST_PWR_CNTL_PARA_TYPE	817
TABLE 7.5-37	ST_SCH_PARAM_DATA	820
TABLE 7.5-38	ST_IOS_PARA_DATA.....	821
TABLE 7.5-39	ST_VCBU_HW_RESET_DATA_TYPE	823
TABLE 7.5-40	ST_SLBU_HW_RESET_DATA_TYPE.....	824
TABLE 7.5-41	ST_RE_ATM_NODE.....	824
TABLE 7.5-42	ST_RE_SLB_NODE.....	825
TABLE 7.5-43	ST_RE_VCB_NODE	825
TABLE 7.5-44	ST_RE_ALB_NODE	826
TABLE 7.5-45	ST_RE_BS_ATM_NODE	827
TABLE 7.5-46	ST_RE_RNC_BS_TRUNK	827
TABLE 7.5-47	ST_RE_ATM_PVC	829
TABLE 7.5-48	ST_RE_SLB_PVC	830
TABLE 7.5-49	ST_RE_VCB_PVC.....	830
TABLE 7.5-50	ST_RE_ALB_PVC	831
TABLE 7.5-51	ST_RE_LOC_BS_PVC	832
TABLE 7.5-52	ST_RE_OUT_BS_PVC	832

TABLE 7.5-53	ST_RE_ATM_SVC	833
TABLE 7.5-54	ST_RE_RNC_NET_CFG.....	834
TABLE 7.5-55	ST_RE_BS_NET_CFG.....	834
TABLE 7.5-56	ST_RE_RNC_NET_DATA.....	835
TABLE 7.5-57	ST_RE_RNC_IUR_CON.....	836
TABLE 7.5-58	ST_RE_RNC_IUB_CON	836
TABLE 7.5-59	ST_RE_RNC_SLB_CON	837
TABLE 7.5-60	ST_RE_RNC_VCB_CON	837
TABLE 7.5-61	ST_RE_RNC_ALSU5_CON	837
TABLE 7.5-62	ST_RE_BS_NET_DATA.....	837
TABLE 7.5-63	ST_RE_BS_IUB_CON	838
TABLE 7.5-64	ST_RE_BS_RCU5_CON	838
TABLE 7.5-65	ST_RE_RNC_ALS_NET_DATA.....	838
TABLE 7.5-66	ST_RE_RNC_CMP5_CON	839
TABLE 7.5-67	ST_LNIT_DATASL.....	839
TABLE 7.5-68	ST_LNIT_DATAST	840
TABLE 7.5-69	ST_MLTWO_TIMER.....	840
TABLE 7.5-70	ST_MLTHREE_TIMER	841
TABLE 7.5-71	ST_SCCP_TIMER.....	842
TABLE 7.5-72	ST_BTS_DATA_TYPE	842
TABLE 7.5-73	ST_SECTOR_DATA_TYPE.....	844
TABLE 7.5-74	ST_CDMACH_DATA_TYPE	845
TABLE 7.5-75	ST_SYS_PARAM_MSG_DATA_TYPE.....	845
TABLE 7.5-76	ST_EXT_SYS_PARAM_MSG_DATA_TYPE.....	849
TABLE 7.5-77	ST_NGHBR_LIST_MSG_DATA_TYPE.....	854
TABLE 7.5-78	ST_QOS_PARAM_DATA	857
TABLE 7.5-79	ST_PWR_MGT_PARAM_TYPE.....	857
TABLE 7.5-80	ST_TXMS_PARAM_DATA	859
TABLE 7.5-81	ST_TIC_DATA_TYPE	859
TABLE 7.5-82	ST_ACC_PARAM_DATA_TYPE	860
TABLE 7.5-83	ST_PC_GLOBAL_REDIRECT_MSG_TYPE	862
TABLE 7.5-84	ST_BTS_CFG_TYPE	864
TABLE 7.5-85	ST_DRU_CHC_DATA_TYPE	865
TABLE 7.5-86	ST_CHIP_CONFIG_DATA	865
TABLE 7.5-87	ST_HPBCCH_DATA	867
TABLE 7.5-88	ST_PICH_DATA_TYPE (PILOT CHANNEL)	868
TABLE 7.5-89	ST_SYNCH_DATA_TYPE (SYNC CHANNEL)	868

TABLE 7.5-90	ST_PCH_DATA_TYPE (PAGING CHANNEL)	868
TABLE 7.5-91	ST_QPCH_DATA_TYPE (QUICK PAGING CHANNEL).....	869
TABLE 7.5-92	ST_ACH_DATA_TYPE (ACCESS CHANNEL).....	869
TABLE 7.5-93	ST_APICH_DATA_TYPE (AUXILIARY PILOT CHANNEL).....	871
TABLE 7.5-94	ST_BCCH_DATA_TYPE (BROADCAST CHANNEL).....	871
TABLE 7.5-95	ST_CPCH_DATA_TYPE (COMMON POWER CONTROL CHANNEL)	872
TABLE 7.5-96	ST_CACH_DATA_TYPE (COMMON ASSIGNMENT CHANNEL)	873
TABLE 7.5-97	ST_FCCCH_DATA_TYPE (FORWARD COMMON CONTROL CHANNEL)	873
TABLE 7.5-98	ST_EACH_DATA_TYPE (ENHANCED ACCESS CHANNEL).....	874
TABLE 7.5-99	ST_RCCCH_DATA_TYPE (REVERSE COMMON CONTROL CHANNEL)	874
TABLE 7.5-100	ST_SECTOR_CDMACH_DATA_TYPE.....	874
TABLE 7.5-101	ST_HW_RESET_TYPE	875
TABLE 7.5-102	ST_CHIP_PWR_CNTL_PARA_DATA.....	876
TABLE 7.6-1	ABBREVIATIONS IN IS-2000 SYSTEM	877

1. Introduction to BSM

1.1. Overview

BSM refers to the maintenance system. Through BSM, the operation and maintenance is controlled and information needed for maintenance and the maintenance data are managed and kept. The information needed for the maintenance refers to the following: loading, state, faults, statistics, diagnosis, and configuration information. The above information can be controlled by the maintenance operator. The BSM S/W functions are as follows:

- Configuration Management of System
- Fault Management of System
- Performance Management of System
- Security Management of System
- Account Management of System

1.1.1. Configuration Management of System

Configuration management of the system can be divided into the following: (1) system initialization which installs the configuration target to the target system (system loading process), (2) figuring out system components, (3) system component status monitoring, (4) understanding of the relations among the components, and (5) addition and deletion of the components to be managed.

1.1.2. Fault Management of System

Fault management target includes the subsystem, board, and Memory. When problems occur in these, it should be reported to the operator promptly and accurately, so that he/she can operate the system stably. The fault management and handling function is divided into the following: (1) fault detection, (2) fault diagnosis, and (3) fault handling.

- Fault detection: the function to monitor the faults on a regular basis and write the error report.
- Fault diagnosis: the function to run a diagnosis on causes for the corresponding faults. It regenerates the causes for errors, analyzes the errors, and receives report on the causes for errors from the corresponding error factors. Therefore, in general, the system test function corresponds to the diagnostic function.
- Fault handling: Faults can be handled by other parts of the BSM system such as configuration management.

NE (Network Element) and intangible resources, which are mounted to the system, can be managed as the status information such as Sector, FA, etc. In addition, BSM informs to the operator the status information on the status management target accurately and can inquire the status of the status management target in real time. Furthermore, through the function to check memory, it can manage the appropriateness of the memory and its use state online.

In case of the call resource state management, if problems occur in the corresponding resources, BSM assists to provide the high-quality services by isolating them after tests. It notifies the operator of the reasons for the errors so he/she can isolate them and take proper measures to correct them.

When faults occur or when clearing faults, the corresponding information is reported to the operator immediately through the use of the operator terminal, GUI, audible device, Alarm panel, etc. The resources with faults are automatically excluded from services to prevent the system quality degradation using the corresponding resources when processing calls. Depending on the degree that faults affect the system, they are classified into minor, major, and critical and then the operator is notified.

- 1) Critical ALM: It has the fatal influence on the system function. Therefore, regardless of the time it occurs, it requires the urgency in action.
- 2) Major ALM: It affects the system profoundly. It indicates abnormal operation of the main circuits, or fault occurrence. This fault should be notified to the operator so that he/she can perform a test on the functions or restore them.

- 3) Minor ALM: It does not influence services or subscribers or call processing to much degree. It does not require urgency in action.

In order to minimize the influences of the faults, BSM reports the classified faults in details, and if necessary, the operator can isolate the corresponding fault blocks and restore them. In addition, when faults occur, it helps to isolate faults and recover them by figuring out the state accurately through the diagnosis function.

The diagnosis is divided into the following: 1) the Online diagnosis that is automatically run without the operator's request and the On-demand diagnosis that is run by the operator's command. The test function exists in the system separate from the diagnosis function and the diagnosis function uses the performance result of the test function. Online diagnosis can be changed using the operator's MMC and Online diagnosis starting point and end point can also be changed.

1.1.3. Performance Management of System

Performance and management functions of the system are classified into the following: (1) the performance measurement function, (2) the performance evaluation measurement adjusting function, and (3) the performance evaluation function (performance evaluation and performance evaluation report using the designated performance evaluation criteria). The criteria that can be used for the performance evaluation are in general as follows:

- Throughput: it measures communication circuit and network node throughput. In general, PDU (protocol data unit) measures the success rate of the sending/transmission.
- Workload: It takes various actions to prevent overload. By setting the standard for the workload, it prevents the overload.
- Others: it measures propagation delay, wait time, and response time, and quality of service.

Hourly statistics files that are generated every hour are stored in the BSM and using the hourly statistics files, the statistics files are generated by the date, week, period, and month. In addition, the corresponding raw data can be processed using other tools.

1.1.4. Security Management of System

Security management function is divided into the following: (1) notarization and (2) access control. The former secures the sources or origin of the received information, the time they are generated, and the accurateness of the information. The latter controls the access of the unauthorized users and provides the functions according to access permission. Each command has the performance level or grade so the operator can perform the command suitable for the level or grade. It allows the access to the corresponding modules by the operator. When accessing defined modules, it prohibits the input command to be performed. That is, it restricts the user rights by classifying them into the following: the operator's rights that are related to exchanging, the operator's rights that are related to the BTS, and the operator's rights that are related to the RF Device control.

1.1.5. Account Management of System

In line with the security management, the account management defines each user and provides the additional functions such as the user log, etc. Super User can register the new user or delete the existing user. Up to 64 new users can be registered and if necessary, the number of users can be increased.

1.2. Interoperability and Operation

BSM S/W functions interwork with OAM (Operation and Maintenance) S/W functions that are mounted to BSP and CCP. For the network management, it configures the ATM network separately. BSM manages BSC and BS through ATM S/W and provides NMC Agent function. Through the interface with EMS, the BSM supports Q3 interface with the CMIS/CMIP protocol and the object-oriented information model. For EMS network management for BS and BSC, it uses the Manager-Agent model. BSM TMN Agent plays Agent roles, and by interoperating with EMS that plays the Manager roles, it transmits

the BS, BSC, BSM configuration, faults, and performance data based on TMN. The GUI and WUI functions are provided for the operator to control the system easily.

1.2.1. Configuration Management of System

Upon initializing the system, updating the System, and upgrading the System, BSM displays the corresponding information to the operator's question by performing the following: by downloading the execution module and system data that are mounted to the each processor in BTS and BSC, receiving the loading history and information from each processor, and then backing them up.

It displays the changed BTS and BSC parameter information and configuration data on the PCS mobile communication network of the CDMA method on the screen. By managing the H/W insertion information and system parameter information, it plays the essential role in recovering the faults when faults occur. In addition, the state change report along with the fault occurrence detects problems in an early stage and solves them. It also changes the configuration of the subsystem in operation and parameter information.

1.2.2. Fault Management of System


BSM collects, manages, and analyzes the faults that can occur in BTS and BSC of the CDMA method in real time and reports them to the operator audibly and visibly. It can display the current fault state at the operator's request and test and control the subsystem with faults. In addition, it operates in Active/Standby mode and each BSM is connected to ATM S/W. Active BSM provides classical BSM functions and Standby BSM checks the Active BSM status on a regular basis and then makes the data consistent. When Standby BSM detects faults in Active BSM, it executes the Active BSM function.

1.2.3. Performance Management of System

BSM collects and stores the data that are needed to evaluate behavior and trend that occur in BTS and BSC and to determine the extension or reduction of the system by interworking with BTS and BSC. Regarding the performance data collection, it is divided into the following: to collect data in a cycle (5min./1hr./1day/1 month) and to collect the data at the operator's request. At the operator's request, it displays the statistical data that are stored or controls the statistical functions that are currently executed. The collected data are as follows: call-related data, NE use rate, frequency of fault occurrence, etc.

1.2.4. Security Management of System

It authorizes the manager that operates and manages BSM, develops log for messages that are generated in the system and the command by the user and processes the information.

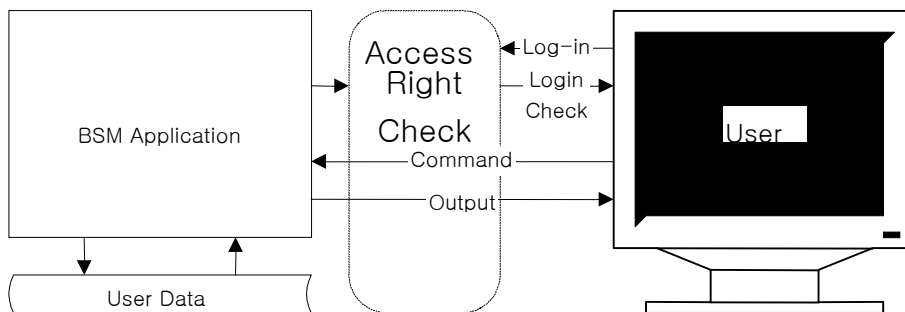

- All the BSM commands have the execution authority level.
- Operator ID should have passwords, and when logging in, the passwords should be input.
- The user with the upper level can have all the authorities that the user with the lower level has.
- Only the user with the upper most level can change the command class.
- When performing the work through the network, if there are too many users that perform the work at the same time, all the on-line messages that come to the system should be notified to the system and the message that comes through the command should be displayed on the corresponding window.

- All the On-line or On-demand commands and messages should be stored.
- Among the stored messages, only the messages that are desired can be displayed by the data, time, BTS and BSC section and object number combination.

1.2.5. Account Management of System

By allowing the user register, deletion, and information change by the manager that operates and manages BSM, it provides the authority by the level or the user that contains the system operation and maintenance layer to operate the stable system and maintain the system.

- User ID can be added.
- User ID can be deleted.
- Deletion and addition of the User ID can be made by the upper level user.
- User ID information can be changed.
- User ID has the following information: ID, Password, and class.
- The user with the higher authority can read the user with the equal or lower level user ID.

1.3. BSM Configuration

1.3.1. S/W System Boundary

1.3.1.1. S/W System Environment

As a unit that provides the function to operate and maintain BTS and BSC, BSM interfaces with the CAN(Central ATM Network) and can manage up to 12 BSC and 576 BTC. When the system requirements change later, the accommodated BTS and BSC

counts can be changed. At the carrier's request, it interworks with NMS to interwork with TMN.

1.3.1.2. External Interface of the S/W System

BSM inserts the ATM Card into Workstation and has interface using CAN (Central ATM Network) and Optic Cable/5 UTP Cable. It provides the following interface: CMIP Interface to interface with the NMS and TCP/UDP/IP Interface to interface with BSC and BS.

1.3.2. S/W Architecture

1.3.2.1. BSM S/W Configuration

As shown in Fig. 1-2 below, BSM S/W is configured with the following: 1) BUIS (BSS User Interface Subsystem), 2) BEMS (BSS Element Management Subsystem), 3) BAMS (BSS Agent Management Subsystem), and 4) BSIS (BSS System Interface Subsystem).

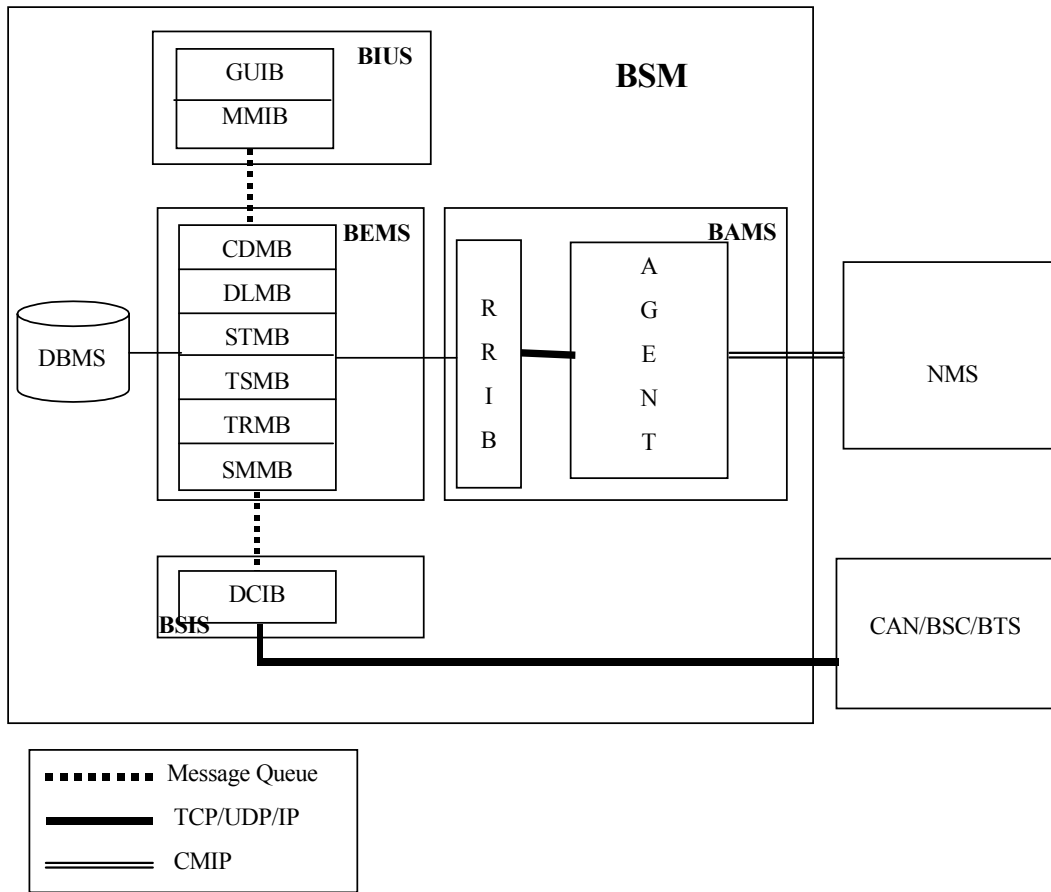


Fig. 1.3-1 BSM S/W Configuration

2. BSM Environment Setting

2.1. OS Installation

2.1.1. Solaris 2.7 Installation Procedures

1. Insert Solaris cdrom into Drive, input ID and Password in the Workstation and then press **stop+a** in a login status.

Changed to a prompt state.

Input the followings:

```
boot cdrom
```

2. Check to see if OS is rebooted by the CDROM

Once booting is complete, the following will be displayed on the initial screen:



Fig. 2.1-1 OS Language Selection Screen

3. Select Korean EUC local (ko) from Language and Local items. Then, click **Continue!**

6. The screen that requires the host name is displayed.

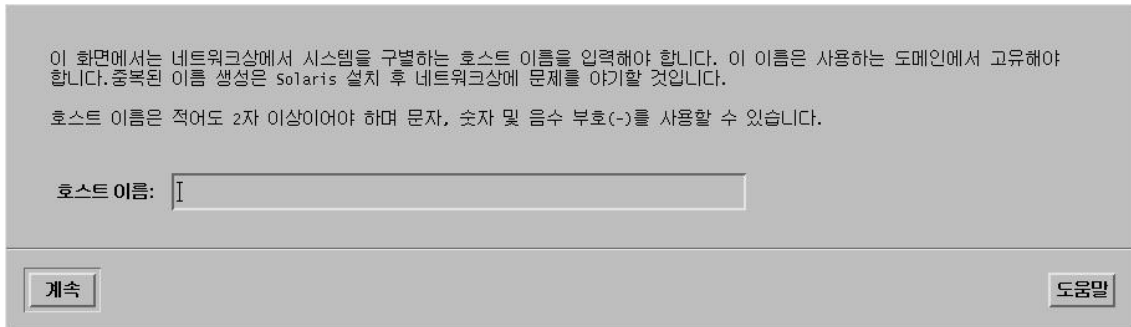


Fig. 2.1-4 Host Name Input Screen

7. Input the appropriate Host name as show below. Ex) feel.

Then, click **Continue!**

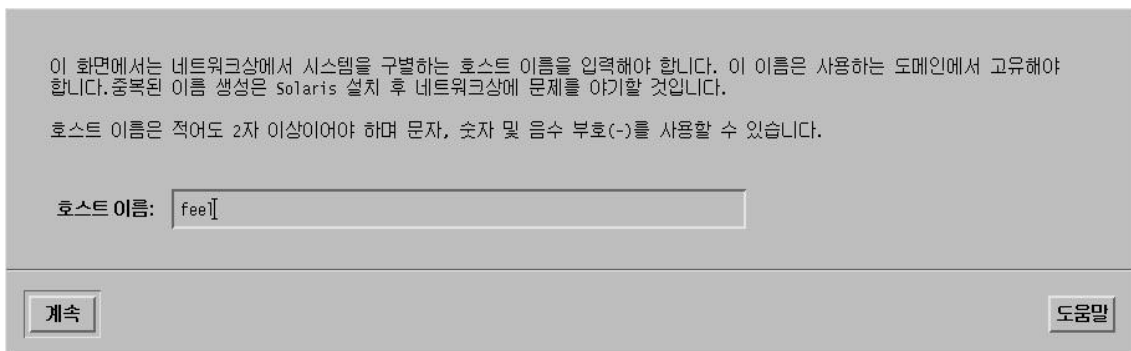


Fig. 2.1-5 Host Name Input 2

8. Ask whether to set up the network. If the network is possible, select **Yes**. Click **Continue!**

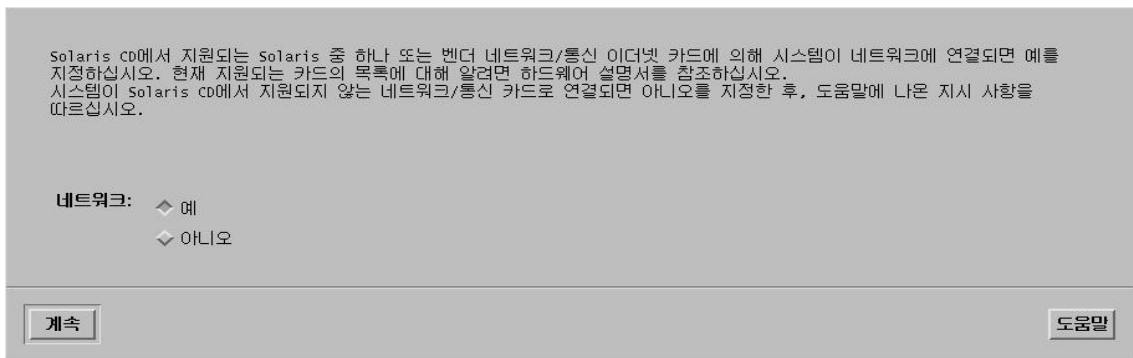


Fig. 2.1-6 Network Setting Screen

9. The screen asking for IP Address is displayed.

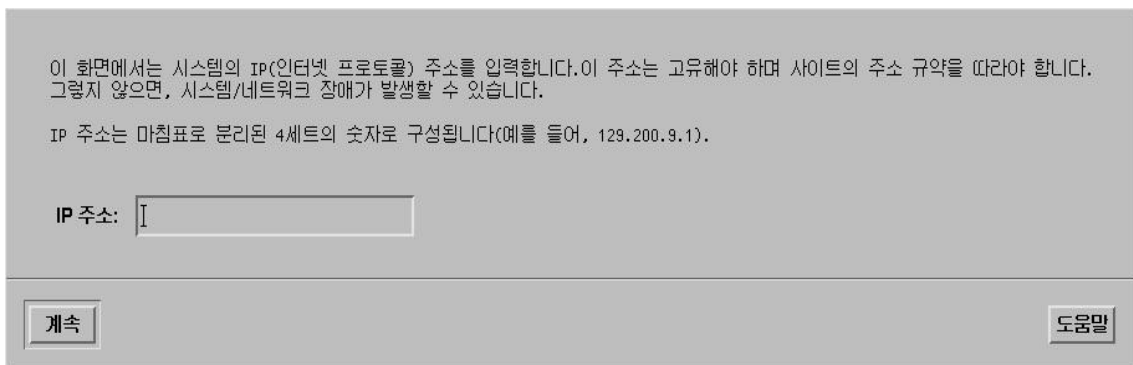


Fig. 2.1-7 IP Address Input Screen

10. Type IP address that is allocated to Workstation as shown below.

Ex) 150.150.62.102 → Unique IP is given to each system.

Then, click **Continue**!

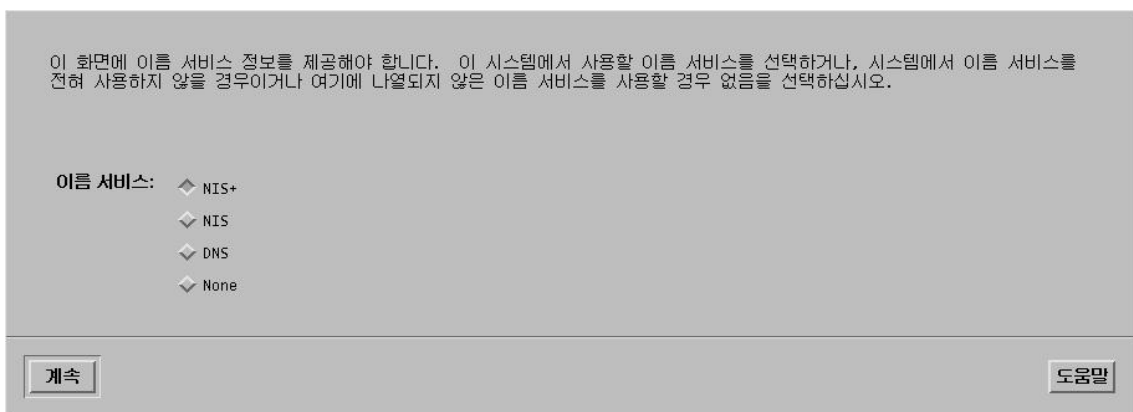


Fig. 2.1-10 DNS Setting Screen

13. Select None among 4 select items. (To be set) Click **Continue!**

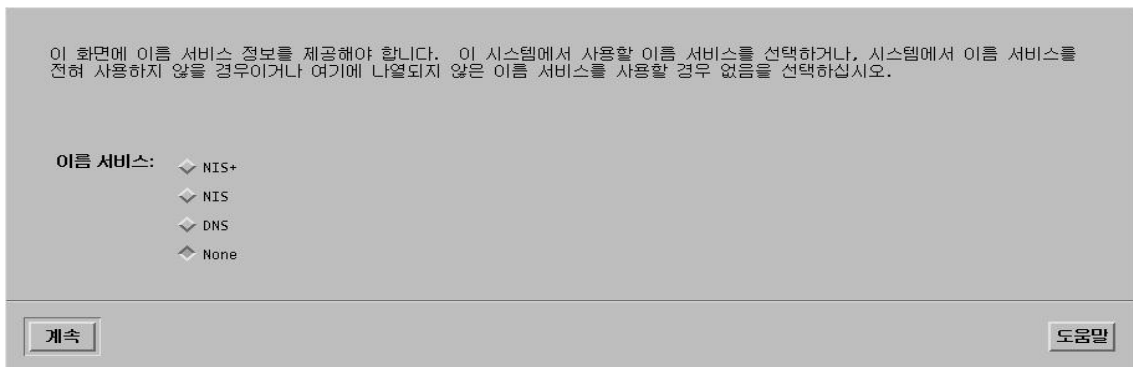


Fig. 2.1-11 DNS Setting Screen 2

14. OK menu is displayed. Click **Continue!**



Fig. 2.1-12 DNS Setting Summary Screen

15. Subnet setting screen is displayed. Select **Yes**. Then, click **Continue**.

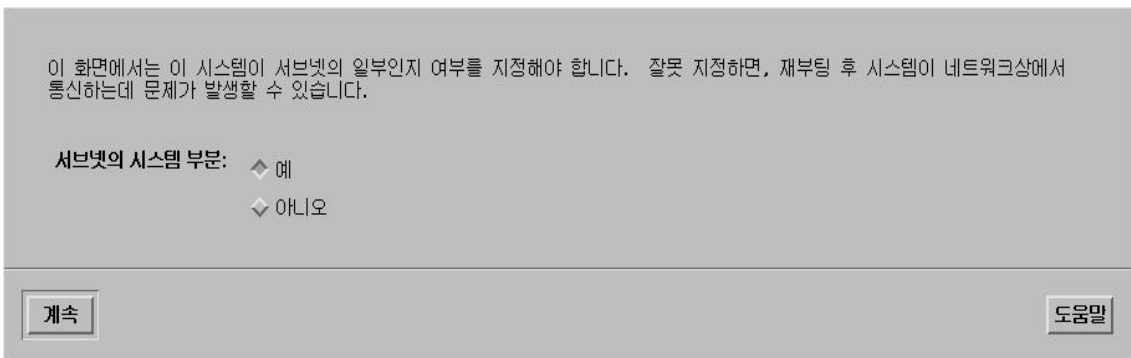


Fig. 2.1-13 Subnet Setting Screen

16. The subnet mask IP inputting part is shown.

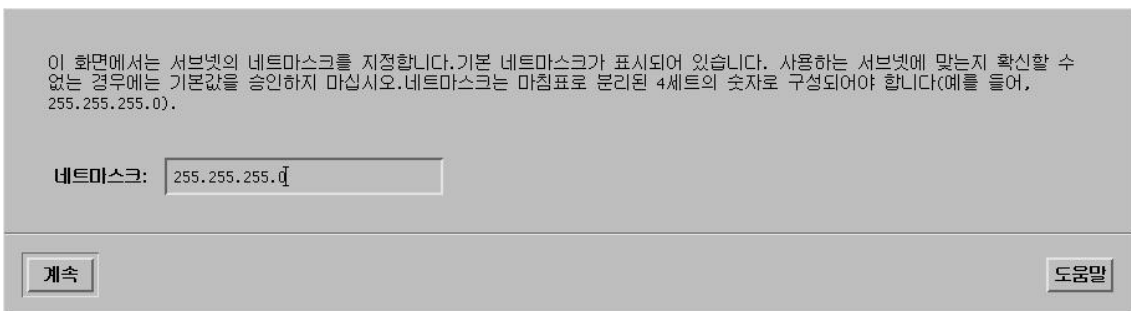


Fig. 2.1-14 Subnet Setting Screen 2

17. Type the subnet mask as shown below.

Ex) 255.255.255.128 (before inputting them, check if the subnet mask is used)

Then, click **Continue!**

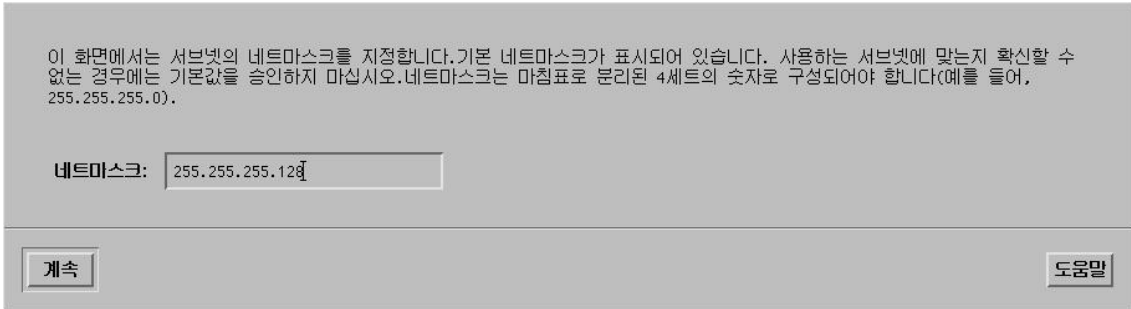


Fig. 2.1-15 Subnet Setting Screen 3

18. The menu designating the basic time zone is shown.

Select **the regional location**. Then, click **Set!**

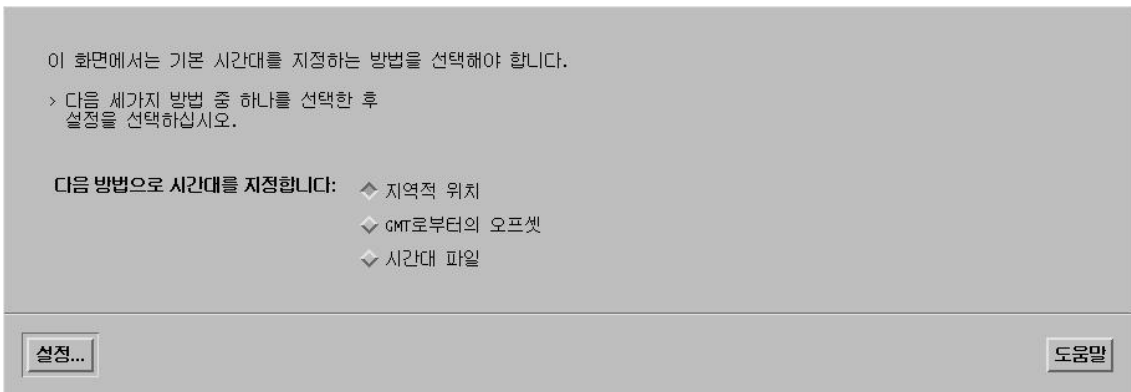


Fig. 2.1-16 OS Time Setting Method Screen

19. The menu containing the country and time zone is shown.

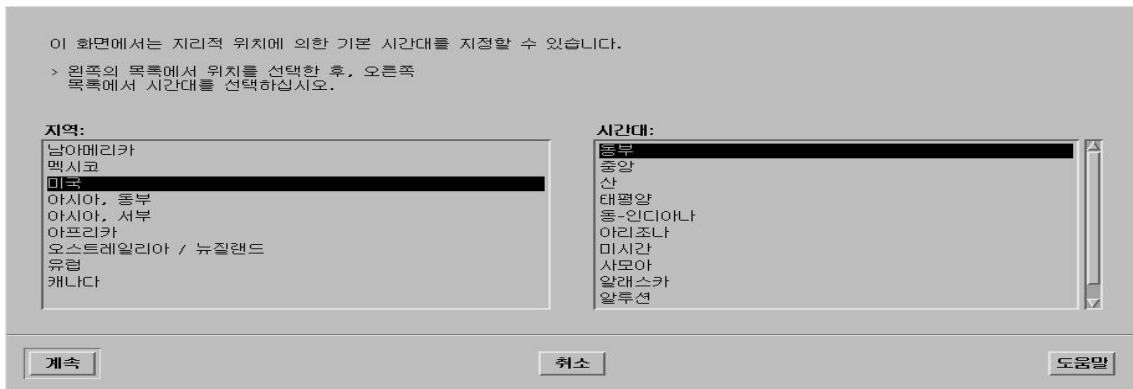


Fig. 2.1-17 OS Time Setting Region Selection Screen

20. Select Asia for the region and Korean for time zone. Then, click **Select!**

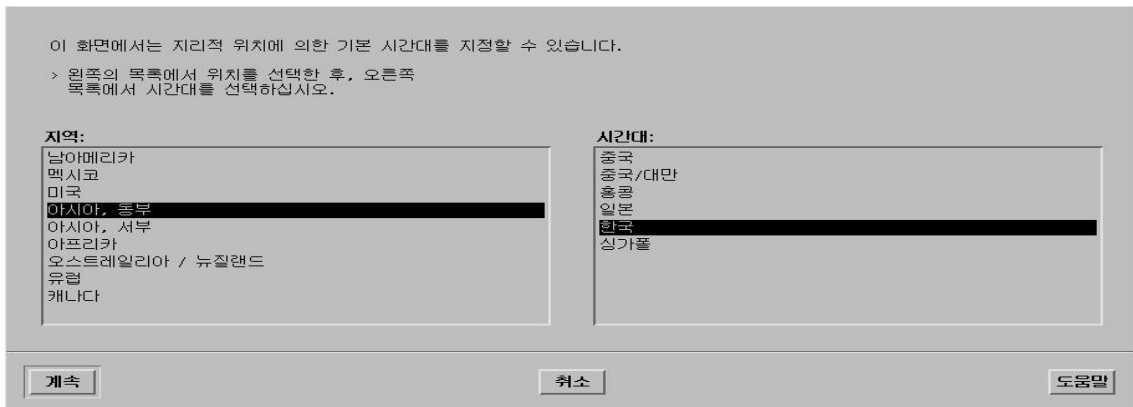


Fig. 2.1-18 OS Time Setting Region Selection Screen 2

21. Check to see if minute, time, data, month, and year are accurate. If they are not, click **Continue!**



Fig. 2.1-19 Time Setting Screen

22. The items that are related to the subnet are summarized. Click **Continue!**

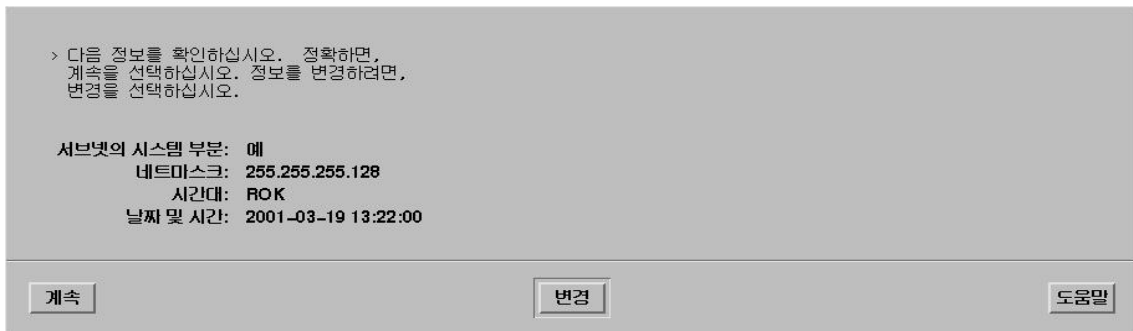


Fig. 2.1-20 Subnet and Time Setting Summary Screen

23. The screen selecting Solaris installation method is displayed on the screen. Click **Initialize!**

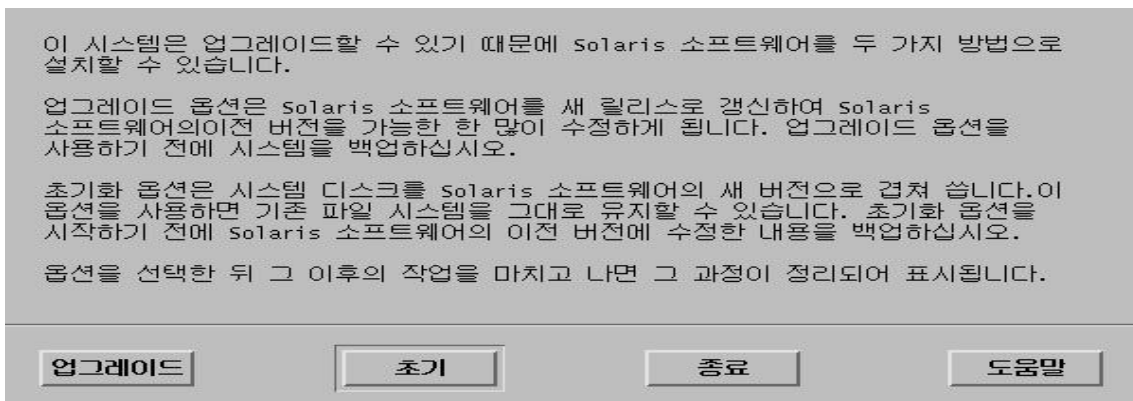


Fig. 2.1-21 OS Installation Method Selection Screen

24. Click **Continue**!

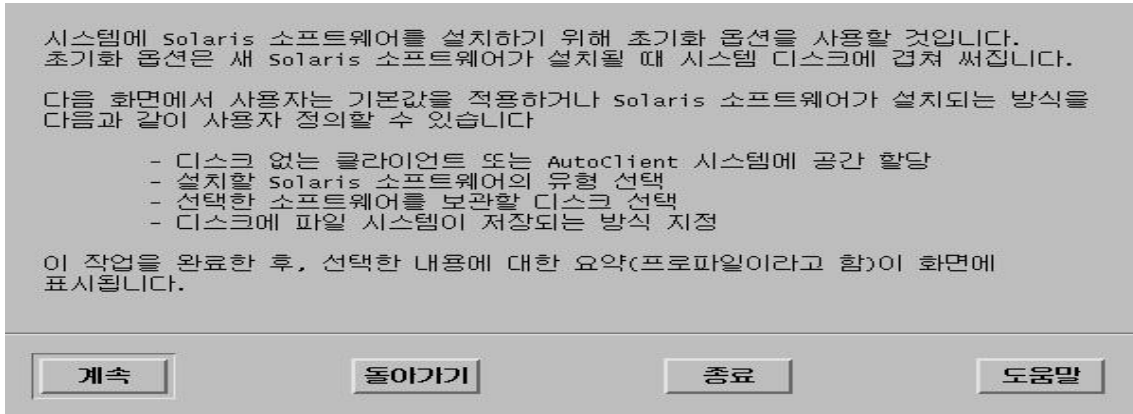


Fig. 2.1-22 Attention to the Installation of OS

25. Client-related questions are shown. Click **Continue**!

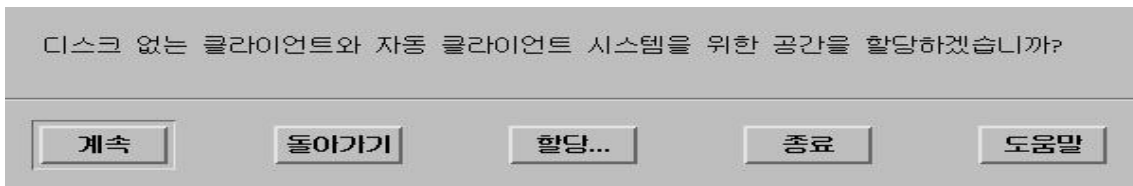


Fig. 2.1-23 X-Terminal Setting Screen

26. Language select screen is shown. Click **Continue**!

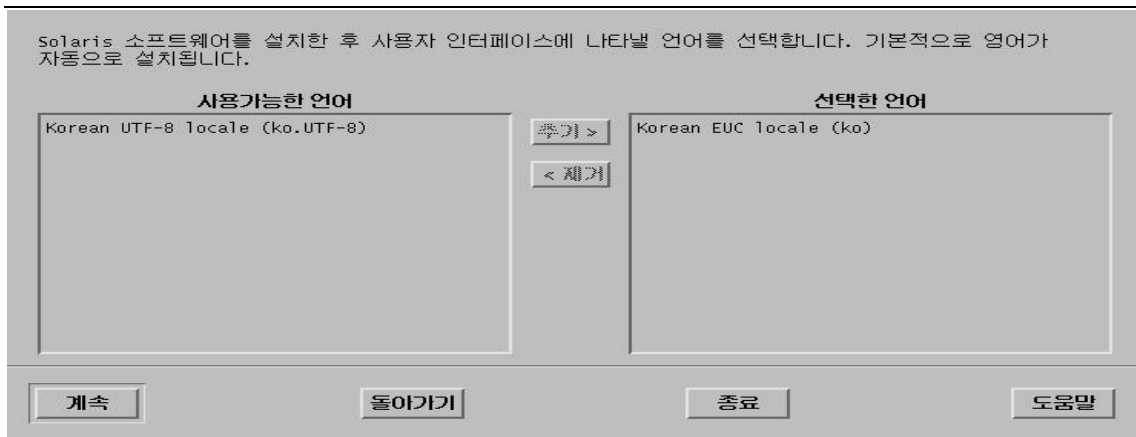


Fig. 2.1-24 User Language Selection Screen

27. S/W installation-related menu is displayed. Click **Continue!**

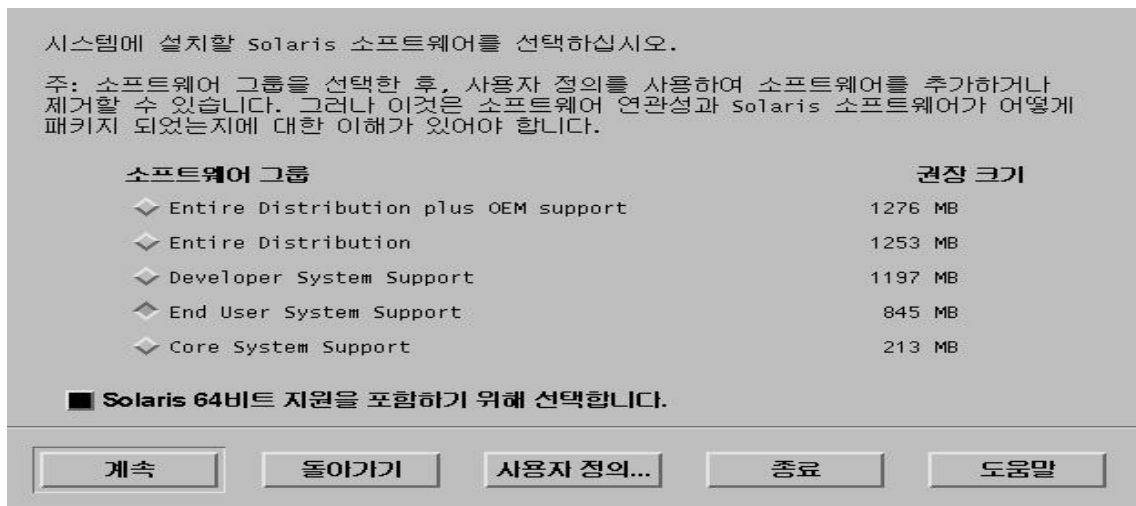


Fig. 2.1-25 OS Installation Category Selection Screen

28. Select **Entire Distribution plus OEM support**. Then, click **Continue!**

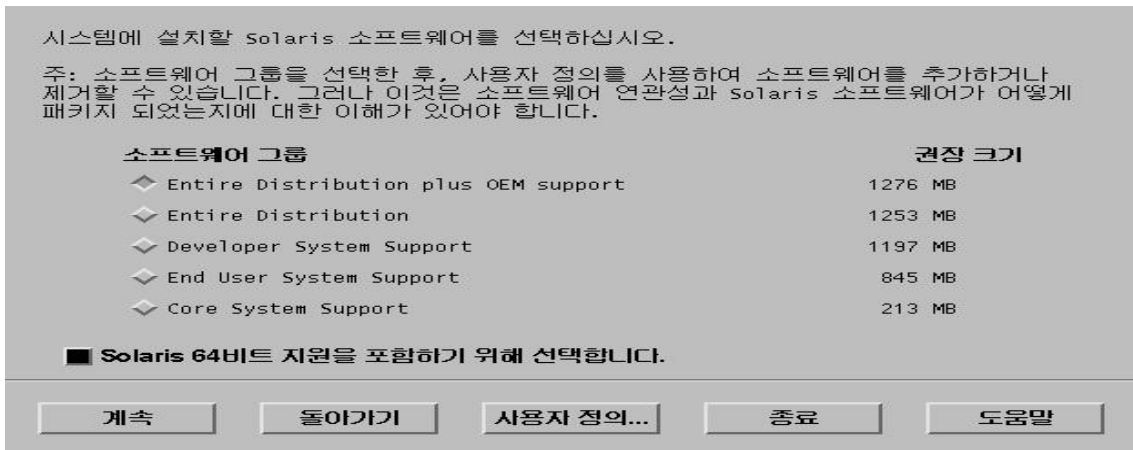


Fig. 2.1-26 OS Installation Category Selection Screen 2

29. Select the disk where OS is to be installed.

If two disks are displayed on the screen, it shows information.

t : Select the disk with t0 - a parameter that represents the disk - written.

Click **Continue**!

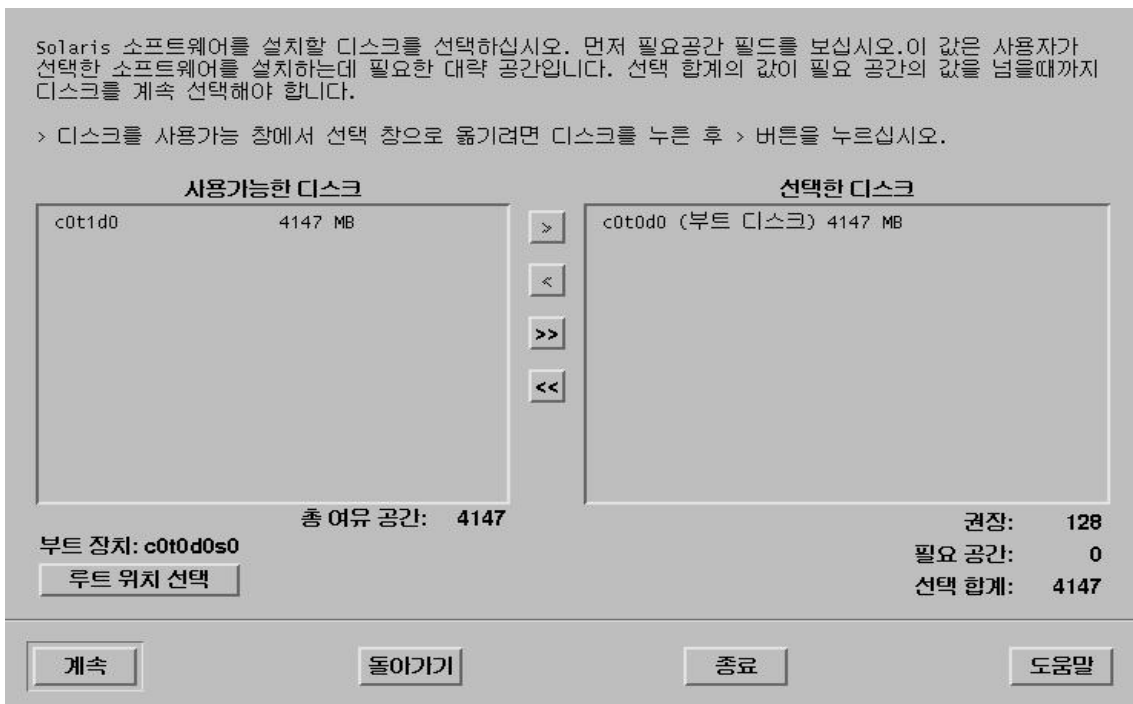


Fig. 2.1-27 OS Installation Disk Selection Screen

30. Determine whether to keep data. Then, click **Continue**.

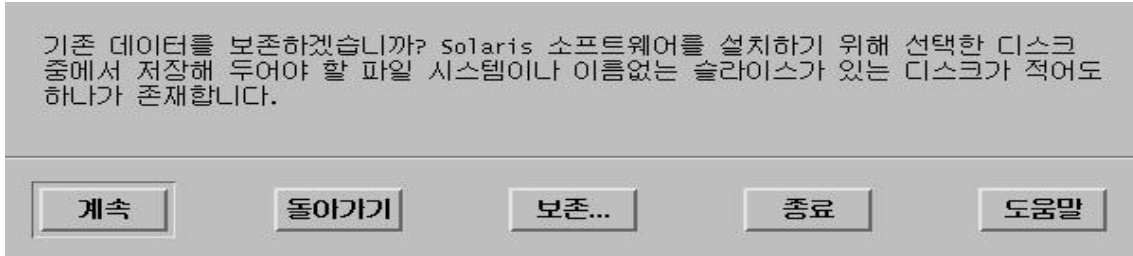


Fig. 2.1-28 Warning Sentence Screen Resulting from the Disk Setting

31. File system-related items are shown.

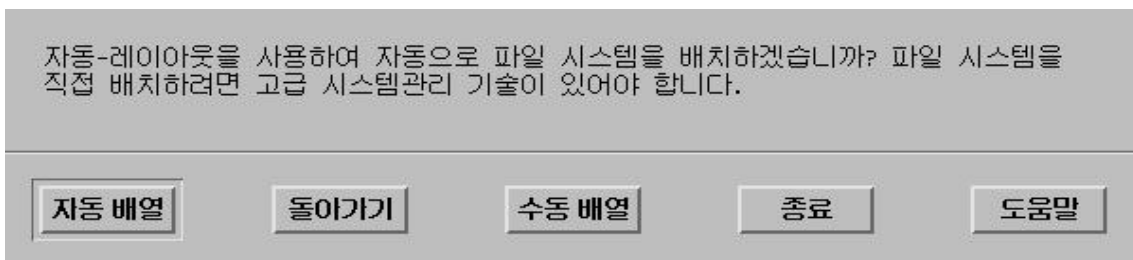


Fig. 2.1-29 Selection Screen for Disk Installation Method

32. Click **Manual Arrangement**.

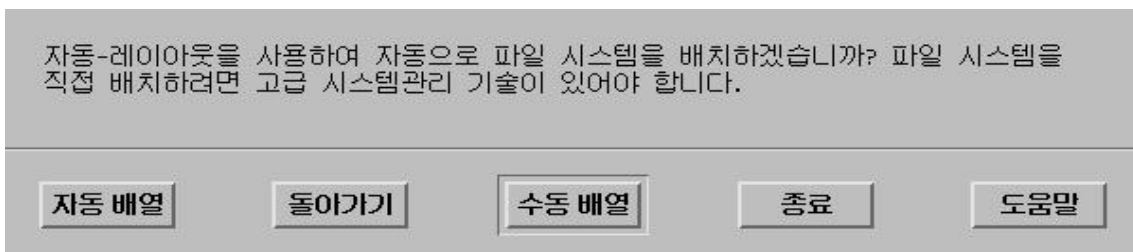


Fig. 2.1-30 Select Screen for Disk Installation Method

33. The current disk information is shown. Click **Customize**!

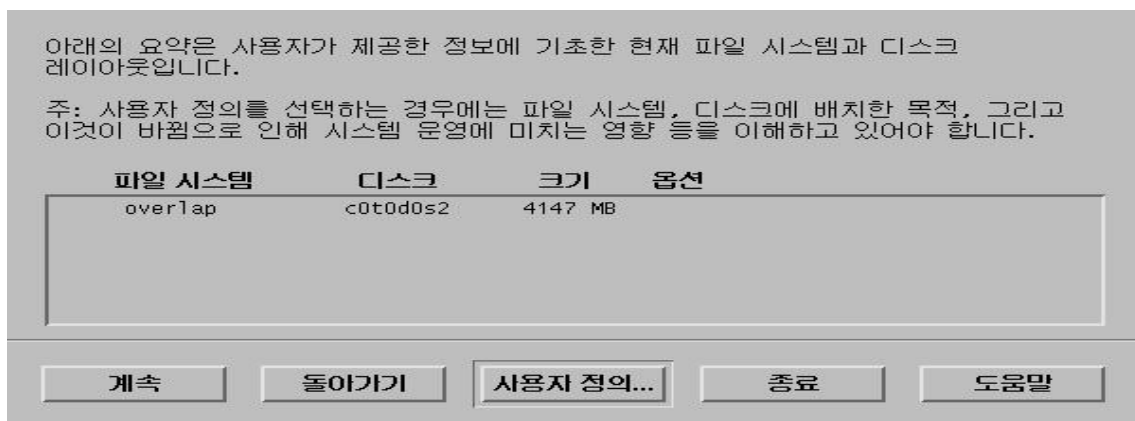


Fig. 2.1-31 Selected Disk Information Display Screen

34. Disk use information is shown. Overlap(disk size) can be checked.

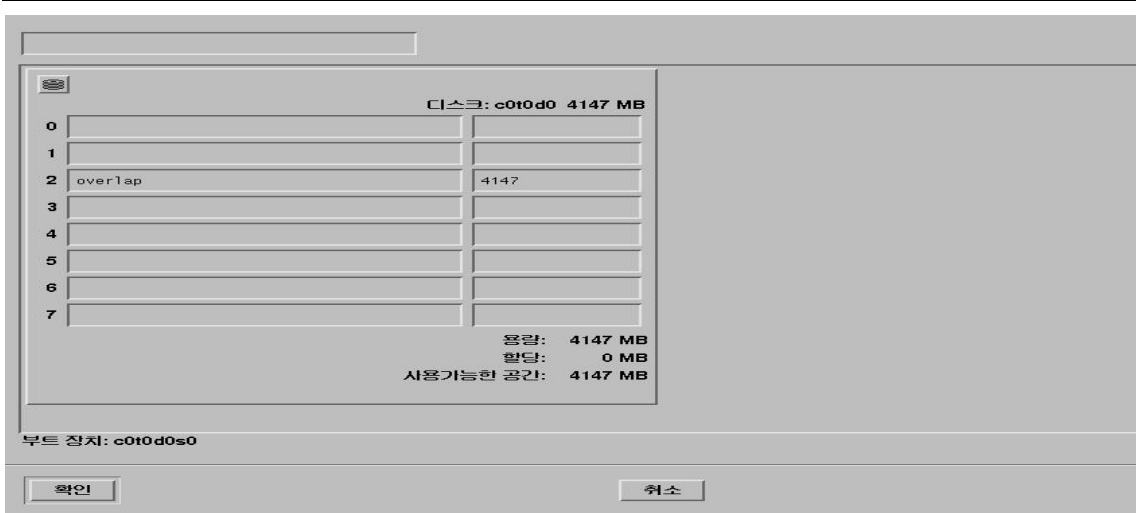



Fig. 2.1-32 Area Information Display Screen for the Disk Division

35. Disk Space Allocation

As shown below, type **route(/)**, **user(/usr)**, and **swap** and select the size to the total disk space. In general, much of disk space is allocated to **Route /usr**. (For the suitable Disk Size, refer to the attached file.)

Swap should be twice as large as the memory. (Current system memory : 256Mbyte)

Click

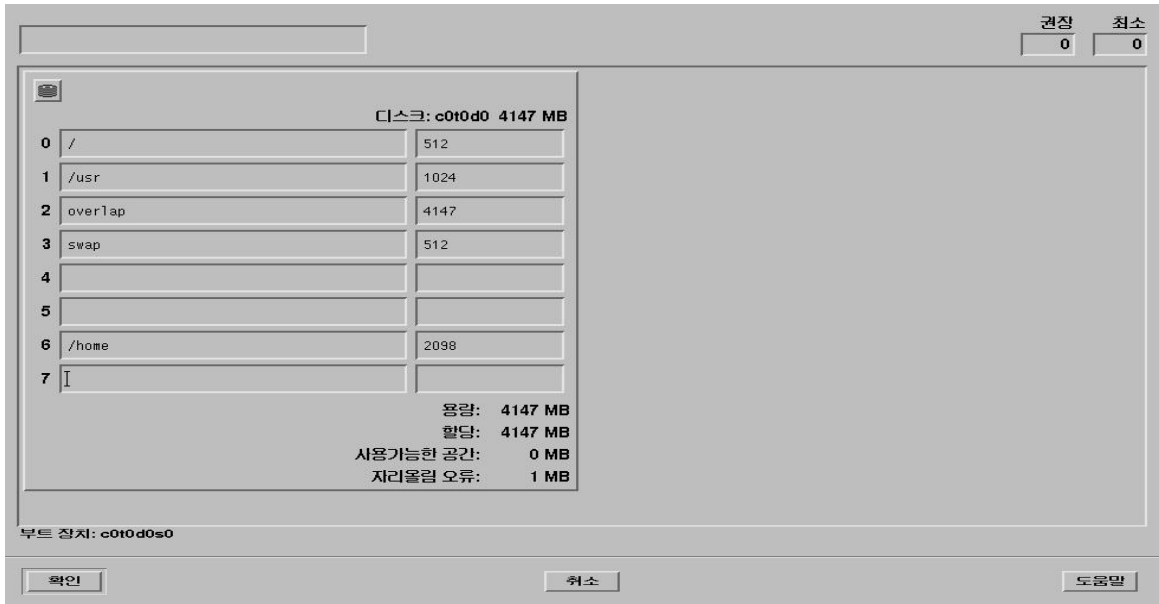

36. The screen that reconfirms the disk space arrangement that is previously set. Click **Continue!**

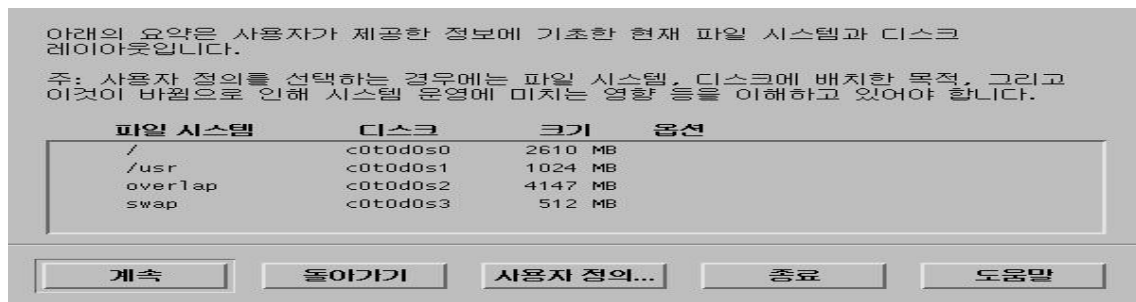


Fig. 2.1-33 Disk Allocation Result Display Screen

37. Items that are related to the remote file server are shown. Click **Continue**.

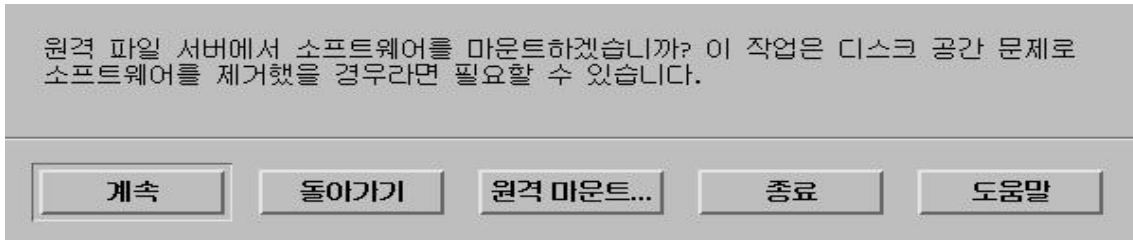


Fig. 2.1-34 Remote File Server Installation Screen

38. Click **Start Installation** for final installation.

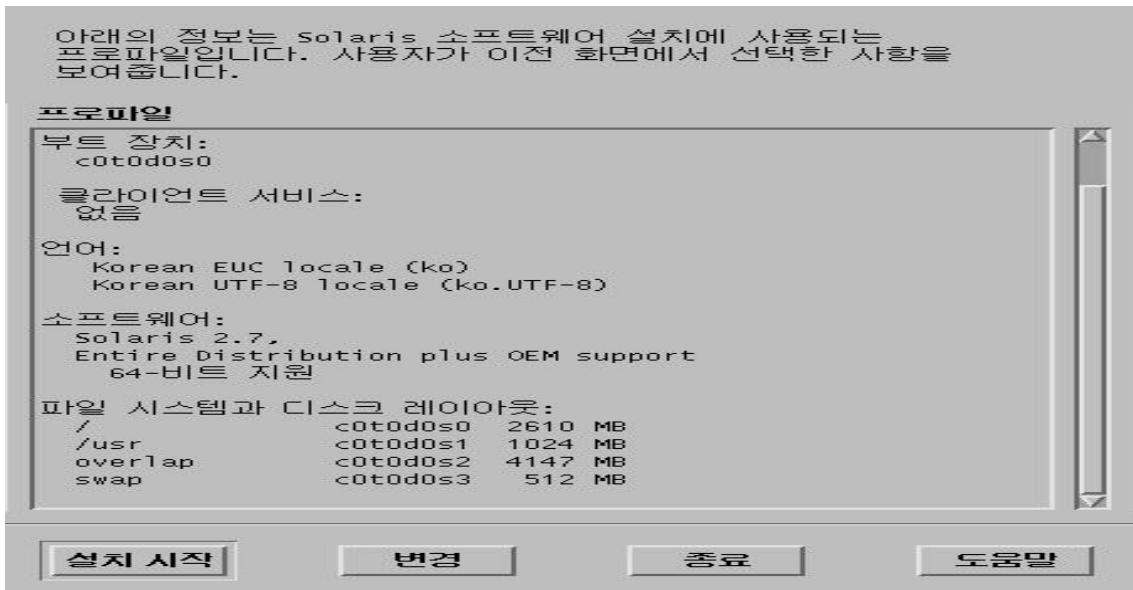


Fig. 2.1-35 Set up Information Display Screen for the Installation

2.1.2. Network Environment Setting Procedures

The following material is developed taking the BSM feel system as an example.

Attention : If the setting is not done inappropriately, C-compiler or Informix cannot be installed.

1. After booting is done, change shell of root to c-shell(default : bourne shell).

Purpose : to use the C-Shell

```
$cd /etc
$vi passwd
Correct root:x:0:1:Super-User:/:/sbin/sh in the first line/
Modified Items : sbin/sh→bin/csh
```

2. Create .cshrc & .login file.

Purpose : After booting, create .cshrc &.login file in the root.

```
cp /etc/skel/local.cshrc /.cshrc
cp /etc/skel/local.login /.login
```

3. Create resolv.conf.

```
vi /etc/resolv.conf
```

Modified Contents

```
domain      lgic.co.kr
nameserver  165.243.140.230
```


4. Create the hosts file.

```
vi /etc/hosts
```

Items to be added to the Internet host table on top.

```
127.0.0.1 localhost
150.150.62.102 feel.lgic.co.kr feel loghost
```

Attention : If inputting feel.lgic.co.kr loghost, BSM might not operate.

5. Create nsswitch.conf.

```
: vi /etc/nsswitch.conf
```

Add dns to the line where the host exists.

```
hosts:      files  dns
```

6. Create defaultrouter.

```
vi /etc/defaultrouter
```

Input Router IP.

```
150.150.62.126
```

7. Create defaultdomain.

```
vi /etc/defaultdomain
```

Input domain name.

```
lgic.co.kr
```

8. Test the network.

Network Setting Test

```
ping 150.150.62.100
```

Ping result : 150.150.62.64 is alive → it means that the network is set up.

2.2. DBMS(Informix) Installation

2.2.1. Informix Install

2.2.1.1. Preparation for Installation

Note> The host name that is used in this document as an example is zen and Informix home directory path is /home/Informix.

2.2.1.1.1. Informix Account Creation

In order to install Informix, the informix user account of the informix group is required. Account can be made by the following methods: the method that uses admintool and the method that directly modifies the file.

2.2.1.1.1.1. First Method – execute admintool

1. Informix group generation: create a group under the name of informix on the Group Add menu.
2. Informix user generation: create a user under the name of informix on the Us Add menu.

2.2.1.1.1.2. Second Method – modify the file directly

Add informix group/ to the etc/group file

and add informix account as informix group in a /etc/passwd file.

Authorize the informix user by making an informix homedirectory.

2.2.1.1.2. Informix Installation File Copy

Log in to the informix account in order to install Informix. Move the Informix installation file to the home directory in the informix account. Then, release all the compression to create the Install Script in the Informix Directory. (Ex. installsql, installserver, installconn, etc)

```
$ cd /cdrom/informix/  
$ ls -al (check the path where the Informix product is located)  
$ cd $INFORMIXDIR (informix Home Directory)  
$ tar xvf /cdrom/informix/ICONNECT/SUN/CONNECT.TAR <= Informix Dynamic  
  Server CD  
$ tar xvf /cdrom/informix/SERVER/IDS.TAR <= Informix Dynamic Server CD  
$ tar xvf /cdrom/informix/SQLRT.TAR <= Informix SQL CD
```

2.2.1.2. Environment File Modification

To install informix, modify the system file, services file, etc and then perform rebooting.

2.2.1.2.1. /etc/ System Modification

```
set msgsys:msginfo_msgmap=256  
set msgsys:msginfo_msgmax=1024  
set msgsys:msginfo_msgmnb=614400  
set msgsys:msginfo_msgmni=50  
set msgsys:msginfo_msgssz=128  
set msgsys:msginfo_msgtql=1200  
set msgsys:msginfo_msgseg=16384  
  
set shmsys:shminfo_shmmax=104858000  
#set shmsys:shminfo_shmmin=10  
set shmsys:shminfo_shmmni=100  
set shmsys:shminfo_shmseg=100  
#set shmsys:shminfo_shmbrk=10485800  
  
set semsys:seminfo_semmap=64  
set semsys:seminfo_semmni=128  
set semsys:seminfo_semmsl=64  
set semsys:seminfo_semmns=8192  
set semsys:seminfo_semmnu=4096  
set semsys:seminfo_semume=64
```

```
set pt_cnt=120
```

2.2.1.2.2. /etc/services File Modification

```
sqlexec          5000/tcp
```

2.2.1.2.3. Addition to .cshrc file

Add the following to .cshrc file in the user account that uses the root, informix, and Informix and then execute the source .cshrc command.

```
#
# Informix Environment
#

setenv INFORMIXDIR      /home/Informix
setenv INFORMIXSERVER  zen_tcp
                        => Use TCP connection. (when using semaphore: zen)
setenv PATH $INFORMIXDIR/bin:$PATH
setenv LD_LIBRARY_PATH $INFORMIXDIR/lib:$INFORMIXDIR/lib/esql:/usr/lib
setenv TERMCAP $INFORMIXDIR/etc/termcap
setenv DBTEMP $INFORMIXDIR/tmp    -> Create a tmp directory directly
setenv ONCONFIG onconfig
setenv INFORMIXC cc
setenv TERM vt100
```

2.2.1.2.4. Addition to .login file

```
# @(#)login 2.0  Apr 5  1995  TriGem

stty echoe
stty erase ^ H
stty cs8 -istrip defeucw
setenv LANG C >& /dev/null
```

```
setenv DISPLAY unix:0

stty -istrip
# Aliasing .....
setenv EXINIT 'set aw terse|map @ dd|map # x'
echo -n " Terminal type is ($term): "
set X = $<
if $X != "" then
                                set term = $X
endif
if $X == "sun" then
    stty erase ^ H
    stty werase ^ ?
endif
if $X == "fast" then
    stty erase ^ H
    stty werase '^ ?'
endif
tset -I -Q
```

2.2.1.2.5. Rebooting

```
#sync
#sync
#sync
..
# reboot
```

2.2.1.3. Informix Installation

Let's install informix.

Note> The host name that is used in this document as an example is zen and the informix home directory path is /home/informix.

2.2.1.3.1. Installing install file in order

Install the following in order: installsqlrt<root>, installserver<root>, installconn<Informix>. At this point, input serial numbers and key.

In the <root> account

installsqlrt

INFORMIX-SQL Run Time Facility Version 7.30.UC4

Copyright (C) 1984-2000 Informix Software, Inc.

Installation Script

This installation procedure must be run by root (super-user).

It will change the owner, group, and mode of all files of this package in this directory. There must be a user "informix" and a group "informix" known to the system.

Press RETURN to continue,

or the interrupt key (usually CTRL-C or DEL) to abort. RETURN

Enter your serial number (for example, INF#X999999) >

Serial number

Enter your serial number KEY (uppercase letters only) >

Key

WARNING!

 This software, and its authorized use and number of users, are subject to the applicable license agreement with Informix Software, Inc.

If the number of users exceeds the licensed number, the excess users may be prevented from using the software. UNAUTHORIZED USE OR COPYING MAY SUBJECT YOU AND YOUR COMPANY TO SEVERE CIVIL AND CRIMINAL LIABILITIES.

Press RETURN to continue,

or the interrupt key (usually CTRL-C or DEL) to abort.

Installing directory .

Installing directory bin

Installing directory etc

Installing directory msg

Installing directory msg/en_us

Installing directory msg/en_us/0333

Installing directory msg/ja_jp

:

:

:

Installing directory gls/lc11/th_th

Installing directory gls/lc11/zh_cn

Installing directory gls/lc11/zh_tw

Installation of INFORMIX-SQL, Runtime Facility complete.

:

:

#installserver <= Perform identically

Informix Dynamic Server Version 7.31.UC7

Copyright (C) 1986-2000 Informix Software, Inc.

Installation and Configuration Script

This installation procedure must be run by a privileged user (Super User)

It will change the owner, group, mode, (and other file attributes on Secure systems) of all files of this package in this directory.

There must be a user "informix" and a group "informix" known to the system.

Press RETURN to continue,

or the interrupt key (usually CTRL-C or DEL) to abort.

:

:

:

Installing directory gls/lc11/zh_tw

Installing directory bitmaps

Installing Shared Libraries in System Directories ...

Linking /usr/lib/ismdd07b.so from lib/ismdd07b.so

Linking /usr/lib/iosm07a.so from lib/iosm07a.so

Linking /usr/lib/ipldd07a.so from lib/ipldd07a.so

Installation of Informix Dynamic Server complete.

In the <Informix> account

#installconn

INFORMIX-Connect Version 2.40.UC1

Copyright (C) 1984-1999 Informix Software, Inc.

Installation Script

Installation Script Requirements:

- A user "informix" and a group "informix" must be known to the system.
- The product source files must have been loaded by user informix
- This installation procedure must be run by user informix.
- You must also set INFORMIXDIR to where you would like to install the product on and make INFORMIXDIR as your current working directory.

This script will change the owner, group, and mode of many of the files of this package in this directory.

Extracting files from conncontent file... <= Wait until the compressed file is unzipped.

Installing I-Connect as user "informix"...

Press RETURN to continue,
or the interrupt key (usually CTRL-C or DEL) to abort.

Enter your serial number (for example, INF#X999999) >

Serial number

Enter your serial number KEY (uppercase letters only) >

KEY

WARNING!

This software, and its authorized use and number of users, are subject to the applicable license agreement with Informix Software, Inc. If the number of users exceeds the licensed number, the excess users may be prevented from using the software. UNAUTHORIZED USE OR COPYING MAY SUBJECT YOU AND YOUR COMPANY TO SEVERE CIVIL AND CRIMINAL LIABILITIES.

Press RETURN to continue,
or the interrupt key (usually CTRL-C or DEL) to abort.

Installing directory .

Installing directory etc

Installing directory msg

:
:
:

Installing directory gls/lc11/zh_cn

Installing directory gls/lc11/zh_tw

To complete the installation of INFORMIX-Connect,
run /home/informix/RUN_AS_ROOT.conn as root.

Informix user portion of installation of INFORMIX-Connect complete.

2.2.1.3.2. Shared Library Linking

Once the above work is complete, change the user ID of part of the execution files to root for the informix file and link shared libraries. This work can check if RUN_AS_ROOT.SERVER file is generated within the \$INFORMIXDIR after performing the install script.

```
#RUN_AS_ROOT.conn  -> perform root.

Informix Product:      INFORMIX-Connect
Installation Directory: /home/informix

Performing root portion of installation of INFORMIX-Connect...

Installation of INFORMIX-Connect complete.
```

2.2.2. Environment Setting

2.2.2.1. onconfig file

Let's create the etc/onconfig in the informix account. Copy the existing onconfig.std file to the onconfig file and then modify and add the following paths and parameters. In the example below, the Informix path is /home/informix and the host name is zen. Modify them suitable to your system.

```
#
#
#           INFORMIX SOFTWARE, INC.
#
# Title:      onconfig.std
# Description: Informix Dynamic Server Configuration Parameters
#
#*****

# Root Dbspace Configuration
ROOTNAME      rootdbs          # Root dbspace name
ROOTPATH      /home/informix/DBS/root_chk # Path for device containing root
dbspace
ROOTOFFSET    0                # Offset of root dbspace into device (Kbytes)
ROOTSIZE      100000           # Size of root dbspace (Kbytes)

# Disk Mirroring Configuration Parameters
MIRROR        1                # Mirroring flag (Yes = 1, No = 0)
```

MIRRORPATH		# Path for device containing mirrored root
MIRROROFFSET	0	# Offset into mirrored device (Kbytes)
# Physical Log Configuration		
PHYSDBS	rootdbs	# Location (dbspace) of physical log
PHYSFILE	10000	# Physical log file size (Kbytes)
# Logical Log Configuration		
LOGFILES	10	# Number of logical log files
LOGSIZE	3000	# Logical log size (Kbytes)
# Diagnostics		
MSGPATH	/home/informix/online.log	# System message log file path
CONSOLE	/dev/console	# System console message path
ALARMPROGRAM	/home/informix/etc/no_log.sh	# Alarm program path
SYSALARMPROGRAM	/home/informix/etc/evidence.sh	# System Alarm program path
TBLSPACE_STATS	1	
# System Archive Tape Device		
TAPEDEV	/dev/null	# Tape device path
#TAPEDEV	/dev/tapedev	# Tape device path
TAPEBLK	16	# Tape block size (Kbytes)
TAPESIZE	10240	# Maximum amount of data to put on tape (Kbytes)
# Log Archive Tape Device		
LTAPEDEV	/dev/null	# Log tape device path
#LTAPEDEV	/dev/tapedev	# Log tape device path
LTAPEBLK	16	# Log tape block size (Kbytes)
LTAPESIZE	10240	# Max amount of data to put on log tape (Kbytes)
# Optical		
STAGEBLOB		# Informix Dynamic Server/Optical staging area
# System Configuration		
SERVERNUM	0	# Unique id corresponding to a Dynamic Server instance
DBSERVERNAME	zen	# Name of default database server

DBSERVERALIASES	zen_tcp	# List of alternate dbservernames
NETTYPE	ipcshm,1,10,CPU	# When using semaphore, it is good to increase the setting with 10 connection to 50.
NETTYPE	tlitcp,1,10,NET	# Configure poll thread(s) for nettype
DEADLOCK_TIMEOUT	60	# Max time to wait of lock in distributed env.
RESIDENT	0	# Forced residency flag (Yes = 1, No = 0)
MULTIPROCESSOR	0	# 0 for single-processor, 1 for multi-processor
NUMCPUVPS	1	# Number of user (cpu) vps
SINGLE_CPU_VP	1	# If non-zero, limit number of cpu vps to one
NOAGE	0	# Process aging
AFF_SPROC	0	# Affinity start processor
AFF_NPROCS	0	# Affinity number of processors
# Shared Memory Parameters		
LOCKS	100000	# Maximum number of locks
BUFFERS	12800	# Maximum number of shared buffers
NUMAIOVPS	1	# Number of IO vps
PHYSBUFF	32	# Physical log buffer size (Kbytes)
LOGBUFF	32	# Logical log buffer size (Kbytes)
LOGSMAX	20	# Maximum number of logical log files
CLEANERS	1	# Number of buffer cleaner processes
SHMBASE	0x0A000000L	# Shared memory base address
SHMVIRTSIZE	30000	# initial virtual shared memory segment size
SHMADD	16000	# Size of new shared memory segments (Kbytes)
SHMTOTAL	0	# Total shared memory (Kbytes). 0=>unlimited
CKPTINTVL	300	# Check point interval (in sec)
LRUS	8	# Number of LRU queues
LRU_MAX_DIRTY	60	# LRU percent dirty begin cleaning limit
LRU_MIN_DIRTY	50	# LRU percent dirty end cleaning limit
LTXHWM	50	# Long transaction high water mark percentage
LTXEHWM	60	# Long transaction high water mark (exclusive)
TXTIMEOUT	300	# Transaction timeout (in sec)
STACKSIZE	32	# Stack size (Kbytes)

```
# System Page Size
# BUFFSIZE - Dynamic Server no longer supports this configuration parameter.
#           To determine the page size used by Dynamic Server on your platform
#           see the last line of output from the command, 'onstat -b'.

# Recovery Variables
# OFF_RECVRY_THREADS:
# Number of parallel worker threads during fast recovery or an offline restore.
# ON_RECVRY_THREADS:
# Number of parallel worker threads during an online restore.

OFF_RECVRY_THREADS    10      # Default number of offline worker threads
ON_RECVRY_THREADS     1       # Default number of online worker threads

# Data Replication Variables
# DRAUTO: 0 manual, 1 retain type, 2 reverse type
DRAUTO                0       # DR automatic switchover
DRINTERVAL            30      # DR max time between DR buffer flushes (in sec)
DRTIMEOUT             30      # DR network timeout (in sec)
DRLOSTFOUND           /home/informix/etc/dr.lostfound # DR lost+ found file path

# CDR Variables
CDR_LOGBUFFERS       2048    # size of log reading buffer pool (Kbytes)
CDR_EVALTHREADS     1,2     # evaluator threads (per-cpu-vp,additional)
CDR_DSLOCKWAIT       5      # DS lockwait timeout (seconds)
CDR_QUEUEMEM        4096    # Maximum amount of memory for any CDR queue
                        (Kbytes)
CDR_LOGDELTA         30     # % of log space allowed in queue memory
CDR_NUMCONNECT       16     # Expected connections per server
CDR_NIFRETRY         300    # Connection retry (seconds)
CDR_NIFCOMPRESS      0      # Link level compression (-1 never, 0 none, 9 max)

# Backup/Restore variables
BAR_ACT_LOG           /tmp/bar_act.log
BAR_MAX_BACKUP        0
BAR_RETRY             1
```

```
BAR_NB_XPORT_COUNT      10
BAR_XFER_BUF_SIZE       31

# Informix Storage Manager variables
ISM_DATA_POOL   ISMData      # If the data pool name is changed, be sure to
                          # update $INFORMIXDIR/bin/onbar.  Change to
                          # ism_catalog -create_bootstrap -pool <new name>
ISM_LOG_POOL     ISMLogs

# Read Ahead Variables
RA_PAGES         32          # Number of pages to attempt to read ahead
RA_THRESHOLD     30          # Number of pages left before next group

# DBSPACETEMP:
# Dynamic Server equivalent of DBTEMP for SE. This is the list of dbspaces
# that the Dynamic Server SQL Engine will use to create temp tables etc.
# If specified it must be a colon separated list of dbspaces that exist
# when the Dynamic Server system is brought online.  If not specified, or if
# all dbspaces specified are invalid, various ad hoc queries will create
# temporary files in /tmp instead.

DBSPACETEMP      # Default temp dbspaces

# DUMP*:
# The following parameters control the type of diagnostics information which
# is preserved when an unanticipated error condition (assertion failure) occurs
# during Dynamic Server operations.
# For DUMPSHMEM, DUMPGCORE and DUMPCORE 1 means Yes, 0 means No.

DUMPDIR          /tmp        # Preserve diagnostics in this directory
DUMPSHMEM        0          # Dump a copy of shared memory
DUMPGCORE        0          # Dump a core image using 'gcore'
DUMPCORE         0          # Dump a core image (Warning:this aborts Dynamic
Server)
DUMPCNT          1          # Number of shared memory or gcore dumps for
                          # a single user's session
```



```
FILLFACTOR      90          # Fill factor for building indexes

# method for Dynamic Server to use when determining current time
USEOSTIME       0          # 0: use internal time(fast), 1: get time from OS(slow)

# Parallel Database Queries (pdq)
MAX_PDQPRIORITY 100       # Maximum allowed pdqpriority
DS_MAX_QUERIES  # Maximum number of decision support queries
DS_TOTAL_MEMORY # Decision support memory (Kbytes)
DS_MAX_SCANS    1048576 # Maximum number of decision support scans
DATASKIP        # List of dbspaces to skip

# OPTCOMPIND
# 0 => Nested loop joins will be preferred (where
#     possible) over sortmerge joins and hash joins.
# 1 => If the transaction isolation mode is not
#     "repeatable read", optimizer behaves as in (2)
#     below.  Otherwise it behaves as in (0) above.
# 2 => Use costs regardless of the transaction isolation
#     mode.  Nested loop joins are not necessarily
#     preferred.  Optimizer bases its decision purely
#     on costs.
OPTCOMPIND      0          # To hint the optimizer

ONDBSPACEDOWN  2          # Dbspace down option: 0 = CONTINUE, 1 = ABORT, 2
= WAIT
LBU_PRESERVE    1          # Preserve last log for log backup
OPCACHEMAX     0          # Maximum optical cache size (Kbytes)

# HETERO_COMMIT (Gateway participation in distributed transactions)
# 1 => Heterogeneous Commit is enabled
# 0 (or any other value) => Heterogeneous Commit is disabled
HETERO_COMMIT   0

# Optimization goal: -1 = ALL_ROWS(Default), 0 = FIRST_ROWS
OPT_GOAL        -1
```

```
# Optimizer DIRECTIVES ON (1/Default) or OFF (0)
DIRECTIVES      1

# Status of restartable restore

RESTARTABLE_RESTORE OFF
```

2.2.2.2. sqlhosts File

Copy the etc/sqlhosts.demo file in the Informix account to the sqlhosts file and then modify them suitable to the system.

```
zen      onipcshm      zen      sqlxecshm
zen_tcp  onlitcp       zen      sqlxec
```

2.2.2.3. onconfig Parameter Setting

```
Input the onmonitor command on the prompt
# onmonitor
* If creating dbspace using the cooked file, create null file.
# cd $INFORMIXDIR
# mkdir DBS
# cd DBS
# touch root_chk
# chmod 660 root_chk
```

2.2.3. Execution

Now, the Informix installation and environment setting are complete. Let's execute the Informix.

```
# oninit -isy      <= DB Execution
# onmode -my      <= Convert DB into online mode
#onstat -         <= DB Status viewing
Informix Dynamic Server Version 7.31.UC7   -- On-Line -- Up 00:01:00 -- 62752
Kbytes
```

```
#
```

2.2.4. Others

2.2.4.1. Command Usage Viewing

```
command --      <= Give - option to the command to see the command usage.
```

2.2.4.2. DB Space Viewing and Expansion

One can see the entire size of the DB and Chunk in use. If the DB space in use is short, it can be expanded by adding chunk.

```
#onstat -d

Informix Dynamic Server Version 7.31.UC7  -- On-Line -- Up 10:22:12 -- 62752
Kbytes

Dbspaces
address  number  flags  fchunk  nchunks  flags  owner  name
c04a150  1         1      1        1         N      informix rootdbs
1 active, 2047 maximum

Chunks
address  chk/dbs  offset  size    free    bpages  flags  pathname
c04a210  1        1        0        50000   28913   PO-
/home2/informix/DBS/root_chk
1 active, 2047 maximum

#onspaces --      <= Viewing the command to expand

Usage:
onspaces { -a spacename -p pathname -o offset -s size [-m path offset] |
          -c { -d DBspace [-t] | -b BLOBspace -g pagesize }
          -p pathname -o offset -s size [-m path offset] |
```

```
-d spacename [-p pathname -o offset] [-f] [-y] |
-f[y] off [DBspace-list] | on [DBspace-list] |
-m spacename {-p pathname -o offset -m path offset [-y] |
-f filename} |
-r spacename [-y] |
-s spacename -p pathname -o offset {-O | -D} [-y] }
```

- a - Add a chunk to a DBspace or BLOBspace
- c - Create a DBspace or BLOBspace
- d - Drop a DBspace, BLOBspace or chunk
- f - Change dataskip default for specified DBspaces
- m - Add mirroring to an existing DBspace or BLOBspace
- r - Turn mirroring off for a DBspace or BLOBspace
- s - Change the status of a chunk

Now, expand the DB space.

```
#cd DBS
```

```
#touch root_chk2 <= chunk create
```

```
#chmod 660 root_chk2
```

```
#onspaces -a rootdbs -p /home2/informix/DBS/root_chk2 -o 0 -s 50000
```

```
Verifying physical disk space, please wait ...
```

```
Chunk successfully added.
```

```
# onstat -d
```

```
Informix Dynamic Server Version 7.31.UC7 -- On-Line -- Up 10:42:43 -- 62752
Kbytes
```

```
Dbspaces
```

address	number	flags	fchunk	nchunks	flags	owner	name
c04a150	1	1	1	2	N	informix	rootdbs

```
1 active, 2047 maximum
```

```
Chunks
```

address	chk/dbs	offset	size	free	bpages	flags	pathname
c04a210	1	1	0		50000	28913	PO- /home2/informix/DBS/root_chk

```

c2d5a80  2    1    0          25000    24997          PO-
/home2/informix/DBS/root_chk2
  2 active, 2047 maximum

Now, remove the trunk that is added. At this time, if typing spacename(rootdbs), the DB
space is dropped. For this reason, caution is required.

#onspaces -d rootdbs -p /home2/informix/DBS/root_chk2 -o 0
WARNING:  Dropping a chunk.
Do you really want to continue? (y/n)y
Chunk successfully dropped.
** WARNING **  A level 0 archive for DBspace rootdbs will need to be done
before '/home2/informix/DBS/root_chk2' can be reused (see Dynamic Server
Administrator's manual).

#onstat -d

Informix Dynamic Server Version 7.31.UC7  -- On-Line -- Up 10:47:20 -- 62752
Kbytes

Dbspaces
address  number  flags  fchunk  nchunks  flags  owner  name
c04a150  1        1      1        1        N      informix rootdbs
  1 active, 2047 maximum

Chunks
address  chk/dbs  offset  size    free    bpages  flags  pathname
c04a210  1        1        0       50000   28913          PO-
/home2/informix/DBS/root_chk
  1 active, 2047 maximum

```

2.3. ATM Adaptor Setup

2.3.1. SunATM Adopter Setup

Power the workstation off and use the `show-devs` command in the OK mode to check if the adaptor card is normally set up after setting up SunATM adaptor. (In case of Sbus adaptor, use `show-devs /sbus`.)

```
Ok show-devs
...
/pci@1f,4000/SUNW,ma@1
...
```

```
Ok show-devs /sbus
...
/sbus@3,0/SUNW,ba@2,0
...
```

2.3.2. SunATM S/W Installation and Solaris Setup File Modification

Modify SunATM adaptor device driver installation and a couple of Solaris 7 OS setup files to use the SunATM adaptor in the BSM. A series of work can be performed through one command using the `atm_setup` tool, which is provided with the package.

1. Becomes Super user.
2. Unzip the downloaded `atm_setup.tar` file.

```
# tar xvf atm_setup.tar
x atm_setup, 0 bytes, 0 tape blocks
```

```
x atm_setup/sunatm_4_0_update_1, 0 bytes, 0 tape blocks
x atm_setup/sunatm_4_0_update_1/Copyright, 2175 bytes, 5 tape blocks
x atm_setup/sunatm_4_0_update_1/FR_Copyright, 2316 bytes, 5 tape blocks
x atm_setup/sunatm_4_0_update_1/Product, 0 bytes, 0 tape blocks
x atm_setup/sunatm_4_0_update_1/Product/SUNWatm, 0 bytes, 0 tape blocks
x atm_setup/sunatm_4_0_update_1/Product/SUNWatm/install, 0 bytes, 0 tape blocks
x atm_setup/sunatm_4_0_update_1/Product/SUNWatm/install/copyright, 59 bytes, 1 tape blocks
x atm_setup/sunatm_4_0_update_1/Product/SUNWatm/install/depend, 930 bytes, 2 tape blocks
... ellipsis ...
x atm_setup/atm_setup_system, 2621 bytes, 6 tape blocks
x atm_setup/atm_setup_gsm, 17824 bytes, 35 tape blocks
#
# cd atm_setup
# ls -l
total 82
-rwxr-xr-x  1 1009    1000    17824 Mar 14 12:04 atm_setup_gsm
-rwxr-xr-x  1 1009    1000    18764 Mar 14 12:04 atm_setup_is
-rw-r--r--  1 1009    1000     2621 Mar 14 12:04 atm_setup_system
drwxr-x---  3 1009    1000     512 Mar 13 17:37 sunatm_4_0_update_1
#
```

3. In case of the IS-2000 system, execute the atm_setup_is file. In case of the ATM IMT-2000 system, execute the atm_setup_gsm file. For the question that demands the MSC number, input the MSC number (value ranging from 1 to 7) where the corresponding BSM is to be installed (because depending on the MSC number, IP address of each NE differs). If answering 'y' for the question asking with a couple of 'y' or 'n', the device driver and each setup file are generated.

※ Attention: atm_setup_is or atm_setup_gsm file should be executed by the Super User Authority only once. If they are executed more than twice by mistake, ATM adopter-related items of the /etc/hosts and /etc/netmasks file can be generated. If this happens, delete the ATM-related items using the vi editor directly, and then reexecute, atm_setup_is or atm_setup_gsm.

```
feel# ./atm_setup_is
```

```
#####  
### SunATM Adaptor Auto Installation Program ###  
### Made by Mobile Comm. S/W Dept. 1 on 01/03/14 ###  
#####  
Caution!! You must run this program as a superuser, and just "ONE" time.  
  
Press Enter key. Then I'll start installation process...  
Input MSC No.??? 2  
  
Uninstalling previously installed device drivers .....  
#####  
sh: /etc/opt/SUNWconn/atm/bin/atmifconfig: not found  
pkgrm: ERROR: no package associated with <SUNWatm>  
pkgrm: ERROR: no package associated with <SUNWatma>  
pkgrm: ERROR: no package associated with <SUNWatmu>  
  
Installing SunATM adaptor device drivers .....  
#####  
  
Processing package instance <SUNWatm> from  
</tmp/atm_setup/sunatm_4_0_update_1/Product>  
  
SunATM Device Drivers  
(sparc) 4.0.1,REV=1999.4.27.18  
Copyright 1999 Sun Microsystems, Inc. All rights reserved.  
Using </> as the package base directory.  
## Processing package information.  
## Processing system information.  
8 package pathnames are already properly installed.  
## Verifying package dependencies.  
## Verifying disk space requirements.  
## Checking for conflicts with packages already installed.  
## Checking for setuid/setgid programs.  
  
This package contains scripts which will be executed with super-user
```


permission during the process of installing this package.

Do you want to continue with the installation of <SUNWatm> [y,n,?] **y**

Installing SunATM Device Drivers as <SUNWatm>

Installing part 1 of 1.

/etc/init.d/sunatm

/etc/opt/SUNWconn/atm/aarconfig.template

/etc/opt/SUNWconn/atm/atmconfig.template

/etc/opt/SUNWconn/atm/atmf.mib

/etc/opt/SUNWconn/atm/bin/aarsetup

/etc/opt/SUNWconn/atm/bin/aarstat

/etc/opt/SUNWconn/atm/bin/atmadmin

/etc/opt/SUNWconn/atm/bin/atmarp

/etc/opt/SUNWconn/atm/bin/atmgetmac

...Ellipsis...

/kernel/mod/sscop

/platform/SUNW,Ultra-4FT/kernel/drv/ba

[verifying class <base>]

/etc/rc2.d/S00sunatm <linked pathname>

Executing postinstall script.

You will need to edit the config files in /etc/opt/SUNWconn/atm
to specify your ATM configuration.

As an alternative to manually editing the files, you
may also run /etc/opt/SUNWconn/bin/atmadmin to set up
your configuration. Refer to the SunATM User's Guide
for more information on atmadmin and the ATM
configuration files.

Installation of <SUNWatm> was successful.

Processing package instance <SUNWatmu> from
</tmp/atm_setup/sunatm_4_0_update_1/Product>

```
SunATM Runtime Support Software
(sparc) 4.0.1,REV=1999.4.27.18
Copyright 1999 Sun Microsystems, Inc. All rights reserved.
Using </opt> as the package base directory.

## Processing package information.
## Processing system information.
## Verifying package dependencies.
## Verifying disk space requirements.
## Checking for conflicts with packages already installed.
## Checking for setuid/setgid programs.

Installing SunATM Runtime Support Software as <SUNWatmu>

## Installing part 1 of 1.
/opt/SUNWconn/atm/examples/Makefile
/opt/SUNWconn/atm/examples/dltst.c
/opt/SUNWconn/atm/examples/raw.c
/opt/SUNWconn/atm/examples/tstqcc.c
/opt/SUNWconn/atm/examples/xdump.c
/opt/SUNWconn/atm/man/man1m/aarsetup.1m
/opt/SUNWconn/atm/man/man1m/aarstat.1m
/opt/SUNWconn/atm/man/man1m/atmadmin.1m
...Ellipsis...
/opt/SUNWconn/man/man9f/qcc_unpack_status.9f <symbolic link>
/opt/SUNWconn/man/man9f/qcc_unpack_status_enq.9f <symbolic link>
[ verifying class <none> ]

Installation of <SUNWatmu> was successful.

Processing          package          instance          <SUNWatma>          from
</tmp/atm_setup/sunatm_4_0_update_1/Product>

SunATM Interim Api Support Software
(sparc) 4.0.1,REV=1999.4.27.18
Copyright 1999 Sun Microsystems, Inc. All rights reserved.
Using </opt> as the package base directory.
```

```
## Processing package information.
## Processing system information.
## Verifying package dependencies.
## Verifying disk space requirements.
## Checking for conflicts with packages already installed.

The following files are already installed on the system and are being
used by another package:
  /opt/SUNWconn <attribute change only>
  /opt/SUNWconn/atm <attribute change only>

Do you want to install these conflicting files [y,n,?,q] y
## Checking for setuid/setgid programs.

Installing SunATM Interim Api Support Software as <SUNWatma>

## Installing part 1 of 1.
/opt/SUNWconn/atm/include/atm/atm.h
/opt/SUNWconn/atm/include/atm/atmioctl.h
/opt/SUNWconn/atm/include/atm/limits.h
/opt/SUNWconn/atm/include/atm/qcc.h
/opt/SUNWconn/atm/include/atm/qccdefs.h
/opt/SUNWconn/atm/include/atm/qccioctl.h
/opt/SUNWconn/atm/include/atm/qccotypes.h
/opt/SUNWconn/atm/include/atm/types.h
/opt/SUNWconn/atm/lib/libatm.a
...Ellipsis...
/opt/SUNWconn/lib/sparcv9/libatm.a <symbolic link>
[ verifying class <base> ]

Installation of <SUNWatma> was successful.

Installed device drivers listing .....
#####
system      SUNWatm      SunATM Device Drivers
application SUNWatma     SunATM Interim Api Support Software
application SUNWatmu   SunATM Runtime Support Software
```

```
Making /etc/hosts .....  
  
Making /etc/opt/SUNWconn/atm/aarconfig .....  
  
Making /etc/opt/SUNWconn/atm/atmconfig .....  
  
Making /etc/netmasks .....  
  
Making /etc/system .....  
  
Installation completed. You should REBOOT the workstation!!!  
Installation completed. You should REBOOT the workstation!!!  
Installation completed. You should REBOOT the workstation!!!  
  
feel#
```

4. Reboot the system.

```
feel#  
feel# sync  
feel# sync  
feel# sync  
feel# reboot -- -r
```

2.3.3. SunATM IPoA Driver Load

Reboot the system and then execute the following with the superuser authority.

Input **# /etc/opt/SUNWconn/bin/atmifconfig ba0 plumb** and then IpoA driver is loaded. In addition, status can be check with **netstat -i** or **ifconfig -a**.

```
# netstat -I
```

```
Name Mtu Net/Dest Address Ipkts Ierrs Opkts Oerrs Collis
Queue
lo0 8232 loopback localhost 3557318 0 3557318 0 0
0
hme0 1500 lgicbsm.lgic.co.kr lgicbsm.lgic.co.kr 3806466 2 275845 0
6605 0
ba0 9180 msc1_bsm msc1_bsm 6874893 1557 7013685 0
0 0

# ifconfig -a
lo0: flags=849<UP,LOOPBACK,RUNNING,MULTICAST> mtu 8232
    inet 127.0.0.1 netmask ff000000
hme0: flags=863<UP,BROADCAST,NOTRAILERS,RUNNING,MULTICAST>
mtu 1500
    inet 192.168.53.60 netmask ffffff00 broadcast 192.168.53.255
ba0: flags=863<UP,BROADCAST,NOTRAILERS,RUNNING,MULTICAST> mtu
9180
    inet 29.192.0.1 netmask f0000000 broadcast 31.255.255.255
    ether 8:0:20:be:7e:c7
```

2.3.4. System File Changed by atm_setup Tool

This section describes the system file information changed by the atm_setup tool. If the SunATM Adopter cannot be used for the reasons such as when the atm_setup tool generated the system files abnormally or when the operator edited these files by mistake, modify the system to the normal state and restart the ATM Adopter.

2.3.4.1. /etc/opt/SUNWconn/atm/atmconfig File

```
# Signalling versions for each interface:
```

```
ba0 3.0 - - -
```

```
# Classical IP values for each interface:
```

```
ba0 - msc1_bsm - -
```

LAN Emulation values for each interface:

Framing interface values for each interface:

ba0 SONET - - -

2.3.4.2. /etc/opt/SUNWconn/atm/aarconfig File

Basic entries for each Classical IP instance:

ba0 - - - l

ILMI disabled entries:

ba0 - - - m

Manual entries (not touched by atmadmin):

ba0 msc1_cnp_a - 32 t

ba0 msc1_cnp_s - 645 t

ba0 msc1_rnc0_ncp_a - 33 t

ba0 msc1_rnc0_ncp_s - 646 t

ba0 msc1_rnc1_ncp_a - 34 t

ba0 msc1_rnc1_ncp_s - 647 t

ba0 msc1_rnc2_ncp_a - 35 t

ba0 msc1_rnc2_ncp_s - 648 t

ba0 msc1_rnc3_ncp_a - 36 t

ba0 msc1_rnc3_ncp_s - 649 t

ba0 msc1_rnc4_ncp_a - 37 t

ba0 msc1_rnc4_ncp_s - 650 t

ba0 msc1_rnc5_ncp_a - 38 t

ba0 msc1_rnc5_ncp_s - 651 t

ba0 msc1_rnc6_ncp_a - 39 t

ba0 msc1_rnc6_ncp_s - 652 t

ba0 msc1_rnc7_ncp_a - 40 t

ba0 msc1_rnc7_ncp_s - 653 t

ba0 msc1_rnc8_ncp_a - 41 t

ba0 msc1_rnc8_ncp_s - 654 t

ba0 msc1_rnc9_ncp_a - 42 t
ba0 msc1_rnc9_ncp_s - 655 t
ba0 msc1_rnc10_ncp_a - 43 t
ba0 msc1_rnc10_ncp_s - 656 t
ba0 msc1_rnc11_ncp_a - 44 t
ba0 msc1_rnc11_ncp_s - 657 t

ba0 msc1_rnc0_ccp_a - 45 t
ba0 msc1_rnc0_ccp_s - 658 t
ba0 msc1_rnc1_ccp_a - 46 t
ba0 msc1_rnc1_ccp_s - 659 t
ba0 msc1_rnc2_ccp_a - 47 t
ba0 msc1_rnc2_ccp_s - 660 t
ba0 msc1_rnc3_ccp_a - 48 t
ba0 msc1_rnc3_ccp_s - 661 t
ba0 msc1_rnc4_ccp_a - 49 t
ba0 msc1_rnc4_ccp_s - 662 t
ba0 msc1_rnc5_ccp_a - 50 t
ba0 msc1_rnc5_ccp_s - 663 t
ba0 msc1_rnc6_ccp_a - 51 t
ba0 msc1_rnc6_ccp_s - 664 t
ba0 msc1_rnc7_ccp_a - 52 t
ba0 msc1_rnc7_ccp_s - 665 t
ba0 msc1_rnc8_ccp_a - 53 t
ba0 msc1_rnc8_ccp_s - 666 t
ba0 msc1_rnc9_ccp_a - 54 t
ba0 msc1_rnc9_ccp_s - 667 t
ba0 msc1_rnc10_ccp_a - 55 t
ba0 msc1_rnc10_ccp_s - 668 t
ba0 msc1_rnc11_ccp_a - 56 t
ba0 msc1_rnc11_ccp_s - 669 t

ba0 msc1_rnc0_pcp_a - 57 t
ba0 msc1_rnc1_pcp_a - 58 t
ba0 msc1_rnc2_pcp_a - 59 t
ba0 msc1_rnc3_pcp_a - 60 t
ba0 msc1_rnc4_pcp_a - 61 t

ba0 msc1_rnc5_pcp_a - 62 t
ba0 msc1_rnc6_pcp_a - 63 t
ba0 msc1_rnc7_pcp_a - 64 t
ba0 msc1_rnc8_pcp_a - 65 t
ba0 msc1_rnc9_pcp_a - 66 t
ba0 msc1_rnc10_pcp_a - 67 t
ba0 msc1_rnc11_pcp_a - 68 t

ba0 msc1_rnc0_bs0_bsp_a - 69 t
ba0 msc1_rnc0_bs1_bsp_a - 70 t
ba0 msc1_rnc0_bs2_bsp_a - 71 t
ba0 msc1_rnc0_bs3_bsp_a - 72 t
ba0 msc1_rnc0_bs4_bsp_a - 73 t
ba0 msc1_rnc0_bs5_bsp_a - 74 t
ba0 msc1_rnc0_bs6_bsp_a - 75 t
ba0 msc1_rnc0_bs7_bsp_a - 76 t
ba0 msc1_rnc0_bs8_bsp_a - 77 t
ba0 msc1_rnc0_bs9_bsp_a - 78 t
ba0 msc1_rnc0_bs10_bsp_a - 79 t
ba0 msc1_rnc0_bs11_bsp_a - 80 t
ba0 msc1_rnc0_bs12_bsp_a - 81 t
ba0 msc1_rnc0_bs13_bsp_a - 82 t
ba0 msc1_rnc0_bs14_bsp_a - 83 t
ba0 msc1_rnc0_bs15_bsp_a - 84 t
ba0 msc1_rnc0_bs16_bsp_a - 85 t
ba0 msc1_rnc0_bs17_bsp_a - 86 t
ba0 msc1_rnc0_bs18_bsp_a - 87 t
ba0 msc1_rnc0_bs19_bsp_a - 88 t
ba0 msc1_rnc0_bs20_bsp_a - 89 t
ba0 msc1_rnc0_bs21_bsp_a - 90 t
ba0 msc1_rnc0_bs22_bsp_a - 91 t
ba0 msc1_rnc0_bs23_bsp_a - 92 t
ba0 msc1_rnc0_bs24_bsp_a - 93 t
ba0 msc1_rnc0_bs25_bsp_a - 94 t
ba0 msc1_rnc0_bs26_bsp_a - 95 t
ba0 msc1_rnc0_bs27_bsp_a - 96 t
ba0 msc1_rnc0_bs28_bsp_a - 97 t

ba0 msc1_rnc0_bs29_bsp_a - 98 t
ba0 msc1_rnc0_bs30_bsp_a - 99 t
ba0 msc1_rnc0_bs31_bsp_a - 100 t
ba0 msc1_rnc0_bs32_bsp_a - 101 t
ba0 msc1_rnc0_bs33_bsp_a - 102 t
ba0 msc1_rnc0_bs34_bsp_a - 103 t
ba0 msc1_rnc0_bs35_bsp_a - 104 t
ba0 msc1_rnc0_bs36_bsp_a - 105 t
ba0 msc1_rnc0_bs37_bsp_a - 106 t
ba0 msc1_rnc0_bs38_bsp_a - 107 t
ba0 msc1_rnc0_bs39_bsp_a - 108 t
ba0 msc1_rnc0_bs40_bsp_a - 109 t
ba0 msc1_rnc0_bs41_bsp_a - 110 t
ba0 msc1_rnc0_bs42_bsp_a - 111 t
ba0 msc1_rnc0_bs43_bsp_a - 112 t
ba0 msc1_rnc0_bs44_bsp_a - 113 t
ba0 msc1_rnc0_bs45_bsp_a - 114 t
ba0 msc1_rnc0_bs46_bsp_a - 115 t
ba0 msc1_rnc0_bs47_bsp_a - 116 t

ba0 msc1_rnc1_bs0_bsp_a - 117 t
ba0 msc1_rnc1_bs1_bsp_a - 118 t
ba0 msc1_rnc1_bs2_bsp_a - 119 t
ba0 msc1_rnc1_bs3_bsp_a - 120 t
ba0 msc1_rnc1_bs4_bsp_a - 121 t
ba0 msc1_rnc1_bs5_bsp_a - 122 t
ba0 msc1_rnc1_bs6_bsp_a - 123 t
ba0 msc1_rnc1_bs7_bsp_a - 124 t
ba0 msc1_rnc1_bs8_bsp_a - 125 t
ba0 msc1_rnc1_bs9_bsp_a - 126 t
ba0 msc1_rnc1_bs10_bsp_a - 127 t
ba0 msc1_rnc1_bs11_bsp_a - 128 t
ba0 msc1_rnc1_bs12_bsp_a - 129 t
ba0 msc1_rnc1_bs13_bsp_a - 130 t
ba0 msc1_rnc1_bs14_bsp_a - 131 t
ba0 msc1_rnc1_bs15_bsp_a - 132 t
ba0 msc1_rnc1_bs16_bsp_a - 133 t

ba0 msc1_rnc1_bs17_bsp_a - 134 t
ba0 msc1_rnc1_bs18_bsp_a - 135 t
ba0 msc1_rnc1_bs19_bsp_a - 136 t
ba0 msc1_rnc1_bs20_bsp_a - 137 t
ba0 msc1_rnc1_bs21_bsp_a - 138 t
ba0 msc1_rnc1_bs22_bsp_a - 139 t
ba0 msc1_rnc1_bs23_bsp_a - 140 t
ba0 msc1_rnc1_bs24_bsp_a - 141 t
ba0 msc1_rnc1_bs25_bsp_a - 142 t
ba0 msc1_rnc1_bs26_bsp_a - 143 t
ba0 msc1_rnc1_bs27_bsp_a - 144 t
ba0 msc1_rnc1_bs28_bsp_a - 145 t
ba0 msc1_rnc1_bs29_bsp_a - 146 t
ba0 msc1_rnc1_bs30_bsp_a - 147 t
ba0 msc1_rnc1_bs31_bsp_a - 148 t
ba0 msc1_rnc1_bs32_bsp_a - 149 t
ba0 msc1_rnc1_bs33_bsp_a - 150 t
ba0 msc1_rnc1_bs34_bsp_a - 151 t
ba0 msc1_rnc1_bs35_bsp_a - 152 t
ba0 msc1_rnc1_bs36_bsp_a - 153 t
ba0 msc1_rnc1_bs37_bsp_a - 154 t
ba0 msc1_rnc1_bs38_bsp_a - 155 t
ba0 msc1_rnc1_bs39_bsp_a - 156 t
ba0 msc1_rnc1_bs40_bsp_a - 157 t
ba0 msc1_rnc1_bs41_bsp_a - 158 t
ba0 msc1_rnc1_bs42_bsp_a - 159 t
ba0 msc1_rnc1_bs43_bsp_a - 160 t
ba0 msc1_rnc1_bs44_bsp_a - 161 t
ba0 msc1_rnc1_bs45_bsp_a - 162 t
ba0 msc1_rnc1_bs46_bsp_a - 163 t
ba0 msc1_rnc1_bs47_bsp_a - 164 t

ba0 msc1_rnc2_bs0_bsp_a - 165 t
ba0 msc1_rnc2_bs1_bsp_a - 166 t
ba0 msc1_rnc2_bs2_bsp_a - 167 t
ba0 msc1_rnc2_bs3_bsp_a - 168 t
ba0 msc1_rnc2_bs4_bsp_a - 169 t

ba0 msc1_rnc2_bs5_bsp_a - 170 t
ba0 msc1_rnc2_bs6_bsp_a - 171 t
ba0 msc1_rnc2_bs7_bsp_a - 172 t
ba0 msc1_rnc2_bs8_bsp_a - 173 t
ba0 msc1_rnc2_bs9_bsp_a - 174 t
ba0 msc1_rnc2_bs10_bsp_a - 175 t
ba0 msc1_rnc2_bs11_bsp_a - 176 t
ba0 msc1_rnc2_bs12_bsp_a - 177 t
ba0 msc1_rnc2_bs13_bsp_a - 178 t
ba0 msc1_rnc2_bs14_bsp_a - 179 t
ba0 msc1_rnc2_bs15_bsp_a - 180 t
ba0 msc1_rnc2_bs16_bsp_a - 181 t
ba0 msc1_rnc2_bs17_bsp_a - 182 t
ba0 msc1_rnc2_bs18_bsp_a - 183 t
ba0 msc1_rnc2_bs19_bsp_a - 184 t
ba0 msc1_rnc2_bs20_bsp_a - 185 t
ba0 msc1_rnc2_bs21_bsp_a - 186 t
ba0 msc1_rnc2_bs22_bsp_a - 187 t
ba0 msc1_rnc2_bs23_bsp_a - 188 t
ba0 msc1_rnc2_bs24_bsp_a - 189 t
ba0 msc1_rnc2_bs25_bsp_a - 190 t
ba0 msc1_rnc2_bs26_bsp_a - 191 t
ba0 msc1_rnc2_bs27_bsp_a - 192 t
ba0 msc1_rnc2_bs28_bsp_a - 193 t
ba0 msc1_rnc2_bs29_bsp_a - 194 t
ba0 msc1_rnc2_bs30_bsp_a - 195 t
ba0 msc1_rnc2_bs31_bsp_a - 196 t
ba0 msc1_rnc2_bs32_bsp_a - 197 t
ba0 msc1_rnc2_bs33_bsp_a - 198 t
ba0 msc1_rnc2_bs34_bsp_a - 199 t
ba0 msc1_rnc2_bs35_bsp_a - 200 t
ba0 msc1_rnc2_bs36_bsp_a - 201 t
ba0 msc1_rnc2_bs37_bsp_a - 202 t
ba0 msc1_rnc2_bs38_bsp_a - 203 t
ba0 msc1_rnc2_bs39_bsp_a - 204 t
ba0 msc1_rnc2_bs40_bsp_a - 205 t
ba0 msc1_rnc2_bs41_bsp_a - 206 t

ba0 msc1_rnc2_bs42_bsp_a - 207 t
ba0 msc1_rnc2_bs43_bsp_a - 208 t
ba0 msc1_rnc2_bs44_bsp_a - 209 t
ba0 msc1_rnc2_bs45_bsp_a - 210 t
ba0 msc1_rnc2_bs46_bsp_a - 211 t
ba0 msc1_rnc2_bs47_bsp_a - 212 t

ba0 msc1_rnc3_bs0_bsp_a - 213 t
ba0 msc1_rnc3_bs1_bsp_a - 214 t
ba0 msc1_rnc3_bs2_bsp_a - 215 t
ba0 msc1_rnc3_bs3_bsp_a - 216 t
ba0 msc1_rnc3_bs4_bsp_a - 217 t
ba0 msc1_rnc3_bs5_bsp_a - 218 t
ba0 msc1_rnc3_bs6_bsp_a - 219 t
ba0 msc1_rnc3_bs7_bsp_a - 220 t
ba0 msc1_rnc3_bs8_bsp_a - 221 t
ba0 msc1_rnc3_bs9_bsp_a - 222 t
ba0 msc1_rnc3_bs10_bsp_a - 223 t
ba0 msc1_rnc3_bs11_bsp_a - 224 t
ba0 msc1_rnc3_bs12_bsp_a - 225 t
ba0 msc1_rnc3_bs13_bsp_a - 226 t
ba0 msc1_rnc3_bs14_bsp_a - 227 t
ba0 msc1_rnc3_bs15_bsp_a - 228 t
ba0 msc1_rnc3_bs16_bsp_a - 229 t
ba0 msc1_rnc3_bs17_bsp_a - 230 t
ba0 msc1_rnc3_bs18_bsp_a - 231 t
ba0 msc1_rnc3_bs19_bsp_a - 232 t
ba0 msc1_rnc3_bs20_bsp_a - 233 t
ba0 msc1_rnc3_bs21_bsp_a - 234 t
ba0 msc1_rnc3_bs22_bsp_a - 235 t
ba0 msc1_rnc3_bs23_bsp_a - 236 t
ba0 msc1_rnc3_bs24_bsp_a - 237 t
ba0 msc1_rnc3_bs25_bsp_a - 238 t
ba0 msc1_rnc3_bs26_bsp_a - 239 t
ba0 msc1_rnc3_bs27_bsp_a - 240 t
ba0 msc1_rnc3_bs28_bsp_a - 241 t
ba0 msc1_rnc3_bs29_bsp_a - 242 t

ba0 msc1_rnc3_bs30_bsp_a - 243 t
ba0 msc1_rnc3_bs31_bsp_a - 244 t
ba0 msc1_rnc3_bs32_bsp_a - 245 t
ba0 msc1_rnc3_bs33_bsp_a - 246 t
ba0 msc1_rnc3_bs34_bsp_a - 247 t
ba0 msc1_rnc3_bs35_bsp_a - 248 t
ba0 msc1_rnc3_bs36_bsp_a - 249 t
ba0 msc1_rnc3_bs37_bsp_a - 250 t
ba0 msc1_rnc3_bs38_bsp_a - 251 t
ba0 msc1_rnc3_bs39_bsp_a - 252 t
ba0 msc1_rnc3_bs40_bsp_a - 253 t
ba0 msc1_rnc3_bs41_bsp_a - 254 t
ba0 msc1_rnc3_bs42_bsp_a - 255 t
ba0 msc1_rnc3_bs43_bsp_a - 256 t
ba0 msc1_rnc3_bs44_bsp_a - 257 t
ba0 msc1_rnc3_bs45_bsp_a - 258 t
ba0 msc1_rnc3_bs46_bsp_a - 259 t
ba0 msc1_rnc3_bs47_bsp_a - 260 t

ba0 msc1_rnc4_bs0_bsp_a - 261 t
ba0 msc1_rnc4_bs1_bsp_a - 262 t
ba0 msc1_rnc4_bs2_bsp_a - 263 t
ba0 msc1_rnc4_bs3_bsp_a - 264 t
ba0 msc1_rnc4_bs4_bsp_a - 265 t
ba0 msc1_rnc4_bs5_bsp_a - 266 t
ba0 msc1_rnc4_bs6_bsp_a - 267 t
ba0 msc1_rnc4_bs7_bsp_a - 268 t
ba0 msc1_rnc4_bs8_bsp_a - 269 t
ba0 msc1_rnc4_bs9_bsp_a - 270 t
ba0 msc1_rnc4_bs10_bsp_a - 271 t
ba0 msc1_rnc4_bs11_bsp_a - 272 t
ba0 msc1_rnc4_bs12_bsp_a - 273 t
ba0 msc1_rnc4_bs13_bsp_a - 274 t
ba0 msc1_rnc4_bs14_bsp_a - 275 t
ba0 msc1_rnc4_bs15_bsp_a - 276 t
ba0 msc1_rnc4_bs16_bsp_a - 277 t
ba0 msc1_rnc4_bs17_bsp_a - 278 t

ba0 msc1_rnc4_bs18_bsp_a - 279 t
ba0 msc1_rnc4_bs19_bsp_a - 280 t
ba0 msc1_rnc4_bs20_bsp_a - 281 t
ba0 msc1_rnc4_bs21_bsp_a - 282 t
ba0 msc1_rnc4_bs22_bsp_a - 283 t
ba0 msc1_rnc4_bs23_bsp_a - 284 t
ba0 msc1_rnc4_bs24_bsp_a - 285 t
ba0 msc1_rnc4_bs25_bsp_a - 286 t
ba0 msc1_rnc4_bs26_bsp_a - 287 t
ba0 msc1_rnc4_bs27_bsp_a - 288 t
ba0 msc1_rnc4_bs28_bsp_a - 289 t
ba0 msc1_rnc4_bs29_bsp_a - 290 t
ba0 msc1_rnc4_bs30_bsp_a - 291 t
ba0 msc1_rnc4_bs31_bsp_a - 292 t
ba0 msc1_rnc4_bs32_bsp_a - 293 t
ba0 msc1_rnc4_bs33_bsp_a - 294 t
ba0 msc1_rnc4_bs34_bsp_a - 295 t
ba0 msc1_rnc4_bs35_bsp_a - 296 t
ba0 msc1_rnc4_bs36_bsp_a - 297 t
ba0 msc1_rnc4_bs37_bsp_a - 298 t
ba0 msc1_rnc4_bs38_bsp_a - 299 t
ba0 msc1_rnc4_bs39_bsp_a - 300 t
ba0 msc1_rnc4_bs40_bsp_a - 301 t
ba0 msc1_rnc4_bs41_bsp_a - 302 t
ba0 msc1_rnc4_bs42_bsp_a - 303 t
ba0 msc1_rnc4_bs43_bsp_a - 304 t
ba0 msc1_rnc4_bs44_bsp_a - 305 t
ba0 msc1_rnc4_bs45_bsp_a - 306 t
ba0 msc1_rnc4_bs46_bsp_a - 307 t
ba0 msc1_rnc4_bs47_bsp_a - 308 t

ba0 msc1_rnc5_bs0_bsp_a - 309 t
ba0 msc1_rnc5_bs1_bsp_a - 310 t
ba0 msc1_rnc5_bs2_bsp_a - 311 t
ba0 msc1_rnc5_bs3_bsp_a - 312 t
ba0 msc1_rnc5_bs4_bsp_a - 313 t
ba0 msc1_rnc5_bs5_bsp_a - 314 t

ba0 msc1_rnc5_bs6_bsp_a - 315 t
ba0 msc1_rnc5_bs7_bsp_a - 316 t
ba0 msc1_rnc5_bs8_bsp_a - 317 t
ba0 msc1_rnc5_bs9_bsp_a - 318 t
ba0 msc1_rnc5_bs10_bsp_a - 319 t
ba0 msc1_rnc5_bs11_bsp_a - 320 t
ba0 msc1_rnc5_bs12_bsp_a - 321 t
ba0 msc1_rnc5_bs13_bsp_a - 322 t
ba0 msc1_rnc5_bs14_bsp_a - 323 t
ba0 msc1_rnc5_bs15_bsp_a - 324 t
ba0 msc1_rnc5_bs16_bsp_a - 325 t
ba0 msc1_rnc5_bs17_bsp_a - 326 t
ba0 msc1_rnc5_bs18_bsp_a - 327 t
ba0 msc1_rnc5_bs19_bsp_a - 328 t
ba0 msc1_rnc5_bs20_bsp_a - 329 t
ba0 msc1_rnc5_bs21_bsp_a - 330 t
ba0 msc1_rnc5_bs22_bsp_a - 331 t
ba0 msc1_rnc5_bs23_bsp_a - 332 t
ba0 msc1_rnc5_bs24_bsp_a - 333 t
ba0 msc1_rnc5_bs25_bsp_a - 334 t
ba0 msc1_rnc5_bs26_bsp_a - 335 t
ba0 msc1_rnc5_bs27_bsp_a - 336 t
ba0 msc1_rnc5_bs28_bsp_a - 337 t
ba0 msc1_rnc5_bs29_bsp_a - 338 t
ba0 msc1_rnc5_bs30_bsp_a - 339 t
ba0 msc1_rnc5_bs31_bsp_a - 340 t
ba0 msc1_rnc5_bs32_bsp_a - 341 t
ba0 msc1_rnc5_bs33_bsp_a - 342 t
ba0 msc1_rnc5_bs34_bsp_a - 343 t
ba0 msc1_rnc5_bs35_bsp_a - 344 t
ba0 msc1_rnc5_bs36_bsp_a - 345 t
ba0 msc1_rnc5_bs37_bsp_a - 346 t
ba0 msc1_rnc5_bs38_bsp_a - 347 t
ba0 msc1_rnc5_bs39_bsp_a - 348 t
ba0 msc1_rnc5_bs40_bsp_a - 349 t
ba0 msc1_rnc5_bs41_bsp_a - 350 t
ba0 msc1_rnc5_bs42_bsp_a - 351 t

ba0 msc1_rnc5_bs43_bsp_a - 352 t
ba0 msc1_rnc5_bs44_bsp_a - 353 t
ba0 msc1_rnc5_bs45_bsp_a - 354 t
ba0 msc1_rnc5_bs46_bsp_a - 355 t
ba0 msc1_rnc5_bs47_bsp_a - 356 t

ba0 msc1_rnc6_bs0_bsp_a - 357 t
ba0 msc1_rnc6_bs1_bsp_a - 358 t
ba0 msc1_rnc6_bs2_bsp_a - 359 t
ba0 msc1_rnc6_bs3_bsp_a - 360 t
ba0 msc1_rnc6_bs4_bsp_a - 361 t
ba0 msc1_rnc6_bs5_bsp_a - 362 t
ba0 msc1_rnc6_bs6_bsp_a - 363 t
ba0 msc1_rnc6_bs7_bsp_a - 364 t
ba0 msc1_rnc6_bs8_bsp_a - 365 t
ba0 msc1_rnc6_bs9_bsp_a - 366 t
ba0 msc1_rnc6_bs10_bsp_a - 367 t
ba0 msc1_rnc6_bs11_bsp_a - 368 t
ba0 msc1_rnc6_bs12_bsp_a - 369 t
ba0 msc1_rnc6_bs13_bsp_a - 370 t
ba0 msc1_rnc6_bs14_bsp_a - 371 t
ba0 msc1_rnc6_bs15_bsp_a - 372 t
ba0 msc1_rnc6_bs16_bsp_a - 373 t
ba0 msc1_rnc6_bs17_bsp_a - 374 t
ba0 msc1_rnc6_bs18_bsp_a - 375 t
ba0 msc1_rnc6_bs19_bsp_a - 376 t
ba0 msc1_rnc6_bs20_bsp_a - 377 t
ba0 msc1_rnc6_bs21_bsp_a - 378 t
ba0 msc1_rnc6_bs22_bsp_a - 379 t
ba0 msc1_rnc6_bs23_bsp_a - 380 t
ba0 msc1_rnc6_bs24_bsp_a - 381 t
ba0 msc1_rnc6_bs25_bsp_a - 382 t
ba0 msc1_rnc6_bs26_bsp_a - 383 t
ba0 msc1_rnc6_bs27_bsp_a - 384 t
ba0 msc1_rnc6_bs28_bsp_a - 385 t
ba0 msc1_rnc6_bs29_bsp_a - 386 t
ba0 msc1_rnc6_bs30_bsp_a - 387 t

ba0 msc1_rnc6_bs31_bsp_a - 388 t
ba0 msc1_rnc6_bs32_bsp_a - 389 t
ba0 msc1_rnc6_bs33_bsp_a - 390 t
ba0 msc1_rnc6_bs34_bsp_a - 391 t
ba0 msc1_rnc6_bs35_bsp_a - 392 t
ba0 msc1_rnc6_bs36_bsp_a - 393 t
ba0 msc1_rnc6_bs37_bsp_a - 394 t
ba0 msc1_rnc6_bs38_bsp_a - 395 t
ba0 msc1_rnc6_bs39_bsp_a - 396 t
ba0 msc1_rnc6_bs40_bsp_a - 397 t
ba0 msc1_rnc6_bs41_bsp_a - 398 t
ba0 msc1_rnc6_bs42_bsp_a - 399 t
ba0 msc1_rnc6_bs43_bsp_a - 400 t
ba0 msc1_rnc6_bs44_bsp_a - 401 t
ba0 msc1_rnc6_bs45_bsp_a - 402 t
ba0 msc1_rnc6_bs46_bsp_a - 403 t
ba0 msc1_rnc6_bs47_bsp_a - 404 t

ba0 msc1_rnc7_bs0_bsp_a - 405 t
ba0 msc1_rnc7_bs1_bsp_a - 406 t
ba0 msc1_rnc7_bs2_bsp_a - 407 t
ba0 msc1_rnc7_bs3_bsp_a - 408 t
ba0 msc1_rnc7_bs4_bsp_a - 409 t
ba0 msc1_rnc7_bs5_bsp_a - 410 t
ba0 msc1_rnc7_bs6_bsp_a - 411 t
ba0 msc1_rnc7_bs7_bsp_a - 412 t
ba0 msc1_rnc7_bs8_bsp_a - 413 t
ba0 msc1_rnc7_bs9_bsp_a - 414 t
ba0 msc1_rnc7_bs10_bsp_a - 415 t
ba0 msc1_rnc7_bs11_bsp_a - 416 t
ba0 msc1_rnc7_bs12_bsp_a - 417 t
ba0 msc1_rnc7_bs13_bsp_a - 418 t
ba0 msc1_rnc7_bs14_bsp_a - 419 t
ba0 msc1_rnc7_bs15_bsp_a - 420 t
ba0 msc1_rnc7_bs16_bsp_a - 421 t
ba0 msc1_rnc7_bs17_bsp_a - 422 t
ba0 msc1_rnc7_bs18_bsp_a - 423 t

ba0 msc1_rnc7_bs19_bsp_a - 424 t
ba0 msc1_rnc7_bs20_bsp_a - 425 t
ba0 msc1_rnc7_bs21_bsp_a - 426 t
ba0 msc1_rnc7_bs22_bsp_a - 427 t
ba0 msc1_rnc7_bs23_bsp_a - 428 t
ba0 msc1_rnc7_bs24_bsp_a - 429 t
ba0 msc1_rnc7_bs25_bsp_a - 430 t
ba0 msc1_rnc7_bs26_bsp_a - 431 t
ba0 msc1_rnc7_bs27_bsp_a - 432 t
ba0 msc1_rnc7_bs28_bsp_a - 433 t
ba0 msc1_rnc7_bs29_bsp_a - 434 t
ba0 msc1_rnc7_bs30_bsp_a - 435 t
ba0 msc1_rnc7_bs31_bsp_a - 436 t
ba0 msc1_rnc7_bs32_bsp_a - 437 t
ba0 msc1_rnc7_bs33_bsp_a - 438 t
ba0 msc1_rnc7_bs34_bsp_a - 439 t
ba0 msc1_rnc7_bs35_bsp_a - 440 t
ba0 msc1_rnc7_bs36_bsp_a - 441 t
ba0 msc1_rnc7_bs37_bsp_a - 442 t
ba0 msc1_rnc7_bs38_bsp_a - 443 t
ba0 msc1_rnc7_bs39_bsp_a - 444 t
ba0 msc1_rnc7_bs40_bsp_a - 445 t
ba0 msc1_rnc7_bs41_bsp_a - 446 t
ba0 msc1_rnc7_bs42_bsp_a - 447 t
ba0 msc1_rnc7_bs43_bsp_a - 448 t
ba0 msc1_rnc7_bs44_bsp_a - 449 t
ba0 msc1_rnc7_bs45_bsp_a - 450 t
ba0 msc1_rnc7_bs46_bsp_a - 451 t
ba0 msc1_rnc7_bs47_bsp_a - 452 t

ba0 msc1_rnc8_bs0_bsp_a - 453 t
ba0 msc1_rnc8_bs1_bsp_a - 454 t
ba0 msc1_rnc8_bs2_bsp_a - 455 t
ba0 msc1_rnc8_bs3_bsp_a - 456 t
ba0 msc1_rnc8_bs4_bsp_a - 457 t
ba0 msc1_rnc8_bs5_bsp_a - 458 t
ba0 msc1_rnc8_bs6_bsp_a - 459 t

ba0 msc1_rnc8_bs7_bsp_a - 460 t
ba0 msc1_rnc8_bs8_bsp_a - 461 t
ba0 msc1_rnc8_bs9_bsp_a - 462 t
ba0 msc1_rnc8_bs10_bsp_a - 463 t
ba0 msc1_rnc8_bs11_bsp_a - 464 t
ba0 msc1_rnc8_bs12_bsp_a - 465 t
ba0 msc1_rnc8_bs13_bsp_a - 466 t
ba0 msc1_rnc8_bs14_bsp_a - 467 t
ba0 msc1_rnc8_bs15_bsp_a - 468 t
ba0 msc1_rnc8_bs16_bsp_a - 469 t
ba0 msc1_rnc8_bs17_bsp_a - 470 t
ba0 msc1_rnc8_bs18_bsp_a - 471 t
ba0 msc1_rnc8_bs19_bsp_a - 472 t
ba0 msc1_rnc8_bs20_bsp_a - 473 t
ba0 msc1_rnc8_bs21_bsp_a - 474 t
ba0 msc1_rnc8_bs22_bsp_a - 475 t
ba0 msc1_rnc8_bs23_bsp_a - 476 t
ba0 msc1_rnc8_bs24_bsp_a - 477 t
ba0 msc1_rnc8_bs25_bsp_a - 478 t
ba0 msc1_rnc8_bs26_bsp_a - 479 t
ba0 msc1_rnc8_bs27_bsp_a - 480 t
ba0 msc1_rnc8_bs28_bsp_a - 481 t
ba0 msc1_rnc8_bs29_bsp_a - 482 t
ba0 msc1_rnc8_bs30_bsp_a - 483 t
ba0 msc1_rnc8_bs31_bsp_a - 484 t
ba0 msc1_rnc8_bs32_bsp_a - 485 t
ba0 msc1_rnc8_bs33_bsp_a - 486 t
ba0 msc1_rnc8_bs34_bsp_a - 487 t
ba0 msc1_rnc8_bs35_bsp_a - 488 t
ba0 msc1_rnc8_bs36_bsp_a - 489 t
ba0 msc1_rnc8_bs37_bsp_a - 490 t
ba0 msc1_rnc8_bs38_bsp_a - 491 t
ba0 msc1_rnc8_bs39_bsp_a - 492 t
ba0 msc1_rnc8_bs40_bsp_a - 493 t
ba0 msc1_rnc8_bs41_bsp_a - 494 t
ba0 msc1_rnc8_bs42_bsp_a - 495 t
ba0 msc1_rnc8_bs43_bsp_a - 496 t

ba0 msc1_rnc8_bs44_bsp_a - 497 t
ba0 msc1_rnc8_bs45_bsp_a - 498 t
ba0 msc1_rnc8_bs46_bsp_a - 499 t
ba0 msc1_rnc8_bs47_bsp_a - 500 t

ba0 msc1_rnc9_bs0_bsp_a - 501 t
ba0 msc1_rnc9_bs1_bsp_a - 502 t
ba0 msc1_rnc9_bs2_bsp_a - 503 t
ba0 msc1_rnc9_bs3_bsp_a - 504 t
ba0 msc1_rnc9_bs4_bsp_a - 505 t
ba0 msc1_rnc9_bs5_bsp_a - 506 t
ba0 msc1_rnc9_bs6_bsp_a - 507 t
ba0 msc1_rnc9_bs7_bsp_a - 508 t
ba0 msc1_rnc9_bs8_bsp_a - 509 t
ba0 msc1_rnc9_bs9_bsp_a - 510 t
ba0 msc1_rnc9_bs10_bsp_a - 511 t
ba0 msc1_rnc9_bs11_bsp_a - 512 t
ba0 msc1_rnc9_bs12_bsp_a - 513 t
ba0 msc1_rnc9_bs13_bsp_a - 514 t
ba0 msc1_rnc9_bs14_bsp_a - 515 t
ba0 msc1_rnc9_bs15_bsp_a - 516 t
ba0 msc1_rnc9_bs16_bsp_a - 517 t
ba0 msc1_rnc9_bs17_bsp_a - 518 t
ba0 msc1_rnc9_bs18_bsp_a - 519 t
ba0 msc1_rnc9_bs19_bsp_a - 520 t
ba0 msc1_rnc9_bs20_bsp_a - 521 t
ba0 msc1_rnc9_bs21_bsp_a - 522 t
ba0 msc1_rnc9_bs22_bsp_a - 523 t
ba0 msc1_rnc9_bs23_bsp_a - 524 t
ba0 msc1_rnc9_bs24_bsp_a - 525 t
ba0 msc1_rnc9_bs25_bsp_a - 526 t
ba0 msc1_rnc9_bs26_bsp_a - 527 t
ba0 msc1_rnc9_bs27_bsp_a - 528 t
ba0 msc1_rnc9_bs28_bsp_a - 529 t
ba0 msc1_rnc9_bs29_bsp_a - 530 t
ba0 msc1_rnc9_bs30_bsp_a - 531 t
ba0 msc1_rnc9_bs31_bsp_a - 532 t

ba0 msc1_rnc9_bs32_bsp_a	- 533 t
ba0 msc1_rnc9_bs33_bsp_a	- 534 t
ba0 msc1_rnc9_bs34_bsp_a	- 535 t
ba0 msc1_rnc9_bs35_bsp_a	- 536 t
ba0 msc1_rnc9_bs36_bsp_a	- 537 t
ba0 msc1_rnc9_bs37_bsp_a	- 538 t
ba0 msc1_rnc9_bs38_bsp_a	- 539 t
ba0 msc1_rnc9_bs39_bsp_a	- 540 t
ba0 msc1_rnc9_bs40_bsp_a	- 541 t
ba0 msc1_rnc9_bs41_bsp_a	- 542 t
ba0 msc1_rnc9_bs42_bsp_a	- 543 t
ba0 msc1_rnc9_bs43_bsp_a	- 544 t
ba0 msc1_rnc9_bs44_bsp_a	- 545 t
ba0 msc1_rnc9_bs45_bsp_a	- 546 t
ba0 msc1_rnc9_bs46_bsp_a	- 547 t
ba0 msc1_rnc9_bs47_bsp_a	- 548 t
ba0 msc1_rnc10_bs0_bsp_a	- 549 t
ba0 msc1_rnc10_bs1_bsp_a	- 550 t
ba0 msc1_rnc10_bs2_bsp_a	- 551 t
ba0 msc1_rnc10_bs3_bsp_a	- 552 t
ba0 msc1_rnc10_bs4_bsp_a	- 553 t
ba0 msc1_rnc10_bs5_bsp_a	- 554 t
ba0 msc1_rnc10_bs6_bsp_a	- 555 t
ba0 msc1_rnc10_bs7_bsp_a	- 556 t
ba0 msc1_rnc10_bs8_bsp_a	- 557 t
ba0 msc1_rnc10_bs9_bsp_a	- 558 t
ba0 msc1_rnc10_bs10_bsp_a	- 559 t
ba0 msc1_rnc10_bs11_bsp_a	- 560 t
ba0 msc1_rnc10_bs12_bsp_a	- 561 t
ba0 msc1_rnc10_bs13_bsp_a	- 562 t
ba0 msc1_rnc10_bs14_bsp_a	- 563 t
ba0 msc1_rnc10_bs15_bsp_a	- 564 t
ba0 msc1_rnc10_bs16_bsp_a	- 565 t
ba0 msc1_rnc10_bs17_bsp_a	- 566 t
ba0 msc1_rnc10_bs18_bsp_a	- 567 t
ba0 msc1_rnc10_bs19_bsp_a	- 568 t

ba0 msc1_rnc10_bs20_bsp_a - 569 t
ba0 msc1_rnc10_bs21_bsp_a - 570 t
ba0 msc1_rnc10_bs22_bsp_a - 571 t
ba0 msc1_rnc10_bs23_bsp_a - 572 t
ba0 msc1_rnc10_bs24_bsp_a - 573 t
ba0 msc1_rnc10_bs25_bsp_a - 574 t
ba0 msc1_rnc10_bs26_bsp_a - 575 t
ba0 msc1_rnc10_bs27_bsp_a - 576 t
ba0 msc1_rnc10_bs28_bsp_a - 577 t
ba0 msc1_rnc10_bs29_bsp_a - 578 t
ba0 msc1_rnc10_bs30_bsp_a - 579 t
ba0 msc1_rnc10_bs31_bsp_a - 580 t
ba0 msc1_rnc10_bs32_bsp_a - 581 t
ba0 msc1_rnc10_bs33_bsp_a - 582 t
ba0 msc1_rnc10_bs34_bsp_a - 583 t
ba0 msc1_rnc10_bs35_bsp_a - 584 t
ba0 msc1_rnc10_bs36_bsp_a - 585 t
ba0 msc1_rnc10_bs37_bsp_a - 586 t
ba0 msc1_rnc10_bs38_bsp_a - 587 t
ba0 msc1_rnc10_bs39_bsp_a - 588 t
ba0 msc1_rnc10_bs40_bsp_a - 589 t
ba0 msc1_rnc10_bs41_bsp_a - 590 t
ba0 msc1_rnc10_bs42_bsp_a - 591 t
ba0 msc1_rnc10_bs43_bsp_a - 592 t
ba0 msc1_rnc10_bs44_bsp_a - 593 t
ba0 msc1_rnc10_bs45_bsp_a - 594 t
ba0 msc1_rnc10_bs46_bsp_a - 595 t
ba0 msc1_rnc10_bs47_bsp_a - 596 t

ba0 msc1_rnc11_bs0_bsp_a - 597 t
ba0 msc1_rnc11_bs1_bsp_a - 598 t
ba0 msc1_rnc11_bs2_bsp_a - 599 t
ba0 msc1_rnc11_bs3_bsp_a - 600 t
ba0 msc1_rnc11_bs4_bsp_a - 601 t
ba0 msc1_rnc11_bs5_bsp_a - 602 t
ba0 msc1_rnc11_bs6_bsp_a - 603 t
ba0 msc1_rnc11_bs7_bsp_a - 604 t

ba0 msc1_rnc11_bs8_bsp_a - 605 t
ba0 msc1_rnc11_bs9_bsp_a - 606 t
ba0 msc1_rnc11_bs10_bsp_a - 607 t
ba0 msc1_rnc11_bs11_bsp_a - 608 t
ba0 msc1_rnc11_bs12_bsp_a - 609 t
ba0 msc1_rnc11_bs13_bsp_a - 610 t
ba0 msc1_rnc11_bs14_bsp_a - 611 t
ba0 msc1_rnc11_bs15_bsp_a - 612 t
ba0 msc1_rnc11_bs16_bsp_a - 613 t
ba0 msc1_rnc11_bs17_bsp_a - 614 t
ba0 msc1_rnc11_bs18_bsp_a - 615 t
ba0 msc1_rnc11_bs19_bsp_a - 616 t
ba0 msc1_rnc11_bs20_bsp_a - 617 t
ba0 msc1_rnc11_bs21_bsp_a - 618 t
ba0 msc1_rnc11_bs22_bsp_a - 619 t
ba0 msc1_rnc11_bs23_bsp_a - 620 t
ba0 msc1_rnc11_bs24_bsp_a - 621 t
ba0 msc1_rnc11_bs25_bsp_a - 622 t
ba0 msc1_rnc11_bs26_bsp_a - 623 t
ba0 msc1_rnc11_bs27_bsp_a - 624 t
ba0 msc1_rnc11_bs28_bsp_a - 625 t
ba0 msc1_rnc11_bs29_bsp_a - 626 t
ba0 msc1_rnc11_bs30_bsp_a - 627 t
ba0 msc1_rnc11_bs31_bsp_a - 628 t
ba0 msc1_rnc11_bs32_bsp_a - 629 t
ba0 msc1_rnc11_bs33_bsp_a - 630 t
ba0 msc1_rnc11_bs34_bsp_a - 631 t
ba0 msc1_rnc11_bs35_bsp_a - 632 t
ba0 msc1_rnc11_bs36_bsp_a - 633 t
ba0 msc1_rnc11_bs37_bsp_a - 634 t
ba0 msc1_rnc11_bs38_bsp_a - 635 t
ba0 msc1_rnc11_bs39_bsp_a - 636 t
ba0 msc1_rnc11_bs40_bsp_a - 637 t
ba0 msc1_rnc11_bs41_bsp_a - 638 t
ba0 msc1_rnc11_bs42_bsp_a - 639 t
ba0 msc1_rnc11_bs43_bsp_a - 640 t
ba0 msc1_rnc11_bs44_bsp_a - 641 t

ba0 msc1_rnc11_bs45_bsp_a - 642 t
ba0 msc1_rnc11_bs46_bsp_a - 643 t
ba0 msc1_rnc11_bs47_bsp_a - 644 t

2.3.4.3. /etc/hosts File

```
#  
# Classical IP over ATM  
#  
29.192.0.1      msc1_bsm          # This host  
29.64.2.1      msc1_cnp_a        # VCI=32  
29.64.2.129    msc1_cnp_s        # VCI=645  
  
17.64.2.1      msc1_rnc0_ncp_a   # VCI=33  
17.64.2.129    msc1_rnc0_ncp_s   # VCI=646  
18.64.2.1      msc1_rnc1_ncp_a   # VCI=34  
18.64.2.129    msc1_rnc1_ncp_s   # VCI=647  
19.64.2.1      msc1_rnc2_ncp_a   # VCI=35  
19.64.2.129    msc1_rnc2_ncp_s   # VCI=648  
20.64.2.1      msc1_rnc3_ncp_a   # VCI=36  
20.64.2.129    msc1_rnc3_ncp_s   # VCI=649  
21.64.2.1      msc1_rnc4_ncp_a   # VCI=37  
21.64.2.129    msc1_rnc4_ncp_s   # VCI=650  
22.64.2.1      msc1_rnc5_ncp_a   # VCI=38  
22.64.2.129    msc1_rnc5_ncp_s   # VCI=651  
23.64.2.1      msc1_rnc6_ncp_a   # VCI=39  
23.64.2.129    msc1_rnc6_ncp_s   # VCI=652  
24.64.2.1      msc1_rnc7_ncp_a   # VCI=40  
24.64.2.129    msc1_rnc7_ncp_s   # VCI=653  
25.64.2.1      msc1_rnc8_ncp_a   # VCI=41  
25.64.2.129    msc1_rnc8_ncp_s   # VCI=654  
26.64.2.1      msc1_rnc9_ncp_a   # VCI=42  
26.64.2.129    msc1_rnc9_ncp_s   # VCI=655  
27.64.2.1      msc1_rnc10_ncp_a  # VCI=43  
27.64.2.129    msc1_rnc10_ncp_s  # VCI=656  
28.64.2.1      msc1_rnc11_ncp_a  # VCI=44
```

28.64.2.129	msc1_rnc11_ncp_s	# VCI=657
17.64.1.1	msc1_rnc0_ccp_a	# VCI=45
17.64.1.129	msc1_rnc0_ccp_s	# VCI=658
18.64.1.1	msc1_rnc1_ccp_a	# VCI=46
18.64.1.129	msc1_rnc1_ccp_s	# VCI=659
19.64.1.1	msc1_rnc2_ccp_a	# VCI=47
19.64.1.129	msc1_rnc2_ccp_s	# VCI=660
20.64.1.1	msc1_rnc3_ccp_a	# VCI=48
20.64.1.129	msc1_rnc3_ccp_s	# VCI=661
21.64.1.1	msc1_rnc4_ccp_a	# VCI=49
21.64.1.129	msc1_rnc4_ccp_s	# VCI=662
22.64.1.1	msc1_rnc5_ccp_a	# VCI=50
22.64.1.129	msc1_rnc5_ccp_s	# VCI=663
23.64.1.1	msc1_rnc6_ccp_a	# VCI=51
23.64.1.129	msc1_rnc6_ccp_s	# VCI=664
24.64.1.1	msc1_rnc7_ccp_a	# VCI=52
24.64.1.129	msc1_rnc7_ccp_s	# VCI=665
25.64.1.1	msc1_rnc8_ccp_a	# VCI=53
25.64.1.129	msc1_rnc8_ccp_s	# VCI=666
26.64.1.1	msc1_rnc9_ccp_a	# VCI=54
26.64.1.129	msc1_rnc9_ccp_s	# VCI=667
27.64.1.1	msc1_rnc10_ccp_a	# VCI=55
27.64.1.129	msc1_rnc10_ccp_s	# VCI=668
28.64.1.1	msc1_rnc11_ccp_a	# VCI=56
28.64.1.129	msc1_rnc11_ccp_s	# VCI=669
17.64.5.1	msc1_rnc0_pcp_a	# VCI=57
18.64.5.1	msc1_rnc1_pcp_a	# VCI=58
19.64.5.1	msc1_rnc2_pcp_a	# VCI=59
20.64.5.1	msc1_rnc3_pcp_a	# VCI=60
21.64.5.1	msc1_rnc4_pcp_a	# VCI=61
22.64.5.1	msc1_rnc5_pcp_a	# VCI=62
23.64.5.1	msc1_rnc6_pcp_a	# VCI=63
24.64.5.1	msc1_rnc7_pcp_a	# VCI=64
25.64.5.1	msc1_rnc8_pcp_a	# VCI=65
26.64.5.1	msc1_rnc9_pcp_a	# VCI=66

STAREX-IS BSM Manual

27.64.5.1	msc1_rnc10_pcp_a	# VCI=67
28.64.5.1	msc1_rnc11_pcp_a	# VCI=68
17.128.1.1	msc1_rnc0_bs0_bsp_a	# VCI=69
17.129.1.1	msc1_rnc0_bs1_bsp_a	# VCI=70
17.130.1.1	msc1_rnc0_bs2_bsp_a	# VCI=71
17.131.1.1	msc1_rnc0_bs3_bsp_a	# VCI=72
17.132.1.1	msc1_rnc0_bs4_bsp_a	# VCI=73
17.133.1.1	msc1_rnc0_bs5_bsp_a	# VCI=74
17.134.1.1	msc1_rnc0_bs6_bsp_a	# VCI=75
17.135.1.1	msc1_rnc0_bs7_bsp_a	# VCI=76
17.136.1.1	msc1_rnc0_bs8_bsp_a	# VCI=77
17.137.1.1	msc1_rnc0_bs9_bsp_a	# VCI=78
17.138.1.1	msc1_rnc0_bs10_bsp_a	# VCI=79
17.139.1.1	msc1_rnc0_bs11_bsp_a	# VCI=80
17.140.1.1	msc1_rnc0_bs12_bsp_a	# VCI=81
17.141.1.1	msc1_rnc0_bs13_bsp_a	# VCI=82
17.142.1.1	msc1_rnc0_bs14_bsp_a	# VCI=83
17.143.1.1	msc1_rnc0_bs15_bsp_a	# VCI=84
17.144.1.1	msc1_rnc0_bs16_bsp_a	# VCI=85
17.145.1.1	msc1_rnc0_bs17_bsp_a	# VCI=86
17.146.1.1	msc1_rnc0_bs18_bsp_a	# VCI=87
17.147.1.1	msc1_rnc0_bs19_bsp_a	# VCI=88
17.148.1.1	msc1_rnc0_bs20_bsp_a	# VCI=89
17.149.1.1	msc1_rnc0_bs21_bsp_a	# VCI=90
17.150.1.1	msc1_rnc0_bs22_bsp_a	# VCI=91
17.151.1.1	msc1_rnc0_bs23_bsp_a	# VCI=92
17.152.1.1	msc1_rnc0_bs24_bsp_a	# VCI=93
17.153.1.1	msc1_rnc0_bs25_bsp_a	# VCI=94
17.154.1.1	msc1_rnc0_bs26_bsp_a	# VCI=95
17.155.1.1	msc1_rnc0_bs27_bsp_a	# VCI=96
17.156.1.1	msc1_rnc0_bs28_bsp_a	# VCI=97
17.157.1.1	msc1_rnc0_bs29_bsp_a	# VCI=98
17.158.1.1	msc1_rnc0_bs30_bsp_a	# VCI=99
17.159.1.1	msc1_rnc0_bs31_bsp_a	# VCI=100
17.160.1.1	msc1_rnc0_bs32_bsp_a	# VCI=101
17.161.1.1	msc1_rnc0_bs33_bsp_a	# VCI=102

17.162.1.1 msc1_rnc0_bs34_bsp_a # VCI=103
17.163.1.1 msc1_rnc0_bs35_bsp_a # VCI=104
17.164.1.1 msc1_rnc0_bs36_bsp_a # VCI=105
17.165.1.1 msc1_rnc0_bs37_bsp_a # VCI=106
17.166.1.1 msc1_rnc0_bs38_bsp_a # VCI=107
17.167.1.1 msc1_rnc0_bs39_bsp_a # VCI=108
17.168.1.1 msc1_rnc0_bs40_bsp_a # VCI=109
17.169.1.1 msc1_rnc0_bs41_bsp_a # VCI=110
17.170.1.1 msc1_rnc0_bs42_bsp_a # VCI=111
17.171.1.1 msc1_rnc0_bs43_bsp_a # VCI=112
17.172.1.1 msc1_rnc0_bs44_bsp_a # VCI=113
17.173.1.1 msc1_rnc0_bs45_bsp_a # VCI=114
17.174.1.1 msc1_rnc0_bs46_bsp_a # VCI=115
17.175.1.1 msc1_rnc0_bs47_bsp_a # VCI=116

18.128.1.1 msc1_rnc1_bs0_bsp_a # VCI=117
18.129.1.1 msc1_rnc1_bs1_bsp_a # VCI=118
18.130.1.1 msc1_rnc1_bs2_bsp_a # VCI=119
18.131.1.1 msc1_rnc1_bs3_bsp_a # VCI=120
18.132.1.1 msc1_rnc1_bs4_bsp_a # VCI=121
18.133.1.1 msc1_rnc1_bs5_bsp_a # VCI=122
18.134.1.1 msc1_rnc1_bs6_bsp_a # VCI=123
18.135.1.1 msc1_rnc1_bs7_bsp_a # VCI=124
18.136.1.1 msc1_rnc1_bs8_bsp_a # VCI=125
18.137.1.1 msc1_rnc1_bs9_bsp_a # VCI=126
18.138.1.1 msc1_rnc1_bs10_bsp_a # VCI=127
18.139.1.1 msc1_rnc1_bs11_bsp_a # VCI=128
18.140.1.1 msc1_rnc1_bs12_bsp_a # VCI=129
18.141.1.1 msc1_rnc1_bs13_bsp_a # VCI=130
18.142.1.1 msc1_rnc1_bs14_bsp_a # VCI=131
18.143.1.1 msc1_rnc1_bs15_bsp_a # VCI=132
18.144.1.1 msc1_rnc1_bs16_bsp_a # VCI=133
18.145.1.1 msc1_rnc1_bs17_bsp_a # VCI=134
18.146.1.1 msc1_rnc1_bs18_bsp_a # VCI=135
18.147.1.1 msc1_rnc1_bs19_bsp_a # VCI=136
18.148.1.1 msc1_rnc1_bs20_bsp_a # VCI=137
18.149.1.1 msc1_rnc1_bs21_bsp_a # VCI=138

18.150.1.1 msc1_rnc1_bs22_bsp_a # VCI=139
18.151.1.1 msc1_rnc1_bs23_bsp_a # VCI=140
18.152.1.1 msc1_rnc1_bs24_bsp_a # VCI=141
18.153.1.1 msc1_rnc1_bs25_bsp_a # VCI=142
18.154.1.1 msc1_rnc1_bs26_bsp_a # VCI=143
18.155.1.1 msc1_rnc1_bs27_bsp_a # VCI=144
18.156.1.1 msc1_rnc1_bs28_bsp_a # VCI=145
18.157.1.1 msc1_rnc1_bs29_bsp_a # VCI=146
18.158.1.1 msc1_rnc1_bs30_bsp_a # VCI=147
18.159.1.1 msc1_rnc1_bs31_bsp_a # VCI=148
18.160.1.1 msc1_rnc1_bs32_bsp_a # VCI=149
18.161.1.1 msc1_rnc1_bs33_bsp_a # VCI=150
18.162.1.1 msc1_rnc1_bs34_bsp_a # VCI=151
18.163.1.1 msc1_rnc1_bs35_bsp_a # VCI=152
18.164.1.1 msc1_rnc1_bs36_bsp_a # VCI=153
18.165.1.1 msc1_rnc1_bs37_bsp_a # VCI=154
18.166.1.1 msc1_rnc1_bs38_bsp_a # VCI=155
18.167.1.1 msc1_rnc1_bs39_bsp_a # VCI=156
18.168.1.1 msc1_rnc1_bs40_bsp_a # VCI=157
18.169.1.1 msc1_rnc1_bs41_bsp_a # VCI=158
18.170.1.1 msc1_rnc1_bs42_bsp_a # VCI=159
18.171.1.1 msc1_rnc1_bs43_bsp_a # VCI=160
18.172.1.1 msc1_rnc1_bs44_bsp_a # VCI=161
18.173.1.1 msc1_rnc1_bs45_bsp_a # VCI=162
18.174.1.1 msc1_rnc1_bs46_bsp_a # VCI=163
18.175.1.1 msc1_rnc1_bs47_bsp_a # VCI=164

19.128.1.1 msc1_rnc2_bs0_bsp_a # VCI=165
19.129.1.1 msc1_rnc2_bs1_bsp_a # VCI=166
19.130.1.1 msc1_rnc2_bs2_bsp_a # VCI=167
19.131.1.1 msc1_rnc2_bs3_bsp_a # VCI=168
19.132.1.1 msc1_rnc2_bs4_bsp_a # VCI=169
19.133.1.1 msc1_rnc2_bs5_bsp_a # VCI=170
19.134.1.1 msc1_rnc2_bs6_bsp_a # VCI=171
19.135.1.1 msc1_rnc2_bs7_bsp_a # VCI=172
19.136.1.1 msc1_rnc2_bs8_bsp_a # VCI=173
19.137.1.1 msc1_rnc2_bs9_bsp_a # VCI=174

19.138.1.1	msc1_rnc2_bs10_bsp_a	# VCI=175
19.139.1.1	msc1_rnc2_bs11_bsp_a	# VCI=176
19.140.1.1	msc1_rnc2_bs12_bsp_a	# VCI=177
19.141.1.1	msc1_rnc2_bs13_bsp_a	# VCI=178
19.142.1.1	msc1_rnc2_bs14_bsp_a	# VCI=179
19.143.1.1	msc1_rnc2_bs15_bsp_a	# VCI=180
19.144.1.1	msc1_rnc2_bs16_bsp_a	# VCI=181
19.145.1.1	msc1_rnc2_bs17_bsp_a	# VCI=182
19.146.1.1	msc1_rnc2_bs18_bsp_a	# VCI=183
19.147.1.1	msc1_rnc2_bs19_bsp_a	# VCI=184
19.148.1.1	msc1_rnc2_bs20_bsp_a	# VCI=185
19.149.1.1	msc1_rnc2_bs21_bsp_a	# VCI=186
19.150.1.1	msc1_rnc2_bs22_bsp_a	# VCI=187
19.151.1.1	msc1_rnc2_bs23_bsp_a	# VCI=188
19.152.1.1	msc1_rnc2_bs24_bsp_a	# VCI=189
19.153.1.1	msc1_rnc2_bs25_bsp_a	# VCI=190
19.154.1.1	msc1_rnc2_bs26_bsp_a	# VCI=191
19.155.1.1	msc1_rnc2_bs27_bsp_a	# VCI=192
19.156.1.1	msc1_rnc2_bs28_bsp_a	# VCI=193
19.157.1.1	msc1_rnc2_bs29_bsp_a	# VCI=194
19.158.1.1	msc1_rnc2_bs30_bsp_a	# VCI=195
19.159.1.1	msc1_rnc2_bs31_bsp_a	# VCI=196
19.160.1.1	msc1_rnc2_bs32_bsp_a	# VCI=197
19.161.1.1	msc1_rnc2_bs33_bsp_a	# VCI=198
19.162.1.1	msc1_rnc2_bs34_bsp_a	# VCI=199
19.163.1.1	msc1_rnc2_bs35_bsp_a	# VCI=200
19.164.1.1	msc1_rnc2_bs36_bsp_a	# VCI=201
19.165.1.1	msc1_rnc2_bs37_bsp_a	# VCI=202
19.166.1.1	msc1_rnc2_bs38_bsp_a	# VCI=203
19.167.1.1	msc1_rnc2_bs39_bsp_a	# VCI=204
19.168.1.1	msc1_rnc2_bs40_bsp_a	# VCI=205
19.169.1.1	msc1_rnc2_bs41_bsp_a	# VCI=206
19.170.1.1	msc1_rnc2_bs42_bsp_a	# VCI=207
19.171.1.1	msc1_rnc2_bs43_bsp_a	# VCI=208
19.172.1.1	msc1_rnc2_bs44_bsp_a	# VCI=209
19.173.1.1	msc1_rnc2_bs45_bsp_a	# VCI=210
19.174.1.1	msc1_rnc2_bs46_bsp_a	# VCI=211

19.175.1.1 msc1_rnc2_bs47_bsp_a # VCI=212

20.128.1.1 msc1_rnc3_bs0_bsp_a # VCI=213

20.129.1.1 msc1_rnc3_bs1_bsp_a # VCI=214

20.130.1.1 msc1_rnc3_bs2_bsp_a # VCI=215

20.131.1.1 msc1_rnc3_bs3_bsp_a # VCI=216

20.132.1.1 msc1_rnc3_bs4_bsp_a # VCI=217

20.133.1.1 msc1_rnc3_bs5_bsp_a # VCI=218

20.134.1.1 msc1_rnc3_bs6_bsp_a # VCI=219

20.135.1.1 msc1_rnc3_bs7_bsp_a # VCI=220

20.136.1.1 msc1_rnc3_bs8_bsp_a # VCI=221

20.137.1.1 msc1_rnc3_bs9_bsp_a # VCI=222

20.138.1.1 msc1_rnc3_bs10_bsp_a # VCI=223

20.139.1.1 msc1_rnc3_bs11_bsp_a # VCI=224

20.140.1.1 msc1_rnc3_bs12_bsp_a # VCI=225

20.141.1.1 msc1_rnc3_bs13_bsp_a # VCI=226

20.142.1.1 msc1_rnc3_bs14_bsp_a # VCI=227

20.143.1.1 msc1_rnc3_bs15_bsp_a # VCI=228

20.144.1.1 msc1_rnc3_bs16_bsp_a # VCI=229

20.145.1.1 msc1_rnc3_bs17_bsp_a # VCI=230

20.146.1.1 msc1_rnc3_bs18_bsp_a # VCI=231

20.147.1.1 msc1_rnc3_bs19_bsp_a # VCI=232

20.148.1.1 msc1_rnc3_bs20_bsp_a # VCI=233

20.149.1.1 msc1_rnc3_bs21_bsp_a # VCI=234

20.150.1.1 msc1_rnc3_bs22_bsp_a # VCI=235

20.151.1.1 msc1_rnc3_bs23_bsp_a # VCI=236

20.152.1.1 msc1_rnc3_bs24_bsp_a # VCI=237

20.153.1.1 msc1_rnc3_bs25_bsp_a # VCI=238

20.154.1.1 msc1_rnc3_bs26_bsp_a # VCI=239

20.155.1.1 msc1_rnc3_bs27_bsp_a # VCI=240

20.156.1.1 msc1_rnc3_bs28_bsp_a # VCI=241

20.157.1.1 msc1_rnc3_bs29_bsp_a # VCI=242

20.158.1.1 msc1_rnc3_bs30_bsp_a # VCI=243

20.159.1.1 msc1_rnc3_bs31_bsp_a # VCI=244

20.160.1.1 msc1_rnc3_bs32_bsp_a # VCI=245

20.161.1.1 msc1_rnc3_bs33_bsp_a # VCI=246

20.162.1.1 msc1_rnc3_bs34_bsp_a # VCI=247

20.163.1.1 msc1_rnc3_bs35_bsp_a # VCI=248
20.164.1.1 msc1_rnc3_bs36_bsp_a # VCI=249
20.165.1.1 msc1_rnc3_bs37_bsp_a # VCI=250
20.166.1.1 msc1_rnc3_bs38_bsp_a # VCI=251
20.167.1.1 msc1_rnc3_bs39_bsp_a # VCI=252
20.168.1.1 msc1_rnc3_bs40_bsp_a # VCI=253
20.169.1.1 msc1_rnc3_bs41_bsp_a # VCI=254
20.170.1.1 msc1_rnc3_bs42_bsp_a # VCI=255
20.171.1.1 msc1_rnc3_bs43_bsp_a # VCI=256
20.172.1.1 msc1_rnc3_bs44_bsp_a # VCI=257
20.173.1.1 msc1_rnc3_bs45_bsp_a # VCI=258
20.174.1.1 msc1_rnc3_bs46_bsp_a # VCI=259
20.175.1.1 msc1_rnc3_bs47_bsp_a # VCI=260

21.128.1.1 msc1_rnc4_bs0_bsp_a # VCI=261
21.129.1.1 msc1_rnc4_bs1_bsp_a # VCI=262
21.130.1.1 msc1_rnc4_bs2_bsp_a # VCI=263
21.131.1.1 msc1_rnc4_bs3_bsp_a # VCI=264
21.132.1.1 msc1_rnc4_bs4_bsp_a # VCI=265
21.133.1.1 msc1_rnc4_bs5_bsp_a # VCI=266
21.134.1.1 msc1_rnc4_bs6_bsp_a # VCI=267
21.135.1.1 msc1_rnc4_bs7_bsp_a # VCI=268
21.136.1.1 msc1_rnc4_bs8_bsp_a # VCI=269
21.137.1.1 msc1_rnc4_bs9_bsp_a # VCI=270
21.138.1.1 msc1_rnc4_bs10_bsp_a # VCI=271
21.139.1.1 msc1_rnc4_bs11_bsp_a # VCI=272
21.140.1.1 msc1_rnc4_bs12_bsp_a # VCI=273
21.141.1.1 msc1_rnc4_bs13_bsp_a # VCI=274
21.142.1.1 msc1_rnc4_bs14_bsp_a # VCI=275
21.143.1.1 msc1_rnc4_bs15_bsp_a # VCI=276
21.144.1.1 msc1_rnc4_bs16_bsp_a # VCI=277
21.145.1.1 msc1_rnc4_bs17_bsp_a # VCI=278
21.146.1.1 msc1_rnc4_bs18_bsp_a # VCI=279
21.147.1.1 msc1_rnc4_bs19_bsp_a # VCI=280
21.148.1.1 msc1_rnc4_bs20_bsp_a # VCI=281
21.149.1.1 msc1_rnc4_bs21_bsp_a # VCI=282
21.150.1.1 msc1_rnc4_bs22_bsp_a # VCI=283

21.151.1.1	msc1_rnc4_bs23_bsp_a	# VCI=284
21.152.1.1	msc1_rnc4_bs24_bsp_a	# VCI=285
21.153.1.1	msc1_rnc4_bs25_bsp_a	# VCI=286
21.154.1.1	msc1_rnc4_bs26_bsp_a	# VCI=287
21.155.1.1	msc1_rnc4_bs27_bsp_a	# VCI=288
21.156.1.1	msc1_rnc4_bs28_bsp_a	# VCI=289
21.157.1.1	msc1_rnc4_bs29_bsp_a	# VCI=290
21.158.1.1	msc1_rnc4_bs30_bsp_a	# VCI=291
21.159.1.1	msc1_rnc4_bs31_bsp_a	# VCI=292
21.160.1.1	msc1_rnc4_bs32_bsp_a	# VCI=293
21.161.1.1	msc1_rnc4_bs33_bsp_a	# VCI=294
21.162.1.1	msc1_rnc4_bs34_bsp_a	# VCI=295
21.163.1.1	msc1_rnc4_bs35_bsp_a	# VCI=296
21.164.1.1	msc1_rnc4_bs36_bsp_a	# VCI=297
21.165.1.1	msc1_rnc4_bs37_bsp_a	# VCI=298
21.166.1.1	msc1_rnc4_bs38_bsp_a	# VCI=299
21.167.1.1	msc1_rnc4_bs39_bsp_a	# VCI=300
21.168.1.1	msc1_rnc4_bs40_bsp_a	# VCI=301
21.169.1.1	msc1_rnc4_bs41_bsp_a	# VCI=302
21.170.1.1	msc1_rnc4_bs42_bsp_a	# VCI=303
21.171.1.1	msc1_rnc4_bs43_bsp_a	# VCI=304
21.172.1.1	msc1_rnc4_bs44_bsp_a	# VCI=305
21.173.1.1	msc1_rnc4_bs45_bsp_a	# VCI=306
21.174.1.1	msc1_rnc4_bs46_bsp_a	# VCI=307
21.175.1.1	msc1_rnc4_bs47_bsp_a	# VCI=308
22.128.1.1	msc1_rnc5_bs0_bsp_a	# VCI=309
22.129.1.1	msc1_rnc5_bs1_bsp_a	# VCI=310
22.130.1.1	msc1_rnc5_bs2_bsp_a	# VCI=311
22.131.1.1	msc1_rnc5_bs3_bsp_a	# VCI=312
22.132.1.1	msc1_rnc5_bs4_bsp_a	# VCI=313
22.133.1.1	msc1_rnc5_bs5_bsp_a	# VCI=314
22.134.1.1	msc1_rnc5_bs6_bsp_a	# VCI=315
22.135.1.1	msc1_rnc5_bs7_bsp_a	# VCI=316
22.136.1.1	msc1_rnc5_bs8_bsp_a	# VCI=317
22.137.1.1	msc1_rnc5_bs9_bsp_a	# VCI=318
22.138.1.1	msc1_rnc5_bs10_bsp_a	# VCI=319

22.139.1.1	msc1_rnc5_bs11_bsp_a	# VCI=320
22.140.1.1	msc1_rnc5_bs12_bsp_a	# VCI=321
22.141.1.1	msc1_rnc5_bs13_bsp_a	# VCI=322
22.142.1.1	msc1_rnc5_bs14_bsp_a	# VCI=323
22.143.1.1	msc1_rnc5_bs15_bsp_a	# VCI=324
22.144.1.1	msc1_rnc5_bs16_bsp_a	# VCI=325
22.145.1.1	msc1_rnc5_bs17_bsp_a	# VCI=326
22.146.1.1	msc1_rnc5_bs18_bsp_a	# VCI=327
22.147.1.1	msc1_rnc5_bs19_bsp_a	# VCI=328
22.148.1.1	msc1_rnc5_bs20_bsp_a	# VCI=329
22.149.1.1	msc1_rnc5_bs21_bsp_a	# VCI=330
22.150.1.1	msc1_rnc5_bs22_bsp_a	# VCI=331
22.151.1.1	msc1_rnc5_bs23_bsp_a	# VCI=332
22.152.1.1	msc1_rnc5_bs24_bsp_a	# VCI=333
22.153.1.1	msc1_rnc5_bs25_bsp_a	# VCI=334
22.154.1.1	msc1_rnc5_bs26_bsp_a	# VCI=335
22.155.1.1	msc1_rnc5_bs27_bsp_a	# VCI=336
22.156.1.1	msc1_rnc5_bs28_bsp_a	# VCI=337
22.157.1.1	msc1_rnc5_bs29_bsp_a	# VCI=338
22.158.1.1	msc1_rnc5_bs30_bsp_a	# VCI=339
22.159.1.1	msc1_rnc5_bs31_bsp_a	# VCI=340
22.160.1.1	msc1_rnc5_bs32_bsp_a	# VCI=341
22.161.1.1	msc1_rnc5_bs33_bsp_a	# VCI=342
22.162.1.1	msc1_rnc5_bs34_bsp_a	# VCI=343
22.163.1.1	msc1_rnc5_bs35_bsp_a	# VCI=344
22.164.1.1	msc1_rnc5_bs36_bsp_a	# VCI=345
22.165.1.1	msc1_rnc5_bs37_bsp_a	# VCI=346
22.166.1.1	msc1_rnc5_bs38_bsp_a	# VCI=347
22.167.1.1	msc1_rnc5_bs39_bsp_a	# VCI=348
22.168.1.1	msc1_rnc5_bs40_bsp_a	# VCI=349
22.169.1.1	msc1_rnc5_bs41_bsp_a	# VCI=350
22.170.1.1	msc1_rnc5_bs42_bsp_a	# VCI=351
22.171.1.1	msc1_rnc5_bs43_bsp_a	# VCI=352
22.172.1.1	msc1_rnc5_bs44_bsp_a	# VCI=353
22.173.1.1	msc1_rnc5_bs45_bsp_a	# VCI=354
22.174.1.1	msc1_rnc5_bs46_bsp_a	# VCI=355
22.175.1.1	msc1_rnc5_bs47_bsp_a	# VCI=356

23.128.1.1 msc1_rnc6_bs0_bsp_a # VCI=357
23.129.1.1 msc1_rnc6_bs1_bsp_a # VCI=358
23.130.1.1 msc1_rnc6_bs2_bsp_a # VCI=359
23.131.1.1 msc1_rnc6_bs3_bsp_a # VCI=360
23.132.1.1 msc1_rnc6_bs4_bsp_a # VCI=361
23.133.1.1 msc1_rnc6_bs5_bsp_a # VCI=362
23.134.1.1 msc1_rnc6_bs6_bsp_a # VCI=363
23.135.1.1 msc1_rnc6_bs7_bsp_a # VCI=364
23.136.1.1 msc1_rnc6_bs8_bsp_a # VCI=365
23.137.1.1 msc1_rnc6_bs9_bsp_a # VCI=366
23.138.1.1 msc1_rnc6_bs10_bsp_a # VCI=367
23.139.1.1 msc1_rnc6_bs11_bsp_a # VCI=368
23.140.1.1 msc1_rnc6_bs12_bsp_a # VCI=369
23.141.1.1 msc1_rnc6_bs13_bsp_a # VCI=370
23.142.1.1 msc1_rnc6_bs14_bsp_a # VCI=371
23.143.1.1 msc1_rnc6_bs15_bsp_a # VCI=372
23.144.1.1 msc1_rnc6_bs16_bsp_a # VCI=373
23.145.1.1 msc1_rnc6_bs17_bsp_a # VCI=374
23.146.1.1 msc1_rnc6_bs18_bsp_a # VCI=375
23.147.1.1 msc1_rnc6_bs19_bsp_a # VCI=376
23.148.1.1 msc1_rnc6_bs20_bsp_a # VCI=377
23.149.1.1 msc1_rnc6_bs21_bsp_a # VCI=378
23.150.1.1 msc1_rnc6_bs22_bsp_a # VCI=379
23.151.1.1 msc1_rnc6_bs23_bsp_a # VCI=380
23.152.1.1 msc1_rnc6_bs24_bsp_a # VCI=381
23.153.1.1 msc1_rnc6_bs25_bsp_a # VCI=382
23.154.1.1 msc1_rnc6_bs26_bsp_a # VCI=383
23.155.1.1 msc1_rnc6_bs27_bsp_a # VCI=384
23.156.1.1 msc1_rnc6_bs28_bsp_a # VCI=385
23.157.1.1 msc1_rnc6_bs29_bsp_a # VCI=386
23.158.1.1 msc1_rnc6_bs30_bsp_a # VCI=387
23.159.1.1 msc1_rnc6_bs31_bsp_a # VCI=388
23.160.1.1 msc1_rnc6_bs32_bsp_a # VCI=389
23.161.1.1 msc1_rnc6_bs33_bsp_a # VCI=390
23.162.1.1 msc1_rnc6_bs34_bsp_a # VCI=391
23.163.1.1 msc1_rnc6_bs35_bsp_a # VCI=392

23.164.1.1 msc1_rnc6_bs36_bsp_a # VCI=393
23.165.1.1 msc1_rnc6_bs37_bsp_a # VCI=394
23.166.1.1 msc1_rnc6_bs38_bsp_a # VCI=395
23.167.1.1 msc1_rnc6_bs39_bsp_a # VCI=396
23.168.1.1 msc1_rnc6_bs40_bsp_a # VCI=397
23.169.1.1 msc1_rnc6_bs41_bsp_a # VCI=398
23.170.1.1 msc1_rnc6_bs42_bsp_a # VCI=399
23.171.1.1 msc1_rnc6_bs43_bsp_a # VCI=400
23.172.1.1 msc1_rnc6_bs44_bsp_a # VCI=401
23.173.1.1 msc1_rnc6_bs45_bsp_a # VCI=402
23.174.1.1 msc1_rnc6_bs46_bsp_a # VCI=403
23.175.1.1 msc1_rnc6_bs47_bsp_a # VCI=404

24.128.1.1 msc1_rnc7_bs0_bsp_a # VCI=405
24.129.1.1 msc1_rnc7_bs1_bsp_a # VCI=406
24.130.1.1 msc1_rnc7_bs2_bsp_a # VCI=407
24.131.1.1 msc1_rnc7_bs3_bsp_a # VCI=408
24.132.1.1 msc1_rnc7_bs4_bsp_a # VCI=409
24.133.1.1 msc1_rnc7_bs5_bsp_a # VCI=410
24.134.1.1 msc1_rnc7_bs6_bsp_a # VCI=411
24.135.1.1 msc1_rnc7_bs7_bsp_a # VCI=412
24.136.1.1 msc1_rnc7_bs8_bsp_a # VCI=413
24.137.1.1 msc1_rnc7_bs9_bsp_a # VCI=414
24.138.1.1 msc1_rnc7_bs10_bsp_a # VCI=415
24.139.1.1 msc1_rnc7_bs11_bsp_a # VCI=416
24.140.1.1 msc1_rnc7_bs12_bsp_a # VCI=417
24.141.1.1 msc1_rnc7_bs13_bsp_a # VCI=418
24.142.1.1 msc1_rnc7_bs14_bsp_a # VCI=419
24.143.1.1 msc1_rnc7_bs15_bsp_a # VCI=420
24.144.1.1 msc1_rnc7_bs16_bsp_a # VCI=421
24.145.1.1 msc1_rnc7_bs17_bsp_a # VCI=422
24.146.1.1 msc1_rnc7_bs18_bsp_a # VCI=423
24.147.1.1 msc1_rnc7_bs19_bsp_a # VCI=424
24.148.1.1 msc1_rnc7_bs20_bsp_a # VCI=425
24.149.1.1 msc1_rnc7_bs21_bsp_a # VCI=426
24.150.1.1 msc1_rnc7_bs22_bsp_a # VCI=427
24.151.1.1 msc1_rnc7_bs23_bsp_a # VCI=428

24.152.1.1 msc1_rnc7_bs24_bsp_a # VCI=429
24.153.1.1 msc1_rnc7_bs25_bsp_a # VCI=430
24.154.1.1 msc1_rnc7_bs26_bsp_a # VCI=431
24.155.1.1 msc1_rnc7_bs27_bsp_a # VCI=432
24.156.1.1 msc1_rnc7_bs28_bsp_a # VCI=433
24.157.1.1 msc1_rnc7_bs29_bsp_a # VCI=434
24.158.1.1 msc1_rnc7_bs30_bsp_a # VCI=435
24.159.1.1 msc1_rnc7_bs31_bsp_a # VCI=436
24.160.1.1 msc1_rnc7_bs32_bsp_a # VCI=437
24.161.1.1 msc1_rnc7_bs33_bsp_a # VCI=438
24.162.1.1 msc1_rnc7_bs34_bsp_a # VCI=439
24.163.1.1 msc1_rnc7_bs35_bsp_a # VCI=440
24.164.1.1 msc1_rnc7_bs36_bsp_a # VCI=441
24.165.1.1 msc1_rnc7_bs37_bsp_a # VCI=442
24.166.1.1 msc1_rnc7_bs38_bsp_a # VCI=443
24.167.1.1 msc1_rnc7_bs39_bsp_a # VCI=444
24.168.1.1 msc1_rnc7_bs40_bsp_a # VCI=445
24.169.1.1 msc1_rnc7_bs41_bsp_a # VCI=446
24.170.1.1 msc1_rnc7_bs42_bsp_a # VCI=447
24.171.1.1 msc1_rnc7_bs43_bsp_a # VCI=448
24.172.1.1 msc1_rnc7_bs44_bsp_a # VCI=449
24.173.1.1 msc1_rnc7_bs45_bsp_a # VCI=450
24.174.1.1 msc1_rnc7_bs46_bsp_a # VCI=451
24.175.1.1 msc1_rnc7_bs47_bsp_a # VCI=452

25.128.1.1 msc1_rnc8_bs0_bsp_a # VCI=453
25.129.1.1 msc1_rnc8_bs1_bsp_a # VCI=454
25.130.1.1 msc1_rnc8_bs2_bsp_a # VCI=455
25.131.1.1 msc1_rnc8_bs3_bsp_a # VCI=456
25.132.1.1 msc1_rnc8_bs4_bsp_a # VCI=457
25.133.1.1 msc1_rnc8_bs5_bsp_a # VCI=458
25.134.1.1 msc1_rnc8_bs6_bsp_a # VCI=459
25.135.1.1 msc1_rnc8_bs7_bsp_a # VCI=460
25.136.1.1 msc1_rnc8_bs8_bsp_a # VCI=461
25.137.1.1 msc1_rnc8_bs9_bsp_a # VCI=462
25.138.1.1 msc1_rnc8_bs10_bsp_a # VCI=463
25.139.1.1 msc1_rnc8_bs11_bsp_a # VCI=464

25.140.1.1	msc1_rnc8_bs12_bsp_a	# VCI=465
25.141.1.1	msc1_rnc8_bs13_bsp_a	# VCI=466
25.142.1.1	msc1_rnc8_bs14_bsp_a	# VCI=467
25.143.1.1	msc1_rnc8_bs15_bsp_a	# VCI=468
25.144.1.1	msc1_rnc8_bs16_bsp_a	# VCI=469
25.145.1.1	msc1_rnc8_bs17_bsp_a	# VCI=470
25.146.1.1	msc1_rnc8_bs18_bsp_a	# VCI=471
25.147.1.1	msc1_rnc8_bs19_bsp_a	# VCI=472
25.148.1.1	msc1_rnc8_bs20_bsp_a	# VCI=473
25.149.1.1	msc1_rnc8_bs21_bsp_a	# VCI=474
25.150.1.1	msc1_rnc8_bs22_bsp_a	# VCI=475
25.151.1.1	msc1_rnc8_bs23_bsp_a	# VCI=476
25.152.1.1	msc1_rnc8_bs24_bsp_a	# VCI=477
25.153.1.1	msc1_rnc8_bs25_bsp_a	# VCI=478
25.154.1.1	msc1_rnc8_bs26_bsp_a	# VCI=479
25.155.1.1	msc1_rnc8_bs27_bsp_a	# VCI=480
25.156.1.1	msc1_rnc8_bs28_bsp_a	# VCI=481
25.157.1.1	msc1_rnc8_bs29_bsp_a	# VCI=482
25.158.1.1	msc1_rnc8_bs30_bsp_a	# VCI=483
25.159.1.1	msc1_rnc8_bs31_bsp_a	# VCI=484
25.160.1.1	msc1_rnc8_bs32_bsp_a	# VCI=485
25.161.1.1	msc1_rnc8_bs33_bsp_a	# VCI=486
25.162.1.1	msc1_rnc8_bs34_bsp_a	# VCI=487
25.163.1.1	msc1_rnc8_bs35_bsp_a	# VCI=488
25.164.1.1	msc1_rnc8_bs36_bsp_a	# VCI=489
25.165.1.1	msc1_rnc8_bs37_bsp_a	# VCI=490
25.166.1.1	msc1_rnc8_bs38_bsp_a	# VCI=491
25.167.1.1	msc1_rnc8_bs39_bsp_a	# VCI=492
25.168.1.1	msc1_rnc8_bs40_bsp_a	# VCI=493
25.169.1.1	msc1_rnc8_bs41_bsp_a	# VCI=494
25.170.1.1	msc1_rnc8_bs42_bsp_a	# VCI=495
25.171.1.1	msc1_rnc8_bs43_bsp_a	# VCI=496
25.172.1.1	msc1_rnc8_bs44_bsp_a	# VCI=497
25.173.1.1	msc1_rnc8_bs45_bsp_a	# VCI=498
25.174.1.1	msc1_rnc8_bs46_bsp_a	# VCI=499
25.175.1.1	msc1_rnc8_bs47_bsp_a	# VCI=500

26.128.1.1 msc1_rnc9_bs0_bsp_a # VCI=501
26.129.1.1 msc1_rnc9_bs1_bsp_a # VCI=502
26.130.1.1 msc1_rnc9_bs2_bsp_a # VCI=503
26.131.1.1 msc1_rnc9_bs3_bsp_a # VCI=504
26.132.1.1 msc1_rnc9_bs4_bsp_a # VCI=505
26.133.1.1 msc1_rnc9_bs5_bsp_a # VCI=506
26.134.1.1 msc1_rnc9_bs6_bsp_a # VCI=507
26.135.1.1 msc1_rnc9_bs7_bsp_a # VCI=508
26.136.1.1 msc1_rnc9_bs8_bsp_a # VCI=509
26.137.1.1 msc1_rnc9_bs9_bsp_a # VCI=510
26.138.1.1 msc1_rnc9_bs10_bsp_a # VCI=511
26.139.1.1 msc1_rnc9_bs11_bsp_a # VCI=512
26.140.1.1 msc1_rnc9_bs12_bsp_a # VCI=513
26.141.1.1 msc1_rnc9_bs13_bsp_a # VCI=514
26.142.1.1 msc1_rnc9_bs14_bsp_a # VCI=515
26.143.1.1 msc1_rnc9_bs15_bsp_a # VCI=516
26.144.1.1 msc1_rnc9_bs16_bsp_a # VCI=517
26.145.1.1 msc1_rnc9_bs17_bsp_a # VCI=518
26.146.1.1 msc1_rnc9_bs18_bsp_a # VCI=519
26.147.1.1 msc1_rnc9_bs19_bsp_a # VCI=520
26.148.1.1 msc1_rnc9_bs20_bsp_a # VCI=521
26.149.1.1 msc1_rnc9_bs21_bsp_a # VCI=522
26.150.1.1 msc1_rnc9_bs22_bsp_a # VCI=523
26.151.1.1 msc1_rnc9_bs23_bsp_a # VCI=524
26.152.1.1 msc1_rnc9_bs24_bsp_a # VCI=525
26.153.1.1 msc1_rnc9_bs25_bsp_a # VCI=526
26.154.1.1 msc1_rnc9_bs26_bsp_a # VCI=527
26.155.1.1 msc1_rnc9_bs27_bsp_a # VCI=528
26.156.1.1 msc1_rnc9_bs28_bsp_a # VCI=529
26.157.1.1 msc1_rnc9_bs29_bsp_a # VCI=530
26.158.1.1 msc1_rnc9_bs30_bsp_a # VCI=531
26.159.1.1 msc1_rnc9_bs31_bsp_a # VCI=532
26.160.1.1 msc1_rnc9_bs32_bsp_a # VCI=533
26.161.1.1 msc1_rnc9_bs33_bsp_a # VCI=534
26.162.1.1 msc1_rnc9_bs34_bsp_a # VCI=535
26.163.1.1 msc1_rnc9_bs35_bsp_a # VCI=536
26.164.1.1 msc1_rnc9_bs36_bsp_a # VCI=537

26.165.1.1	msc1_rnc9_bs37_bsp_a	# VCI=538
26.166.1.1	msc1_rnc9_bs38_bsp_a	# VCI=539
26.167.1.1	msc1_rnc9_bs39_bsp_a	# VCI=540
26.168.1.1	msc1_rnc9_bs40_bsp_a	# VCI=541
26.169.1.1	msc1_rnc9_bs41_bsp_a	# VCI=542
26.170.1.1	msc1_rnc9_bs42_bsp_a	# VCI=543
26.171.1.1	msc1_rnc9_bs43_bsp_a	# VCI=544
26.172.1.1	msc1_rnc9_bs44_bsp_a	# VCI=545
26.173.1.1	msc1_rnc9_bs45_bsp_a	# VCI=546
26.174.1.1	msc1_rnc9_bs46_bsp_a	# VCI=547
26.175.1.1	msc1_rnc9_bs47_bsp_a	# VCI=548
27.128.1.1	msc1_rnc10_bs0_bsp_a	# VCI=549
27.129.1.1	msc1_rnc10_bs1_bsp_a	# VCI=550
27.130.1.1	msc1_rnc10_bs2_bsp_a	# VCI=551
27.131.1.1	msc1_rnc10_bs3_bsp_a	# VCI=552
27.132.1.1	msc1_rnc10_bs4_bsp_a	# VCI=553
27.133.1.1	msc1_rnc10_bs5_bsp_a	# VCI=554
27.134.1.1	msc1_rnc10_bs6_bsp_a	# VCI=555
27.135.1.1	msc1_rnc10_bs7_bsp_a	# VCI=556
27.136.1.1	msc1_rnc10_bs8_bsp_a	# VCI=557
27.137.1.1	msc1_rnc10_bs9_bsp_a	# VCI=558
27.138.1.1	msc1_rnc10_bs10_bsp_a	# VCI=559
27.139.1.1	msc1_rnc10_bs11_bsp_a	# VCI=560
27.140.1.1	msc1_rnc10_bs12_bsp_a	# VCI=561
27.141.1.1	msc1_rnc10_bs13_bsp_a	# VCI=562
27.142.1.1	msc1_rnc10_bs14_bsp_a	# VCI=563
27.143.1.1	msc1_rnc10_bs15_bsp_a	# VCI=564
27.144.1.1	msc1_rnc10_bs16_bsp_a	# VCI=565
27.145.1.1	msc1_rnc10_bs17_bsp_a	# VCI=566
27.146.1.1	msc1_rnc10_bs18_bsp_a	# VCI=567
27.147.1.1	msc1_rnc10_bs19_bsp_a	# VCI=568
27.148.1.1	msc1_rnc10_bs20_bsp_a	# VCI=569
27.149.1.1	msc1_rnc10_bs21_bsp_a	# VCI=570
27.150.1.1	msc1_rnc10_bs22_bsp_a	# VCI=571
27.151.1.1	msc1_rnc10_bs23_bsp_a	# VCI=572
27.152.1.1	msc1_rnc10_bs24_bsp_a	# VCI=573

27.153.1.1	msc1_rnc10_bs25_bsp_a	# VCI=574
27.154.1.1	msc1_rnc10_bs26_bsp_a	# VCI=575
27.155.1.1	msc1_rnc10_bs27_bsp_a	# VCI=576
27.156.1.1	msc1_rnc10_bs28_bsp_a	# VCI=577
27.157.1.1	msc1_rnc10_bs29_bsp_a	# VCI=578
27.158.1.1	msc1_rnc10_bs30_bsp_a	# VCI=579
27.159.1.1	msc1_rnc10_bs31_bsp_a	# VCI=580
27.160.1.1	msc1_rnc10_bs32_bsp_a	# VCI=581
27.161.1.1	msc1_rnc10_bs33_bsp_a	# VCI=582
27.162.1.1	msc1_rnc10_bs34_bsp_a	# VCI=583
27.163.1.1	msc1_rnc10_bs35_bsp_a	# VCI=584
27.164.1.1	msc1_rnc10_bs36_bsp_a	# VCI=585
27.165.1.1	msc1_rnc10_bs37_bsp_a	# VCI=586
27.166.1.1	msc1_rnc10_bs38_bsp_a	# VCI=587
27.167.1.1	msc1_rnc10_bs39_bsp_a	# VCI=588
27.168.1.1	msc1_rnc10_bs40_bsp_a	# VCI=589
27.169.1.1	msc1_rnc10_bs41_bsp_a	# VCI=590
27.170.1.1	msc1_rnc10_bs42_bsp_a	# VCI=591
27.171.1.1	msc1_rnc10_bs43_bsp_a	# VCI=592
27.172.1.1	msc1_rnc10_bs44_bsp_a	# VCI=593
27.173.1.1	msc1_rnc10_bs45_bsp_a	# VCI=594
27.174.1.1	msc1_rnc10_bs46_bsp_a	# VCI=595
27.175.1.1	msc1_rnc10_bs47_bsp_a	# VCI=596
28.128.1.1	msc1_rnc11_bs0_bsp_a	# VCI=597
28.129.1.1	msc1_rnc11_bs1_bsp_a	# VCI=598
28.130.1.1	msc1_rnc11_bs2_bsp_a	# VCI=599
28.131.1.1	msc1_rnc11_bs3_bsp_a	# VCI=600
28.132.1.1	msc1_rnc11_bs4_bsp_a	# VCI=601
28.133.1.1	msc1_rnc11_bs5_bsp_a	# VCI=602
28.134.1.1	msc1_rnc11_bs6_bsp_a	# VCI=603
28.135.1.1	msc1_rnc11_bs7_bsp_a	# VCI=604
28.136.1.1	msc1_rnc11_bs8_bsp_a	# VCI=605
28.137.1.1	msc1_rnc11_bs9_bsp_a	# VCI=606
28.138.1.1	msc1_rnc11_bs10_bsp_a	# VCI=607
28.139.1.1	msc1_rnc11_bs11_bsp_a	# VCI=608
28.140.1.1	msc1_rnc11_bs12_bsp_a	# VCI=609

28.141.1.1 msc1_rnc11_bs13_bsp_a # VCI=610
28.142.1.1 msc1_rnc11_bs14_bsp_a # VCI=611
28.143.1.1 msc1_rnc11_bs15_bsp_a # VCI=612
28.144.1.1 msc1_rnc11_bs16_bsp_a # VCI=613
28.145.1.1 msc1_rnc11_bs17_bsp_a # VCI=614
28.146.1.1 msc1_rnc11_bs18_bsp_a # VCI=615
28.147.1.1 msc1_rnc11_bs19_bsp_a # VCI=616
28.148.1.1 msc1_rnc11_bs20_bsp_a # VCI=617
28.149.1.1 msc1_rnc11_bs21_bsp_a # VCI=618
28.150.1.1 msc1_rnc11_bs22_bsp_a # VCI=619
28.151.1.1 msc1_rnc11_bs23_bsp_a # VCI=620
28.152.1.1 msc1_rnc11_bs24_bsp_a # VCI=621
28.153.1.1 msc1_rnc11_bs25_bsp_a # VCI=622
28.154.1.1 msc1_rnc11_bs26_bsp_a # VCI=623
28.155.1.1 msc1_rnc11_bs27_bsp_a # VCI=624
28.156.1.1 msc1_rnc11_bs28_bsp_a # VCI=625
28.157.1.1 msc1_rnc11_bs29_bsp_a # VCI=626
28.158.1.1 msc1_rnc11_bs30_bsp_a # VCI=627
28.159.1.1 msc1_rnc11_bs31_bsp_a # VCI=628
28.160.1.1 msc1_rnc11_bs32_bsp_a # VCI=629
28.161.1.1 msc1_rnc11_bs33_bsp_a # VCI=630
28.162.1.1 msc1_rnc11_bs34_bsp_a # VCI=631
28.163.1.1 msc1_rnc11_bs35_bsp_a # VCI=632
28.164.1.1 msc1_rnc11_bs36_bsp_a # VCI=633
28.165.1.1 msc1_rnc11_bs37_bsp_a # VCI=634
28.166.1.1 msc1_rnc11_bs38_bsp_a # VCI=635
28.167.1.1 msc1_rnc11_bs39_bsp_a # VCI=636
28.168.1.1 msc1_rnc11_bs40_bsp_a # VCI=637
28.169.1.1 msc1_rnc11_bs41_bsp_a # VCI=638
28.170.1.1 msc1_rnc11_bs42_bsp_a # VCI=639
28.171.1.1 msc1_rnc11_bs43_bsp_a # VCI=640
28.172.1.1 msc1_rnc11_bs44_bsp_a # VCI=641
28.173.1.1 msc1_rnc11_bs45_bsp_a # VCI=642
28.174.1.1 msc1_rnc11_bs46_bsp_a # VCI=643
28.175.1.1 msc1_rnc11_bs47_bsp_a # VCI=644

2.4. User Environment

3. BSM Package Configuration

3.1. Application Configuration

The S/W Packages that are needed to operate BMS are configured with the following: ~/Package/DATA, ~/Package/DATA/PLD and ~/Package/exec. Files that are included in each directory are as follows:

Table 3.1-1 ~/Package/exec

File name	Description
bim	A BMS initial operation shell program that runs check_bim, sigkill, rmipc, and bsm in order.
bsm	Execution file that runs BMS application programs (DCI, dci_console, BDNL, mmi, stmx, smmx, tsmx, trmx, cdmx, and scmx)
check_bim	Execution file that prevents the operator from rerunning bim which is already run by mistake.
rmipc	Shell program that deletes unnecessary Message Queue, Semaphores and Shared Memory before BSM programs are run.
sigkill	Execution file that terminates application programs which are activated before BMS application programs are run
BDNL	Execution file that transmits the OS, execution code, PLD, etc when each processor is initially activated.
DCI, dci_console	Execution file that provides interface between BMS Workstation and lower level BTS and BSC.
cdmx	Execution file that manages parameter information and configuration information
scmx	Manages No.7 related information
smmx	Collects and manages the statistical data

stmx	Execution file that manages the processor and device state.
trmx	Execution file that informs the operator of problems in processor and device in a alarm/ fault format when detecting them
tsmx	Execution file that informs test results to the operator after conducting a test.
mmi	Provides interface between the operator and the application program.
cmdanal	Application program that checks the command input by the user. If problems are not found, it transmits the command to the corresponding process, receives the results, and then transmits them to the mmcmmsg block.
mmcmmsg	Application program that formats data from cmdanal or other application programs and transmits them to output-related process (outerm, prnman).
deadlock	Processor that detects the deadlock state for process that indefinitely seizes queue resources and solve the problem.
omdmmc	As an application program which is run by mmi, it processes the user management command.
garbage	Process that finds the message that lost its destination or does not have any destination among the messages that are stacked in the queue within the mmi.
prnman	Application program that outputs data received from mmcmmsg to the printer
pcsnet	Processor that runs the BMS client programs.
manager	Processor that manages entire GUI processors.
manager.client	As a manager that operates on the client side, it is distinguished from the processor on the server side.
client	As a processor that is operated on the client side, it transmits the command using TPC to the server and receives output messages.
server	Operated on the server side, it receives the command and sends the output message to the client by interworking with the client.
interm	It is in charge of the command line user interface among GUI, and displays command execution results.
outerm	It displays console messages that are from BMS among GUI.
neighbor	Application program that simplifies the complicated neighbor list input on the window.

STAREX-IS BSM Manual

stmGUI	Application program that provides BTS and BSC configuration in graphics by the hierarchy so the user can understand the system configuration and the current state.
dbms	Informix procedure that initializes the DB used by stmGUI.
pld_read	It allows to read PLD by the one tuple unit.
trace_ipc	When the Message Queue is full, it reads all the data in the Queue.
DATAPATH	Text file that indicates BTS and BSC application programs, loading data, and data needed for the screen configuration.
PLD_PATH	Text file that indicates the PLD Directory which is referred in the BMS as a status path.

4. BSM Command

4.1. User Interface Command

4.1.1. User Management Command

4.1.1.1. System Log-in

In order to manage the system and perform the desired work, one has to log in to the BSM system. Login can be achieved through ID and passwords given to each individual user. In order to log in to BSM, INTERM should be performed. At this time, one has to input ID in LOGIN on the window that is shown and put passwords in "PASSWD". Once the existing ID and the Passwords are input, it is changed to the state that can input the command.

If one does not log in for a while or time expires, INTERM should be performed again.

- Input the corresponding user ID in Command "LOGIN:"
- Input the corresponding password in "PASSWORD:".



Fig. 4.1-1 BSM System Login Window

4.1.1.2. LOG-OUT

When terminating the work in the BSM and then wanting to log in again as other ID, the user has to log out of his/her ID first. Once he/she logs out of the system and does not relog in, he/she cannot use the command any more.

After logout, the window for the command input disappears and it is not shown until relog-in is done.

- Command : LOG-OUT

- Input : LOG-OUT;

- Output

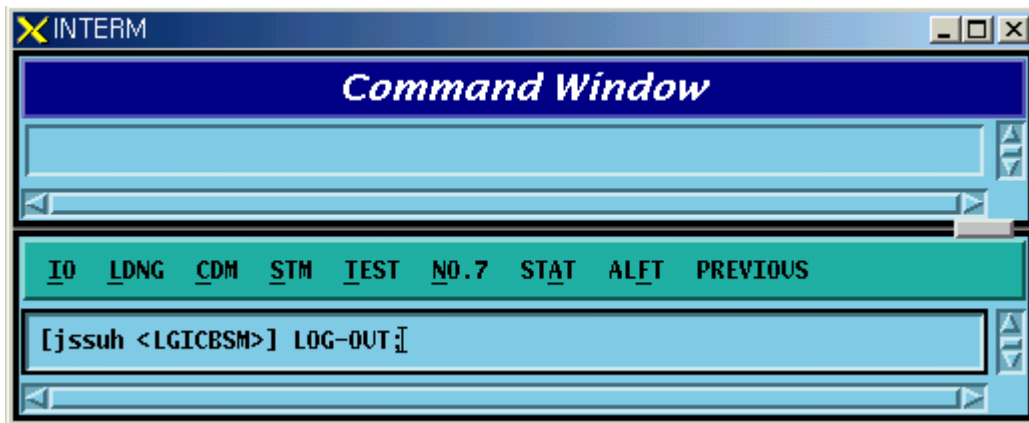


Fig. 4.1-2 Log-out

4.1.1.3. User Addition

To operate and maintain the system, the user should register ID. The right to register ID can be obtained from the manger in the first class. The newly registered ID is set identically with initial passwords and ID and for security reason, the password for the newly registered ID should be changed. The ID that is to be registered should be original. That is, it should not be overlapped with existing ones. It can be registered as the second or third class. ID should be within 15 letters.

- Command : ADD-USR:USR=a, CLS=b;
a : User ID [String]
b : Class [Number 2 or 3]
- Input : ADD-USER:USER=USER1,CLS=2;
- Output

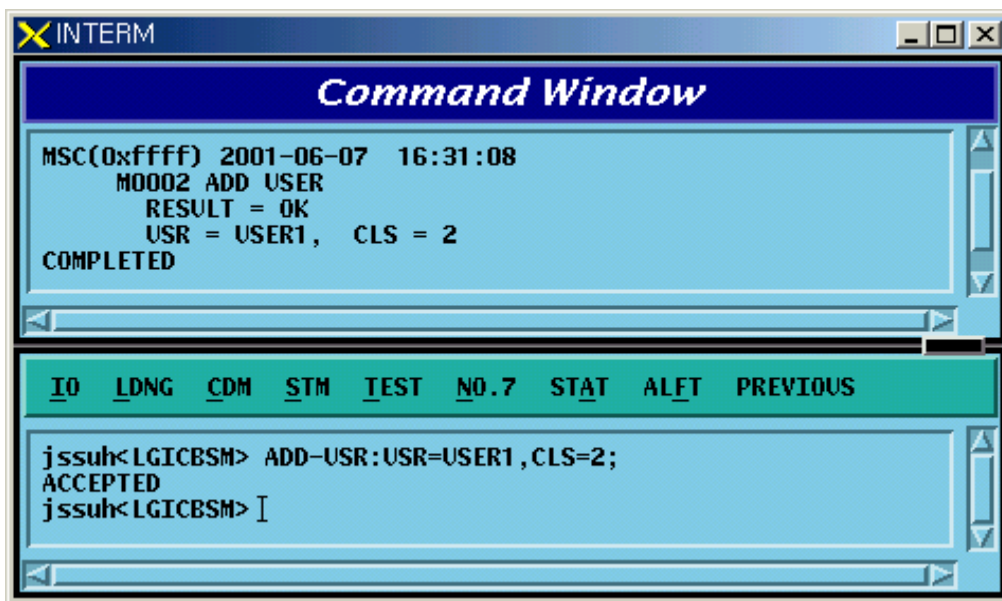


Fig. 4.1-3 User ID Register

- When the ID exists already

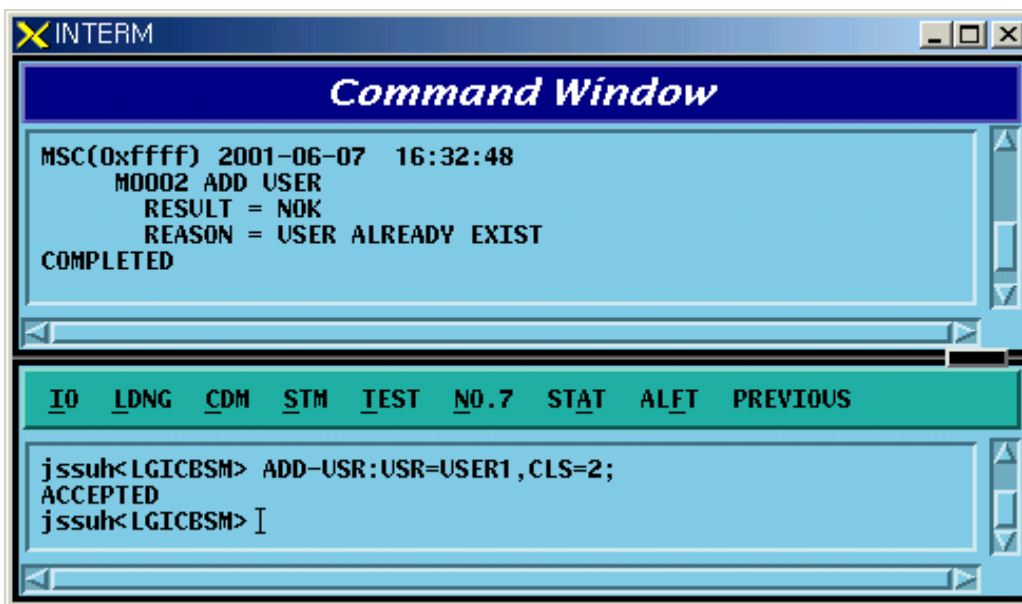


Fig. 4.1-4 Errors When Registering User ID

4.1.1.4. User Deletion

Delete one user ID among the IDs that are no longer used or unnecessary ID.

- Command : DEL-USR:USR=a;

a : User ID to be deleted [String]

- Input : DEL-USR:USR=USER1;
- Output

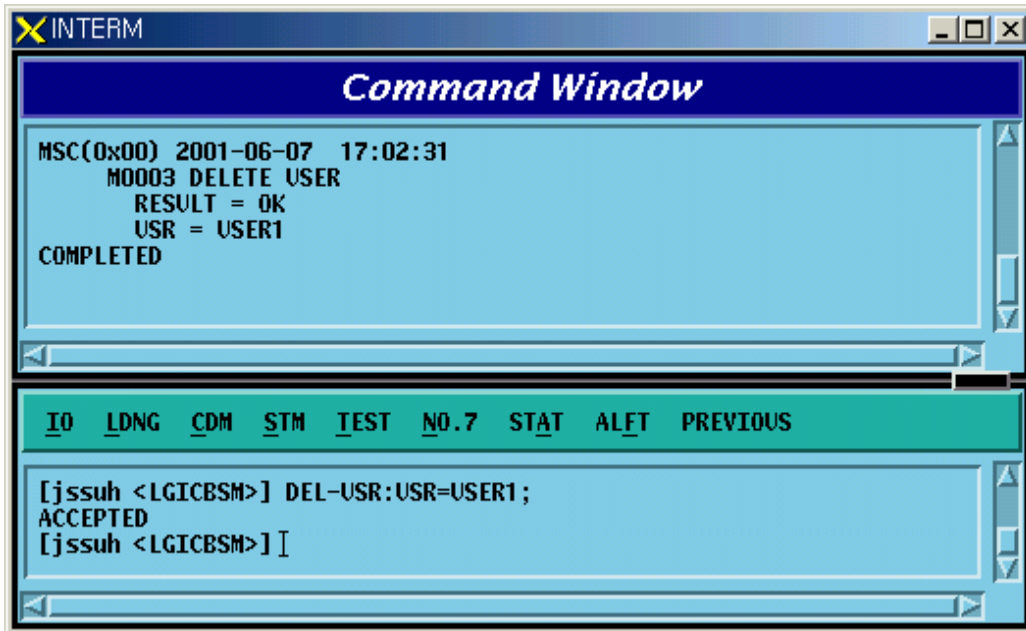


Fig. 4.1-5 User ID Deletion

- When deleting ID that does not exist

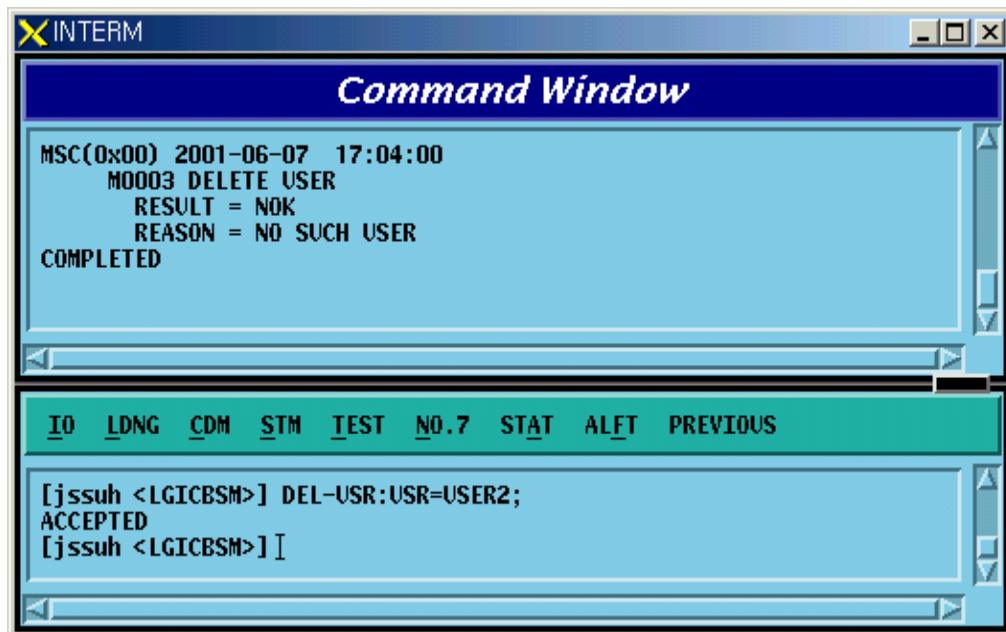


Fig. 4.1-6 Errors When Deleting User ID That Does Not Exist

- When deleting manager class ID

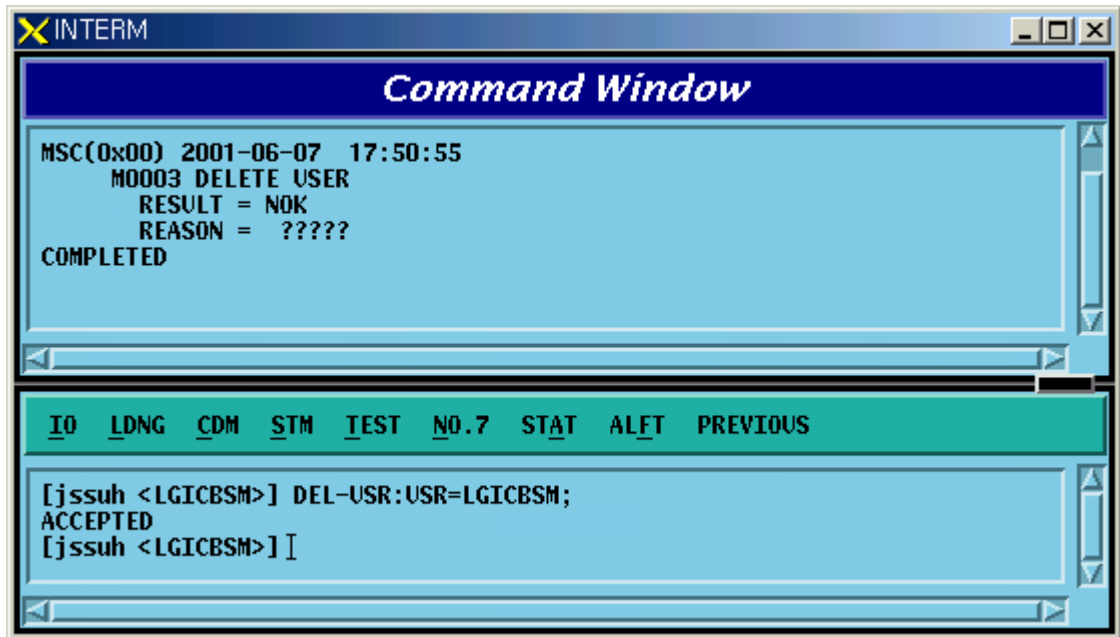


Fig. 4.1-7 Errors When Deleting the Manager Class ID

4.1.1.5. User Class Change

Broaden the range of the command or narrow it down by changing the use class of the corresponding user.

- Command CHG-USR-CLS:USR=a,CLS=b
a: User ID[String]
b: Class [2-3]
- Input CHG-USR-CLS:USR=USER1,CLS=3;
- Output

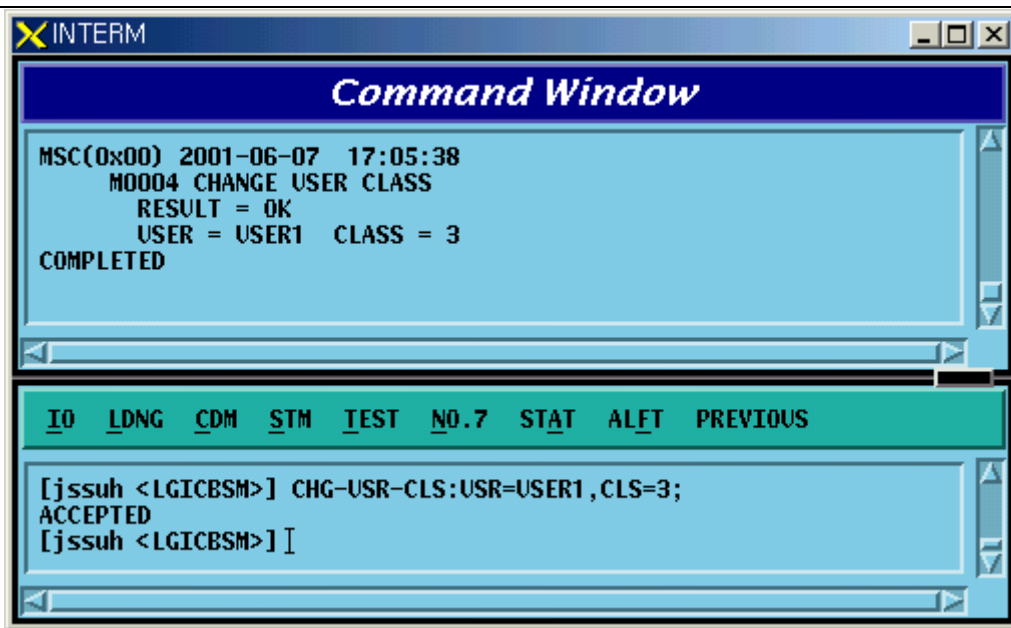


Fig. 4.1-8 User Class Change

- When changing the use class of the manager

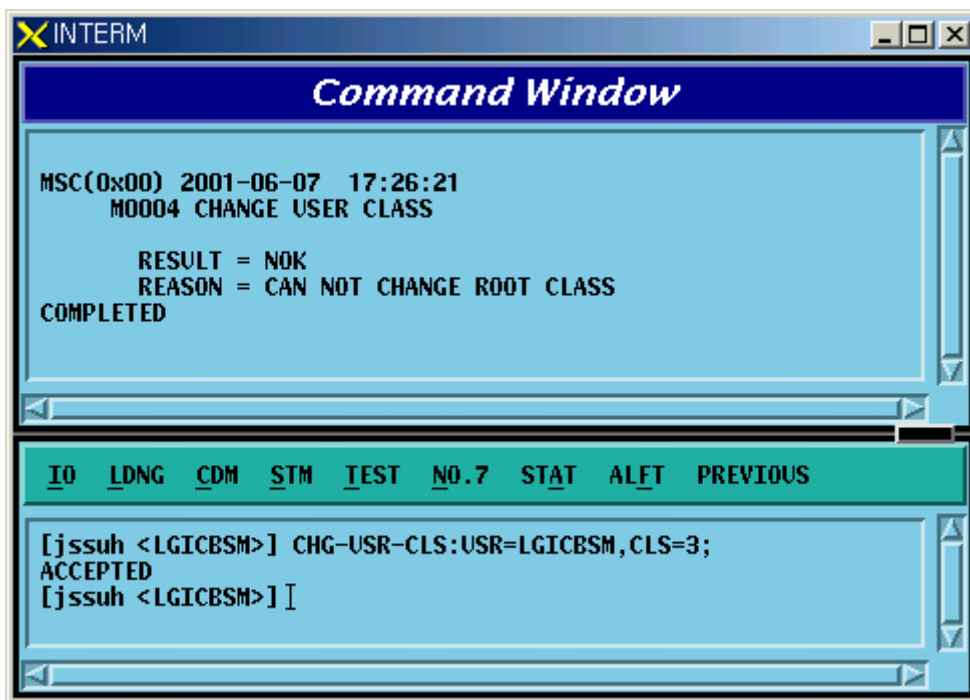


Fig. 4.1-9 Errors When Changing the Use Class of the Manager

4.1.1.6. User Information Display

Display registered User ID and class.

- Command DIS-USR-INFO[USR=a]
a: User ID[String]
- Input CHG-USR-INFO:USR=USER1;
- Output

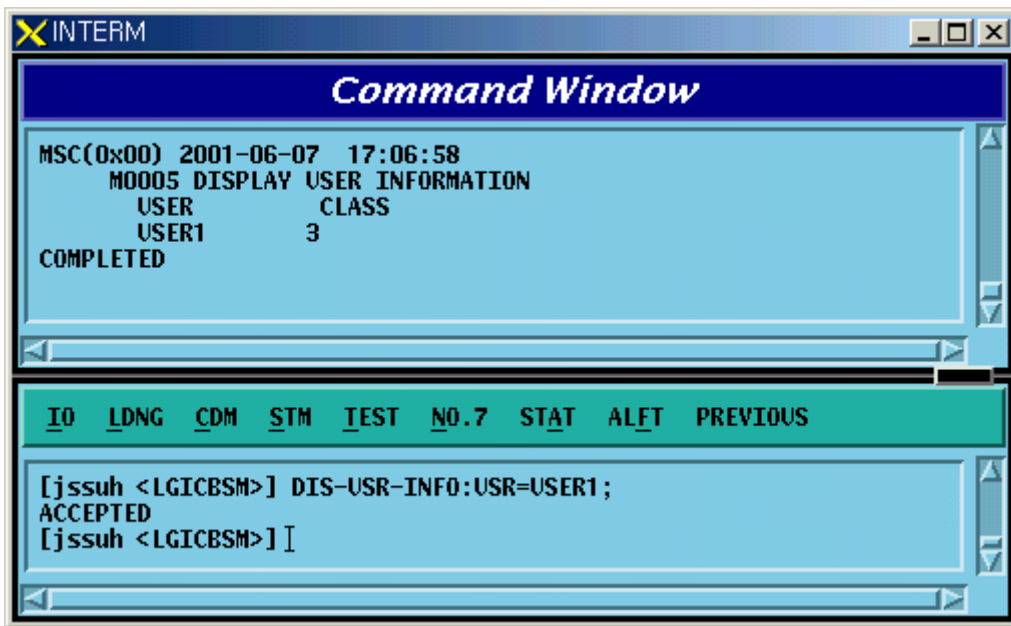


Fig. 4.1-10 User Information Display

4.1.1.7. User Password Change

Change ID and Password in use. In particular, since the ID of the first time registered user should be identical with the password, change the password as follows for security reasons.

- Command CHG-PWD
- Input CHG-PWD
- Output

Input the OLD PASSWORD and NEWPASSWORD one more time and check them.

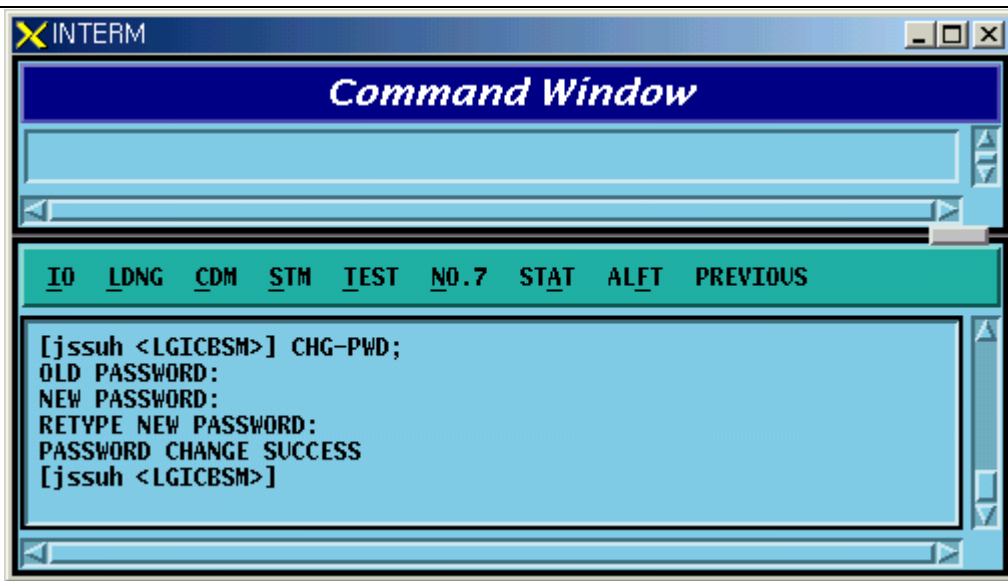


Fig. 4.1-11 User Password Change

4.1.2. Command Management Command

4.1.2.1. Command Class Modification

Modify the minimum class that can execute the registered command.

If the command class is n, one has to log in as ID that is more than n class to use this command.

- Command CHG-CMD-CLS:CRN=a,CLS=b
 a : Command Reference Number [0~9999]
 b : Class [1~3]
- Input CHG-CMD-CLS:CRN=0300,CLS=1
- Output

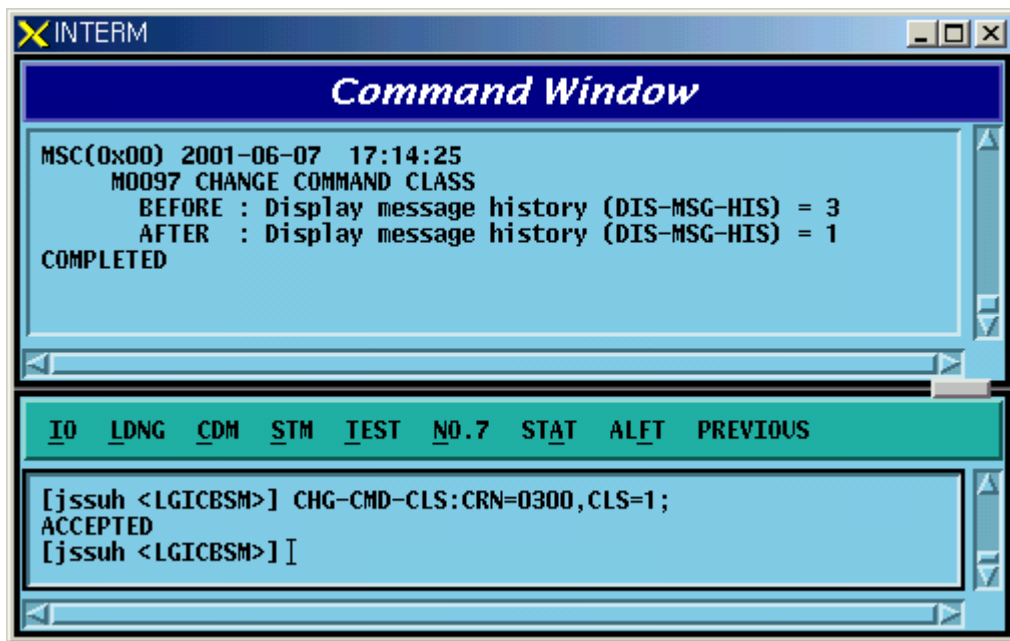


Fig. 4.1-12 Command Class Modification

4.1.2.2. Command Class Display

One can see the command of the corresponding class by designating the class that is desired to be displayed.

- Command DIS-CMD-CLS:CLS=a;
 a : Class [1~3]
- Input DIS-CMD-CLS:CLS=3;

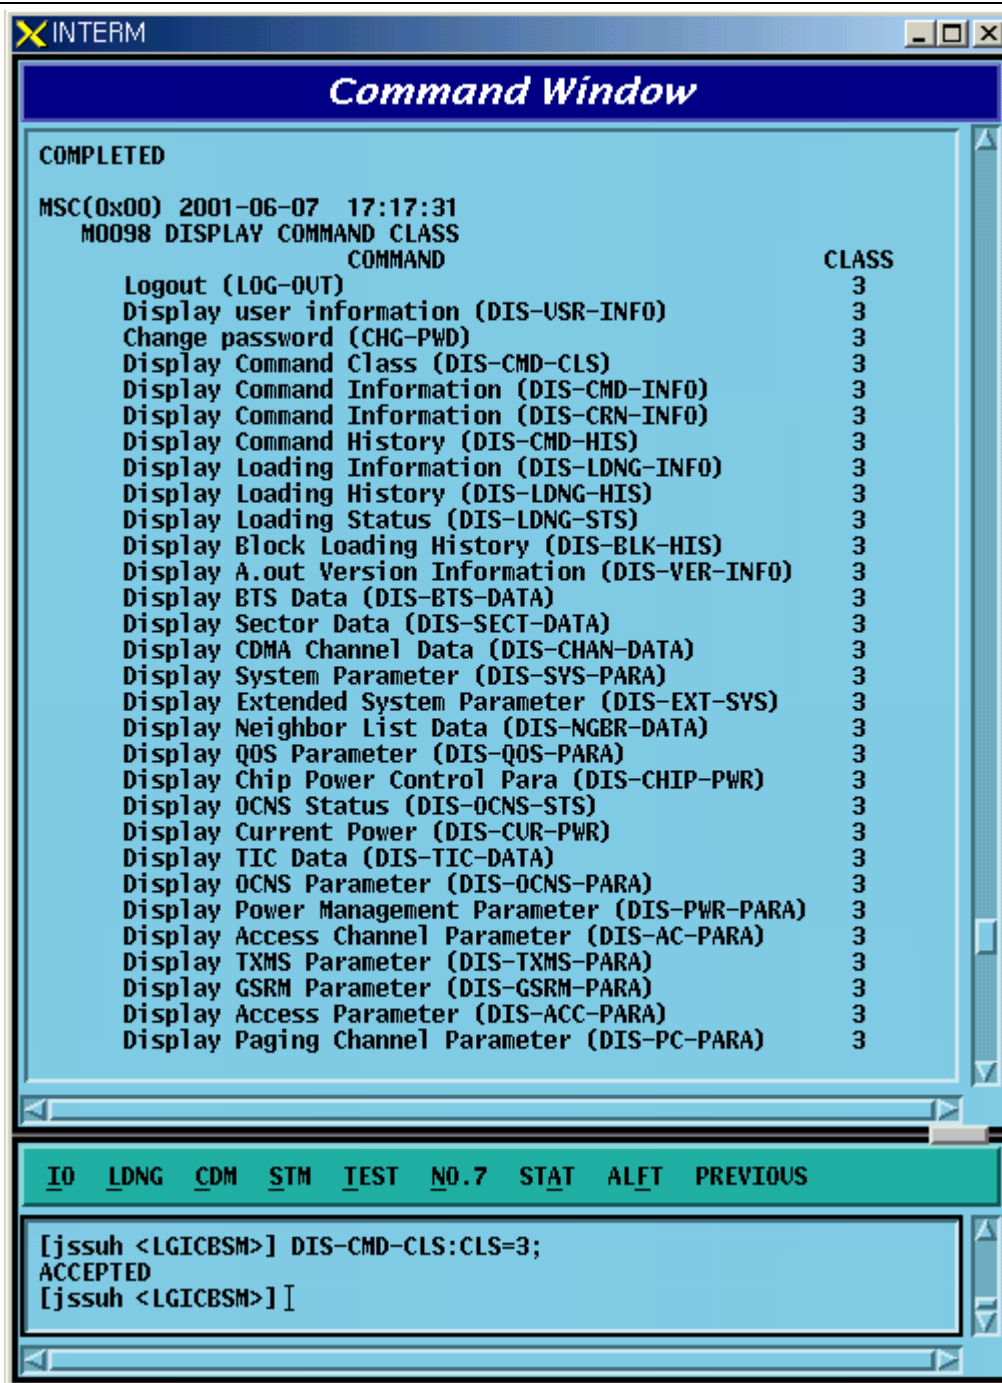


Fig. 4.1-13 Command Class Display

4.1.2.3. Command Information Display by Name

Display the syntax to use the information on the registered commands.

- Command DIS-CMD-INFO:VERB=a
a : Command [Note : The command discriminator is determined to be &]

- Input DIS-CMD-INFO:DIS&CMD&INFO;
- Output

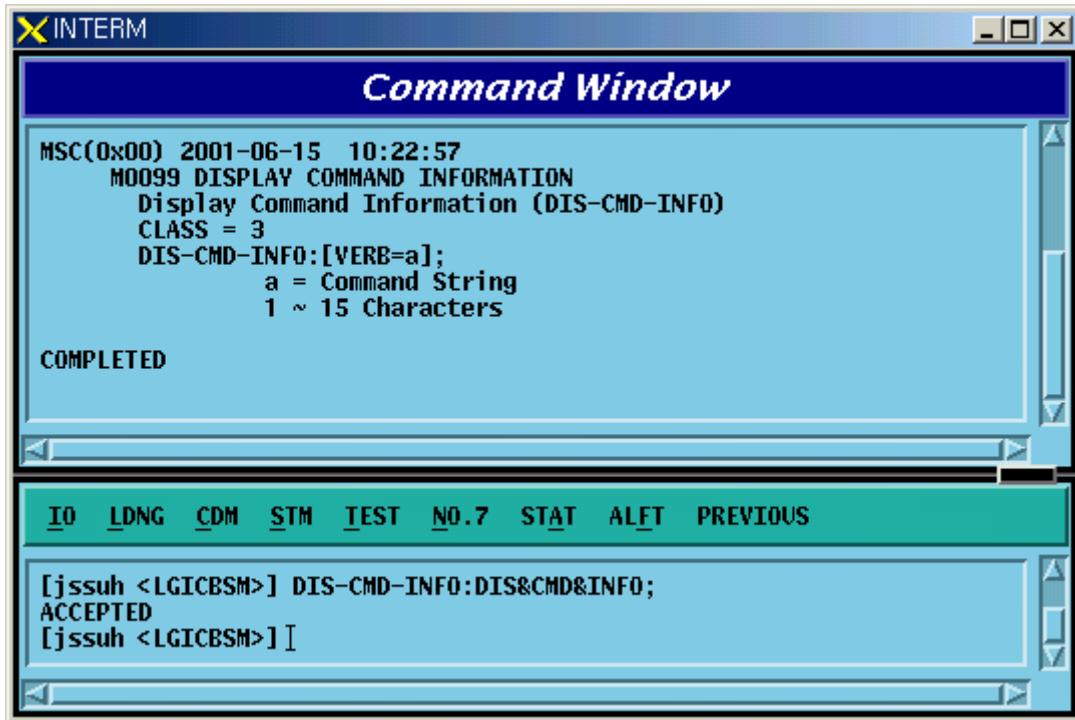


Fig. 4.1-14 Command Information Display by Name

4.1.2.4. Command Information by CRN

Display the command information by CRN which is designated for each command.

- Command DIS-CRN-INFO:CRN=a
a : Command Reference Number [0~9999]
- Input DIS-CRN-INFO:CRN=0200;
- Output

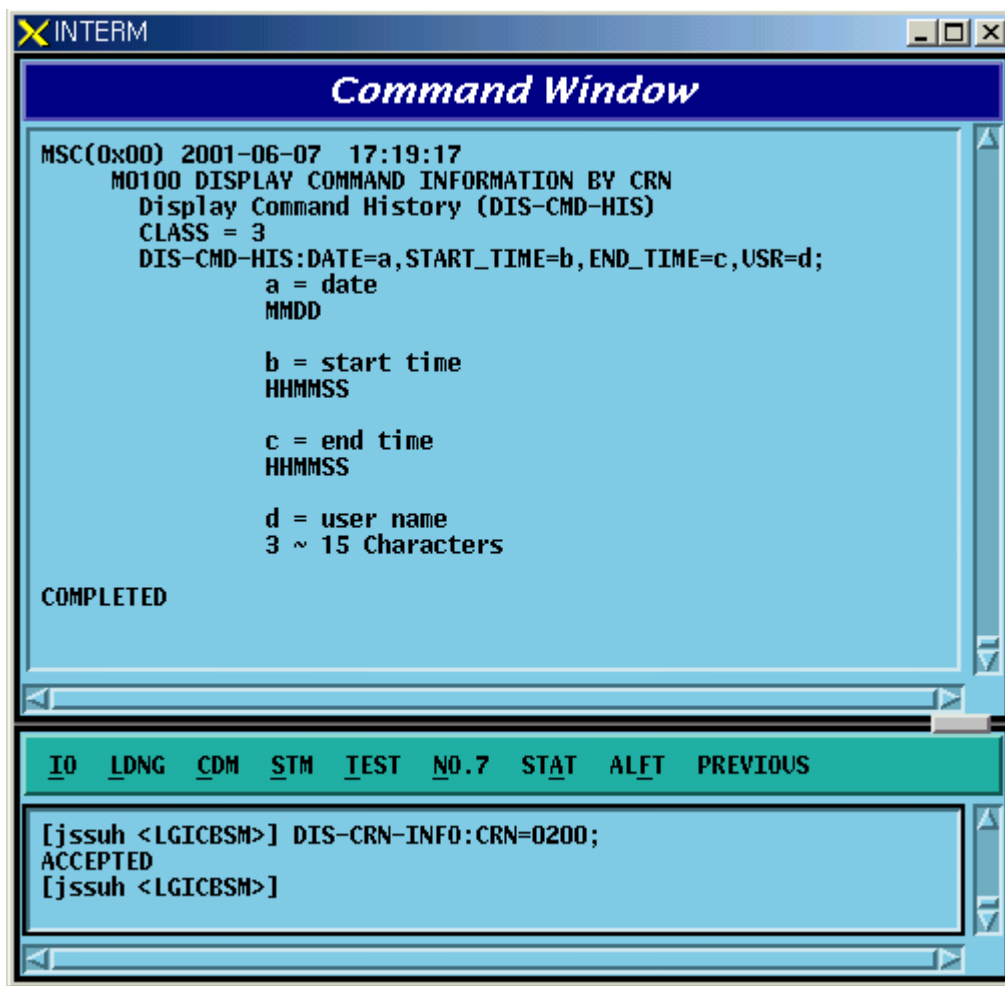


Fig. 4.1-15 Command Information Display by CRN

4.1.3. History Management Command

4.1.3.1. Command History Display

- Command DIS-CMD-HIS[:[DATE=a][,STM=b][,ETM=c][,USR=d]]

a : Date [MMDD]
 MM : Month [1-12]
 DD : Day [1-day last]

b : Start Time [HHMMSS]
 HH : Hour [00-24]
 MM : Min [00-60]
 SS : Sec [00-60]

c : End Time [HHMMSS]
 d : User ID [string]

- Input DIS-CMD-HIS:DATE=0625,STM=160000,ETM=180000
- Output

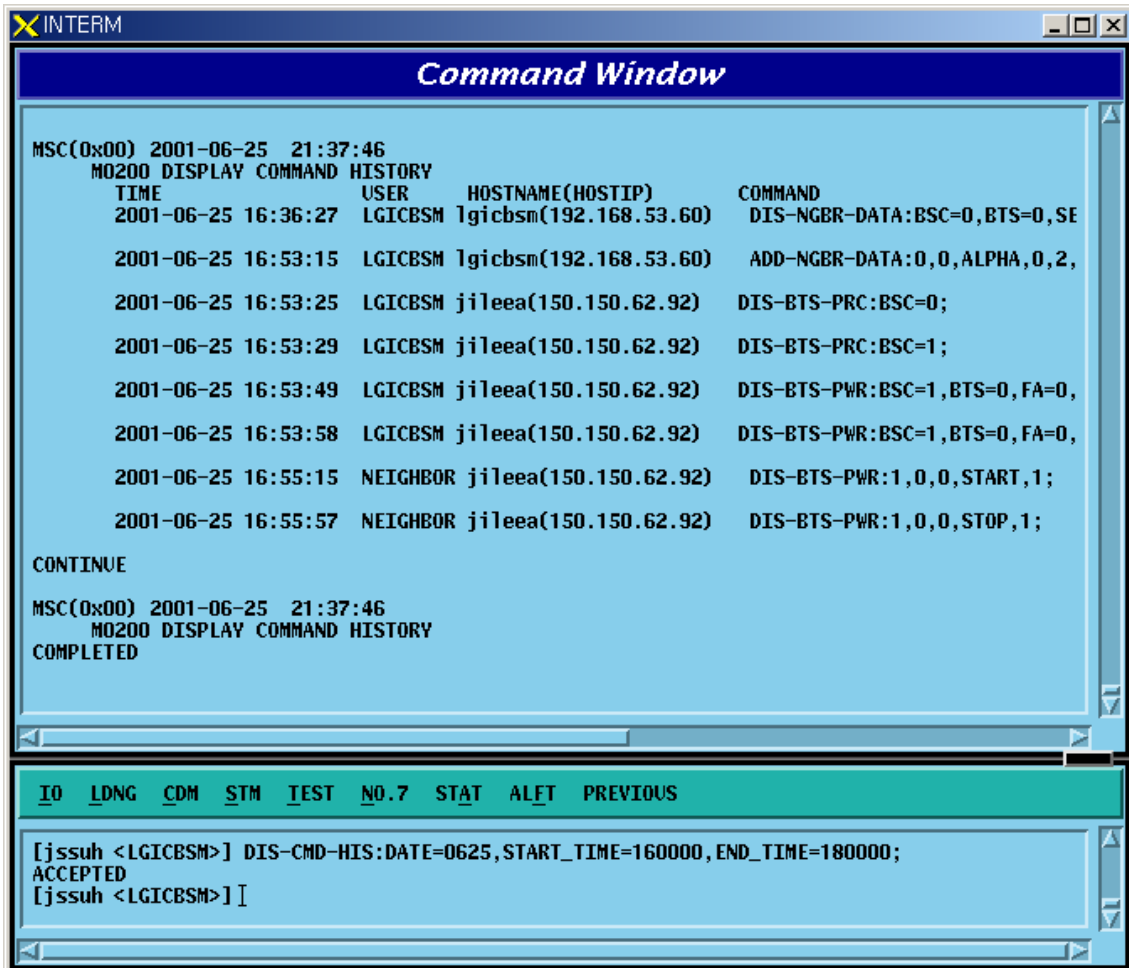


Fig. 4.1-16 Command History Display

4.1.3.2. Message History Display

- Command DIS-MSG-HIS:TYPE=a,[DATE=b],[START_TIME=c],[END_TIME=d],[START_BSC=e],[END_BSC=f],[START_BTSGRP=g],[END_BTSGRP=h],[START_BTSSUB=i],[END_BTSSUB=j],[PRN=k];
 a : Message Type [SYS, MMC, STS, FLT, ALM]
 SYS : system message
 MMC : MMC command
 STS : status message

FLT : fault message

ALM : alarm message

b : Date [MMDD]

MM : Month [1-12]

DD : Day [1-day last]

c : Start Time [HHMMSS]

HH : Hour [00-24]

MM : Min [00-60]

SS : Sec [00-60]

d : End Time [HHMMSS]

e : Start BSC number[0 ~ 127]

f : End BSC number[0 ~ 127]

g : Start BTS GRP number[0 ~ 47]

h : End BTS GRP number[0 ~ 47]

i : Start BTS SUB number[0 ~ 3]

j : End BTS SUB number[0 ~ 3]

k : Message number[0 ~ 9999]

- Input DIS-MSG-HIS:TYPE=MMC,DATE=0625,START_TIME=140000,
END_TIME=150000, START_BSC=0, [START_BTSGRP=0;

- Output

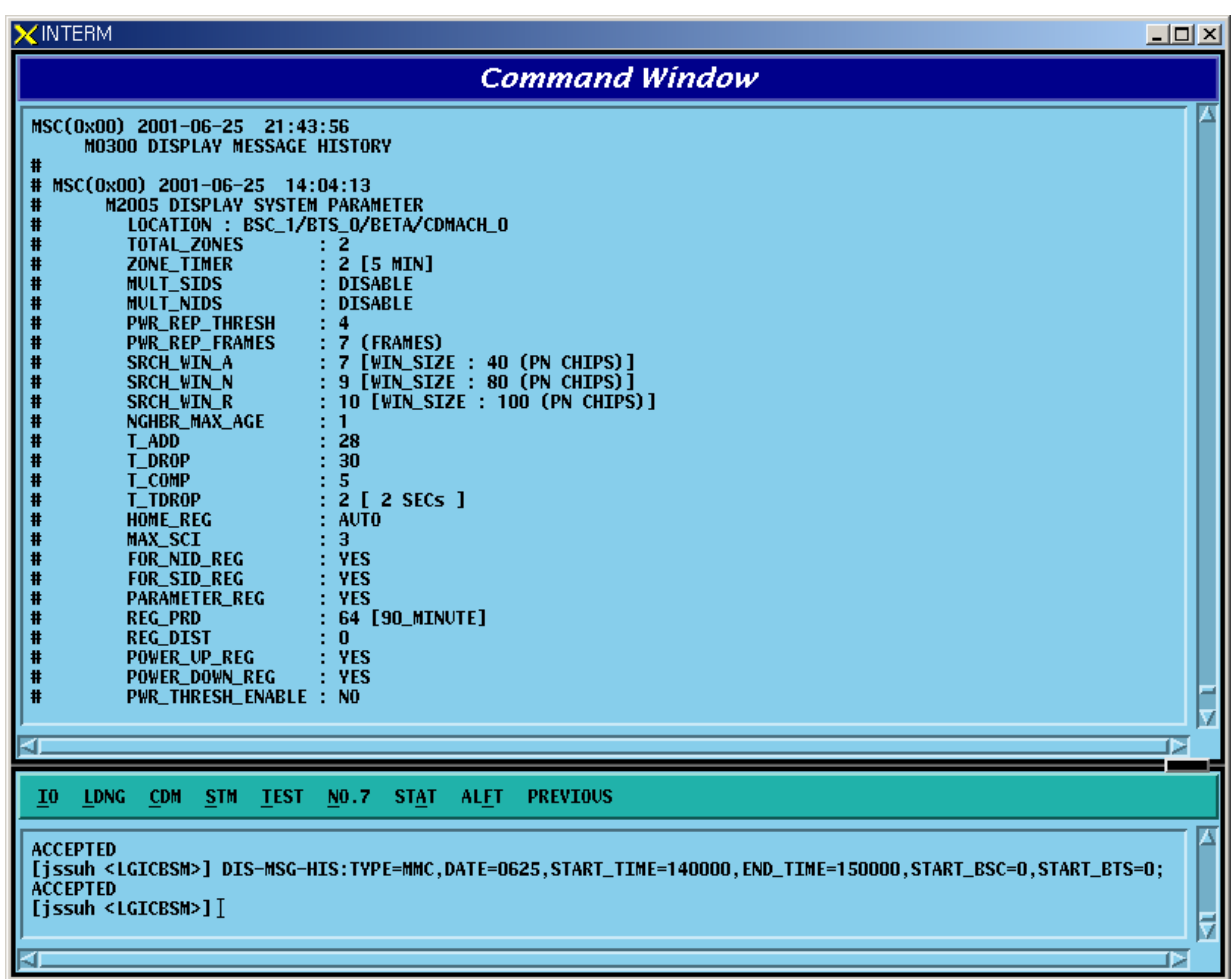


Fig. 4.1-17 Message History Display Start

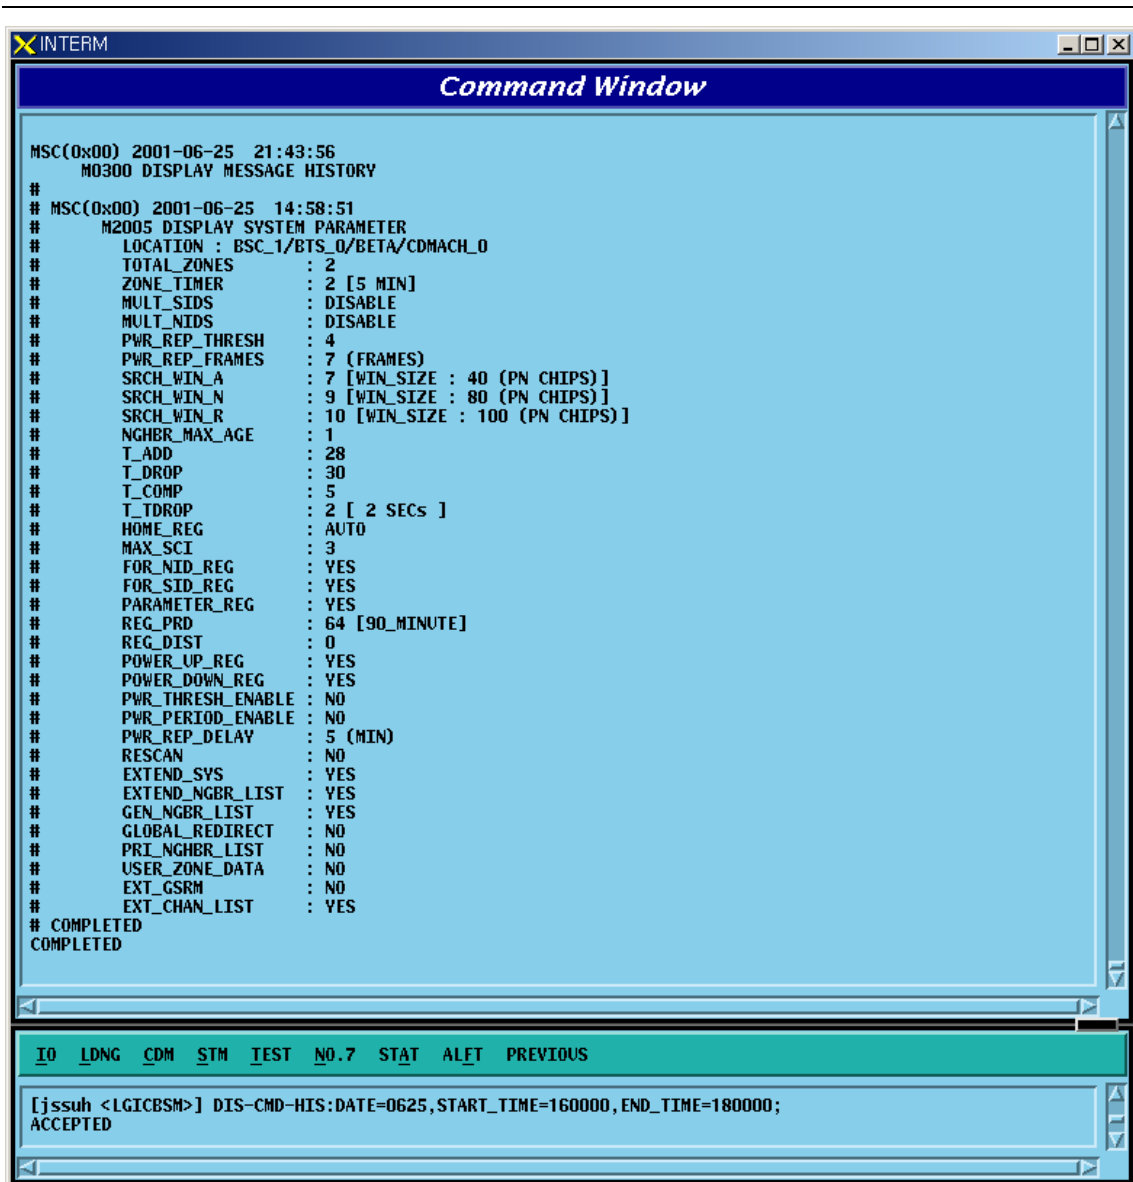


Fig. 4.1-18 Message History Display End

4.2. Loading Command

4.2.1. Loading Control Command

4.2.1.1. Block Loading (DOWN-BLK)

This command is used to download specific S/W blocks to target processors from BSM. The target processors that can designate the block loading are as follows: CNP, PNP, PCP, PMP, NCP, CCP, SCP, BSP, SMP, and VMP. This command is used to download blocks that need subloading to the lower level processors of the designated target processors.

- Command : DOWN-BLK:[BSC=a,][BTS=b,]PROC=c,FLASH=d,BLK=e;
 - a : BSC ID [Number 0~11]
 - b : BTS ID [Number 0~47]
 - c : Processor Name [CNP, PNP, PCP0, PCP1, PCP2, PMP0, PMP1, PMP2, NCP, CCP, SCP, BSP, SMP0, SMP1, SMP2, SMP3, SMP4, VMP0, VMP1, VMP2, VMP3, VMP4, VMP5, VMP6, VMP7]
 - d : Whether to update the flash memory [UPDATE or MAINTAIN]
 - e : Block Name [String]
- Input : DOWN-BLK:BSC=1,PROC=CCP,FLASH=MAINTAIN,BLK=rcpuser;

- Output :

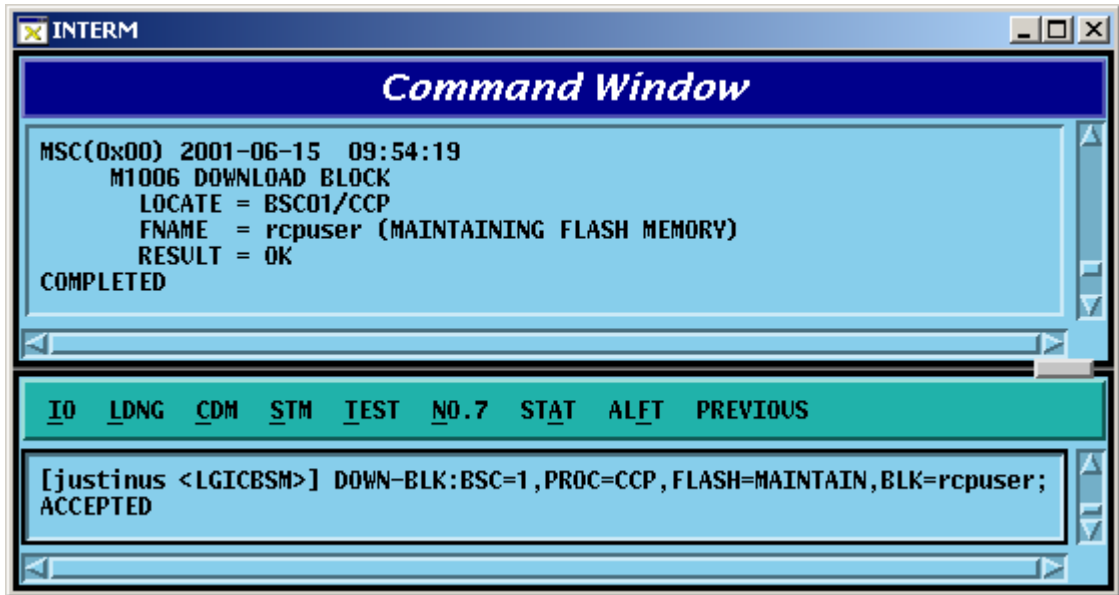


Fig. 4.2-1 Blocking Loading Performance Result

4.2.1.2. Activation Loading (ACT-BLK)

This command is used to download the specific S/W blocks from BSM to the target processor and then to activate them. The target processors that can designate the activation loading are CNP, PNP, PCP, PMP, NCP, CCP, SCP, BSP, ALP, SMP, and VMP. This command is used to download S/W blocks that are operated in the target processors and to replace blocks which are currently in operation by using the newly downloaded blocks.

- Command : ACT-BLK:[BSC=a,][BTS=b,]PROC=c,FLASH=d,
 BLK1=e[,BLK2=e][,BLK3=e];
 a : BSC ID [Number 0~11]
 b : BTS ID [Number 0~47]
 c : Processor Name[CNP, PNP, PCP0, PCP1, PCP2, PMP0,
 PMP1, PMP2, NCP, CCP, SCP, BSP,
 ALP, SMP0, SMP1, SMP2, SMP3, SMP4,
 VMP0, VMP1, VMP2, VMP3, VMP4,
 VMP5,
 VMP6, VMP7]
 d : Whether to Update Flash Memory [UPDATE or

MAINTAIN]

e : Block Name [String]

- Input : ACT-BLK:BSC=1,PROC=CCP,FLASH=UPDATE,BLK=ccp_cal;
- Output :

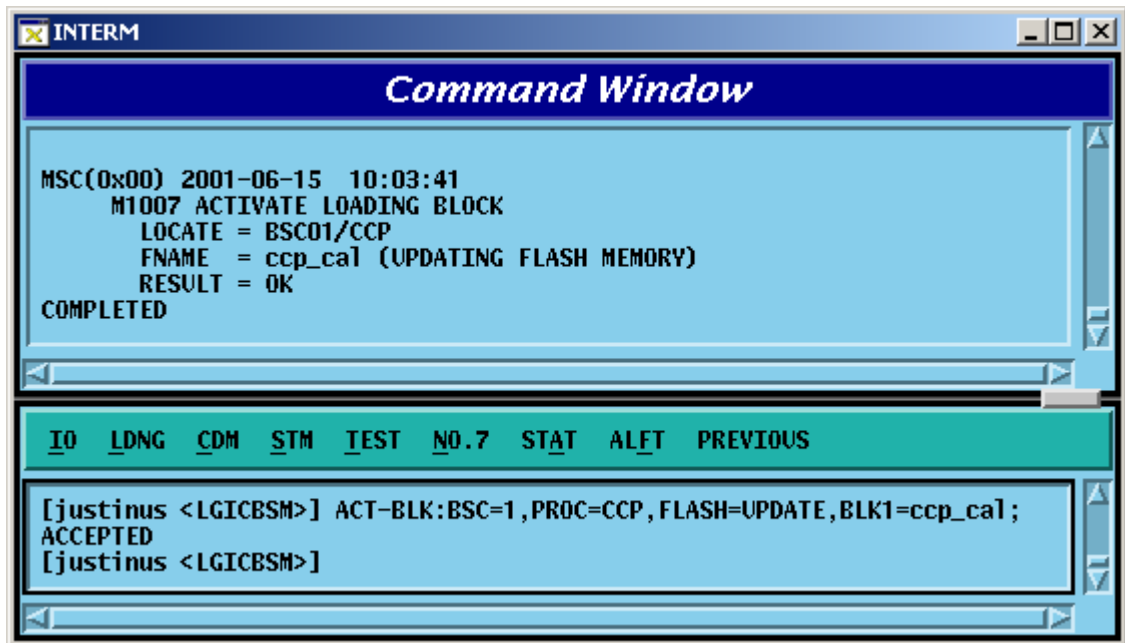


Fig. 4.2-2 Activation Loading Performance Result

4.2.1.3. Flash Memory Update (UPD-FLS)

The command to update Flash memory is used to designate memory update as MAINTAIN in the block loading and activation loading and then to record the following:

1) the blocks that are downloaded as a result of the block loading and 2) activation loading command results in the Flash Memory.

- Command : UPD-FLS:[BSC=a,][BTS=b,]PROC=c ;
 - a : BSC ID [Number 0~11]
 - b : BTS ID [Number 0~47]
 - c : Processor Name [CNP, PNP, PCP0, PCP1, PCP2, PMP0, PMP1, PMP2, NCP, CCP, SCP, BSP, ALP]
- Input : UPD-FLS:BSC=1,PROC=CCP;
- Output :

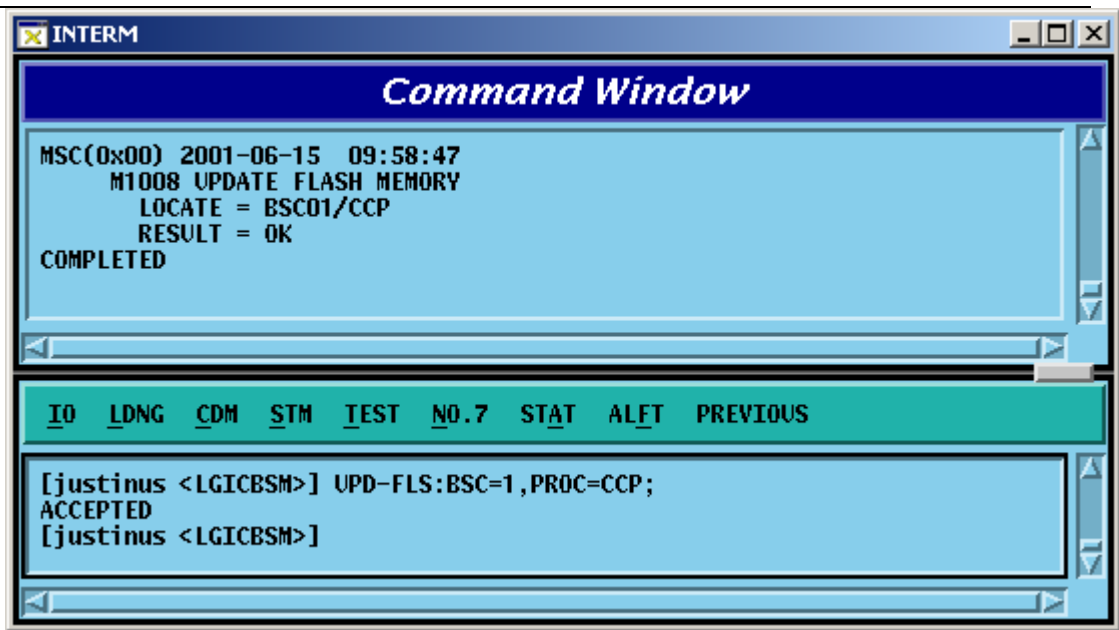


Fig. 4.2-3 Flash Memory Update Result

4.2.1.4. Processor Loading Request on the Standby Side (SBY-LDNG-PRC)

It is the function that requests the loading to standby side of the processors. The target processors that can perform the Standby loading should be duplicated and both A and B sides should be normally operated. (If they are not duplicated or abnormal, the Standby loading cannot be performed.)

The target processors that can request the processor loading on the standby side are as follows: CNP, PNP, PCP, PMP, NCP, CCP, SCP, and BSP.

- Command : SBY-LDNG-PRC:[BSC=a,][BTS=b,]PROC=c ;
 - a : BSC ID [Number 0~11]
 - b : BTS ID [Number 0~47]
 - c : Processor Name [CNP, PNP, PCP0, PCP1, PCP2, PMP0, PMP1, PMP2, NCP, CCP, SCP, BSP]

4.2.1.5. Processor Switching-over (ACT-PRC)

The command to switch over the processors is switch over the Active Side of the target processors which operate as NORM(OLD) and NORM(NEW) after performing standby loading.

- Command : ACT-PRC:[BSC=a,][BTS=b,]PROC=c ;
a : BSC ID [Number 0~11]
b : BTS ID [Number 0~47]
c : Processor Name [CNP, PNP, PCP0, PCP1, PCP2, PMP0,
PMP1, PMP2, NCP, CCP, SCP, BSP]

4.2.1.6. Processor Copy (COPY-PRC)

The command to copy processors which performed the standby loading and then operate as NORM(OLD) and NORM(NEW) to the Block that received the Standby loading.

- Command : COPY-PRC:[BSC=a,][BTS=b,]PROC=c ;
a : BSC ID [Number 0~11]
b : BTS ID [Number 0~47]
c : Processor Name [CNP, PNP, PCP0, PCP1, PCP2, PMP0,
PMP1, PMP2, NCP, CCP, SCP, BSP]

4.2.1.7. Firmware Loading (LOAD-FIRM)

The command to load the firmware is used to download the firmware data to fuse to the target processors or processors that serve as device servers.

- Command : LOAD-FIRM :[BSC=a,] [BTS=b,] PROC_L1=c
[,PROC_L2=d], FILENAME=e;
a : BSC ID [Number 0~11]
b : BTS ID [Number 0~47]
c : Level 1 Processor [CNP, PNP, PCP0, PCP1, PCP2, PMP0,
PMP1, PMP2, NCP, CCP, SCP, BSP]
d : Level 2 Processor [ASCA, ASIA0, ASIA1, ASIA2, ASIA3,
ENP,
CRP, PIP0, PIP1, PIP2, PIP3, PIP4, PIP5,
PIP6, PIP7, PIP8, PIP9, PIP10, ALP,
SMP0,
SMP1, SMP2, SMP3, SMP4, VMP0, VMP1,
VMP2, VMP3, VMP4, VMP5, VMP6,

VMP7,

LICA0, LICA1, LICA2]

e : Firmware Data File Name [String]

4.2.1.8. Firmware Update (UPD-FIRM)

After downloading the firmware data to fuse to target processor or processors that serve as the device servers using the firmware loading command, it downloads or fuse firmware data to target processors to devices using the firmware update command.

- Command : UPD-FIRM : [BSC=a] [,BTS=b] ,PROC_L1=c [,PROC_L2=d] [,PROC_L3=e] [,SIDE=f] ,FILENAME=g ,TYPE=h;
a : BSC ID [Number 0~11]
b : BTS ID [Number 0~47]
c : :Level 1 Processor [CNP, PNP, PCP0, PCP1, PCP2, PMP0, PMP1, PMP2, NCP, CCP, SCP, BSP]
d : Level 2 Processor [ASCA, ASIA_ALL, ASIA0, ASIA1, ASIA2, ASIA3, ENP, CRP, PIP_ALL, PIP0, PIP1, PIP2, PIP3, PIP4, PIP5, PIP6, PIP7, PIP8, PIP9, PIP10, ALP, SMP0, SMP1, SMP2, SMP3, SMP4, VMP0, VMP1, VMP2, VMP3, VMP4, VMP5, VMP6, VMP7, LICA_ALL, LICA0, LICA1, LICA2]
e : Level 3 Processor [ALMA_ALL, ALMA0, ALMA1, ALPA_ALL, ALPA0_0, ALPA0_1, ALPA0_2, ALPA0_3, ALPA0_4, ALPA1_0, ALPA1_1, ALPA1_2, ALPA1_3, ALPA1_4, SLP_ALL, SLP0, SLP1, SLP2, SLP3, SLP4, SLP5, SLP6, SLP7, SLP8, SLP9, SLP10, SLP11, SLP12, SLP13, SLP14, SLP15, SLP16, SLP17, SLP18, SLP19, VCP_ALL, VCP0, VCP1, VCP2, VCP3,

VCP4,
VCP5, VCP6, VCP7, VCP8, VCP9, VCP10,
VCP11, VCP12, VCP13, VCP14, VCP15]
f : Side Information [A_SIDE, B_SIDE, BOTH]
g : Firmware Data File Name [String]
h : Firmware Type [BOOTER_FW, CPLD_FW]

4.2.2. Loading Information Display Command

4.2.2.1. Loading Information Display (DIS-LDNG-INFO)

It is the function that displays the loading information of specific processor.

- Command : DIS-LDNG-INFO:[BSC=a,][BTS=b,]PROC=c ;
a : BSC ID [Number 0~11]
b : BTS ID [Number 0~47]
c : Processor Name [CNP, PNP, PCP0, PCP1, PCP2, PMP0,
PMP1, PMP2, NCP, CCP, SCP, BSP,
ALP, SMP0, SMP1, SMP2, SMP3, SMP4,
VMP0, VMP1, VMP2, VMP3, VMP4,
VMP5,
VMP6, VMP7, RCP0, RCP1, RCP2, RCP3,
RCP4, RCP5, RCP6, RCP7, RCP8, RCP9]
- Input : DIS-LDNG-INFO:BSC=1,PROC=CCP;
- Output :

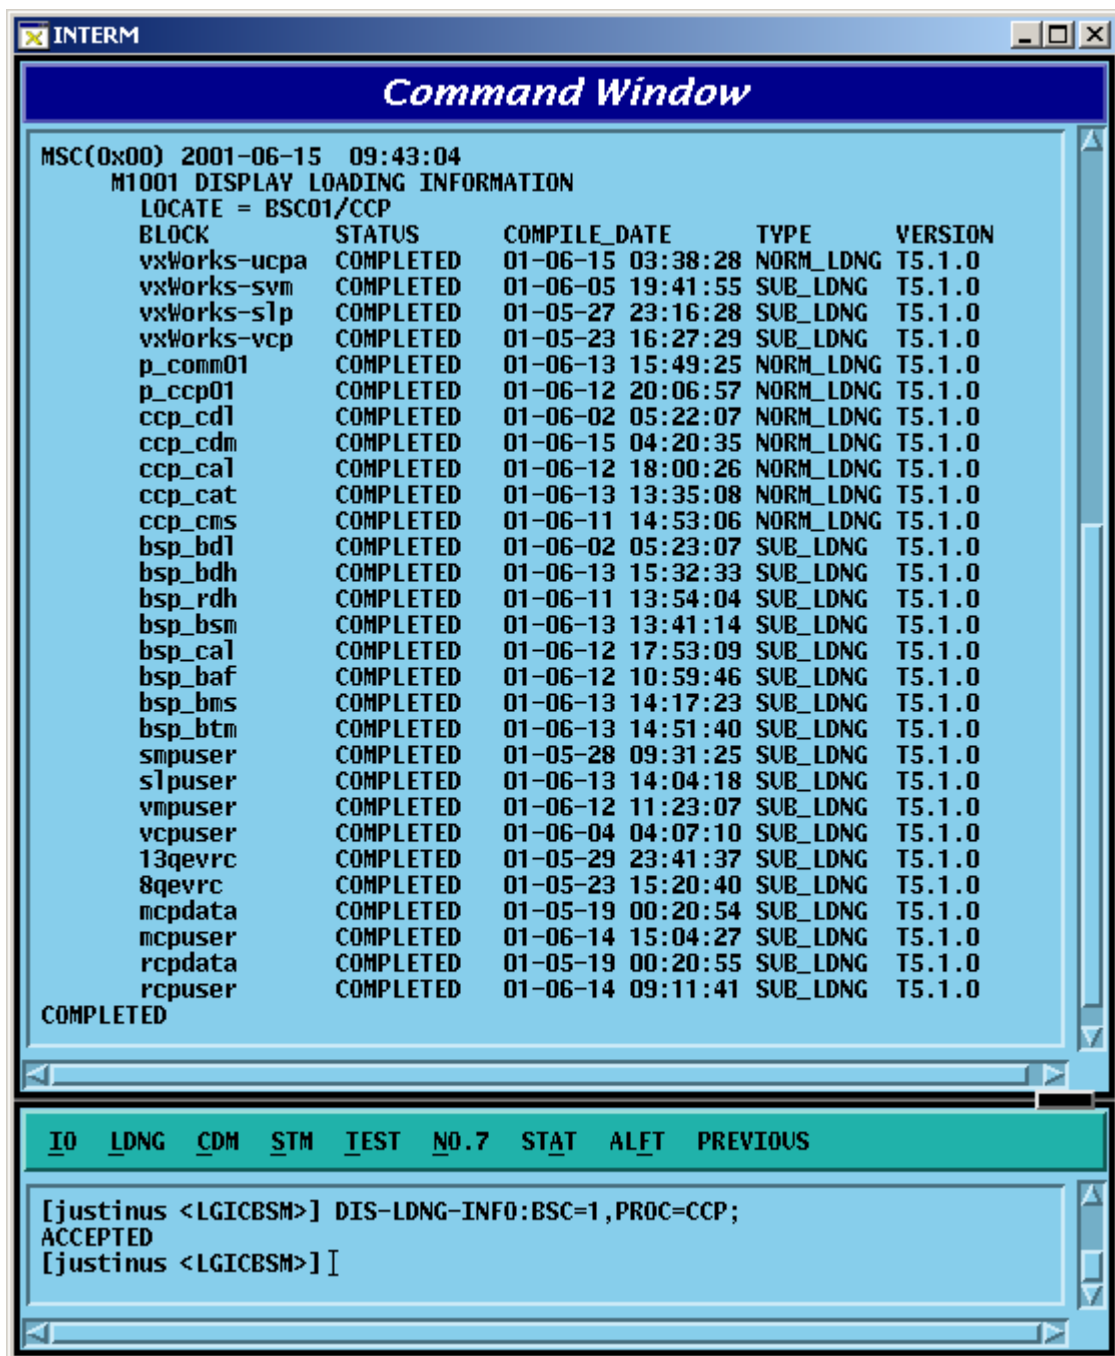


Fig. 4.2-4 Loading Information Display Command Execution Result

4.2.2.2. Loading History Display (DIS-LDNG-HIS)

It is the function that displayed up to 30 of the latest loading history of the specific processor.

- Command : DIS-LDNG-HIS:[BSC=a,][BTS=b,][PROC=c] ;
 - a : BSC ID [Number 0~11]
 - b : BTS ID [Number 0~47]
 - c : Processor Name (When deleting processor names, the entire processors are displayed)
 - [CNP, PNP, PCP0, PCP1, PCP2, PMP0, PMP1, PMP2, NCP, CCP, SCP, BSP, ALP, SMP0, SMP1, SMP2, SMP3, SMP4, VMP0, VMP1, VMP2, VMP3, VMP4, VMP5, VMP6, VMP7, RCP0, RCP1, RCP2, RCP3, RCP4, RCP5, RCP6, RCP7, RCP8, RCP9]
- Input : DIS-LDNG-INFO:BSC=1,PROC=NCP;
- Output :

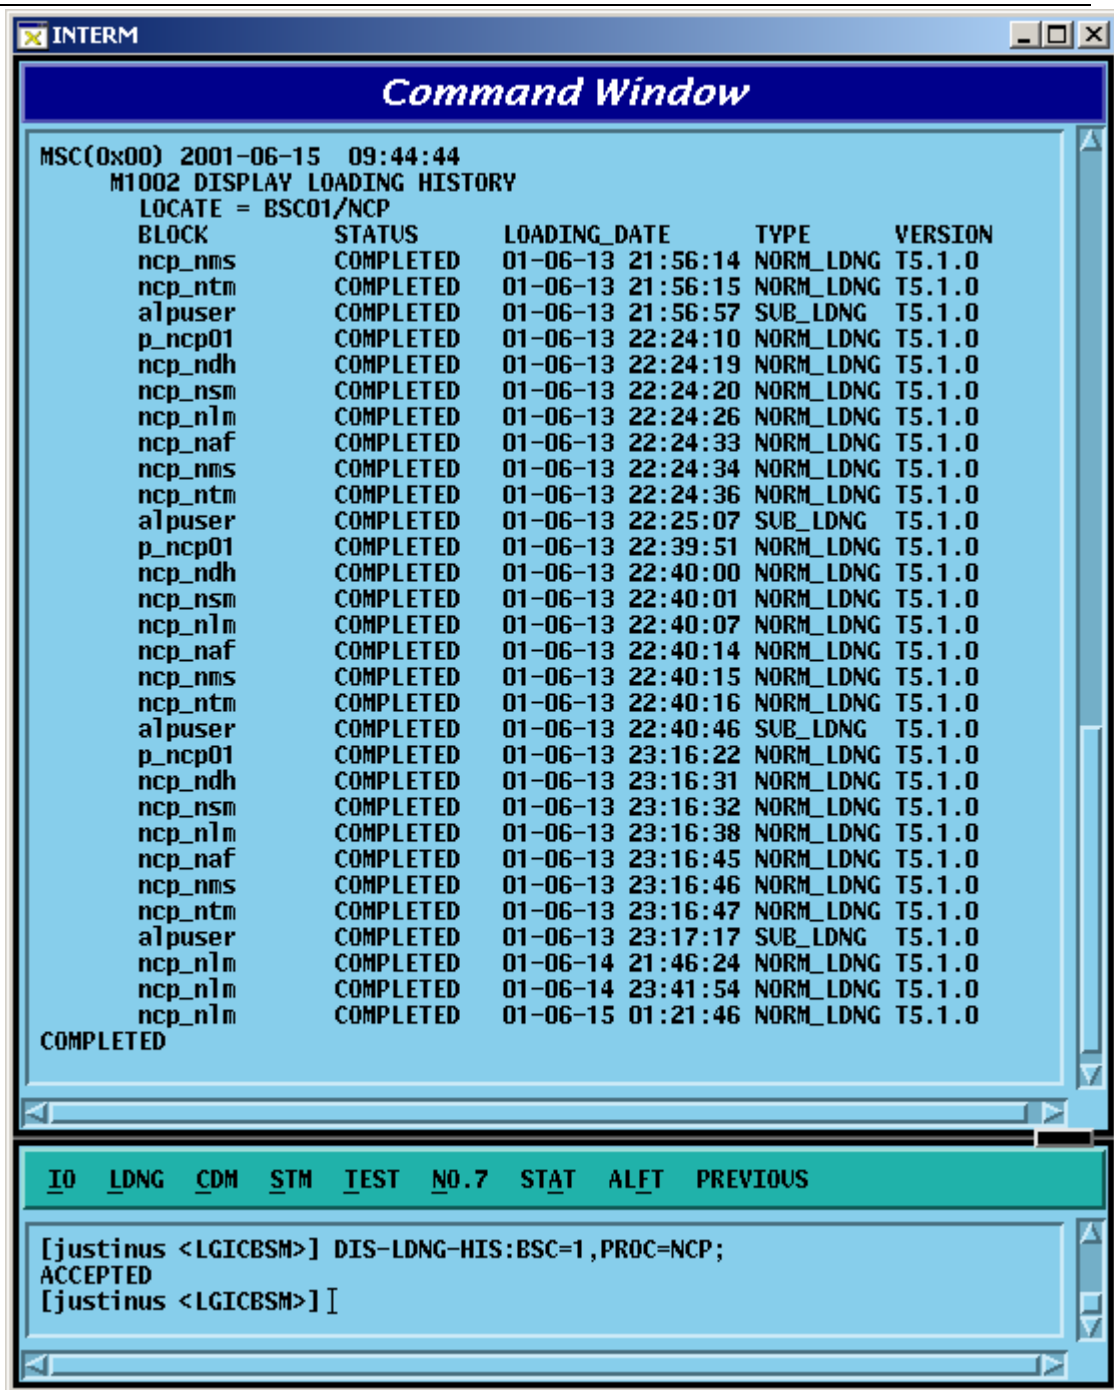


Fig. 4.2-5 Loading History Display Function Execution Result

4.2.2.3. Block Loading History Display (DIS-BLK-HIS)

It is the function that displays up to 30 of the latest block loading history of the specific processors.

- Command : DIS-BLK-HIS:[BSC=a,][BTS=b,]PROC=c ;
 - a : BSC ID [Number 0~11]
 - b : BTS ID [Number 0~47]
 - c : Processor Name [CNP, PNP, PCP0, PCP1, PCP2, PMP0,
PMP1, PMP2, NCP, CCP, SCP, BSP,
SMP0,
SMP1, SMP2, SMP3, SMP4, VMP0, VMP1,
VMP2,VMP3,VMP4,VMP5,VMP6,VMP7]
- Input : DIS-LDNG-INFO:BSC=1,BTS=0,PROC=BSP;
- Output :

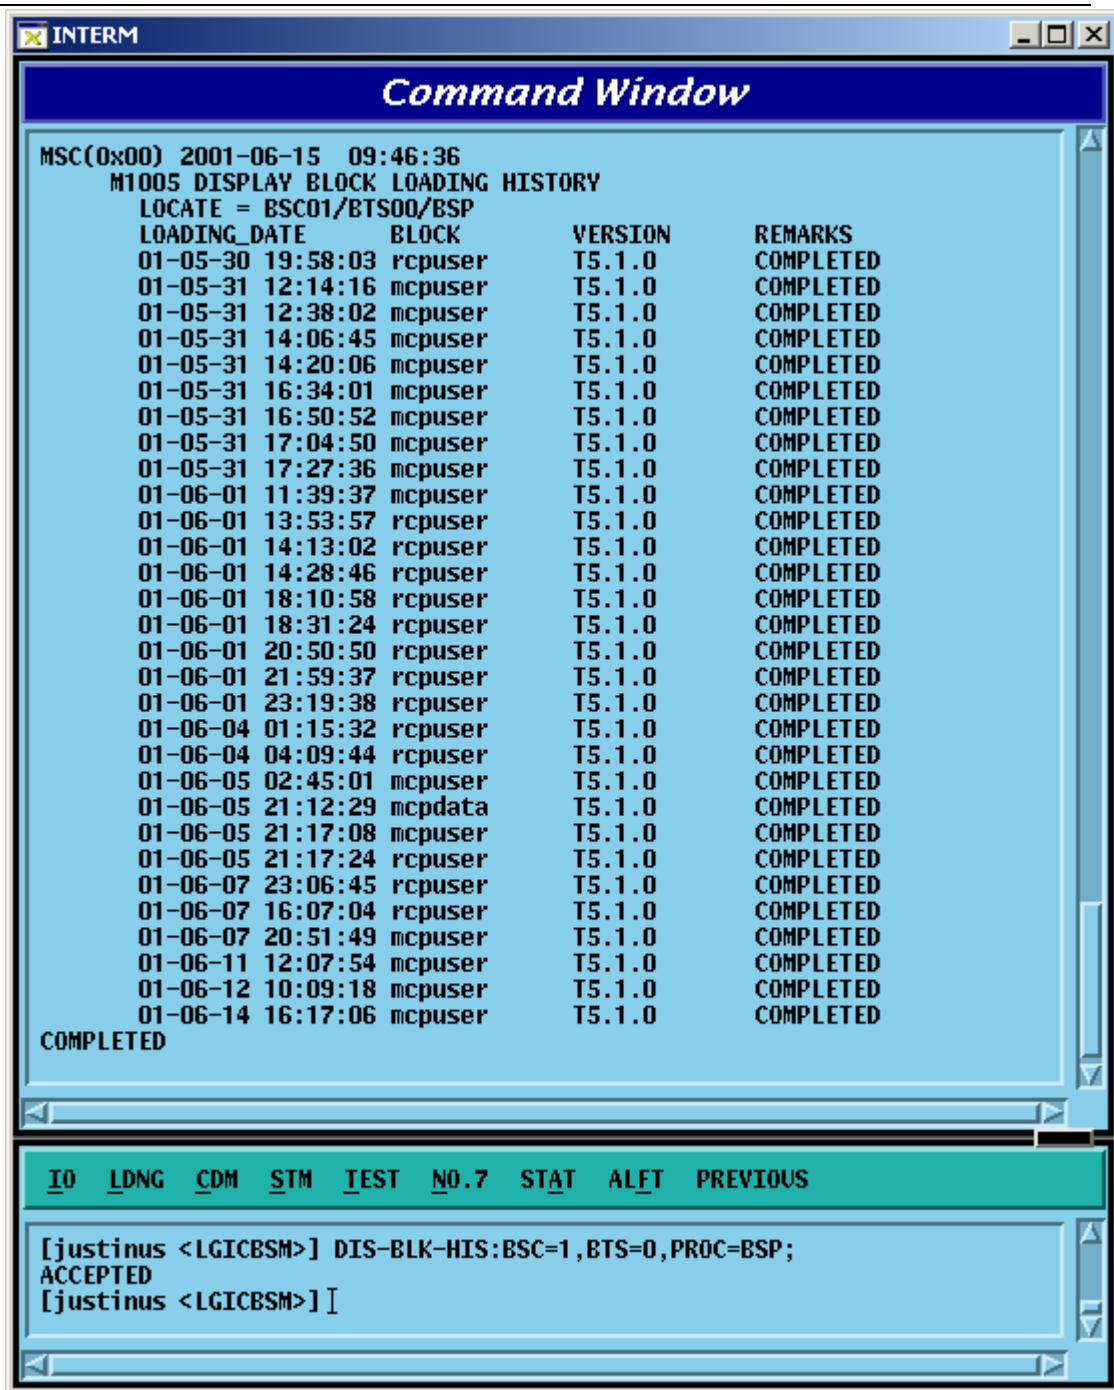


Fig. 4.2-6 Block Loading History Display Result

4.2.2.4. Loading State Display (DIS-LDNG-ST5)

It is the function that displays the information on the processor that is performing downloading.

- Command : DIS-LDNG-STG;
- Input : DIS-LDNG-STG;
- Output :

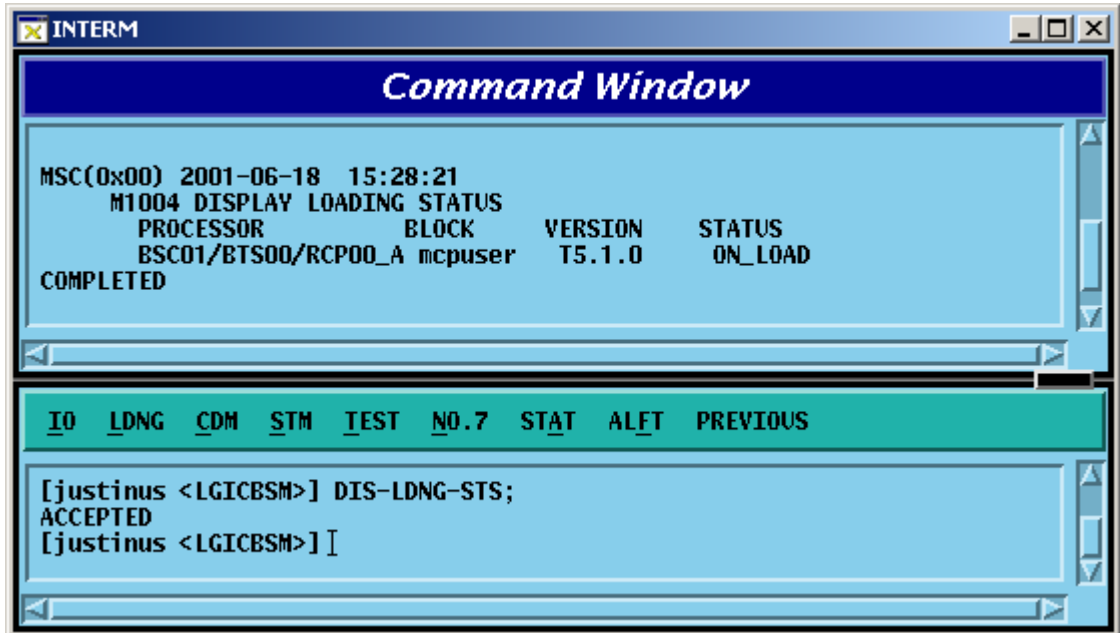


Fig. 4.2-7 Loading State Display Command Execution Result (When there is a processor that is performing loading)

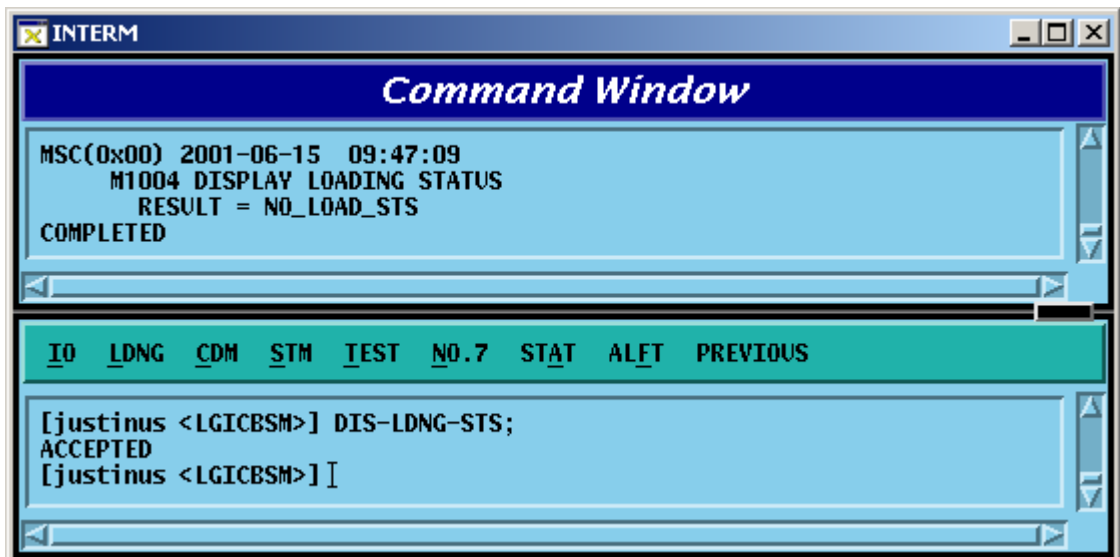


Fig. 4.2-8 Loading State Display Command Execution Result (When there is no processor that is performing loading)

4.2.2.5. a.out Version Information Display (DIS-VER-INFO)

The command to display a.out version information is used to check the S/W block version that is downloaded from the BSM loading directory or target processor.

The target processors that can designate are as follows: BSM, CNP, PNP, PCP, PMP, NCP, CCP, SCP, BSP, ALP, SMP, VMP, and RCP.

- Command : DIS-VER-INFO:[BSC=a,][BTS=b,]PROC=c[,FILENAME=d];
 - a : BSC ID [Number 0~11]
 - b : BTS ID [Number 0~47]
 - c : Processor Name [BSM,CNP,PNP,PCP0,PCP1,PCP2,PMP0,
PMP1, PMP2, NCP, CCP, SCP, BSP, ALP,
SMP0, SMP1, SMP2, SMP3, SMP4, VMP0,
VMP1, VMP2, VMP3, VMP4, VMP5,
VMP6,
VMP7, RCP0, RCP1, RCP2, RCP3, RCP4,
RCP5, RCP6, RCP7, RCP8, RCP9]
 - d : File Name [String]

- Input : DIS-VER-INFO:PROC=BSM,FILENAME=ccp_cdl;
DIS-VER-INFO:BSC=1,PROC=CCP,FILENAME=ccp_cdl;

- Output :

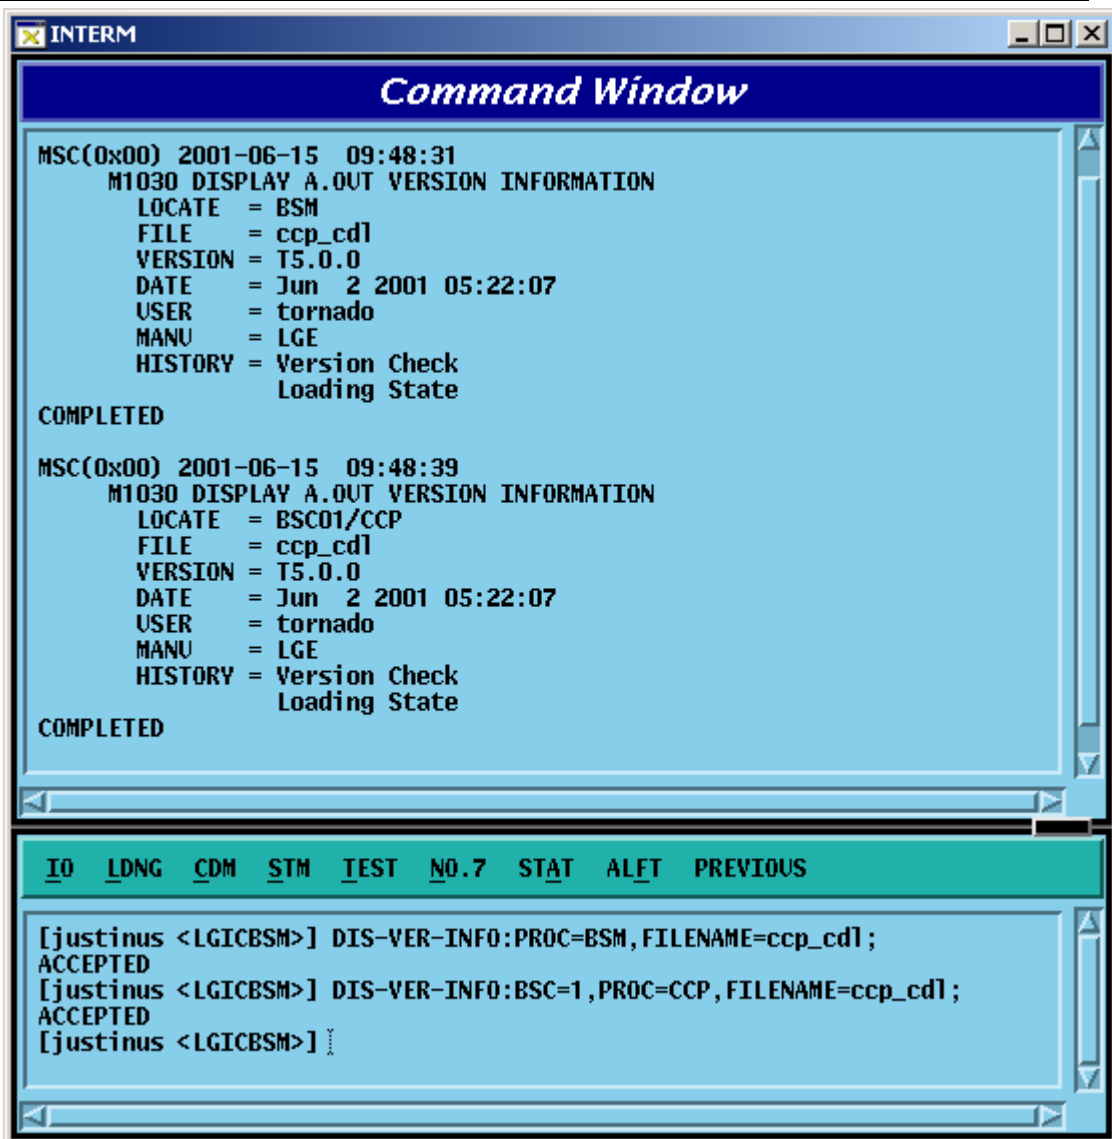


Fig. 4.2-9 Version Information Display Command Execution Result

4.3. Configuration Command

During the initialization, BTS and BSC download PDL (Programmable Loading Data) that contain the configuration and parameter information as well as the OS and Application.

This section describes the commands that help the user to manage the following efficiently and variably by displaying PLD and changing them online: BTS and BSC configuration, the parameter information, and the network configuration information. In particular, the system's flexibility is maximized by enabling BTS, Sector, FA, etc to be expanded by the parameter input by the user without any additional data.

4.3.1. Parameter Information Display Command

(Display_Parameter_Information_1)

As a command that is used to inquire the parameter information that is currently stored in the PLD, its results are displayed on the OUTPUT WINDOW.

Table 1-1 Parameter Information Display Command I

DIS-BTS-DATA	BSC, BTS	BTS DATA verification
DIS-SECT-DATA	BSC, BTS, SECT	SECTOR DATA verification
DIS-CHAN-DATA	BSC, BTS, CDMACH	CDMA CHANNEL DATA verification
DIS-SYS-PARA	BSC, BTS, SECT, CDMACH	SYSTEM PARAMETER verification
DIS-EXT-SYS	BSC, BTS, SECT, CDMACH	EXTENDED SYSTEM PARAMETER verification
DIS-NGBR-DATA	BSC, BTS, SECT	Neighbor cell information verification
DIS-QOS-PARA	BSC, BTS	QOS verification
DIS-CHIP-PWR	BSC, BTS	CHIP power control parameter verification
DIS-TIC-DATA	BSC, BTS, SECT, CDMACH	TIC DATA verification
DIS-SECT-CHAN	BSC, BTS, SECT, CDMACH	SYSTEM SECTOR CDMA CHANNEL PARAMETER

STAREX-IS BSM Manual

		verification
DIS-PWR-PARA	BSC, BTS, SECT, CDMACH	Power control parameter information display
DIS-AC-PARA	BSC, BTS, SECT, CDMACH, PC, AC	ACCESS CHANNEL PARAMETER verification
DIS-TXMS-PARA	BSC, BTS, SECT, CDMACH	TXMS PARAMETERS verification
DIS-GSRM-PARA	BSC, BTS, SECT	GSRM message verification
DIS-ACC-PARA	BSC, BTS, SECT, CDMACH, PC	ACCESS PARAMETER MESSAGE verification
DIS-PC-PARA	BSC, BTS, SECT, CDMACH, PC	PAGING CHANNEL parameter information verification
DIS-PICH-PARA	BSC, BTS, SECT, CDMACH	PILOT CHANNEL parameter information verification
DIS-SC-PARA	BSC, BTS, SECT, CDMACH	SYNC CHANNEL PARAMETER verification
DIS-QPC-PARA	BSC, BTS, SECT, CDMACH, QPC	QUICK PAGING CHANNEL parameter information verification
DIS-BCON-PARA	BSC, BTS, SECT	HOPPING PILOT BEACON CHANNEL parameter information verification
DIS-BTS-DATA	BSC, BTS	BTS DATA verification

4.3.1.1. BTS Parameter Information Display

The BTS parameters are composed of data that are used to manage the BTS and both BTS and BSC refer to this information.

- Command DIS-BTS-DATA:BSC=a,BTS_GRP=b,BTS_SUB=c;
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : BTS Sub Number (0 ~ 3)
- Input DIS-BTS-DATA:BSC=0,BTS_GRP=2,BTS_SUB=0;
- Output

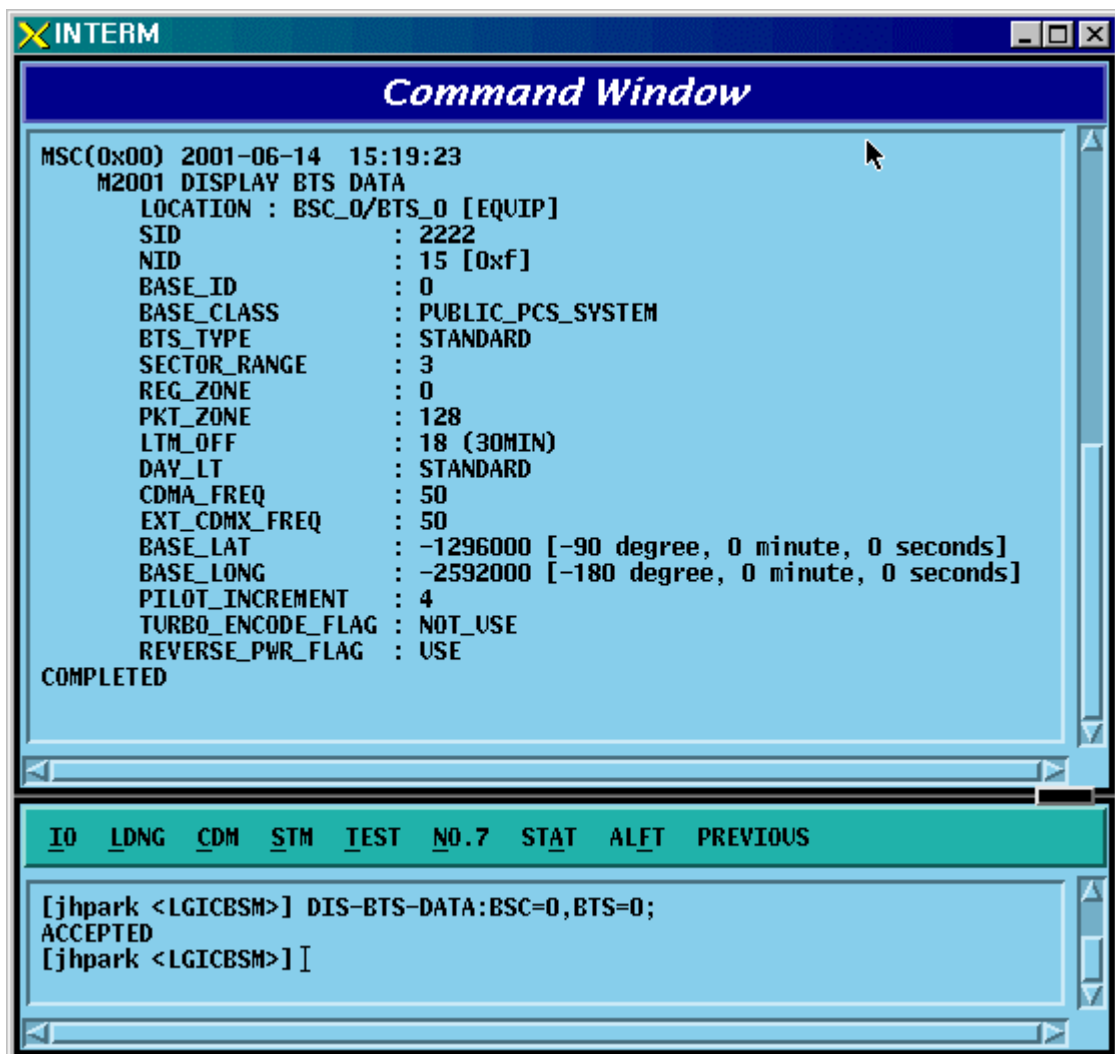


Fig. 4.3-1 BTS Parameter Display

4.3.1.2. Sector Parameter Information Display

The BTS can be divided into 1~3 sectors to accommodate more subscribers. The sector parameter information is composed of the information on each sector in BTS and both BTS and BSC refer to this information. The user can inquire the data by BTS Group, BTS Sub, and sector.

- Command DIS-SECT-DATA:BSC=a[,BTS_GRP=b][,BTS_SUB=c][,SECT=d];
a : BSC Number (0 ~ 11)
b : BTS Number (0 ~ 47)
c : BTS Sub Number (0 ~ 3)
d : Sector Number (ALPHA/BETA/GAMMA)
- Input DIS-SECT-DATA:BSC=0,BTS=0,SECT=ALPHA;
- Output

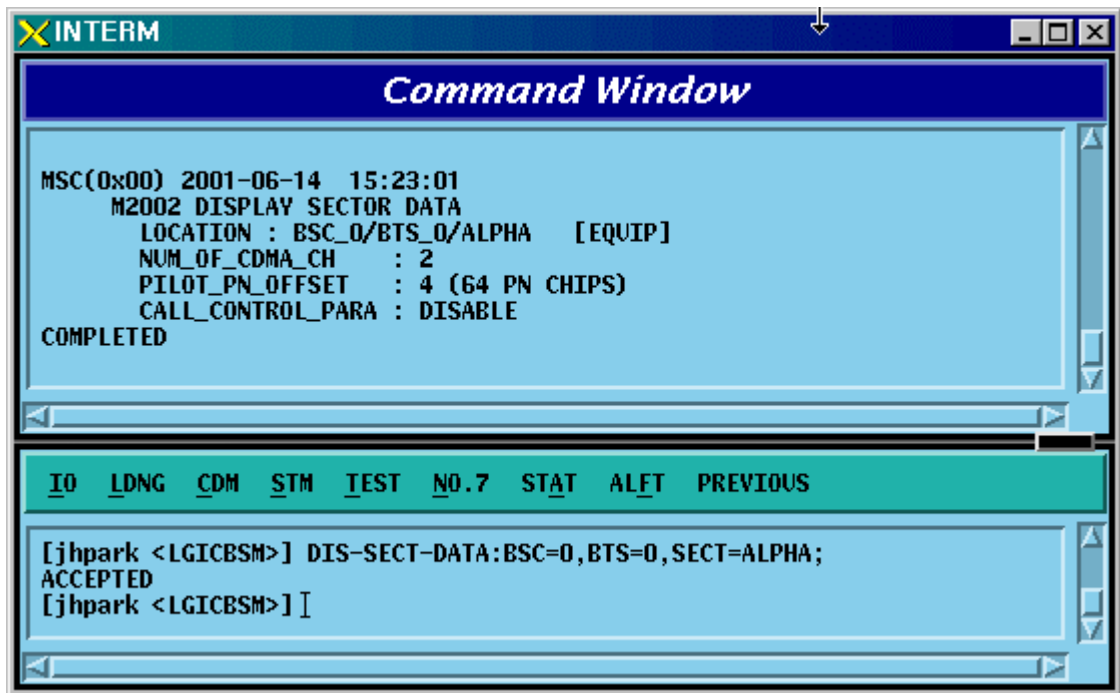


Fig. 4.3-2 Sector Parameter Information Display

4.3.1.3. CDMA Channel Parameter Information Display

The following command is used to display parameter information such as bandwidth of each CDMA channel, CDMA channel number, spare channel rate for Handoff(or Handover). This information is referred by both BTS and BSC.

- Command DIS-CHAN-DATA:BSC=a,BTS_GRP=b,BTS_SUB=c[,CDMACH=c];
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : BTS Sub Number(0 ~ 3)
 - d : CDMA Channel Number (0 ~ 7)
- Input DIS-CHAN-DATA:BSC=0,BTS_GRP=2,BTS_SUB=0;
- Output

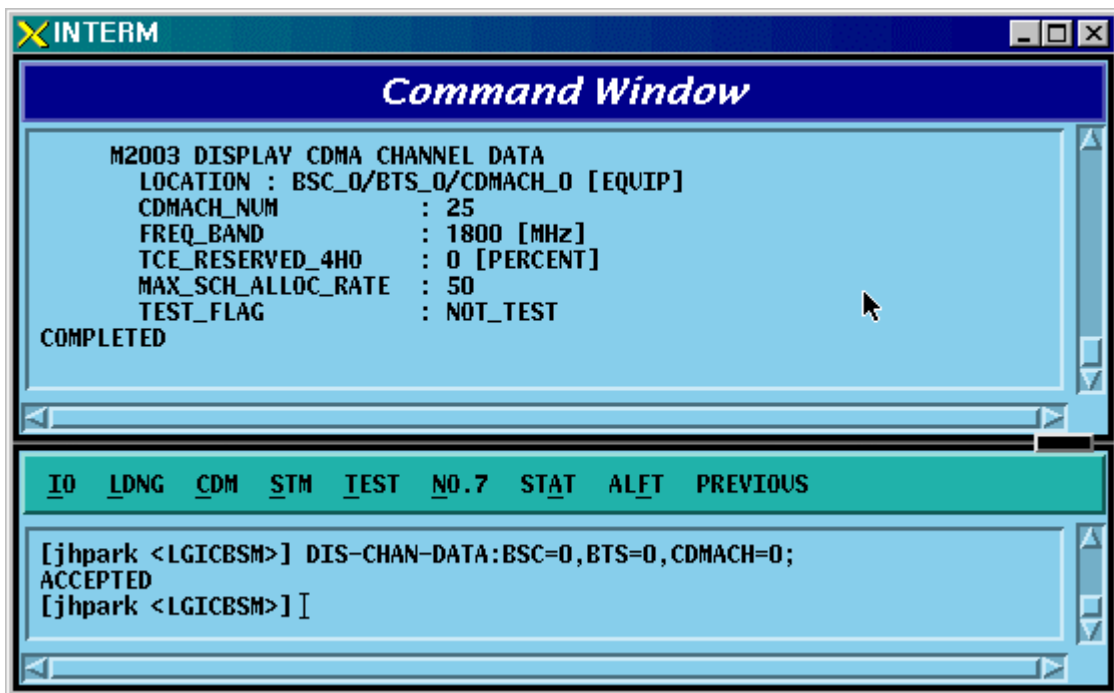


Fig. 4.3-3 CDMA Channel Parameter Information Display

4.3.1.4. System Parameter Message Display

As an Overhead message that is transmitted from BTS to MS through the paging channel, the System Parameter Message contains the information to be used for the call processing, handoff procedures, registration, etc. The information is checked by using the following command and referred by both BTS and BSC.

- Command DIS-SYS-PARA:BSC=a,BTS_GRP=b,BTS_SUB=c,SECT=d,CDMACH=e;
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : BTS Sub Number (0 ~ 3)
 - d : Sector Number (ALPHA/BETA/GAMMA)
 - e : CDMA Channel Number (0 ~ 7)
- Input DIS-SYS-PARA:BSC=0,BTS_GRP=2,BTS_SUB=0,SECT=ALPHA,CDMACH=0;
- Output

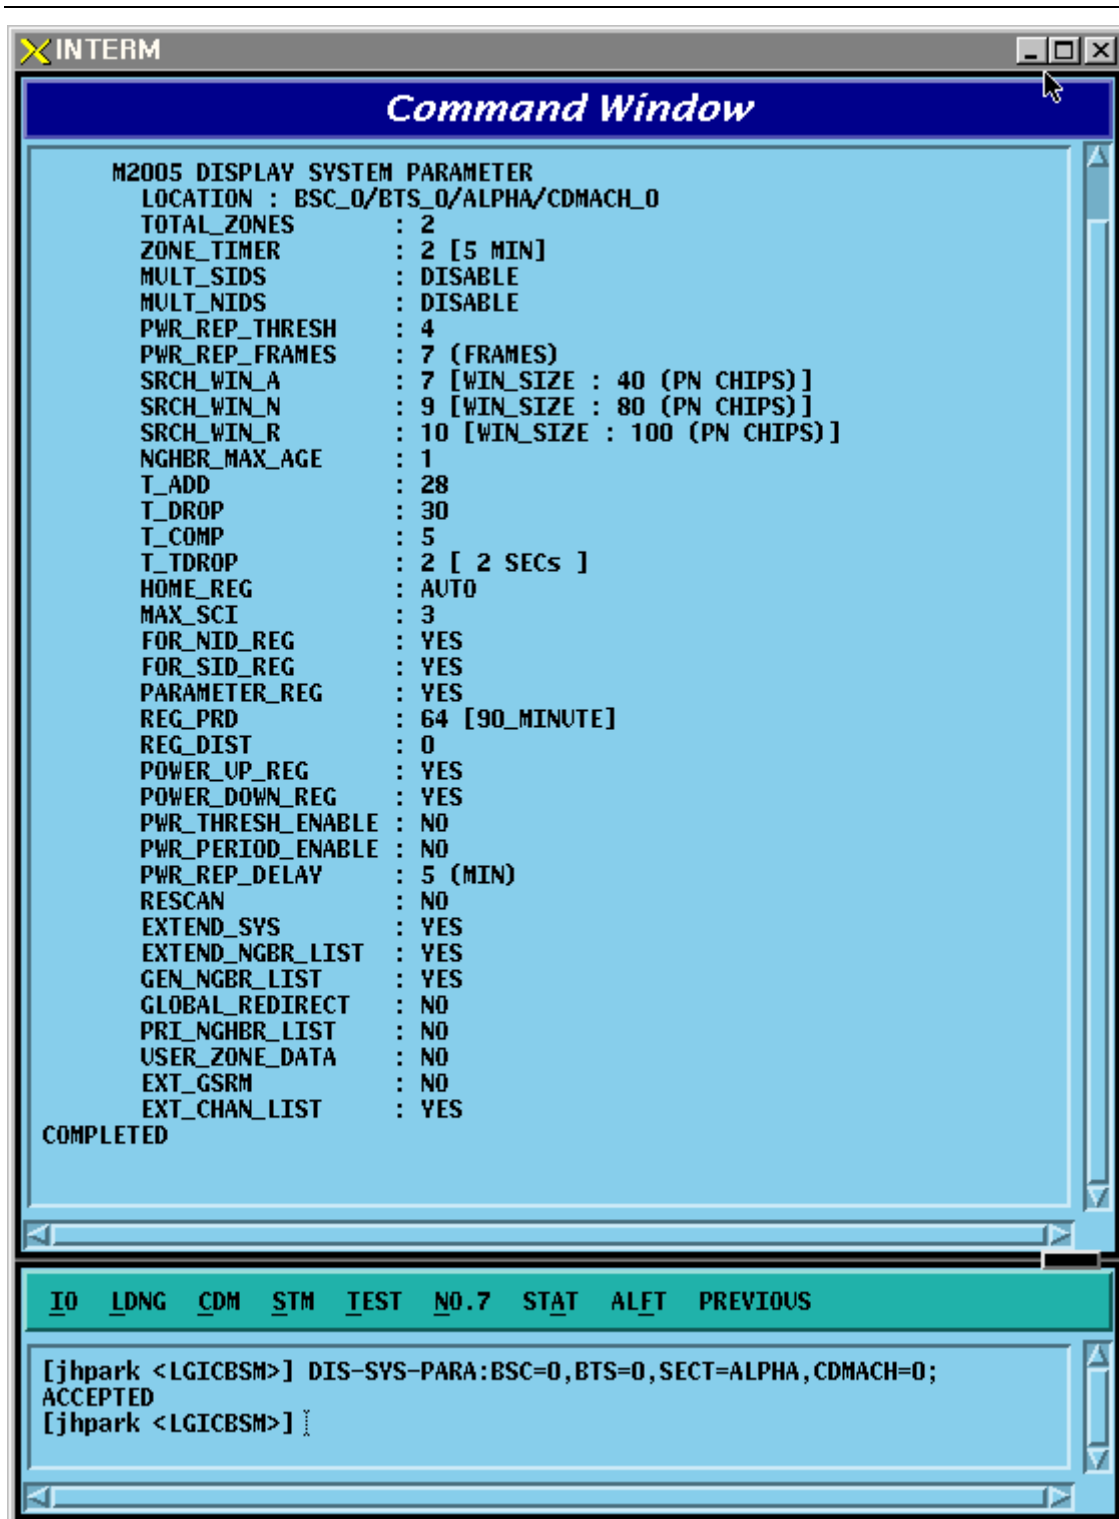


Fig. 4.3-4 System Parameter Message Display

4.3.1.5. Extended System Parameter Message Display

As an overhead message that is transmitted from the BTS to MA through the paging channel, the Extended System Parameter Message is referred by BTS and BSC.

- Command DIS-EXT-SYS:BSC=a,BTS_GRP=b,BTS_SUB=c;
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : BTS Sub Number (0 ~ 3)
- Input DIS-EXT-SYS:BSC=0,BTS_GRP=2,BTS_SUB=0;
- Output

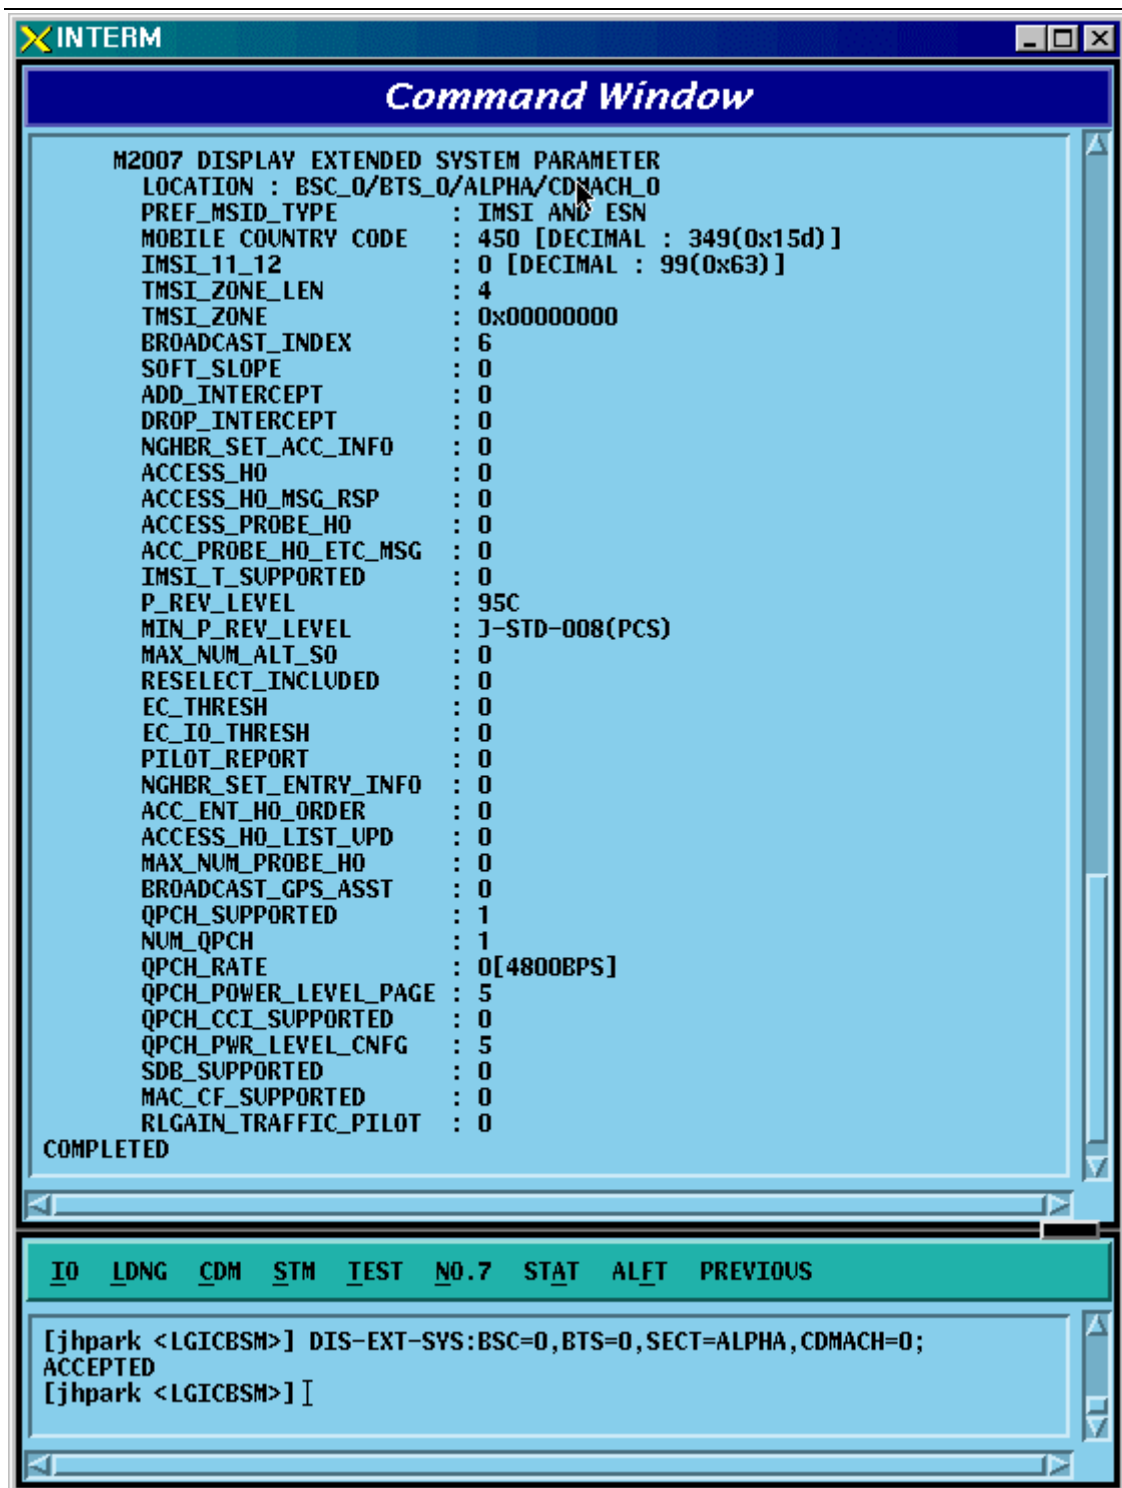


Fig. 4.3-5 Extended System Parameter Message Display

4.3.1.6. Neighbor List Parameter Information Display

Neighbor list refers to a set of the information on neighbor sectors. Each sector can have up to 20 neighbor lists. When the MS, which is busy or idle, moves to other sectors, it has to switch over a call (this is called Handoff or Handover). At this time, handoff is carried out in reference to the neighbor list. The neighbor list is referred by BTS and BSC and can be inquired by using the following command:

- Command `DIS-NGBR-DATA:BSC=aa,BTS_GRP=b[,BTS_SUB=c][,SECT=c];`
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : BTS Sub Number (0 ~ 3)
 - d : Sector Number (ALPHA/BETA/GAMMA)
- Input `DIS-NGBR-DATA:BSC=0,BTS_GROUP=2,BTS_SUB=0;`
- Output

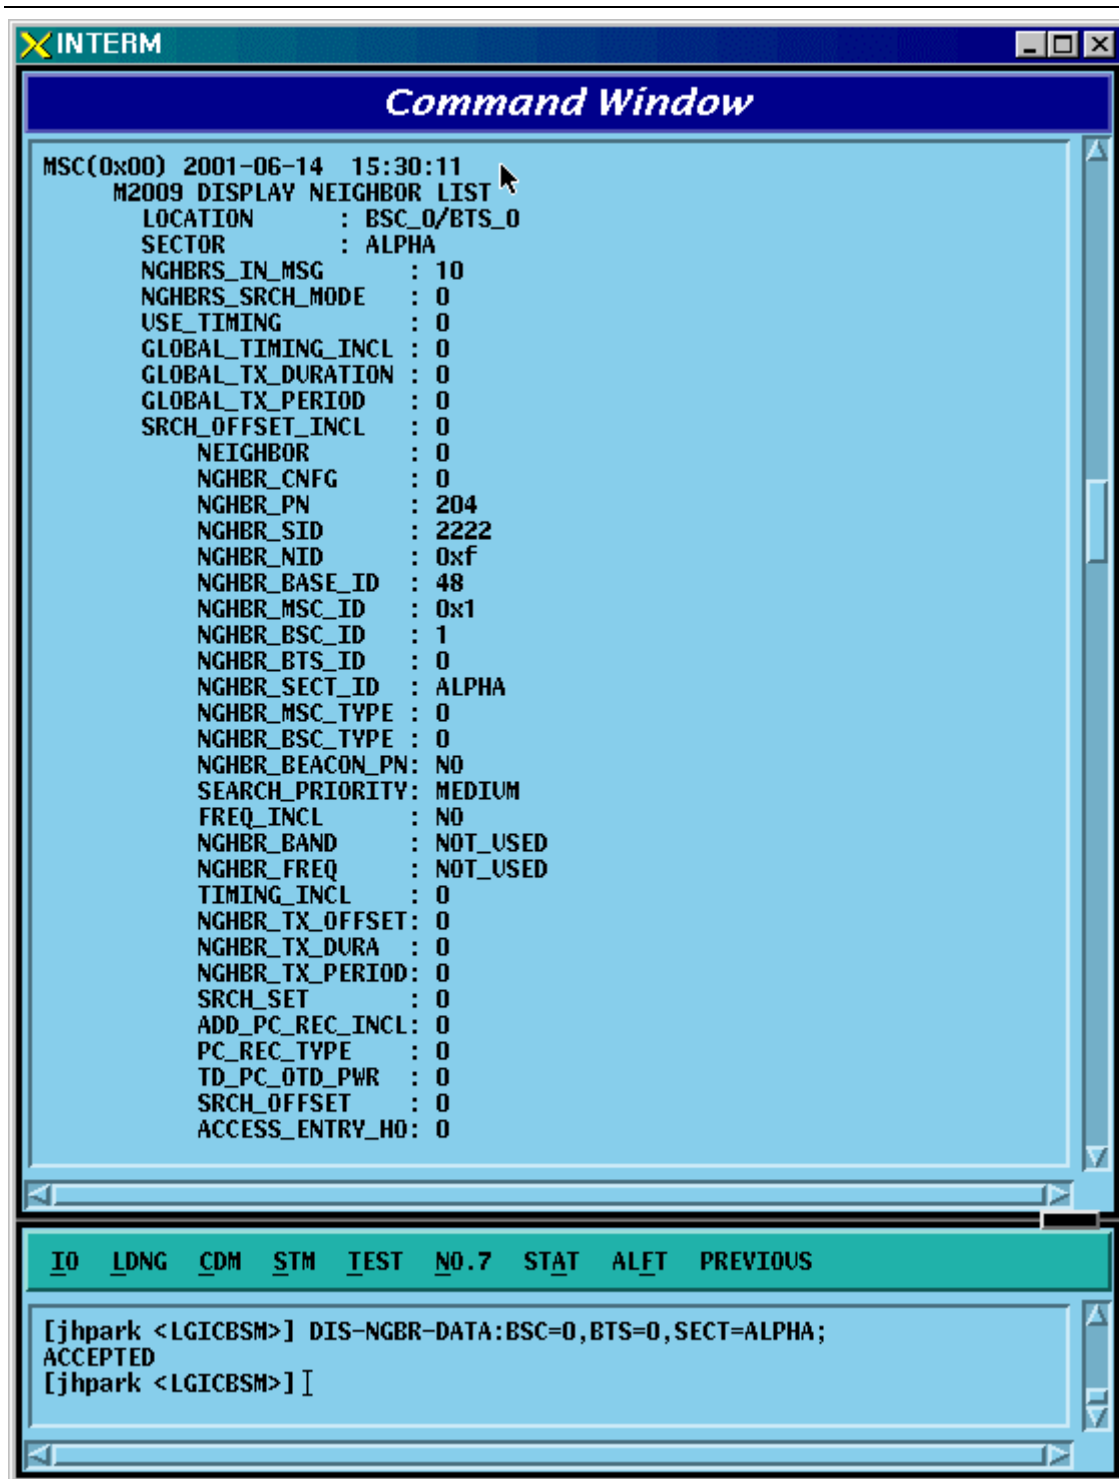


Fig. 4.3-6 Neighbor List Parameter Information Display

4.3.1.7. BTS QOS(Quality Of Service) Display

- Command DIS-QOS-PARA:BSC=a,BT=b;
a : BSC Number (0 ~ 11)
b : BTS Number (0 ~ 47)
- Input DIS-QOS-PARA:BSC=0,BTS=0;
- Output

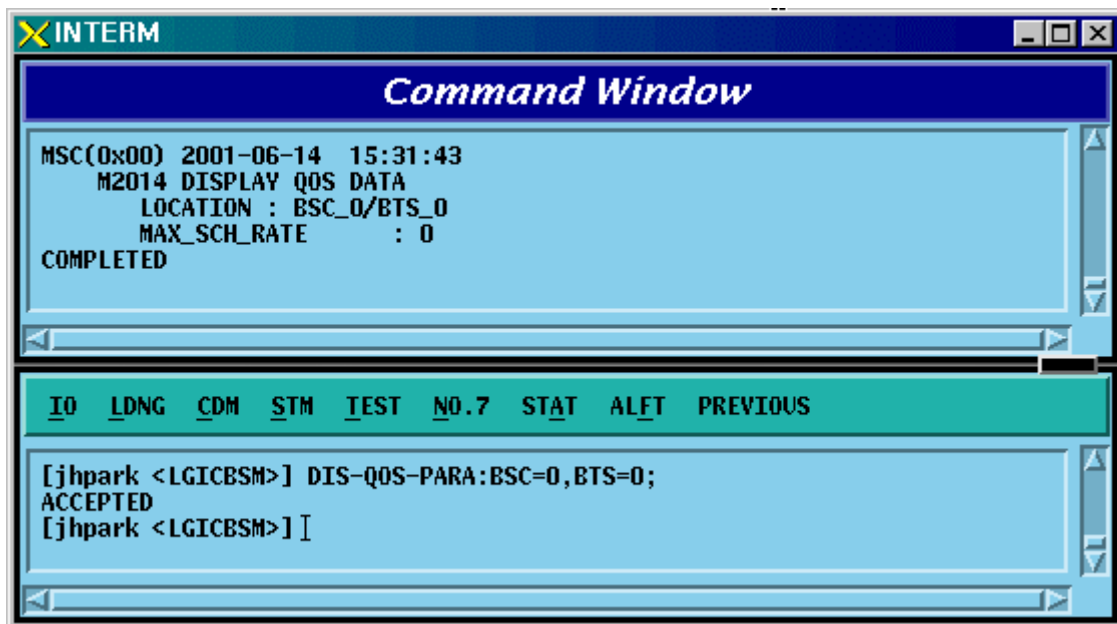


Fig. 4.3-7 BTS QOS(Quality Of Service) Display

4.3.1.8. CHIP Power Control Parameter Display

- Command DIS-CHIP-PWR:BSC=a,BTS=b;
a : BSC Number (0 ~ 11)
b : BTS Number (0 ~ 47)
- Input DIS-CHIP-PWR:BSC=0,BTS=0;
- Output

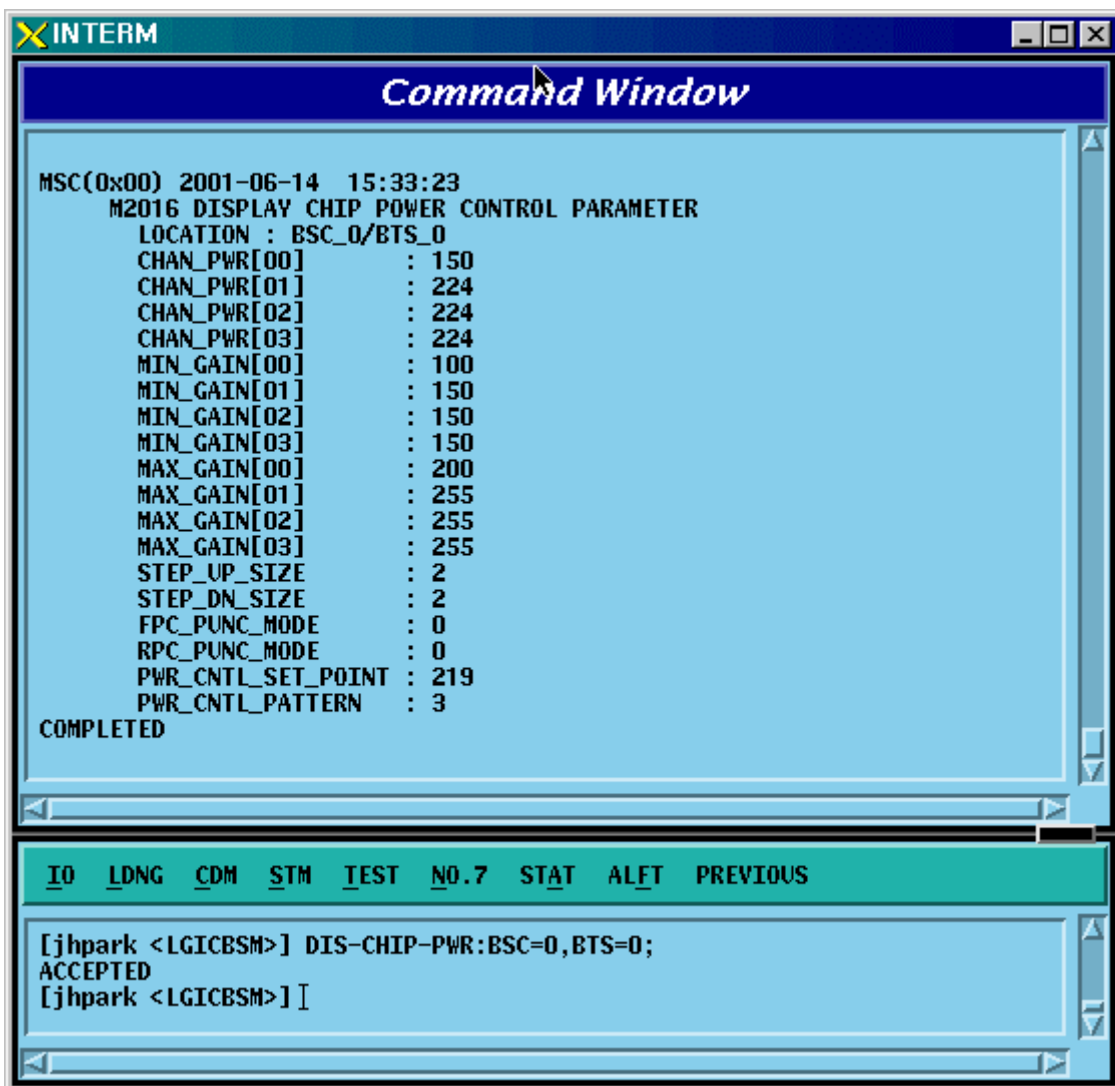


Fig. 4.3-8 Display of Parameter that Controls CHIP Power

4.3.1.9. OCNS State Display

Input the following commands to display transmit values, the parameter information used by BTS:

- Command DIS-OCNS-STS:BSC=a,BTS=b;
 a : BSC Number (0 ~ 11)
 b : BTS Number (0 ~ 47)

- Input DIS-OCNS-STS:BSC=0,BTS=0;
- Output

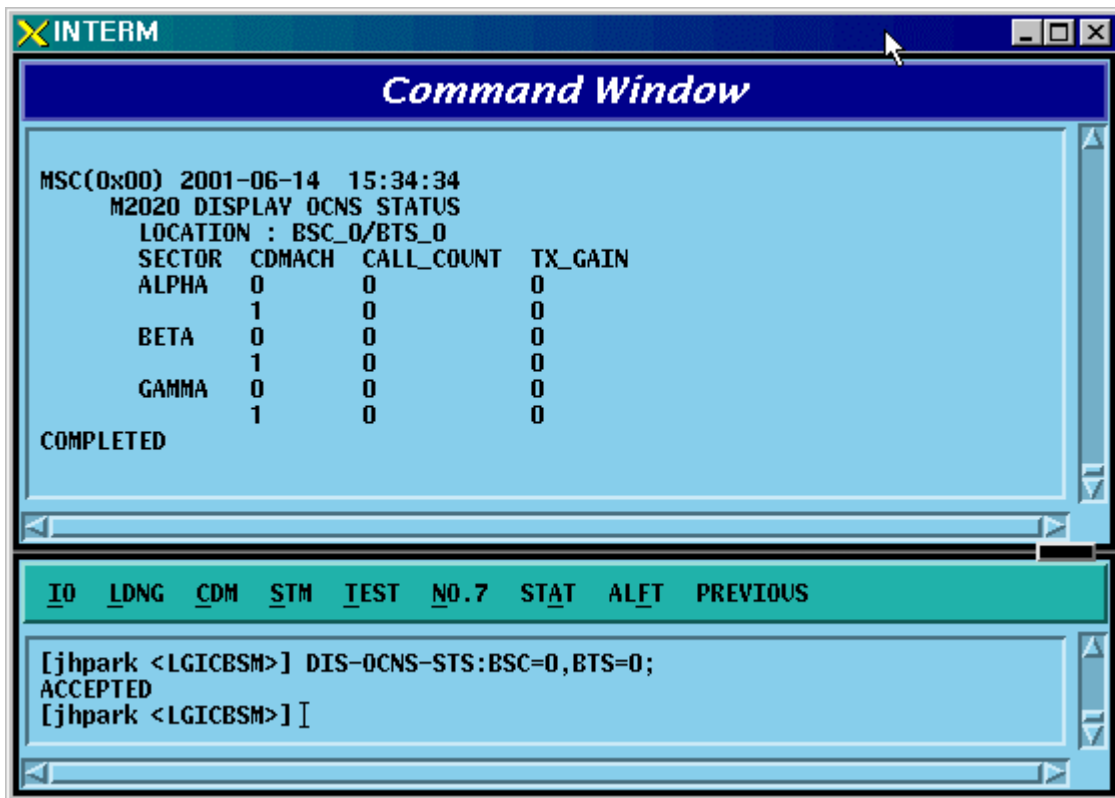


Fig. 4.3-9 OCNS State Display

4.3.1.10. Current Power Control Display

- Command DIS-CUR-PWR:BSC=a,BTS=b, SECT=c, CDMACH=d;
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c: SECT
 - d: CDMACH
- Input DIS-CUR-PWR:BSC=0,BTS=0,SECT=ALPHA,CDMACH=0;
- Output

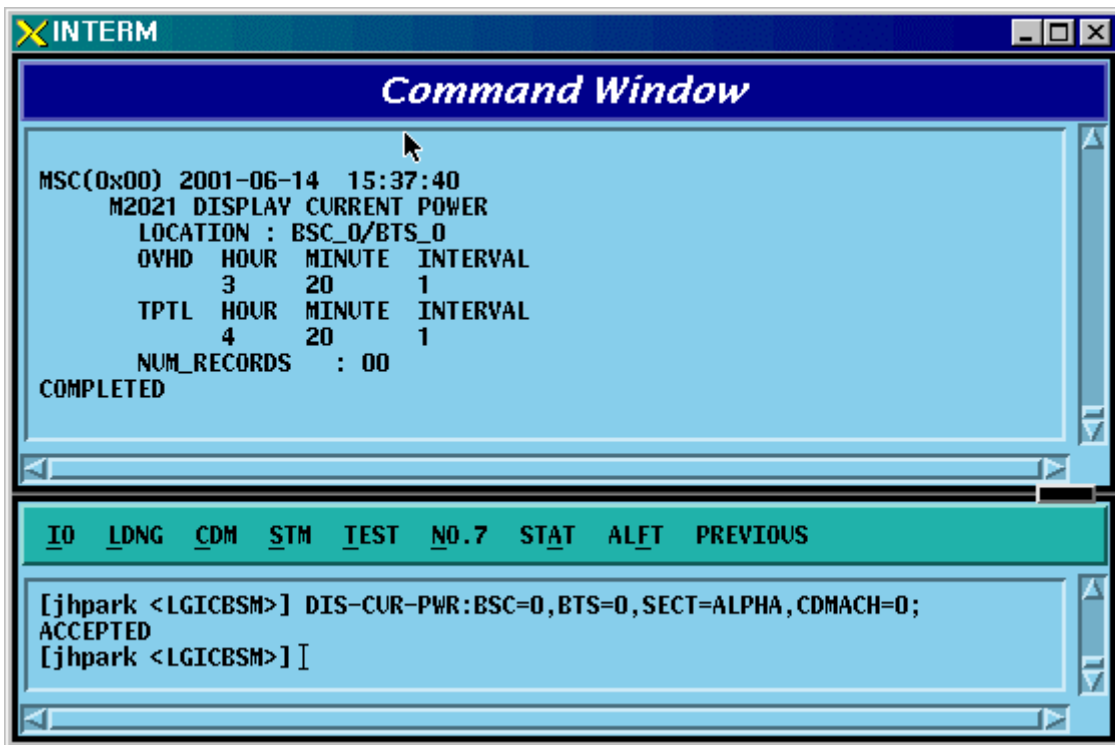


Fig. 4.3-10 Current Power Control Display

4.3.1.11. TIC(Transceiver Interface Card) Data Display

Input the following commands to display transmit gain values, the parameter information used by the BTS:

- Command DIS-TIC-DATA:BSC=a,BTS_GRP=b,BTS_SUB=c,SECT=d,CDMACH=e;
a : BSC Number (0 ~ 11)
b : BTS Number (0 ~ 47)
c : BTS Sub Number (0 ~ 3)
d : Sector Number (ALPHA/BETA/GAMMA)
e : CDMA Channel Number (0 ~ 7)
- Input DIS-TIC-DATA:BSC=0,BTS_GRP=2,BTS_SUB=0,SECT=ALPHA,CDMACH=0;
- Output

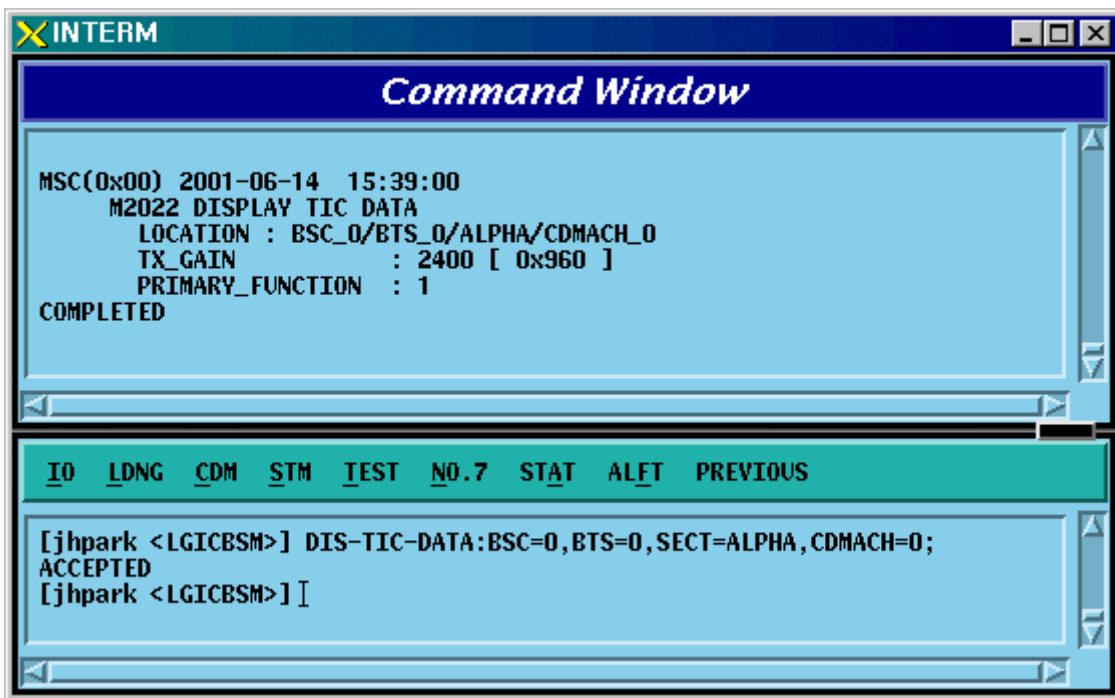


Fig. 4.3-11 TIC(Transceiver Interface Card) Data Display

4.3.1.12. OCNS Display

Input the following commands to display transmit gain values, the parameter information used by the BTS:

- Command DIS-OCNS-PARA:BSC=a,BTS=b,SECT=c,,CDMACH=d;
a : BSC Number (0 ~ 11)
b : BTS Number (0 ~ 47)
c : Sector Number (ALPHA/BETA/GAMMA/DELTA/EPSILON/ZETA)
d : CDMA Channel Number (0 ~ 11)
- Input DIS-OCNS-PARA:BSC=0,BTS=0,SECT=ALPHA,CDMACH=0;
- Output

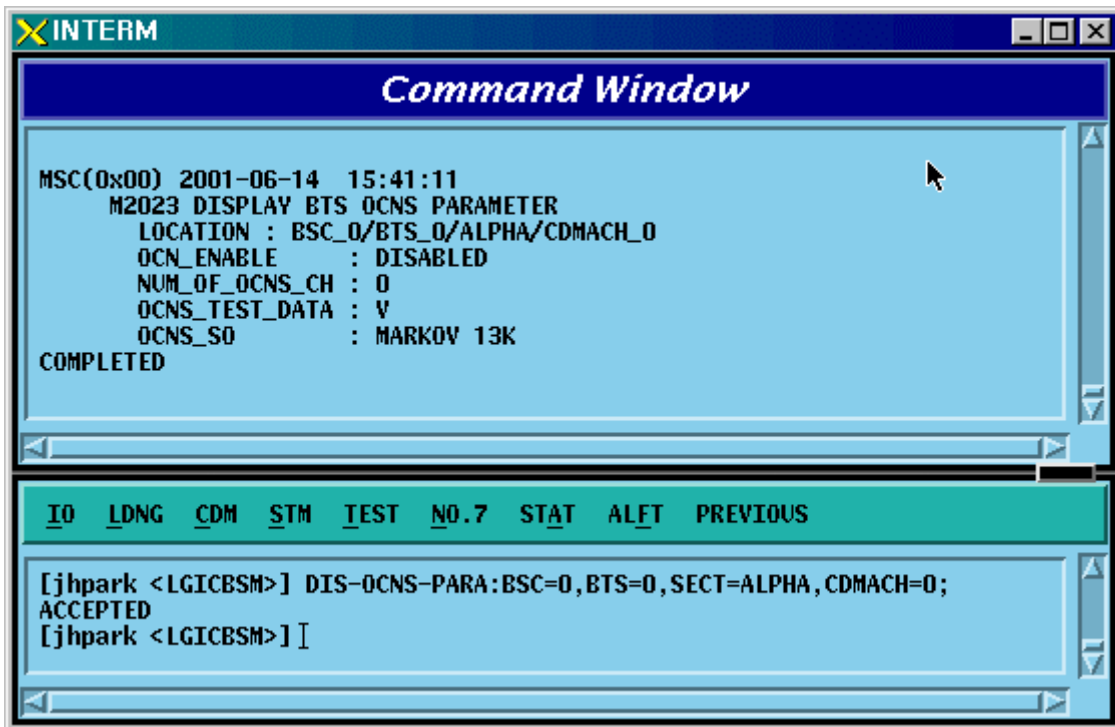


Fig. 4.3-12 OCNS Display

4.3.1.13. Power Management Parameter Information Display

- Command DIS-PWR-PARA:BSC=a,BTS=b,SECT=c,,CDMACH=d;
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : Sector Number (ALPHA/BETA/GAMMA/DELTA/EPSILON/ZETA)
 - d : CDMA Channel Number (0 ~ 11)
- Input DIS-PWR-PARA:BSC=0,BTS=0,SECT=ALPHA,CDMACH=0;
- Output

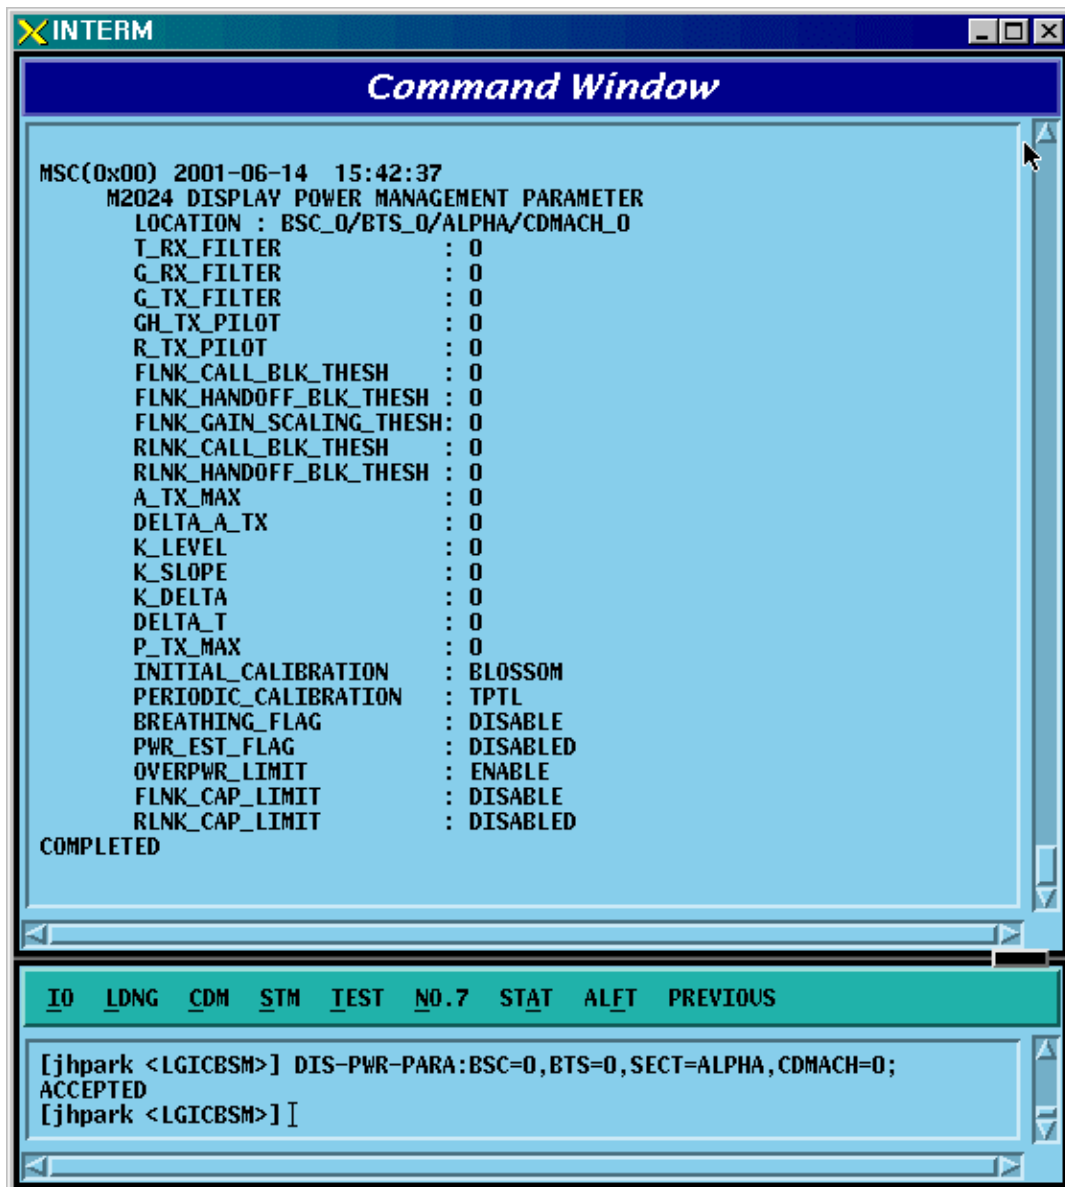


Fig. 4.3-13 Power Management Parameter Information Display

4.3.1.14. Access Channel Parameter Information Display

Display the access channel parameter information.

- Command DIS-AC-PARA:BSC=a,BTS=b,SECT=c,,CDMACH=d,PC=e,AC=f;;
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : Sector Number (ALPHA/BETA/GAMMA/DELTA/EPSILON/ZETA)
 - d : CDMA Channel Number (0 ~ 11)
 - e : Paging Channel ID (0 ~ 6)
 - f : Access Channel ID (0 ~ 6)
- Input DIS-OCNS-PARA:BSC=0,BTS=0,SECT=ALPHA,CDMACH=0,PC=0,AC=0;
- Output

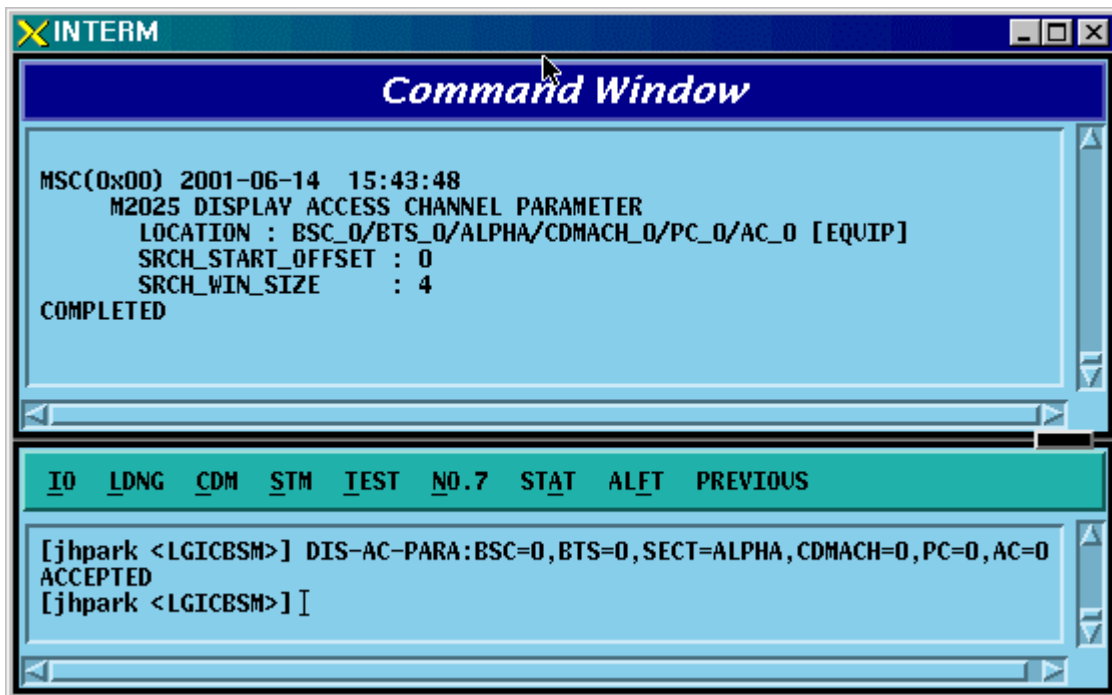


Fig. 4.3-14 Access Channel Parameter Information Display

4.3.1.15. TXMS Display

- Command DIS-TXMS-PARA:BSC=a,BTS=b,SECT=c,,CDMACH=d;
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : Sector Number (ALPHA/BETA/GAMMA/DELTA/EPSILON/ZETA)
 - d : CDMA Channel Number (0 ~ 11)
- Input DIS-TXMS-PARA:BSC=0,BTS=0,SECT=ALPHA,CDMACH=0;
- Output

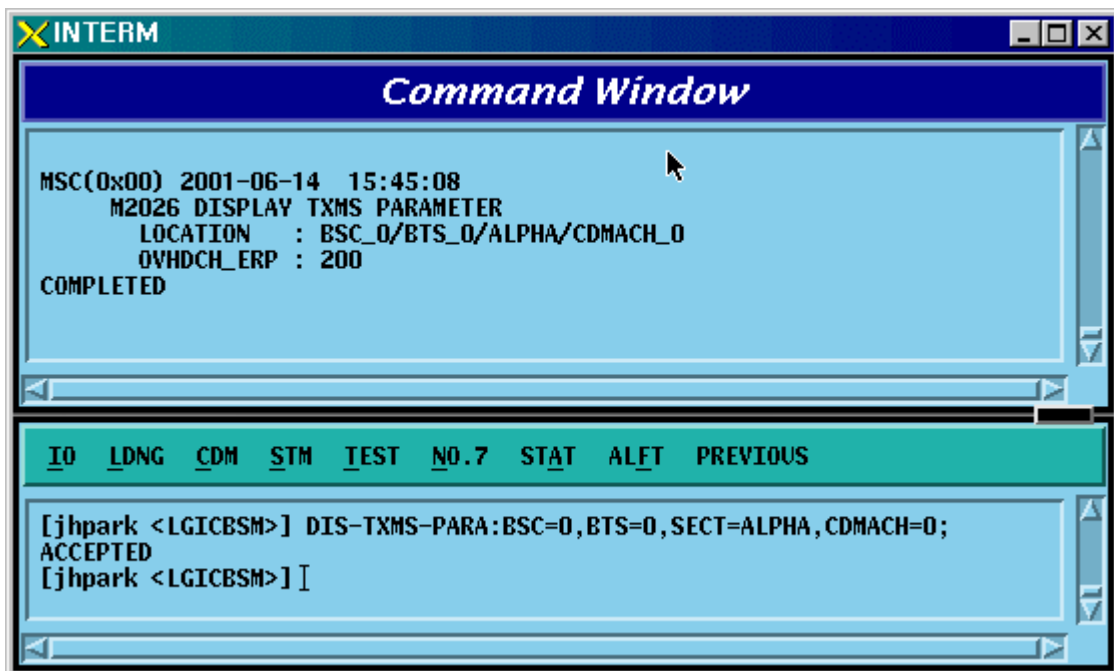


Fig. 4.3-15 TXMS Display

4.3.1.16. GSRM Parameter Information Display

GSRM(Global Service Redirect Message) is the parameter information that determines the system where a call is to be tried after MS power is on. It can be inquired using the following commands:

- Command DIS-GSRM-PARA:BSC=a,BTS=b,SECT=c;
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : Sector Number (ALPHA/BETA/GAMMA/DELTA/EPSILON/ZETA)
- Input DIS-GSRM-PARA:BSC=0,BTS=0,SECT=ALPHA;
- Output

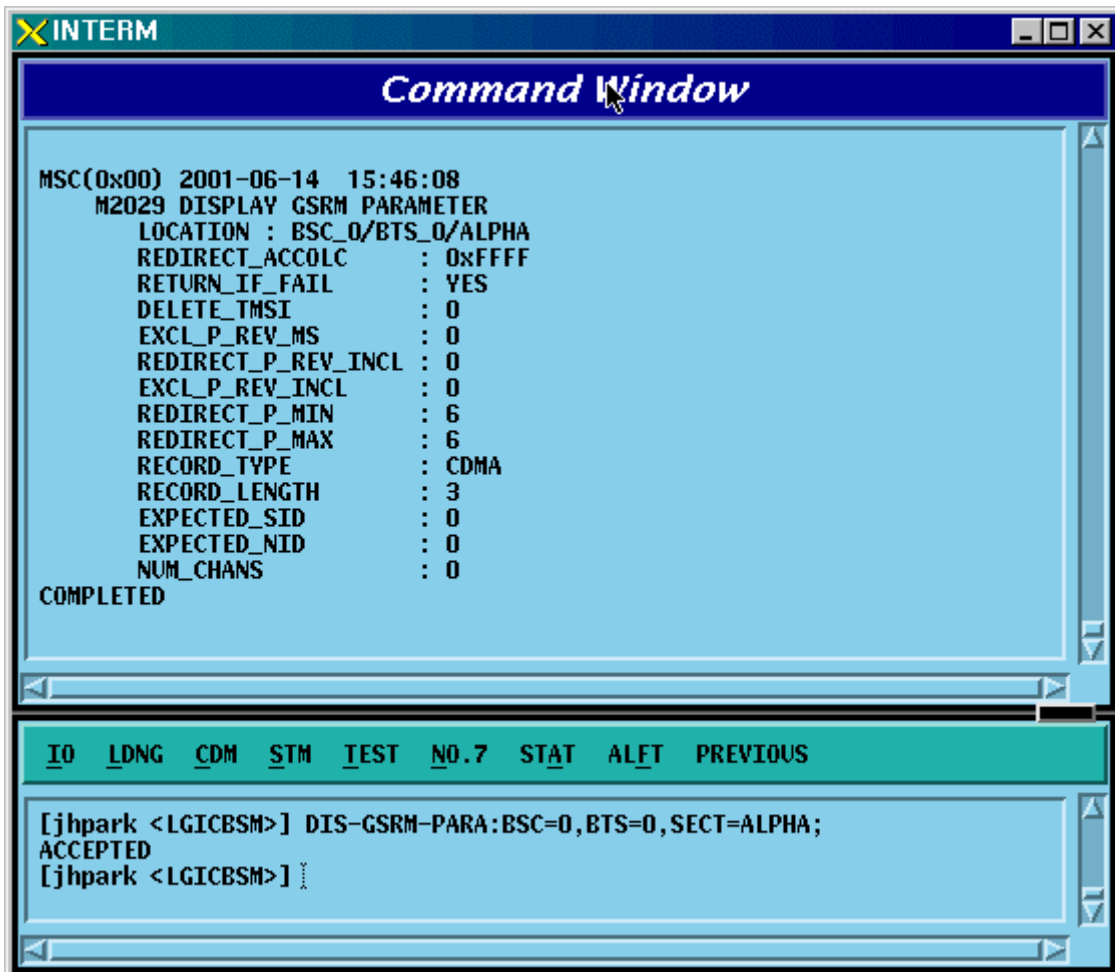


Fig. 4.3-16 GSRM Parameter Information Display

4.3.1.17. Access Parameter Message Display

As an Overhead message that is transmitted from BTS to MS through the paging channel, the Access Parameter Message indicates the way for MS to access BTS through Access channel contains the information to be used for the call processing, handoff procedures, registration, etc. Input the following command to display the Access Parameter Message.

- Command DIS-ACC-PARA:BSC=a,BTS=b,SECT=c,CDMACH=d, PC=e;
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : Sector Number (ALPHA/BETA/GAMMA/DELTA/EPSILON/ZETA)
 - d : CDMA Channel Number (0 ~ 11)
 - e : Paging Channel ID
- Input DIS-ACC-PARA:BSC=0,BTS=0,SECT=ALPHA,CDMACH=0,PC=0;
- Output

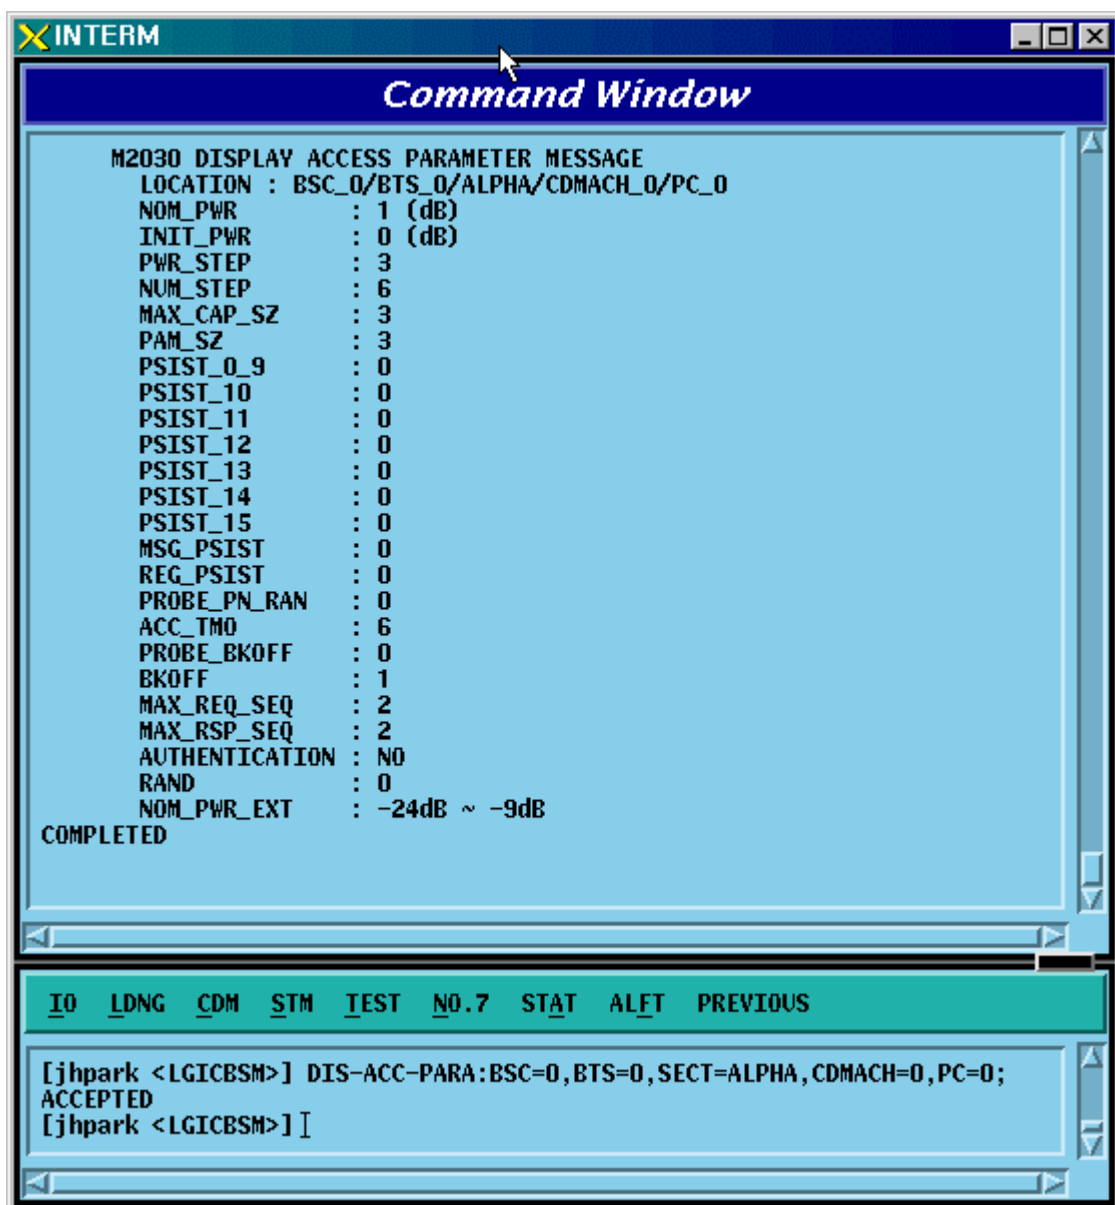


Fig. 4.3-17 Access Parameter Message Display

4.3.1.18. Paging Channel Parameter Information Display

Use the following command to display the transmit value of the paging channel:

- Command DIS-PC-PARA:BSC=a,BTS=b,SECT=c,CDMACH=d, PC=e;
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : Sector Number (ALPHA/BETA/GAMMA/DELTA/EPSILON/ZETA)
 - d : CDMA Channel Number (0 ~ 11)
 - e : Paging Channel ID
- Input DIS-PC-PARA:BSC=0,BTS=0,SECT=ALPHA,CDMACH=0,PC=0;
- Output

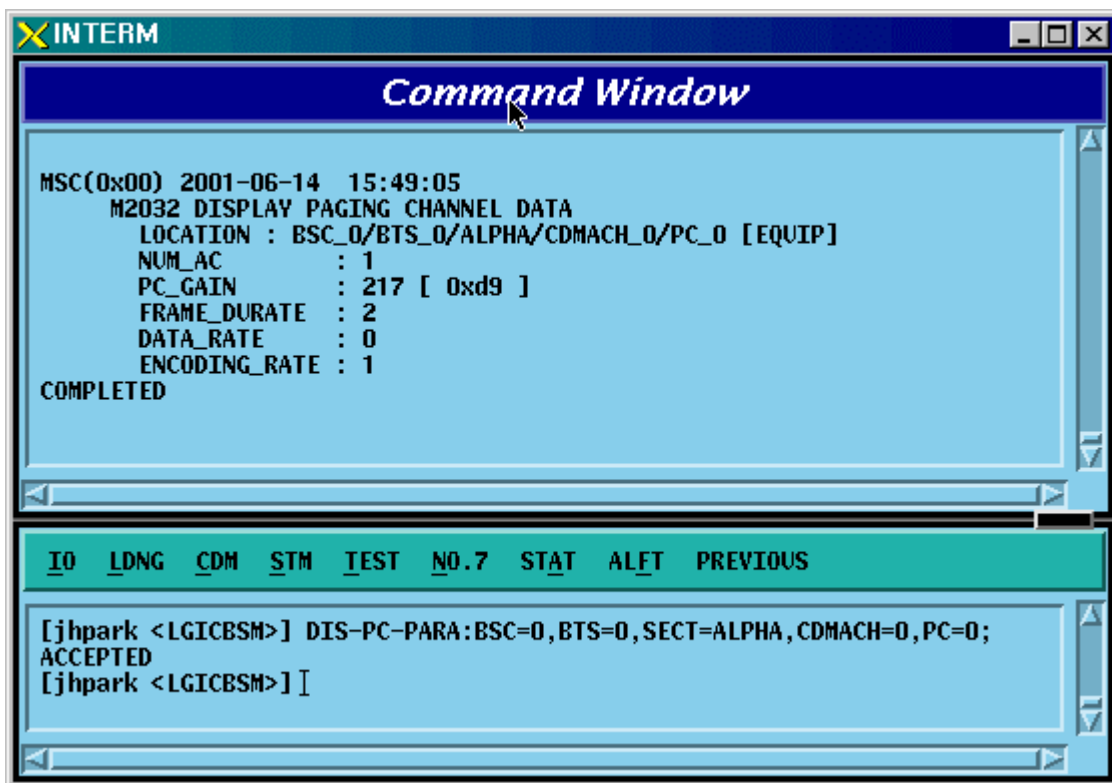


Fig. 4.3-18 Paging Channel Parameter Information Display

4.3.1.19. Pilot Channel Parameter Information Display

Use the following command to display the gain value of the pilot channel:

- Command DIS-PICH-PARA:BSC=a,BTS=b,SECT=c,CDMACH=d;
a : BSC Number (0 ~ 11)
b : BTS Number (0 ~ 47)
c : Sector Number (ALPHA/BETA/GAMMA/DELTA/EPSILON/ZETA)
d : CDMA Channel Number (0 ~ 11)
- Input DIS-PICH-PARA:BSC=0,BTS=0,SECT=ALPHA,CDMACH=0;
- Output

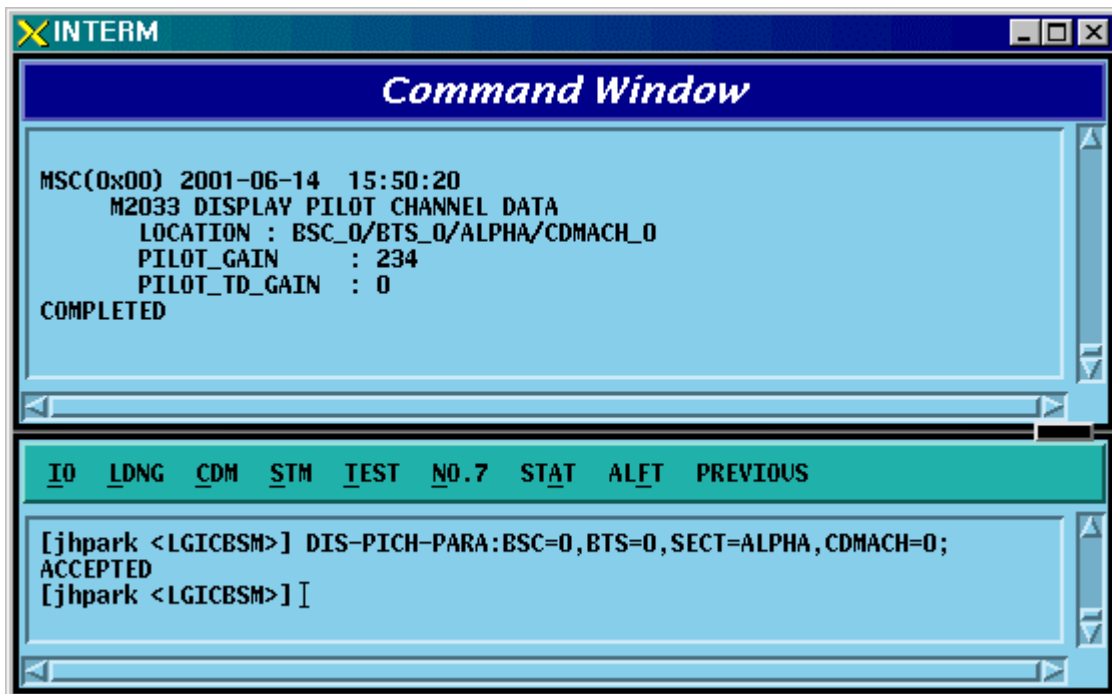


Fig. 4.3-19 Pilot Channel Parameter Information Display

4.3.1.20. Sync. Channel Parameter Information Display

Use the following command to display the gain value of the sync. channel:

- Command DIS-SC-PARA:BSC=a,BTS=b,SECT=c,CDMACH=d;
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : Sector Number (ALPHA/BETA/GAMMA/DELTA/EPSILON/ZETA)
 - d : CDMA Channel Number (0 ~ 11)
- Input DIS-SC-PARA:BSC=0,BTS=0,SECT=ALPHA,CDMACH=0;
- Output

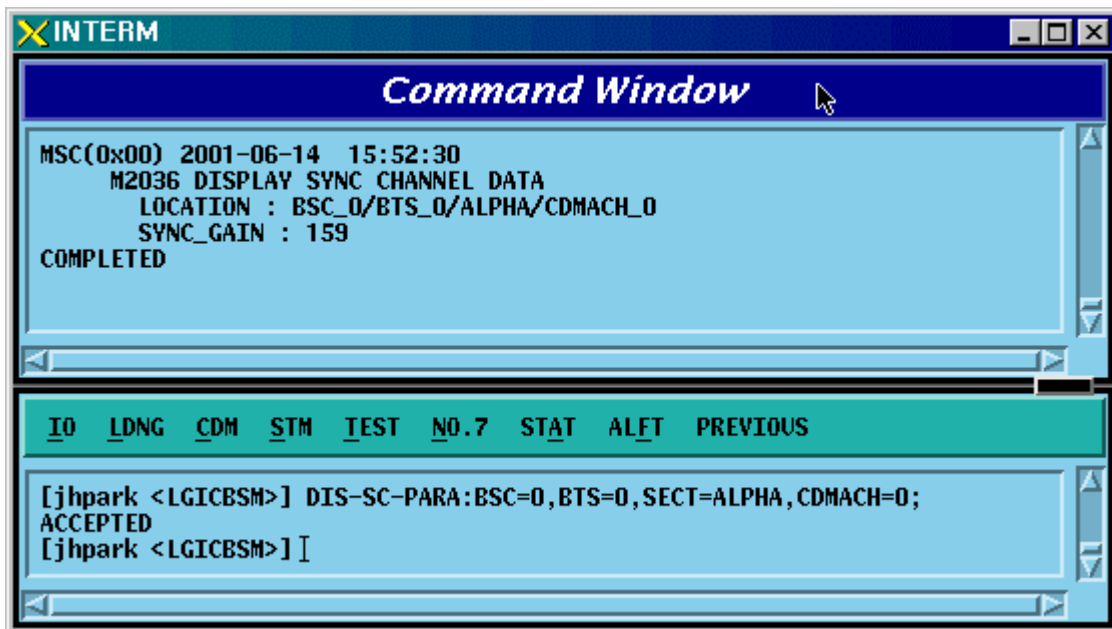


Fig. 4.3-20 Sync. Channel Parameter Information Display

4.3.1.21. Quick Paging Channel Parameter Information Display

Use the following command to display the gain value of the quick paging channel:

- Command DIS-QPC-PARA:BSC=a,BTS=b,SECT=c,CDMACH=d, QPC=e;
 - a : BSC Number (0 ~ 11)
 - b : BTS Number (0 ~ 47)
 - c : Sector Number (ALPHA/BETA/GAMMA/DELTA/EPSILON/ZETA)
 - d : CDMA Channel Number (0 ~ 11)
 - e : Quick Paging Channel ID
- Input DIS-QPC-PARA:BSC=0,BTS=0,SECT=ALPHA,CDMACH=0, QPC=0;
- Output

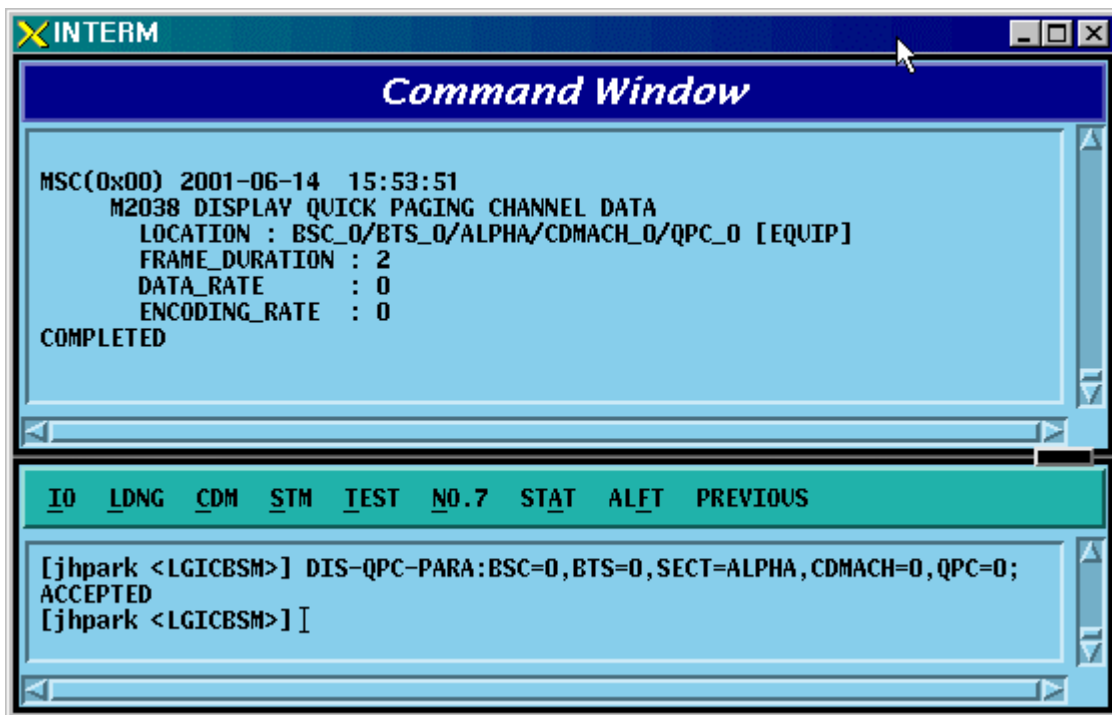


Fig. 4.3-21 Quick Paging Channel Parameter Information Display

4.3.1.22. Hopping Pilot Beacon Channel Parameter Information Display

- Command DIS-BCON-PARA:BSC=a,BTS=b,SECT=c;
a : BSC Number (0 ~ 11)
b : BTS Number (0 ~ 47)
c : Sector Number (ALPHA/BETA/GAMMA/DELTA/EPSILON/ZETA)
- Input DIS-BCON-PARA:BSC=0,BTS=0,SECT=ALPHA;
- Output

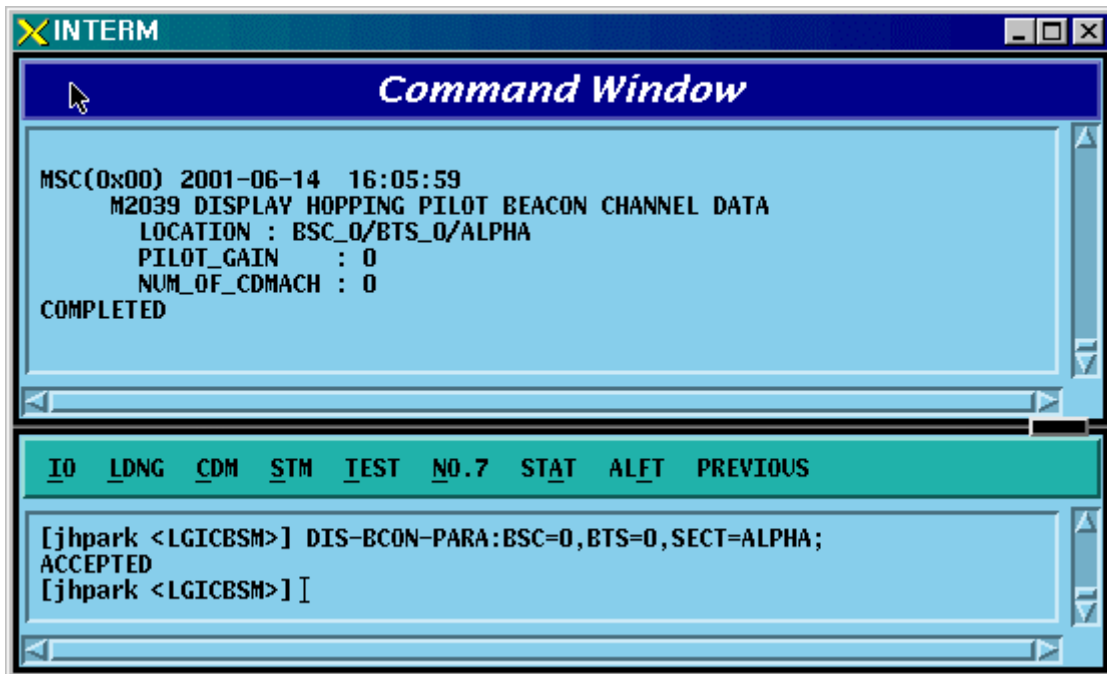


Fig. 4.3-22 Hopping Pilot Beacon Channel Parameter Information Display

4.3.2. Parameter Information Display
(Display_Parameter_Information_2)

4.3.2.1. BSC Information Verification

- Command DIS-BSC-DATA: BSC=a;
a : BSC Number(0~11)
- Input DIS-BSC-DATA: BSC=0;
- Output

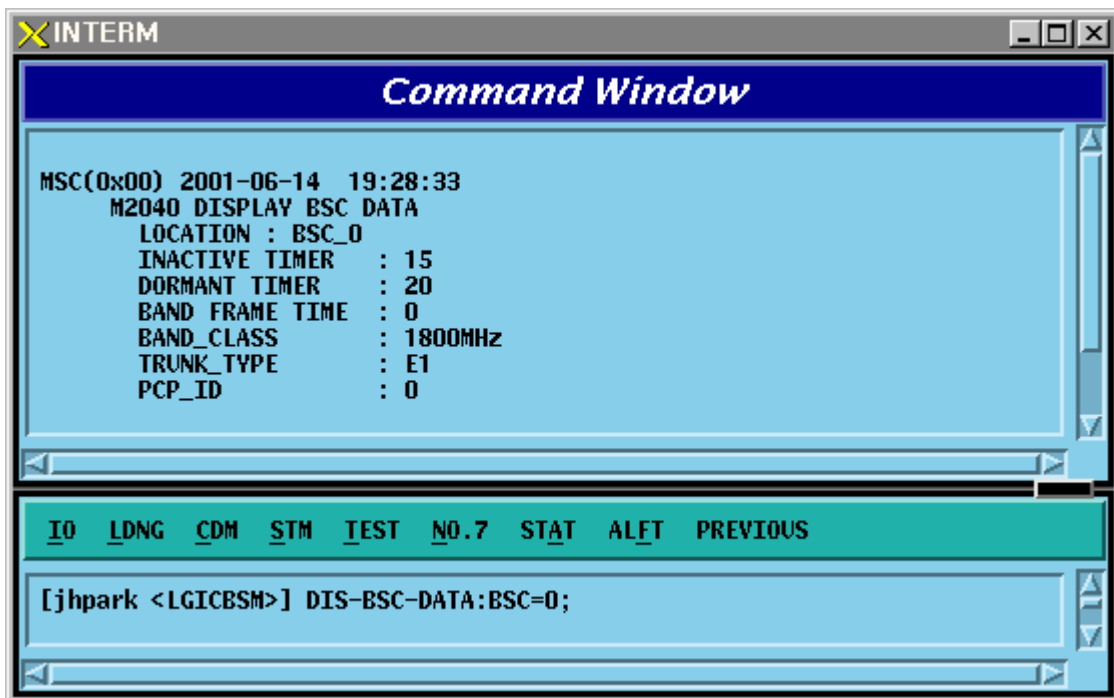


Fig. 4.3-23 BSC Information Verification

4.3.2.2. IOS Parameter Verification

- Command DIS-**IOS-PARA**: BSC=**a**;
a : BSC Number(0~11)
- Input DIS-**IOS-PARA**: BSC=0;
- Output

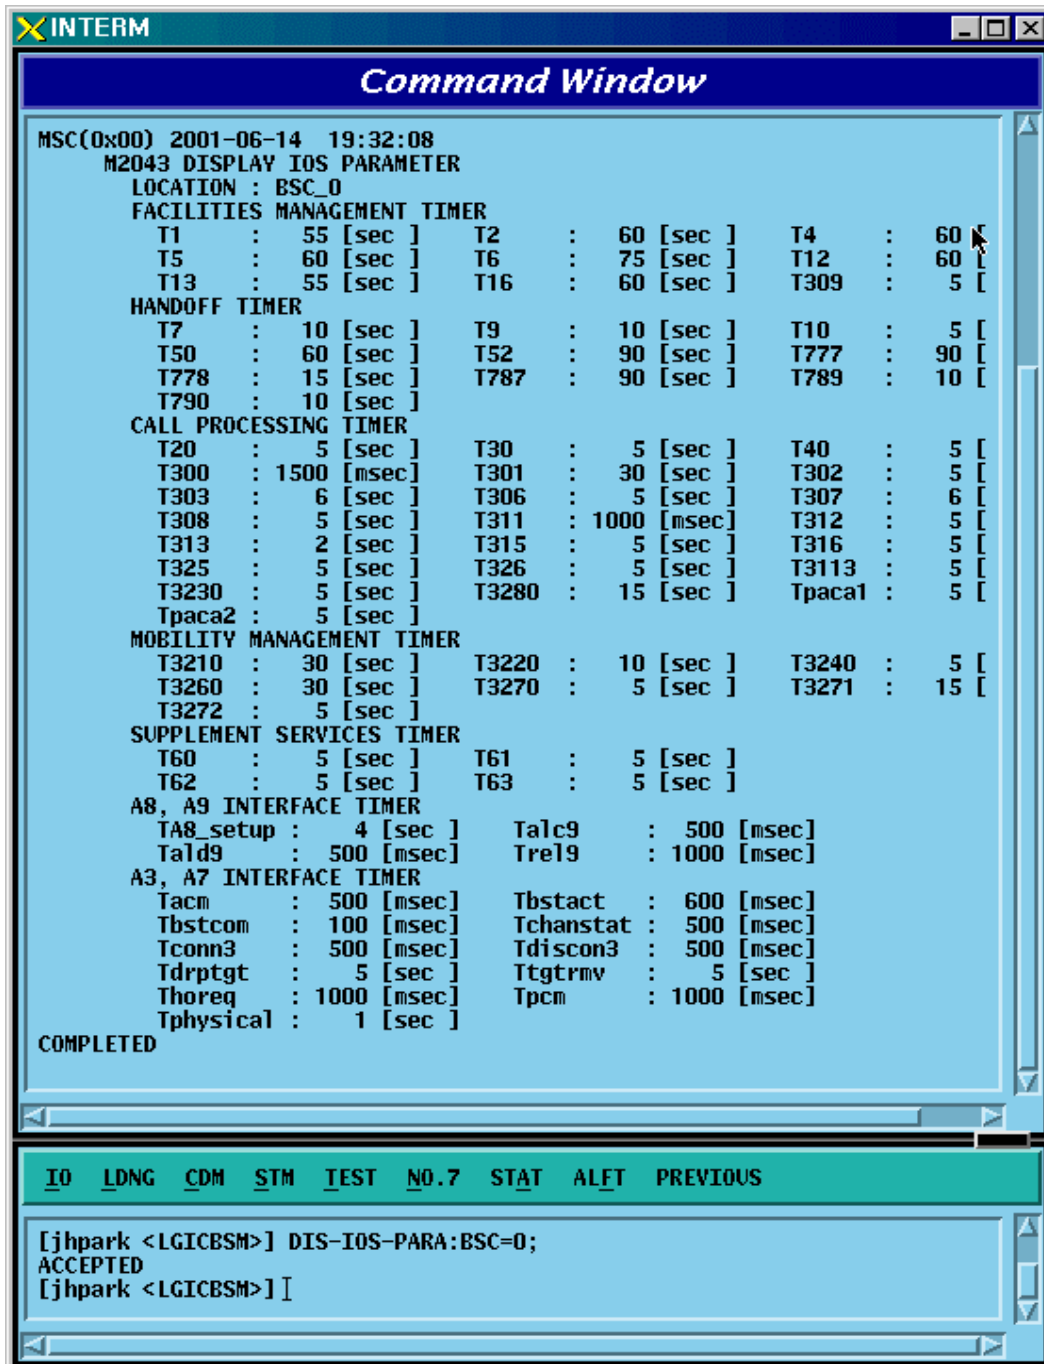


Fig. 4.3-24 IOS Parameter Verification

4.3.2.3. Forward Link Power Management Information (RS1) Verification

Rate Set 1 transmits data at the speed of 9600,4800,2400,1200 bps. Input the following command to check the parameter information for RS1 Forward Link Power Management. Among the input values, FER (Frame Error Rate) has the value ranging from 0.5%, 1 to 5%.

- Command DIS-RS1-FWDP: BSC=a, BTS=b, FER=c;
 - a : BSC Number(0~11)
 - b: BTS Number(0~47)
 - c:FER

(POINT_5/PERCENT_1/PERCENT_2/PERCENT_3/PERCENT_4/PERCET_5)

- Input DIS-RS1-FWDP: BSC=0, BTS=0, FER=POINT_5;
- Output

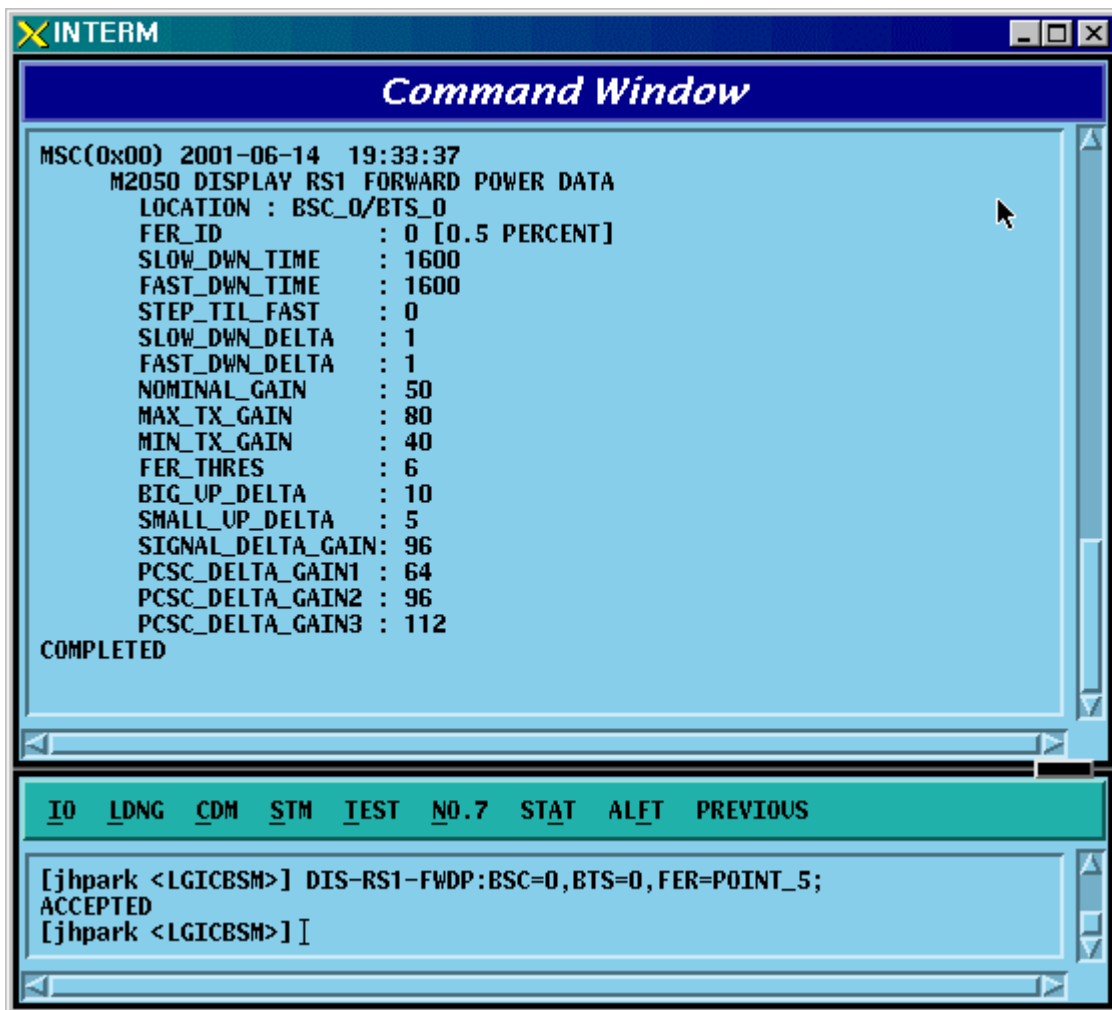


Fig. 4.3-25 Forward Link Power Management Information (RS1) Verification

4.3.2.4. Backward Link Power Management Information (RS1) Verification

Rate Set 1 transmits data at the speed of 9600,4800,2400,1200 bps. Input the following command to check the parameter information for RS1 backward Link Power Management. Among the input values, FER (Frame Error Rate) has the value ranging from 0.5%, 1 to 5%.

- Command DIS-RS1-REVP: BSC=a, BTS=b, FER=c;
 - a : BSC Number(0~11)
 - b: BTS Number(0~47)
 - c:FER

(POINT_5/PERCENT_1/PERCENT_2/PERCENT_3/PERCENT_4/PERCET_5)

- Input DIS-RS1-REVP: BSC=0, BTS=0, FER=POINT_5;
- Output

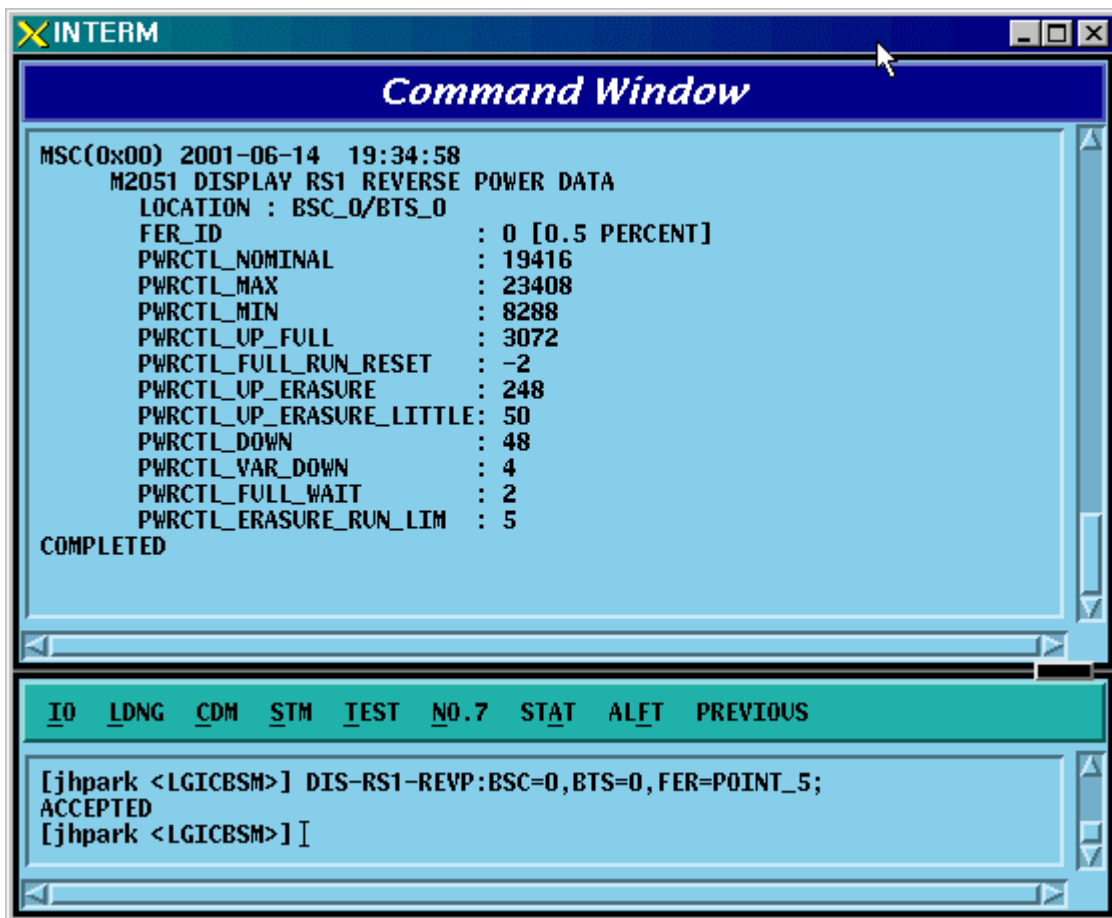


Fig. 4.3-26 Backward Link Power Management Information (RS1) Verification

4.3.2.5. Forward Link Power Management (RS2) Verification

Rate Set 2 transmits data at the speed of 14400,7200,3600,1800 bps. Input the following command to check the parameter information for RS2 Forward Link Power Management. Among the input values, FER (Frame Error Rate) has the value ranging from 0.5%, 1 to 5%.

- Command DIS-RS2-FWDP: BSC=a, BTS=b, FER=c;

a : BSC Number(0~11)

b: BTS Number(0~47)

c:FER

(POINT_5/PERCENT_1/PERCENT_2/PERCENT_3/PERCENT_4/PERCET_5)

- Input DIS-RS2-FWDP: BSC=0, BTS=0, FER=POINT_5;
- Output

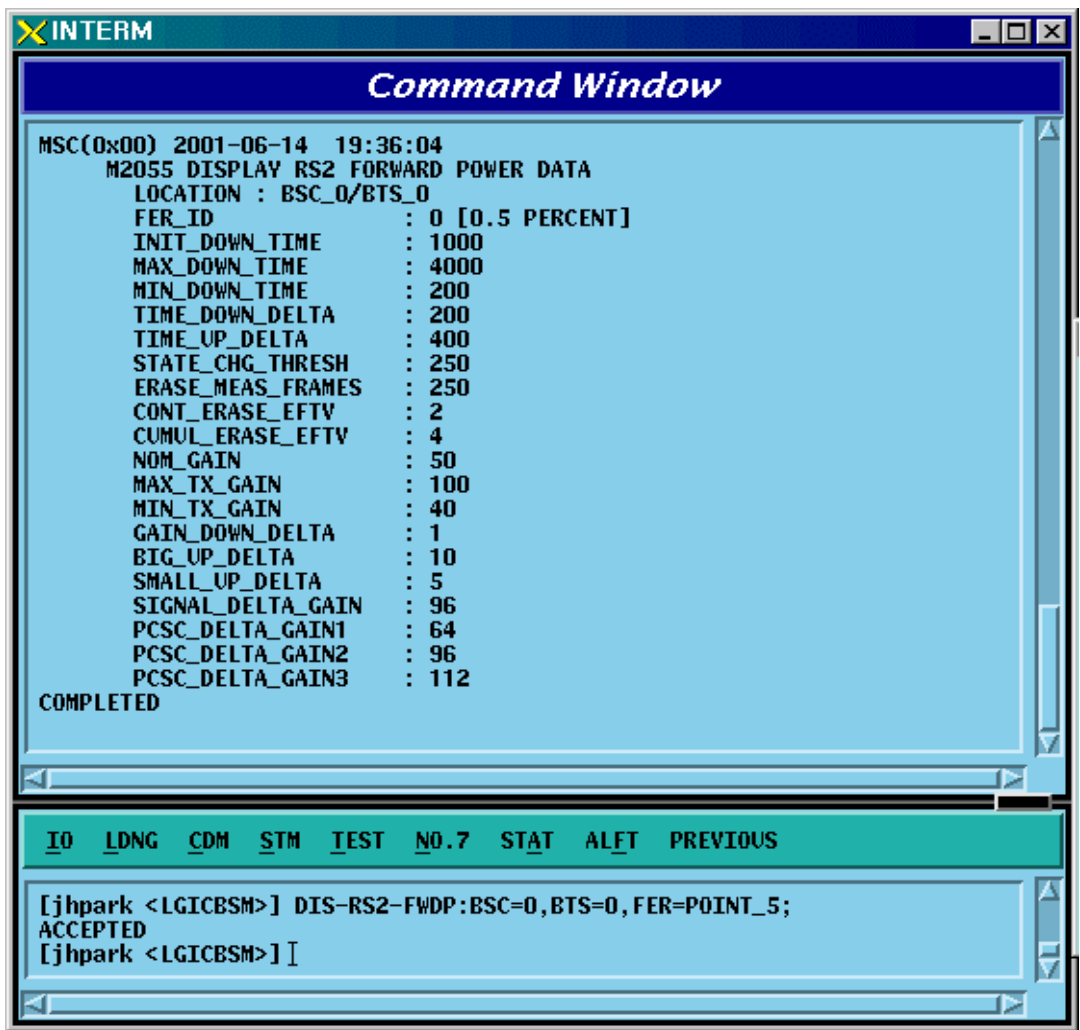


Fig. 4.3-27 Forward Link Power Management Information (RS2) Verification