


# FLATRON 776FT

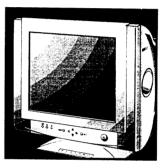

User's Guide Benutzerhandbuch Manuel d'utilisation Guida Utente Guia del Usuario Manual do preprietário Handleiding

Please read this manual carefully before operating your set. Retain it for future reference.

Record model number and serial number of the set. See the label attached on the back cover and quote this information to your dealer when you require service.

P/NO: 3828TUL087A (S-0006) Printed in Korea



# Contents

Introduction	
Connecting the Monitor	
Location and Function of Controls	A:
Control Panel Function	A
On Screen Display (OSD) Control Adjustmen	tA
On Screen Display(OSD) Selection	
and Adjustment	A6
Sound Selection and Adjustment	A7
Video Memory Modes	
Troubleshooting	
Specifications	
Einleitung	
Anschließen	B2
Ort und Funktion der Bedienungselemente	B3
Bedienungselemente der Bildkontrolle	
Screen Display (OSD) Anpassung	
OSD Einstellung und Auswahlsymbole	B6
Ton Einstellung und Auswahlsymbole	
Videospeichermodi	
Störungen	B10
Produktbeschreibung	B12
Introduction	C1
Branchement du Moniteur	C2
Nomenclature et Fonctions	C3
Fonctions du Paneau de Commande	C4
Réglage des Commandes Affichage Écran	C5
Options de sélection et de Réglage	
OSD (affichage écran)	C6
Son de Sélection et de Réglage	C7
Mise en Mémoire de Modes Vidéo	C9
Quelques Conseils en Cas D'incident	
Spécifications D'entree	.C12
Introduzione	D1
Collegamento del Monitor	D2
Posizione e Funzione dei Conando di Controlle	
Funzione del Pannello di Controllo	D4
Controllo Regolazione On Screen Display (OS	D)D5
Elementi di Selezione e Regolazione dell'OSD	
Souno di Selezione e Regolazione	
Modalità di Memoria Video	
In Caso di Problemi	D10
Specifiche	D12

IntroducciónE1
Conectando del MonitorE2
Ubicacion y Funcion de los ControlesE3
Función del Panel de ControlE4
Ajuste del Control de Exhibición en Pantalla (OSD)E5
Ajuste del OSD y Selección de ElementosE6
Ajuste del Sonido y Selección de ElementosE7
Modos de Memoria de VideoE9
Sugerencias para Localizar las FallasE10
EspecificacionesE12
IntroduçãoF1
Conectando o MonitorF2
Posição dos Controles e DescriçãoF3
Funções do Painel de ControleF4
Ajuste On Screen Display(OSD)F5
Ajustes OSD e Itens de SeleçãoF6
Ajustes Som e SeleçãoF7
Modos de Memória de VídeoF9
Resolvendo ProblemasF10
EspecificaçõesF12
InleidingN1
De Monitor AansluitenN2
De plaatsing en de werking van de knoppenN3
Het bedieningspaneelN4
Bediening via het beeldscherm OSD
(On Screen Display)N5
Kiezen en instellen via het OSD-systeemN6
Sound Selection and AdjustmentN7
Modi voor videogeheugenN9
Problemen oplossenN10
SpecificatiesN12

# Introduction

Thank you for purchasing a high resolution monitor. It will give you high resolution performance and convenient reliable operation in a variety of video operating modes.

### **Features**

- The monitor is a 17 inches (16.0 inches viewable) intelligent, microprocessor based monitor compatible with most analog RGB (Red, Green, Blue) display standards, including IBM PC®, PS/2®, Apple®, Macintosh®, Centris®, Quadra®, and Macintosh II family.
- The monitor provides crisp text and vivid color graphics with VGA, SVGA, XGA, and VESA Ergonomic modes (non-interlaced), and most Macintosh compatible color video cards when used with the appropriate adaptor. The monitor's wide compatibility makes it possible to upgrade video cards or software without purchasing a new monitor.
- Digitally controlled auto-scanning is done with the micro-processor for horizontal scan frequencies between 30 and 70kHz, and vertical scan frequencies between 50-160Hz.
- This monitor is capable of producing a maximum horizontal resolution of 1280 dots and a maximum vertical resolution of 1024 lines.
- The microprocessor-based digital controls allow you to adjust conveniently a variety of image controls by using the OSD (On Screen Display).
- On Screen Display(OSD) adjustments in six languages:
   English, Deutsch, Français, Español, Italiano, Português for ease of setup and screen optimization
- Plug and play capability if supported by your system
- This monitor has DDC 2B function.\*
- Compliant with the following regulated specifications:\*
  - -FCC Compliance Statement
  - -CE Conformity Notice
  - EPA ENERGY STAR
  - -Swedish MPR II
  - Swedish TCO'95

<sup>\*</sup> For detailed information, please refer to the Reference Guide provided .


# Connecting the Monitor

On the back of the monitor are two plug-in connections; one for the AC power cord, and the other for the signal cable from the video card.

- Power off both the monitor and PC.
- 2 Connect the 15 pin VGA connector of the supplied signal cable to the output VGA video connector on the PC and the matching input connector on the rear of the monitor. The connectors will mate only one way. If you cannot attach the cable easily, turn the connector upside down and try again. When mated, tighten the thumbscrews to secure the connection.
- 2 Locate the appropriate MAC to VGA adapter block at your local computer store. This adapter changes the high density 3 row 15 pin VGA connector to the correct 15 pin 2 row connection to mate with your MAC. Attach the other end of the signal cable to the side of the adapter block with 3 rows.

Connect the attached adapter block/signal cable to the video output on your MAC.


- **3** One end of the AC power cord is connected into the AC power connector on the back of the monitor. The other end is plugged into a properly grounded three-prong AC outlet.
- 4 Power ON the PC, then the monitor.
- **(5)** If you see the **SELF DIAGNOSTICS** message, check the signal cable and connectors.
- 6 After using the system, power OFF the monitor, then the PC.

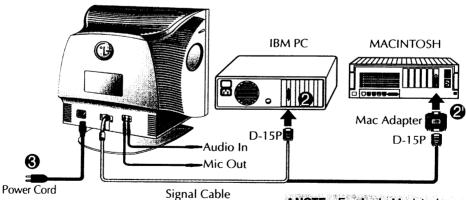


\* NOTE: For Apple Macintosh use, a separate plug adapter is needed to change the 15 pin high density (3 row) D-sub VGA connector on the supplied cable to a 15 pin 2 row connector.

# Location and Function of Controls

# **Front View**

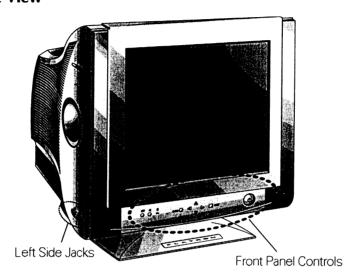


# **Rear View**

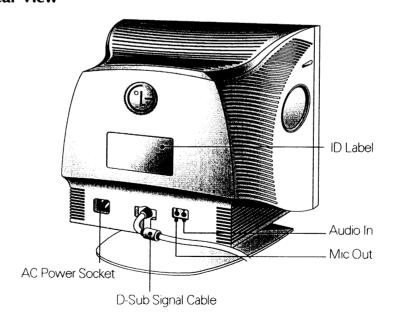

# **Control Panel Function**

# **Front Panel Controls**

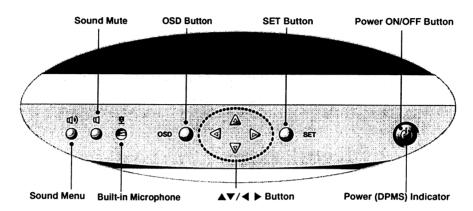

HERMATIN OF PAR	Control	Eunction	
<b>4</b> )	Sound Menu	To adjust sound menu.	
O B	Sound Mute	Used to select mute on (means sound off) and mute off (means sound on).	
<b>€</b>	Built-in Microphone	Built-in Microphone.	
oso 🔾	OSD Button	Use this button to enter or exit the on screen display.	
<b>△ ⊘ ⊘</b>	▲▼/◀ ► Button	Use these buttons to choose or adjust items in the on screen display.	
SET .	SET Button	Use this button to enter a selection in the on screen display.	
	Power ON/OFF Button	Use this button to turn the monitor on or off.	
	Power (DPMS) Indicator	This Indicator lights up green when the monitor operates normally. If the monitor is in DPM (Energy Saving) mode (standby/suspend/power off), this indicator color changes to amber.	

# **Control Panel Function**

# **Left Side Jacks**

Headphone Jack	Headphone Jack that automatically mutes the speaker volume when headphone is attached.
Microphone Jack <u>ம</u>	An external microphone can be used instead of the built-in microphone.

# **Rear Panel Jacks**

	Mic. Out  Connects microphone sound to PC via cable.	
	Audio In	Connects speaker sound to PC via cable attachment.

# **Microphone Operation**

On the left side there is a MIC (Microphone) jack. By plugging a microphone in here, it may reduce the long length of cable needed to reach the PC's sound card. In order to use this MIC jack, you need to use a cable (supplied) to plug into the rear of the monitor (MIC OUT) and into the MIC input jack of your sound card (if available).

### **Audio Features**


A major feature of this monitor is its built-in audio system. This conveniently integrates a stereo audio amplifier and speakers without taking up any more space. Because the monitor is designed like this, you can easily upgrade to audio capable multimedia applications by attaching your PC with sound card to the back of this monitor. It will result in significantly less cabling and space requirements.

# On Screen Display (OSD) Control Adjustment

Making adjustments to the image size, position and operating parameters of the monitor are quick and easy with the On Screen Display Control system. A quick example is given below to familiarize you with the use of the controls. Following section is an outline of the available adjustments and selections you can make using the OSD.




To make adjustments in the On Screen Display, follow these steps:

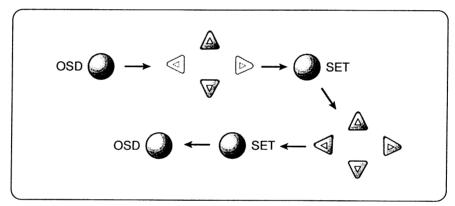

- Press the OSD Button, then the main menu of the OSD appears.
- 2 To acces a control, use the △ or ▽ Buttons. When the icon you want becomes highlighted, press the SET Button.
- 3 Use the  $\Delta \nabla / \Delta \triangleright$  Buttons to adjust the item to the desired level.
- Accept the changes by pressing the SET Button.
- **5** Exit the OSD by Pressing the **OSD Button**.

# On Screen Display(OSD) Selection and Adjustment

You were introduced to the procedure of selection and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the items that are shown on the Menu.

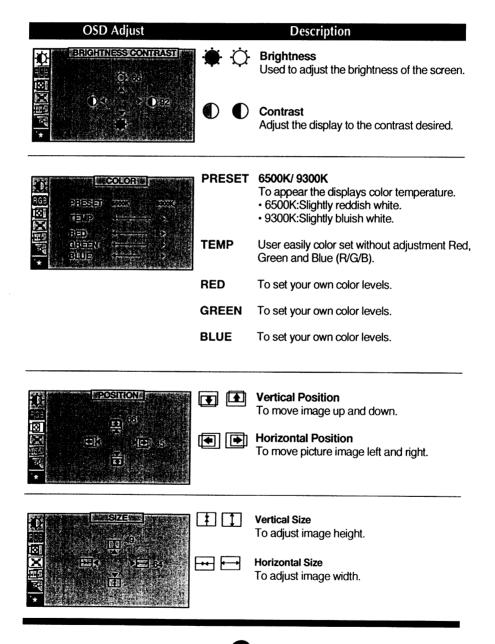


# On Screen Display(OSD) Selection and Adjustment

OSD Adjust		Description
SHAPES CO.		Side Pincushion To correct the bowing in and out of the image Side pincushion balance To correct the balance of both sides bowling.
		<b>Trapezoid</b> To correct geometric distortion.
*		Parallelogram This control adjusts for a skewing of the screen image.
	00	Tilt To correct image rotation.
		<b>Corner Top</b> To correct the irregular distortion of the displayed image.
		Corner Bottom To correct the irregular distortion of the displayed image.
SETUP:    SETUP:   SE	VIDEO LEVEL	This item is used to select the monitor's input signal level. The normal level used for most PC's is 0.7V. When the screen suddenly gets brightened or blurry, please select 1.0V and try again.
ANOVOE DENOMINE	DDC	To select the DDC function(ON/OFF).
*	LANGUAGE	To choose the language in which the control names are displayed.
	OSD POSITION	To adjust position of the OSD window on the screen.
INSPECIALE PORTION OF THE PROPERTY OF THE PROP	DEGAUSS	To manually demagnetize the screen which may show some image or color incorrectly.
図 :50 (4	RECALL	If the monitor is operating in a factory preset mode, this control will reset the image to the factory preset mode.
<b>☆</b> PRESET MÓDE		This item allows you to reduce the moire (Moire is caused by interference Horizontal Scan Line with the periodical dot screen). It is normally OFF(H:0/V:0).  The moire adjustments may affect the focus of the screen. The screen image may shake slightly while the moire reduction function is on.
		Use to adjust the overall purity of the image if the color appears uneven.

# Sound Selection and Adjustment

You were introduced to the procedure of selection and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the items that are shown on the main Menu.

To make adjustments in the On Screen Display, follow these steps:

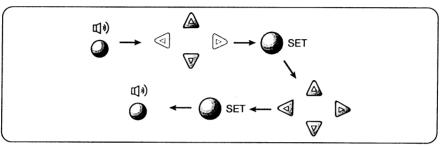

# OSD Adjust VOLUME Raises or lowers audio level. TREBLE Raises or lowers treble level. BASS Raises or lowers Bass level. BALANCE Changes balance of left/right speaker level. MICROPHONE Enables or disables microphone usage.

# Video Memory Modes

The monitor has 36 memory locations for display modes, 11 of which are factory preset to popular video modes.

### **Display Modes (Resolution)**

D	isplay Mod	es (Resolution)	Horizontal Freq.(kHz)	Vertical Freq.(Hz)
1	VESA	640 x 480	37.50	75
2	VESA	800 x 600	46.88	75
3	VESA	800 x 600	53.68	85
4	VESA	1024 x 768	68.677	85
5	VESA	640 x 400	31.47	70
6	VESA	640 x 480	31.47	60
7	VESA	800 x 600	37.88	60
8	VESA	640 x 480	43.27	85
9	MAC	832 x 624	49.75	75
10	VESA	1024 x 768	60.02	75
11	VESA	1280 x 1024	63.98	60

### **User Modes**

• Modes 12-36 are empty and can accept new video data. If the monitor detects a new video mode that has not been present before or is not one of the preset modes, it stores the new mode automatically in one of the empty modes starting with mode 12.

If you use up the 25 blank modes and still have more new video modes, the monitor replaces the information in the user modes starting with mode 12.

# **Recalling Display Modes**

• When your monitor detects a mode it has seen before, it automatically recalls the image settings you may have made the last time you used that mode.

You may, however, manually force a recall of each of the 11 preset modes by pressing the Recall button. All preset modes are automatically recalled as the monitor senses the incoming signal.

The ability to recall the preset modes is dependent on the signal coming from your PC's video card or system. If this signal does not match any of the factory modes, the monitor automatically sets itself to display the image.

# **Troubleshooting**

Check the following before calling for service.

### SELF DIAGNOSTICS message.

■ The signal cable is not connected, or is loose. Check and secure the connection.

### OUT OF FREQUENCY message appears.

 The frequency of the signal from the video card is outside the operating range of the monitor.

\* Horizontal Frequency : 30-70kHz \* Vertical Frequency : 50-160Hz

Use the graphics board's utility software to change the frequency setting (Refer to the manual for graphics board).

### The power LED is illuminated amber.

- Display power management mode.
- There is no active signal coming from the PC.
- The signal cable is not fastened securely.
- Check the computer power and graphics adapter configuration.

# The image on the SCREEN is not centered, or too small, or not a rectangle shape.

• Image adjustment not been done yet in the current operating mode. Use the OSD, SET and △▽/→ ▷ buttons to set the image to your liking.

### The monitor doesn't enter the power saving off mode (Amber).

 Computer video signal is not VESA DPMS standard. Either the PC or the video controller card is not using the VESA DPMS power management function.

# An abnormal picture is displayed on the screen. For example, the upper part of the picture may be missing or dark.

• If using certain non-VESA Standard video card, an abnormal picture may be displayed. Try setting it to one of the factory preset modes, or selecting to a resolution and refresh rate within the specification limits of the monitor.



# Specifications

Picture Tube	17 inch (16.0 inches viewable)		
	90 degree deflection		
	0.24mm Slot pitch		
	W-ARAS(Wide Anti-Reflective Anti-Static) coating		
Sync Input	Horizontal Freq.	30 - 70kHz (Automatic)	
	Vertical Freq.	50 - 160Hz (Automatic)	
	Input Form	Separate TTL, Positive/Negative	
	Signal Input	15 pin D-Sub Connector	
Video Input	Input Form	Separate, RGB Analog, 0.7Vp-p/75 ohm, Positive	
	Resolution(max)	1280 x 1024@60Hz	
Audio	RMS Audio Output 4W (R+L)		
	Input Sensitivity	0.7 Vrms	
	Built-in MIC	E.C.M type (Electrect Condenser Microphone)	
**************************************	Speaker Impedance $4\Omega$		
Power	Normal(Max.)	≤ 115W	
Consumption	Stand-by/Suspend	≤ 15W	
	Power Off	≤ 8W	
មិលខានសនាយ៉ា	Width	46.0 cm / 18.1 inches	
iili auteiseo)	Height	43.9 cm / 17.28 inches	
	Depth	44.0 cm / 17.3 inches	
Powerlingin	AC 100-240V 50/6	OHz 2.0A	
W/= [6] 8)	Net	21 kg (46.3 lbs)	
Brodisten Bill	Operating Condition		
Cerelliere	Temperature 10 °C to 35 °C		
	Humidity	10 % to 90 % non-Condensing	
	Storage Condition		
	Temperature 0 °C to 60 °C		
	Humidity	5% to 90% non-Condensing	

NOTE

Information in this document is subject to change without notice and does not represent a commitment on the part of LG Electronics Inc.