

ATTACHMENT J – USERS MANUAL


LG Electronics Inc.
<http://www.lge.com>

Color Monitor

FLATRON

LCD 565LE

User's Guide
Manuel d'utilisation
Guía del Usuario
Manual do proprietário

Please read this manual carefully before operating your set.
Retain it for future reference.
Record model number and serial number of the set.
See the label attached on the back cover and quote this
information to your dealer when you require service.

Mexico only:
LG Electronics México S.A. de C.V.
Sor Juana Inés de la Cruz No. 555 Col. San Lorenzo
Tlalhepantla, Edo. de México C.P. 54033
Tel. 321 19 00 fax. 565 75 49
Lada sin costo 01 800 50 481 00



As an ENERGY STAR Partner
LG Electronics U. S. A., Inc.
has determined that this product
meets the ENERGY STAR
guidelines for energy efficiency.

P/NO : 3828TUL193X (S-0105)

Printed in Korea



Contents

ENGLISH

Introduction.....	A1
Connecting the Monitor.....	A2
Location and Function of Controls	A3
Control Panel Function	A4
On Screen Display (OSD) Control Adjustment.....	A5
On Screen Display(OSD) Selection and Adjustment	A6
Video Memory Modes.....	A8
Troubleshooting.....	A9
Specifications.....	A1

FRANÇAIS

Introduction.....	C1
Branchement du Moniteur.....	C2
Nomenclature et Fonctions.....	C3
Fonctions du Panneau de Commande	C4
Réglage des Commandes Affichage Écran.....	C5
Options de sélection et de Réglage OSD (affichage écran)	C6
Mise en Mémoire de Modes Vidéo.....	C8
Quelques Conseils en Cas D'incident.....	C9
Spécifications D'entree	C10

ESPAÑOL

Introducción.....	E1
Conectando el Monitor.....	E2
Ubicación y Función de los Controles	E3
Función del Panel de Control	E4
Ajuste del Control de Exhibición en Pantalla (OSD)	E5
Ajuste del OSD y Selección de Elementos	E6
Modos de Memoria de Video	E8
Sugerencias para Localizar las Fallas.....	E9
Especificaciones	E10

PORTUGUÊS

Introdução.....	F1
Conectando o Monitor	F2
Posição dos Controles e Descrição	F3
Funções do Painel de Controle	F4
Ajuste On Screen Display(OSD)	F5
Ajustes OSD e Itens de Seleção	F6
Modos de Memória de Vídeo.....	F8
Resolvendo Problemas.....	F9
Especificações	F10

Introduction

The FLATRON LCD 575LE Flat Panel Monitor has an active matrix TFT (Thin-Film Transistor) LCD (Liquid Crystal Display).

This monitor is designed for use in small working areas or for those who need more working space on the desk.

ENGLISH

Features

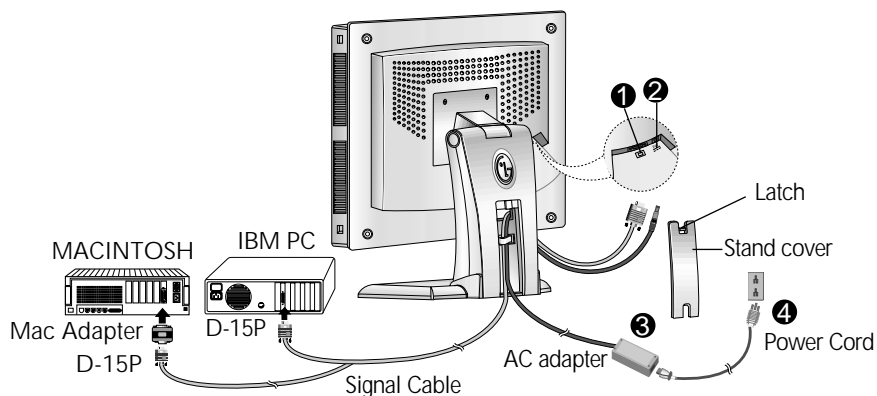
- The FLATRON LCD 575LE is a 15.0-inch (15.0 inches viewable) intelligent microprocessor based monitor.
- Digitally controlled auto-scanning is done with the microprocessor for horizontal scan frequencies between 31 and 61kHz, and vertical scan frequencies between 56 and 75Hz.
- The microprocessor-based digital controls allow you to adjust conveniently a variety of image controls by using the OSD (On Screen Display).
- It supports resolutions up to 1024x768, and has a wide viewing angle of ± 50 degrees horizontal and $+30, -40$ degrees vertical.
- The monitor is shipped with 14 factory pre-programmed video modes that are permanently resident. In addition, there are 16 user-storable modes, for a total of 30 memory modes.
- Plug and play capability if supported by your system.
- This monitor has DDC 2B function.*
- Compliant with the following regulated specifications :*
 - EPA ENERGY STAR
 - Swedish TCO'99

**For detailed information, please refer to the Reference Guide provided.*

Connecting the Monitor

To set up the monitor, ensure that the power is turned off to the monitor, computer system, and other attached devices, then follow these steps:

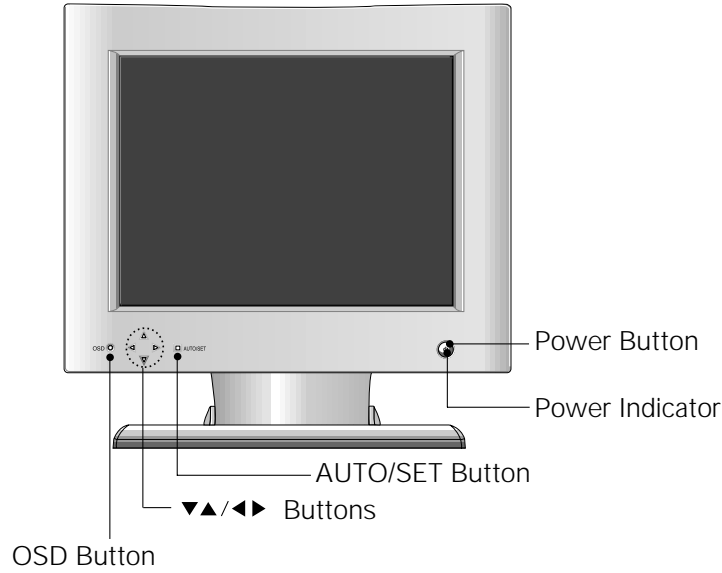
- 1 Place the monitor in a convenient, well-ventilated location near your computer.
- 2 Power off both the monitor and Computer.
- 3 Slightly press and pull the latch on Stand cover.
- 4 Connect the end of monitor signal cable to the connector 1 at the rear panel of your monitor through the slot and cable holder on Stand. Connect the other end to the 15-pin connector on the rear panel of the computer and tighten the screws. Be sure the signal cable aligns with the 15-pin connector.
- 4 Connect the end of monitor signal cable to the connector 1 at the rear panel of your monitor through the slot and cable holder on Stand. Connect the other end of the monitor signal cable to the rear panel of Macintosh computer through a Macintosh adapter and then tighten screws.
- 5 Connect the plug from the AC adapter into the base of the monitor. 2 Connect one end of the AC power cord to the AC adapter 3 and the other end to a properly grounded AC outlet that is easily accessible and close to the monitor. 4
- 6 After connecting cables, put stand cover correctly into the holes unders stand. If securely connected, you can hear click sound from the latch.
- 7 Power ON the PC, then the monitor.
- 8 If you see the **NO SIGNAL** message, check the signal cable and connectors.
- 9 After using the system, power OFF the monitor, then the PC.



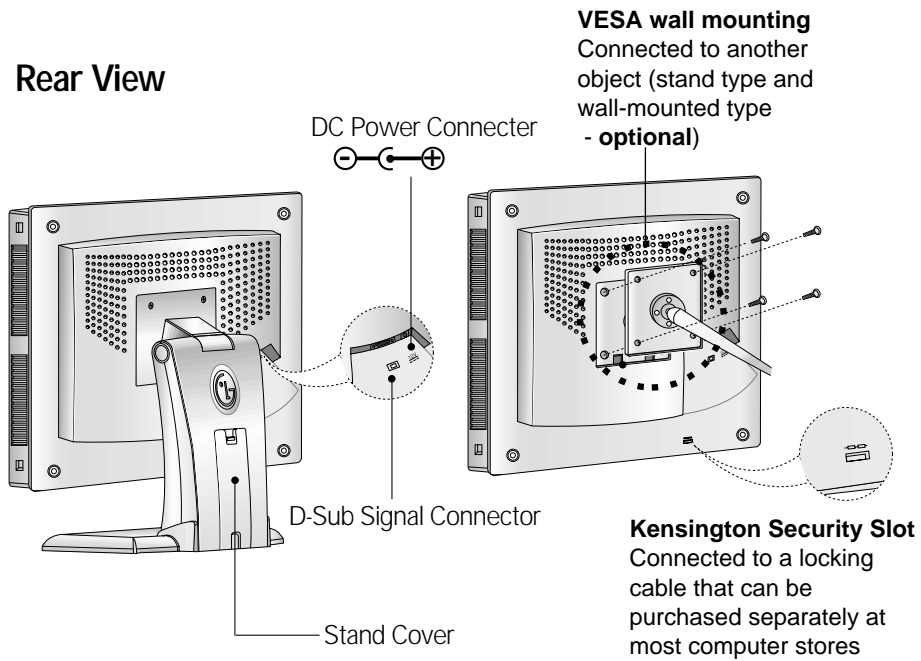
* **NOTE** : If you see the "OUT OF RANGE" message, check to make sure your system is set to one of the factory preset modes.(see page A8)

Location and Function of Controls

Front View



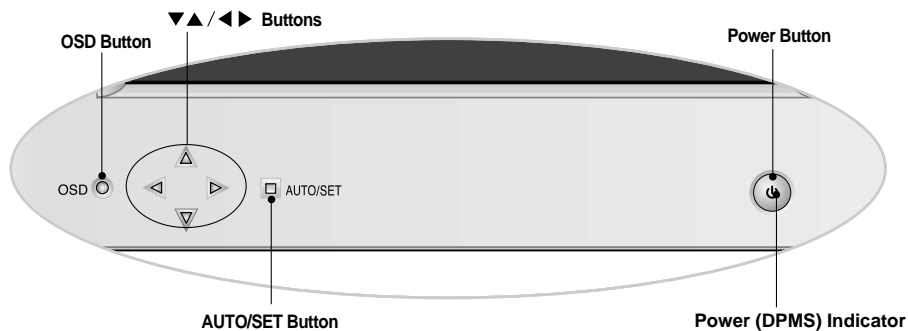
Rear View



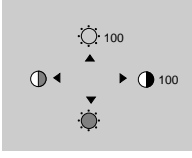






NOTE : This monitor accept a 75mm x 75mm VESA-compliant mounting interface pad.

Control Panel Function

Front Panel Controls



Control	Function
 OSD Button	<p>Use this button to enter and from the on screen display (OSD).</p>
 ▼▲/◀▶ Buttons 	<p>Use these buttons to choose or adjust items in the on screen display.</p> <p><Shortcut Keys></p> <ul style="list-style-type: none"> Brightness and Contrast can be adjusted directly without entering the On Screen Display (OSD) system. Touch the ▼▲/◀▶ buttons to adjust the settings and then the OSD button to save all changes. The Brightness and Contrast functions are also available in the On Screen Display (OSD) menu.
 AUTO/SET Button 	<p>Use this button to enter a selection in the on screen display.</p> <p>* AUTO adjustment function Touch the AUTO/SET button before using OSD menu. This button is for the automatic adjustment of the screen position, clock and phase.</p> <p>Note: Some signal from some graphics boards may not function properly. If the results are unsatisfactory, adjust your monitor's Position, Clock and Phase manually.</p>
 Power (DPMS) Indicator	<p>This indicator lights up green when the monitor operates normally. If the monitor is in DPM (Energy Saving) mode (stand-by/ suspend/power off), this indicator color changes to amber.</p>
 Power Button	<p>Use this button to turn the monitor on or off.</p>

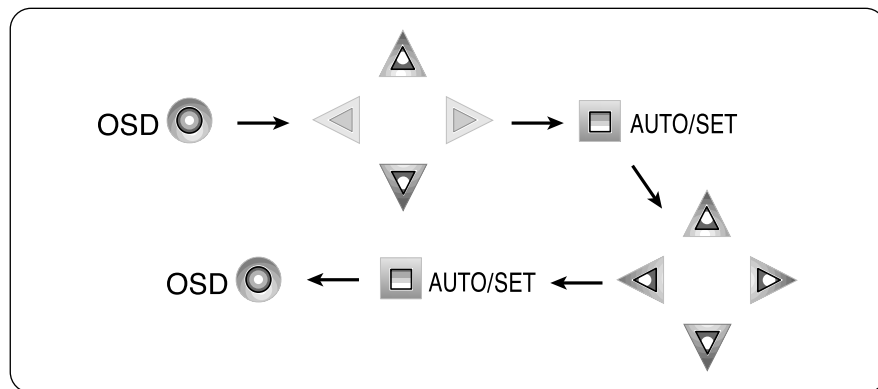
On Screen Display (OSD) Control Adjustment

Making adjustments to the image size, position and operating parameters of the monitor are quick and easy with the On Screen Display Control system. A quick example is given below to familiarize you with the use of the controls. Following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

- Allow the monitor to stabilize for at least 30 minutes before making image adjustment.

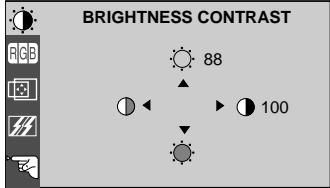
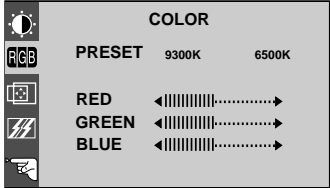
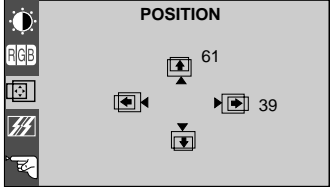
To make adjustments in the On Screen Display, follow these steps:



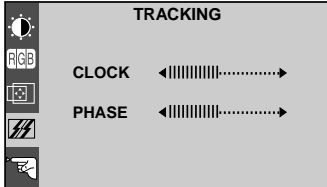
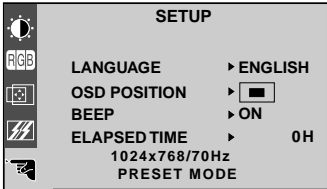
- 1** Press the **OSD Button**, then the main menu of the OSD appears.
- 2** To access a control, use the **▼▲ Buttons**. When the icon you want becomes highlighted, press the **AUTO/SET Button**.
- 3** Use the **▼▲/◀▶ Buttons** to adjust the item to the desired level.
- 4** Accept the changes by pressing the **AUTO/SET Button**.
- 5** Exit the OSD by Pressing the **OSD Button**.

On Screen Display(OSD) Selection and Adjustment

You were introduced to the procedure of selection and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the items that are shown on the Menu.

OSD Adjust	Description
 <p>The OSD menu for BRIGHTNESS CONTRAST shows a vertical bar on the left with icons for brightness, contrast, color, and position. The main area has a sun icon with '88' and a slider with '100' on the right.</p>	<p>Brightness Used to adjust the brightness of the screen.</p> <p>Contrast Adjust the display to the contrast desired.</p>
 <p>The OSD menu for COLOR shows a vertical bar on the left. The main area has 'PRESET 9300K 6500K' and three horizontal sliders for RED, GREEN, and BLUE.</p>	<p>PRESET 9300K/ 6500K To appear the displays color temperature.</p> <ul style="list-style-type: none"> • 9300K:Slightly bluish white. • 6500K:Slightly reddish white. <p>RED To set your own color levels.</p> <p>GREEN To set your own color levels.</p> <p>BLUE To set your own color levels.</p>
 <p>The OSD menu for POSITION shows a vertical bar on the left. The main area has a monitor icon with '61' and a slider with '39' on the right.</p>	<p>Vertical Positio To move image up and down.</p> <p>Horizontal Position To move picture image left and right.</p>

On Screen Display(OSD) Selection and Adjustment

OSD Adjust	Description
 <p>The screenshot shows the 'TRACKING' OSD menu. On the left is a vertical toolbar with icons for a sun, RGB, a square with a cross, a lightning bolt, and a hand. The menu items are: 'CLOCK' with a horizontal bar graph and arrows, and 'PHASE' with a similar horizontal bar graph and arrows.</p>	<p>CLOCK To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.</p> <p>PHASE To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.</p>
 <p>The screenshot shows the 'SETUP' OSD menu. On the left is the same vertical toolbar as in the previous menu. The menu items are: 'LANGUAGE' with a right-pointing arrow and 'ENGLISH' to its right; 'OSD POSITION' with a right-pointing arrow and a small black square to its right; 'BEEP' with a right-pointing arrow and 'ON' to its right; 'ELAPSED TIME' with a right-pointing arrow and '0H' to its right. At the bottom, it displays '1024x768/70Hz' and 'PRESET MODE'.</p>	<p>LANGUAGE To choose the language in which the control names are displayed.</p> <p>OSD POSITION To adjust position of the OSD window on the screen.</p> <p>BEEP To select beep ON or OFF.</p> <p>ELAPSED TIME To display the use time of monitor</p>

Video Memory Modes

The monitor has 30 memory locations for display modes, 14 of which are factory preset to popular video modes.

Display Modes (Resolution)

	Display Modes (Resolution)	Horizontal Freq.(kHz)	Vertical Freq.(Hz)
1	VGA 640 x 350	31.47	70
2	VGA 720 x 400	31.47	70
3	VGA 640 x 480	31.47	60
4	MAC 640 x 480	35.00	67
5	VESA 640 x 480	37.86	73
6	VESA 640 x 480	37.50	75
7	VESA 800 x 600	35.16	56
8	VESA 800 x 600	37.88	60
9	VESA 800 x 600	48.08	72
10	VESA 800 x 600	46.88	75
11	MAC 832 x 624	49.72	75
12	VESA 1024 x 768	48.36	60
13	VESA 1024 x 768	56.48	70
14	VESA 1024 x 768	60.02	75

Note : This LCD monitor has been pre-adjusted to the video mode of VESA 1024x768 @75Hz.

User Modes

- Modes 15-30 are empty and can accept new video data. If the monitor detects a new video mode that has not been present before or is not one of the preset modes, it stores the new mode automatically in one of the empty modes starting with mode 15.

If you use up the 16 blank modes and still have more new video modes, the monitor replaces the information in the user modes starting with mode 15.

Troubleshooting

Check the following before calling for service.

Display Position is incorrect.

- Push the **AUTO/SET** Button.
- If the results are unsatisfactory, adjust the image position using the H position and V position icon in the on screen display.

On the screen background, vertical bars or stripes are visible.

- Push the **AUTO/SET** Button.
- If the results are unsatisfactory, decrease the vertical bars or stripes using the **CLOCK** icon in the on screen display.

Any horizontal noise appearing in any image or characters are not clearly portraid.

- Push the **AUTO/SET** Button.
- If the results are unsatisfactory, decrease the horizontal bars using the **PHASE** icon in the on screen display.

NO SIGNAL message.

- The signal cable is not connected, or is loose. Check and secure the connection.

OUT OF RANGE message appears.

Picture is blank.

- The frequency of the signal from the video card is outside the operating range of the monitor.

Horizontal Frequency: 31kHz-61kHz

Vertical Frequency: 56Hz-75Hz

* Use the graphics board's utility software to change the frequency setting (Refer to the manual for graphics board).

* You can change the setup to the supported resolution using the **Safe Mode** (Press the F8 key during booting the system).

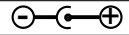
The power LED is illuminated amber.

- The monitor is in its display power management mode.
- There is no active signal coming from the PC.
- The signal cable is not fastened securely.
- Check the computer power and graphics adapter configuration.

The monitor doesn't enter the power saving off mode (Amber).

- Computer video signal is not VESA DPMS standard. Either the PC or the video controller card is not using the VESA DPMS power management function.

Specifications

Display	Type	15 inch (38.1cm) Flat Panel Active matrix-TFT LCD Anti-Glare coating
	Viewable Size	15 inch (38.1cm)
	Pixel pitch	0.297 x 0.297mm
	True color	16 million color
	Sync Input	Horizontal Freq.
	Vertical Freq.	56 - 75Hz (Automatic)
	Input Form	Separate TTL, Positive/Negative
	Signal Input	15 pin D-Sub Connector
Video Input	Display Area	304 x 228mm / 12.0 x 9.0 inch
	Input Form	Separate, RGB Analog, 0.714Vp-p/ 75ohm, Positive
	Resolution	VESA 1024 x 768 / 75Hz max
Power Consumption	Normal	≤ 30W
	Stand-by/Suspend	≤ 3W
	Power Of	≤ 3W
Dimensions	Width	39.4 cm / 15.5 inches
	Height	37.87 cm / 14.91 inches
	Depth	16.18 cm / 6.37 inches
Power Input	DC 12V 3A	
AC-DC Adapter	Input	AC 100-240V 50-60Hz 1.2A~0.6A
	Output	DC 12V 3A 
Weight	Net	5.0 kg (11.02 lbs)
Tilt Range	Down	5°
	Up	30°
Environmental Conditions	Operating Condition	
	Temperature	10 °C to 35 °C
	Humidity	10 % to 80 % non-Condensing
	Storage Condition	
	Temperature	-20 °C to 60 °C
	Humidity	5 % to 95 % non-Condensing

NOTE

- Information in this document is subject to change without notice.