



LG Electronics Inc.

<http://www.lge.co.kr>

Color Monitor

FLATRON

LCD 680LE

**User's Guide
Benutzerhandbuch
Manuel d'utilisation
Guida Utente
Guía del Usuario
Manual do proprietário
Handleiding**

Please read this manual carefully before operating your set.
Retain it for future reference.
Record model number and serial number of the set.
See the label attached on the back cover and quote this
information to your dealer when you require service.

Contents

ENGLISH

Introduction	A1
Connecting the Monitor	A2
Location and Function of Controls	A4
Control Panel Function	A5
On Screen Display (OSD) Control Adjustment	A6
On Screen Display(OSD) Selection and Adjustment	A7
Video Memory Modes	A9
Troubleshooting	A10
Specifications	A11

DEUTSCH

Einleitung	B1
Anschließen	B2
Ort und Funktion der Bedienungselemente	B4
Bedienungselemente der Bildkontrolle	B5
On Screen Display (OSD) Anpassung	B6
OSD Einstellung und Auswahlssymbole	B7
Videospeichermodi	B9
Störungen	B10
Produktbeschreibung	B11

FRANÇAIS

Introduction	C1
Branchement du Moniteur	C2
Nomenclature et Fonctions	C4
Fonctions du Panneau de Commande	C5
Réglage des Commandes Affichage Écran	C6
Options de sélection et de Réglage OSD (affichage écran)	C7
Mise en Mémoire de Modes Vidéo	C9
Quelques Conseils en Cas D'incident	C10
Spécifications D'entree	C11

ITALIANO

Introduzione	D1
Collegamento del Monitor	D2
Posizione e Funzione dei Conandi di Controllo	D4
Funzione del Pannello di Controllo	D5

Controllo Regolazione On Screen Display (OSD)	D6
Elementi di Selezione e Regolazione dell'OSD	D7
Modalità di Memoria Video	D9
In Caso di Problemi	D10
Specifiche	D11
Introducción	E1

ESPAÑOL

Conectando del Monitor	E2
Ubicación y Funcion de los Controles	E4
Función del Panel de Control	E5
Ajuste del Control de Exhibición en Pantalla (OSD)	E6
Ajuste del OSD y Selección de Elementos	E7
Modos de Memoria de Video	E9
Sugerencias para Localizar las Fallas	E10
Especificaciones	E11
Introdução	F1

PORTUGUÊS

Conectando o Monitor	F2
Posição dos Controles e Descrição	F4
Funções do Painel de Controle	F5
Ajuste On Screen Display(OSD)	F6
Ajustes OSD e Itens de Seleção	F7
Modos de Memória de Vídeo	F9
Resolvendo Problemas	F10
Especificações	F11
Inleiding	N1

NEDERLANDS

De Monitor Aansluiten	N2
De plaatsing en de werking van de knoppen	N4
Het bedieningspaneel	N5
Bediening via het beeldscherm OSD (On Screen Display)	N6
Kiezen en instellen via het OSD-systeem	N7
Modi voor videogeheugen	N9
Problemen oplossen	N10
Specificaties	N11

Introduction

The FLATRON LCD 680LE Flat Panel Monitor has an active matrix TFT (Thin-Film Transistor) LCD (Liquid Crystal Display).

This monitor is designed for use in small working areas or for those who need more working space on the desk.

ENGLISH

Features


- The FLATRON LCD 680LE is a 15.7-inch (15.7 inches viewable) intelligent microprocessor based monitor.
- Digitally controlled auto-scanning is done with the microprocessor for horizontal scan frequencies between 30 and 80kHz, and vertical scan frequencies between 56 - 85Hz.
- The microprocessor-based digital controls allow you to adjust conveniently a variety of image controls by using the OSD (On Screen Display).
- It supports resolutions up to 1280x1024, and has a wide viewing angle of ± 60 degrees horizontal and ± 45 degrees vertical.
- The monitor is shipped with 16 factory pre-programmed video modes that are permanently resident. In addition, there are 10 user-storable modes, for a total of 26 memory modes.
- Plug and play capability if supported by your system.
- This monitor has DDC 2B function.*
- Compliant with the following regulated specifications :*
 - EPA ENERGY STAR
 - Swedish TCO'99

**For detailed information, please refer to the Reference Guide provided.*

Connecting the Monitor

To set up the monitor, ensure that the power is turned off to the monitor, computer system, and other attached devices, then follow these steps:


- 1 Power off both the monitor and computer.
- 2 Slightly press and pull the latch on Stand cover.
- 3 Connect one end of the monitor signal cable to the input connector on the rear panel of the monitor.
- 4 Connect the other end to the 15-pin connector on the rear panel of the computer and tighter the screws. Be sure the signal cable aligns with the 15-pin connector.
- 4 Connect the other end of the monitor signal cable to the rear panel of Macintosh computer through a Macintosh adapter and then tighten screws.
- 5 Connect the plug from the AC adapter into the base of the monitor 1. Connect one end of the AC power cord to the AC adapter 2 and the other end to a properly grounded AC outlet that is easily accessible and close to the monitor 3.
- 6 Power on the computer, then the monitor.
- 7 If you see the NO SIGNAL message, check the signal cable and connectors.
- 8 After using the system, power OFF the monitor, then the computer.

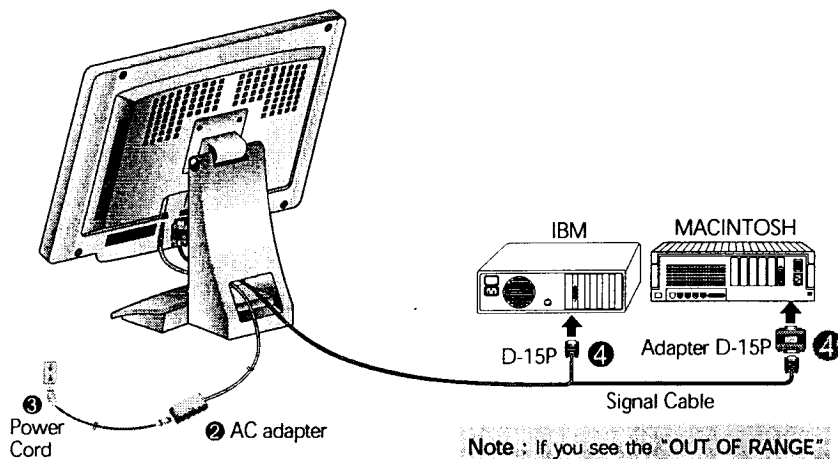


Note: If you see the "OUT OF RANGE" message, check to make sure your system is set to one of the factory preset modes (see page A8), or is set to a resolution and refresh rate within the specification limits of this monitor.

Location and Function of Controls

Front View

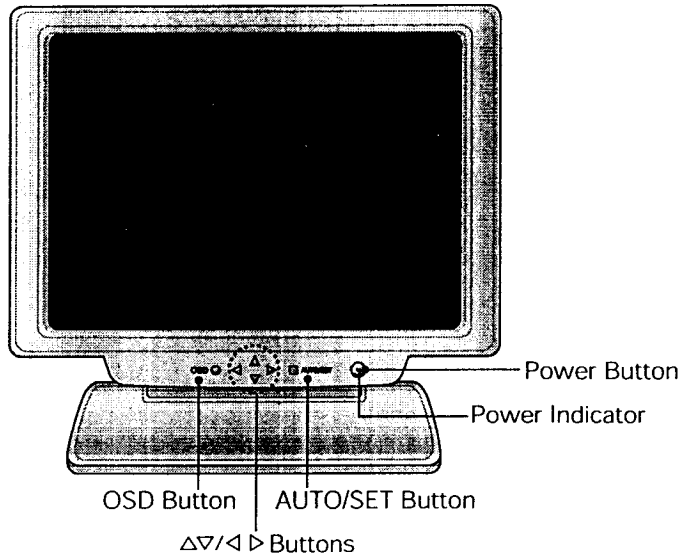




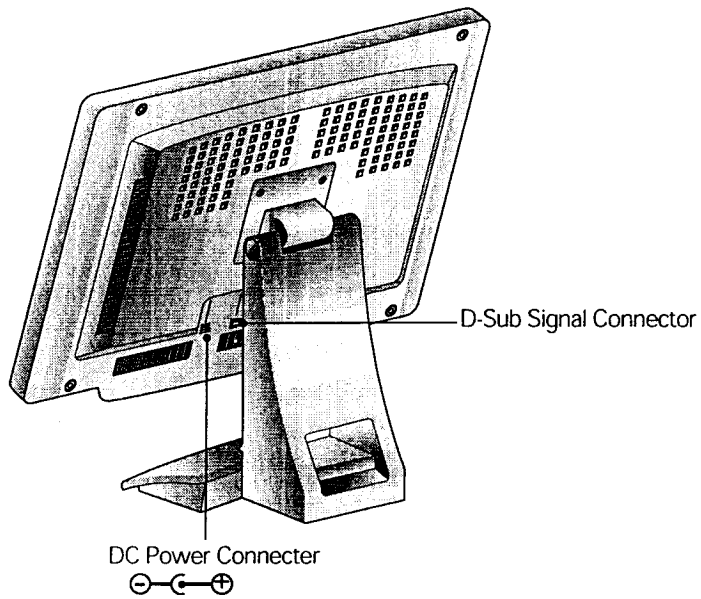



Rear View

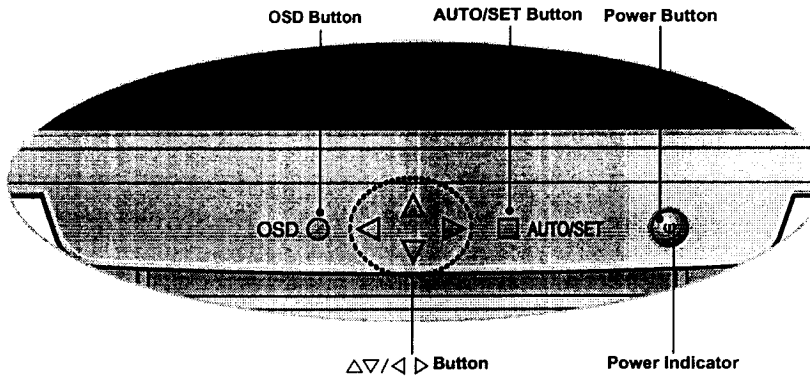

Control Panel Function

Front Panel Controls

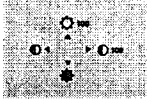

Control	Function
 OSD Button	Use this button to enter or exit the on screen display.
 Δ∇/◀▶ Button	Use these buttons to choose or adjust items in the on screen display. <Shortcut Keys> <ul style="list-style-type: none"> Brightness and Contrast can be adjusted directly without entering the On Screen Display (OSD) system. Touch the ◀/▶/Δ/∇ buttons to adjust the settings and then the OSD button to save all changes. The Brightness and Contrast functions are also available in the On Screen Display (OSD) menu.
	
 AUTO/SET Button	Use this button to enter a selection in the on screen display. * AUTO adjustment function Touch the AUTO/SET button before using OSD menu. This button is for the automatic adjustment of the screen position, clock and phase. Note: Some signal from some graphics boards may not function properly. If the results are unsatisfactory, adjust your monitor's Position, Clock and Phase manually.
	
 Power Button	Use this button to turn the monitor on or off.
Power Indicator	The power indicator light is shown in the power button. This indicator lights up green when the monitor operates normally. If the monitor is in DPM (Energy Saving) mode (stand-by/ suspend/power off), this indicator color changes to amber.


On Screen Display (OSD) Control Adjustment

Making adjustments to the image size, position and operating parameters of the monitor are quick and easy with the On Screen Display Control system. A quick example is given below to familiarize you with the use of the controls. Following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

- Allow the monitor to stabilize for at least 30 minutes before making image adjustment.

To make adjustments in the On Screen Display, follow these steps:

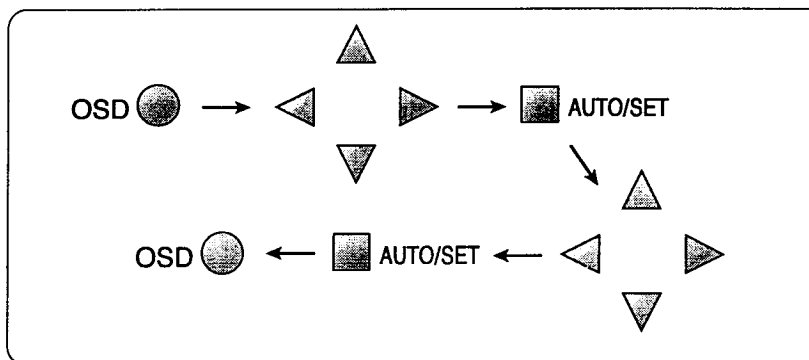










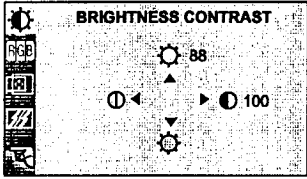

- 1 Press the OSD Button, then the main menu of the OSD appears.
- 2 To access a control, use the Δ or ∇ Buttons. When the icon you want becomes highlighted, press the AUTO/SET Button.
- 3 Use the $\Delta/\nabla/\leftarrow/\rightarrow$ Buttons to adjust the item to the desired level.
- 4 Accept the changes by pressing the AUTO/SET Button.
- 5 Exit the OSD by Pressing the OSD Button.



On Screen Display(OSD) Selection and Adjustment

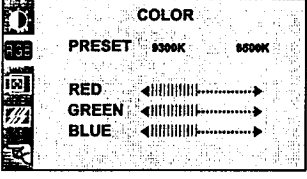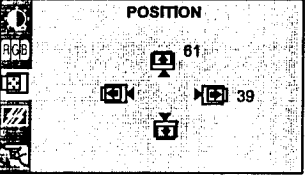You were introduced to the procedure of selection and adjusting an item using the OSD system.

Listed below are the icons, icon names, and icon descriptions of the items that are shown on the Menu.

OSD Adjust	Description
 <p>The OSD menu for BRIGHTNESS CONTRAST shows a central sun icon with the number 88. To its left is a left-pointing arrow with a circle containing '1', and to its right is a right-pointing arrow with a circle containing '100'. Below the sun icon is a downward-pointing arrow with a sun icon.</p>	<p>  Brightness Used to adjust the brightness of the screen.</p> <p>  Contrast Adjust the display to the contrast desired.</p>
 <p>The OSD menu for COLOR shows a PRESET section with 9300K and 6500K options. Below are three horizontal sliders for RED, GREEN, and BLUE, each with a left-pointing arrow and a right-pointing arrow.</p>	<p>PRESET 9300K/ 6500K To appear the displays color temperature. • 9300K:Slightly bluish white. • 6500K:Slightly reddish white.</p> <p>RED To set your own color levels.</p> <p>GREEN To set your own color levels.</p> <p>BLUE To set your own color levels.</p>
 <p>The OSD menu for POSITION shows a central TV icon with the number 61. To its left is a left-pointing arrow with a circle containing '3', and to its right is a right-pointing arrow with a circle containing '39'. Below the TV icon is a downward-pointing arrow with a TV icon.</p>	<p>  Vertical Position To move image up and down.</p> <p>  Horizontal Position To move picture image left and right.</p>

On Screen Display(OSD) Selection and Adjustment

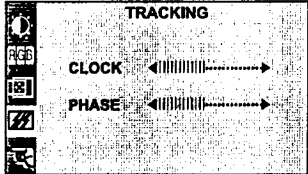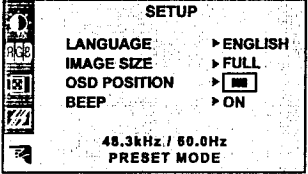OSD Adjust	Description
 <p>The image shows the 'TRACKING' OSD menu. It features a vertical sidebar on the left with icons for various settings. The main area contains two horizontal sliders: 'CLOCK' and 'PHASE'. Each slider has a central vertical line and horizontal arrows at both ends, indicating the range of adjustment.</p>	<p>CLOCK To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.</p> <p>PHASE To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.</p>
 <p>The image shows the 'SETUP' OSD menu. It has a vertical sidebar on the left. The main area lists several options: 'LANGUAGE' with a right-pointing arrow next to 'ENGLISH'; 'IMAGE SIZE' with a right-pointing arrow next to 'FULL'; 'OSD POSITION' with a right-pointing arrow next to a small square icon; and 'BEEP' with a right-pointing arrow next to 'ON'. At the bottom, it displays '48.3kHz / 60.0Hz' and 'PRESET MODE'.</p>	<p>LANGUAGE To choose the language in which the control names are displayed.</p> <p>IMAGE SIZE This function displays the image in its original size or enlarged size so as to fit in the full screen of the LCD panel.</p> <p>OSD POSITION To adjust position of the OSD window on the screen.</p> <p>BEEP To select beep ON or OFF.</p>

Video Memory Modes

The monitor has 26 memory locations for display modes, 16 of which are factory preset to popular video modes.

Display Modes (Resolution)

	Display Modes (Resolution)	Horizontal Freq.(kHz)	Vertical Freq.(Hz)
1	VGA 640 x 350	31.47	70
2	VGA 720 x 400	31.47	70
3	VGA 640 x 480	31.47	60
4	VESA 640 x 480	37.50	75
5	VESA 640 x 480	43.27	85
6	VESA 800 x 600	37.88	60
7	VESA 800 x 600	46.88	75
8	VESA 800 x 600	53.67	85
9	MAC 832 x 624	49.73	75
10	VESA 1024 x 768	48.36	60
11	VESA 1024 x 768	60.12	75
12	VESA 1024 x 768	68.67	85
13	VESA 1152x870	68.68	75
14	VESA 1152x900	61.80	66
15	VESA 1280x1024	63.98	60
16	VESA 1280x1024	79.98	75

Note : This LCD monitor has been pre-adjusted to the video mode of VESA 1280x1024 @60Hz.

User Modes

- Modes 17-26 are empty and can accept new video data. If the monitor detects a new video mode that has not been present before or is not one of the preset modes, it stores the new mode automatically in one of the empty modes starting with mode 17.

If you use up the 10 blank modes and still have more new video modes, the monitor replaces the information in the user modes starting with mode 17.

Troubleshooting

Check the following before calling for service.

Display Position is incorrect.

- Push the AUTO/SET Button.
- If the results are unsatisfactory, adjust the image position using the H position and V position icon in the on screen display.

On the screen background, vertical bars or stripes are visible.

- Push the AUTO/SET Button.
- If the results are unsatisfactory, decrease the vertical bars or stripes using the CLOCK icon in the on screen display.

Any horizontal noise appearing in any image or characters are not clearly portraid.

- Push the AUTO/SET Button.
- If the results are unsatisfactory, decrease the horizontal bars using the PHASE icon in the on screen display.

NO SIGNAL message.

- The signal cable is not connected, or is loose. Check and secure the connection.

OUT OF RANGE message appears.

Picture is blank.

- The frequency of the signal from the video card is outside the operating range of the monitor.

Horizontal Frequency: 30kHz-80kHz

Vertical Frequency: 56Hz-85Hz

*Use the graphics board's utility software to change the frequency setting (Refer to the manual for graphics board).

*You can change the setup to the supported resolution using the Safe Mode (Press the F8 key during booting the system).

The power LED is illuminated amber.

- The monitor is in its display power management mode.
- There is no active signal coming from the PC.
- The signal cable is not fastened securely.
- Check the computer power and graphics adapter configuration.

The monitor doesn't enter the power saving off mode (Amber).

- Computer video signal is not VESA DPMS standard. Either the PC or the video controller card is not using the VESA DPMS power management function.

NOTE

- If the power indicator(LED) light is blinking amber, may result in abnormal condition of the monitor.
- Then press a power ON/OFF button on the front panel control and call your service technician for more information.

Specifications

Display	Type	15.7inch (39.87cm) Flat Panel Active matrix-TFT LCD Anti-Glare coating
	Viewable Size	15.7inch (39.87cm)
	Pixel pitch	0.243 x 0.243mm
	True color	16.7 million color
Sync Input	Horizontal Freq.	30kHz - 80kHz (Automatic)
	Vertical Freq.	56Hz - 85Hz (Automatic)
	Input form	Separate, TTL, Positive/Negative
	Signal input	15 pin D-Sub connector
Video Input	Display Area	311 x 248.8 mm / 12.2 x 9.79 inch
	Input Form	Separate, RGB Analog, 0.714Vp-p/75ohm, Positive
	Resolution (max.)	VESA 1280 x 1024 @ 75Hz
Power Consumption	Normal(Max.)	≤ 36W
	Stand-by/Suspend	≤ 3W
	Power Off	≤ 3W
Dimensions	Width	37.0 cm / 14.57 inches
	Height	32.6 cm / 12.8 inches
	Depth	13.4 cm / 5.28 inches
Power Input	DC 24V 1.5A	
AC Adapter	Input	AC 100-240V, 50 - 60Hz, 1.2A - 0.6A
	Output	DC 24V $\overline{=}$ 1.5A \ominus \oplus
Weight	Net	4.5 kg (9.92 lbs)
Tilt Range	Down	-5°
	Up	35°
Environment Conditions	Operating condition	
	Temperature	10°C to 35°C
	Humidity	10% to 80% non-condensing
	Storage condition	
Temperature	-20°C to 60°C	
Humidity	5% to 95% non-condensing	

NOTE

- Information in this document is subject to change without notice and does not represent a commitment on the part of LG Electronics Inc.