### INTRODUCTION

Our unique wireless security/safety Alarm system with Auto dialer concentrates on the protected area vou select. Whenever the main unit is set at ARMED, the wireless motion detector sensor or wireless door/window sensor will concentrate on the protected area. Once there is movement or door/window open detected, the alarm will turn on and call to the memorized telephone numbers one by one. In chime mode, the chime will Ding—Dong when movement be detected.

IMPORTANT SAFETY TIPS

### 1. Do not install the system where it will be exposed to direct sunshine or rain.

- 2. The main unit siren is very loud, never put the unit close to your ear. The system should be away from heat sources such as radiators, heating ducts and stoyes.
- 4. If the system sounds at random, it is possible that the location too close to a heat source, changing the location or direction of the unit can remedy this. 5. The system can provide valuable protection for your home and property if utilized properly. However, this system cannot guarantee complete protection against burglary or robbery. Therefore, we will not be responsible for any

Speaker

11. Line jack


Numerical Kevs


4. REC./PLAY Led


External Terminal

### losses or damages which occur, during use of this product. DESCRIPTION OF COMPONENTS

#### 2. LCD Display Battery Low Led DC Power Led 9. DC 9V Power Jack 10. TEL. jack

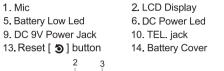

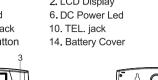

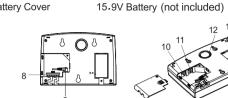

• Receved wireless motion senosr or wireless door/window sensor trigger signal activates auto-dialer and alarm 16 Digit large number display with date/time and function icon

9 zone icon for easy differentiating intruder location From Zone 1 to Zone 7, each can separately learn one

wireless sensor ID code for each to trigger the system (while in arm mode) Zone 8S can learn 8 wireless sensor ID code to trigger the

system in arm mode Zone 24H (24 hours standby) can learn 8 wireless sensor

ID code to trigger the system in arm or disarm mode. Room monitor and broadcast by telephone function Remote turn system to ARM or DISARM by telephone function

 Programmable security code, entry delay timing • 5 emergency telephone numbers (up to 32 digits each)

 Programmable auto dialling cycle • 5 Trigger recorder with zone indication for alarm mode

[PANIC] kev

 Lighted keypad • Built-in flash memory to protect system data for power failure Battery Low indicator

 DTMF(Tone )dialling only Home mode function Trigger AC socket by radio linked function

 AC adaptor operated (included) with 9V battery back-up (not included) Built-in 105 dB alarm (with programmable alarm on/off)

1. Remove the screw from the battery compartment cover. (Fig.10

bracket to obtain the best coverage of the intended protected area. (Fig 12)

2. Install 3 "AAA" size alkaline batteries.

Replace the battery cover and screw

4 Mount the wireless motion detector sensor

• Compatible with additional up to 23 wireless motion detector sensor or wireless window/door sensor or 8 wireless remote control and wireless control AC socket or wired sensor to EXPANDING the system


## INSTALLATION

1. Remove the screw of main unit from battery compartment cover, install an alkaline 9V battery, this is a back-up battery, in case of DC power failure. This battery will keep the unit working (Fig.1)



cluded with your auto-dialer (this is the plug/wire with the clear plugs at either end) on end inserted in the TEL socket on the auto-dialer, and the other end into your telephone. You now have a wire from the EL socket on your auto-dialer to your telephone. You should now have a dial tone.

Plug the AC adaptor to the DC 9V socket on the auto-dialer. (Fig. 3) Choose a suitable location, 5 - 6 feet (1.5 - 2.0 meters) away from floor, drill holes and install anchors and screws Place the unit over the screws and slide it down to secure in place. (Fig 4)

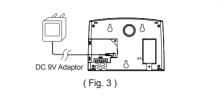

• This program can only be operated during standby mode. During setup, if not key in any message within 15 seconds, he system will auto exit setup mode. Your auto-dialer has a factory preset pass number of "0-0-0". This can now be changed to a pass number personal to you.

(Fig. 5)

1 TO CHANGE PASSWORD a. Enter factory preset pass number, "0-0-0". Press [PROG] button once, "PASSWORD" will flash on the LCD.

Press the [ARM/DISARM] button to confirm. c. Enter your new pass number followed by the [ARM/DISARM] button to confirm the new number. (You can choose

d. You can press [#/DOWN] button or [\*/UP] button select other setup, or press the [PROG] button nine times to exit NOTE: If you forget your pass number, press and hold [PROG] button, use a pen to touch "RESET" button once of unit bottom, the LCD will split second not display, unpress [PROG] button after LCD comeback display date time, the auto-dialer will restore back to the factory preset pass number "0-0-0", all the setup will be remained as you programmed

2 TO STORE TELEPHONE NUMBERS a. Enter the pass number followed by [PROG] button twice. b. MEMORY will flash on the LCD. (Fig. 6)

d. You are now ready to program in your 5 chosen telephone numbers. Press the [\*/UP] and [#/DOWN] buttons to

select 1 - 5. For example if you select 4 this will be the fourth number dialed. e. Now enter the number that you want to store, followed by ARM/DISARM to confirm and store the number (maximum of 32 numbers, but LCD only show last 16 digits)
f. Repeat steps c-e for the four other numbers you wish to be stored.


g. You can press [#/DOWN] button or [\*/UP] button select other setup, or press the [PROG] button eight times to exit

### 3 TO DELETE TELEPHONE NUMBER IN MEMORY a. Enter the pass number followed by [PROG] button twice. b. "MEMORY" will flash on the LCD. (Fig. 6)

#### c Press the [ARM/DISARM] button to confirm d. Press the UP and DOWN buttons to select the number you want to delete. Press the [DEL./PAUSE] button to delete the number.

g. You can press [#/DOWN] button or [\*/UP] button select other setup, or press the [PROG] button eight times to exit

MEMORY 00000 

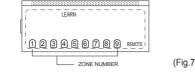

MEMORY LOCATION (Fig.6) 4 TO LEARN WIRELESS SENSOR OR REMOTE CONTROL ID CODE All the Expanding Wireless Sensor and remote control attached with the package of this system are all completed the learning of ID code. The whole system are standby for use after installation directly. system with 10 zone for wireless sensor and remote control, zone 1~ zone 7 only learn 1 wireless sensor id code for each, zone 8S can learn 8 wireless sensor's ID code, zone 24H can learn 8 wireless sensor. Zone 10(LCD icon

REMOTE) is remote control zone and it can learn 8 remote control's ID codes. So you can additionally purchased extr 23 wireless Motion Detector sensor (615PR, 615NP, 616PR) or wireless Door/Window sensor (600WR, 108WR, 218WR. 625T) or wireless water alarm sensor (660) or wireless temperature sensor(763T) or Wireless pressure mat sensor(108C, 600C) and 8 remote control (200R, 300R, 500R, 503R) to expand the system, but it is required to LEARN the sensor's or remote control's ID code to the main unit first, Follow these steps:

a. Enter the pass number followed by [PROG] button three times.

b. The " LEARN " icon will flash on the LCD. (Fig.7) Press [ARM/DISARM] to confirm, the system will turn into learning ID code setup and zone 1 icon flash

d. Press the [\*/UP] and [#/DOWN] buttons to select you want setup zone, when LCD display "NO ID CODE" is meaning the zone is disengaged, you can learn new sensor id code for this zone; when LCD display "FULL" is meaning the zone had ID code, you can select other zone or press [DEL./PAUSE] button to delete original id code then relearn new ID code for this zone.

Trigger sensor or remote control send learn ID code signal as follows: Wireless motion detector sensor (615PR, 616PR): by swinging at sensor lens with hand will trigger it send signal Wireless door/window sensor (218WR, 600WR, 625T): opening/closing the magnetic switch will trigger it send signal Wireless water alarm sensor (660): put water detector to water will trigger it send signal

Wireless temperature sensor(763T): Press TEST button will trigger it send signal Remote control (200R,300R, 500R, 503R): press any key will trigger it send signal Wireless pressure mat sensor(108C, 600C): pressure the mat will trigger it send signal g. You will hear a long beep tone confirm learn code successfully and LCD will display "FULL" for zone 1 ~ zone 8 or ID CODE IN" for zone 9 and remote control, press [PROG] button to return to previous setup h. You can press [#/DOWN] button or [\*/UP] button select other setup, or press the [PROG] button seven times

5 TO PROGRAM SIREN ON/OFF The auto-dialer has been factory set with the siren "ON". To change this to "OFF":

a. Enter the pass number followed by [PROG] button four times.
b. The "> "icon will flash on the LCD. (Fig.8) d. Using the [\*/UP] and [#/DOWN] buttons select "SOUND OFF". Followed by the [ARM/DISARM] button to confirm



e. You can press [#/DOWN] button or [\*/UP] button select other setup, or press the [PROG] button six times to exit the

6 TO PROGRAM AUTO CALL FUNCTION ON/OFF The auto-dialer has been factory set with the call option "ON". To change to "OFF":

Enter the pass number followed by [PROG] button five times.

b. The "M" icon will flash on the LCD. (Fig.9)

d. Using the [\*/UP] and [#/DOWN] buttons select call "OFF" followed by the [ARM/DISARM] button to confirm. e. You can press [#/DOWN] button or [\*/UP] button select other setup, or press the [PROG] button five times to exit the

Wireless Door/window Sensor (Model:108WR)

INSTALLATION

Choose a suitable location, stick the main unit to door/window frames by attached double-side tape. Then stick the magnetic unit (smaller unit) to the door/window by attached double-side tape and make sure to align the "▶" mark

to right "◀" mark on the main unit and "◀" facing "▶" at no more than 1/4" apart as shown below(Fig.18)

2) Use a pen or hard small objects to remove the magnetic unit. Use the housing bottom to mark the

mounting location, then drill two holes for fix and install anchors and screws, replace the cover the

3). Make sure to align the "▶" mark to right "◀" mark on the main unit and "◀" facing"▶" at no more

b.Remove the screw from terminal and take out connect wire (Fig.22) c.Measure the length of wire needed to connect the sensor to the transmitter, the cut the wire to the correct length.

unit sounds "DING DONG" chime if signal is received successfully, if not, draw out mini retractable antenna or change

5. External Magnetic sensor terminal you can additional wire magnetic sensor to expanding you desired

1). Remove the screw from the battery compartment cover. Use the housing Bottom to mark the mounting

location, then drill two holes for fix and install anchors and screws, replace the cover the screws. (Fig.19)

1. Remove the screw from the main unit bottom and take out the cover.

Install 2 "AAA" alkaline batteries (not included) on the battery compartment, ensure the polarity is correct(Fig.17).

Mount the magnetic door/window sensor
 a.Mount the magnetic door/window sensor by double -side tape

b.Mount the magnetic door/window sensor by screws

Replace the cover and screw.

7 TO PROGRAM AUTO DIALLING CYCLE The auto-dialer has been factory set for auto dialling 3 cycles. (When system is triggered the auto dialer will call every stored numbers 3 times) You can change the cycle from 1 - 5 dialling times. a. Enter the pass number followed by [PROG] button six times.

d. Using the [\*/UP] and [#/DOWN] buttons to select 1 - 5 followed by the [ARM/DISARM] button to confirm the cycle (how many times the Auto-dialer will call you if the system will be triggered) e. You can press [#/DOWN] button or [\*/UP] button select other setup, or press the [PROG] button four times to exit

8 TO PROGRAM CALL-IN RING DETECT CYCLE. The call-in ring detect cycle for how many call-in rings the Auto-dialer will answer, The auto-dialer has been factory set for 5 times, you can change this cycle from 3, 5, 7, 10 time a. Enter the pass number followed by [PROG] button seven times.

s [ARM/DISARM] button to confirm. d. Using the [\*/UP] and [#/DOWN] buttons to select 3, 5, 7, 10 followed by the [ARM/DISARM] button to confirm.
e. You can press [#/DOWN] button or [\*/UP] button select other setup, or press the [PROG] button three times to exit

9 TO PROGRAM ENTRY DELAY TIME The auto-dialer has been factory set for a 20 seconds entry delay time. You can change this to 0,5,10,15, or 20 a. Enter the pass number followed by [PROG] button eight times.

b. "ENTRY" will now flash on the LCD d. Using the [\*/UP] and [#/DOWN] buttons select the seconds 0,5,10,15 or 20. Press ARM/DISARM to confirm the number of seconds you required for the entry delay time. e. Press the [PROG] button twice to exit setup mode.

a. Enter the pass number followed by [PROG] button seven times. b. "①" will flash on the LCD.

b. "CYCLE" will now flash on the LCD

s the [ARM/DISARM] button to confirm d. The date will show in the LCD as five sets of numbers, year-month-date, hour-minute by the real time. The first set of numbers will flash confirming that these can now be changed.
e. Press the [\*/UP] and [#/DOWN] buttons to select the correct date and time followed by the [ARM/DISARM] button

o confirm and store. You will now have the correct date and time. f. Press the [PROG] button once to exit setup mode. 11 REC/PLAY MESSAGE a. Enter your password followed by the [REC/PLAY] button. Speak your message for the unit. You have 20 seconds for

your message. When you have finished recording your message, press the [REC/PLAY] button. You need to include instructions in your message on how to disarm the unit, as you will probably not remember all the remote control b. Your message should be similar to: "IYour name's I security system has been activated. Please enter a command." (Optionally you may wish to list the commands: "1#"-Monitor Room, "2#"-Broadcast, "3#"-End Call or "6#"-Disarm

c. To listen to your recorded message press the [REC/PLAY] button. TO TEST MEMORY DIALLING

In standby mode, press and hold the [PROG] button for more than two seconds, hear a beep tone, then key in the test telephone number memory location, the telephone number stored in memory will automatically be dialed. TO TEST WIRELESS SENSOR TRANSMITTING RANGE

OPERATION

After selecting a location for the unit, press [HOME] button of the Auto-Dialer, and wait 60 seconds and then trigger rireless sensor, The Auto-Dialer will receive trigger signal sound DING - DONG and LCD show sensor zone number Press [HOME] button again to exit the home mode after test.

1 TO ARM THE SYSTEM

a. Enter the pass number followed by the  $\mbox{ [ARM/DISARM] }$  button. b. Three short beeps will sound and the "ARM" icon will show on the LCD.

You can press and hold [ARM] button 2 seconds on remote unit to "ARM" main unit. d. There will be a single beep after 60 seconds, the Auto-Dialer is at "ARM" mode now.

e. Into arming, the system will detect door/window sensor state, when door/window is open, it will sound beep tone 5 seconds and LCD show "CLOSE PLEASE" and sensor zone number, if still not close door/window it will turn on alarm and auto-dialling after 60 seconds.

a. In ARM mode system receive wireless sensor trigger signal in the protected area, LCD will show trigger icon and trigger sensor zone number, after the entry time then sound a SIREN for 30 seconds on and 30 seconds off then 30 seconds on again, and will automatically dial the numbers stored, one by one, in the CYCLE you have choser (amount of times the numbers are dialed). You will hear notification message when the call is answered, you can call

the Police or make the necessary arrangements, ie calling a neighbour.
b. In ARM mode, if the Auto-Dialer is set at "SIREN OFF", the numbers stored will be dialed silently, when the call is answered you will hear 1, 2 or 4 beeps and know what trigger the system, enable you to call the police or make necessary arrangements or calling a neighbour. Remember if the Auto-Dialer was calling you silently, the system will

NOTE: the system have the function that detect telephone line connect, when telephone line is not connect, it will sound four beep tone before sound siren and do not dial out.

3 TO DISARM THE SYSTEM a. Enter the pass number followed by the DISARM button. b. You will hear a long beep tone and the "ARM" icon will disappear on the LCD to confirm that the Auto-Dialer was

c. You can press and hold [DISARM] button 2 seconds on remote control to "DISARM" main unit. a. Press [PANIC] button on main unit or press and hold [PANIC] button 2 seconds on remote control, the ALARM will

sound instantly, and the Auto-Dialer will begin dialling the stored numbers.

b. To stop the alarm and the stored numbers being dialed, Press password then [ARM/DISARM] button. c. Or press and hold DISARM button 2 seconds on remote control to stop the alarm and dialling.

5. REMOTE CONTROL BY TELEPHONE OPERATION This function for responding during an alarm notification call or remote access from any outside telephone, you can use any tone (DTMF) dialing telephone or mobile phone to turn system "ARM" or "DISARM" or "ROOM MONITOR"

A. RESPONDING DURING AN ALARM NOTIFICATION CALL

a). Upon an alarm activation, the auto-dialer will call out to each of the programmed phone numbers. b). Answer the call, you will hear a single beep tone for motion detector sensor trigger or door/window sensor vibration trigger, press key for the desired function code as follows: (when enter function code not hear beep tone response. please enter function code again)

Function ·	Press key
Room monitor	1#
Broadcast	2#
End of call	3#
Disarm system	6#

c). For room monitor and broadcast within 50 seconds operation time, a beep sound after 30 seconds reminds user that the time will end. You can enter the operation code you want, automatically hang up after 50 seconds if no other B. REMOTE CONTROL BY TELEPHONE FOR CALL BACK

a). Using mobile phone or tone dialing phone call the home number. The auto-dialer will answer and sound a beep tone after call-in ringer detect cycle (the call-in ringer detect cycle can programmable, the factory preset 5 cycles, you can b) Enter PASSWORD you will hear two been tone Press key for the desired function as follows:(when enter function code not hear beep tone response, please enter

function code again)

	Function	Press key		
	Room monitor	1#		
	Broadcast	2#		
	ARM system	5#		
	Disarm system	6#		
broadcast within 50 seconds operation time, a been sound after 30 seconds rer				

d). For room monitor and broadcast within 50 seconds operation time, a beep sound after 30 seconds reminds user that the time will end, you can enter the operation code you want, automatically hang up after 50 seconds if no other ROOM MONITOR - Press " 1 # " after the beep, you will be able to listen to all the sounds within the room for 50 seconds, a beep sound after 30 seconds remind user the room monitor time will end. You can enter the operation code you want, automatically hang up after 50 seconds if no other operation.

BROADCAST – press " 2 # " after the beep, The person in the room will hear your talking, you can speak for 50 seconds, a beep sound after 30 seconds remind the broadcast time will end, you can enter the

operation code you want, automatically hang up after 50 seconds if no other operation. END THE CALL - press " 3 # " the auto-dialer will end the call for this trigger and automatically hang up. ARM SYSTEM – press " 5 # " after three short beep tone confirm system is armed and automatically hang up. If hear 5 rapid beeps atter three short beeps, it means your door/window sensor isn't close. The system will

give 5 seconds to DISARM operation immediately.

DISARM SYSTEM – press " 6 # " after a beep the auto-dialer will disarm and automatically hang up. NOTE: If enter password or operation code error will automatically hang up and sound 5 beep tone.

### CONTROL WIRELESS ACCESSORIES FUNCTION

The system with output wireless signal control accessories function, if you using key board of main unit or remote control or telephone to arm or disarm system, the system will sending signal to arm or disarm accessories (wirel outdoor siren, wireless digital photo/video camera recorder). In arm mode, if system triggered, will sending signal turn on accessories(wireless outdoor siren, wireless AC socket, wireless lampholder).

HOME MODE FUNCTION This function for HOME mode to monitor room state, when system receive wireless sensor trigger signal in the

protected area, LCD will show trigger sensor zone number and sound DING-DONG, you can program which zone . Turn the system to home mode:

a. Press [HOME] button once will hear DING-DONG sound and LCD show HOME icon. b. Wait for 60 Seconds, there will be one beep.

When received wireless sensor trigger signal the 'DING-DONG' chime will sound. d. Press [HOME] button again to exit home mode.

NOTE: When the Auto-dialer is in ARM mode the CHIME will NOT sound. 2. Wireless sensor enable/disable for home mode he system preset all zone at "ON" (enable), to change which zone to "OFF" (disable), follow these steps:

 a. Enter the pass number followed by [HOME] button once. b. Zone 1 icon now flash on the LCD.
c. Using the [\*/UP] and [#/DOWN] buttons to select the zone number you want to change.

I. Press [ARM/DISARDM] button to confirm then using [\*/UP] or [#/DOWN] button select "ON" or "OFF", press [ARM/DISARM] button to confirm again. e. Press the [HOME] button once to exit home-setup mode.

### PAUSE FUNCTION

"2,2,6", the full number will show "7775355F226" on the LCD

The "PAUSE" function can be stored as one digit in the telephone number memory for some PABX dialling operation and every one "PAUSE" in the memory dialling sequence will stop for 3.6 seconds. For example, if you store telephone number "7,7,7,5,3,5,5--226" to memory location 2, operation as follows: a. Press password (0-0-0), then press [PROG] button twice, "MEMORY" will flash

o. Press [ARM/DISARM] button to confirm. c. Press [\*/UP] or [#/DOWN] to select memory location 2. 7,7,7,5,3,5,5", then press and hold [DEL./PAUSE] button 2 seconds, the LCD will show "F" icon, end press

f. Press [PROG] button eight times to exit.

TIP: The method of entering "#" or " \* " in telephone number is also "press and hold the [\*/UP] or [#/DOWN] button

### BATTERY LOW INDICATOR

When main unit the 9V battery is running low, the battery low LED will flash once every 1.5 seconds to indicate the low battery. When wireless sensor battery low, the LCD will show battery icon and sensor zone number. NOTE: Change to a new battery immediately, otherwise it may cause the sensor can not detect properly and may


appear the false trigger alarm and dialling VIEW FUNCTION

### View Trigger Records standby mode, press "#/DOWN" to view last 5 trigger records.


View store telephone numbers
In standby mode, press "\*/UP" to view stored telephone number.


NOTE: If no pressing any button in 10 seconds the system will automatically exit view mode.

- . Connect the magnetic sensor (detect door/window is opened, will trigger auto dialer and alarm after "entry delay time"). NOTE: The magnetic is for optional, when not connect magnetic sensor, can not remove the short metal sheet a. Measure the length of wire needed to connect the sensor to the transmitter, then cut the wire to the correct length. Strip about 1/2 inch of insulation from the wire ends, and twist the wires together.
  - be taken care of, any terminal will be fine, as long as the wires from a loop) c. Connect another sensor switch screw to another switch terminal post by using the parallel another wire as shown

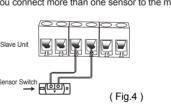

be tidiness and "arrow" facing "arrow" at no more than 1/4 inch apart. (Fig.6)

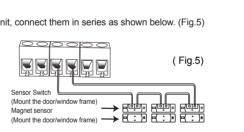

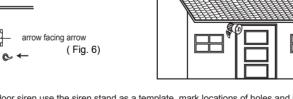

To mount the outdoor siren use the siren stand as a template, mark locations of holes and install anchors and screws

### TROUBLE SHOOTING GUIDE 1. UNIT WILL NOT ARMED/DISARM

a. Make sure you've entered the correct password, if not, re-enter the password. b. If still doesn't work, use a pen to touch [RESET ] button once of unit bottom, then try to ARM/DISARM again.

Make sure the system should be setup in Auto dial mod

NOT REMOTE CONTROL FUNCTION a. Check if battery low and battery replacement

b. If it doesn't work, re-learn ID code again, according to " TO LEARN WIRELESS SENSOR OR REMOTE CONTROL

#### I. Make sure the full telephone has been stored . If you are leaving pets at home while the Auto-Dialer is ON, then make sure the Auto-Dialer has been set in a location

high enough not to detect any animals walking around but not too high to detect other movement. . Keep the Auto-Dialer dust free, away from cobwebs that may cause movement in the protected area. 4. Only suitable for single phone lines. Not compatible with fax machines.

To eliminate any risk or damage, when battery is low make sure change the battery immediately, or take the battery ut when the device will be out of use for a long period, to avoid any battery leakage to damage this device. NOTE: This valuable manual will let your security system work properly. Please preserve this manual at your record, and keep reading when need some trouble obviation.

devices does not exceed 5.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of the device of this equipment is a label that contains, among other information, a product identifier in the format US: 5F4TE02BT058VS and REN:0.19B for this equipmer

This equipment uses the following USOC jacks: RJ-11 Jacks! A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the

nstallation instructions for details. REN (RINGER EQUIVALENT NUMBERS) STATEMENT Notice: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the

operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If trouble is experienced with this equipment product Model:T058VS, for repair or warranty information, please contact Lelux Electronics Ltd., If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this US: F4TE02BT058VS does not disable your alarm equipment. If you have questions about what will disable alarm

Remain on the line and briefly explain to the dispatcher the reason for the call. 2) Perform such activities in the off-peak hours, such as early morning or late evenings.

## FCC - PART 15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of ne FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential accordance with the instructions, may cause harmful interference to radio communications. However, there is no adio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: ) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

MODEL: T058VS

**OWNER'S MANUAL** 

610-058XX-000R

# LEARNING CODE TO MAIN UNIT The wireless motion detector sensor with the package of this system are completed done the LEARN CODE. The whole units are standby for use after installed directly. When relearn code operation see main unit manual. WALK TESTING MOTION DETECTOR SENSOR After select a location, you should test the sensor transmitting range before mount it permanently, press [HOME button of main unit, after 60 seconds ,then swing at sensor lens by hand, you will hear the main unit sounds "DINC DONG" chime if signal is received successfully, if not, change location as required You can test the sensor detection area. Temporarily place the detector at the mounting location and the chime sound

Wireless Motion Detector Sensor (Model:615NP)

INSTALLATION

Choose a suitable location, 5 - 6 feet (1.5 - 2.0 meters) away from floor, drill holes and install anchors and fix the

bracket by screws, Place the main unit into the bracket and slide it down to secure in place (Fig 11). You can adjust

## will be heard from the main unit. If you walk beyond the sensor detection area, then there will not be a chime sound, by adjusting the sensor direction, or the installation location, you can get you desired detection area coverage. BATTERY LOW INDICATOR

## ately, or the sensor might not detect properly Wireless Slim Door/Window Sensor (Model:218WR)

When batteries goes low, the LED will light on 3 seconds and off 1 second, change a new alkaline 9V battery immedi-

Then stick the magnetic unit (smaller unit) to the door/window by attached double-side tape and make sure to align

the " ▶ "mark to right " ◀ " mark on the main unit and " ▶ " facing " ◀ " at no more than 1/4" apart as shown below.

2. Install 2 "CR2032" batteries (included) on the battery box, ensure the polarity is correct. 3. Replace the battery cover and screw.

## 1. Remove the screw from the battery compartment cover. Choose a suitable location, stick the main unit to the door/window frames by attached double – side tape.

size: 148x210mm p/n:610-058XX-000R white paper print black words



taken care of, any terminal will be fine, as long as the wires from a loop)

You can additional wire magnetic sensor to expanding you desired detection area.

b. Remove the screw from terminal and take out connect wire. (Fig.14)

a. Remove the screw from the battery compartment cover

location as required.

the sensor might not detection properly.

c. Measure the length of wire needed to connect the sensor to the transmitter, then cut the wire to the correct length. Strip about 1/2 inch of insulation from the wire ends, and twist the wires together. d. Connect the sensor switch on door to the main terminal post using the wire you just cut. (There is no polarity need to be

e. Connect another sensor switch screw to another switch terminal post by using the parallel another wire as shown below.

NOTE: After select a location, you should test the sensor transmitting range before mount it permanently, press HOME button

LEARNING CODE TO MAIN UNIT

are standby for use after installation directly. When relearn code operation see main unit manual.

detected, the unit will output wireless radio signal and LED flash.

of main unit, after 60 seconds then open/close the magnetic switch of door/window sensor to trigger, you will hear the main

unit sounds "DING DONG" chime if signal is received successfully, if not, draw out mini retractable antenna or change

The wireless door/window sensor with the package of this system are completed done the LEARN CODE. The whole units

After 60 seconds installed battery, the unit will into standby mode. Once the door/window opened or the unit vibration

When battery goes low, the LED will light on 3 seconds and off 1 second, change 2 new CR2032 batteries immediately, or



f. If you connect more than one sensor to the main unit, connect them in series as shown below. (Fig.16)


Strip about 1/2 inch of insulation from the wire ends, and twist the wires together parallel another wire as shown d.Connect the sensor switch on door to the main terminal post using the wire you just cut. (There is no polarity need to be taken care of, any terminal will be fine, as long as the wires from a loop Connect another sensor switch screw to another switch terminal post by using the parallel another wire as shown below (Fig.23)


a.Remove the screw from the battery compartment cover

than 1/4" apart as shown below (Fig.21





f. If you connect more than one sensor to the main unit, connect them in series as shown below (Fig.24) NOTE: After select a location, you should test the sensor transmitting range before mount it permanently, press HOME button of T055 main unit, then open/close the magnetic switch of door/window sensor to trigger, you will hear the main

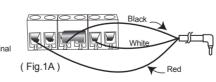

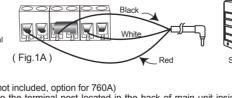



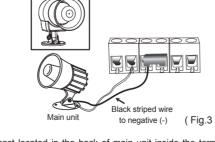

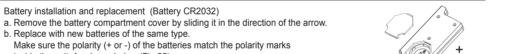

## inside the unit. As shown below (Fig.25). **LEARN CODE FOR MAIN UNIT**

whole unit is ready for use after installation. When re-programming the LEARN code operation, see main unit manual. Notes for remote operation If radio-linked remote control operation range become shortened, replace the batteries according to "BATTERY INSTALLATION AND REPLACEMENT". The battery life should be about six months under normal use, so replace battery at least every 6 months.


The wireless remote control included in the package of this system are pre-programmed with the LEARN CODE. The

Wireless Remote Control (Model:503R)


b. Replace with new batteries of the same type.


c. Replace battery cover.

polarity as shown below. (Fig.2)

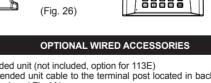

1. Connect the PIR slave extended unit (not included, option for 113E) a. Connect the PIR slave extended unit cable to the terminal post located in back of the main unit inside the terminal partment. See polarity below. (Fig.1A) Plug the 3.5mm diameter male plug of slave extended cable that from the main unit into the jack located on side of

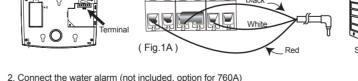


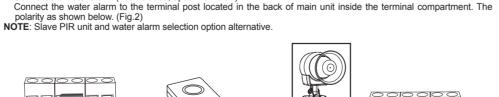

3. Connect the extended outdoor siren cable to the terminal post located in the back of main unit inside the terminal compartment. The polarity as shown below. (Fig.3)

NOTE: The outdoor siren (515SK/E,516SL)option, not included.

# b. Connect the sensor switch on door to the main terminal post using the wire you just cut. (There is no polarity need to

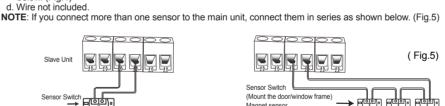

5. Mount the magnet sensor to the door/window frame by using the double-side tapes and aligned the 2 sensor pieces to



as shown below (Fig.7). It is recommended that you mount the out door siren at entrance door, top of garage door, or any location which is sheltered from easy tamper and rain

2. UNIT WILL NOT DIALLING a. Make sure the telephone line be in good conne

applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the


If this equipment US: 5F4TE02BT058VS causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone ompany will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information

equipment, consult your telephone company or a qualified installer WHEN PROGRAMMING EMERGENCY NUMBERS AND/(OR) MAKING TEST CALLS TO EMERGENCY NUMBERS:

installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority

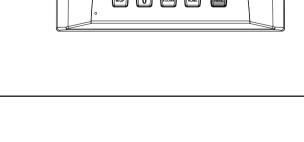

**WIRELESS SECURITY ALARM /** 

**AUTO DIALER SYSTEM**