



1A IPHONE® / IPAD® / ANDROID™ WIFI SETUP

A: Connect the power adapter to the camera and connect the other end to a power outlet. Do not connect the Ethernet cable.

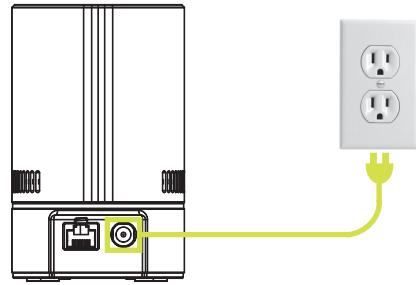

B: Connect your smartphone or tablet to your WiFi network.


C: Download the free **Lorex Ping** app, and tap the Lorex Ping icon to open the app.



Tap **Wifi Setup**




Then Tap **Next**

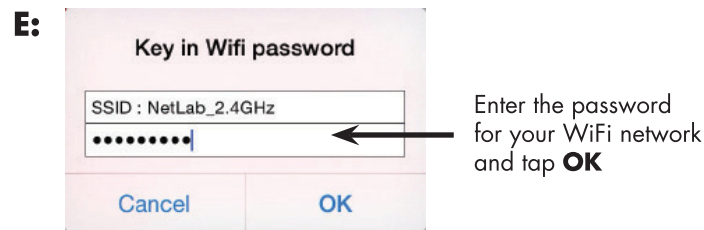


Enter the password for your WiFi network and tap **OK**

A QR code appears on the screen with your WiFi network details.

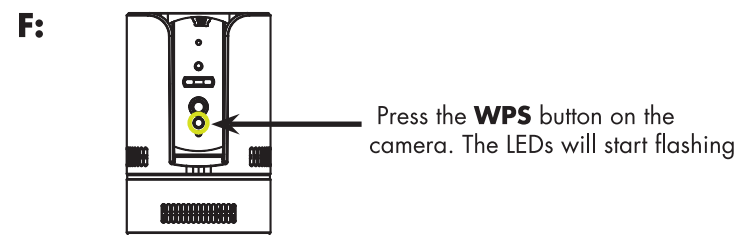


Press the **WPS** button on the camera. The LEDs will start flashing

G: Place your phone or tablet about 1ft (30cm) away from the camera.

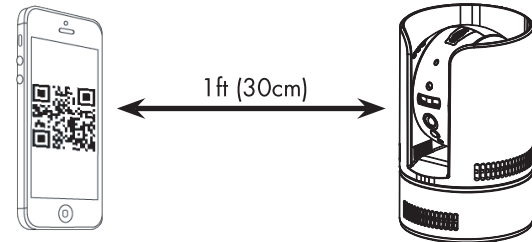

The camera scans the QR code on your device to connect to the WiFi network and beeps once it is successfully scanned. In a few seconds, the connection starts and a message appears on your device.


NOTE: If the QR code does not scan, complete option 1B and then complete the Optional WiFi setup instead.

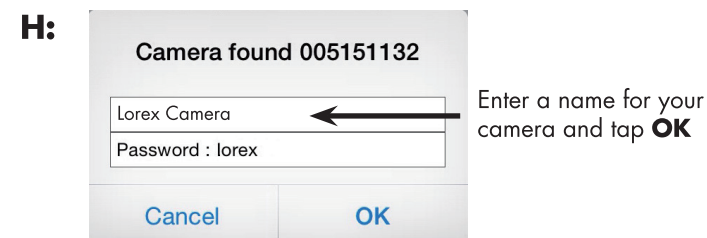

Enter a name for your camera and tap **OK**



Tap the camera to connect

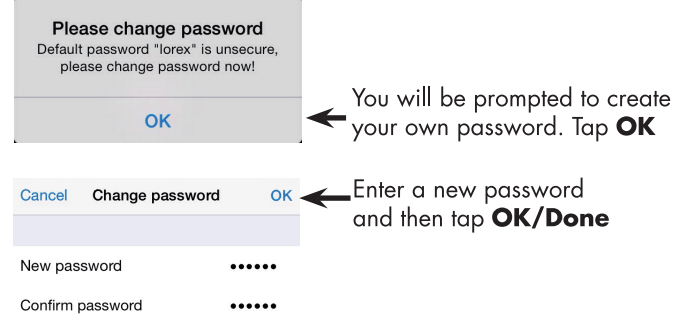

You will be prompted to create your own password. Tap **OK**

Enter a new password and then tap **OK/Done**

J: Tap the name of the camera in Camera List again to connect to the camera. Lorex Ping streams live video from your camera.


NOTE For security, a separate admin user name and password is required to change camera settings.

Default admin user name: admin
Default admin password: _____ (leave blank)


OR

1B IPHONE® / IPAD® / ANDROID™ ETHERNET SETUP

A: Connect the power adapter to the camera and connect the other end to a power outlet.

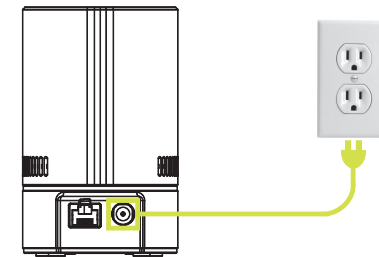


B: Connect an Ethernet cable (included) to the **NET** port on the camera and connect the other end to your router (not included).

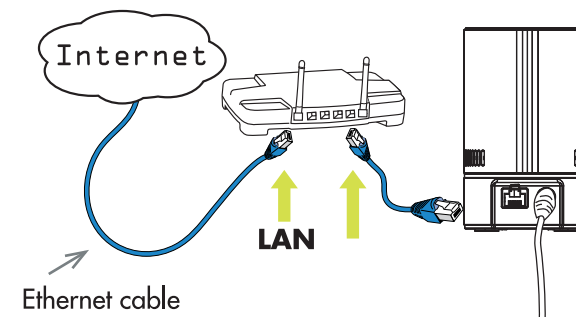

C: Download the free **Lorex Ping** app, and tap the Lorex Ping icon to open the app.



D: Tap **+** to add a camera.

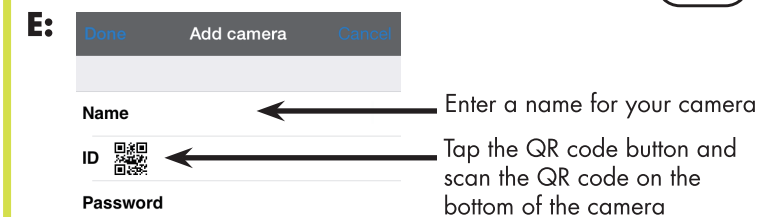


Enter a name for your camera

Tap the QR code button and scan the QR code on the bottom of the camera



CamID #


Alternatively, you can manually enter the CamID found on the bottom of your camera.

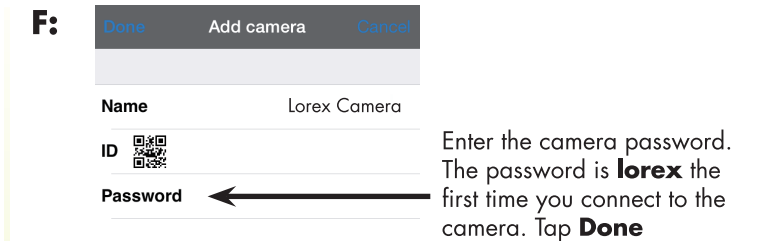


Enter the camera password. The password is **lorex** the first time you connect to the camera. Tap **Done**



Tap the camera to connect

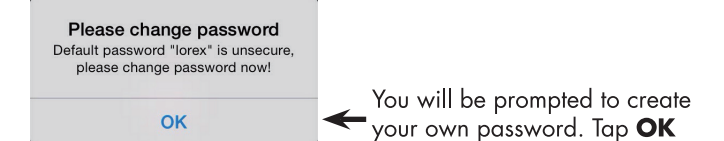

You will be prompted to create your own password. Tap **OK**

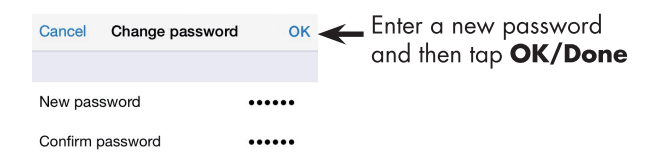

Enter a new password and then tap **OK/Done**

H: Tap the name of the camera in Camera List again to connect to the camera. Lorex Ping streams live video from your camera.

NOTE For security, a separate admin user name and password is required to change camera settings.


Default admin user name: admin
Default admin password: _____ (leave blank)

OPTIONAL WIFI SETUP


- A:** From the Camera List, tap
- B:** Tap **Camera Settings** and enter the admin user name/password above.
- C:** Tap **Network>WiFi Network**.
- D:** Slide **Wi-Fi** to **ON** or check **Wi-Fi** and select your WiFi network. Enter the password and tap **OK**. Wait for the update to complete.
- E:** Remove the Ethernet cable from the camera and it will connect to the WiFi network.

1C PC/MAC SETUP—CONNECTING THE CAMERA

A: Connect the power adapter to the camera and connect the other end to a power outlet.

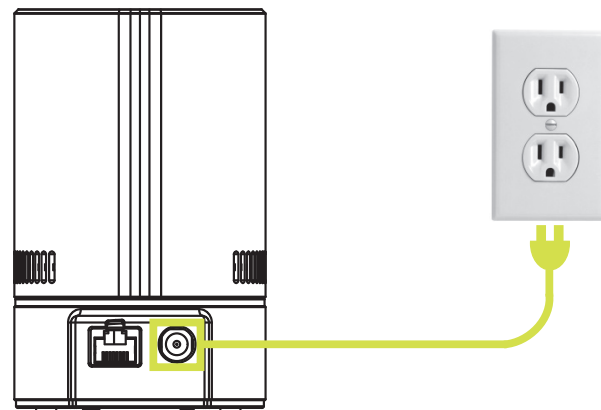

B: Connect an Ethernet cable (included) to the **NET** port on the camera and connect the other end to your router (not included).

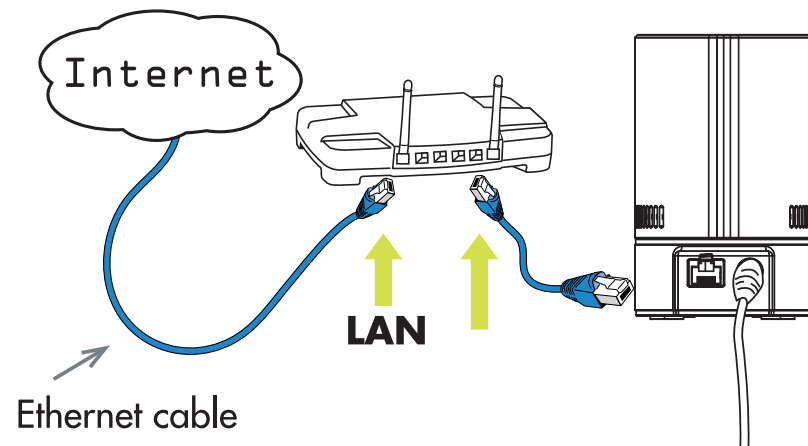


OPTIONAL—WPS SETUP

Use these steps to set up WiFi if your router supports WPS.

A: Power on the camera.

B: Press and hold the **WPS** button on your router until the WPS light turns on.

C: Then, press the WPS button on the camera within 1 minute. The camera will automatically connect to your WiFi network and the blue Network LED on the camera will turn on.

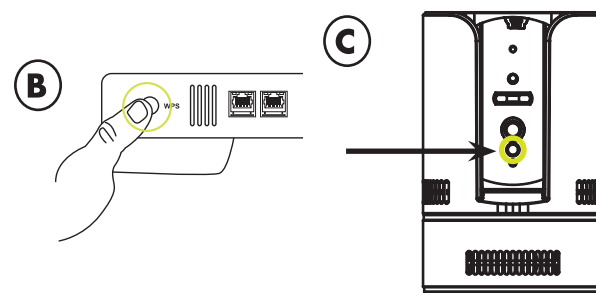


2 CONNECTING ON PC OR MAC


A: Download the L-View software from www.lorextechnology.com



B: Double-click the L-View icon.




C: Click +

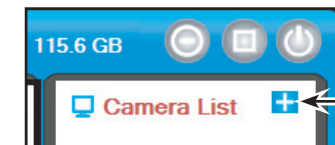

NOTE: Mac users, click + beside **Camera List**, then click the **New Camera** tab.

D: Enter a camera name
Enter the **camID** printed on the bottom of the camera
Enter the camera password (default: **lorex**)
Click **OK**

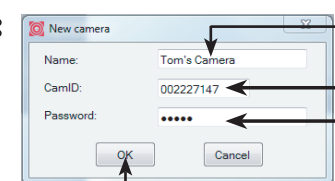

E: Click and drag the camera to a display screen to connect to the camera.



F: L-View will prompt you to create your own password for the camera. Click **OK**.

G: Create a new password for the camera and click **OK**.


H: Click and drag the camera to a display screen again to connect. L-View streams live video from your camera.

3 OPTIONAL—PC / MAC WIFI SETUP

A: Install L-View on a PC in your local network (must be connected to the same router as the camera) and connect to the camera.

NOTE: The camera must be connected to your router using an Ethernet cable before you can set it up to use WiFi.

B: PC users, right-click on the camera ID in the Auto Search area and click **Web Configure**.



Mac users, click the Auto Search icon (🔍), then click (ⓘ) beside the camera ID.


C: Enter the camera admin user name and password. Click **Log in**.

NOTE Your camera admin user name and password differs from the password used to connect to your camera to view video.

Default admin user name: admin
Default admin password: _____ (leave blank)

D: Click on **Network** and then **WiFi Security**.

E: Click **WiFi Scan** and select your WiFi network.

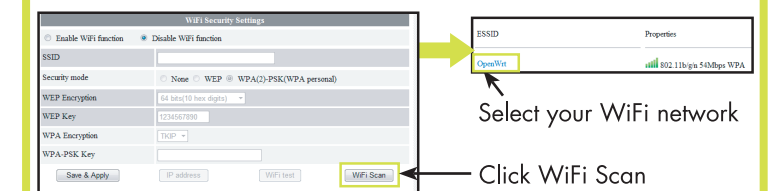

F: Enter WiFi Password (WPA-PSK or WEP)
Click **Save & Apply**

G: Click **WiFi Security** again and click **WiFi Test**.

When successful, Status will say Test Success. You may then disconnect the Ethernet cable from the camera. If unsuccessful, double check your wireless password and make sure your camera is close enough to the wireless router to get a good signal.



Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Industry Canada statement:

This device complies with RSS-247 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme CNR-247 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20cm de distance entre la source de rayonnement et votre corps.