

## **C4MAX-4MUSAC\_V4 - INSTALLATION GUIDE**

**V 1.2**

**17/09/2018**



## Table of contents

Preface .....	3
Warnings and notices .....	3
FCC Regulations .....	3
FCC RF Exposure Information .....	4
1. Hardware features.....	5
2. Hardware description .....	6
2.1. C4MAX v4 with external antenna .....	6
2.2. Recommendations : .....	7
3. Preparing/installing the device .....	8
3.1. Open the device to insert a SIM card .....	8
3.2. Connect the external antennas.....	10
3.3. Choose the appropriate location for mounting.....	10
3.4. Insert the device on harness .....	11
3.5. Pin out & Wires description .....	13
3.6. Plug the device to the external power.....	14
4. Inputs activation threshold .....	14
5. Outputs information.....	14
6. LEDs sequences .....	15
7. Support .....	15

## Preface

The information contained in this installation guide is subject to changes in order to improve the reliability, design or features without prior notice. Mobile Devices Ingénierie reserves the right to make changes in the content without obligation to notify any person or organisation of such changes or improvements. Mobile Devices Ingénierie can in no event be held liable for technical or editorial errors or omissions herein, nor for incidental, special or consequential damages from the furnishing, performance or use of this installation guide.

Please contact our technical support for current updates and supplemental information concerning the use and operation of this or other Mobile Devices Ingénierie products.

## Warnings and notices



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Please read the installation guidelines, as well as the safety and operating instructions before operating your device. Follow all instructions and heed all warnings in the installation guide.

There is a risk of explosion if the battery is replaced by a wrong battery type. Please discard empty battery according to local regulations.

## FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC RF Exposure Information

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm (8 inches) during normal operation.

The FCC has granted an Equipment Authorization for this model device with all reported RF exposure levels evaluated as in compliance with the FCC RF exposure guidelines. RF exposure information on this model device is on file with the FCC and can be found under the Display Grant section of [www.fcc.gov/oet/ea/fccid](http://www.fcc.gov/oet/ea/fccid) after searching on FCC ID: **A6GC4MAX-4MUSACV4**.

## 1. Hardware features


<b>C4MAX v4</b>		
Performance	Processor	ARM Cortex - A5 CORE (500MHz)
	RAM	1 Gbytes
	NAND Flash	2 Gbytes
Power supply	External power supply	8-32V
	External voltage measurement	8-32V
	Li-ion battery charger	Yes
	Li-ion battery	900mA.h
Communication	Modem	4G Cat-M1 data module (ME910C1-NA)
	Modem antenna	External Fakra connector
Positioning	GNSS receiver	U-blox M8 (GPS, GLONASS, BeiDou)
	GNSS antenna	External Fakra connector
Inertial sensors	Internal 3-axis accelerometer	±2g, ±4g, ±6g, ±8g, ±16g
	Internal 3-axis gyroscope	No gyroscope
Interface & Telematics features	(Mini) USB 2.0	Host / Device / UART powered (5V out, 500mA max.)
	Digital Input / Analog input	3 (Ignition, alarm and 1 input active low) / 2
	Digital Outputs	2 (relay-control & immobilizer on option)
	1-wire (for driver ID or temp sensor)	Yes
	LEDs	2 (1 controlled by software)
	RTC	Yes
	CAN 2.0B interface	Yes
	J1708 interface	Yes
	RS232	2 (1 with RTS/CTS, 1 without)
	Bluetooth	Bluetooth 4.1BLE dual-mode (with internal antenna)
Environmental	Wifi	IEEE Std 802.11b/g/n (with internal antenna)
	Connectors	microFIT 20 pins
		Mini-USB
		2 Fakra connectors for the external antennas
	Operating temperature *	-30/+70°C
	Dimensions	96x65x18mm
	SIM card	Mini SIM slot (2FF)
	Dual GSM/GPS external antenna	3 meters cable With 27mm Fakra connectors

\*without internal battery

## 2. Hardware description

### 2.1. C4MAX v4 with external antenna

**Front :**

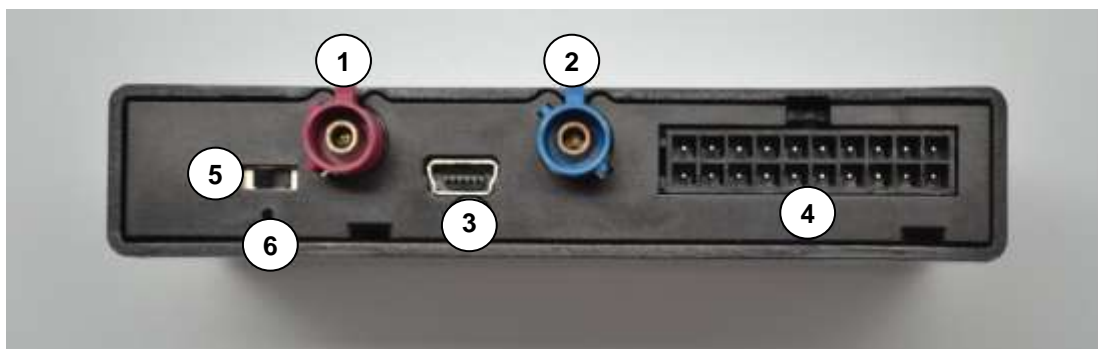

1. Modem antenna connector
2. GNSS antenna connector
3. USB connector
4. Molex (20pins) connector
5. Inner battery switch
6. Leds

**Inside :**



1. Internal battery
2. SIM card slot

## 2.2. Recommendations :

---

→ **Move the switch inwards (I) to activate the internal battery.**

The switching ON of the internal battery requires a running system. This is about 10 seconds after ignition (the led 4 must be lit then unlit).



→ **Move the switch outwards (O) to deactivate the internal battery.**

The switching OFF of the internal battery is instant. Thus, don't switch off the internal battery if the device is running without be connected to an external battery.



The SIM card PIN code must be deactivated.

---

### 3. Preparing/installing the device

#### 3.1. Open the device to insert a SIM card

Insert a flat screwdriver into the 2 holes and pry it to remove the front cover.



Unscrew the screw at the back of the device



Afterwards pull on the PCB to release it.



### 3.2. Connect the external antennas




### 3.3. Choose the appropriate location for mounting

The ideal location for mounting the device is under the dashboard. However, some types of coated windshields, as well as windshields with an in-screen heating system can block GNSS signals. External antenna should never be covered by any kind of object or material, especially not by metal or aluminium. Transmission and reception of GNSS signal is however not hindered by plastic or normal glass. Moreover, put at least 20 cm between the antenna and a speaker.

### 3.4. Insert the device on harness



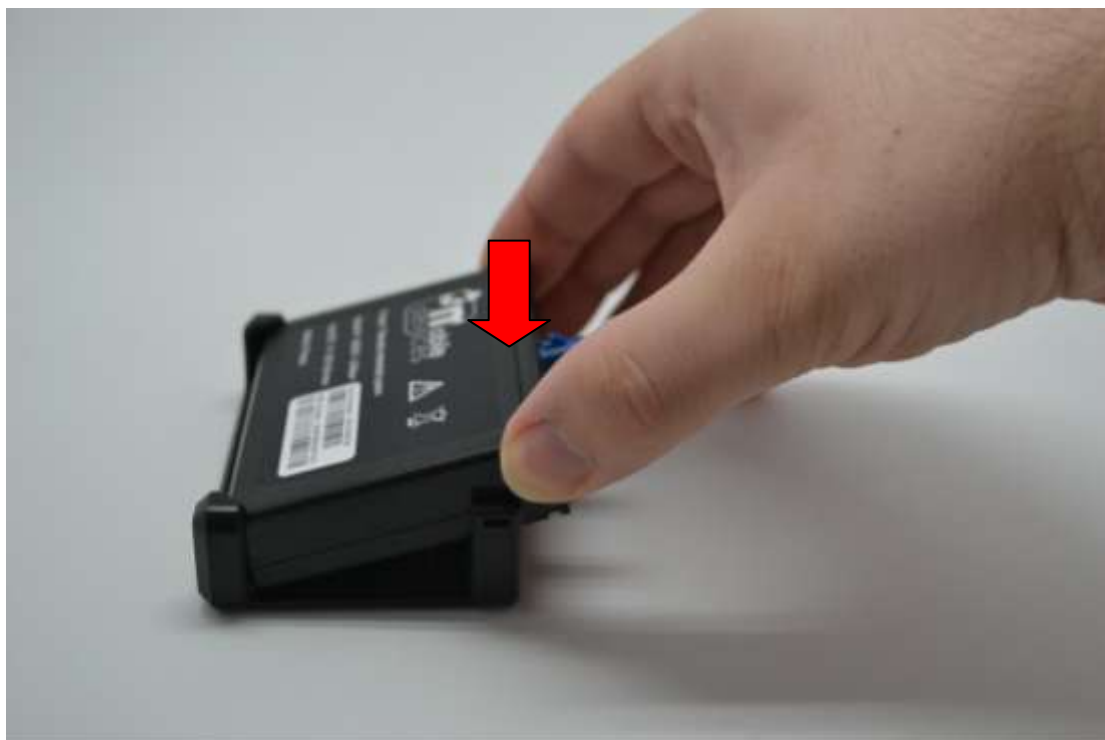

### 3.5. Pin out & Wires description

Signal	Pin	Colour
DIG_OUT1	1	Purple
DIG_OUT2	2	Blue
RS485_A	3	White with black
RS485_B	4	Red with black
DIG_IN1 / TACHO DATA	5	Green
RS232_CTS1	6	Blue with black
RS232_RXD2	7	Green with black
RS232_RTS1	8	Grey with black
ONE_WIRE	9	Grey
AN_IN1	10	Brown
VBAT	11	Red
GND	12	Black
CANL	13	Yellow with black
CANH	14	Purple with black
IGNITION	15	White
ALARM	16	Orange
RS232_RXD1	17	Orange with black
RS232_TXD1	18	Brown with black
RS232_TXD2	19	Black with white
AN_IN2	20	Yellow



20	19	18	17	16	15	14	13	12	11
10	9	8	7	6	5	4	3	2	1

Power supply may be derived directly from the vehicle's main power or from the board installation. In the first case, it is an absolute must that a fuse on the main cable is present.



Ignition wire must always be connected to the vehicle's ignition OR tied with the permanent positive to the vehicle's battery.

Ground must be always connected first. It is mandatory to add a fuse (2A) to the permanent positive. The closer to the connection point with vehicle power.

### 3.6. Plug the device to the external power

The device must have a direct connection with the main power (external battery). Mobile Devices advise against the use of intermediate system.

1. Check that all the inputs implied in the wake-up reasons configured on your device are not connected.
2. Plug the device (black wire) to the ground of the external battery.
3. Plug the device (red wire) to the permanent positive of the external battery.
4. Plug the device (white wire) to the ignition (after contact).

In some case, the use of a circuit breaker can let the ignition (after contact) active. Thus, the device will be ON indefinitely. So, it's important to find a signal where the ignition can be ON or OFF.

Moreover, it is imperative to insulate the GNSS antenna in order to avoid it get in touch with the car's chassis.

---

**The device should be always plugged to :**

- The ground of the external battery.
- A ground point defined by the vehicle manufacturer (if different from the ground of the external battery).



**A circuit breaker should never be enabled as long as:**

- Ignition is active.
- Ignition goes OFF since less than 2 minutes. This is the time for the device to do a proper shutdown.

It is mandatory to add a fuse (2A) to the permanent positive. The closer to the connection point with vehicle power.

---

## 4. Inputs activation threshold

Here are inputs activation thresholds (voltage).

- **Ignition (active high)** is active if voltage greater than 3V (disabled if smaller than 1V)
- **Alarm (active low)** is active if voltage is below 1V (disabled if greater than 3V)
- **Digital Input1 (active low)** is active if voltage is below 0.5V (disabled if greater than 3V)

**Note:** Range voltage on inputs is 0-30V

## 5. Ouputs information

The two Outputs are active low and they can deliver up to 300mA.

**Note:** Outputs have a pull-up resistance of 10Kohms

## 6. LEDs sequences

Green LED (Soft)		Red LED (System)	
Sequence	Meaning	Sequence	Meaning
No GPRS/No GPS	3 times (50ms ON/100ms OFF) 3550ms OFF	C4Max OFF	OFF
No GPRS/Fix GPS	2 times (50ms ON/100ms OFF) 3700ms OFF	Ext. Power/Run	ON
GPRS OK/No GPS	1 time (50ms ON/100ms OFF) 3850ms OFF	Int. Bat/Run	ON
GPRS OK/Fix GPS	2000ms ON 2000ms OFF	Shutdown (hibernate)	5ms ON/2000ms OFF
		Idle/Sleep (idle)	twice (5ms ON/50ms OFF) 1895ms OFF

## 7. Support

For all questions not related in this installation guide, please contact the support team by email at [support@mobile-devices.fr](mailto:support@mobile-devices.fr)