

HR2 Quick Reference Guide

The HR2 allows users to enjoy wireless control of their *g!* system from any zone in the house. A few simple steps are required prior to using your new HR2 remote control.


You will need the following items which are included in the HR2 kit:

- A. Remote
- B. Charging Station
- C. USB to Mini-USB Cable
- D. 16VDC @ 1.5A Power Supply (2.1mm tip Positive)

Required items not included in HR2 kit:
Computer with *g!* Connect Pro installed
System Controller*

Optional items Purchased Separately:


- 2900008 - Additional Battery
- HR2CS - Additional Charging Station

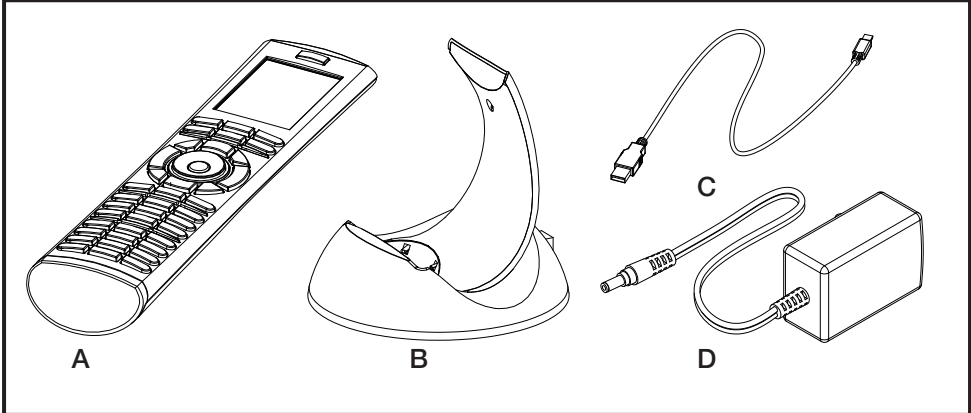

* System Controller (HC12 / HC8 / HC6 / HC4) sold separately. **Please note: The HR2 requires an HC controller running 5.2 or higher.**

Figure 1


Accessing the Mini-USB Programming Port, IR Receiver, and On/Off Switch

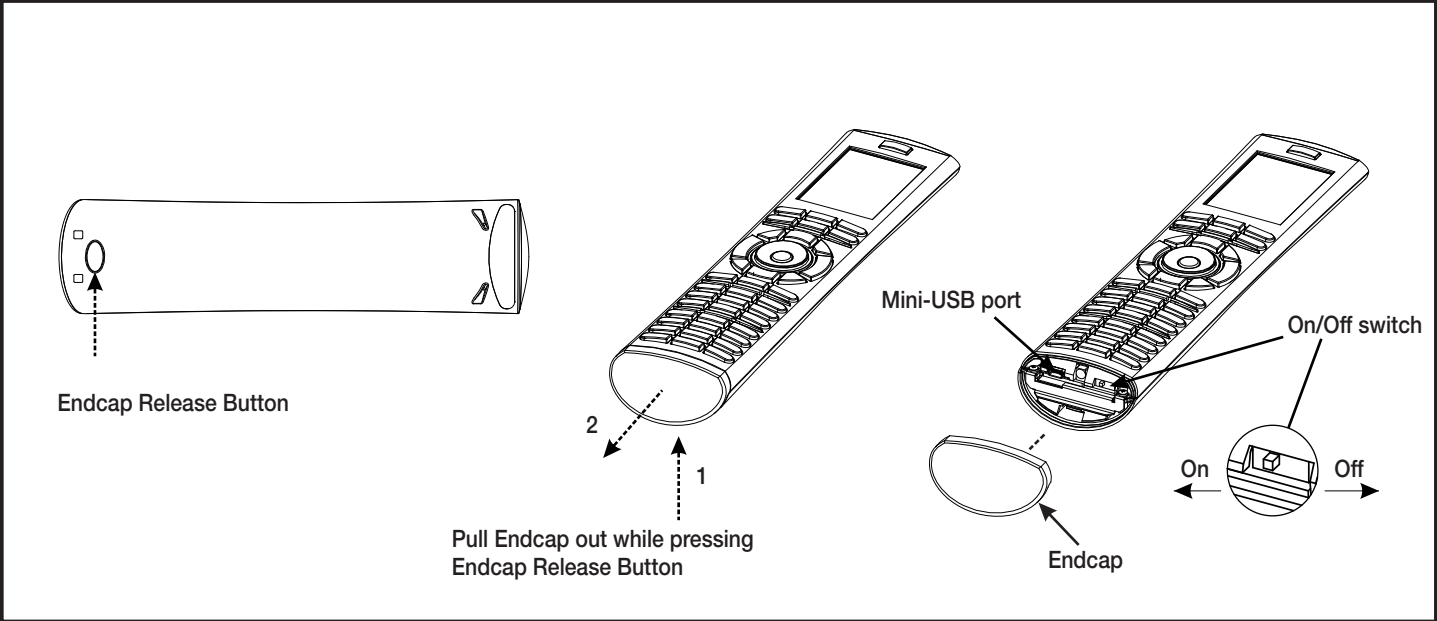

The HR2 is shipped with the power switch in the “off” position to conserve the pre-installed battery life. Prior to setup the endcap must be removed and the power switch must be changed to the “on” position. To access the power switch locate the Endcap Release Button on the bottom of the remote. While depressing the endcap release button pull the endcap away from the body of the remote as illustrated. Move the On/Off power switch located on the right side to the “on” position. **(For extended periods of non-use it is recommended to turn the remote off with this switch to conserve the battery life.)** Note the location of the Mini-USB port and IR Receiver. Replace endcap and follow the charging instructions below.


Figure 2

Charging the Remote

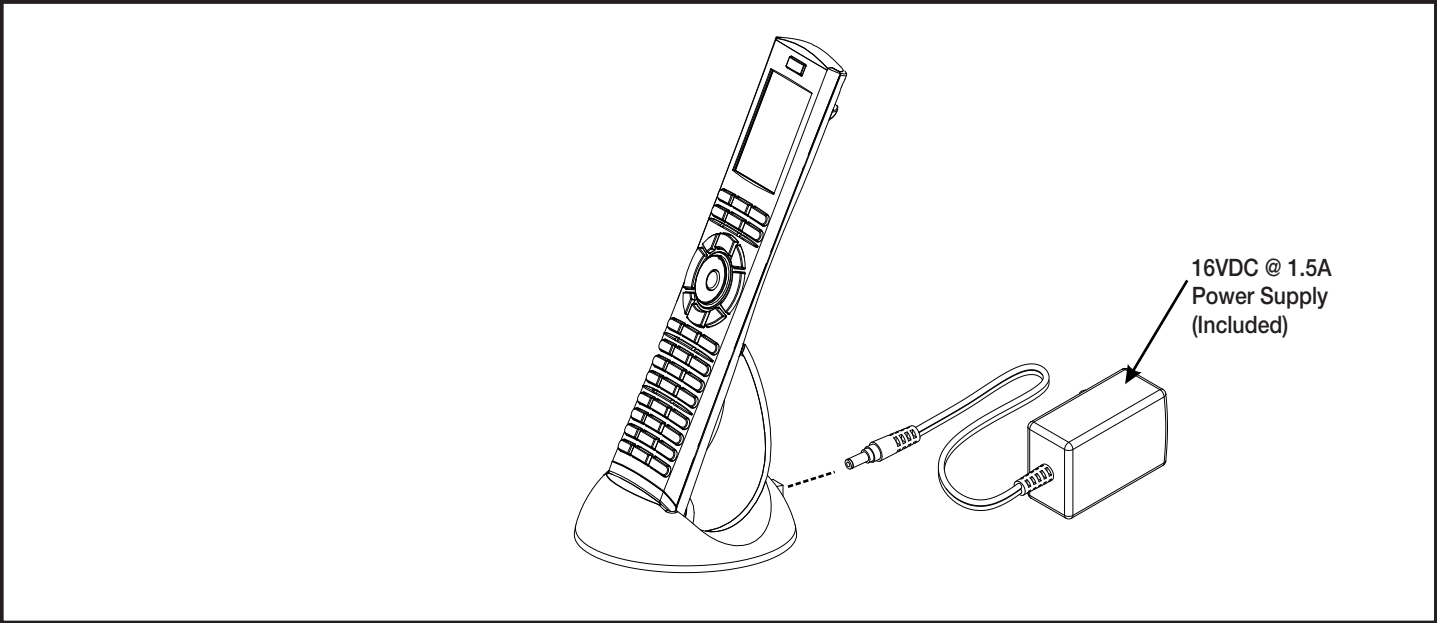


Before configuring, the HR2 must be fully charged. **Charge the remote in the included charging cradle for at least 2 hours prior to setup.** To charge, place the remote in the charging cradle and connect the included power supply to the back of the charging cradle and wall outlet. The remote display may light up briefly while beginning to charge. It is recommended to place the remote in the charging cradle when not in use.

Figure 3
Remote Configuring

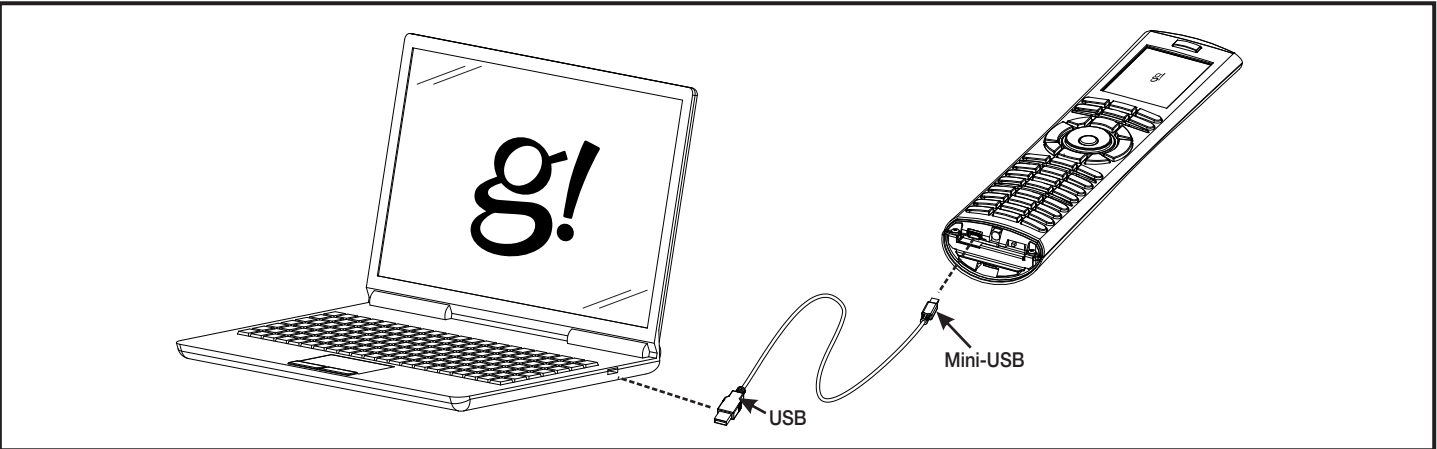

- After charging the remote fully, proceed with the setup by following these steps:
- 1) Remove endcap and slide the power switch right to the "off" position.
 - 2) Plug in the provided mini-USB cable to the remote USB port located on the left side behind the endcap (see figure one for location).
 - 3) Plug the other end of the USB cable into a computer with g! Connect Pro already installed and running.
 - 4) Slide the power switch left to the "on" position.
 - 5) Enter the password requested on the HR2 screen using the following numeric buttons in this sequence: 3526 enter.
 - 6) You are now ready to proceed with configuration using g! Connect Pro. Please refer to the HR2 integration note for more details.

Figure 4
Removal and Replacement of the battery

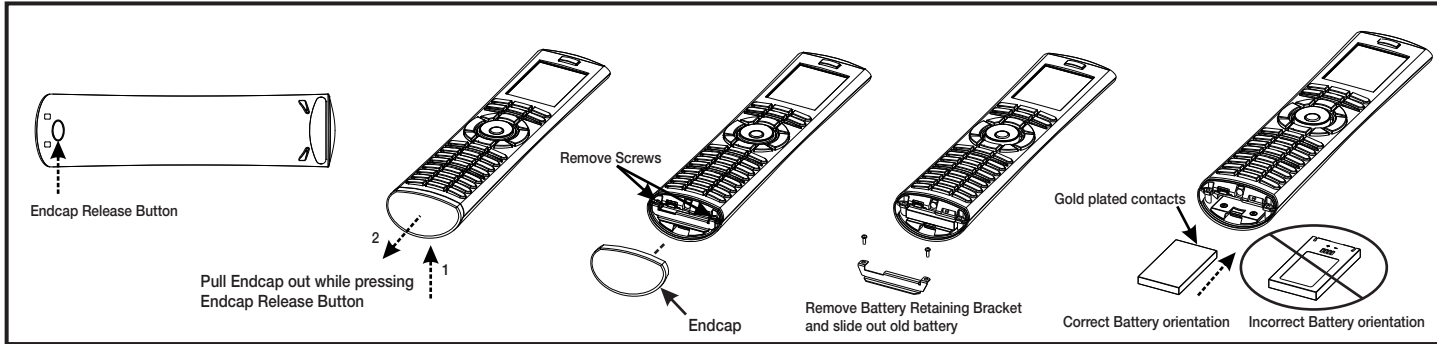

- 1) To access the battery locate the Endcap Release Button on the bottom of the remote. While depressing the Endcap release button pull the Endcap away from the body of the remote as illustrated.
- 2) Remove the two screws holding the Battery Retaining Bracket in place using a #1 Phillips Screwdriver. Slide out the old battery.
- 3) **CAUTION. Danger of explosion if battery is incorrectly replaced. Replace battery with only Elan approved battery part number 2900008.** (Contact your local dealer for replacement battery.)
- 4) Assure proper orientation while inserting replacement battery. Battery label should be faced down and gold plated charging contacts should enter the unit first. Refer to the illustration above. **Improper installation of the battery will result in permanent damage to the remote.**

Limited Warranty

ELAN HOME SYSTEMS L.L.C. ("ELAN") warrants the HR2 to be free from defects in materials and workmanship for the period of two years (2 years) from the date of purchase. If within the applicable warranty period above purchaser discovers that such item was not as warranted above and promptly notifies ELAN in writing, ELAN shall repair or replace the item at the company's option. This warranty shall not apply (a) to equipment not manufactured by ELAN, (b) to equipment which shall have been installed by other than an ELAN authorized installer, (c) to installed equipment which is not installed to ELAN's specifications, (d) to equipment which shall have been repaired or altered by others than ELAN, (e) to equipment which shall have been subjected to negligence, accident, or damage by circumstances beyond ELAN's control, including, but not limited to, lightning, flood, electrical surge, tornado, earthquake, or other catastrophic events beyond ELAN's control, or to improper operation, maintenance or storage, or to other than normal use of service. With respect to equipment sold by, but not manufactured by ELAN, the warranty obligations of ELAN shall in all respects conform to the warranty actually extended to ELAN by its supplier. The foregoing warranties do not cover reimbursement for labor, transportation, removal, installation or other expenses which may be incurred in connection with repair or replacement.

Except as may be expressly provided and authorized in writing by ELAN, ELAN shall not be subject to any other obligations or liabilities whatsoever with respect to equipment manufactured by ELAN or services rendered by ELAN.

THE FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED AND IMPLIED WARRANTIES EXCEPT WARRANTIES OF TITLE, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

ATTENTION: TO OUR VALUED CUSTOMERS

To ensure that customers obtain quality pre-sale and after-sale support and service, ELAN Home Systems products are sold exclusively through authorized dealers. ELAN products are not sold online. The warranties on ELAN products are **NOT VALID** if the products have been purchased from an unauthorized dealer or an online E-tailer. To determine if your ELAN reseller is authorized, please call ELAN Home Systems at (859) 269-7760.