

TABLE OF CONTENTS

ENG

INTRODUCTION

| | |
|--------------------------------|----|
| FCC Compliance Statement | i |
| Safety Instructions | ii |
| General Information | 1 |
| Equipment Checklist | 2 |
| Monitor Features | 3 |

GETTING STARTED


| | |
|-------------------------|---|
| Installation | 4 |
| Control Buttons | 5 |
| On-Screen Display | 6 |

ON-SCREEN CONTROLS

| | |
|-------------------------|---|
| Menu Descriptions | 7 |
|-------------------------|---|

REFERENCE

| | |
|------------------------|----|
| Power Management | 10 |
| Timing Guide | 11 |
| Pin Assignment | 12 |
| Specifications | 13 |
| Troubleshooting | 14 |

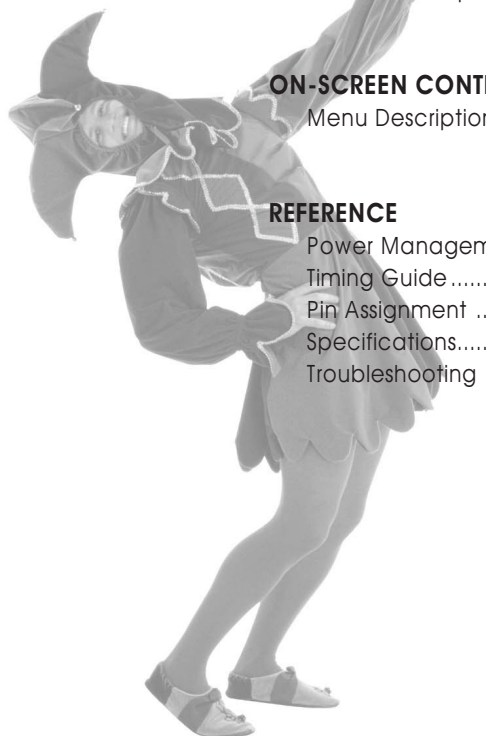

* Note :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against radio frequency interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception (this can be determined by turning this equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

CAUTION :

To comply within the limits for an FCC Class B computing device, always use the shielded signal cord supplied with this unit.

CAUTION TO THE USER :

The Federal Communications Commission warns that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. If necessary, the user should contact the dealer or an experienced radio/television technician for additional suggestions. The user may find the Federal Communications Commission booklet, How to Identify and Resolve Radio-TV Interference Problems, helpful. This booklet is available from the U.S. Government Printing Office, Washington, D.C., Stock No. 004-000-00345-4.

NOTICE OF COMPLIANCE WITH CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS**DDC COMPLIANCE NOTICE :**

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Handling

Due to its fragile glass panel, this monitor must be handled with caution and not exposed to impact or shock.

Never touch the display area or rub it with a hard stiff object or tool, as the panel is easily scratched.

Cleaning

The display area is highly prone to scratching. Do not use ketone-type cleaners (i.e. acetone), ethyl alcohol, toluene, ethyl acid or methyl chloride to clean the panel. Doing so may result in permanent damage.

Water, IPA and Hexane are safe cleaners.

Do not allow oil or water to penetrate the display, as droplets cause staining and discoloration with Time.

Keep food particles and fingerprints away from the display area at all times.

Storage

Store the monitor in a dark place away from sunlight and ultraviolet (UV) radiation, as air bubbles May develop within the glass panel with time.

Do not store the display in temperatures higher than 40°C / 104°F or humidity greater than 90%. Avoid condensation.

Caution

1. Do not open any covers on the monitor. No user serviceable parts are inside.
2. In an emergency, disconnect the AC power plug.
3. To avoid electrical shock, disconnect the power cord from the AC adapter before connecting the signal cable to the computer.
4. Keep away from liquids and flame. Do not immerse this monitor in water or any other liquid. Do not use this device in excessively hot conditions.
5. Handle the power cord with care. Do not bend the power cord excessively or place heavy objects on it. Do not use a damaged power cord, as doing so can result in fire or electrical shock hazards. When disconnecting the power cord, always grasp the plug, not the cord.
6. The liquid crystals in the display panel contain several irritants. If the panel is damaged or broken, do not allow the liquid to come in contact with skin, eyes, or mouth. If you come in contact with the liquid, flush the affected area with

SAFETY INSTRUCTIONS

ENG

running water for at least 15 minutes, then consult a doctor.

7. Handle this monitor with care when moving it. When lifting the monitor, support it with one hand holding the stand, and one hand holding the stand, and one hand holding the LCD screen.
8. Always disconnect the power cord when moving this monitor.
9. Do not lay this monitor in the horizontal position when operating.
10. Please use the supplied AC- Adapter for safety
11. For safe use, do not tilt the LCD screen from the vertical position to forward and over the angle of 20 degrees from the vertical position to backward

GENERAL INFORMATION


Your new LCD monitor incorporates the latest state-of-art color Liquid Crystal Display (LCD) technology providing a wider viewing angle with higher contrast ratio for IBM compatible PC and Apple Macintosh.

Your new LCD monitor has many advantages : safe from electromagnetic wave, lights, sharps and slims. This makes the monitor extremely suitable in the environment of administration, transportation system research, etc.

Your new LCD monitor is designed for only Analog input support.

Your new LCD monitor does not emit any X-ray radiation and the magnetic emission greatly reduces the eyestrain. Moreover, our On Screen Controls on the side of the panel provide flexibility with simple controls. You can use these controls to adjust the display as you desire.

Your new LCD monitor incorporates an active TFT module. It has a 1280 x1024 pixel resolution, high contrast, wide viewing angle and colors up to 16.7M.

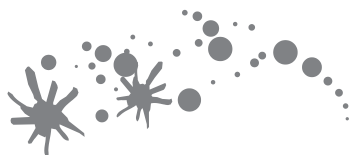

EQUIPMENT CHECKLIST


ENG

Before operating your display, please check to make sure that all of the items listed are present in your package :


- ◆ Color TFT LCD Monitor (With 15-pin D-SUB cable)
- ◆ Accessory Box :
 1. AC to DC Adapter & Power Cord




2. This manual

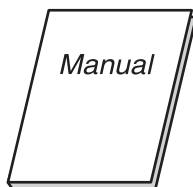

3. Option

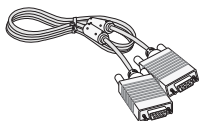

DVI Cable




S-VIDEO Cable

Power Requirements

The monitor is equipped with an auto-sensing power supply for voltage ranging from 100-120VAC/200-240VAC, 50/60Hz.

Confirm the line voltage designation then power cable to the power jack.

- Supports Analog IBM compatible PC, Apple Macintosh™(Adapter optional)
- Supports DPMS for monitor power management
- Support DDC2B
- On Screen Control : Auto-Tune, Contrast, Brightness, H/V Position, H-Size, Phase, Auto-Level, Color Control, OSD Position, OSD Time-out, Power Save Delay, Language, Information.
- Built-in color active matrix TFT (Thin Film Transistor) Liquid Crystal Display (LCD) that uses amorphous silicon TFTs as a switching device.
- Resolution : up to 1280 x 1024
- Color : 16.7M Color support.
- Dot pitch : 0.264mm(H) x 0.264mm(W)
- Scanning frequency : 30kHz ~ 80kHz(H), 56Hz ~ 75Hz(V).
- Universal power supply : AC 100-240V allowed.
- Power consumption Normal : 45 Watt Max.
Off : 3 Watt Max.
- Outside dimension : 381.5mm(W) x 387.9mm(H) x 187.8mm(D)
- Weight (net) : 6.5kg

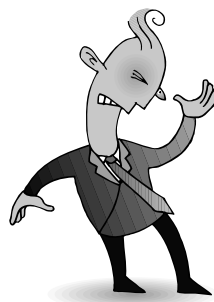


Follow these steps to install the monitor

1. Before you connect the cables, make sure the monitor and system unit power switches are OFF.
2. Plug one end of the 15-pin signal cable to the rear of your system.
The adapter may be required for certain Apple Macintosh computers. Tighten the two screws on the cable connector.
3. Connect the power cord to the inlet socket which is located at the AC Adapter. Connect the plug into an AC wall outlet.
4. Connect DC plug of the AC Adapter to the DC Jack which is located at the end of the signal cable.



Front Controls

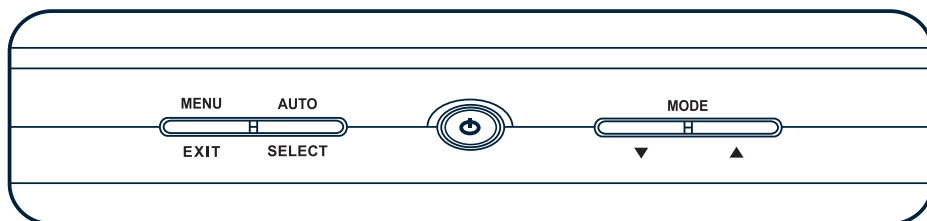

Button Description :

1. MENU/EXIT

OSD(ON SCREEN DISPLAY)MENU diagram appears on the screen when MENU/EXIT button is pressed. Pressing of button when OSD MENU appears enables exit from OSD MENU.

2. AUTO/SELECT

If the button is pressed during the screen state, automatic adjustment into optimal size and location is executed. If the button is pressed on the state of OSD MENU, operation is executed with selection button.

3. MODE(▲, ▼)

Value of the selected menu can be adjusted with ▲(increase)/▼(decrease) button at the state of OSD MENU.

This LCD monitor features an On-Screen Display OSD menu. These icons are designed to make adjusting your monitor display settings easier. When highlighted, the icons illustrate the control function to assist you in identifying which control needs adjustment.


Before activating the OSD menu, the SELECT/AUTO button can be used to automatically adjust the display to the proper size and horizontal and vertical position. (Press button for 2 seconds.)

The OSD menu activates automatically when you press the MENU/EXIT button on the Bottom of the monitor. The OSD remains centered on the screen while you make your adjustments. Use either the ▲ or ▼ button to move the highlight to your selection. A submenu or control with a status bar will appear. The status bar indicates in which direction, from the factory preset, which adjustments are being made. Use the ▲ or ▼ button to adjust the control.

The contrast and brightness menu can also be adjusted by simply pressing either the ▲ or ▼ buttons.

When you have finished making adjustments, press the MENU/EXIT button to save setting and exit back to main menu.



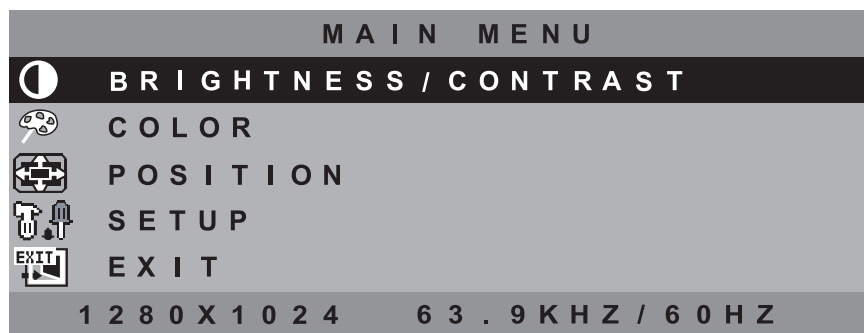

1. BRIGHTNESS / CONTRAST Adjustment

This menu is used when the brightness and contrast level of the screen need to be adjusted. Use ▲ and ▼ button to adjust.

2. COLOR Adjustment

After selecting this menu, use ▲ and ▼ button to adjust R, G and B color on the USER mode according to user preference.

3. POSITION Adjustment (vertical/horizontal)


After Selecting this menu, use ▲ and ▼ button to adjust left/right and top/bottom location of the screen

(1)CLOCK

After selecting this menu, use ▲ and ▼ button to adjust screen image into optimal state by removing malfunctioning noise that appears on the screen.

(2)PHASE---(FOCUS Adjustment)

After selecting this menu, use▲ and ▼ button to adjust the clarity of the screen image to yield clear image that user desires.

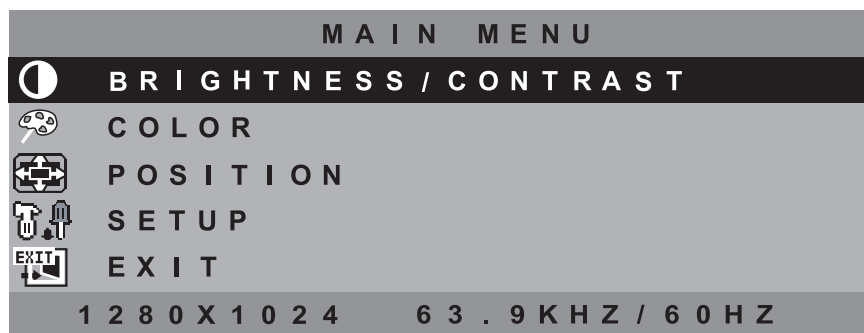

4. SETUP---OSD Information Modification

(1) OSD POSITION

After selecting this menu, use ▲ and ▼ button to adjust the location of OSD that appears on the screen.

(2) OSD TIME

After selecting this menu, use ▲ and ▼ button to adjust the time needed to materialize the OSD screen that appears on the screen.

(3) LANGUAGE

After selecting this menu, use ▲ and ▼ button to adjust the language used on the OSD screen that appears on the screen.



* Note:

You can get the best quality of the image under full-screen image with a running computer.

The function of AUTO-TUNE may not work properly if background color is dark or if the input Image does not fill the screen(ex: DOS text mode)

We strongly recommend that you just run the AUTO-LEVEL & AUTO-TUNE function to get the best image quality when you unpack the monitor or when you install different VGA card or PC.

*Caution

This page applies to the product that added on the Option(DVI, S-VIDEO) specs.

| | |
|-----------------|------------------|
| OSD POSITION | ▶ 1 |
| OSD TIME | ▶ 30SEC |
| LANGUAGE | ▶ ENGLISH |
| SOURCE | ▶ ANALOG |
| EXIT | |

| | |
|---------------|------------------|
| OSD POSITION | ▶ 1 |
| OSD TIME | ▶ 30SEC |
| LANGUAGE | ▶ ENGLISH |
| SOURCE | ▶ S-VIDEO |
| EXIT | DVI |

SOURCE in the OSD SETUP needs to be adjusted when the DVI, S-VIDEO OPTION is added on.

1. SOURCE: Input Signal

After selecting this menu, use ▲ and ▼ button to adjust into ANALOG, DVI, S-VIDEO as desired buy user.

- (1) **ANALOG:** Use regular D-SUB input signal.
- (2) **DVI:** Use **DIGITAL VISUAL INTERFACE** input signal.
- (3) **S-VIDEO:** Use **SUPER VIDEO** input signal.



LED INDICATOR (POWER MANAGEMENT ACTIVE)

The power management feature of this LCD monitor is comprised of two stages :
On or Out of Range(Green), Off (Amber/Green blinking).

In the off mode, all circuitry in the monitor is shut down, except for a low power detection circuit. This circuit allows the monitor to wake up when the mouse is moved or a key on the keyboard is pressed.

| Power Mode | H-Sync | V-Sync | Video | LED Color |
|--------------|----------|----------|---------|------------------------------------|
| Normal | Pulse | Pulse | Active | Green |
| Out Of Range | Pulse | Pulse | Active | Green |
| Off | Pulse | No Pulse | Blanked | Green / Amber blinked per 1 second |
| Off | No pulse | Pulse | Blanked | Green / Amber blinked per 1 second |
| Off | No pulse | No pulse | Blanked | Green / Amber blinked per 1 second |



The LCD is a multi-frequency display. It operates at horizontal frequencies between 30KHz~80KHz and vertical frequencies between 56Hz~75Hz. Because of its microprocessor-based design, it offers auto-synchronization and auto-sizing capabilities. This monitor offers 10 preprogrammed settings that are listed in the timing table on page 11.

These preset modes cover most of the common video modes supported by popular graphics adapters. However, each adapter's implementation of these video modes may vary slightly. If you find it necessary to make minor display adjustments (for example, horizontal and vertical position), please refer to the On Screen Display section of this manual for instructions.

If you would like to use one of the preset timing modes, please refer to your video card manufacturer's installation guide for instructions on how to make these changes. The video card controls the refresh rate. Most video cards provide a software utility or hardware DIP switches that allows you to change the frequency used for each resolution.

Timing Table

| Preset | | Resolution | | Frequency | | Clock [MHz] | Polarity (H/V) |
|--------|------|------------|----------|------------|----------|----------------|-------------------|
| | | Horizontal | Vertical | Horizontal | Vertical | | |
| VGA | M 1 | 720 | 400 | 31.5kHz | 70Hz | 28.322 | -/+ |
| VESA | M 2 | 640 | 480 | 31.5kHz | 60Hz | 25.175 | -/- |
| | M 3 | 640 | 480 | 37.5kHz | 75Hz | 31.500 | -/- |
| | M 4 | 800 | 600 | 37.9kHz | 60Hz | 40.000 | + / + |
| | M 5 | 800 | 600 | 46.9kHz | 75Hz | 49.500 | + / + |
| | M 6 | 1024 | 768 | 48.4kHz | 60Hz | 65.000 | -/- |
| | M 7 | 1024 | 768 | 60.0kHz | 75Hz | 78.750 | + / + |
| | M 8 | 1280 | 1024 | 64.0kHz | 60Hz | 108.000 | + / + |
| | M 9 | 1280 | 1024 | 80.0kHz | 75Hz | 135.000 | + / + |
| MAC | M 10 | 832 | 624 | 49.7kHz | 75Hz | 57.284 | -/- |

* Note :

In case of using Macintosh™, you may need a Mac adapter.

PIN ASSIGNMENT


ENG

POWER JACK



| | |
|---|----------|
| 1 | Ground |
| 2 | DC + 12V |

VGA Connector

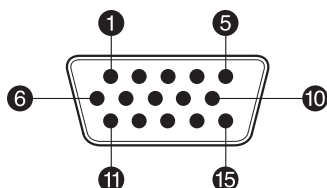

| | |
|--------|------------------|
| Pin 1 | Red |
| Pin 2 | Green |
| Pin 3 | Blue |
| Pin 4 | No Connection |
| Pin 5 | Ground |
| Pin 6 | Red Ground |
| Pin 7 | Green Ground |
| Pin 8 | Blue Ground |
| Pin 9 | No Connection |
| Pin 10 | Ground |
| Pin 11 | Ground |
| Pin 12 | DDC SDA |
| Pin 13 | Horizontal Sync. |
| Pin 14 | Vertical Sync. |
| Pin 15 | DDC SCL |

* Note :

When resolutions are shown that are lower than the pixel count of the LCD panel, text may appear choppy or bold. This is normal all current flat panel technologies when displaying non-native resolutions on a full screen (below than 1280×1024 resolution). In flat panel technologies, each dot on the screen is actually one pixel, so to expand resolutions to full screen, an interpolation of the resolution must be down. When the interpolated resolution is not an exact multiple of the native resolution the mathematical interpolation necessary may cause some lines to appear thicker than others.

SPECIFICATIONS

ENG

| | | |
|-----------------------------|---|---|
| LCD | Type Color Filter Colors Glass surface | 17" diagonal viewable screen TFT (Thin Film Transistor) Active Matrix Panel, 0.264mm pixel pitch R,G,B vertical Stripe 16.7M Anti-glare coating |
| Viewing Angles (CR ≥ 10) | Left / Right Up / Down | 65° / 65° 45° / 65° |
| Contrast Ratio | Typ. | 500 : 1 |
| Luminance of White | Typ. | 250cd/m ² |
| Compatibility | PC | IBM XT, AT, 386, 486, Pentium or PS/2 and compatibles (from VGA up to 1280 x1024 @ 75Hz NI.) |
| Refresh Rate | Max. | 1280x1024 @ 75Hz NI (60Hz for optimal display) |
| Connectors | Input Signal Power | 15-pin D-SUB Jack type DC+12V In |
| Power | Input Output Consumption | AC 100-240V 56-60Hz DC 12V 45 watts |
| Display Area | Max | 337.9mm(H) 270.3mm(V) |
| Operating | Temperature Humidity Altitude Tilt Angle | 32°F to 104°F (0°C to 40°C) 20% RH to 90% RH (no condensation) To 10,000 feet Vertical to 20° (Backward) |
| Storage Conditions | Temperature Humidity | -14°F to 104°F (-20°C to 40°C) 5% RH to 90% RH (no condensation) |
| Dimension | | 381.5mm(W) x 387.9mm(H) x 187.8mm(D) |
| Weight | Net | (6.5 kg) |
| Option | | S-VIDEO, DVI |

No power.

- ❑ Flip the power switch ON. The Power LED turns on.
- ❑ Make sure AC power cord is securely connected to the power jack and to a power outlet.

Power on but no screen image.

- ❑ Make sure the video cable attached with this monitor is tightly secured to the video output port on the back of the computer
- ❑ Adjust the brightness and contrast.

Image is unstable, unfocused.

- ❑ Use AUTO-TUNE to adjust automatically.
- ❑ If the image is still unstable after AUTO-TUNE processing, please adjust PHASE manually to get image focused.
- ❑ Check whether the resolution or refresh rate in windows display setting is beyond supported range (please refer to the specification of supported mode.)

Flickering

- ❑ Not enough power is being supplied to the Monitor.
Connect the Monitor to a different outlet. If a surge protector is being used, there may be too many devices plugged in.
- ❑ See Timing Guide in this manual with a list of refresh rates and frequency settings showing the recommended setting for the Monitor.

Wrong or abnormal colors.

- ❑ If any colors (Red, Green, or Blue) are missing, check the video cable to make sure it is securely connected. Loose pins in the cable connector could cause a bad connection.
- ❑ Connect the Monitor to another computer.
- ❑ Check the graphics card for proper sync scheme (or sync polarities) to match the Monitor's specifications.

Double (split) screen image

- ❑ Make sure your graphics card is set to Non-Interlaced mode.

Entire screen image rolls (scrolls) vertically.

- ❑ Make sure the input signals are within the LCD monitor's specified frequency range. (Maximum : VESA, MAC 1280 × 1024 @ 75Hz)
- ❑ Connect the video cable securely.
- ❑ Try the Monitor with another power source.

Control buttons do not work.

- ❑ Press only one button at a time.

ABOUT THE LCD

The LCD contains over 3,932,160 thin-film transistors (TFTs).

A small number of missing, discolored, or lighted dots on the screen is an intrinsic characteristic of TFT LCD technology and is not an LCD defect.

If you display a fixed pattern for more than 10 hours, its image may remain on the screen in overlap mode when you display something else.

