

# **ASTRO<sup>®</sup> Digital XTS 5000<sup>™</sup> Model III**

## **User Guide**

**68P81094C27-O**

***Document Creation Date: 8/21/01***

***Document Modification Date: 8/27/01***

## **Preface**


**Before operating your radio, please review the “Safety and General Information” section in the front of this user guide.** Also, be sure to retain this publication for future reference.

## **Computer Software Copyrights**

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs, including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

# ASTRO® Digital XTS 5000™ Model III Radio

## Quick Reference Card

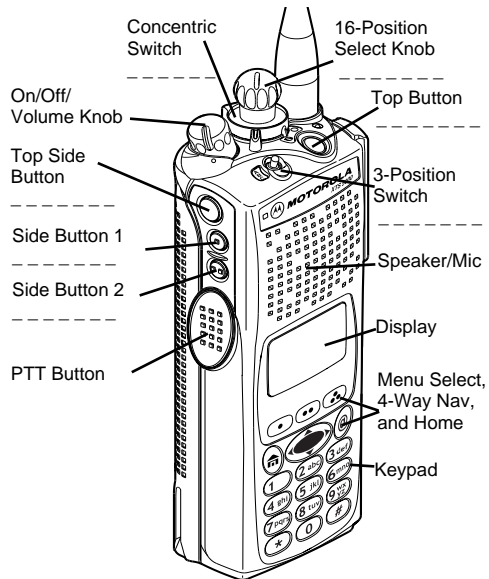

Write your radio's programmed features on the dotted lines.

### Radio On/Off

- 1 On - **On/Off/Volume** knob clockwise.
- 2 Off - **On/Off/Volume** knob counterclockwise.

### Zones/Channels

- 1 Zone - **Zone** switch to desired zone.
- 2 Channel - **Channel** switch to desired channel.

### Receive/Transmit

- 1 Radio on and select zone/channel.  
- or -  
Press and hold **Volume Set** button.
- 2 Listen for a transmission.  
- or -  
Press **Monitor** button and listen for activity.
- 3 Adjust volume, if necessary.
- 4 Press **PTT** to transmit; release to receive.

### Send Emergency Alarm

Radio on and press **Emergency** button.  
Display shows current zone/channel, **EMERGENCY**, and . Red LED lights; you hear short, medium-pitched tone.

Note: To exit emergency at any time, press and hold **Emergency** button.

When acknowledgment is received, you hear four beeps; alarm ends; radio exits emergency.











### Send Emergency Call

- 1 Radio on and press **Emergency** button.
- Note: To exit emergency at any time, press and hold **Emergency** button.
- 2 Press and hold **PTT**. Announce your emergency into the microphone.
  - 3 Release **PTT** to end call.
  - 4 Press and hold **Emergency** button to exit emergency.

### Send Silent Emergency Alarm

- 1 Radio on and press **Emergency** button.  
Display does not change; you see no LED; you hear no tone.
- Note: To exit emergency at any time, press and hold **Emergency** button.
- 2 Silent emergency continues until you:
    - Press and hold **Emergency** button to exit emergency state.
    - or -
    - Press and release **PTT** to exit silent emergency and enter regular emergency (alarm, call, or alarm with call).

## Display Status Symbols


H L	Power Level. H = high power; L = low power
	Receiving an individual call
<input type="checkbox"/>	The radio is in the view or program mode; <b>On Steady</b> = view mode; <b>Flashing</b> = program mode
	Received signal strength for the current site (trunking only). The more stripes in the symbol, the stronger the signal.
	Flashes when the battery is low.
	You are talking directly to another radio or through a repeater; <b>On</b> = direct; <b>Off</b> = repeater
	This channel is being monitored.
	Your radio is in secure operation; <b>On</b> = secure operation; <b>Off</b> = clear operation; <b>Flashing</b> = receiving an encrypted voice call
	The radio is scanning a scan list
	Priority 1 Channel during scan
	Priority 2 Channel during scan
	The radio is in Emergency state

## Menu Entries (Use With Menu Navigation)

<i>Entry</i>	<i>Menu Selection</i>	<i>Page</i>
<b>BATT</b>	Smart Battery	16
<b>CALL</b>	Private Call	62
<b>CHAN</b>	Select a Channel	23
<b>CLCK</b>	Set the Real Time Clock	84
<b>DIR</b>	Repeater/Direct	71
<b>LOGF</b>	Radio Lock	32
<b>MUTE</b>	Keypad Mute	33
<b>NAME</b>	Text Select	43
<b>NUM</b>	Number Select	41
<b>PAGE</b>	Call Alert Page	65
<b>PHON</b>	Phone	58

<i>Entry</i>	<i>Menu Selection</i>	<i>Page</i>
<b>PROG</b>	Editing	41
<b>PSWD</b>	Password	31
<b>PWR</b>	TX Power Level	29
<b>RPGM</b>	Reprogram Request	77
<b>SCAN</b>	Scan On/Off	54
<b>SITE</b>	Site Lock	81
<b>STS</b>	Status Call	69
<b>TGRP</b>	Talkgroup Call	67
<b>VIEW</b>	Viewing a List	40
<b>ZONE</b>	Select a Zone	22

## Menu Navigation

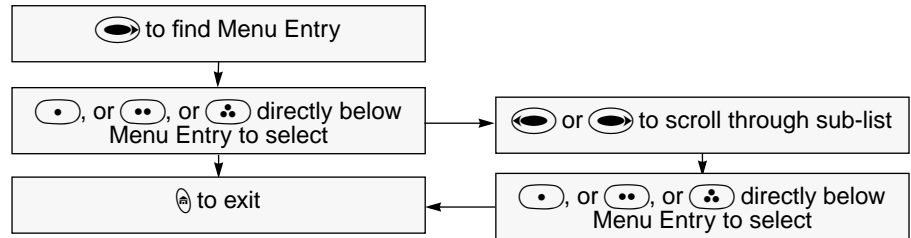

# Contents

---

## Safety and General Information

- Transmit and Receive Procedure .....vii
- Exposure to Radio Frequency Energy .....vii
  - Two-Way Radio Operation .....viii
  - Body-Worn Operation .....viii
  - Antenna Care .....ix
  - Approved Accessories .....ix
- Electromagnetic Interference/Compatibility .....ix
  - Facilities .....ix
  - Aircraft .....ix
  - Medical Devices .....ix
- Use While Driving .....x
- Operational Warnings .....xi
- Operational Cautions .....xii
- Intrinsically Safe Radio Information .....xiii
  - FMRC Approved Equipment .....xiii
  - Repair of FMRC Approved Products .....xv

## General Radio Operation

- Notations Used in This Manual .....1
- Your XTS 5000 Model III Radio .....2
- Physical Features of the XTS 5000 Model III Radio .....3
- Programmable Controls .....3
- Display .....4
  - Light .....5
  - Status Symbols .....5
  - Text .....7
  - Menu Entry (Softkey) .....7
  - Menu Select Buttons .....7

Ⓜ, Motorola, ASTRO, XTS 5000, Private Conversation, and SmartZone are trademarks of Motorola, Inc.

P25 radios contain technology patented by Digital Voice Systems, Inc.

W@P is a trademark of the Wireless Application Protocol Forum Ltd.

© 2001 by Motorola, Inc.  
Commercial, Government and Industrial  
Solutions Sector  
8000 W. Sunrise Blvd., Ft. Lauderdale, FL 33322  
Printed in U.S.A. 9/01. All Rights Reserved.

**User Guide**  
**68P81094C27-0**

Menu Entry Features .....	8
Home Button .....	8
W@P™ Button .....	8
4-Way Navigation Button .....	8
Keypad .....	9
LED Indicators .....	10
Alert Tones .....	11
Standard Accessories .....	14
Battery .....	14
Smart Battery Condition .....	16
Antenna .....	17
Belt Clip .....	18
Universal Connector Cover .....	19
Radio On and Off .....	21
Turn the Radio On .....	21
Turn the Radio Off .....	21
Zones and Channels .....	22
Select a Zone .....	22
Select a Channel .....	23
Receive / Transmit .....	25
Without Using the Volume Set and Monitor Buttons .....	25
Use the Preprogrammed Volume Set Button .....	25
Use the Preprogrammed Monitor Button .....	26
Conventional Mode Operation .....	26

## **Common Radio Features**

Selectable Power Level .....	29
Use the Menu .....	29
Use the Preprogrammed Transmit Power Level Switch .....	29
Radio Lock .....	30
Unlock Your Radio .....	30
Change Your Password .....	31
Enable or Disable the Radio Lock Feature (Secure Radios Only) .....	32
Mute or Unmute Keypad Tones .....	33
Use the Menu .....	33
Use the Preprogrammed Keypad Mute Button .....	33
Conventional Squelch Operation .....	34
Analog Options .....	34
Digital Options .....	34

---

PL Defeat .....	35
Time-out Timer .....	36
Emergency .....	37
Send an Emergency Alarm .....	37
Send an Emergency Call .....	38
Send a Silent Emergency Alarm .....	39
Emergency Keep-Alive .....	39
Lists .....	40
View a List .....	40
Scan List Empty .....	40
Edit a Call, Page, or Phone List Number .....	41
Edit a Call, Page, or Phone List Name .....	43
Edit a Scan List .....	46
Scan .....	53
Types of Scan Lists .....	53
Types of Scanning .....	53
Turn Scan On or Off .....	54
Delete a Nuisance Channel .....	55
Conventional Scan Only .....	56
Individual Calls .....	57
Quick Access (One-Touch) .....	57
Telephone Calls .....	57
Enhanced Private Conversation Calls (Trunked Channels Only) .....	61
Call Alert Paging .....	64
Conventional Talkgroup Calls (Conventional Operation Only) .....	67
Status Calls (Trunked Radios Only) .....	69
Send a Status Call .....	69
Repeater or Direct Operation .....	71
Select Repeater or Direct .....	71
Smart PTT (Conventional Only) .....	73
 <b>Special Radio Features</b>	
Secure Operations .....	75
Select Secure Transmissions .....	75
Select Clear Transmissions .....	75
PTT ID .....	76
Receive .....	76
Transmit .....	76
View Your Radio's ID Number .....	76

Dynamic Regrouping (Trunking Only) .....	77
Reprogram Request .....	77
Select Enable / Disable .....	79
Trunking System Controls .....	80
Failsoft .....	80
Out-of-Range .....	80
Site Lock .....	81
Site Trunking .....	82
Site View and Change .....	83
Real Time Clock .....	84

## **Helpful Tips**

Radio Care .....	87
Things to Avoid .....	87
Cleaning .....	88
Handling .....	88
Service .....	89
Battery .....	90
Battery Life .....	90
Charging the Battery .....	90
Battery Recycling and Disposal .....	91
Antenna .....	93
Radio Operating Frequencies .....	93

## **Accessories**

Antennas .....	95
Audio Adapters .....	95
Batteries .....	95
Carry Accessories .....	95
Belt Clips .....	95
Belt Loops .....	95
Carry Cases .....	95
Chargers .....	96
Enhanced and Multi-Unit Line Cords .....	96
Commport Integrated Microphone/Receiver .....	96
Headset / Surveillance Accessories .....	97
Beige .....	97
Headset Accessories .....	97
Ear Microphones (Require Radio Interface Module) .....	98
Radio Interface Modules for Ear Microphones .....	98



Remote Speaker and Public Safety Microphones .....	98
Vehicular Adapters .....	99
Accessories .....	99
Allied Models .....	99

**Glossary**

**Commercial Warranty**

**Index**

## Notes

# Safety and General Information

---

## **IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION**

### **READ THIS INFORMATION BEFORE USING YOUR MOTOROLA TWO-WAY RADIO**

The information provided in this document supersedes the general safety information contained in user guides published prior to June 2001. For information regarding radio use in a hazardous atmosphere please refer to the Factory Mutual (FM) Approval Manual Supplement or Instruction Card, which is included with radio models that offer this capability.

## **Transmit and Receive Procedure**

**Your two-way radio contains a transmitter and a receiver. To transmit (talk) you must push the Push-To-Talk button; to receive (listen) you must release the Push-To-Talk button.**

## **Exposure to Radio Frequency Energy**

Your Motorola radio is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy (EME):

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
- National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999

- Australian Communications Authority Radiocommunications (Electromagnetic Radiation - Human Exposure) Standard 1999 (applicable to wireless phones only)
- ANATEL, Brasil Regulatory Authority, Resolution 256 (April 11, 2001) “additional requirements for SMR, cellular and PCS product certification.”

**To assure optimal radio performance and make sure human exposure to radio frequency electromagnetic energy (EME) is within the guidelines set forth in the above standards, always adhere to the following procedures:**

### **Two-Way Radio Operation**



When using your radio as a traditional two-way radio, **hold the radio in a vertical position with the microphone 1 to 2 inches (2.5 to 5.0 cm) away from your lips.**

### **Body-Worn Operation**

To maintain compliance with FCC RF exposure guidelines, if you wear a radio on your body when transmitting, always place the radio in a **Motorola approved clip, holder, holster, case, or body harness for this product.** Use of non-Motorola-approved accessories may exceed FCC RF exposure guidelines. **If you do not use a Motorola approved body-worn accessory and are not using the radio in the intended use positions along side of the head in the phone mode or in front of the face in the two-way radio mode, then ensure the antenna and radio is kept the following minimum distances from the body when transmitting:**

- Phone or Two-way radio mode: one inch (2.5 centimeters)
- Data operation using any data feature with or without an accessory cable: one inch (2.5 centimeters)

## Antenna Care

**Use only the supplied or an approved replacement antenna.**

Unauthorized antennas, modifications, or attachments could damage the radio and may violate FCC regulations.

**DO NOT hold the antenna when the radio is “IN USE.”** Holding the antenna affects call quality and may cause the radio to operate at a higher power level than needed.

## Approved Accessories

For a list of approved Motorola accessories look in the appendix or accessory section of this manual.

## Electromagnetic Interference/Compatibility

**Note:** Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

## Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your radio in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

## Aircraft

When instructed to do so, turn off your radio when on board an aircraft. Any use of a radio must be in accordance with applicable regulations per airline crew instructions.

## Medical Devices

### Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless radio and a pacemaker. These

recommendations are consistent with those of the U.S. Food and Drug Administration.

Persons with pacemakers should:

- ALWAYS keep the radio more than 6 inches (15 centimeters) from their pacemaker when the radio is turned ON.
- not carry the radio in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn the radio OFF immediately if you have any reason to suspect that interference is taking place.

### **Hearing Aids**

Some digital wireless radios may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## **Use While Driving**

Check the laws and regulations on the use of radios in the area where you drive. Always obey them.

When using your radio while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

## Operational Warnings



### **For Vehicles With an Air Bag**

Do not place a portable radio in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable radio is placed in the air bag deployment area and the air bag inflates, the radio may be propelled with great force and cause serious injury to occupants of the vehicle.

### **Potentially Explosive Atmospheres**

Turn off your radio prior to entering any area with a potentially explosive atmosphere, unless it is a radio type especially qualified for use in such areas as "Intrinsically Safe" (for example, Factory Mutual, CSA, UL, or CENELEC). Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

### **Blasting Caps and Blasting Areas**

To avoid possible interference with blasting operations, turn off your radio when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

## Operational Cautions



Caution

### **Antennas**

**Do not use any portable radio that has a damaged antenna.** If a damaged antenna comes into contact with your skin, a minor burn can result.

### **Batteries**

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.



## Intrinsically Safe Radio Information

### FMRC Approved Equipment

Anyone intending to use a radio in a location where hazardous concentrations of flammable materials exist (hazardous atmosphere) is advised to become familiar with the subject of intrinsic safety and with the National Electric Code NFPA 70 (National Fire Protection Association) Article 500 (hazardous [classified] locations).

An Approval Guide, issued by Factory Mutual Research Corporation (FMRC), lists manufacturers and the products approved by FMRC for use in such locations. FMRC has also issued a voluntary approval standard for repair service ("Class Number 3605").



FMRC Approval labels are attached to the radio to identify the unit as being FM Approved for specified hazardous atmospheres. This label specifies the hazardous Class/Division/Group along with the part number of the battery that must be used. Depending on the design of the portable unit, this FM label can be found on the back or the bottom of the radio housing. The FM Approval mark is shown here.



- **Do not operate radio communications equipment in a hazardous atmosphere unless it is a type especially qualified (for example, FMRC Approved) for such use. An explosion or fire may result.**
- **Do not operate an FMRC Approved Product in a hazardous atmosphere if it has been physically damaged (for example, cracked housing). An explosion or fire may result.**
- **Do not replace or charge batteries in a hazardous atmosphere. Contact sparking may occur while installing or removing batteries and cause an explosion or fire.**
- **Do not replace or change accessories in a hazardous atmosphere. Contact sparking may occur while installing or removing accessories and cause an explosion or fire.**
- **Do not operate an FMRC Approved Product unit in a hazardous location with the accessory contacts exposed. Keep the connector cover in place when accessories are not used.**
- **Turn a radio off before removing or installing a battery or accessory.**
- **Do not disassemble an FMRC Approved Product unit in any way that exposes the internal electrical circuits of the unit.**

Radios must ship from the Motorola manufacturing facility with the hazardous atmosphere capability and FM Approval labeling. Radios will not be “upgraded” to this capability and labeled in the field.

A modification changes the unit’s hardware from its original design configuration. Modifications can only be made by the original product manufacturer at one of its FMRC-audited manufacturing facilities.



- **Failure to use an FMRC Approved Product unit with an FMRC Approved battery or FMRC Approved accessories specifically approved for that product may result in the dangerously unsafe condition of an unapproved radio combination being used in a hazardous location.**
- **Unauthorized or incorrect modification of an FMRC Approved Product unit will negate the Approval rating of the product.**

## **Repair of FMRC Approved Products**

REPAIRS FOR MOTOROLA PRODUCTS WITH FMRC APPROVAL ARE THE RESPONSIBILITY OF THE USER.

You should not repair or relabel any Motorola- manufactured communication equipment bearing the FMRC Approval label (“FMRC Approved Product”) unless you are familiar with the current FMRC Approval standard for repairs and service (“Class Number 3605”).

You may want to consider using a repair facility that operates under 3605 repair service approval.



- **Incorrect repair or relabeling of any FMRC Approved Product unit could adversely affect the Approval rating of the unit.**
- **Use of a radio that is not intrinsically safe in a hazardous atmosphere could result in serious injury or death.**

FMRC's Approval Standard Class Number 3605 is subject to change at any time without notice to you, so you may want to obtain a current copy of 3605 from FMRC. Per the December 1994 publication of 3605, some key definitions and service requirements are as follows:

## **Repair**

A repair constitutes something done internally to the unit that would bring it back to its original condition—Approved by FMRC. A repair should be done in an FMRC Approved facility.

Items not considered as repairs are those in which an action is performed on a unit which does not require the outer casing of the unit to be opened in a manner which exposes the internal electrical circuits of the unit. You do not have to be an FMRC Approved Repair Facility to perform these actions.

## **Relabeling**

The repair facility shall have a method by which the replacement of FMRC Approval labels are controlled to ensure that any relabeling is limited to units that were originally shipped from the Manufacturer with an FM Approval label in place. FMRC Approval labels shall not be stocked by the repair facility. An FMRC Approval label shall be ordered from the original manufacturer, as needed, to repair a specific unit. Replacement labels may be obtained and applied by the repair facility, provided there is satisfactory evidence that the unit being relabeled was originally an FMRC Approved unit. Verification may include, but is not limited to: a unit with a damaged Approval label, a unit with a defective housing displaying an Approval label, or a customer invoice indicating the serial number of the unit and purchase of an FMRC Approved model.

## **Do Not Substitute Options or Accessories**

The Motorola communications equipment certified by Factory Mutual is tested as a system and consists of the FM Approved portable, FM Approved battery, and FM Approved accessories or options, or both. This FM Approved portable and battery combination must be strictly observed. There must be no substitution of items, even if the substitute has been previously Approved with a different Motorola communications equipment unit. Approved configurations are listed in the FM Approval Guide published by FMRC, or in the product FM Supplement. This FM Supplement is shipped from the manufacturer with the FM Approved radio and battery combination. The Approval Guide, or the Approval Standard Class Number 3605 document for repairs and service, can be ordered directly from Factory Mutual Research Corporation located in Norwood, Massachusetts.

# General Radio Operation

---

## Notations Used in This Manual

Throughout the text in this publication, you will notice the use of **WARNINGS**, **Cautions**, and **Notes**. These notations are used to emphasize that safety hazards exist, and the care that must be taken or observed.



**WARNING**

**An operational procedure, practice, or condition, etc., which may result in injury or death if not carefully observed.**






**Caution**


An operational procedure, practice, or condition, etc., which may result in damage to the equipment if not carefully observed.

**Note:** An operational procedure, practice, or condition, etc., which is essential to emphasize.

The following special notations identify certain items:

<i><b>Example</b></i>	<i><b>Description</b></i>
<b>Light</b> button or 	Buttons and keys are shown in bold print or as a key symbol.
	Information appearing on the radio's display is shown using the special display font.
<b>PHONE</b>	Menu entries are shown similar to the way they appear on the radio's display.
<b>Press</b> 	This means "Press the right side of the <b>4-way Navigation</b> button."

# Your XTS 5000 Model III Radio

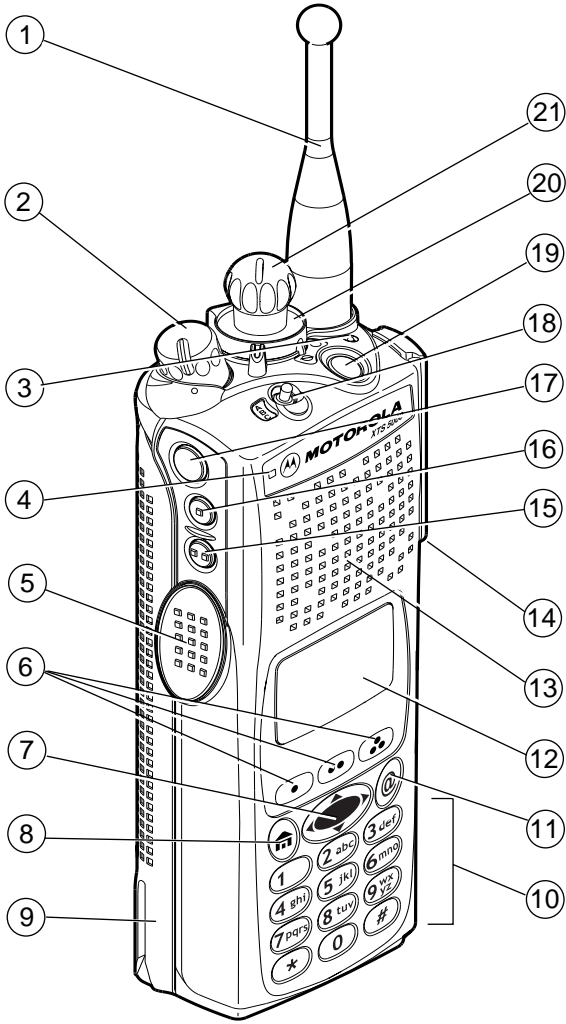

## Physical Features of the XTS 5000 Model III Radio

<i>No.</i>	<i>Feature</i>	<i>Page</i>	<i>No.</i>	<i>Feature</i>	<i>Page</i>
1	Antenna	17	7	4-Way Navigation Button	8
2	On/Off/Volume Control Knob	21	8	Home Button	8
3	LED	10	9	Battery	14
4	Microphone		10	Keypad	9
5	PTT (Push-to-Talk) Button		11	W@P™ Button	8
6	Menu Select Buttons	7	12	Display	4
			13	Speaker	
			14	Universal Connector	19

## Programmable Controls

The radio controls that can be programmed to perform various tasks, the features that can be assigned to them (by a qualified radio technician), and the pages where these features can be found are listed below and in “Programmable Features” on page 4.

- |                                    |  |
|------------------------------------|--|
| <b>15</b> Side Button 2            | <b>19</b> Top Button                   |
| <b>16</b> Side Button 1            | <b>20</b> 2-Position Concentric Switch |
| <b>17</b> Top Side (Select) Button | <b>21</b> 16-Position Select Knob      |
| <b>18</b> 3-Position A/B/C Switch  |  |

**Table 1: Programmable Features**

<i>Feature</i>	<i>Page</i>	<i>Feature</i>	<i>Page</i>	<i>Feature</i>	<i>Page</i>
Call Alert	66	Number Select	42	Site Lock/ Unlock	81
Call Response	61	Phone	59	Site Search	83
Channel	23	PL Defeat	35	Smart Battery	16
Dynamic Priority	56	Private Call	63	Status	70
Emergency	37	Repeater/Direct	72	Text Select	45
Keypad Mute	33	Reprogram Request	78	TX Power Level	29
Light	5	Scan On/Off	54	Volume Set	25
Monitor	26	Secure/Clear	75	Zone	22
Nuisance Delete	55	Select	48		

## Display



The above screen is typical of what you will see on your radio. The 64 x 96 pixel liquid crystal display (LCD) shows radio status, text, and menu entries. The top two screen rows display radio status, the middle rows show text for messages and other information, and the bottom row contains menu entries.



## Light





If poor light conditions make the display, keypad, or channel numbers (around the **16-Position Select** knob) difficult to read, turn on the radio's backlights by pressing the preprogrammed **Light** button.

These lights will remain on for a preprogrammed time before they turn off automatically, or you can turn them off immediately by pressing the **Light** button again.









## Status Symbols

The top two display rows contain symbols that indicate radio operating conditions.

**Table 2: Status Symbols**

<b>Symbol</b>	<b>Indication</b>	<b>Page No.</b>
	<b>Power Level</b> <ul style="list-style-type: none"> <li>• High Power “H”, or</li> <li>• Low Power “L” is activated</li> </ul>	29
	<b>Call Received</b> Flashes when an Individual Call is received.	57, 61, 64
	<b>View/Program Mode</b> The radio is in the view or program mode. <ul style="list-style-type: none"> <li>• On steady = view mode</li> <li>• Flashing = program mode</li> </ul>	40,41,42, 43,45,46, 48,49,51
	<b>Received Signal Strength Indication (RSSI)</b> The received signal strength for the current site, for trunking only. The more stripes in the symbol, the stronger the signal.	83

**Table 2: Status Symbols (Continued)**

<i>Symbol</i>	<i>Indication</i>	<i>Page No.</i>
	<p><b>Battery</b></p> <ul style="list-style-type: none"> <li>Conventional = flashes when battery is low</li> <li>Smart = the number of bars (0-3) shown indicates the charge remaining in your battery; flashes when battery is low</li> </ul>	91
	<p><b>Talkaround</b></p> <ul style="list-style-type: none"> <li>On = you are talking directly to another radio, not through a repeater, during conventional operation only</li> <li>Off = you are talking through a repeater</li> </ul>	71
	<p><b>Monitor</b></p> <p>The selected channel is being monitored during conventional operation only.</p>	26, 34, 35
	<p><b>Secure Operation</b></p> <ul style="list-style-type: none"> <li>On = secure operation</li> <li>Off = clear operation</li> <li>Flashing = receiving an encrypted voice call</li> </ul>	75
	<p><b>Scan</b></p> <p>The radio is scanning a scan list.</p>	47, 48, 50, 51, 54
	<p><b>Priority-One Channel Scan</b></p> <p>One channel is assigned as the priority channel during scan operation.</p>	47, 48, 50, 51
	<p><b>Priority-Two Channel Scan</b></p> <p>Two channels are assigned as the priority channels during scan operation.</p>	47, 48, 50, 51
	<p><b>Emergency</b></p> <p>The radio is in the Emergency State.</p>	37


## Text


Depending on the information being shown, the display can have several rows of text.

## Menu Entry (Softkey)

The bottom row of the display contains one to three menu entries (also known as softkeys). The menu entries allow you to select one of several menus to access the radio's features. The menu entries are accessed through the **Menu Select** buttons.

## Menu Select Buttons

The **Menu Select** buttons access the menu entries of features that have been activated by a qualified radio technician. Your radio may be programmed differently from the following example, but the display for turning Scan on or off might look like the example below. For instance, to turn Scan on, press  directly below **ON**.

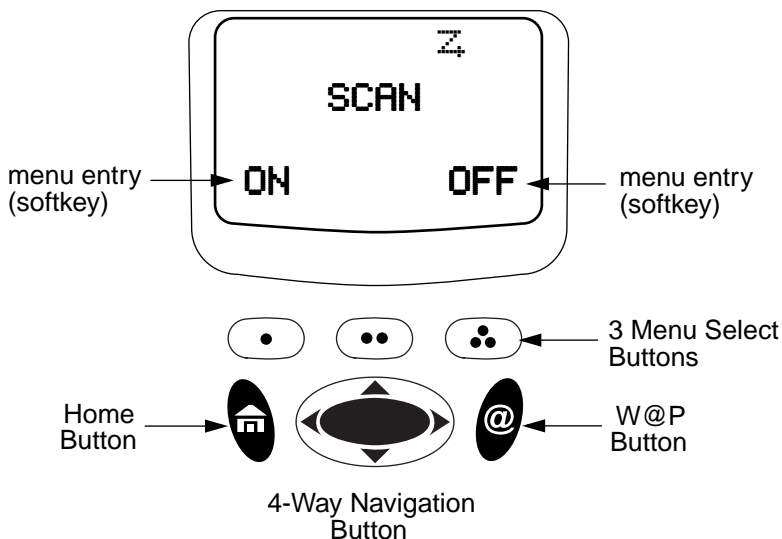

## Menu Entry Features

<i>Feature</i>	<i>Menu Entry</i>	<i>Page</i>	<i>Feature</i>	<i>Menu Entry</i>	<i>Page</i>
Smart Battery	<b>BATT</b>	16	Editing	<b>PROG</b>	41
Private Call	<b>CALL</b>	62	Password	<b>PSWD</b>	31
Channel	<b>CHAN</b>	23	TX Power Level	<b>PWR</b>	29
Clock	<b>CLCK</b>	84	Reprogram Request	<b>RPGM</b>	77
Repeater/Direct	<b>DIR</b>	71	Scan On/Off	<b>SCAN</b>	54
Radio Lock	<b>LOGF</b>	32	Site Lock	<b>SITE</b>	81
Keypad Mute	<b>MUTE</b>	33	Status	<b>STS</b>	69
Text Select	<b>NAME</b>	43	Talkgroup	<b>TGRP</b>	67
Number Select	<b>NUM</b>	41	Viewing a List	<b>VIEW</b>	40
Call Alert Page	<b>PAGE</b>	65	Zone	<b>ZONE</b>	22
Phone	<b>PHON</b>	58			

## Home Button

The **Home** button always returns you to the home (default) display. In most cases, this is the current mode.

Some radio features require saving information in memory. Pressing the **Home** button while using those features causes information to be saved before going to the home display.

Some features do not require you to press the **Home** button to go to the home display. This reduces the required number of key presses.

## W@P™ Button

Reserved for future use.

## 4-Way Navigation Button

This button is used to scroll through the radio's lists or items in the display, or both.

## Keypad



The 3 x 4-key alphanumeric keypad provides an interface to your radio's features. It is arranged similar to a standard telephone keypad.

When the keypad is used to edit a list, each key can generate several different characters. For example, to enter the character "C," press the **2 abc** key three times. Refer to the following table.

Key	Number of times the key is pressed								
	1	2	3	4	5	6	7	8	9
<b>0</b>	0	(	)	<	>				
<b>1</b>	1	&	%						
<b>2 abc</b>	A	B	C	2	a	b	c		
<b>3 def</b>	D	E	F	3	d	e	f		
<b>4 ghi</b>	G	H	I	4	g	h	i		
<b>5 jkl</b>	J	K	L	5	j	k	l		
<b>6 mno</b>	M	N	O	6	m	n	o		
<b>7 pqrs</b>	P	Q	R	S	7	p	q	r	s
<b>8 tuv</b>	T	U	V	8	t	u	v		
<b>9 wx yz</b>	W	X	Y	Z	9	w	x	y	z
<b>*</b>	*	/	+	-	=				
<b>#</b>	#	.	!	?	,	;			

## LED Indicators

The LED on top of the radio indicates the radio's operating status:

<b><i>LED Indicator</i></b>	<b><i>What it Means</i></b>
Red	Radio transmitting
Flashing red	<ul style="list-style-type: none"><li>• Channel busy, or</li><li>• Low battery (while transmitting)</li></ul>
Double flashing red	Receiving encrypted audio
Flashing green	Receiving an individual call

## Alert Tones

An alert tone is a sound or group of sounds. Your radio uses alert tones to inform you of your radio's conditions. The following table lists these tones and when they occur.

<i><b>You Hear</b></i>	<i><b>Tone Name</b></i>	<i><b>Heard</b></i>
<b>Short, Low-Pitched Tone</b>	Invalid Key-Press	when wrong key is pressed
	Radio Self-Test Fail	when radio fails its power-up self test
	No ACK Received	when radio fails to receive an acknowledgment from the dispatcher
	Reject	when unauthorized request is made
	Time-Out Timer Warning	four seconds before time out
<b>Long, Low-Pitched Tone</b>	Time-Out Timer Timed Out	after time out
	Talk Prohibit/ PTT Inhibit	when <b>PTT</b> button is pressed and transmissions are not allowed
	Out-of-Range	when <b>PTT</b> button is pressed and the radio is out of range of the system
	Invalid Mode	when radio is on an unprogrammed channel
<b>A Group of Low-Pitched Tones</b>	Individual Call Warning Tone	when radio is in an individual call for greater than 6 seconds without any activity
	Busy	when system is busy

<i><b>You Hear</b></i>	<i><b>Tone Name</b></i>	<i><b>Heard</b></i>
<b>Short, Medium-Pitched Tone</b>	Valid Key-Press	when correct key is pressed
	Radio Self-Test Pass	when radio passes its power-up self test
	Clear Voice	at beginning of a non-coded communication
	Priority Channel Received	when activity on a priority channel is received
	Emergency Alarm Entry	when entering the emergency state
	Central Echo	when central controller has received a request from a radio
<b>Long, Medium-Pitched Tone</b>	Volume Set	when volume is changed on a quiet channel
	Emergency Exit	when exiting the emergency state
<b>A Group of Medium-Pitched Tones</b>	Failsoft	when system fails
	Automatic Call Back	when voice channel is available from previous request
	Talk Permit	when <b>PTT</b> button is pressed; verifying system accepting transmissions
	Keyfail	when encryption key has been lost
	Console Acknowledge	when status, emergency alarm, or reprogram request ACK is received
	Received Individual Call	when Call Alert or Private Conversation call is received
	Call Alert Sent	when Call Alert is received by the target radio
<b>Short, High-Pitched Tone (Chirp)</b>	Low-Battery Chirp	when battery is below preset threshold value



---

<i><b>You Hear</b></i>	<i><b>Tone Name</b></i>	<i><b>Heard</b></i>
<b>Ring</b>	Fast Ringing	when system is searching for target of Private Conversation call
	Enhanced Call Sent	when waiting for target of Private Conversation call to answer the call
	Phone Call Received	when a land-to-mobile phone call is received
<b>Gurgle</b>	Dynamic Regrouping	when a dynamic ID has been received and the <b>PTT</b> button is pressed

## Standard Accessories

### Battery



To avoid a possible explosion:

- **DO NOT** replace the battery in any area labeled “hazardous atmosphere”.
- **DO NOT** discard batteries in a fire.

### Charging the Battery

The Motorola-approved battery shipped with your radio is uncharged. Prior to using a new battery, charge it for a minimum of 16 hours to ensure optimum capacity and performance.

For a list of Motorola-authorized batteries available for use with your XTS 5000 radio, see “Batteries” on page 95.

**Note:** When charging a battery attached to a radio, turn the radio off to ensure a full charge.

### **Battery Charger**

To charge the battery, place the battery, with or without the radio, in a Motorola-approved charger. The charger’s LED indicates the charging progress; see your charger’s user guide. For a list of chargers, see “Chargers” on page 96.


### **Battery Charge Status**

If programmed by a qualified radio technician, you can check your battery’s charge status by holding down the pre-programmed **Battery Gauge** button on the radio. Charge status is shown by the color of the radio’s LED.


<b>Battery Level</b>	<b>LED Indicator</b>
High	Green
Sufficient	Yellow
Low	Flashing Red
Very low	None

### Attach the Battery

- 1 With the radio turned off, insert the top edge of the battery into the radio's frame as shown.




- 2 Rotate the battery toward the radio and press down until the battery clicks into place.

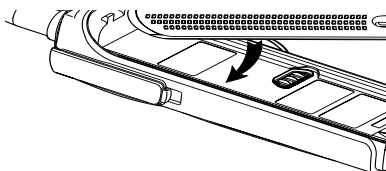


---

### Remove the Battery

- 1 With the radio turned off, press the release button on the bottom of the battery until the battery releases from the radio.



- 2 Remove the battery from the radio.

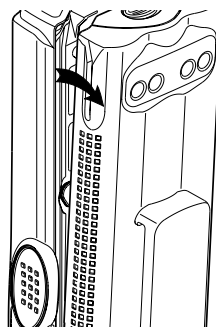

**Note:** If your radio is programmed with volatile-key retention, encryption keys will be retained for approximately 30 seconds after battery removal. Consult a qualified radio technician for details.

---




## Smart Battery Condition

This feature lets you view the condition of your Smart Battery.

### Use the Menu

- 1 Press  to find **BATT**.

BATT

- 2 Press , , or  directly below **BATT**.

CAPACITY	70%
INIT	10/01
EST CHGS	11

**Note:** If a Smart Battery is not powering your radio.

SMART BATT  
DATA NOT  
AVAILABLE.

- 3 Press  to exit.


### Use the Preprogrammed Smart Battery Button

- 1 Press the **Smart Battery** button.

CAPACITY	70%
INIT	10/01
EST CHGS	11

**Note:** If a Smart Battery is not powering your radio.

SMART BATT  
DATA NOT  
AVAILABLE.


- 2 Press  to exit.

## Antenna

Your radio's operating frequency is **764 to 870 MHz**. For information regarding available antennas, see page 93.


### Attach the Antenna

With the radio turned off, turn the antenna clockwise to attach it.

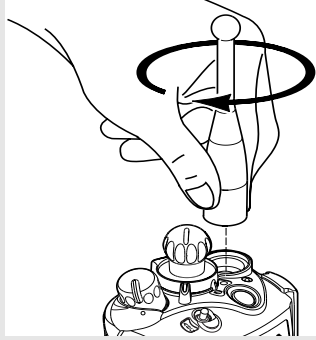

### Remove the Antenna


With the radio turned off, turn the antenna counter-clockwise to remove it.

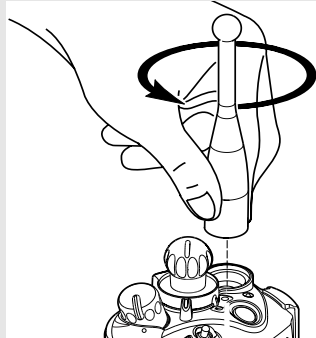


## Belt Clip

### Attach the Belt Clip

- 1 Align the grooves of the belt clip with those of the battery.

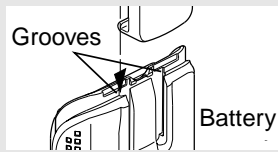


- 2 Press the belt clip downward until you hear a click.

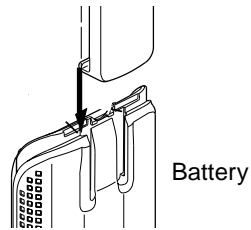


---

### Remove the Belt Clip

- 1 Use a flat-bladed object to press the belt clip tab away from the battery.

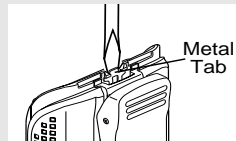

- 2 Slide the belt clip upward to remove it.

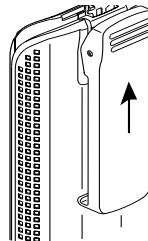


## Universal Connector Cover

The universal connector is located on the antenna side of the radio. It is used to connect accessories to the radio.


**Note:** To prevent damage to the connector, shield it with the connector cover when not in use.

### Remove the Universal Connector Cover

- 1 Insert a flat-blade screwdriver into the area between the bottom of the cover and the slot below the connector.

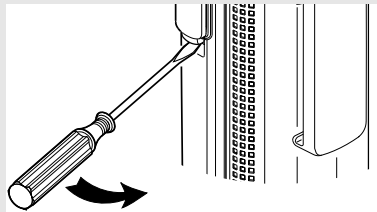


- 2 Hold the top of the cover with your thumb while you pry the bottom of the cover away from the radio with the screwdriver.

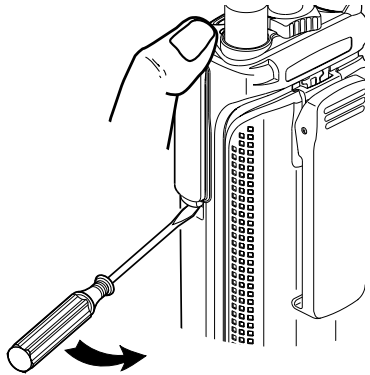


### Attach the Universal Connector Cover

- 1 Insert the hooked end of the cover into the slot above the connector. Press downward on the cover's top to seat it in the slot.

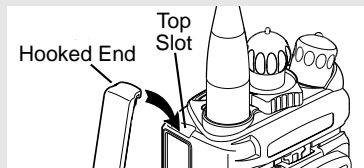

- 2 Press the cover's lower tab into the slot below the connector until it snaps in place.

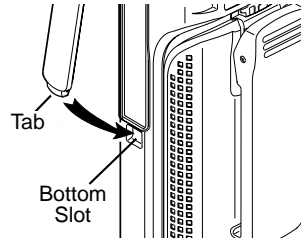




## Radio On and Off

### Turn the Radio On

Turn the **On/Off/Volume Control** knob clockwise.

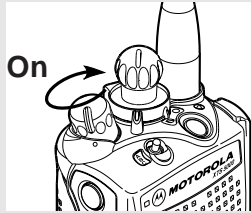

**Note:** If the power-up test is successful, you see **SELF TEST**.

**SELF TEST**


**Note:** If the power-up test is unsuccessful, you see **ERROR XX/YY**. (XX/YY is an alphanumeric code.)

**ERROR XX/YY**

Turn off the radio, check the battery, and turn the radio on. If the radio fails the power-up test again, record the **ERROR XX/YY** code and contact a qualified radio technician.

### Turn the Radio Off

Turn the **On/Off/Volume Control** knob counterclockwise until it clicks.

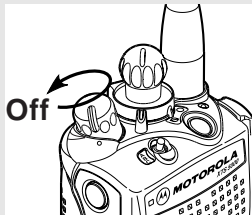

## Zones and Channels

A zone is a grouping of channels. A channel is a group of radio characteristics, such as transmit/receive frequency pairs.

Before you use your radio to receive or send messages, you should select the zone and channel.




### Select a Zone

#### Use the Menu

- 1 Press  to find **ZONE**.



ZONE


- 2 Press , , or  directly below **ZONE**.



POL

DISP NW


The current zone (in this case, **POL**) flashes and the channel name (**DISP NW**), does not flash.

- 3 Press  to find the zone you want. For example, **FIRE**.



FIRE

DISP NW

- 4 Press  to confirm the displayed zone and channel.



FIRE

DISP NW

**OR**

Press the **PTT** button to transmit on the displayed zone/channel.



FIRE

DISP NW

---

#### Use the Preprogrammed Zone Switch

- 1 If a control on your radio has been preprogrammed as the **Zone** switch, move the **Zone** switch to the position for the zone you want.




FIRE

DISP NW

**Note:** If the zone you selected is unprogrammed, repeat step 1.

UNPROGRAMMED

2 Press  to confirm the displayed zone and channel.


FIRE DISP NW

## Select a Channel

Consult a qualified radio technician for the right choice between the following methods:

### Method 1: Use the Preprogrammed 16-Position Select Knob

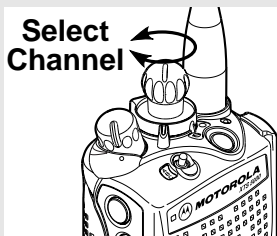


After the zone you want is displayed, turn the **16-Position Select** knob to the desired channel.



### Method 2: Use the Menu

1 Press  to find CHAN.

CHAN

2 Press , , or  directly below CHAN.

POL DISP NW

The display shows the current channel name (in this case, **DISP NW**) flashing and the zone (**POL**), not flashing.

3 Press  to find the channel name you want.


POL DISP SE

**OR**

Use the keypad to enter the channel number.

**Note:** If the channel you selected is unprogrammed, repeat step 3.

UNPROGRAMMED

- 4 Press  to confirm the displayed zone and channel.

POL

DISP SE

**OR**


Press the **PTT** button to transmit on the displayed zone/channel.

---

## Receive / Transmit

### Without Using the Volume Set and Monitor Buttons


- 1 Turn the radio on and select the desired zone and channel.
- 2 Listen for a transmission.
- 3 Adjust the **Volume Control** knob if necessary.

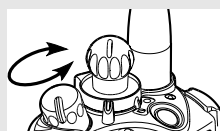

- 4 Press and hold the **PTT** button to transmit. The LED lights RED while transmitting.
- 5 Release the **PTT** button to receive (listen).

### Use the Preprogrammed Volume Set Button

- 1 Turn the radio on and select the desired zone and channel.
- 2 Press and hold the **Volume Set** button to hear the volume set tone.
- 3 Adjust the **Volume Control** knob if necessary.

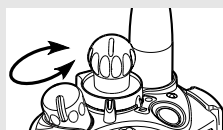


- 4 Release the **Volume Set** button.

- 5 Press and hold the **PTT** button to transmit. The LED lights RED while transmitting.
- 6 Release the **PTT** button to receive (listen).

---

## Use the Preprogrammed Monitor Button

- 1 Turn the radio on and select the desired zone and channel.
- 2 Press the **Monitor** button and listen for activity. (See the following **Conventional Mode Operation**.)
- 3 Adjust the **Volume Control** knob if necessary.

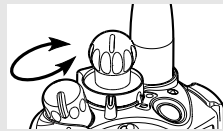


- 4 Press and hold the **PTT** button to transmit. The LED lights RED while transmitting.
- 5 Release the **PTT** button to receive (listen).

---

## Conventional Mode Operation

Your radio may be programmed to receive Private-Line® (PL) calls.

- 1 Momentarily press the **Monitor** button to listen for activity. The Carrier Squelch indicator is displayed.



**2** Press and hold the **Monitor** button to set continuous monitor operation. (The duration of the button press is programmable.)

**3** Press the **Monitor** button again, or the **PTT** button, to return to the original squelch setting.

**Note:** If you try to transmit on a receive-only channel, you will hear an invalid tone until you release the **PTT** button.

## Notes



# Common Radio Features

---

## Selectable Power Level




This feature lets you select the power level at which your radio will transmit. The radio will always turn on to the preprogrammed default setting. This feature must be preprogrammed by a qualified radio technician.

- Select **LOW** for a shorter transmitting distance and to conserve power.
- Select **HIGH** for a longer transmitting distance.




## Use the Menu

1 Press  to find **PWR**.




2 Press , , or  directly below **PWR**. The display shows the current power level (L or H), along with **LOW** and **HIGH**.

**LOW****HIGH**

3 Press , , or  directly below the desired power level (**LOW** or **HIGH**).

- The new transmit power level is saved.
- The radio returns to the home display.

**Note:** To exit at any time, press  or the **PTT** button.

**Note:** The default setting returns when you turn the radio off and on.

---

## Use the Preprogrammed Transmit Power Level Switch

1 Press the **TX Power Level** switch. The power level is set to Low.



2 Press the **TX Power Level** switch again. The power level is set to High.



## Radio Lock

This feature changes your radio to a more robust security system that protects the use of the secure encryption keys.

If this feature is enabled in your radio by a qualified radio technician, when you turn the radio on, you see **RADIO LOCKED**.


## Unlock Your Radio

- 1 Enter your numeric password.



**Note:**

- *Secure radios* — **6** to **8** characters.
- *Clear radios* — **0** to **8** characters.

If you make a mistake, press  to backspace.

- 2 Press the preprogrammed **Select** button after you enter your password.

**Note:** If the password is *correct*, the radio unlocks.

**OR**

If the password is *incorrect*, the radio remains locked.

- If you enter three incorrect passwords in a row, you see **DEADLOCK**. Turn the radio off and then on, and begin again at step 1.






- *Secure Radios Only* — If you enter a total of **17** consecutive incorrect passwords (turning the radio off and on does not reset this number), the radio erases all of its encryption keys and shows “**DEADLOCK.**” See a qualified radio technician.


 A rectangular screen with a black border containing the word "DEADLOCK" in all caps.

## Change Your Password


- 1 Press  to find **PSWD.**


 A rectangular screen with a black border containing the text "PSWD" in all caps.

- 2 Press , , or  directly below **PSWD.**


 A rectangular screen with a black border containing the text "OLD PASSWORD" in all caps.

- 3 Enter the old password.





 A rectangular screen with a black border containing seven asterisks "\*\*\*\*\*".

- 4 Press the top side button.



 A rectangular screen with a black border containing the text "NEW PASSWORD" in all caps.




- 5 Enter the new password.


 A rectangular screen with a black border containing seven asterisks "\*\*\*\*\*" and the text "SEL" below them.

- 6 Press , , or  directly below **SEL.**

- 7 Re-enter the new password.


 A rectangular screen with a black border containing seven asterisks "\*\*\*\*\*" and the text "SEL" below them.

- 8 Press , , or  directly below **SEL.**

**Note:** The password is updated.

**OR**

If the two passwords do not match, repeat steps 5 through 8.

NEW PASSWORD

**Note:** If you enter three incorrect old passwords, the radio exits the password feature. You cannot access this feature again until you turn the radio off and on.




---

### Enable or Disable the Radio Lock Feature (Secure Radios Only)

This feature (programmable by a qualified radio technician) allows you to enable or disable the radio lock feature.

1 Press  to find LOGF.




LOGF

2 Press , , or  directly below LOGF. You see the current state.




PSWD ENABLD  
ENAB DSAB

OR

PSWD DISBLD  
ENAB DSAB

3 To enable the radio lock feature, press , , or  directly below ENAB.

OR

To disable the radio lock feature, press , , or  directly below DSAB.




## Mute or Unmute Keypad Tones

You can turn the keypad tones on or off.

### Use the Menu

- 1 Press  to find **MUTE**.




MUTE


- 2 Press , , or  directly below **MUTE**. The current state is shown.

TONES OFF  
OFF ON

OR


TONES ON  
OFF ON

- 3 Press , , or  directly below **OFF** or **ON**.

**Note:** Press  or the **PTT** button to exit without saving changes.

### Use the Preprogrammed Keypad Mute Button

Press the **Keypad Mute** button to turn the tones off or on.

**Note:** Press  or the **PTT** button to exit without saving changes.

## Conventional Squelch Operation

### Analog Options

Tone Private Line (PL), Digital Private-Line (DPL), network ID, and carrier squelch can be available (programmed) per channel.

Network ID is available only on ASTRO “digital” channels.

<i><b>When in</b></i>	<i><b>This condition occurs</b></i>
Carrier squelch ([-])	You hear all traffic on a channel.
PL, DPL, or network ID	The radio responds only to your messages.

### Digital Options

One or more of the following options may be programmed in your radio. Consult your service technician for more information.

<i><b>This option</b></i>	<i><b>Will allow you to hear</b></i>
Digital Carrier-Operated Squelch (COS)	any digital traffic.
Normal Squelch	any digital traffic having the correct network access code.
Selective Switch	any digital traffic having the correct network access code and correct talkgroup.

## PL Defeat

With this feature, you can override any coded squelch (DPL, PL, or network ID) that might be programmed to a channel.

Place the preprogrammed **PL Defeat** switch in the **PL Defeat** position. You can now hear any activity on the channel. The radio is muted if no activity is present.

When this feature is active, the Carrier Squelch status indicator (🔇) will be displayed.



## Time-out Timer

The time-out timer turns off your radio's transmitter. The timer is set for 60 seconds at the factory, but it can be programmed from 0 to 7.75 minutes (465 seconds) by a qualified radio technician.

- 1** Hold down the **PTT** button longer than the programmed time. You will hear a short, low-pitched warning tone, the transmission will cut-off, and the LED will go out until you release the **PTT**.
  - Short warning tone
  - Transmission is cut-off
  - LED goes out
- 2** Release the **PTT** button.
  - LED re-lights
  - Timer resets
- 3** Press the **PTT** to re-transmit. The time-out timer restarts.
  - Timer restarts



## Emergency

If the top (orange) button is programmed to send an emergency signal, then this signal overrides any other communication over the selected channel.


Your radio can be programmed for the following:

- Emergency Alarm
- Emergency Call
- Emergency Alarm with Emergency Call
- Silent Emergency Alarm

Consult a qualified radio technician for emergency programming in your radio.

### Send an Emergency Alarm

An emergency alarm sends a data transmission to the dispatcher, which identifies the radio sending the emergency.

With your radio turned on, press the **Emergency** button. The display shows the current zone/channel and **EMERGENCY** and , the red LED lights, and you hear a short, medium-pitched tone.

**EMERGENCY** 

- Red LED
- Short tone

**Note:** To exit emergency at any time, press and hold the **Emergency** button.

When you receive the dispatcher's acknowledgment, you hear four beeps, the alarm ends, and the radio exits emergency.

- Four beeps
- Alarm ends
- Radio exits emergency

**Note:** For Emergency Alarm with Emergency Call: The radio enters the Emergency Call state either after it receives the dispatcher's acknowledgment, or if you press the **PTT** button while in Emergency Alarm. Go to step 2 of "For ALL Emergency signals:".

---

## Send an Emergency Call

This type of dispatch gives your radio priority access on a channel.

The radio operates in the normal dispatch manner while in Emergency Call, except, if enabled, it will return to one of the following:

- Tactical/Non-Revert — You talk on the channel you selected before you entered the emergency state.
- Non-Tactical/Revert — You talk on a preprogrammed emergency channel. The emergency alarm is sent to this same channel.

**1** With your radio turned on, press the **Emergency** button.

**Note:** To exit emergency at any time, press and hold the **Emergency** button.

**2** Without waiting for the dispatcher's acknowledge, press and hold the **PTT** button and announce your emergency into the microphone. This sends the emergency call.

**3** Release the **PTT** button to end the current call.

**4** Press and hold the **Emergency** button to exit emergency.

---

## Send a Silent Emergency Alarm

- 1 With your radio turned on, press the **Emergency** button. The display does not change, the LED does not light, and you hear no tones.
  - Display does not change
  - LED does not light
  - No tones

**Note:** To exit emergency at any time, press and hold the **Emergency** button.

- 2 The silent emergency state continues until you:
  - Press and hold **Emergency** button

**OR**

  - Press and release the **PTT** button

**OR**

Press and release the **PTT** button to exit silent emergency and enter regular emergency (alarm, call, or alarm with call).

**Note:** For ALL Emergency signals:

- If the new channel is also programmed for Emergency, you can change channels while in Emergency operation. The emergency alarm or call continues on the new channel.
- If the new channel is NOT programmed for Emergency, you hear an invalid tone until you exit the Emergency state or change to a channel programmed for emergency.

## Emergency Keep-Alive

With Emergency Keep-Alive enabled, if the radio is in the Emergency state, you cannot turn off the radio by using the **On/Off Volume Control** knob.

## Lists




You can use lists to store frequently used numbers and associate them with names. There are four list types:

- Call
- Page
- Phone
- Scan

### View a List




1 Press  to find **VIEW**:

**VIEW**



2 Press , , or  directly below **VIEW**:

3 Press  or  to see the names of available lists.

**PAGE CALL PHON**

4 Press , , or  directly below the name of the list you wish to view. You see the first list member.  
 indicates the view mode.

**FIRE CHIEF**   
**00722588**

5 Press  or  to view other list members.

6 Press  to exit.

---

### Scan List Empty

If you wish to view a scan list and the list has no entries, you see **EMPTY LIST**.

**EMPTY LIST**




To end this display, turn scan off or edit the list.

## Edit a Call, Page, or Phone List Number




### Use the Menu


- 1 Press  to find **PROG.**


PROG

- 2 Press , , or  directly below **PROG.** You see the lists that can be changed.

PAGE CALL PHON




- 3 Press , , or  directly below the name of the list you wish to change. You see the first list member.  (flashing) indicates the programming mode.

FIRE CHIEF   
00722588  
NUM NAME

- 4 Press  or  to view other list members.




- 5 Stop on a list member to display name and ID number.

SECURITY   
12586744  
NUM NAME




- 6 Press , , or  directly below **NUM.**

### OR


You can use the keypad to enter the corresponding location number (1-12) of the name in the list.

- 7 The blinking cursor shows location of number to be added. Press a keypad button to add a digit. Press  to erase digits. (If you erase the entire number and then press  or , you exit editing without saving your changes.)







- 8 Press , , or  directly below **SAVE** to save your change. Return to step 4 to make more changes.


**OR**





Press  to cancel a change and return to home display.

---


### Use the Preprogrammed Number Select Button

- 1 Press  to find **PROG.**
- 2 Press , , or  directly below **PROG.** You see the lists that can be changed.



- 3 Press , , or  directly below the name of the list you wish to change. You see the first list member.  (flashing) indicates the programming mode.






- 4 Press  or  to view other list members.

- 5 Stop on a list member to display name and ID number.




- 6 Press the **Number Select** button.

- 7 The blinking cursor shows location of number to be added. Press a keypad button to add a digit. Press  to erase digits. (If you erase the entire number and then press  or , you exit editing without saving your changes.)



- 8 Press the **Number Select** button to save your change. Return to step 4 to make more changes.

**OR**




Press  to cancel a change and return to home display.


## Edit a Call, Page, or Phone List Name





### Use the Menu

- 1 Press  to find **PROG.**





- 2 Press , , or  directly below **PROG.** You see the lists that can be changed.



- 3 Press , , or  directly below the name of the list you wish to change. You see the first list member.  (flashing) indicates the programming mode.






FIRE CHIEF  
00722588  
NUM NAME

- 4 Press  or  to view other list members.

- 5 Stop on a list member to display name and ID number.



SECURITY  
12586744  
NUM NAME




- 6 Press , , or  directly below **NAME**.

**OR**



SECURITY  
12586744  
SAVE




You can use the keypad to enter the corresponding location number (1-12) of the name in the list.

- 7 The blinking cursor shows location of the character to be added. Press a keypad button to add a character. Press  to erase characters. (If you erase the entire name and press  or , you exit editing without saving your changes.)




GUARD  
12586744  
SAVE


















- 8 Press , , or  directly below **SAVE** to save your change. Return to step 4 to make more changes.




**OR**


Press  to cancel a change and return to home display.

### Use the Preprogrammed Text Select Button

- 1 Press  to find **PROG.** 
- 2 Press , , or  directly below **PROG.** You see the lists that can be changed. 
- 3 Press , , or  directly below the name of the list you wish to change. You see the first list member.  


□ (flashing) indicates the programming mode.
- 4 Press  or  to view other list members.
- 5 Stop on a list member to display name and ID number.  
- 6 Press the **Text Select** button.

- 7 The blinking cursor shows location of the character to be added. Press a keypad button to add a character. Press  to erase characters. (If you erase the entire name and press  or , you exit editing without saving your changes.)



- 8 Press the **Text Select** button to save your change. Return to step 4 to make more changes.

**OR**










Press  to cancel a change and return to home display.


---



## Edit a Scan List




This feature lets you change scan list members and priorities.

### Use the Menu

- 1 Press  to find **PROG.**
- 2 Press , , or  directly below **PROG.** You see the lists that can be changed.
- 3 Press  to find **SCAN.**
- 4 Press , , or  directly below **SCAN.** You see the first list member.  
 (flashing) indicates the programming mode.



**5** Press  or  to find the member you want.







**6** Press , , or  directly below **SEL** or **DEL** or **RCL**.




**SEL** or **DEL** or **RCL**


**SEL** = add the currently displayed channel to the scan list.

**DEL** = delete the currently displayed channel from the scan list.


**RCL** = view the next member of the scan list.

When adding a priority channel, press , , or  below **SEL** additional times to see  or  or .


 or  or 



 = this channel is in the scan list.

 = this channel is in the scan list as the *priority 2* channel.

 (dot flashing) = this channel is in the scan list as the *priority 1* channel.

**OR**

When deleting a priority channel, the scan indicator  turns off.


**7** Press  or  to select more channels to be added or deleted.

**OR**

Use the keypad to go directly to additional channels to be added or deleted.

**OR**




Use the **16-Position Select** knob to select additional channels to be added or deleted.

- Press  to exit scan list programming and return to the home display.

### Use the Menu and the Preprogrammed Select (Top Side) Button

- Press  to find **PROG.**





PROG

- Press , , or  directly below **PROG.** You see the lists that can be changed.



PAGE CALL PHON

- Press  to find **SCAN.**





SCAN

- Press , , or  directly below **SCAN.** You see the first list member.  
 (flashing) indicates the programming mode.

FIRE DISP N~~W~~ 


- Press  or  to find the member you want.

- Press the **Select** button one or more times to change the scan list status symbol of the currently displayed channel.



 or  or  or  off

 = this channel is in the scan list.

 = this channel is in the scan list as the *priority 2* channel.

 (dot flashing) = this channel is in the scan list as the *priority 1* channel.

No  = the channel is removed from the scan list.


- 7 Press  or  to select more channels to be added or deleted.

**OR**

Use the keypad to go directly to additional channels to be added or deleted.

**OR**




Use the **16-Position Select** knob to select additional channels to be added or deleted.

- 8 Press  to exit scan list programming and return to the home display.


### Use the Preprogrammed Scan Switch and the Menu

- 1 Press  to find **PROG.**



**PROG**




- 2 Press , , or  directly below **PROG.** You see the lists that can be changed.

**PAGE CALL PHON**

- 3 Place the **Scan** switch in the **Scan On** position. You see the first list member.  
 (flashing) indicates the programming mode.

**FIRE DISP NUM**  
**SEL DEL RCL**

- 4 Press  or  to find the member you want.

- 5 Press , , or  directly below **SEL** or **DEL** or **RCL**.




**SEL or DEL or RCL**

**SEL** = add the currently displayed channel to the scan list.


**DEL** = delete the currently displayed channel from the scan list.



**RCL** = view the next member of the scan list.


When adding a priority channel, press


press , , or 


below **SEL** additional times to


see additional times to see 

or  or 






 = this channel is in the scan list.

 = this channel is in the scan list as the *priority 2* channel.

 (dot flashing) = this channel is in the scan list as the *priority 1* channel.

**OR**

When deleting a priority channel, the scan indicator  turns off.


- 6** Press  or  to select more channels to be added or deleted.

**OR**

Use the keypad to go directly to additional channels to be added or deleted.

**OR**




Use the **16-Position Select** knob to select additional channels to be added or deleted.

- 7** Press  to exit scan list programming and return to the home display.


## Use the Preprogrammed Scan Switch and the Preprogrammed Select (Top Side) Button


- 1 Press  to find **PROG**.



**PROG**

- 2 Press , , or  directly below **PROG**. You see the lists that can be changed.

**PAGE CALL PHON**


- 3 Place the **Scan** switch in the **Scan On** position. You see the first list member.  
 (flashing) indicates the programming mode.


**FIRE DISP NUM** 


- 4 Press  or  to find the member you want.


- 5 Press the **Select** button one or more times to change the scan list status symbol of the currently displayed channel.



 or  or  or  or  or  off

 = this channel is in the scan list.

 = this channel is in the scan list as the *priority 2* channel.

 (dot flashing) = this channel is in the scan list as the *priority 1* channel.

No  = the channel is removed from the scan list.


- 6 Press  or  to select more channels to be added or deleted.

**OR**

You can use the keypad to go directly to additional channels to be added or deleted.

**OR**

You can use the **16-Position Select** knob to select additional channels to be added or deleted.

- 7 Press  to exit scan list programming and return to the home display.



## Scan

The scan feature allows you to monitor traffic on different channels by scanning a preprogrammed list of channels. Your radio can have up to 20 different scan lists. These lists must be preprogrammed by a qualified radio technician.

- To view your radio's scan lists, see "View a List" on page 40.
- To change your radio's scan lists, see "Edit a Scan List" on page 46.




## Types of Scan Lists

Three types of scan lists are available:

Trunking Priority Monitor	Comprises channels that are all from the same trunking system (10 different channels maximum).
Conventional	Comprises only conventional channels (15 different channels maximum).
Talkgroup Scan	Comprises conventional and trunked channels from one trunking system (10 different channels maximum). Priority operation is not available in this type of list.

## Types of Scanning

There are several types of scanning available:

Priority-One Scanning 	One member of the scan list is chosen as the priority-one member. You hear all of the traffic on the priority-one channel, even if the non-priority channels in the scan list have traffic on them.
Priority-Two Scanning  <b>and</b> Non-Priority Scanning 	In addition to the priority-one channel, a second channel can be assigned as a priority-two channel. The remaining members in the scan list can be programmed as non-priority members of the scan list.




Automatic Scanning (Autoscan)	When selected, a channel with autoscan automatically begins scanning its associated scan list. The radio continues auto scanning until you select a channel without autoscan enabled.
Operator-Selectable Scan	Scan can be programmed by a qualified radio technician to be selected by either a menu or a preprogrammed <b>Scan</b> switch.


## Turn Scan On or Off

### Use the Menu

- 1 Press  to find **SCAN**.




SCAN

- 2 Press , , or  directly below **SCAN**. You see the current scan state.

SCAN ON   
ON OFF


The scan status symbol is displayed when scan is on.

SCAN OFF  
ON OFF

- 3 Press , , or  directly below **ON** or **OFF**.

ON OFF

**OR**

You can press  or the **PTT** button to exit scan and return to the home display without changing the scan state.

### Use the Preprogrammed Scan On/Off Switch

Place the **Scan** switch in the **Scan On** or **Scan Off** position. The scan status symbol is displayed when scan is on.



## Delete a Nuisance Channel

When the radio scans to a channel that you do not wish to hear (nuisance channel), you can temporarily delete the channel from the scan list.

- 1 When the radio is locked onto the channel to be deleted, press the preprogrammed **Nuisance Delete** button.

Repeat this step to delete more channels.

**Note:** You cannot delete priority channels or the designated transmit channel.

- 2 The radio continues scanning the remaining channels in the list. To resume scanning the deleted channel, change channels or turn scan off and then back on again.
-

## Conventional Scan Only

### Make a Dynamic Priority Change

While the radio is scanning, the dynamic priority change feature lets you *temporarily* change any channel in a scan list (except the priority-one channel) to the priority-two channel. The replaced priority-two channel becomes a non-priority channel. This change remains in effect until scan is turned off, then scanning reverts back to the preprogrammed state.

- 1 When the radio is locked onto the channel to be designated as priority-two, press the preprogrammed **Dynamic Priority** button.

**Note:** The priority-one channel cannot be changed to priority-two.

- 2 The radio continues scanning the remaining channels in the list. To resume scanning the preprogrammed priority-two channel, you must leave and re-enter scan operation.
-

## Individual Calls

### Quick Access (One-Touch)

If your radio is preprogrammed for Quick Access (One-Touch) Phone, Private Call, or Page, you can initiate a call to *one* preprogrammed phone number or ID number without having to select the feature, a phone number, or an ID number. This means that you start at:

- “Use the Preprogrammed Quick Access Phone Button” on page 59, or
- “Use the Preprogrammed Quick Access Private Call Button” on page 63, or
- “Use the Preprogrammed Quick Access Call Alert Button” on page 66.

### Telephone Calls

Use your radio to make calls similar to standard phone calls. A landline phone can be used to call a radio, or a radio can be used to call a landline phone.

#### Answer a Phone Call

Use the preprogrammed **Call Response** button to answer a call.


**1** When a phone call is received, you hear a telephone-type ringing, the LED flashes GREEN, the call received symbol (☎) flashes, and **PHONE CALL** is displayed.

- Telephone-type ringing
- Flashing GREEN LED



**2** Press the **Call Response** button within 20 seconds after the call indicators begin.




**3** Press and hold the **PTT** button to talk; release it to listen.

- 4 Press  to hang up and return to the home display.
- 

### Initiate a Phone Call

1 Press  to find **PHON**.

PHON

2 Press , , or  directly below **PHON**. You see the last transmitted phone number.

555-1234

3 Go to “Select a Phone Number.”

- Use the Menu
- Use the Keypad

**OR**


Go to “Make a Phone Call.”

- Use the PTT Button
- Use the Preprogrammed Quick Access Phone Button

---

### Select a Phone Number

#### *Use the Menu*

1 Press  to find the phone number you want.

555-8523

2 Go to “Make a Phone Call.”

- Use the PTT Button
- Use the Preprogrammed Quick Access Phone Button

---

#### *Use the Keypad*

1 Use the keypad to enter the phone number you want.

555-8523

2 Go to “Make a Phone Call.”

- Use the PTT Button, step 2
- Use the Preprogrammed Quick Access Phone Button, step 2

---


## Make a Phone Call

### *Use the PTT Button*

- 1 Press and release the **PTT** button to make the phone call.
- 2 If your call is answered, press the **PTT** button to talk; release the **PTT** to listen.

#### **OR**

If your call is not completed, go to the “Phone Call Display and Alert Prompts” table.


- 3 When your call is completed, press  or the **PTT** button to hang up. The radio returns to the home display.

### *Use the Preprogrammed Quick Access Phone Button*

- 1 Press the **Quick Access Phone** button to start the phone call.
- 2 If your call is answered, press the **PTT** button to talk; release the **PTT** to listen.

#### **OR**

If your call is not completed, go to the “Phone Call Display and Alert Prompts” table.

- 3 When your call is completed, press  or the **PTT** button to hang up. The radio returns to the home display.

### Phone Call Display and Alert Prompts

<p>When you press the <b>PTT</b> button and the phone system is not available, you hear a long tone.</p>	<div style="border: 1px solid black; border-radius: 10px; padding: 5px; text-align: center; margin-bottom: 10px;">NO PHONE</div> <ul style="list-style-type: none"> <li>• A long tone</li> </ul>
<p>When a channel is not available, you hear a busy tone.</p> <p>The radio automatically connects when a channel opens.</p>	<div style="border: 1px solid black; border-radius: 10px; padding: 5px; text-align: center; margin-bottom: 10px;">PHONE BUSY</div> <ul style="list-style-type: none"> <li>• A busy tone</li> </ul>
<p>When the phone system is busy, you hear a long tone.</p> <p>Exit the phone mode and try your call later.</p>	<div style="border: 1px solid black; border-radius: 10px; padding: 5px; text-align: center; margin-bottom: 10px;">PHONE BUSY</div> <ul style="list-style-type: none"> <li>• A long tone</li> </ul>
<p>The system does not acknowledge your call.</p>	<div style="border: 1px solid black; border-radius: 10px; padding: 5px; text-align: center; margin-bottom: 10px;">NO ACKNOWLEDG</div>
<p>If <b>NO PHONE</b> or <b>NO ACKNOWLEDG</b> is displayed, press <b>Ⓜ</b> or the <b>PTT</b> button to hang up. The radio returns to the home display.</p>	<div style="border: 1px solid black; border-radius: 10px; padding: 5px; text-align: center; margin-bottom: 10px;">NO PHONE</div> <div style="border: 1px solid black; border-radius: 10px; padding: 5px; text-align: center;">NO ACKNOWLEDG</div>
<p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• You might need to dial an extension number after you reach the number you called.</li> <li>• A high-pitched tone, generated when you release the <b>PTT</b> button, indicates to the landline party that he or she may begin talking.</li> <li>• You have the option of sending additional digits (overdial), such as credit card or PIN numbers, to the phone system. If the radio is programmed for live overdial, every digit entered after the call is connected is sent to the phone system.</li> <li>• If the radio is programmed for buffered overdial, the digits pressed are entered into memory and then sent when the <b>PTT</b> button is pressed. Press the <b>PTT</b> to send either digits or voice, but not both at the same time.</li> </ul>	



## Enhanced Private Conversation Calls (Trunked Channels Only)

These one-to-one calls between two radios are not heard by others in the current talkgroup. The calling radio automatically verifies that the receiving radio is active on the system and can display the caller's ID.

### Answer a Private Call

Use the preprogrammed **Call Response** button to answer a call.

- 1 When a Private Call is received, you hear two alert tones, the LED flashes GREEN, the call received symbol (#) flashes, and **CALL RECEIVED** is displayed.


- Two tones
- Flashing GREEN LED



- 2 Press the **Call Response** button within 20 seconds.  
If the caller's name is in the call list, it will be displayed during the call.

### OR




If the caller's name is not in the call list, the caller's ID number is displayed.

- 3 Press and hold the **PTT** button to talk; release it to listen.
- 4 Press  or the **Call Response** button to hang up and return to the home display.

### Initiate a Private Call

1 Press  to find **CALL**.

**CALL**

2 Press , , or  directly below **CALL**. You see the last transmitted or received ID number.

**ID: 00722588**

3 Go to “Select an ID Number.”


**OR**

Go to “Make a Private Call.”

- Use the Menu
- Use the Keypad
- Use the PTT Button
- Use the Preprogrammed Quick Access Private Call Button

### Select an ID Number

#### *Use the Menu*

1 Press  to find the ID number you want.

**ID: 00825682**

2 Go to “Make a Private Call.”

- Use the PTT Button
- Use the Preprogrammed Quick Access Private Call Button

#### *Use the Keypad*

1 Use the keypad to enter the ID number you want.

**ID: 00825682**

2 Go to “Make a Private Call.”

- Use the PTT Button
- Use the Preprogrammed Quick Access Private Call Button

## Make a Private Call

### Use the PTT Button

1 Press the **PTT** button to start the Private Call.

2 The called ID is momentarily displayed, then you see **PLEASE WAIT**.

ID: 00722588

PLEASE WAIT

3 When you are connected, you see the called ID. Press and hold the **PTT** button to talk; release the **PTT** to listen.

ID: 00722588

#### OR

If the system does not acknowledge the call, you see **NO ACKNOWLEDG**.

NO ACKNOWLEDG

#### OR

If the target radio does not respond before the time out, you see **NO ANSWER**.

NO ANSWER

### Use the Preprogrammed Quick Access Private Call Button

1 Press the **Quick Access Private Call** button to start the Private Call.

2 The called ID is momentarily displayed, then you see **PLEASE WAIT**.

ID: 00722588

PLEASE WAIT

- 3** When you are connected, you see the called ID. Press and hold the **PTT** button to talk; release the **PTT** to listen.

ID: 00722588

**OR**

If the system does not acknowledge the call, you see **NO ACKNOWLEDG**.

NO ACKNOWLEDG

**OR**

If the target radio does not respond before the time out, you see **NO ANSWER**.

NO ANSWER

## Call Alert Paging

Call Alert allows your radio to work like a pager. Even if other users are away from their radios, or if they are unable to hear their radios, you can still send them a Call Alert page. You can also verify if a radio is active on the system.

### Answer a Call Alert Page

- 1** When a Call Alert Page is received, you hear four repeating alert tones, the LED flashes GREEN, the call received symbol (♯) flashes, and **PAGE RECEIVD** is displayed.

- Four repeating alert tones
- Flashing GREEN LED

PAGE RECEIVD






- 2** Press and hold the **PTT** button to talk; release it to listen.
-

## Initiate a Call Alert Page

1 Press  to find **PAGE**.

**PAGE**

2 Press , , or  directly below **PAGE**. You see the last transmitted or received ID number.

**ID: 00722588**

3 Go to “Select an ID Number.”


**OR**

Go to “Send a Call Alert Page.”

- Use the Menu
- Use the Keypad
- Use the PTT Button
- Use the Preprogrammed Quick Access Call Alert Button

## Select an ID Number

### *Use the Menu*

1 Press  to find the ID number you want.

**ID: 00825682**

2 Go to “Send a Call Alert Page.”

- Use the PTT Button
- Use the Preprogrammed Quick Access Call Alert Button

### *Use the Keypad*

1 Use the keypad to enter the ID number you want.

**ID: 00825682**

2 Go to “Send a Call Alert Page.”

- Use the PTT Button
- Use the Preprogrammed Quick Access Call Alert Button

## Send a Call Alert Page

### *Use the PTT Button*

Press the **PTT** button to send the Call Alert to the displayed number. You see **PLEASE WAIT**.

PLEASE WAIT

When you are connected, you see the home display. Press and hold the **PTT** button to talk; release the **PTT** to listen.

**OR**

If the system does not acknowledge the call, you see **NO ACKNOWLEDG**.

NO ACKNOWLEDG

### *Use the Preprogrammed Quick Access Call Alert Button*

Press the **Quick Access Call Alert** button to send the Call Alert. You see **PLEASE WAIT**.

PLEASE WAIT

When you are connected, you see the home display. Press and hold the **PTT** button to talk; release the **PTT** to listen.

**OR**

If the system does not acknowledge the call, you see **NO ACKNOWLEDG**.

NO ACKNOWLEDG

## Conventional Talkgroup Calls (Conventional Operation Only)




Talkgroup Call lets you define a group of conventional system users so that they can share the use of a conventional channel.

Encryption keys are slaved to talkgroups. When talkgroups are enabled, encryption keys are changed by changing the active talkgroup. See “Secure Operations” on page 75.



### Select a Talkgroup

- 1 Press  to find **TGRP**.

TGRP

- 2 Press , , or  directly below **TGRP**. You see  
The last talkgroup that was selected and stored, and **SEL** and **PSET**

SEL PSET

- 3 Press  or  to find the talkgroup you want.

#### OR

Use the keypad to enter the number of the desired encryption key index.

- 4 Press , , or  directly below **SEL** or **PSET**.

SEL PSET

**SEL (SELECT)** — Saves the currently displayed talkgroup and returns to the home display.

**PSET (PRESET)** — Selects the preset preprogrammed talkgroup.

If the encryption key slaved to the new talkgroup is erased, you see **KEY FAIL** and hear a momentary key fail tone.


KEY FAIL

- Momentary key fail tone

If the encryption key that is slaved to the new talkgroup is not allowed, you see **ILLEGAL KEY** and hear a momentary key fail tone.

**ILLEGAL KEY**

- Momentary key fail tone

**5** Press  or the **PTT** button, or turn the **16-Position Select** knob to exit.



## Status Calls (Trunked Radios Only)




You can send data calls to the dispatcher about a predefined status. Each status can have a up a 12-character name. A maximum of eight status conditions is possible.



### Send a Status Call

#### Use the Menu

- 1 Press  to find **STS**.

**STS**

- 2 Press , , or  directly below **STS**. The last acknowledged status call, or the first status in the list, is displayed.

- 3 Press  or  to find the status you wish to send.

#### OR

Use the keypad to enter the predefined condition's location in the list.

- 4 Press the **PTT** button to send the status.

When the dispatcher acknowledges the call, you will see **ACK RECEIVED** and hear four beeps.

**ACK RECEIVED**

- Four beeps

#### OR

If the call is not acknowledged, you will see **NO ACKNOWLEDG** and hear a lone, low-pitched tone.

**NO ACKNOWLEDG**



- Long tone

- 5 Your radio returns to normal dispatch operation.

**Note:** No traffic is heard on trunked channels while Status Calls is selected.  
If the radio detects no Status Call activity for six seconds, an alert tone sounds until the **PTT** button is pressed.

### Use the Preprogrammed Status Button

1 Press the **Status** button. The last acknowledged status call, or the first status in the list, is displayed.

2 Press  or  to find the status you wish to send.

**OR**

Use the keypad to enter the predefined condition's location in the list.

3 Press the **PTT** button to send the status.

When the dispatcher acknowledges the call, you will see **ACK RECEIVED** and hear four beeps.

**ACK RECEIVED**

- Four beeps

**OR**

If the call is not acknowledged, you will see **NO ACKNOWLEDG** and hear a lone, low-pitched tone.

**NO ACKNOWLEDG**

- Long tone

4 Your radio returns to normal dispatch operation.

---

**Note:** No traffic is heard on trunked channels while Status Calls is selected.  
If the radio detects no Status Call activity for six seconds, an alert tone sounds until the **PTT** button is pressed.

## Repeater or Direct Operation

Also known as “talkaround operation,” **DIRECT** lets you bypass the repeater and connect directly to another radio. The transmit and receive frequencies are the same.




**REPEATER** operation increases radio’s range by connecting with other radios through a repeater. The transmit and receive frequencies are different.

### Select Repeater or Direct

#### Use the Menu

1 Press  to find **DIR**.


**DIR**

2 Press , , or  directly below **DIR**. You momentarily see the current operation.

- For Direct mode, **DIR**.
- For Repeater mode, **RPTR**.

**DIR**


**RPTR**

3 Press , , or  directly below **DIR** or **RPTR**.

If **DIR** is selected, the display shows |→|.


|→|

**OR**

Press  to exit without changing the current operation.

### Use the Preprogrammed Repeater/Direct Switch

Place the **Repeater/Direct** switch in either the **Repeater** or the **Direct** position. If **DIR** is selected, the display shows **!+!**.



## Smart PTT (Conventional Only)

Smart PTT is a per-channel, programmable feature used in conventional radio systems to keep radio users from talking over other radio conversations.

When smart PTT is enabled in your radio, you will not be able to transmit on an active channel. If you try to transmit on an active smart-PTT channel, you will hear an alert tone, and the transmission will be inhibited. The LED will also blink red to indicate that the channel is busy.

Three radio-wide variations of smart PTT are available:

Transmit Inhibit on Busy Channel with Carrier	You cannot transmit if any traffic is detected on the channel.
Transmit Inhibit on Busy Channel with Wrong Squelch Code	You cannot transmit on an active channel with a squelch code or (if secure-equipped) encryption key other than your own. If the PL code is the same as yours, the transmission will not be prevented.
Quick-Key Override	This feature can work in conjunction with either of the two above variations. You can override the transmit-inhibit state by quick-keying the radio. In other words, two <b>PTT</b> Button presses within the preprogrammed time limit.

## Notes

# Special Radio Features


---

## Secure Operations

Secure radio operation provides the highest commercially available level of voice security on both trunked and conventional channels. Unlike other forms of security, Motorola digital encryption provides signalling that makes it virtually impossible for others to decode any part of an encrypted message.

### Select Secure Transmissions

Turn the preprogrammed **Secure/Clear** switch to the secure position (🔒).



**Note:** *If the selected channel is programmed for clear-only operation* — when you press the **PTT** button, you see **CLR TX ONLY**, and you hear an invalid mode tone.

CLR TX ONLY

- Invalid mode tone

The radio will not transmit until you set the **Secure/Clear** switch to the clear position (○).

### Select Clear Transmissions

Turn the preprogrammed **Secure/Clear** switch to the clear position (○).

**Note:** *If the selected channel is programmed for secure-only operation* — when you press the **PTT** button, you see **SEC TX ONLY**, and you hear an invalid mode tone.

SEC TX ONLY

- Invalid mode tone

The radio will not transmit until you set the **Secure/Clear** switch to the secure position (🔒).

## PTT ID

### Receive


This feature allows you to see the radio ID number of the radio you are currently receiving. This ID can be a maximum of eight characters and can be viewed by both the receiving radio and the dispatcher.

### Transmit




Your radio's ID number is automatically sent every time the **PTT** button is pressed. This is a per-channel feature. For digital voice transmissions, your radio's ID is sent continuously during the voice message.

## View Your Radio's ID Number

### Use the Menu

- 1 Press  to find **CALL** or **PAGE**.

CALL PAGE

- 2 Press , , or  directly below **CALL** or **PAGE**.

- 3 Press .

ID: 12345678

### Use the Preprogrammed Call or Page Button

- 1 Press the **Call** or **Page** button.

- 2 Press .

ID: 12345678



## Dynamic Regrouping (Trunking Only)

The dynamic regrouping feature lets the dispatcher temporarily reassign selected radios to a single special channel so they can communicate with each other. This feature is typically used during special operations and is enabled by a qualified radio technician. You will not notice whether your radio has this feature enabled until a dynamic regrouping command is sent by the dispatcher.

If you try to access a zone or channel that has been reserved by the dispatcher as a dynamically regrouped mode for other users, you will hear an invalid tone.

When your radio is dynamically regrouped, it automatically switches to the dynamically regrouped channel. You see the dynamically regrouped channel's name, and hear a "gurgle" tone.

Press the **PTT** button to talk; release it to listen.

When the dispatcher cancels dynamic regrouping, the radio automatically returns to the zone and channel that you were using before the radio was dynamically regrouped.




## Reprogram Request

This feature lets you notify the dispatcher that you want a new dynamic regrouping assignment.

### Use the Menu

- 1 Press  to find **RPGM**.

RPGM

- 2 Press , , or  directly below **RPGM**.


REPRGRM RQST

The reprogram request is sent to the dispatcher.

**3** If you hear *one beep*

- Press the **PTT** button to send the reprogram request again.

**OR**

- Press  to cancel and return to the home display.

**OR**


If you hear *five beeps*, the reprogram request was acknowledged by the dispatcher. Your radio returns to the home display.

**OR**

If the dispatcher does not acknowledge the reprogram request within six seconds, you see **NO ACKNOWLEDG** and hear a low-pitched alert tone.

**NO ACKNOWLEDG**

- An alert tone

Try again or press .

### Use the Preprogrammed Reprogram Request Button


- 1** Press the **Reprogram Request** button. You see **REPRGRM RQST**.

**REPRGRM RQST**

The reprogram request is sent to the dispatcher.

- 2** If you hear *one beep*
- One beep
  - Press the **PTT** button to send the reprogram request again

**OR**

- Press  to hang up and return to the home display.

**OR**


- If you hear *five beeps*, the reprogram request was acknowledged by the dispatcher. Your radio returns to the home display.
- Five beeps

**OR**

If the dispatcher does not acknowledge the reprogram request within six seconds, you see **NO ACKNOWLEDG** and hear a low-pitched alert tone.

**NO ACKNOWLEDG**

- An alert tone

Try again or press .

---

## Select Enable / Disable

The dispatcher can classify regrouped radios into either of two categories: select enabled or select disabled.

- Select-enabled radios are free to change to any available channel, including the dynamic-regrouping channel, once the user has selected the dynamic-regrouping position.
- Select-disabled radios cannot change channels while dynamically regrouped. The dispatcher has forced the radio to remain on the dynamic-regrouping channel.

The Scan or Private Call feature cannot be selected while your radio is select disabled.

## Trunking System Controls

### Failsoft

The failsoft system ensures continuous radio communications during a trunked system failure. If a trunking system fails completely, the radio goes into failsoft operation and automatically switches to its failsoft channel.

During failsoft operation:

Your radio transmits and receives in conventional operation on a predetermined frequency.

**FAILSOFT**

You hear a medium-pitched tone every 10 seconds.

- A medium-pitched tone

When the trunking system returns to normal operation, your radio automatically leaves failsoft operation and returns to trunked operation.

### Out-of-Range

If you go out of the range of the system and can no longer lock onto a control channel:

You see the currently selected zone/channel combination and **OUT OF RANGE**.

**OUT OF RANGE**

— *and/or* —

— *and/or* —

You hear a low-pitched tone.

- A tone

Your radio remains in this out-of-range condition until it locks onto a control channel, or it locks onto a failsoft channel, or it is turned off.

- Locks onto a control channel, or
- Locks onto a failsoft channel, or
- Turned off.

## Site Lock




This feature allows your radio to lock onto a specific site and not roam among wide-area talkgroup sites. This feature should be used with caution, since it inhibits roaming to another site in a wide-area system.

### Lock or Unlock a Site

#### Use the Menu




- 1 Press  to find **SITE**.

SITE

- 2 Press , , or  directly below **SITE**. You see current lock state, **LOCK** or **UNLK**.

LOCK

UNLK

- 3 Press , , or  directly below the desired lock state, **LOCK** or **UNLK**. The new site-lock state is saved, and your radio returns to the home display.

- The new site-lock state is saved.
- Your radio returns to the home display.

#### Use the Preprogrammed Site Lock/Unlock Button

- 1 Press the **Site Lock/Unlock** button. You see current lock state, **LOCK** or **UNLK**.

LOCK

UNLK

- 2 Press and hold the **Site Lock/Unlock** button to find the desired lock state, **LOCK** or **UNLK**.

LOCK

UNLK

## Site Trunking

If the zone dispatcher loses communication with any site, that site reverts to site trunking.

You see the currently selected zone/channel combination and **SITE TRUNKING**.



**SITE TRUNKING**

When this occurs, you can communicate only with other radios within your trunking site.

## Site View and Change

You can view the number of the current site or force your radio to change to a new one.

### View the Current Site

Press the preprogrammed **Site Search** button.



The display shows the number of the current site and its corresponding received signal strength indicator (RSSI).

**OR**

If the radio is scanning for a new site, you momentarily see **SCANNING SITE**.



### Change the Current Site

Press and hold down the preprogrammed **Site Search** button. You momentarily see **SCANNING SITE** and hear a tone.





- A tone






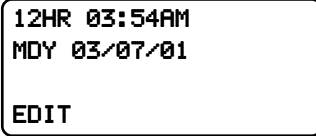




When the radio finds a new site, it returns to the home display.

## Real Time Clock



Using this special feature, you can program the time and date as you might with other electronic devices. The clock display is enabled by a qualified radio technician.


- The default time setting is a 12-hour clock. 
- If a 24-hour clock is selected, AM/PM selection is not available.
- The default setting for the domestic date shows MDY. 

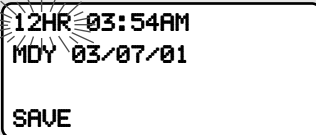
### Program the Time and Date

- 1 Press  to find **CLCK**. 
- 2 Press , , or  directly below **CLCK**. The current setting is displayed. 
- 3 Press , , or  directly below **EDIT**. The first item flashes. 




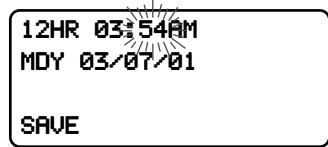
- 4 Press  or  to change the selected item.

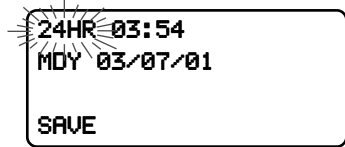




**Note:** Press  at any time to return to the home display without saving your changes.


**OR**


- Press  one or more times to move to an item you wish to change.



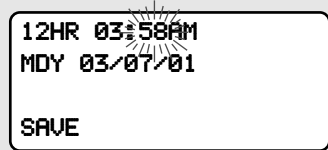


- 5 Press  or  to change the selected item.



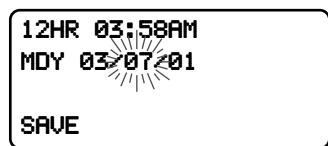


- 6 Press  one or more times to move to an item in the date field.

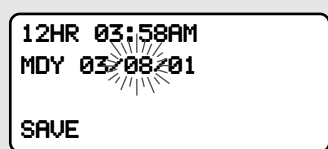

- 7 Press  or  to change the selected item.



- 8** When you have made all your changes, press , , or  directly below **SAVE** to save your changes and return to the home display.
- 

**Note:** If a call arrives while the radio is in the clock-setting menu, the radio exits clock setting, your changes are lost, and the call information is displayed.

# Helpful Tips

---

## Radio Care

### Things to Avoid



#### Caution

- The XTS 5000 radio casing has two vent ports that allow for pressure equalization in the radio. Never poke these vents with any objects, such as needles, tweezers, or screwdrivers. This could create leak paths into the radio and the radio's submergibility will be lost.
- **(For XTS 5000 R Radios Only)** The XTS 5000 R radio is designed to be submerged to a maximum depth of 6 feet, with a maximum submersion time of 4 hours. Exceeding either maximum limit may result in damage to the radio.
- If the radio battery contact area has been submerged in water, dry and clean the radio battery contacts before attaching a battery to the radio. Otherwise, the water could short-circuit the radio.
- If the radio has been submerged in water, shake the radio well so that any water that may be trapped inside the speaker grille and microphone port can be removed. Otherwise, the water will decrease the audio quality of the radio.
- Do not disassemble the radio. This could damage radio seals and result in leak paths into the radio. Any radio maintenance should be performed only by a qualified radio technician.

## Cleaning

To clean the external surfaces of your radio:

- 1 Combine one teaspoon of mild dishwashing detergent to one gallon of water (0.5% solution).
- 2 Apply the solution sparingly with a stiff, non-metallic, short-bristled brush, making sure excess detergent does not get entrapped near the connectors, controls or crevices. Dry the radio thoroughly with a soft, lint-free cloth.
- 3 Clean battery contacts with a lint-free cloth to remove dirt or grease.



Caution

**Do not use solvents to clean your radio. Spirits may permanently damage the radio housing.**

**Do not submerge the radio in the detergent solution.**

## Handling

- Do not pound, drop, or throw the radio unnecessarily. Never carry the radio by the antenna.
- Avoid subjecting the radio to an excess of liquids. Do not submerge the radio unless it is a ruggedized, XTS 5000 R model.
- Avoid subjecting the radio to corrosives, solvents or spirits.
- Do not disassemble the radio.
- Keep the accessory-connector cover in place until ready to use the connector. Replace the cover immediately once the accessory has been disconnected.

## Service

Proper repair and maintenance procedures will assure efficient operation and long life for this product. A Motorola maintenance agreement will provide expert service to keep this and all other communication equipment in perfect operating condition. A nationwide service organization is provided by Motorola to support maintenance services. Through its maintenance and installation program, Motorola makes available the finest service to those desiring reliable, continuous communications on a contract basis. For a contract service agreement, please contact your nearest Motorola service or sales representative, or an authorized Motorola dealer.

Express Service Plus (ESP) is an optional extended service coverage plan, which provides for the repair of this product for an additional period of either one or two years beyond the normal expiration date of the standard warranty. For more information about ESP, contact the Motorola Radio Support Center at 3761 South Central Avenue, Rockford, IL 61102 (800) 227-6772 / (847)725-4200.

## Battery

### Battery Life

Battery life is determined by several factors. Among the more critical are the regular overcharge of batteries and the average depth of discharge with each cycle. Typically, the greater the overcharge and the deeper the average discharge, the fewer cycles a battery will last. For example, a battery which is overcharged and discharged 100% several times a day, will last fewer cycles than a battery that receives less of an overcharge and is discharged to 50% per day. Further, a battery which receives minimal overcharging and averages only 25% discharge, will last even longer.

### Charging the Battery

Motorola batteries are designed specifically to be used with a Motorola charger and vice-versa. Charging in non-Motorola equipment may lead to battery damage and void the battery warranty. Motorola-authorized battery chargers may not charge batteries other than the ones listed on page 95.

The battery should be at about 77°F (25°C) (room temperature), whenever possible. Charging a cold battery (below 50° F [10°C]) may result in leakage of electrolyte and ultimately in failure of the battery. Charging a hot battery (above 95°F [35°C]) results in reduced discharge capacity, affecting the performance of the radio. Motorola rapid-rate battery chargers contain a temperature-sensing circuit to ensure that batteries are charged within the temperature limits stated above.

### Battery Charge Status

Your radio can indicate your battery's charge status through:


- LED and sounds
- conventional and smart fuel gauge symbols on the display

### **LED and Sounds**

When your battery is low:





- you see the LED flash red when the **PTT** button is pressed
- you hear a low-battery “chirp” (short, high-pitched tone)

### **Conventional Fuel Gauge Symbol**

A flashing fuel gauge symbol () is displayed only when the battery voltage drops to low level. In this case, replace the battery with a fully charged one.

### **Smart Fuel Gauge Symbol**

Consult the Smart Battery manual. All conditions must be met for a battery to be classified as a “Smart Battery.” When your radio has a Smart Battery installed, the fuel gauge symbol is always displayed.

<b>Gauge shows</b>	<b>if the battery's charge is</b>
	71% to 100% full
	41% to 70%
	11% to 40%
	10% or less (at 10%, the gauge begins flashing)

Replace the battery with a fully charged one when the fuel gauge shows the lowest level.

## **Battery Recycling and Disposal**

Nickel-cadmium (NiCd) rechargeable batteries can be recycled. However, recycling facilities may not be available in all areas. Under various U.S. state laws and the laws of several other countries, NiCd batteries must be recycled and cannot be disposed of in landfills or incinerators. Contact your local waste management agency for specific requirements and information in your area.

Motorola fully endorses and encourages the recycling of NiCd batteries. In the U.S. and Canada, Motorola participates in the

## Helpful Tips

---

nationwide Rechargeable Battery Recycling Corporation (RBRC) program for NiCd battery collection and recycling. Many retailers and dealers participate in this program.

For the location of the drop-off facility closest to you, access RBRC's Internet web site at [www.rbrc.com](http://www.rbrc.com) or call 1-800-8-BATTERY. This internet site and telephone number also provide other useful information concerning recycling options for consumers, businesses, and governmental agencies.




## Antenna

### Radio Operating Frequencies

Before installing the antenna, make sure it matches your radio's operating frequency. Antennas are frequency sensitive and are color coded according to their frequency range. The color code indicator is located in the center of the antenna's base.

Your radio's operating frequency is **764 to 870 MHz**.

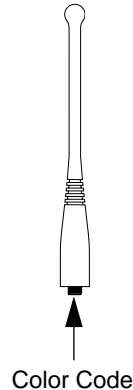

The following antenna types are compatible with your radio:

<i>Antenna Type</i>	<i>Approx. Length</i>		<i>Insulator Color Code</i>	<i>Frequency Range</i>	<i>Antenna Kit No.</i>
	<i>in.</i>	<i>mm</i>			
<b>800MHz Whip, Halfwave</b>	<b>7</b>	<b>175</b>	<b>RED</b>	<b>806-870 MHz</b>	<b>NAF5037</b>
800MHz Stubby, Quarterwave	3.3	83	WHITE	806-870 MHz	NAF5042
700/800MHz Whip	7	185	GREEN	764-870 MHz	NAF5080

## Notes

# Accessories

---

Motorola provides the following approved accessories to improve the productivity of your XTS 5000 portable two-way radio.

## Antennas

NAF5037	800 MHz Whip, Halfwave (806-870 MHz)
NAF5042	800 MHz Stubby, Quarterwave (806-870 MHz)
NAF5080	700/800 MHz Whip (764-870 MHz)

## Audio Adapters

BDN6676	Adapter, 3.5mm w/PTT Switch
---------	-----------------------------

## Batteries

NTN8294	NiCd, Ultra-High Capacity
---------	---------------------------

## Carry Accessories

### Belt Clips

NTN8266	Belt Clip Kit (Compatible with Clamshell Batteries)
---------	---

### Belt Loops

NTN8040	Belt Loop, Swivel, Leather, 3.0", High-Activity (For use only with the high-activity leather swivel snap carry cases.)
---------	--

### Carry Cases

NTN8381	Leather High Activity, 3.0", Swivel Belt Loop, Model II and III Radios
---------	--

## Chargers

NTN1873	Single-Unit, Dual Rate, Rapid, Tri-Chemistry; 110 V
NTN1874	Single-Unit, Dual Rate, Rapid, Tri-Chemistry; 220 V (2-prong Euro plug)
NTN1875	Single-Unit, Dual Rate, Rapid;, Tri-Chemistry 240 V (3-prong UK plug)
NTN1177	Multi-Unit, Dual Rate, Rapid: 110 V
NTN1178	Multi-Unit, Dual Rate, Rapid: 220 V (2-prong Euro plug)
NTN1179	Multi-Unit, Dual Rate, Rapid: 240V (UK 13 MAP Plug)
NTN1667	Single-Unit, Tri-Chemistry, Rapid Rate, 110 V
NTN1668	Single-Unit, Tri-Chemistry, Rapid Rate, 230 V (2-prong Euro Plug)
NTN1669	Single-Unit, Tri-Chemistry, Rapid Rate, 230 V (3-prong UK Plug)
NTN4796	Multi-Unit, Tri-Chemistry, Rapid Rate, 110 V
NTN9176	Vehicular, Tri-Chemistry and compatible with PAC•RT
WPLN4111	Impres™ Single-Unit, Tri-Chemistry, 110 V

## Enhanced and Multi-Unit Line Cords

NTN7373	110 V Interchangeable Line
NTN7374	220 V Interchangeable Line (2 prong Euro plug)
NTN7375	240 V Interchangeable Line (3 prong UK plug)

## Commport Integrated Microphone/Receiver

NTN1624	MTS/XTS/HT w/ Palm PTT
---------	------------------------

## Headset / Surveillance Accessories

(Require BDN6676D — 3.5 mm adapter jack that attaches to the radio)

BDN6780	Earbud, Single with Mic and PTT Combined
---------	--

### Beige

BDN6665	Earpiece with Extra-Loud Earphone (exceeds OSHA limits)
BDN6666	Earpiece with Volume Control
BDN6667	Earpiece, Mic and PTT Combined
BDN6668	Earpiece, Mic and PTT Separate

### Headset Accessories

BDN6635	Heavy-Duty VOX Headset with Noise-Cancelling Boom Mic (Requires BDN6673_)
BDN6636	Heavy-Duty VOX Headset with Throat Microphone (Requires BDN6673_)
BDN6673	Cable, Headset Adapter
NMN1020	Lightweight with Boom Mic to be Worn on Helmet or Safety Glasses
NMN6245	Lightweight with Single-Sided Headset and In-Line PTT Switch
NMN6259	Medium Weight, Behind-the-Head with In-Line PTT Switch
RMN4049	Temple Transducer

### **Ear Microphones (Require Radio Interface Module)**

BDN6677	Ear Mic, Standard — 95 dB (Black)
BDN6678	Ear Mic, Standard — 95 dB (Beige)

### **Radio Interface Modules for Ear Microphones**

BDN6671	Voice-activated Interface Module
BDN6708	Push-to-Talk Interface Module

### **Remote Speaker and Public Safety Microphones**

NMN6193	Remote Speaker Mic
---------	--------------------

## Vehicular Adapters

### Accessories

HMN4069	Next-Generation Mobile Mic
HSN1006	Speaker, 6-Watt
NKN6455	Cable, 6-Watt Speaker
NTN1606	Vehicular Adapter, BNC, Open Face
NTN1607	Vehicular Adapter, BNC, Closed Face
NTN8270	Tool Wrench
NTN8480	Vehicular Adapter Trunnion Kit
NTN8560	Vehicular Adapter, Mini-U, Open Faced
NTN8561	Vehicular Adapter, Mini-U, Closed Faced
NTN9176	Vehicular Charger, XTS
PLN7737	Handheld Control Head

### Allied Models

N1799	Vehicular Adapter, Mini-U, Closed Faced
N2001	Vehicular Adapter, Mini-U, Open Face
N2002	Vehicular Adapter, BNC, Open Face
N2003	Vehicular Adapter, BNC, Closed Face

## Notes






# Glossary

---

This is a list of specialized terms used in this manual.

<b>ACK</b>	Acknowledgment of communication.
<b>Active Channel</b>	A channel that has traffic on it.
<b>Analog Signal</b>	An RF signal that has a continuous nature rather than a pulsed or discrete nature.
<b>Call Alert</b>	Privately page an individual by sending an audible tone.
<b>Carrier Squelch</b>	Feature that responds to the presence of an RF carrier by opening or unmuting (turning on) a receiver's audio circuit. A squelch circuit silences the radio when no signal is being received so that the user does not have to listen to "noise."
<b>Central Controller</b>	A software controlled, computer-driven device that receives and generates data for the trunked radios assigned to it. It monitors and directs the operations of the trunked repeaters.
<b>Channel</b>	A group of characteristics such as transmit/receive frequency pairs, radio parameters, and encryption encoding.
<b>Control Channel</b>	In a trunking system, one of the channels that is used to provide a continuous, two-way/data communications path between the central controller and all radios on the system.
<b>Conventional</b>	Typically refers to radio-to-radio communications, sometimes through a repeater (See Trunking).
<b>Cursor</b>	A visual tracking marker (a blinking line) that indicates a location on the display.

---

<b>Deadlock</b>	Displayed by the radio after three failed attempts to unlock the radio. The radio must be powered off and on prior to another attempt.
<b>Digital Private Line (DPL)</b>	A type of coded squelch using data bursts. Similar to PL except a digital code is used instead of a tone.
<b>Digital Signal</b>	An RF signal that has a pulsed, or discrete, nature, rather than a continuous nature.
<b>Dispatcher</b>	An individual who has radio system management duties.
<b>Failsoft</b>	The failsoft system allows communications to take place even though the central controller has failed. Each trunked repeater in the system will key, and transmit a data word informing every radio that the system has gone into failsoft.
<b>FCC</b>	Federal Communications Commission.
<b>Hang Up</b>	Disconnect.
<b>Home Display</b>	The first display information after the radio completes its self test.
<b>LCD</b>	Liquid Crystal Display.
<b>LED</b>	Light-emitting diode.
<b>Menu Entry</b>	A software-activated feature shown at the bottom of the display — selection of these features is controlled by the  ,  , and  buttons.
<b>Monitor</b>	Check channel activity by pressing the Monitor button. If the channel is clear, you will hear static. If the channel is in use, you will hear conversation. It also serves as a way to check the volume level of the radio, since the radio will “open the squelch” when pressing the monitor button.

<b>Network Access Code</b>	Network Access Code (NAC) operates on digital channels to reduce voice channel interference between adjacent systems and sites.
<b>NiCd</b>	Nickel-cadmium
<b>NiMH</b>	Nickel-metal-hydride.
<b>Non-tactical/Revert</b>	The user will talk on a preprogrammed emergency channel. The emergency alarm is sent out on this same channel.
<b>Squelch</b>	Special electronic circuitry, added to the receiver of a radio, that reduces, or cuts off, unwanted signals before they are heard in the speaker.
<b>Page</b>	A one-way alert, with audio and/or display messages.
<b>Personality</b>	A set of unique features specific to a radio.
<b>Preprogrammed</b>	A software feature that has been activated by a qualified radio technician.
<b>Private Line (PL)</b>	A sub-audible tone that is transmitted such that only receivers decoding the tone will receive it.
<b>Private (Conversation) Call</b>	A feature that lets you have a private conversation with another radio user in the group.
<b>Programmable</b>	A radio control that can have a radio feature assigned to it.
<b>PTT</b>	Push-To-Talk — the <b>PTT button</b> engages the transmitter and puts the radio in transmit (send) operation when pressed.

<b>Repeater</b>	A conventional radio feature, where you talk through a receive/transmit facility that re-transmits received signals, in order to improve communications range and coverage.
<b>Radio Frequency (RF)</b>	The part of the general frequency spectrum between the audio and infrared light regions (about 10 kHz to 10,000,000 MHz).
<b>Selective Switch</b>	Any digital P25 traffic having the correct Network Access Code and the correct talkgroup.
<b>Standby</b>	An operating condition whereby the radio's speaker is muted but still continues to receive data.
<b>Status Calls</b>	Pre-defined text messages that allow the user to send a conditional message without talking.
<b>Tactical/Non-revert</b>	The user will talk on the channel that was selected before the radio entered the emergency state.
<b>Talkaround</b>	Bypass a repeater and talk directly to another unit for easy local unit-to-unit communications.
<b>Talkgroup</b>	An organization of radio users who communicate with each other.
<b>Trunking</b>	The automatic sharing of communications paths between a large number of users (See Conventional).
<b>Zone</b>	A grouping of channels.

# Commercial Warranty

---

## Limited Warranty

### MOTOROLA COMMUNICATION PRODUCTS

#### I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

MOTOROLA INC. (“MOTOROLA”) warrants the MOTOROLA manufactured Communication Products listed below (“Product”) against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

ASTRO XTS 5000 Portable Units	One (1) Year
Product Accessories	One (1) Year

Motorola, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA. Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use

the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

## **II. GENERAL PROVISIONS:**

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product. Repair, replacement or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

## **III. STATE LAW RIGHTS:**

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

## **IV. HOW TO GET WARRANTY SERVICE:**

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by Motorola through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service

provider), it can facilitate your obtaining warranty service. You can also call Motorola at 1-800-927-2744 US/Canada.

**V. WHAT THIS WARRANTY DOES NOT COVER:**

- A) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- B) Defects or damage from misuse, accident, water, or neglect.
- C) Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- D) Breakage or damage to antennas unless caused directly by defects in material workmanship.
- E) A Product subjected to unauthorized Product modifications, disassemblies or repairs (including, without limitation, the addition to the Product of non-Motorola supplied equipment) which adversely affect performance of the Product or interfere with Motorola's normal warranty inspection and testing of the Product to verify any warranty claim.
- F) Product which has had the serial number removed or made illegible.
- G) Rechargeable batteries if:
  - any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
  - the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- H) Freight costs to the repair depot.
- I) A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA's published specifications or the FCC type acceptance labeling in effect for the Product at

the time the Product was initially distributed from MOTOROLA.

- J) Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
- K) Normal and customary wear and tear.

**VI. PATENT AND SOFTWARE PROVISIONS:**

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- A) that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- B) that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- C) should the Product or parts become, or in MOTOROLA's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for



the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product. The foregoing states the entire liability of MOTOROLA with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software such as the exclusive rights to reproduce in copies and distribute copies of such Motorola software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

**VII. GOVERNING LAW:**

This Warranty is governed by the laws of the State of Illinois, USA.

## Notes

# Index

---

## Symbols

4-way navigation button ..... 8

## A

accessories ..... 95

alert tones ..... 11

answer

    a call alert page ..... 64

    a phone call ..... 57

    a private call ..... 61

antenna ..... 17

    radio operating frequencies ..... 93

antennas ..... 95

attach

    the antenna ..... 17

    the battery ..... 15

    the belt clip ..... 18

    the universal connector cover ..... 19

audio adaptors ..... 95

## B

batteries ..... 95

battery ..... 14

    charge status ..... 14

        conventional fuel gauge

        symbol ..... 91

        LED and sounds ..... 91

        smart fuel gauge symbol ..... 91

    charger ..... 14

    charging the battery ..... 90

    life ..... 90

    recycling and disposal ..... 91

belt clip ..... 18

## C

carry accessories

    belt clips ..... 95

    carry cases ..... 95

chargers

    Commport integrated

        microphone/receiver ..... 96

    enhanced and multi-unit line

        cords ..... 96

charging the battery ..... 14

common radio features ..... 29

conventional

    mode operation ..... 26

    squelch operation

        analog options ..... 34

        digital options ..... 34

    talkgroup calls

        select a talkgroup ..... 67

## D

display ..... 4

dynamic regrouping ..... 77

## E

edit

    a call, page, or phone list name

        use the menu ..... 43

        use the preprogrammed text

        select button ..... 45

    a call, page, or phone list number

        use the menu ..... 41

        use the preprogrammed number

        select button ..... 42

    a scan list

        use the menu ..... 46

        use the menu and the

        preprogrammed select

        button ..... 48

        use the preprogrammed scan

        switch and the menu ..... 49

        use the preprogrammed scan

        switch and the preprogrammed

        select button ..... 51

electromagnetic interference/

    compatibility ..... ix

emergency  
     keep alive ..... 39  
     send a silent emergency alarm ..39  
     send an emergency alarm ..... 37  
     send an emergency call ..... 38  
enable or disable the radio lock  
     feature (secure radios only) ..... 32  
exposure to radio frequency  
     energy ..... vii

**F**  
failsoft ..... 80

**G**  
general radio operation ..... 1  
glossary ..... 101

**H**  
headset / surveillance  
     accessories ..... 97  
     beige ..... 97  
     ear microphones ..... 98  
     headset accessories ..... 97  
     radio interface modules for  
         ear microphones ..... 98  
     remote speaker and public  
         safety microphones ..... 98  
helpful tips ..... 87  
home button ..... 8

**I**  
individual calls  
     call alert paging ..... 64  
     private calls ..... 61  
     quick access (one-touch) ..... 57  
     telephone calls ..... 57  
initiate  
     a call alert page ..... 65  
     a phone call ..... 58  
     a private call ..... 62  
intrinsically safe radio information .xiii

**L**  
LED indicators ..... 10  
light ..... 5  
lists ..... 40  
     scan list empty ..... 40  
     view a list ..... 40  
lock or unlock a site  
     use the menu ..... 81  
     use the preprogrammed site  
         lock/unlock button ..... 81

**M**  
make a phone call  
     use the preprogrammed quick  
         access phone button ..... 59  
     use the PTT button ..... 59  
make a private call  
     use the preprogrammed quick  
         access private call button ..... 63  
     use the PTT button ..... 63  
menu  
     entry (softkey) ..... 7  
     entry features ..... 8  
     select buttons ..... 7  
mute or unmute keypad tones  
     use the menu ..... 33  
     use the preprogrammed keypad  
         mute button ..... 33

**N**  
notations used in this manual ..... 1

**O**  
operational warnings ..... xi  
out-of-range ..... 80

**P**  
phone call display and alert  
     prompts ..... 60  
physical features of the XTS 5000  
     model III radio ..... 3

- 
- PL defeat .....35  
 program the date and time .....84  
 programmable controls .....3  
 PTT ID  
   receive .....76  
   transmit .....76
- R**
- radio  
   care  
     cleaning .....88  
     handling .....88  
     things to avoid .....87  
   lock  
     change your password .....31  
     unlock your radio .....30  
   on and off .....21  
 receive / transmit  
   use preprogrammed monitor  
     button .....26  
   use preprogrammed volume set  
     button .....25  
   without using volume set and  
     monitor buttons .....25  
 remove  
   the antenna .....17  
   the battery .....15  
   the belt clip .....18  
   the universal connector cover ....19  
 repeater or direct operation .....71  
 reprogram request .....77  
   use the preprogrammed reprogram  
   request button .....78  
 request a new dynamic regrouping  
   using the menu .....77
- S**
- safety and general information .... vii  
 scan  
   delete a nuisance channel .....55  
   types of scan lists .....53  
   types of scanning .....53  
   scan (conventional only)  
     make a dynamic priority  
       change .....56  
   secure operations .....75  
   secure or clear transmissions ....75  
   select  
     a channel  
       method 1 use the 16-position  
       select knob .....23  
       method 2 use the menu .....23  
     a phone number  
       use the keypad .....58  
       use the menu .....58  
     a zone  
       use the menu .....22  
       use the preprogrammed  
       zone switch .....22  
   an ID number for call alert page  
     use the keypad .....65  
     use the menu .....65  
   an ID number for private call  
     use the keypad .....62  
     use the menu .....62  
   clear transmissions .....75  
   enable / disable .....79  
   repeater or direct operation  
     use the menu .....71  
     use the preprogrammed  
     repeater/direct switch .....72  
   secure transmissions .....75  
   selectable power level  
     use the menu .....29  
     use the preprogrammed transmit  
     power level switch .....29  
   send  
     a call alert page  
       use the PTT button .....66  
       use the preprogrammed quick  
       access call alert button .....66  
     a status call  
       use the menu .....69  
       use the preprogrammed status  
       button .....70  
   service .....89

site  
 lock ..... 81  
 trunking ..... 82  
 view and change  
     change the current site ..... 83  
     view the current site ..... 83

smart  
 battery condition  
     use the menu ..... 16  
     use the preprogrammed  
         smart battery button ..... 16  
 PTT (conventional only) ..... 73

special radio features ..... 75

standard accessories ..... 14

status  
 calls ..... 69  
 symbols ..... 5

**T**

text ..... 7

time-out timer ..... 36

transmit and receive procedure ... vii

trunking system controls ..... 80

turn  
 scan on or off  
     use the menu ..... 54  
     use the preprogrammed  
         scan on/off switch ..... 54  
 the radio off ..... 21  
 the radio on ..... 21

**U**

universal connector cover ..... 19

use while driving ..... x

**V**

vehicular adaptors  
     accessories ..... 99  
     allied models ..... 99

view your radio's ID number  
     use the menu ..... 76  
     use the preprogrammed call or  
         page button ..... 76

**W**

W@P™ button ..... 8

warranty ..... 105

**Y**

your XTS 5000 model III radio ..... 2

**Z**

zones and channels ..... 22