
Motorola

iDEN[®]

Digital Multi-Service Data-Capable Phone

***i58sr* Phone User's Guide**

FIRST DRAFT



NTN0000-O

Table of Contents

Introduction	7
Driving Safety Tips	9
Getting Started.....	11
<i>i58sr</i> Phone Features	12
Battery	12
Turning Your <i>i58sr</i> Phone On/Off	16
Enabling Security	17
Security Features of the <i>i58sr</i> Phone.....	18
Status of Your <i>i58sr</i> Phone	29
My Information	30
Using T9 Text Input	31
Display Essentials	37
Display Screen Elements.....	37
Navigating Menus and Lists.....	41
Main Menu Options.....	41
Phonebook.....	45
Accessing Phonebook with an <i>i2000</i> , <i>i2000plus</i> , or GSM Phone.....	46
Phonebook Entries and Speed Dial Numbers.....	46
Phonebook Icons	46
VoiceRecord.....	47
Accessing Your Phonebook	48
About Phonebook Entries.....	48
Pause Digit Entry.....	57
Plus Dialing	58
Digital Cellular.....	59
Making Phone Calls	59

Emergency Calling	64
Receiving a Phone Call	64
Ending a Phone Call	64
Recent Calls	65
Missed Calls	69
Call Timers	69
Call Waiting	70
Call Hold	71
Three-Way Calling	72
Call Forwarding	73
Messages	79
Message Center	79
Voice Mail	80
Using Voice Mail	81
Text and Numeric Messaging	82
Net Alert	84
Using Your Phone as a Modem	85
Private Calls	87
Private Call	87
Call Alerts	90
Group Call	94
Datebook	99
Datebook Icons	100
Viewing Your Datebook	100
About Datebook Events	102
Adding New Events	103
Editing Events	107
Deleting Events	107
Datebook Event Reminders	108
Customizing Datebook Set Up	108

Memo	111
Adding a New Memo	111
Viewing a Memo	111
Editing a Memo	112
Deleting a Memo	112
Java	113
Installing Java Applications	114
Running Java Applications.....	114
Downloading Java Applications.....	115
Java Memory	115
Deinstalling Java Applications.....	116
Voice Record*	117
About Voice Record.....	117
Accessing Voice Record	117
Recording a Voice Record	118
Playing a Voice Record	118
Adding to a Voice Record	118
Labeling a Voice Record	118
Deleting Voice Record	120
Locking/Unlocking a Voice Record.....	120
Voice Record Memory	121
Customizing the <i>i58sr</i> Phone	123
Settings Menu.....	123
Shortcuts	145
Accessories.....	149
Carrying Solutions.....	149
Batteries.....	151
Travel Chargers	152
Data Accessories	154

Other Important Information	159
Understanding Status Messages	159
Safety and General Information	161
RF Operational Characteristics	161
Portable Radio Product Operation and EME Exposure	161
Electro Magnetic Interference/Compatibility.....	164
Medical Devices	164
Operational Warnings.....	166
Operational Cautions.....	167
Accessory Safety Information	169
Limited Warranty Motorola Communication Products.....	171
Limited Warranty Motorola Communication Products (International)	175
Patent and Trademark Information.....	179
Index	181

IMPORTANT!

Read “Safety and General Information” on page 171 before using your *i58sr* phone.

DECLARATION OF CONFORMITY

Per FCC CFR 47 Part 2 Section 2.1077(a)



Responsible Party Name: Motorola, Inc.

Address: 8000 West Sunrise Boulevard, Plantation, FL 33328 USA

Phone Number: 1 (800) 453-0920

Hereby declares that the product:

Product Name: **i58sr**

Model Number: **H58XAH6RR7AN**

Conforms to the following regulations:

FCC Part 15, subpart B, section 15.107(a), 15.107(d) and section 15.109(a)

Class B Digital Device

Date: July 1, 2002

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Introduction

Congratulations on purchasing your Motorola iDEN *i58sr* multi-service, data-capable, digital, portable phone. Your *i58sr* phone offers:

- **Phonebook** — Your consolidated Phonebook holds up to 250 entries and allows you to store multiple contact numbers for each person, offering you various ways to communicate with your business and personal contacts.
- **SIM Card** — Your phone's SIM card holds all entries stored in your Phonebook. In addition, you have a PIN (Personal Identification Number) to keep your information safe and secure.
- **Datebook** — Schedule and keep track of appointments using your phone's Datebook feature.
- **Messages** — The Message Center allows you to manage and access your Voice Mail, Text Messages and Net Alert all from the same inbox.
- **Private and Group Calls** — You can use your phone as a two-way radio to communicate directly with business and personal contacts in your iDEN service area.
- **Fax and Data Transfer** — for circuit data faxes and file transfers.
- **J2ME™** — With the Java™ applications feature, you can choose from the many Java programs. Either download Java applications directly from the Internet, or try one of the pre-loaded applications.
- **Customization** — Use the Settings, Shortcuts and, optional features* to customize your *i58sr* phone to meet your individual needs.
- **Speakerphone*** — You can enjoy hands-free communication at the touch of a button. And Speakerphone is especially great for conference calls.
- **Voice Activated Dialing*** — Your *i58sr* phone offers state-of-the-art Voice Activated Dialing.

**Optional Feature — Please consult your provider for availability of purchase.*

For more information on these and other features of the *i58sr* phone, review this User's Guide. There is a Table of Contents in the front of the guide and an Index in the back of the guide to assist you in finding the specific information you want.

NOTE: Some features of your *i58sr* phone are available only in the iDEN service area, and are indicated as such in this guide.

NOTE: This guide describes the features of the *i58sr* phone as they were set up by Motorola. However, your carrier or your organization may have changed or added features. For more information, check with your carrier or your organization.

Driving Safety Tips

“Safety is your most important call!”

Your Motorola wireless telephone gives you the powerful ability to communicate by voice — almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies that benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your Motorola wireless phone and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original hands-free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
5. If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving. Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility — driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and

- suspend conversations which have the potential to divert your attention away from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.¹
 9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
 10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.¹


1. Wherever wireless phone service is available.

Getting Started

This section includes:

<i>i58sr</i> Phone Features	Page 12
Battery	Page 13
Turning Your <i>i58sr</i> Phone On/Off	Page 16
Enabling Security	Page 17
Receiving Over-the-Air Programming	Page 17
Security Features of the <i>i58sr</i> Phone	Page 18
Status of Your <i>i58sr</i> Phone	Page 29
My Information	Page 30
Using T9 Text Input	Page 31

i58sr Phone Features

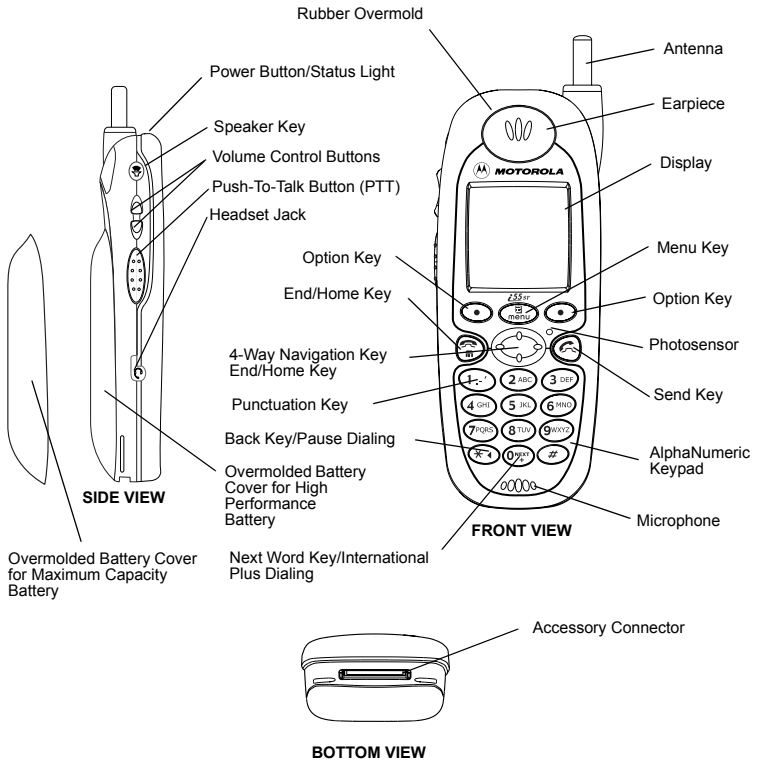


Battery

Your *i58sr* phone comes with a Lithium Ion battery. After attaching the battery, you must charge it before you use it for the first time. See “Charging Lithium Ion Batteries” on page 161 for the charging times for your phone’s battery. The first time you charge your phone’s battery, charge for 30 minutes more than the time shown on page 161. After the initial charging, the battery can be charged in the time shown on page 161.


Remove the battery from the protective plastic safety tray provided in the original packaging. When the battery is not attached to the phone store it in the original tray.

Attaching the Battery

- 1 Remove the battery cover located on the back of the phone by pressing the battery cover release button and sliding the battery cover away from the antenna.

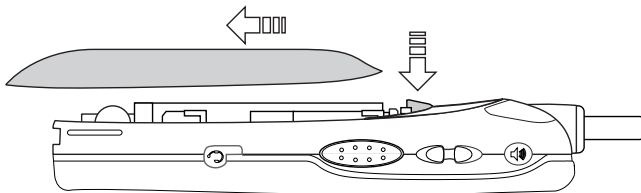


- 2 Insert the top of the battery into the battery area. Press down on the bottom of the battery to secure it.

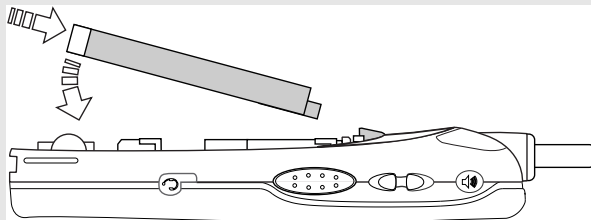

- 3 Replace the battery cover and push forward until you hear a click.


Detaching the Battery

- 1 Ensure that the phone is powered off before attempting to detach the battery.
- 2 Press the battery cover release button and slide the battery cover away from the antenna.
- 3 Remove the battery by pushing the battery toward the antenna and lifting it out of the phone.

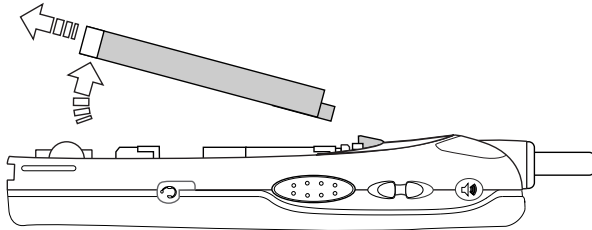

Charging the Battery

- 1 With your phone's keypad facing up, plug the charger's accessory connector into the left side of the accessory connector on the bottom of the phone.

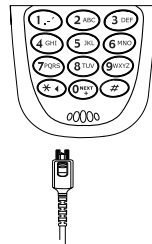





- 2 If the charger has folding electrical prongs, flip open the prongs.
- 3 Plug the charger into an electrical outlet.

Your phone's screen backlight will remain lit while the battery is charging.

Battery Charging Status





The battery strength indicator icon found on your phone's display screen shows the charge amount remaining in the battery.

When Using Phone

Icon Display				
Battery Strength	Low Battery	11% to 40%	41% to 70%	Fully Charged

A short, chirp-like sound indicates a low battery. The icon flashes to indicate that you have approximately five minutes of talk time remaining.

When Charging Battery

Icon Display				
	1 flashing bar	1 flashing bar, 1 continuous bar	1 flashing bar, 2 continuous bars	3 continuous bars
Battery Strength	Low Battery	31% to 60%	61% to 90%	Fully Charged

Turning Your *i58sr* Phone On/Off


To power the phone on:

- 1 For optimal signal strength, extend the antenna.
- 2 Press and hold **Ⓚ** at the top of the phone until the status light glows red and a tone briefly sounds.
- 3 When the **Enter SIM PIN Code** screen displays, enter your SIM PIN. (For more information see “SIM Card Personal Identification Number (PIN)” on page 18.)

NOTE: The default SIM card PIN is 0000. It is recommended that you change your PIN to prevent fraudulent use of the SIM card (see “Changing the PIN” on page 20).

- 4 Press **Ⓞ** under OK.

As your phone connects to the network, you will see a welcome message and a connecting message. When the **Ready** screen appears on the display, you are ready to use your *i58sr* phone!

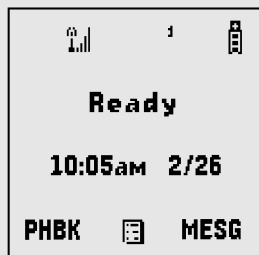



To power the phone off:

- 1 Press and hold **Ⓚ** on the top of the phone until you see the message **Powering Off**.
- 2 Push down the antenna.

Enabling Security


To utilize browser functionality from your service provider, you must enable security the first time you power on your phone or within 20 days of first activation of your phone.


- 1 When you power on your phone for the first time, after the **Ready** screen appears, you will be prompted to select OK to update your browser info.

NOTE: If you press  under **LATER**, you will be prompted to enable security each time you power on your phone until you press  under **OK**. It is recommended that you do not choose **LATER**.



- 2 Press  under **OK**.

- 3 You are prompted to enable security. Press  under **YES**. A series of screens display. If you subscribe to your service provider plan, your home page displays.

- 4 Press  to return to the **Ready** screen.

Receiving Over-the-Air Programming






If you have been set up to receive Over-the-Air Programming by your service provider, you will receive your Private ID and Talkgroup lists for Private Call use, and your Personal Telephone Number via a Net Alert message.

In order to receive your programming, you must have enabled security. Within 24 hours of enabling security, you will receive a Net Alert message containing your lists.

To accept your phone programming:

- 1 You will receive a Net Alert with the message **New Browser Message – Receive Programming Info**.

- 2 Press  under **GOTO**.

3	You are prompted to accept changes to your phonebook. Press  under OK.
4	A confirmation screen displays. Press  under OK.
5	You are prompted again to accept changes to your phonebook. Press  under OK.
6	A confirmation screen displays. Press  under OK.
7	Press  to return to the idle screen.

Security Features of the *i58sr* Phone

The *i58sr* phone comes with two levels of security protection:

- SIM Card
- Keypad Lock

Your phone comes with a built-in level of security protection through the use of the SIM (Subscriber Identity Module) card. The SIM card stores all your Phonebook information. Since this information is stored on the SIM card, not in your phone itself, you can remove the information by removing the SIM card.

The SIM card is located in the SIM Card Holder on the back of the phone, underneath the battery. You can verify that the SIM card is in place by removing the battery and viewing the SIM card through the SIM card cover.

See “Removing/Inserting the SIM Card” on page 23 for information on locating the SIM card. If there is no SIM card in your phone, notify your sales representative.

NOTE: Except for making emergency calls, your phone will not function without the SIM card.

SIM Card Personal Identification Number (PIN)


To prevent unauthorized use of your phone, your SIM card is protected by a PIN. Each time the phone is powered on, you must enter your PIN. You can change or disable your PIN if desired.

NOTE: Disabling your PIN enables anyone to use your phone. If you disable your PIN, you must still keep the SIM card in the phone to make calls.

Entering the SIM PIN

Depending on your Service Provider, your phone may or may not require you to enter a SIM PIN when you first use your phone.

If your phone is required to enter a PIN, your default SIM card PIN is 0000. It is recommended that you change your PIN to prevent fraudulent use of the SIM card (see “Changing the PIN” on page 20).

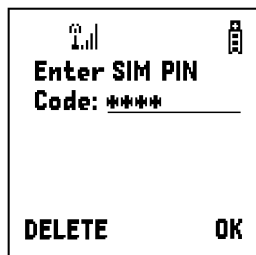**IMPORTANT:**

Incorrectly entering your PIN three times causes the SIM card to be blocked. To unblock your SIM card, you must contact your service provider. For more information, see “Unblocking the PIN” on page 21



- 1 From the **Enter SIM PIN** screen, enter your four- to eight-digit PIN. An asterisk appears for each character entered.

NOTE: Other than emergency dialing, you will be unable to use any of the phone functions, including receiving phone calls, until you enter the PIN.


- 2 Press  under OK.



If you enter an incorrect PIN, the message **SIM PIN incorrect: Try again** appears on your phone’s screen. After three consecutive incorrect attempts, the SIM card is blocked. The phone does not allow you to attempt to enter your PIN again, even after powering the phone off and back on. If this happens, see “Unblocking the SIM PIN” on page 21.


Changing the PIN

- 1 At the **Ready** screen, press  and then press  to scroll to **Settings**.





- 2 Press  under **SELECT**. The **Settings** screen displays.


- 3 Press  to scroll to **Security**. Press  under **SELECT** to access the **Security** screen.

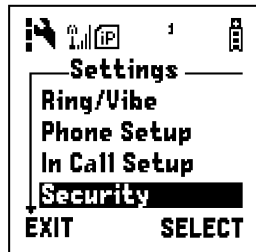

- 4 At the **Security** screen, press  to scroll to **New Passwords**. Press  under **SELECT** to access the **New Passwords** screen.

- 5 At the **New Passwords** screen, press  to scroll to **SIM PIN** and press  under **SELECT**.

- 6 At the **Enter Old SIM PIN Code** screen, enter the current SIM PIN and press  under **OK**.

- 7 At the **Enter New SIM PIN Code** screen, enter the new 4- to 8-digit SIM PIN and press  under **OK**.

- 8 At the **Re-enter New SIM PIN Code** screen, re-enter the new SIM PIN to confirm, and press  under **OK**.

Unlocking the SIM PIN

If you forget your PIN and unsuccessfully enter it three times, access to your phone will be blocked.

NOTE: Before you begin, obtain the PIN Unlocking Key (PUK) code from your service provider, then read and understand the PIN unblocking sequence. In entering the key press sequence, each key press must occur within 5 seconds of the prior key press.

IMPORTANT:	If you unsuccessfully enter the PUK code ten times, the SIM card is permanently blocked and must be replaced. If this happens, all data will be lost. You will get a message to contact your service provider. Call Nextel Customer Care for assistance. If the SIM card is blocked, the i58sr phone only allows outgoing Emergency calls.
-------------------	--

To unblock the PIN:

1	Press * * * * * .
2	Enter the PUK code.
3	Press ↵.
4	Enter a new 4- to 8-digit SIM PIN and press ↵.
5	Re-enter your SIM PIN and press ↵.

If you entered the codes properly, the **SIM Unlocked** screen displays.

Disabling/Enabling the PIN Requirement

When the PIN requirement is enabled, you are prompted to enter your PIN each time you turn on your phone. Until a valid PIN is entered, you can use the phone only to make emergency calls.

After the PIN is accepted, the phone registers on the network and the **Ready** screen displays.

When the PIN requirement is disabled, the phone can be used without entering a PIN.





NOTE: If you disable the PIN requirement, you remove protection of personal data on your SIM card. Anyone can then use your phone and access your personal data.

- 1 At the **Ready** screen, press and then press to scroll to **Settings**.






- 2 Press under SELECT. The **Settings** screen displays.

- 3 Press  to scroll to **Security**. Press  under SELECT to access the **Security** screen.



- 4 At the **Security** screen, press  to scroll to **SIM PIN**. Press  under SELECT to access the **SIM PIN** screen.

- 5 Press  to scroll to **On** or **Off**. **On** enables the SIM PIN requirement; **Off** disables the SIM PIN requirement. Press  under SELECT.

- 6 At the **Verify SIM PIN Code** screen, enter the current SIM PIN and press  under OK.


Removing/Inserting the SIM Card

NOTE: To avoid loss or damage, do not remove your SIM card unless absolutely necessary.


IMPORTANT:	If you remove your SIM card and insert another SIM card into your phone, the following information is erased when you use the phone with the new SIM card: Datebook events, the Recent Call list, Voice Record, voice names for Phonebook entries and shortcuts, call forwarding settings, call filtering settings in styles, Net Alert alerts, and information stored in memo.
-------------------	---

- 1 With phone powered off, remove the battery cover and battery. See “Detaching the Battery” on page 14.

- 2 With the antenna facing away from you, and the back of the phone exposed and facing up, locate the SIM cover and gently push it forward.

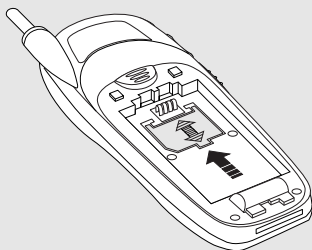


- 3 Lift the SIM cover up.

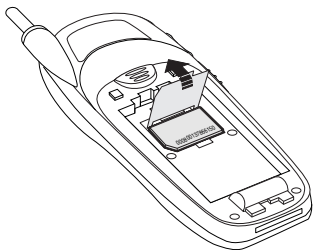


- 4 To remove the SIM card, *very carefully* lift it out of its holder. *Do not touch the gold-colored areas of the SIM card.*

NOTE: Protect the SIM card as you would any delicate object. When the SIM card is not in the phone, you should store it in something protective, such as a mailing envelope.

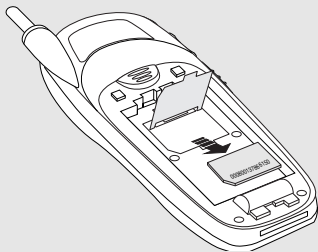

- 5 To insert the SIM card, *very carefully* place it in its holder with the gold contact side facing down and the cut corner on the card properly aligned with the cut corner of the holder.

Close the SIM card cover and slide it down until you hear a click.

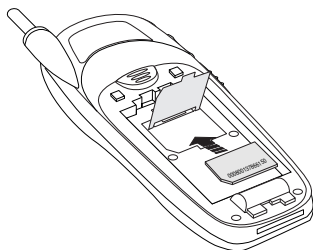

Keypad Lock



The i58sr phone includes a Keypad Lock feature that enables you to quickly lock the phone's keypad to avoid inadvertently pressing keys or placing calls. Once Keypad Lock is activated, you can only perform the following tasks:


- Turn your phone on and off
- Unlock the keypad
- Receive incoming calls, messages, and alerts.

NOTE: Emergency calls cannot be placed while Keypad Lock is activated.

Before locking your phone's keypad, you may want to read this entire section to learn how to respond to incoming calls, messages, and alerts.

Activating Keypad Lock

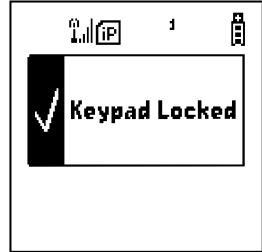

From the **Ready** screen, press  then . The message **Keypad Locked** displays on your phone.





Whenever a key is pressed while in Keypad Lock mode, the unlock instructions display briefly.


Receiving Incoming Calls

When you receive an incoming phone call (see “Receiving a Phone Call” on page 64), Keypad Lock is temporarily disabled.

- 1 Press  under YES or press  to answer the call.


Or,

Press  under NO or press  to send the call to Voice Mail and reactivate Keypad Lock.

- 2 When you end the call, the **Recent Calls** list appears. Press  to reactivate Keypad Lock and return to the **Ready** screen.


Receiving Private Calls

When you receive an incoming Private call, Talkgroup call, or call alert (see “Private Call” on page 91), Keypad Lock is temporarily disabled.




- 1 Press and hold the Push-To-Talk (PTT) button on the side of the phone. Begin talking after the phone emits a chirping sound. Release the PTT button to listen.
- 2 When you end the call, the **Recent Calls** list appears. Press  to reactivate Keypad Lock and return to the **Ready** screen.

Receiving New Voice Mail

When you receive new Voice Mail (see “Voice Mail” on page 84), Keypad Lock is temporarily disabled.

- 1 When **New Voice Mail Message** displays, press  under EXIT to return to the **Ready** screen and reactivate Keypad Lock.

Or,



Press  under CALL to access Voice Mail.
- 2 Once you have finished, press  to exit Voice Mail. The **Recent Calls** list displays. Press  to reactivate Keypad Lock and return to the **Ready** screen.


Receiving New Text Messages

When you receive new Text Messages (see “Text and Numeric Messaging” on page 86), Keypad Lock is temporarily disabled.

- 1 When **New Text Message** displays, press  under EXIT to return to the **Ready** screen and reactivate Keypad Lock.


Or,

Press  under READ to read the message. Press  under SAVE or DELETE.




- 2 Once you have finished, press  under EXIT to reactivate Keypad Lock return to the **Ready** screen.

Receiving New Net Alert

When you receive new Net Alert, Keypad Lock is temporarily disabled.



- 1 When **New Browser Message** displays, press  under EXIT to return to the **Ready** screen and reactivate Keypad Lock.


Or,

Press  under GOTO. Press  under View. Press  under OK or Reply.

- 2 Once you have finished, press  until you reactivate Keypad Lock return to the **Ready** screen.

Deactivating Keypad Lock

From the **Ready** screen, press  then . The message **Keypad Unlocked** displays briefly.

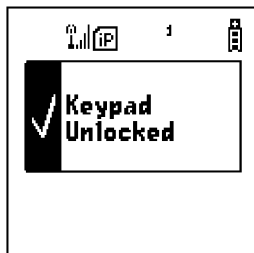

Status of Your *i58sr* Phone

Your *i58sr* phone has a status light that displays around the power button. The status light indicates the status of your connection.








Status Light Indicator	<i>i58sr</i> Phone Status
Flashing Red	Signing on to the network. Please wait.
Solid Red	No service or out of coverage area.
Flashing Green	In service/Ready to use.
Solid Green	In use.

My Information

You can select **My Info** from the main menu to display or edit the following:

- Name — enter your name in this field.
- Private ID — your Private ID is displayed in this field. Your Private ID is the number that others use to contact you using Private calls.
- Phone Numbers of Lines 1 and 2 — your phone's numbers are displayed in these fields. You can edit the phone numbers displayed on the **My Information** screen, but this does not change your phone numbers.
- Carrier IP — This field displays your phone's carrier assigned IP address.
- IP Addresses — these fields display the IP addresses you use to access the Internet with your phone.
- Circuit Data Number (**Ckt**) — your circuit data number is in this field.

Viewing/Editing My Information

1	From the Ready screen, press  .
2	Press  to scroll to My Info . Press  under SELECT. The My Information screen displays.
3	Use  to scroll through the fields.
4	To edit the displayed information, press  under CHANGE. Edit information as desired, and press  under OK to save the changes. To return to the Ready screen, press  under EXIT.

Using T9 Text Input

Your *i58sr* phone has embedded software, called T9[®] Text Input, that makes typing on a phone keypad much like typing on a computer keyboard: it eliminates the traditional “multi-tap” method of text entry. As you type, you press only one key per letter. T9 Text Input matches your keystrokes to words in its linguistic database of approximately 60,000 words and proper names. You may also store additional words you frequently use in your own user database, which is incorporated into the T9 database.

T9 Text Input is available when you are typing information into your Phonebook and Datebook.

T9 Text Input Entry Modes


Four text entry modes are available in T9 Text Input: Alpha, Word, Symbols, and Numeric. When you are using T9 Text Input, an icon in the top right corner of your phone’s display screen (next to the battery strength indicator icon) indicates the T9 Text Input entry mode you are using:

Icon	T9 Entry Mode Name	Used For...
	Alpha	Standard “multi-tap” keypad text entry.
	Word	Entering words and punctuation with one key-press per character.
	Symbols	Entering punctuation and symbols such as “@” or “?”.
	Numeric	Entering keypad numbers.

Choosing a Text Entry Mode


When you are using Phonebook or Datebook, you select your text entry mode from a menu available whenever the phone is displaying a screen that requires you to enter text (for example, the **Name** screen or **Title** screen).

To choose a text entry mode:

- 1 From any screen that requires text input, press  to access the **Entry Method** menu.

A check mark appears next to the current text entry mode. When you access a screen that requires text input, the default text entry mode is Alpha.






- 2 Press  to highlight the T9 Text Input text entry mode you want to use.

- 3 Press  under SELECT.

The phone returns to the text entry screen. The text entry mode you selected is now active.

Using Alpha Mode

To enter text while in Alpha text entry mode to enter letters, numbers, and symbols:

- Press any button on the alphanumeric keypad to enter the letters, numbers, and symbols on that key.
- Type a letter then press  to activate Caps Lock or type a letter then press  to deactivate Caps Lock.
- Pause briefly to leave the currently displayed character in place and move on to the next place in the text entry field.
- Press  to create a space in the text entry field.
- Press  under DELETE to delete one character. Press and hold  under DELETE to delete an entire entry.



Using Word Mode

In Word mode, T9 Text Input analyzes the letters on the keypad button you press and arranges them to create words. As you type, T9 Text Input matches your keystrokes to words in its database and will display the most commonly used matching word.

Special Key Functions

Some of your phone's keys assume different functions while in T9 Text Input Word mode.


Backspace and Erase

Press  under DELETE once to backspace or to erase a single character. Press and hold  under DELETE to erase the entire text entry field.


Space

Press  once to accept a word and insert a space when entering text.



Next Word in Database

Press  to display more words in the database that match the keystroke sequence you entered.

Shift and Caps Lock

Press  to make the next letter typed uppercase (Shift), to make all subsequent letters types uppercase (Caps Lock), or to go back to lowercase letters.

These icons appear in the top row of your display screen:


-  for Shift to uppercase
-  for Caps Lock


When neither of these icons appear, letters typed are lowercase.


NOTE: T9 Text Input automatically makes the first letter of a sentence uppercase.

Punctuation

In Word mode, T9 Text Input uses Smart Punctuation to quickly apply basic rules of grammar to insert the correct punctuation within a word and at the end of a sentence.

Press  to insert punctuation. One of eight basic punctuation symbols will be inserted (., - ' @ : ? ;).






Press  to change the inserted punctuation symbol to another of the eight basic punctuation symbols.

Press  to accept the punctuation and continue typing.

NOTE: Additional punctuation symbols are available in Symbols mode.


Enter a Word

To enter a word using Word mode:

1	Choose Word as your text entry mode.
2	Type a word by using one key-press per desired letter. For example, to type “test” press     . The displayed word may change as you type it. Do not try to correct the word as you go. Type to the end of the word before editing.
3	If the word that appears is not the desired word, press  to change the word on the display to the next most likely word in the database. Repeat until the desired word appears. If the desired word does not appear, you can add it to the database of words using the instructions in “Adding Words to the User Database” on page 34.

Adding Words to the User Database






To add words to the T9 database:

1	Change from Word text entry mode to Alpha text entry mode.
2	Type the word using Alpha text entry mode.
3	Return to Word text entry mode.
4	Press  to add a space. The word you typed in Alpha text entry mode is now in the database.

NOTE: You cannot store alphanumeric combinations, such as Y2K.

Choosing a Language

To change the language of the database T9 Text Input chooses common words from:




1	From any screen that requires text input, press  to access the Entry Method menu.
2	Press  to scroll to Languages .
3	Press  under SELECT .
4	Press  to scroll to the language of the database you want T9 Text Input text use.
5	Press  under SELECT .

Using Numeric Mode

To use Numeric text entry mode, choose Numeric as your text entry mode and press the number buttons on your keypad to enter numbers.

Using Symbols Mode

To use Symbols text entry mode:

1	Choose Symbols as your text entry mode. A row of 32 symbols appears along the bottom of your phone's display screen, just above the display option and menu icon. (Press  to view the complete row.)
2	Press  to highlight the symbol you want to enter into the text entry field.
3	Press  under SELECT to enter the symbol.

Display Essentials

Your *i58sr* phone's display screen tells you what you need to know as you use your phone.

This section includes:

Display Screen Elements	Page 37
Navigating Menus and Lists	Page 41
Main Menu Options	Page 42

Display Screen Elements


Any time your phone is powered on, the display screen provides you with information and options.

The Ready Screen

The **Ready** screen displays any time the phone is powered on, but not engaged in some activity.

The **Ready** screen consist of elements common to many of the screens your phone displays:

- status icons
- text display area
- menu icon
- display options

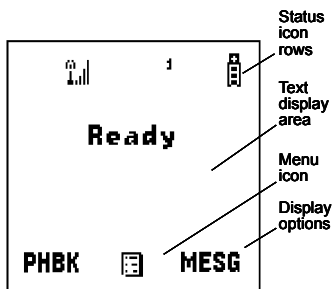




















USER TIP: You can always access the Ready screen by pressing .

Status Icons

Status icons provide you with information about your phone and its functions. These icons are *context sensitive*; meaning, the icons that appear depend on the task you are performing.

Status icons appear in the two rows at the top of the display screen. Some appear at all times. Others appear only when your phone is engaged in certain activities or when you have activated certain features.

Icon	Indicates...
	<p>Battery Strength icons — remaining battery charge. More bars on the battery indicate a greater charge. See the table on page 15 for detailed information about the meaning of each battery strength icon.</p>
	<p>Signal Strength icons — strength of the network signal. More bars next to the antenna indicate a stronger signal.</p>
	<p>Active Line icons — currently active phone line; ¹ indicates Line 1 is active; ² indicates Line 2 is active.</p>
	<p>Call Forward icons — phone is set to forward calls. See “Call Forwarding” on page 73 for more information.</p>
	<p>Phone In Use — phone is connected on an active call.</p>
	<p>Private In Use — number being called is a Private ID.</p>
	<p>Talkgroup In Use — phone is active on a talkgroup call.</p>
	<p>Packet Data Ready — phone is ready to receive data through a data cable.</p>
	<p>Packet Data Activity — phone is transmitting data.</p>
	<p>Mobile IP — phone is ready to access the Internet.</p>

	Secure Data — phone is accessing the Internet using a secure connection.
	Non-secure Data — phone is accessing the Internet using a non-secure connection.
	Roaming — phone is searching for network connections outside your local area.
	Text Message — you have one or more Text Messages or Net Alert messages.
	Voice Mail — you have one or more Voice Mail messages.
	FaxMail — you have one or more FaxMail messages.
	Ring/Vibe icons — you have customized the way in which the phone is set to notify you when you receive calls and other types of messages. See “Ring Style and Notification Type” on page 135 for more information.
	T9 Text Input icons — you are using T9 Text Input to enter text. See “Using T9 Text Input” on page 31 for more information.
	TTY — your phone supports TTY devices and communications

The icon of the main menu feature currently in use always appears in the top left of the status icon rows. For a list of the main menu icons, see “Main Menu Options” on page 42.


Text Display Area

On the **Ready** screen, the text displayed in this area is determined by your wireless communications provider. When you access other screens, this area displays menu options, messages, names, phone numbers, and other information.

The number of lines of text displayed in the text display area depends on which display view is selected — Standard view, Compressed view, or Zoom view. (For more information, see “Setting Text Display” on page 145.) In Standard view, five lines of text are displayed.

NOTE: Standard view is the default display setting. Unless otherwise noted, illustrations in this User’s Guide depict Standard view.

Menu Icon

This menu icon  appears on any screen from which a menu can be accessed. To access a menu, press the menu key on your keypad. This key has the menu icon printed on it.

Menus are context sensitive. The menu that appears depends on the screen you access it from and the items on the menu apply to the task you are currently performing.

Pressing the menu key from the **Ready** screen accesses the main menu.

Display Options

Two display options appear at the bottom of most screens. These options enable you to perform a wide variety of actions, including changing, saving and viewing information, running programs, and canceling previous actions. You activate a display option by pressing the option key below it.

The **Ready** screen display options provide quick access to two main menu features. By default, the Phonebook (**PHBK**) and Messages (**MESG**) display options appear on the **Ready** screen. You can control which display options appear on the **Ready** screen using the phone’s Personalize feature in the Settings menu (see “Changing Ready Screen Options” on page 140).

The display options on screens other than the **Ready** screen cannot be customized.

Navigating Menus and Lists

The *i58sr* phone is menu driven. By navigating menus, you access submenus which lead to all of the functions and features that are built into your phone. Use the menus to store calls, manage your Phonebook and Datebook, change your phone settings, browse the Internet, and more.

Some features include lists of names, numbers, or other information. These list items can be accessed the same way menu options are.


To access the items in a menu or list, scroll through using the four-way navigation key near the center of your keypad. Scroll down by pressing the lower portion of the navigation key (⤵). Scroll up by pressing the upper portion of the navigation key (⤴). Holding down the appropriate part of the navigation key speeds up scrolling. If you continue scrolling after you have reached the bottom or top of a menu or list, you “wrap-around” to the opposite end.

If more items appear in a menu or list than can be displayed in the text area, a down arrow or up arrow appears in the left side of the screen indicating that more options may be accessed by scrolling up or down.

Down arrow





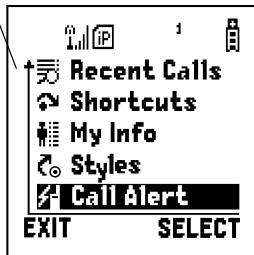








Up arrow








Main Menu Options




By default, the main menu options appear in the order determined by your service provider. You can change the order in which they appear by using the Personalize feature (see “Reordering Main Menu” on page 140).

To access the main menu, press  from the **Ready** screen:

Menu Item	Use to ...
 Net	Browse the Web.
 Java	Run pre-installed and download custom Java applications on your phone.
 Settings	Customize your phone: Ring/Vibe, In Call Setup, Security, Personalize, Initial Setup, Phone Setup, Voice Volume, and Talkgroup Settings.
 VoiceRecord*	Record personal messages or the incoming portion of phone calls to play back at a later time.
 Phonebook	Store and retrieve a list of stored entries for calling, editing, viewing and deleting.
 Messages	Receive, store, access and manage Voice Mail, FaxMail, Text Messages, and Net Alert.
 Call Forward	Settings for forwarding calls in various situations.
 Datebook	Schedule and organize events, by the day or the month, such as appointments and meetings.
 Memo	Input and store numbers to access later.
 Call Timers	Display the duration of phone calls, private or group calls, circuit data use, and Kilobytes sent and received.

 Recent Calls	Access a list of the last 20 sent, received, or missed calls. Calls can be made from this list.
 Shortcuts	Associate a menu option with a number on the alphanumeric keypad for quick and easy access.
 My Info	View the name, Private ID, phone numbers for lines 1 and 2, IP address, and circuit data number of your phone.
 Styles*	Create or edit a group of settings and save them as one for use in different environments.
 Call Alert	Store received call alerts to respond to at your convenience.
[icon pending] GPS	Find your phone's exact geographical location.

**Optional feature. Please consult your service provider for availability of purchase.*

To choose the highlighted Main Menu selection, press  under SELECT. To exit the Main Menu (and return to the **Ready** screen), press  under EXIT or press .

Phonebook

The Phonebook allows you to store up to 250 frequently used names and numbers.

When you store information in your Phonebook, it is saved on your SIM card. If you move your SIM card to another SIM-based Motorola iDEN phone, you can access information in your Phonebook from that phone.

NOTE: If you use a different SIM card in your phone, some information stored in the phone will be lost. See “Removing/Inserting the SIM Card” on page 24.

This section includes:

Accessing Phonebook with an i2000, i2000plus, or GSM Phone	Page 46
Phonebook Entries and Speed Dial Numbers	Page 46
Phonebook Icons	Page 46
Voice Names*	Page 47
Accessing Your Phonebook	Page 48
About Phonebook Entries	Page 48
Viewing Phonebook Entries	Page 49
Sorting Phonebook Entries	Page 49
Adding Phonebook Entries	Page 51
Editing Phonebook Entries	Page 56
Deleting Phonebook Entries	Page 57
Pause Digit Entry	Page 57
Plus Dialing	Page 58

**Optional feature. Please consult your service provider for availability of purchase.*

Accessing Phonebook with an *i2000*, *i2000plus*, or GSM Phone

If you plan to use the information stored in your Phonebook with an *i2000*, *i2000plus*, or any other GSM phone, you must purchase CompanionPro. Go to www.motorola.com/iden or your service provider's web site for more information.

You can use CompanionPro to make the Phonebook information saved to your *i58sr* phone's SIM card accessible in this type of phone.

Phonebook Entries and Speed Dial Numbers







Your Phonebook can store multiple phone numbers to a single name. For example, you can enter someone's name into your Phonebook once and then assign that person's home, office, mobile phone and fax numbers to the name.




Each number stored in your Phonebook is automatically assigned a Speed Dial number that corresponds to its location in your Phonebook. Each phone number uses one Speed Dial location, even if it is assigned to the same name as other phone numbers. The phone number stored in location 1 is assigned Speed Dial number 1, the phone number stored in location 2 is assigned Speed Dial number 2, and so forth, to location 250.

Phonebook Icons

Icons that appear to the right of entries in your Phonebook convey information about those entries.

When you enter a phone number in your Phonebook, you can designate the phone number's type using any of the following icons:

	Mobile
	Private
	Work
	Main
	Home
	Pager

	Fax
	Talkgroup
iP	IP (Internet Protocol Address)
	Other

NOTE: The Mobile icon automatically appears to the right of the first phone number assigned to a name unless you choose another icon.

For more information on entering phone numbers into your Phonebook, see “Adding Phonebook Entries” on page 51.

The “picker” arrows appearing around the phone number type icon indicates multiple phone numbers stored under one name:



The Voice Name* icon appearing to the left of one of the phone number type icons indicates that a voice name is associated with the Phonebook entry:



**Optional feature. Please consult your service provider for availability of purchase.*


Voice Names*

**Optional feature. Please consult your service provider for availability of purchase.*

A voice name is an audio recording you make by speaking into your *i58sr* phone that you assign to a number in your Phonebook. You can then dial the number by speaking the words you recorded into the phone. See step 6 of “Adding Phonebook Entries” on page 51 for more information on creating a voice name.

Accessing Your Phonebook


If PHBK is one of your display options:


From the **Ready** screen, press  under PHBK.

If PHBK is not one of your display options:

1 From the **Ready** screen, press .

2 Press  to scroll to **Phonebook**.

3 Press  under SELECT.

USER TIP: You can also access the Phonebook by pressing  while your phone is in a phone call or private call.




This brings you to the **Phonebook** screen. From this screen, you can view, sort, add, edit, and delete Phonebook entries, check Phonebook capacity, or make calls.

About Phonebook Entries


Each Phonebook entry may contain the following information:

- The name associated with the entry. Typically, this is the name of the person whose number you are storing in the Phonebook.
- The type of number to be stored: Mobile, Private, Work, Main, Home, Pager, Fax, Other, or Talkgroup. If you don't choose a type, the number is assigned type Mobile, unless a Mobile number has already been assigned to the name.
- The phone number to be stored. Every Phonebook entry must contain a phone number. This number may be any type of phone number, Private ID, or Talkgroup number.
- A Speed Dial number. You may accept the default Speed Dial number or assign a different one.
- A voice name audio recording for voice-activated dialing. (This is an optional feature. Contact your carrier for further details.)


Viewing Phonebook Entries


Names with more than one number assigned to them appear with    surrounding the icon to the right of the name. For example, if you had stored a home and work number for Joe Smith, the entry for Joe Smith's home phone number would look like this:


Joe Smith   

When the name is highlighted, press  to scroll to the icons representing each of the numbers assigned to that name.


To view any of the phone numbers assigned to a name:

1 From the **Phonebook** screen, press  to scroll to the name associated with the phone number you want to see.

2 Press  to view the icons representing the phone numbers assigned to that name.

3 When the icon representing the number you want to view is displayed, press  under VIEW.

If there is a Private ID or a Talkgroup number stored for the person, press . Then press  to scroll to **View** and press  under SELECT.

4 Press  to view the other numbers stored for this name.

Sorting Phonebook Entries


You can sort your Phonebook entries by:


- Name — the name you entered for the entry.
- Speed No. — the Speed Dial location of the entry.
- Voice Name* — all entries with voice names appear at the top of the list.


NOTE: Private calls cannot be made from the Phonebook when sorted by Speed Dial location.


*Optional feature. Please consult your service provider for availability of purchase.


To sort your Phonebook list:

- 1 From the **Main Screen** screen, press  and scroll down  to view the **Phonebook Menu** screen.

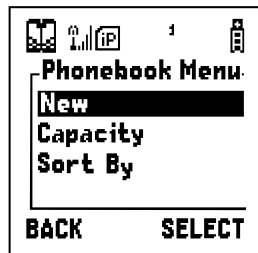


- 2 Press  to scroll to **Sort By**.

- 3 Press  under SELECT.

- 4 Press  to scroll to the desired sorting method: **Name**, **Speed #**, or **Voice Name***


**.Optional feature. Please consult your service provider for availability of purchase.*


- 5 Press  under SELECT.

Checking Phonebook Capacity

Your Phonebook can store up to 250 numbers of any kind. To see how many entries are stored in your Phonebook:


- 1 From the **Phonebook** screen, Press  to view the **Phonebook Menu** screen.


- 2 Press  to scroll to **Capacity**.


- 3 Press  under SELECT.


The **Capacity** screen shows how many storage spaces in you Phonebook are in use and how many are empty.

Adding Phonebook Entries




Using the following instructions, you will enter the information in the order the items appear on the Phonebook **Entry Details** screen. However, you can enter this information in any order by pressing  to scroll through the items on the **Entry Details** screen.

You can leave any item blank or unchanged by pressing  to scroll past it on the **Entry Details** screen. Only a phone number is required for a valid Phonebook entry.

After you have entered a phone number and any other information you wish to include, you can press  under DONE to save the Phonebook entry.

To cancel a Phonebook entry at any time, press  to return to the **Ready** screen. To add a Phonebook entry:


1 Access the **Entry Details** screen:

From the **Main Screen** screen, press .
Then press  to scroll to **Phonebook**.
Press  under SELECT

To add a **[New Entry]**, press  under SELECT.




2 If you want to assign a name to your Phonebook entry:


With the **Name** field highlighted, press  under CHANGE.

From the **Name** screen, enter the name using the alphanumeric keypad.


See “Using T9 Text Input” on page 31 for information about entering text into this field.


When you are finished, press  under OK.


The **Entry Details** screen returns with the **Type** field highlighted.

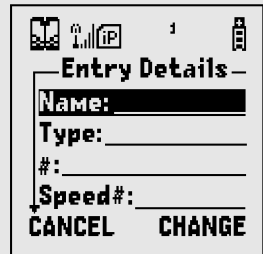


- 3 If you want to assign a phone number type other than **Mobile** to your Phonebook entry:

With the **Type** field highlighted, press  under CHANGE.


From the **Type Editor** screen, press  to scroll to the type of phone number you want to assign to the Phonebook entry.

Press  under SELECT.


The **Entry Details** screen returns with the # field highlighted.

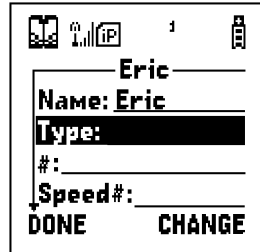

- 4 Assign a phone number to your Phonebook entry:


With the # field highlighted, press  under CHANGE.

Type the number using the alphanumeric keypad. For phone numbers, use the 10-digit format.

To delete a digit, press  under DELETE.

See “Pause Digit Entry” on page 57 and “Plus Dialing” on page 58 for information on using these features when storing phone numbers in you Phonebook.

NOTE: The number can be up to 20 characters long.


When you are finished, press  under OK.


The **Entry Details** screen returns with the **Speed #** field highlighted.




- 5 The default Speed Dial number assigned to the Phonebook entry is displayed in the **Speed #** field. This is always the next available Speed Dial location.

If you want to assign the phone number to a different Speed Dial location:

With the **Speed #** field highlighted, press  under CHANGE.

Press  under DELETE to delete the current Speed Dial number.

Type the new Speed Dial number using the alphanumeric keypad.

When you are finished, press  under OK.




- 6 If you want to assign a voice name* to the number:

**Optional feature. Please consult your service provider for availability of purchase.*

With the **Voice Name** field highlighted, press  under RECORD.



As directed by the screen prompts, say and repeat the name you want to assign to the number. Speak clearly into the microphone.

An  icon appears in the **Voice Name** field indicating that the voice name has been recorded.

USER TIP: For best results, record in a quiet environment.



- 7 If you want to store more phone numbers to the name associated with this Phonebook entry:


Press  to scroll to **MORE** at the bottom of the **Entry Details** screen and then press  under **SELECT**.

A new **Type** field appears for the additional number.

Enter the information for the additional phone number using step 3 through step 7.

NOTE: Each name in your Phonebook may have up to seven phone numbers one Private ID associated with it.




- 8 When you have entered all the information you wanted in this Phonebook entry, press  under **DONE**.




Storing Phone Numbers and Private IDs Quickly


Your phone gives you two ways to store phone numbers quickly: from the **Ready** screen and from the Recent Calls list.

To store a number from the **Ready** screen:



- 1 From the **Ready** screen, use the alphanumeric keypad to enter the number you want to store.
- 2 Press  to access the **Dialing Menu** screen.


- 3** With **Store Number** highlighted, press  under SELECT.



This displays the **Store To** screen.

- 4** To store to a new entry, press  under SELECT. The **Entry Details** screen will display with the number entered in the field.

Or,

To store to an existing entry, press  to scroll the list of names in your Phonebook. Or press the first letter of the entry to jump to the entry. Once the desired entry is highlighted, press  under SELECT. The Phonebook information for that entry displays with the number entered in the # field.


- 5** From the **Entry Details** screen, press  to scroll to the first **Type** field.


- 6** From the **Type Editor** screen, press  to scroll to the selection that you want to assign to the phone number. Press  under SELECT.


- 7** If you want to add more information to the Phonebook entry, follow the applicable instructions in “Adding Phonebook Entries” on page 51.

- 8** Press  under DONE.



To store a number from the Recent Calls list:

- 1** From the **Recent Calls** screen, press  to scroll to the 10-digit telephone number you want to store.

- 2** Press  under STORE. This displays the Store To screen with [**New Entry**] highlighted.

- 3 To store a new entry, press  under SELECT. The Entry Details screen displays with the number entered in the # field and the **Type** field highlighted.

Or,


To store to an existing entry, press  to scroll the list of names in your Phonebook. Or press the first letter of the entry to jump to the entry. Once the desired entry is highlighted, press  under SELECT. The Phonebook information for that entry displays with the number entered in the # field and the **Type** field highlighted.




- 4 Press  under CHANGE. Press  to scroll to the type of number you want to assign to the Phonebook entry. Press  under SELECT.

- 5 If you want to add more information to the Phonebook entry, follow the applicable instructions in “Adding Phonebook Entries” on page 51.

- 6 Press  under DONE.

To store a Private ID from the Recent Calls list:


- 1 Press  to scroll to the Private ID number you want to store. Note: The Store option for Private ID numbers (e.g., 123*123*1234), will not display in the Recent Calls list.



- 2 With the **Private ID** highlighted, press  to access the Rec. Calls Menu. Press  to scroll to Store. Press  under SELECT. This displays the Store To screen with **[New Entry]** highlighted.

Follow steps 3-6 in “To store a number from the Recent Calls list” (listed on the previous page).





Editing Phonebook Entries

- 1 From the **Phonebook** screen, press  to scroll to the entry you want to edit.

- 2 Press  to view the **Phonebook Menu**.

3	Press  to scroll to Edit .
4	Press  under SELECT. The Entry Details screen displays.
5	Follow the applicable instructions in “Adding Phonebook Entries” on page 51 to edit the various fields.

Deleting Phonebook Entries

1	From the Phonebook screen, press  to scroll to the entry you want to delete.
2	Press  to view the Phonebook Menu .
3	Press  to scroll to Delete Contact or Delete Number . Delete Contact deletes the name and all numbers associated with that name. Delete Number deletes the number associated with the icon that is currently displayed in the Phonebook list for the name. The name and all the other numbers will remain.
4	Press  under SELECT. A warning screen displays requiring you to confirm the deletion.

Pause Digit Entry

When storing a number, you can program your phone so that it will not only dial a number but also pause before entering another series of numbers such as a personal identification number (PIN) or password. This feature is particularly useful for accessing automated services such as voice mail and banking systems from your *i58sr* phone.


Here’s how it works. Let’s say you have a company voice mail account that you frequently check while traveling. And, to access that account you must do the following:

- Dial your work number;
- Press # while the voice mail greeting is being played; and
- Enter your PIN to access your messages.

You can program your phone to enter all of the above information for you. All you have to do is separate each entry with a pause. If you were to program your phone to automatically input the above information, the stored data would look like this 17035551234P#P1234. In this example, the first eleven digits represent the number that must be dialed to access your voice mail. The P represents a 3 second pause. The # interrupts your greeting. The second P represents another 3 second pause. The last four digits represent your PIN.

You can use this feature not only to enter PINs and passwords but also to have the phone automatically select menu options (i.e., press 1 to hear messages).

To create a three-second pause follow the steps below:


Press and hold  for two seconds. The pause symbol (P) will appear on the display screen.

NOTE: You can enter up to 20 characters in a single entry, stored or dialed.

NOTE: If you use a system that will not let you enter an option until the automated message has played in its entirety, you can program your phone to pause for more than 3 seconds. For example, performing the above step twice will program two pauses and cause your phone to wait 6 seconds before entering the next set of numbers.

Plus Dialing

This feature enables you to place an international call from most countries — without entering the local international access code. Use Plus Dialing for all Phonebook entries if you plan to travel outside the United States. Begin by following the instructions for “Adding Phonebook Entries” on page 51. Before you type the phone number to be stored:

- 1 Press and hold  for two seconds. A “0” appears, then changes to a “+”.

NOTE: The network translates the “+” into the appropriate international access code needed to place the call.

- 2 Enter the country code, city code, or area code, and phone number.
- 3 Follow the rest of the instructions for “Adding Phonebook Entries” on page 51.

Digital Cellular

The *i58sr* phone enables you to make and receive domestic and international phone calls, make emergency calls, and be notified of a missed call.

This section includes:

Making Phone Calls	Page 59
Emergency Calling	Page 64
Receiving a Phone Call	Page 64
Ending a Phone Call	Page 64
Recent Calls	Page 65
Call Waiting	Page 70
Hands Free SpeakerPhone*	Page 68
Call Timers	Page 70
Call Hold	Page 71
Three-Way Calling	Page 72
Call Forwarding	Page 73



**Optional feature. Please consult your service provider for availability of purchase.*

Making Phone Calls

Your *i58sr* phone provides the following features for making phone calls:




- Direct Dial
- Phonebook
- Recent Calls
- Speed Dial
- Turbo Dial®
- Last Number Redial
- TTY— your phone supports TTY devices and communications.

Using Direct Dial

- | | |
|----------|--|
| 1 | From the Ready screen, use the keypad to enter the number you want to call. |
| 2 | Press  to place the call. |
| 3 | Press  to end the call. |

NOTE: See “Plus Dialing” on page 58 for information on making international calls.


If you make a mistake:

- To clear one digit, press  under DELETE.
- To clear all digits, press and hold  under DELETE.
- To cancel, press .





Making Calls from the Phonebook

After you have entered phone numbers into your Phonebook, you can use these numbers to make phone calls. For information on entering numbers into your Phonebook, see “Adding Phonebook Entries” on page 51.


To make calls from the Phonebook:

- | | |
|----------|--|
| 1 | From the Ready screen, if PHBK is one of your display options, press  under PHBK.

Or,


From the Ready screen, press  , then press  to scroll to Phonebook . Press  under SELECT. |
| 2 | Press  to scroll through the names in your Phonebook.

Or,



Use the alphanumeric keypad to enter the first letter of the name and press  to scroll through the names beginning with that letter.

Stop when the name of the person you want to call is highlighted. |





- 3** If more than one number is stored for the person you want to call, <> appears around the icon to the right of the person's name.

Press  to scroll through the icons representing the numbers stored for that person.


Or,


Press  under VIEW to view all the numbers stored for this person. Then press  to scroll to the number you want to call.

Or,

If there is a Private ID or a Talkgroup number stored for this person, press . When the **Phonebook Menu** appears, press  to scroll to **View** and press  under SELECT. Then press  to scroll to the number you want to call.

For more information on assigning multiple numbers to one person, see "Adding Phonebook Entries" on page 51.

- 4** Press  to place the call.




- 5** Press  to end the call.


Making Calls from the Recent Calls List

Your phone stores the numbers of the last 20 calls you received or sent in the Recent Calls list.


- 1** From the **Ready** screen, press .

Or,

From the **Ready** screen, press  to **Recent Calls** is not the first item on the list, press  to scroll to it. Press  under SELECT.

- 2** Press  to scroll the list received or sent recent calls until you reach the desired call.


3 To view additional information about the call:

Press  under VIEW.

Or,

Press  to access the **Rec. Calls Menu**. Then press  to scroll to **View** and press  under SELECT.

4 Press  to place the call.


5 Press  to end the call.


Using Speed Dial

Each phone number stored in your Phonebook is assigned a Speed Dial number. You can use the Speed Dial number to quickly place a call.

1 From the **Ready** screen, enter the Speed Dial number assigned to the phone number you want to call.

2 Press .

3 Press  to place the call.

4 Press  to end the call.


Using Turbo Dial

Turbo Dial allows you to call the numbers in your Phonebook associated with Speed Dial numbers 1 through 9 by pressing and holding the corresponding numeric key on the keypad.

Press and hold a number (keys 1 through 9).

NOTE: Turbo Dial cannot be accessed while the browser is active, nor while Keypad Lock or SIM Lock is active.

Last Number Redial

Press and hold  to redial the last number you called.


Making TTY Calls

NOTE: This feature may not be offered by your service provider.

You can use your phone to make calls using a TTY device.

When you make a TTY call, the call begins in the TTY mode you last selected. You can change the TTY mode during a call. For more information on choosing a TTY mode, see “Setting TTY Mode” on page 146.

To make a call using a TTY device:

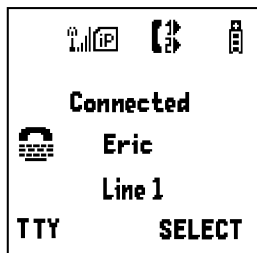

- 1 Connect one end of a 2.5mm cable into the jack on the phone. (To locate the jack, see page 12.) Connect the other end of the cord into your TTY device.
- 2 Enter the phone number you wish to call and press.


Placing International Phone Calls

When making an international call, you can either enter the international access code directly (011 in the United States) or use Plus Dialing.



You can make international calls from your Phonebook if you have stored the numbers with Plus Dialing. See “Adding Phonebook Entries” on page 51 and “Plus Dialing” on page 58 for more information.

NOTE: Your service default is “International Calls Restricted.” Therefore, you must call Customer Care to obtain international dialing access.

To make an international call using Plus Dialing:


- 1 Press and hold  for two seconds. A “0” appears, then changes to a “+”.

NOTE: The network translates the “+” into the appropriate international access code needed to place the call.

- 2 Enter the country code, city code, or area code, and phone number.
- 3 Press  to place the call.
- 4 Press  to end the call.



Emergency Calling

Your phone supports emergency calling. Emergency calls can be made even when the SIM card is blocked or not in the phone.


To place a call in an emergency, dial 911 . You will be connected to the nearest emergency dispatch center. If you are on an active call, you must end it before calling 911.

NOTE: If you have enabled the Keypad Lock feature, you must unlock the phone’s keypad before any call can be made, including 911 emergency calls.

Receiving a Phone Call

Incoming calls are indicated by a ring, vibration or backlight illumination. Press  or any key on the keypad or press  under YES to answer the call.

Ending a Phone Call

Press  to hang up.

Recent Calls


The Recent Calls feature stores the phone numbers of the 20 most recent calls you have made and received, including private and talkgroup calls. You can access Recent Calls to:

- view your recent calls
- store numbers to the Phonebook
- delete recent calls
- call numbers on the Recent Calls list



NOTE: The Recent Calls list displays briefly after you end a call.


Viewing Recent Calls

To view your Recent Calls list:

1 From the **Ready** screen, press .

Or,




From the **Ready** screen, press  to scroll to **Recent Calls**. Press  under SELECT.

2 Press  to scroll the list of recent calls.



If the number of the recent call is stored in your Phonebook, the name associated with the phone number appears on the Recent Calls list.

For private calls, Talkgroup calls, and numbers stored in your Phonebook, an icon appears to the right of the name of number indicating the Phonebook type of the number used in the call. See “Phonebook Icons” on page 46 for more information about Phonebook types.

For phone calls, an icon appears to the left of the name or number indicating the type of call:



-  indicates an incoming call
-  indicates an outgoing call
-  indicates a missed call. (Missed calls appear on your Recent Calls list only if you have Caller ID.)

For private calls, an icon appears to the left of the name or number indicating the type of call:




-  indicates a Private Call
-  indicates a Group Call

Getting Detailed Information About Recent Calls

To get more information about a recent call:

- 1 From the **Recent Calls** screen, press  to scroll to the call you want more information on.
- 2 Press  under VIEW.



Or,

Press  to access the **Rec. Calls Menu**. Then press  to scroll to **View** and press  under SELECT.

The screen that appears displays information such as the name associated with the phone number of the recent call, the phone number, the date, time, and duration of the call.

Storing a Recent Call Number to the Phonebook

To store a number from the Recent Calls list to the Phonebook:

- 1 From the **Recent Calls** screen, press  to scroll to the number you want to store.
- 2 Press  under STORE.






This displays the Phonebook **Entry Details** screen with the # field filled in with the number of the recent call.
- 3 If you want to add more information to the Phonebook entry, follow applicable the instructions in “Adding Phonebook Entries” on page 51.

Calling From the Recent Calls List





See “Making Calls from the Recent Calls List” on page 61.

Deleting Recent Calls

To delete a recent call:

1	From the Recent Calls screen, press  to scroll to the call you want to delete.
2	Press  to access the Rec. Calls Menu .
3	Press  to scroll to Delete .
4	Press  under SELECT .
5	Press  under YES to confirm the deletion.


To delete all calls on the Recent Calls list:


1	From the Recent Calls screen, press  to access the Rec. Calls Menu .
2	Press  to scroll to Delete All .
3	Press  under SELECT .
4	Press  under YES to confirm the deletion.


Accessing Voice Record* From Recent Calls

You can access the Voice Record feature from Recent Calls and use it to record spoken messages that you can listen to later

**Optional feature. Please consult your service provider for availability of purchase..*

1	From the Recent Calls screen, press  to access the Rec. Calls Menu .
---	---

2 Press  to scroll to **New Voice Record**.

3 Press  under SELECT.


Hands-Free Speakerphone*

This feature provides the convenience of a hands-free solution, allowing you to hold impromptu meetings and place safer phone calls. The speakerphone option (SPEAKER) is available whenever you are on an active phone.

**Optional feature. Please consult your service provider for availability of purchase.*

NOTE: During speakerphone operation, you may either speak or listen, but you cannot do both at the same time.

To turn the speakerphone on:

While on an active call, press  under SPEAKER.

While speakerphone is on, **Spkrphone On** appears in the text display area.

To turn the speakerphone off:

Press  under SPEAKER.

Mute

Use the Mute feature to listen to incoming audio without allowing sound from your phone's microphone to be transmitted over the phone line.

To turn mute on:

Press  under MUTE.

While mute is on, UNMUTE appears as a display option.

To turn mute off:

Press  under UNMUTE.

Missed Calls

Missed calls are shown on the display screen with the missed call icon .




Call Timers

Call Timers measure the duration of your phone calls, Private or Group calls, and circuit data use, as well as the number of Kilobytes sent and received by your phone.


The **Call Timers** menu displays the following options:


- **Last Call** — displays the duration of your most recent phone call.
- **Phone Reset** — keeps a running total of your phone call minutes, until you reset it.
- **Phone Lifetime** — displays the total minutes of all your phone calls.
- **Prvt/Grp Reset** — keeps a running total of all of your Private and Group call minutes, until you reset it.
- **Prvt/Grp Lifetime** — displays the total minutes of all your Private and Groups calls.
- **Circuit Reset** — keeps a running total of all of your circuit data use, until you reset it.
- **Circuit Lifetime** — displays the total minutes of all of your circuit data use.
- **Kbytes Reset** — keeps a running total of the number of Kilobytes sent and received by your phone, until you reset it.


To view the **Call Timers** menu:



1	From the Ready screen, press  .
2	Press  to scroll to Call Timers .
3	Press  under SELECT.

To view or reset a Call Timers option:

1	From the Call Timers menu, press  to scroll to the Call Timers option you want to view or reset.
---	--

2 Press  under SELECT.

3 If the feature does not include an option to reset or you do not wish to reset the option, press  under DONE when you are finished viewing.

To reset a feature, press  under RESET. When the confirmation screen appears, press  under YES to confirm the reset.

NOTE: The values displayed by Call Timers are not intended for billing purposes. Call timers are estimates only.

Call Waiting


Call Waiting allows you to receive a second call while you are talking on the phone. You can switch between calls so you never have to miss a call. By default, Call Waiting is always on unless you turn it off for a specific call.


If you're on a call and you receive a second call, you will:

- Hear a tone; and
- See a message on your display informing you of another incoming call.





Accepting Calls

Press  under YES. The first call is placed on hold.


To end the active call and accept the second call, press .

Switching Between Calls

When you accept a second call while you are talking on the phone, your display shows the name or number of each call. An icon appears to the left of each name or number indicating that the call on hold  or active .

Press  under SWITCH to switch between calls.

Declining Calls










Press  under NO. If you subscribe to Voice Mail, the call will be forwarded to your Voice Mail box.

Ending the Active Call

Press .

Turning Off Call Waiting

If you do not want to be interrupted during a call, you can turn Call Waiting off prior to making/receiving a call.





- 1 From the **Ready** screen, press . Press  to scroll to **Settings**, and press  under SELECT.
- 2 Press  to scroll to **In Call Setup** and press  under SELECT.
- 3 Press  to scroll to **Call Waiting** and press  under CHANGE.
- 4 Press  to scroll to **Off** and press  under SELECT.

Call Waiting is now disabled for the next call. It will automatically reset to **On** when you hang up.


Call Hold

When you are on an active call, you can place the call on hold and make a second call.

To place an active call on hold:


- 1 Press  to access the **Calls Menu**.
- 2 Press  to scroll to **Hold**.
- 3 Press  under SELECT.
- 4 If you have not placed a second call, you can resume this call by pressing  under RESUME.

To place a second call while the first call is on hold:

Enter the second phone number you want to call and press  to place the second call.

Or, access the number from your Phonebook:

Press  and then press  to scroll to **Phonebook**.


Press  under SELECT.

To place the call, see “Making Calls from the Phonebook” on page 60.

To toggle between the two calls:

Press  under SWITCH.











To end the active call:

Press . The call on hold becomes active.

Three-Way Calling

Using Three-Way Calling, you can combine two ongoing phone calls into one conversation. While on an active call, you can make a second call and combine the two calls. When you place or receive a phone call, the 3-WAY option appears in the bottom right-hand corner of the display screen.

To make a three-way call:

1	Place or receive a phone call.
2	While in a call, press  to access Call Menu .
3	Press  to scroll to 3-WAY.
4	Press  under SELECT. The first call will be placed on hold.
5	Enter the second phone number you want to call and press  to place the second call. Or, access the number from your Phonebook: Press  and then press  to scroll to Phonebook . Press  under SELECT. To place the call, see “Making Calls from the Phonebook” on page 60.
6	After you reach the second individual, press  .
7	Press  to scroll to 3-WAY.
8	Press  under SELECT. Both calls will appear on your display.

Call Forwarding







Call Forwarding forwards calls to the number you designate. The following Call Forwarding options are available:

- **Off** — No calls are forwarded.
- **All Calls** — When this option is turned on, all calls will be sent automatically to a number you specify.
- **Detailed** — Choosing this option enables you to forward calls you missed to different numbers, or to Voice Mail, depending on why you missed each call:
 - **Busy** — your phone is engaged in other activities.
 - **No Answer** — you do not answer. The phone will ring 4 times before forwarding the call.
 - **Unreachable** — your phone is out of coverage or powered off.

NOTE: For you to receive Voice Mail messages, the All Calls option must be set to Off and the Detailed options must be set to your Voice Mail access number. Your Voice Mail access number is the first six digits of your 10-digit phone number followed by 6245. This is the default setting.




You can forward Line 1 and Line 2 independently.













When your phone is set to forward all calls, one of the following icons appears on the top row of your display screen to indicate the call forwarding option you have chosen:

Icon	Indicates...
	Line 1 is active; calls from Line 1 are being forwarded.
	Line 1 is active; calls from Line 2 are being forwarded.
	Line 1 is active; calls from Line 1 and Line 2 are being forwarded.
	Line 2 is active; calls from Line 1 are being forwarded.
	Line 1 is active; calls from Line 2 are being forwarded.
	Line 2 is active; calls from Line 1 and Line 2 are being forwarded.

NOTE: Call Forwarding must be set to Detailed with the Voice Mail access number to receive Voice Mail messages. This is the default setting.




Turning On Call Forwarding

- 1 Press  then press  to scroll to **Call Forward**.
- 2 Press  under SELECT.



3	At the Call Forward screen, the Forward field is highlighted. Press  under CHANGE.
4	Press  to scroll to All Calls .
5	Press  under SELECT.
6	Press  to scroll to the To field and press  under CHANGE.
7	<p>To activate a call forwarding number:</p> <p>If you have never used Call Forwarding before, the Forward screen appears. To enter a call forwarding number, type the number on your phone's keypad or press  under SEARCH to select from numbers stored in your phone. Press  under OK.</p> <p>Or,</p> <p>If you have used Call Forwarding before, the call forwarding number you last used is displayed. Press  under CHANGE to access the Forward screen.</p> <p>To forward your calls to this number, press  under OK.</p> <p>To forward your calls to a different number, press and hold  under DELETE to erase the displayed number. Type the new number on your phone's keypad or press  under SEARCH to select from numbers stored in your phone. Press  under OK.</p>

Your calls will now be forwarded to the number that you selected.

Turning Off Call Forwarding

1	Press  then press  to scroll to Call Forward .
2	Press  under SELECT.
	The Call Forward screen displays with the Forward field highlighted.

3 Press  to scroll to the **To** field and press  under CHANGE.

4 Press  to scroll to **Off** and press  under SELECT.




You will now receive all calls on your phone. When you are unavailable, your calls will be forwarded according to your Detailed call forwarding settings. By default, the Detailed option is set to forward your calls to Voice Mail.

Setting Call Forwarding to Voice Mail



In most cases, turning off Call Forwarding restores your ability to receive Voice Mail messages when you are unavailable (see “Turning Off Call Forwarding” on page 77). If you have completed those steps but are still not able to receive Voice Mail messages, you can reset Call Forwarding to Voice Mail.


For you to receive Voice Mail messages, Call Forwarding must be set to Detailed with your Voice Mail access number:

1 Press  then press  to scroll to **Call Forward**.

2 Press  under SELECT.

The **Call Forward** screen displays with the **Forward** field set to **Detailed**.

3 Press  to scroll to the **If Busy** field and press  under CHANGE.

4 The call forwarding number you last used is displayed. Press  under CHANGE. If this is your Voice Mail access number (the first six digits of your 10-digit phone number followed by 6245), go to step 7.


5 Press and hold  under DELETE to erase the displayed number.

6 Enter your Voice Mail access number.

Your Voice Mail access number is the first six digits of your 10-digit phone number, followed by 6245. (For example 7035556245.)

7 Press  under OK.

8 Repeat step 3 through step 7 for the **If No Answer** field and the **If Unreachable** field.

9 When finished, press  under EXIT.

Messages

The main topics covered in this section are listed below:


Message Center	Page 83
Voice Mail	Page 84
Text and Numeric Messaging	Page 86
Net Alert	Page 88
Using Your Phone as a Modem	Page 89

Message Center

The Message Center enables you to access all messaging services through one screen.


To access the Message Center:


If MMSG is one of your display options:

From the **Ready** screen, press  under MMSG.

If MMSG is not one of your display options:



1 From the **Ready** screen, press .

2 Press  to scroll to **Messages**.

3 Press  under SELECT.

The **Message Center** screen displays the number of messages you have in each message service — **Voice Mail** (Voice Mail), **Text Msgs** (Text and Numeric Messages), and **Net Alert**.

To access any message service:

- 1 From the **Message Center** screen, press  to scroll to the message service you want to access.
- 2 Press  under the display option on the right. This option varies depending on the message service selected.



Voice Mail

New Message Indicators


When you receive a new message:

- **New Voice Mail Message** will display on the screen.




- Your phone will alert you every 30 seconds until you press  under CALL or  under EXIT. (If you are on a call, your phone will alert you once during the call.)


Transferring Calls to Voice Mail


Press  under NO while your phone is ringing to transfer incoming calls directly to Voice Mail.

Using Voice Mail


Logging Into Voice Mail


- 1 From the **Ready** screen, press  under **MESG** to open up the Message Center screen.

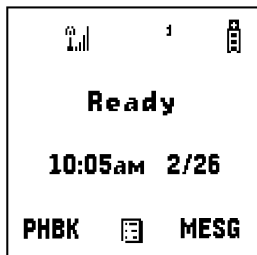

- 2 **Voice Mail** should be highlighted to indicate that it is selected. If it isn't highlighted, press  to scroll to the Voicemail field.

The number of new messages and the total number of messages are displayed.

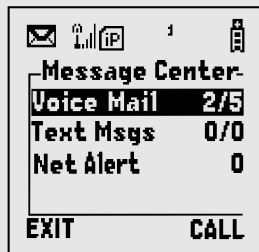

- 3 Press  under **CALL** to log into your Carrier's Voice Mail System. **Calling** displays as you are connected to the network.

Text and Numeric Messaging

With Text and Numeric Messaging, your phone will:

- Allow numeric messages up to 20 characters in length and text (alpha) messages up to 140 characters in length.
- Accept your messages even if you are unavailable, if your phone is turned off, or if you are busy on another call.
- Alert you of a new text or numeric message, even if you are on another call.
- Store a message if you are making a Private or Group call and deliver it upon completion of the call.
- Store the message if you are outside of the coverage area and deliver it as soon as you are back in a coverage area.
- Attempt continuous delivery of messages until successful, for up to 7 days.

With Text and Numeric Messaging, your phone will:

- Refer to text and numeric messages as Text Messages.
- Stamp the message with the time and date the message was left.
- Store up to 16 messages at a time, that will remain until you delete them.

NOTE: “Mail Waiting, Memory Full” displays when 16 message registers are full. (Messages must be erased before you can receive others.)



- Allow for “Auto Call Back” of a phone number that is included within a message, by pressing ☎. If the message contains two phone numbers, Auto Call Back will dial the last number.

New Messages Indicators

When you receive a new message:

- **New Text Message** will display on the screen.







- Your phone will alert you every 30 seconds until you press  under READ or  under EXIT. (If you are on a call, your phone will alert you once during the call.)



Accessing New Messages

When you receive a message, you can view it immediately or later:








View a Message Immediately

1	Press  under READ. The message displays.
2	If the message fills more than one screen, use  to scroll through the rest of the message.
3	Press  under SAVE to save the message. Or, Press  under DELETE to delete the message.

Viewing a Message Later

Press  under EXIT. The  icon will appear on the second line of the **Ready** screen to remind you that you have a stored message.

Viewing Stored Messages



1	In the Message Center screen, press  to scroll down to Text Msgs. The number of new messages and the total number of messages are displayed.
2	Press  under SELECT . The Text Msg Inbox screen appears.
3	Press  to scroll to the message you want to read and press  under READ .
4	If the message fills more than one screen, use  to scroll through the rest of the message.
5	Press  under SAVE to save the message. Or, Press  under DELETE to delete the message.


Net Alert

With Net Alert, you can send text and numeric messages in any of three ways:

- from your *i58sr* Phone
- from a web site provided by your service provider
- from any email application

When you receive a new message:

- Words will display on your phone's display screen indicating that you have a Net Alert message. (The exact words displayed are determined by your service provider.)
- Your phone will alert you every 30 seconds until your press  to access the message or press  to exit the screen.

If you choose to exit the screen and view the message later, the  icon will appear on the second line of the **Ready** screen to remind you that you have a stored message.

You can view new or stored Net Alert messages at any time by access the Message Center. For more information, see "Message Center" on page 83.

Using Your Phone as a Modem

NOTE: Some features may be network dependent or subscription only, and may not be available in all areas. Contact your service provider for more information.

You can use your *i58sr* phone as a modem for data transfer from your laptop, handheld device, or desktop computer. This is particularly useful when there is no wired phone line (wall jack) available.

You simply attach a data cable (available separately) to your phone and your computer. From that point, your phone is your modem. This allows you to send or receive time-critical information such as email, a field service report, or files. In addition, you can also send or receive faxes.

This type of wireless connection uses one of two types of data connection: circuit-switched data and packet data.

- Circuit-switched data is typically used for sending and receiving faxes and for transferring large files.
- Packet data is used for small file transfers such as email.

To use these services, you must install the iDEN Wireless Data Services software (available separately). For more information on setting up your computer and your *i58sr* phone for Packet and Circuit Data calls, see the *Wireless Data Services User's Guide* and contact your carrier.

TTY Users

You can use your phone and computer in TTY mode. Your computer screen and keyboard replace the standard TTY device. For more information, please see the *Wireless Data Services User's Guide*.

Private Calls

The main topics covered in this section are listed below:

Private Call	Page 91
Call Alerts	Page 93
Group Call	Page 98

Private Call

There are two ways to reach an individual using Private calls. You can enter the person's Private ID number then press the Push-To-Talk (PTT) button. Or, you can store the person's name and Private ID number, then recall the number from your Phonebook. Whether you dial the person's Private ID directly or store it in your Phonebook, you must have the individual's Private ID to use Private calls. To learn how to store names and numbers, see "Phonebook" on page 45.




USER TIP: To find out your own Private ID number, see "My Information" on page 30.


Making a Private Call from the Keypad



- 1 Enter the Private ID of the person you are trying to call.
- 2 Press and hold the PTT button on the side of the phone. Begin talking after the phone emits a chirping sound.
- 3 Release the PTT button to listen.

Making a Private Call from the Phonebook

If you have stored a person's Private ID in your Phonebook, you can use your Phonebook to make a Private call to that person:

- 1 From the **Ready** screen, press .
- 2 Press  to scroll to the **Phonebook**. Press  under SELECT.

- From the **Phonebook** screen, press  to scroll through the names until the desired name is highlighted.

If more than one number is stored for an entry, press  until  displays.


- Press and hold the PTT button on the side of the phone. Begin talking after the phone emits a chirping sound.



- Release the PTT button to listen.

Making a Private Call from the Recent Call List

- From the **Ready** screen, press .

- Press  to scroll to the **Recent Calls**. Press  under SELECT.

- From the **Recent Calls** screen, press  to scroll through the names and numbers until the desired name or Private ID number is highlighted.

If more than one number is stored for an entry, press  until  displays.

- Press and hold the PTT button on the side of the phone. Begin talking after the phone emits a chirping sound.

- Release the PTT button to listen.





Receiving a Private Call

When you receive a Private call, your phone emits a chirping sound and **Private in Use** appears on the screen. The Private ID or the name of the caller (if stored in your Phonebook) displays. Press and hold the PTT button to talk and release it to listen.

Storing Private IDs


For information store Private ID numbers to your Phonebook, see “Adding Phonebook Entries” on page 51.

For information on how to quickly store Private ID numbers, see “Storing Phone Numbers and Private IDs Quickly” on page 54.

1	From the Ready screen, press  .
2	Press  to scroll to the Recent Calls . Press  under SELECT.
3	From the Recent Calls screen, press  to scroll through the names and numbers until the desired name or Private ID number is highlighted.
4	Press and hold the PTT button on the side of the phone. Begin talking after the phone emits a chirping sound.
5	Release the PTT button to listen.

Making Calls Using Voice-Activated Dialing

If you have recorded a voice name for a Private ID in your Phonebook, Adding Phonebook Entries (see Page 48), you can use this voice name to call the number


1	From the Ready screen, press and hold  on the side of your phone until the Say Name Now screen appears.
2	Speaking into the microphone, say the voice name assigned to the Private ID you want to call.
3	Your phone will play the name back to you. Press the PTT button.

USER TIP: If you have difficulty making phone calls using a voice name, try assigning a longer voice name to the number. For example, if the voice name “Joe” fails to place a call to Joe Smith’s number, try assigning the voice name “Joe Smith” to the number.





Call Alerts




You can send a call alert, which lets recipients know that you would like to talk with them. When you send an alert, the recipient will receive a series of beeps and your name or Private ID will appear on the display.


Placing a Call Alert from the Keypad

- 1 Enter the Private ID of the person you want to call.
- 2 Press  under ALERT. The **Ready to Alert** screen displays.
- 3 Press and hold the PTT button until **Alert Successful** displays. The alert sounds intermittently until the user of the phone answers, queues, or clears the alert.

Placing a Call Alert from the Phonebook

- 1 From the **Ready** screen, press .
- 2 Press  to scroll down to **Phonebook**. Press  under SELECT.
- 3 From the **Phonebook** screen, press  to scroll to the Phonebook entry for the person you want to alert.



If more than one number is stored for an entry, press  until  displays.
- 4 Press  under ALERT. The **Ready to Alert** screen appears.



The screenshot shows the 'Ready to Alert' screen with the following text: 'Ready to Alert', 'Nick', '2346', 'Push PTT', and 'CANCEL'. At the top, there are icons for signal strength, IP, and a battery level indicator.
- 5 Press and hold the PTT button until **Alert Successful** displays. The alert sounds intermittently until the user of the phone answers, queues, or clears the alert.



Ready to Alert Screen

Ready to Alert is used to confirm your request for the alert and to prompt you to push the PTT button:


- If you press the PTT button, the call alert is sent, and the phone displays the **Recent Calls** screen.
- For call alerts placed from the keypad, pressing  under CANCEL causes the phone to return to the **Dial** screen with the previously entered number displayed.
- For call alerts placed from the Phonebook, pressing  under CANCEL causes the phone to return to the **Phonebook** screen.
- If you do nothing, the phone will revert to the **Ready** screen.

Receiving Call Alerts




When you receive a call alert, your phone emits a chirp and displays the name or number of the caller. You can answer, queue, or clear the call alert:

- To answer a call alert, press the PTT button.
- To queue a call alert, press  under QUEUE.
- To clear the call alert, press  under CLEAR.

Call Alert Queue





Call alert queuing enables you to save call alerts in a list, or queue. To store a call alert in the call alert queue, press  under QUEUE when you have received an incoming call alert.

Accessing the Call Alert Queue

- | | |
|---|--|
| 1 | From the Ready screen, press  . |
| 2 | Press  to scroll to Call Alert . |
| 3 | Press  under SELECT. The Call Alert Queue screen displays. |






Viewing Call Alert Date and Time

To find out the date and time a call alert was received:


1	From the Call Alert Queue screen, press  to scroll to the desired call alert.
2	Press  to access Call Alert Menu .
3	Press  to scroll to View .
4	Press  under SELECT .


Sorting Call Alerts

To sort your call alerts by the order they were received:

1	From the Call Alert Queue screen, press  to access Call Alert Menu .
2	Press  to scroll to Sort By .
3	Press  under SELECT .
4	Press  to scroll to First on Top or Last on Top .
5	Press  under SELECT .

Responding to a Call Alert From the Queue

1 From the **Call Alert Queue** screen, press  to scroll to the call alert you want to respond to. You can respond by sending a call alert or placing a Private call.

2 To send a call alert, press  under ALERT and then press the PTT button.


Or,


To place a Private call, press the PTT button.


The call alert will be removed from the queue.

Deleting a Call Alert From the Queue


To delete a call alert from the queue:

1 From the **Call Alert Queue** screen, press  to scroll to the entry you want to delete.


2 Press  to access **Call Alert Menu**.


3 Press  to scroll to **Delete**.



4 Press  to SELECT.

5 When the confirmation screen appears, press  under YES to delete all call alerts.

To delete all call alerts from the queue:

1 From the **Call Alert Queue** screen, press  to access **Call Alert Menu**.

2 Press  to scroll to **Delete All**.







- | | |
|---|--|
| 3 | Press  to SELECT. |
| 4 | When the confirmation screen appears, press  under YES to delete the entry. |

Group Call

In a Group call, you can communicate instantly with a group of people that you have previously set up as a Talkgroup. Your sales representative must set up your Talkgroups by providing you with a Talkgroup number for each Talkgroup. After you have the number, you can assign each Talkgroup number a name and store it in your phone (see “Naming a Talkgroup” on page 98).

Talkgroups appear on your display as numbers or programmed names such as **SALES TEAM** or **Talkgrp 5**. Your phone can store up to 30 Talkgroups. You can initiate or participate in Group calls for Talkgroups that have been created for you and that are stored in your Phonebook.

Naming a Talkgroup

- | | |
|---|---|
| 1 | From the Ready screen, press  . |
| 2 | Press  to scroll to Phonebook . |
| 3 | Press  under SELECT. |
| 4 | Press  to scroll to New Entry . |
| 5 | Press  under SELECT. The Entry Details screen displays. |
| 6 | Enter the information as you would any other Phonebook entry. (See “Adding Phonebook Entries” on page 51.) When you get to Type , make sure that you select Talkgroup . |
| 7 | Enter the Talkgroup name or number. |
| 8 | When you have completed the Entry Details , press  under DONE. |

Making a Group Call from the Keypad

- 1 Press **#** and then enter the Talkgroup number of the group that you want to call.
- 2 Press and hold the PTT button on the side of the phone or press **⦿** under ALERT, and speak. The phones of individuals in the Talkgroup will emit a chirping sound to alert them that someone is calling.
- 3 Release the PTT button to listen.

Making a Group Call from the Phonebook

- 1 From the **Phonebook** screen, press **⦿** to scroll to the name of the Talkgroup you want to call.
- 2 Press and hold the PTT button on the side of the phone or press **⦿** under ALERT, and speak. The phones of the people in the Talkgroup will emit a chirping sound to alert them that someone is calling.
- 3 Release the PTT button to listen.

Making a Group Call from the Recent Calls List

- 1 From the **Recent Calls** screen, press **⦿** to scroll to the name of the Talkgroup you want to call.
- 2 Press and hold the PTT button on the side of the phone or press **⦿** under ALERT, and speak. The phones of individuals in the Talkgroup will emit a chirping sound to alert them that someone is calling.
- 3 Release the PTT button to listen.

Receiving a Group Call

When you receive an incoming Group call, your phone emits a chirp.


To respond to a Group call:

- | | |
|---|--|
| 1 | Wait for the caller to finish speaking. |
| 2 | Press and hold the PTT button to talk. Release the PTT button to listen. |


Joining a Talkgroup

To receive Group calls from a Talkgroup, you must first join the Talkgroup. You may only belong to one Talkgroup at a time. When you join a new Talkgroup, you no longer belong to your previous Talkgroup.



To join an ongoing Talkgroup:

- | | |
|---|---|
| 1 | Using the keypad, press  then enter the Talkgroup number.

Or,

From the Phonebook screen, press  to scroll to the name of the Talkgroup you want to call.






Or,

If the Talkgroup you want to join is on your Recent Call list, go to the Recent Call screen and press  to scroll to the name of the Talkgroup you want to call. |
| 2 | Press  under JOIN. |


Group-Silent Programming


Group-Silent programming enables you to silence incoming Group alerts and communication.

Turning Group-Silent On or Off

- | | |
|---|--|
| 1 | From the Ready screen, press  . |
| 2 | Press  to scroll to Settings . Press  under SELECT. |
| 3 | Press  to scroll to Tkgrp Settings . Press  under SELECT. |

4 With the **Silent** field highlighted, press  under CHANGE.

5 Press  to scroll to **On** or **Off**.

6 Press  under SELECT.

