

Motorola

iDEN®

Digital Multi-Service Phone

r750plus User's Guide

September 02



69P2966C35-O

Table of Contents

Table of Contents.....	iii
Welcome	1
TTY Access	2
Large-Print Manuals	2
Features of your <i>r750plus</i> Phone.....	2
Attaching and Charging the Battery	4
Attaching the Battery.....	4
Detaching the Battery	4
Charging the Battery	4
Battery and Charging Status.....	4
Turning On Your <i>r750plus</i> Phone	5
Turning Off your <i>r750plus</i> Phone	5
Connecting the Supplied Antenna.....	6
Keypad Lock	6
Activating Keypad Lock	6
Receiving Incoming Calls	6
Receiving New Mail Messages	7
Receiving Voice Mail	7
Receiving Private (Two-Way Radio) Calls.....	7
Deactivating Keypad Lock.....	7
Display Icons	8
About Modes and Menus.....	9
Setting the Time and Date	9
Changing the Display Language	11
Selectable Backlight Timer	11
Making Phone Calls	12
Using Other Dialing Methods	12
Scroll	12
Speed Dial	12
Automatic Redial.....	13
Last Number Redial.....	13
Turbo Dial® Key.....	13
Plus Dialing	14
Hands-Free Speakerphone.....	14
Receiving a Phone Call	14
Ending a Phone Call	14
What Is My Phone Number?	15

r750 plus

VibraCall® Alert	15
Selecting VibraCall Alert for All Incoming Calls and Messages	15
Selecting VibraCall Alert for Individual Services	16
Setting the Ringer Volume.....	16
Setting a Ring Style for the Alternate Line	16
Additional Phone Services	17
Call Waiting	17
Turning Off Call Waiting	17
Call Hold.....	17
3-Way Calling.....	18
Alternate Phone Line	18
Setting the Active Line	18
Receiving a Call.....	19
Receiving a Call on Your Alternate Line	19
Receiving a Phone Call Using Speakerphone.....	19
Missed Call Indicator.....	19
Call Forwarding	20
Unconditional Call Forwarding	20
Conditional Call Forwarding	20
Creating, Editing, and Using Stored Lists.....	22
Combined Phone Number and Private ID List	22
Entering Numbers.....	22
Entering Names	22
Storing Names and Numbers	23
Pause Digit Entry	24
Editing and Erasing Phone List Entries	24
Editing and Erasing Private ID List Entries	25
Last 10 Calls Received and Sent Lists.....	26
Quickstore of Phone Numbers.....	26
Making Private Calls.....	28
Scroll	28
Name Search.....	28
Receiving a Private Call	28
Private/Group Mode Speaker	28
Call Alert.....	29
Selecting a Call Alert Tone Style	29
Setting an Alert Tone Style.....	29
Sending a Call Alert.....	29
Receiving a Call Alert.....	29
Call Alert Queuing.....	30
 www.motorola.com/LMPS/iDEN/products/r750+/r750+.HTML	

Table of Contents

Clearing or Queuing a Call Alert.....	30
Responding to a Queued Call Alert.....	30
Quickstore of Private IDs	31
Storing Your Private ID.....	31
Making Group Calls.....	32
Receiving a Group Call	32
Adding and Storing a Talkgroup	32
Area Selection	33
Private/Group Mode Speake	33
Advanced Features	34
Multi-Simultaneous Talk Group Scan.....	34
Entering Group Mode.....	34
Initiating a Group Call.....	35
Responding to a Secondary Talkgroup	35
Turning Scan On and Off	36
Aliasing Talkgroup Mode	36
Talkgroup Mode Selection by Direct Entry	37
Talkgroup Mode Selection by Memory Scroll.....	37
Emergency Group Call.....	37
Placing an Emergency Group Call.....	37
Canceling an Emergency Group Call.....	38
Receiving an Emergency Group Call.....	38
Receiver Operations During an Emergency Call	38
Status Message	38
Entering the Status Message Function	39
Selecting a Status Message with Direct Entry.....	39
Selecting a Status Message Using Memory Scroll.....	40
Selecting a Target by Direct Entry	40
Selecting a Target by Memory Scroll.....	40
Selecting a Target by Alpha Search	40
Sending a Status Message	41
Exiting the Status Message Function	41
Receiving a Status Message	41
ID List Programming	41
Isolated Site Operation	42
Entering ISO 42	
Initiating a Group Call	43
Exiting ISO.....	43
Other Operations	43
Using Mail Services	44

r750 plus

Net Mail	44
Voice Mail	45
Alert Receipt During Phone Call	45
Message Mail	46
Saving and Erasing Mail	46
Auto Call Back	47
Mail Memory Full	47
Using Your Phone as a Modem	48
TTY Users	48
Setting Programming Menus	49
About Error Codes	54
Optional Accessories	56
Batterie	56
Charging the Battery	56
Battery Operating Instructions	56
Rapid Travel Charger	57
Using the Rapid Travel Charger (110V/220V/240V)	57
Rapid Travel Charger Operating Specifications	57
Vehicular Battery Charger	58
Using the Vehicular Battery Charger	58
Removing the Vehicular Battery Charger	58
Operating Specifications	58
Desktop Dual-Pocket Charger	59
Charging a battery	59
Data Operation	59
Inserting and removing a battery from the rear pocket	60
Desktop Charger Status	60
Desktop Charger Troubleshooting	60
Audio Adapter	62
Using the Audio Adapter	62
Attaching/Detaching the Earpiece Microphone or Headset	62
Removing the Audio Adapter	63
Battery Belt Clip	63
Using the Battery Belt Clip	63
Leather Carry Case	63
Hard-Install Car Kit	64
Remote Speaker/Microphone	65
Attaching and Removing the Swivel Clip	65
Connecting the Remote Speaker/Microphone to the Portable	65
Operation	66

www.motorola.com/LMPS/iDEN/products/r750+/r750+.HTML

Table of Contents

Product Safety and RF Exposure for Portable Radios 67

- Compliance with RF Energy Exposure Standards 67
- Federal Communication Commission Regulations 67
- Electro Magnetic Interference/Compatibility 69
 - Facilities 69
 - Aircraft 69
- Medical Devices 69
 - Pacemakers 69
 - Hearing Aids 70
 - Other Medical Devices 70
- Driver Safety 70
- Operational Warnings 71
 - For Vehicles with an Air Bag 71
 - Potentially Explosive Atmospheres 71
 - Blasting Caps and Blasting Areas 71
- Operational Cautions 72
 - Antennas 72
 - Batteries 72

Intrinsically Safe Radio Information 73

- FMRC Approved Equipment 73
- Repair of FMRC Approved Products 75
 - Repair 76
 - Relabeling 76
 - Do Not Substitute Options or Accessories 76

Accessory Safety Information 77

Warranty 79

Patent & Trademark Information 87

Owner’s Information 91

Important!
Be sure to read **Product Safety and RF Exposure for Portable Radios** on page **67** before using your phone.

DECLARATION OF CONFORMITY

Per FCC CFR 47 part 2 Section 2.1077(a)



Responsible party name: Motorola Inc.
Address: 8000 West Sunrise Boulevard,
Plantation, FL 33328 USA
Phone number: 1 (800) 453-0920

Hereby declares that the product:

Product name: r750plus
Model Number: H44WCH6RJ6AN, H44WAH6RJ6AN

Conforms to the following regulation:

FCC Part 15, subpart B
Class B Digital device

Date: September 15, 2002

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Welcome

Congratulations on purchasing your Motorola iDEN *r750plus* data-capable, multi-service, digital portable phone. Superior features and state-of-the-art technology help to keep you in constant touch with all your business and personal contacts.

Your *r750plus* phone has so many new and exciting features! With wireless access to the Internet, you can check on the latest news and weather, get stock quotes, send and receive e-mail, and download information from your computer. A missed-call indicator lets you know that you received calls while you were away.

And new ease-of-dialing features, such as Turbo Dial® key and the Last 10 Calls Received and Sent lists, help you to quickly make and return phone calls.

NOTE: Some features may be network dependent or subscription only, and may not be available in all areas. Contact your service provider for more information.

The *r750plus* phone offers:

- Phone Mode—for cellular phone operation.
See Page 12.
- Private Mode—for two-way radio use to talk with one person.
See Page 28.
- Group Mode—for two-way radio use to talk with several people. *See Page 32.*
- Net Mode—for accessing the built-in microbrowser.
See the Net Mode User's Guide.
- Advanced Features—for monitoring multiple talkgroups, emergency calls, status messages, and Isolated Site Operation (ISO) functions.
Dependent on Network and phone availability. See Page 34.
- Mail Services—for message, voice, and net mail. *See Page 44.*
- Fax and Data Transfer—for circuit data faxes and file transfers. *See Page 48.*

NOTE: This manual describes the features of your phone as they were set up at the factory. However, your carrier or your organization may have changed or added features. For more information, check with your carrier or your organization.

This manual provides information about how Net Mode works with various features of your *r750plus* phone. For information on using the microbrowser and other components of Net Mode, see the *Net Mode User's Guide*.

r750 plus


TTY Access

TTY access is available on your phone. See the *Wireless Data Services User's Guide* for complete instructions.

Large-Print Manuals

A large-print version of the phone's *User's Guide* is available. For more information on Motorola products for people with disabilities, contact Motorola Customer Care at SSC#(800) 323-9949.

Features of your r750plus Phone

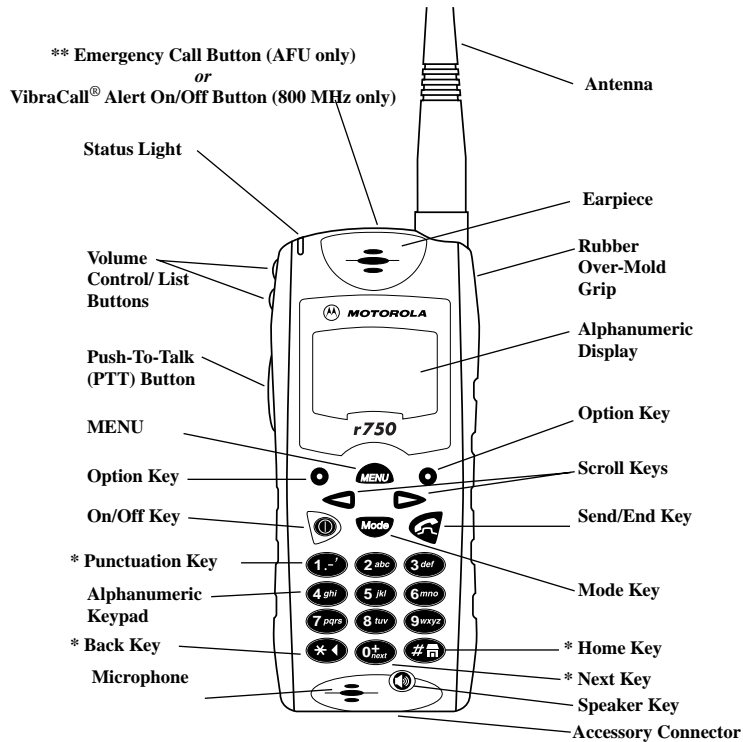

* These features are available in the Net Mode browser.

** Emergency Call Key is orange; VibraCall® Alert key is black (800 MHz only)

NOTES: Remove the plastic film lens protector from the display before you use your phone for the first time.
Some keys have multiple uses. For more information, see the Net Mode User's Guide.
Press any key or button to turn on the keypad backlight.


Antenna	Install for optimal signal.
Earpiece	Hold to your ear to hear the other party.
Volume Control/ List Buttons	Press to adjust volume levels in Phone, Private, and Group modes.
Push-To-Talk (PTT) Button	Transmit a Private or Group Call, or a Call Alert. Press and hold the PTT button to talk; release it to listen.
Mode Key	Press to change modes.
Emergency Call Button or VibraCall® Button (800 MHz only)	Emergency Call Button: Activates Emergency Group Call feature (see “ <i>Emergency Group Call</i> ” on page 37). VibraCall Button: Turns on/off the VibraCall Alert feature (see “ <i>VibraCall® Alert</i> ” on page 15).
On/Off Key	Press and hold to turn your <i>r750plus</i> phone on or off.
Status Light	Shows the phone’s status. See <i>Table 2 on page 5</i> for more information.
Punctuation Key	Add punctuation in the Net Mode browser (within T9™ Text Input).
Back Key	Return to the previous browser screen.
Microphone	Use to speak during calls.
Rubber Over-Mold Grip	Hold the phone more securely and comfortably with the rubberized grip.
Alphanumeric Display	View up to four lines (12 characters per line) or six lines (16 characters per line) on the display.
MENU Key	Press to scroll through menu options.
Scroll Keys	Press the left key to scroll backward or the right key to scroll forward through menu options and lists.
Option Keys	Press the right or left option key to select the menu option that appears in the display directly above the key.
SEND/END Key	Press to answer an incoming Phone call. After entering a phone number, press to begin an outgoing Phone call or to redial the entered phone number. Press to end Phone calls.
Alphanumeric Keypad	Enter telephone numbers, Private Call IDs, and alphanumeric characters.
Next Word Key	Press to display the next word choice in the browser (within T9 Text Input).
Home Key	Press to return to the browser Home menu.
Speaker Key	Press to hear incoming calls through the earpiece or the speaker during private and group conversations.
Accessory Connector	Connect battery charging, audio, and data accessories.

r750 plus

Attaching and Charging the Battery


Attaching the Battery

1. Insert the battery bottom-end first into the battery guide holes on the housing of the phone.
2. Push the battery forward into the housing of the phone until it securely locks.

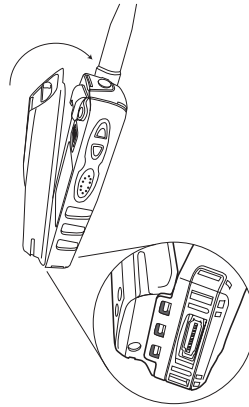

Detaching the Battery

1. Press down on the battery release button.
2. Pull on the battery and remove it.

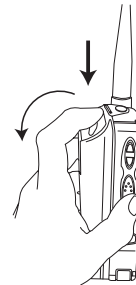


Charging the Battery

You should charge your *r750plus* phone battery overnight before initial use. This allows your battery to achieve its maximum capacity and life.

Connect the charger to the bottom of the *r750plus* phone.

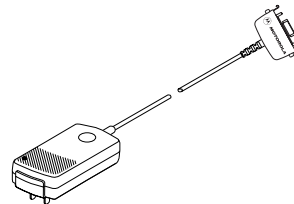


NOTE: For more information on charging the battery, see "Batteries" on page 56.




Battery and Charging Status

A low battery is indicated by a short, chirp-like sound through the speaker. The battery strength indicator icon shows the remaining charge in your battery. Three bars indicates full charge. As the charge is reduced through use, the bars progressively reduce from three to two bars, then one bar, then disappear. The indicator flashes when you have less than five minutes of talk time (see Table 1).

Table 1: Battery Charging Status


					
	Icon Flashes				
Charging	Low Battery	0-30%	31-60%	61-90%	91-100%
Discharging	Low Battery	0-10%	11-40%	41-70%	71-100%

Turning On Your *r750plus* Phone

Press and hold the On/Off button  until a set of icons appears on your display. Next, a welcome message displays while the *r750plus* phone connects to your carrier’s network.

The Status Light (LED) indicator on the *r750plus* phone shows the service state. See *Table 2*.

Table 2: LED Indicator

Status Light Indicator	<i>r750plus</i> phone status
Flashing Red	Registering—your <i>r750plus</i> phone is signing on to your carrier’s network. Please wait.
Solid Red	No service—your <i>r750plus</i> phone cannot sign on because it is outside your carrier’s service area.
Flashing Green	In service—your <i>r750plus</i> phone is ready to use. You can now place and receive calls.
Solid Green	In use—your <i>r750plus</i> phone is currently being used. To make sure that you ended the last call, press  .

Turning Off your *r750plus* Phone


- a. Press and hold the On/Off button  until you see the message “Powering Off”.

r750 plus

Connecting the Supplied Antenna

Turn your r750plus phone off before installing or removing the antenna.

Insert the bottom of the antenna into the screw-in base on the top of the r750plus phone. Turn clockwise by hand until snug. Do not force.

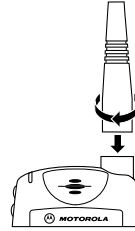

NOTE: Connect only the supplied antenna NUF5075 (for 800 MHz) or NUF5038 for (900 MHz) to the antenna connector on your r750plus as it is the only one that has been tested for compliance with Federal Communications Commission requirements and authorized by them for use on this radio product. Please see “Product Safety and RF Exposure for Portable Two-Way Radios” on page 67 of this manual for more information.



Keypad Lock


The r750plus phone includes a Keypad Lock feature that enables you to quickly lock the phone’s keypad to avoid inadvertently pressing keys or placing calls. Once Keypad Lock is activated, you can only perform the following tasks (unless you receive an incoming call, page, etc.):

- Turn your phone On/Off
- Unlock the keypad

Activating Keypad Lock

Before locking your phone’s keypad, you may want to read this entire section to learn how to respond to incoming calls, pages, etc.


From the **Phone Ready** screen, simultaneously press  and . The message **Keypad Locked** displays on your phone.

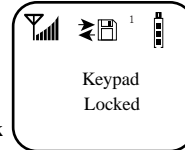


NOTE: Whenever a key is pressed, while in Keypad Lock mode, the “Keypad Locked” message displays as a reminder.

Receiving Incoming Calls

When you receive an incoming phone call, keypad lock will be temporarily disabled. You may perform the following:


Press  to answer the call. Or,

- Press  under “End” to send the call to voice mail and reactivate keypad lock.

Receiving New Mail Messages

When you receive a new mail message (see “Using Mail Services” on page 44 for more information), the keypad lock will be temporarily disabled. You may perform the following:

- Press **⏪** under “Later” to return to **Phone Ready** and reactivate the lock. Or,
- Press **⏪** under “Now”. Press **⏪** under “Read”. Press **⏪** under “Save” or “Erase”. Once you have finished, press **⏪** under “Exit” to return to **Phone Ready** and reactive the lock.

NOTE: If you have disabled the Message Mail Notification feature, only the  icon will display. You will not receive the read Now/Later options.

Receiving Voice Mail

When you receive a new voice mail (see “Voice Mail” on page 45) keypad lock will be temporarily disabled. You may perform the following:

- When **New Voice Mail Waiting** displays, press **⏪** under “Exit” to return to **Phone Ready** and reactivate the lock. Or,
- Press **⏪** under “Dial” to access Voice Mail service. Once you have finished, press **#m** to exit Voice Mail, return to **Phone Ready** and reactivate the lock.


NOTE: If you have disabled the Message Mail Notification,  icon will display, however, “New Voice Mail Waiting” will not appear.

Receiving Private (Two-Way Radio) Calls

When you receive an incoming private (two-way radio) call (see “Receiving a Private Call” on page 28) the phone will automatically activate the applicable mode. Once the call is terminated and the Display Timer has expired, the phone will return to **Phone Ready** and reactivate the lock.

Deactivating Keypad Lock

From the **Phone Ready** screen, simultaneously press ***⏪** and **#m**. The message **Keypad Unlocked** displays on your phone.

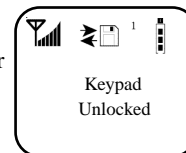

Display Icons

Display icons appear on the screen to inform you of existing conditions. See the following list.

The following icons may appear along the top of the display.



Signal Strength Indicator
Shows the signal strength. Six bars indicate the strongest signal. Calls and messages may not be sent or received in no-signal areas.



Battery Strength Indicator
Shows the remaining charge in your battery. Three bars show full charge. The indicator flashes when you have less than five minutes of talk time remaining.



Voice Mail
Indicates that unplayed messages are waiting in your voice mail box.



New Message Mail
Indicates that you have new text messages in your mail box.



Unread Message Mail
Indicates that you have unread Message Mail.



Vibrate All
Indicates that the Vibrate All option is turned on. You will not hear a ring tone.



Call Forward
Indicates that incoming phone calls are being forwarded.



Active Line Indication
Displays the active phone line (1 or 2).



Private/Group Speaker
Indicates that the Private/Group speaker is off. You will hear calls through the earpiece.



Packet Data
Indicates packet data registration. The blinking arrows indicate send and receive activity. For more information, see the Wireless Data User's Guide.

Some of the following icons may appear in the browser.





Secure Packet Data Connection
Indicates that your packet data information is encrypted during transmission.



More Information
Indicates that there is more text to read above, below, or above and below the current screen.


About Modes and Menus

Modes and menus are the navigational tools, providing access to the various features of your *r750plus* phone. Pressing the Mode key  takes you through the mode choices. Pressing the Menu key  takes you through the menu options within each mode.



There are four modes:

- **Phone**—for cellular phone calls. See Page 12.
- **Private**—for one-to-one radio calls. See Page 28.
- **Group**—for radio calls with all individuals in a designated talkgroup. See Page 32.
- **Net**—for browser use. See the *Net Mode User's Guide*.

To change modes:

Press  until you see the desired mode.

To select menu options:

Press  until you see the desired menu option, then press  under the desired menu option to select it.

Setting the Time and Date

If your carrier provides this option, you can set your phone to display the current time and date. Unless the phone is turned off, it continues to display the current time during a loss of service.

You have a choice of a 12- or a 24-hour clock format. See Table 3.

NOTE: When this feature is activated, your phone automatically displays local time.

Table 3: Time Display Options

12-Hour Display	24-Hour Display
12:00a	00:00
6:25a	06:25
12:00p	12:00
6:25p	18:25

You have a choice of either a MM/DD (month/day) or a DD/MM (day/month) date format. See Table 4:.

Table 4: Date Display Options

Date	Month/Day Format (MM/DD)	Day/Month Format (DD/MM)
January 2nd	01/02	02/01
January 31st	01/31	31/01
October 9th	10/09	09/10
December 31st	12/31	31/12

If your carrier activates the time and date, they are displayed on the third line in all modes (Phone, Private, Group, Net). The time of day is also shown during an active Phone call. The time and date are not displayed in Group mode when you select an Area option.




To set the time and date format:

1. Press ***←**, **#**, **7 pqr**, **1**.
2. Select “Ok”. The Time/Date screen displays.



The default (preset) time and date format that displays depends on your carrier. You can accept the default format or select an alternate format.

3. Press **r** until you see the Time Format screen.
4. Do one of the following:
 - To use the 12-hour format, go to the next step.
 - To use the 24-hour format, select “24hr”. (See Table 3 on page 9.)
5. Press **▶** until you see the Date Format screen.
6. Do one of the following:
7. To use the MM/DD format, select “Exit”.
8. Or to use the DD/MM format, select “DD/MM”, then “Exit”. (See Table 4 on page 10.)

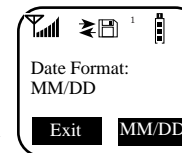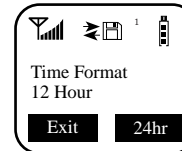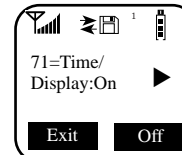

9. Select "Exit" again to leave the Time/Date Programming option. The Ready screen for each mode (Phone, Group, Private, and Net) now displays the selected time and date formats.

Changing the Display Language

You can customize your *r750plus* phone to display one of four languages: English, French, Spanish, or Portuguese.


To change the displayed language:

1. Press ***↓**, **#**, **7 pqr**, **0+next**.
2. Select "Ok".

Press **←** or **→** to scroll through the language options.

Selecting "Exit" at any time retains the current language selection.

3. When the desired language appears on your display, select "Ok". The displayed text immediately changes to the selected language.
4. Select "Exit".

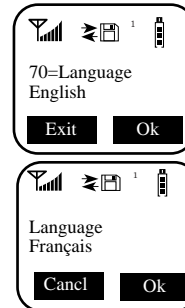

The language that you select will be the displayed language.

Selectable Backlight Timer

Your phone's backlight is what illuminates the display when you receive or make calls. Through your Programming Menu (*,#,16), you can customize the amount of time that your backlight remains illuminated: 0, 10, 20, or 30 seconds. By choosing zero (0) seconds, all keypad backlighting, and the Status Light, *remains off* (is disabled). This means, when choosing 0 seconds, the *r750plus* phone enters *completely dark* mode. See "Setting Programming Menus" on page 49 for more information.


Making Phone Calls



In addition to making and receiving phone calls in Phone mode, you can forward calls, use call waiting, put calls on hold, and create and use stored lists. Phone Ready is the main screen.

NOTE: See “Additional Phone Services” on page 17 for more information.

You can place a call by entering the phone number on the keypad.

1. From the “Phone Ready” screen, using the keypad, enter the desired number.

If you make a mistake, press  once to move back one digit, or select “Cancl” to start over.





2. Press  to place the call.
3. To end the call, press .






Using Other Dialing Methods

To use other dialing methods such as *Scroll*, *Speed Dial*, or *Name Search*, names and numbers must be programmed into your phone. See “Creating, Editing, and Using Stored Lists” on Page 22.

Scroll

1. From the Phone Ready screen,  or  to scroll backward or forward through the stored list of numbers and names.
2. Press  to place the call.
3. To end the call, press .

Speed Dial

1. From the Phone Ready screen, press  until you see the “Spd#” option on the last line of your display.
2. Select “Spd#”.
3. Enter the assigned speed-dial number (1-100). You will see the stored name and phone number associated with the speed dial number.
4. Press  to place the call.
5. To end the call, press .

Name Search

1. From the Phone Ready screen, select “Name”.
2. Using the keypad, enter the first letter of the desired name, for example, to search for the name Bob:
3. Enter “B” by pressing **2+*** twice.
4. Press **▶** to scroll through all the names starting with “B” until you see “Bob”.
5. Press **☎** to place the call.
6. To end the call, press **☎**.

Automatic Redial

If you receive a “System Busy, Try Later” message, press **☎** to have your phone automatically redial the number. You will hear a ring-back tone when the call is successful.

Last Number Redial

To redial the last number that you called, press **☎**.

Turbo Dial® Key

Turbo Dial key enables you to quickly place a phone call by simply pressing and holding the numeric key on the keypad that corresponds to the stored entry in your Phone list directory. There are nine Turbo Dial positions, 1 through 9.

NOTE: If you are on a Phone call, place the call on hold before using Turbo Dial key.

From the Phone Ready screen:



1. Select one of the first nine entries in the Phone list using key numbers 1 through 9. For example, press 1 for Turbo dial **1+***. *Keypad number 0 is not available for Turbo Dialing.*
2. Press and hold the desired key for two seconds to activate the Turbo Dial key. The phone begins to dial the number and “Phone Ready” changes to “Phone-In Use”.



r750 plus

Plus Dialing

This feature enables you to place an International call from any country -- without entering the local international access code.

1. Press and hold  for two seconds. A “0” appears, then changes to a “+” that precedes the appropriate international access code needed to place the call.
2. Enter the international telephone number.
3. Press .

Hands-Free Speakerphone


The r750plus phone provides the convenience of a speakerphone for holding impromptu meetings or listening to your voice mail messages.


During speakerphone operation, you may either speak or listen, but you cannot do both at the same time.


To use the speakerphone:

1. Select “Spkr.” The “Spkr” option flashes while the speakerphone is on.
2. Place the phone 15-30 inches (38-76 cm) away from you. In a noisy environment, you may want to move the r750plus phone closer to you for better transmission.

NOTE: If there is background noise in your area, you may have difficulty hearing a caller’s voice or messages. To resolve this problem:




(1) Press  until you see the “Mute” menu option.


(2) To listen, press  under “Mute”. The display changes from “Phone-In Use” to “Phone-Mute”, indicating that the microphone is muted.

(3) To speak, press  under “Mute” again. The display changes from “Phone-Mute” to “Phone-In Use”, indicating that the microphone is on.


While the microphone is muted, you can hear incoming audio, but a caller cannot hear any speech coming from your r750plus phone.

Receiving a Phone Call

Press one of the following keys: , or , or , Or press any numeric key (0 through 9). To activate the speakerphone option, select “Spkr.”

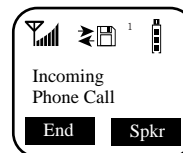

Ending a Phone Call

Press .

What Is My Phone Number?

Press , , , to display your own phone number.



VibraCall® Alert

VibraCall Alert is a vibration alert system that notifies you of incoming Messages, Phone, Private, Group, and Data calls. You can set a vibration alert for all services or for individual services.

When you set vibration alerts, they are set only for the current line. If you have a second phone line, you must select that line and repeat the procedure for selecting all services or selecting individual services to vibrate.

The alert choices are:



- Vibe All—produces a vibration alert for all incoming calls and messages.
- Phone Vibrate—produces a vibration alert for incoming phone and circuit-data calls.
- Phone Vibrate/Ring—produces a vibration alert followed by a ring tone for phone and circuit-data calls.
- Mail Vibe—produces a vibration alert for mail messages and net alerts.
- Group/Prvt Vibe—produces a vibration alert for incoming group and private calls.

NOTE: If VibraCall Alert is set for incoming calls and messages, the power-up sequence includes a brief vibrate cycle.

Selecting VibraCall Alert for All Incoming Calls and Messages

Advanced Feature Units (orange button on top of housing): To set a vibration alert for all incoming calls and messages:

1. Press , , .
2. Select “All”. You will receive a brief vibration alert. After you set the alert, the display returns to the previous mode and (the Vibrate All icon) appears at the top of your display.



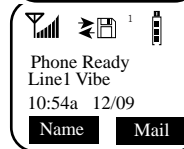
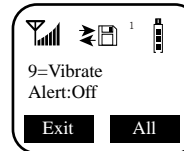


All Other (Non-Advanced Feature 800 MHz units) Units (black button on top of housing): Perform the same steps as described above, or press the black button on top of the *r750plus* phone.

Selecting VibraCall Alert for Individual Services

To set a vibration alert for specific phone or mail services:


1. Press ***1**, **#1**, **9**.
2. Press **MENU** until you see the "Selct" menu option.
3. Select "Selct". The first choice is Phone Vibrate.
4. To view the Vibe/Ring vibration alert choices, press **MENU** on the keypad.
5. To view other choices, press **▶**.
 - To receive vibration alerts only for Mail, select "Mail Vibe", then select "On".
 - To receive vibration alerts for Group and Private calls, select "Group/Prvt", then select "On".
6. Select "Exit" to return to the Vibrate Alert menu.
7. Select "Exit" again to return to the previous mode.

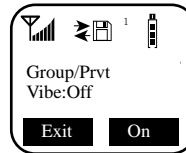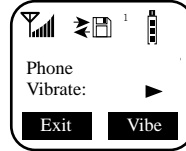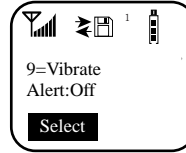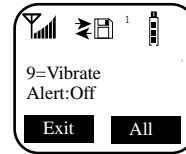

Setting the Ringer Volume

You can adjust the ringer volume for incoming calls. If you have a second phone line, you must set each line separately. Be sure to select the desired line before setting the volume.

1. Press ***1**, **#1**, **3 def**, **0+**. The "30=Ringer Volume" screen displays. The display shows your current ringer volume.
2. Press the Volume Control buttons on the side of the phone to listen as you raise or lower the volume. At the lowest setting, the screen displays "Ringer Volume Silent".
3. When you reach the desired level, select "Exit".

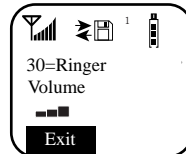

Setting a Ring Style for the Alternate Line


1. From the Phone Ready screen, **MENU** press until you see "Line2".
2. Select "Line2".
3. Repeat the procedure for "Setting an Alert Tone Style", above.


Additional Phone Services

NOTE: Some features may be network dependent or subscription only, and may not be available in all areas. Contact your service provider for more information.

Call Waiting

Using the Call Waiting feature, you can answer an incoming call when you are on another call. Call Waiting is on unless you turn it off for a particular call.

1. After the alert tone, your display shows the incoming number and asks “Accept Call?”. To accept the call, select “Yes”. To decline the call, select “No”.
2. Press **MENU**, then select “Hold” to place the second call on hold and return to the first call. *Selecting “Hold” switches you between the two calls.*
3. To end the active call, press .

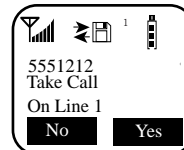

Turning Off Call Waiting

You can turn off Call Waiting if you do not want to be interrupted during a call.

1. Press **MENU** until you see “Wait”, then select “Wait”.
2. Select “Off”. Call Waiting will be disabled for one call—but will automatically reset to “On” after that call.

Call Hold

When you are on a call, you can place the call on hold and make a second call.



1. To place the active call on hold, press **MENU**, then select “Hold”. You may then answer or place another call.
2. To remove the call from hold, press **MENU**, then select “Hold” again.

3-Way Calling

If your carrier provides 3-way calling, you can combine two ongoing phone calls into one conversation. This option is available only when you initiate the second call.



After you place or receive a phone call:

1. Select “3way”. This action places the current call on hold.
2. Enter the phone number for the second call and press .
3. When the second call is connected, select “3way” to join the calls. Both phone numbers and “3way” appear on your screen.
4. To end the 3-way call, press .


Alternate Phone Line

If your phone is activated with two phone lines, you can switch between them. To change phone lines, your phone must be at the Phone Ready screen. The following settings are independent for each phone line. When you enable a setting, it applies only to the active line.

- Ringer Volume
- Auto Answer
- One-minute Beep
- Automatic Display Timer
- Resettable Timer
- Total Call Timer
- Selectable Ring Styles
- Call Forwarding

Setting the Active Line

At the “Phone Ready” screen:

1. Press  until you see “Line2”. (If you are on Line 2, you will see “Line1”.)
2. Do one of the following:
 - Select “Line2” to activate Line 2 when Line 1 is the active line.
 - Or, select “Line1” to activate Line 1 when Line 2 is the active line.





Outgoing calls will be made on the selected line.

Receiving a Call

You can receive calls on either line, regardless of the active line setting.

- If you receive a call on the currently active line, that icon simply flashes.
- If you receive a call on the line that is not currently active, the active line icon remains lit and the alternate line icon flashes.

Receiving a Call on Your Alternate Line

1. Select “Yes” to answer the call on the other line. Your previous call will be placed on hold.
2. Do one of the following:
 - To end the call, press .
 - Or, to place the current call on hold, or to toggle between calls, press , then select “Hold”.




When the call ends, the phone remains active in the last active line selected.

Receiving a Phone Call Using Speakerphone

Select “Spkr” to activate the speakerphone.


Missed Call Indicator

Your *r750plus* phone notifies you of received, but unanswered, phone calls. If you subscribe to Caller ID, the caller’s phone number is stored in your Last 10 Calls Received list. Your screen displays a flashing message, for example, “2 Rcvd Calls”, with the number of missed calls.

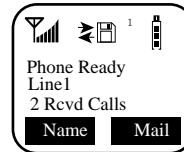

Press any key to clear the flashing indicator.

To retrieve the missed calls:

1. From the Phone Ready screen, press . The menu options change to “Calls” and “Spd#”.
2. Select “Calls”. The Rcvd Calls screen opens with the number, time, and date of the last call that you received.
3. Scroll to continue viewing the list.




Call Forwarding


Call forwarding lets callers reach you wherever you are. You have two options: forward all incoming calls (unconditional) or select those circumstances (conditional) when you want your calls forwarded.

Unconditional Call Forwarding

Unconditional call forwarding sends all incoming calls to the designated number.

NOTE: When you set unconditional call forwarding, your phone does not ring.

1. From the Phone Ready screen, press **MENU** until you see “Forwd” on the last line of the display.
2. Select “Forwd”.
3. To select the number where you want your calls forwarded, do one of the following:
 - Enter a number.
 - Or, press the scroll keys to select a number from your stored list.
4. Select “On”.
5. After the “Please Wait” message displays, select “Exit”.
6. Notice that the Call Forward icon  appears on your display when Unconditional Call Forwarding is set.

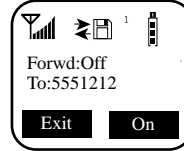

Conditional Call Forwarding

You may want to forward your calls when your *r750plus* phone is:

- Busy on another call or accessing the browser (Busy)
- Not answered (NoAns)
- Outside the service area (NoRch).


NOTE: You must turn off Unconditional Call Forwarding before you can set Conditional Call Forwarding options.

1. From the Phone Ready screen, press **MENU** until you see “Forwd” on the last line of your display, then select it.



Additional Phone Services

2. Press **MENU** once again until you see “Busy” and “NoAns” on the last line of your display.
3. To forward your calls when your phone is in use, select “Busy”.
4. To forward your calls when you do not want to answer them, select “NoAns”.
5. Press **MENU** again until you see “NoRch” and “Rcl#”.
 - To forward your calls when you cannot be reached, select “NoRch”.
 - To see the call forward number, select “Rcl#”.
6. After you select the call forward option, either enter the number where you want your calls to be forwarded, or press the scroll buttons and select a number.
7. Select “On”.
8. Select “Exit”.
9. You can set more than one condition by repeating steps 2 through 6.

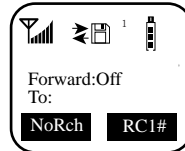

Creating, Editing, and Using Stored Lists

A stored list is a directory of phone numbers and Private IDs and their related names. Stored lists are convenient because you do not have to remember names and numbers—you simply scroll through your stored list.

Combined Phone Number and Private ID List

You can set a combined Phone and a Private ID with the associated name, which eliminates the need to program the Private ID separately. You can add up to 100 numbers to your Phone list, store them with names, and assign them to speed-dial numbers.

Entering Numbers

To enter a number, press the corresponding key on the keypad.

Entering Names




To enter a letter, press the key the required number of times, which is related to the letter's position on the key. Table 5 describes how to enter each letter on the  key.


Table 5: Entering Letters and Numbers on the Keypad

To enter:	Press 
P	once.
Q	twice.
R	three times.
S	four times.
7	five times.

To shift to lowercase letters, press and hold  after a letter is entered.

Storing Names and Numbers

1. Press ***1**, **#**, **2 abc**, **0+next**.

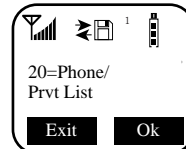

2. Select "Ok".

The next screen briefly displays the remaining number of phone numbers and private IDs that you can store.



3. Enter the name that you wish to store.

Select "Store".

See Figure 1. for an example of entering a name.



Example


To store the name "TIM":

1. Enter "T" by pressing **8 tuv** once.
2. Enter "I" by pressing **4 ghi** three times.
3. Enter "M" by pressing **6 mno** once.

Figure 1. Entering a Name

2. Enter the phone number that you want to associate with this name and select "Store".


To skip the Phone Number entry, select "Skip". You will go directly to the "Enter Prvt ID Number" screen.

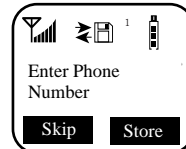

The next screen displays the name that you entered and a flashing speed-dial number where the entry will be stored.

3. Do one of the following:

- To accept the speed-dial number shown, select "Store".
- To change the speed-dial number, enter the desired speed-dial number. The speed-dial number stops flashing.

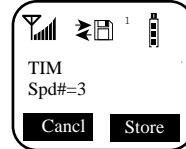

4. At the next screen, enter the Private ID number associated with the name that you entered then select "Store".

To skip the Private ID number entry, select "Skip".



r750 plus

Pause Digit Entry

When storing a number, you can program your phone so that it will not only dial a number but also pause and enter another series of numbers such as a personal identification number (PIN) or password. This feature is particularly useful for automated services such as voice mail and banking systems.


Here's how it works: Let's say you have a company voice mail account that you frequently check while on travel. And, to access that account currently you must do the following:

- Dial your work number;
- Press * while the voice mail greeting is being played; and
- Enter your PIN to access your messages.

You can program your r750plus phone to enter all of the above information for you. All you have to do is separate each entry with a pause. If you were to program your phone to input the above information, the stored data would look like this: 17035551234P1234. In this example, the first eleven digits represent the number that must be dialed to access your voice mail. The P represents a 3 second pause. The last four digits represent your PIN.






You can use this feature not only to enter PINs and passwords but also to have the phone automatically select menu options (i.e., press 1 to hear messages).

To create a three-second pause follow the steps below:

- Press and hold  for two seconds. The pause symbol (P) will appear.

NOTE: You can enter up to 20 numbers/characters in a single entry, stored or dialed. If you use a system that will not let you enter an option until the automated message has played in its entirety, you can program your phone to pause for more than 3 seconds. For example, performing the above step twice will program two pauses and cause your phone to wait 6 seconds before entering the next set of numbers.

Editing and Erasing Phone List Entries

1. Press , , , .
2. Select "Ok". The "Edit Entry?" screen displays.
3. Do one of the following:
 - a. To edit an entry, select "Ok".
 - (1) At the "Edit Entry" screen, press  until the desired entry appears, then select "OK".
 - (2) At the "Edit Number" screen, edit the phone number, if you wish, then select "Store".
 - (3) At the "Edit Name" screen, edit the name, if you wish, then select "Store".

Creating, Editing, and Using Stored Lists

- (4) At the “Edit Spd#” screen, edit the speed number, if you wish, then select “Store”.
- b. To erase an entry:
 - (1) At the “Edit Entry” screen, press ◀ or ▶
 - (2) At the “Erase Entry” screen, select “Ok”.
 - (3) Scroll to the desired entry, then select “Ok”. At the “Erase Entry?” screen, select “Yes”.
4. Select “Exit” to close the Phone List Edit screen.

Editing and Erasing Private ID List Entries

1. Press *1, #m, 2 abc, 2 abc.
2. Select “Ok”. The “Edit Entry?” screen displays.
3. Do one of the following:
 - a. To edit an entry, select “Ok”.
 - (1) At the “Edit Entry” screen, press ▶ until the desired entry appears, then select “OK”.
 - (2) At the “Edit ID” screen, edit the number, if you wish, then select “Store”.
 - (3) At the “Edit Name” screen, edit the name, if you wish, then select “Store”.
 - b. To erase an entry at the “Edit Entry” screen, press ◀ or ▶ once, then select “Ok”. Press ▶ to scroll to the desired entry, then select “Ok”. At the “Erase Entry?” screen, select “Yes”.
4. Select “Exit” to close the Private ID List Edit screen.

Last 10 Calls Received and Sent Lists

If you subscribe to your carrier’s Caller ID service, you can view, dial, and store the list of the last ten phone numbers received and the last ten phone numbers dialed.

The most recent call sent or received appears first in your call list.

From the Phone Ready screen:


1. Press **MENU**. The menu options change to “Calls” and “Spd#”.
2. Select “Calls”. The Rcvd Calls screen opens.



If the “Store” option appears, the number currently displayed is not in your Phone list. To add the number to your list, select “Store”.



*If you want to see the Sent list but the “Store” option is on your display, press **MENU** until you see the “Sent” menu option.*

3. Do one of the following:
 - To view the Calls Received list, use the Scroll key to view each entry.

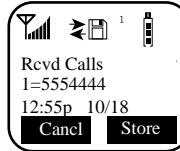

If the “Store” option is on your display, press **MENU** until you see the “Rcvd” menu option.

- Or, to view the Calls Sent list, select “Sent”. Use the Scroll key to view each entry.
4. To view the Calls Received list again, select “Rcvd”.
 5. To close the Calls list, select “Cancel”.

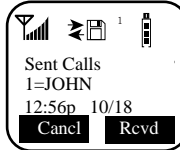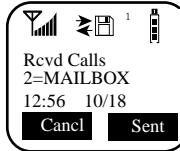


Quickstore of Phone Numbers

If you subscribe to your carrier’s Caller ID service, you can use Quickstore to store the last number that you dialed or quickly store a number from the Last 10 Calls Received and Sent Lists without having to enter the programming menu.

NOTE: As you scroll through the Last 10 Calls Received or Sent List, only the name displays. If the name is not available, the phone number displays.

To use Phone Number Quickstore, from either the Phone Ready screen or from the Last 10 Calls Received or Sent List:

1. Do one of the following:
 - To go to the last call that you dialed, press **▶**.
 - To view the Received and Sent Calls list, press **MENU** until you see “Calls”, then select it.

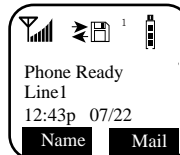


Creating, Editing, and Using Stored Lists

2. Select "Store". The Enter Name screen displays.



3. Enter the name then select "Store".
The combined name and number entry is stored in the first available storage space.

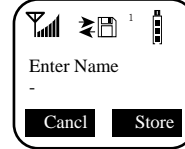


The Stored message displays with the name that you stored.



Making Private Calls

A Private call is a one-to-one conversation between two people. In Private mode, each phone is identified by a name or a number called a Private ID.




To make a Private Call:

1. Press  until you see “Prvt Ready” on your display.
2. Use the keypad to enter the Private ID of the person that you want to reach.
3. To speak, press and hold the PTT button, wait for the chirp, then speak into the microphone.
4. To listen, release the PTT button.






To use Scroll or Name Search, you must have a Private ID list.

Scroll

1. Press  until you see “Prvt Ready” on your display.
2. Press  or  to scroll through the stored Private ID list.
3. Press and hold the PTT button, wait for the chirp, then speak into the microphone.

Name Search


1. Press  until you see “Prvt Ready” on your display.
2. Select “Name”.
3. Press the key with the first letter of the name you are searching for.
4. Press  or  to scroll through other stored names associated with the letter you entered.
5. Press and hold the PTT button, wait for the chirp, then speak into the microphone.

Receiving a Private Call

When you receive an incoming Private call, you hear a brief chirp-like tone. Your *r750plus* phone automatically switches to Private mode, and the Private ID or the name of the caller displays.

1. Your phone must be idle, that is, not busy in an active call or on the browser.
2. Wait for the caller to finish speaking.
3. Press and hold the PTT button. Begin speaking after you hear the chirp.

Private/Group Mode Speaker

You can hear Private calls through either the earpiece or the speaker. Press the Speaker button  on your *r750plus* phone to turn the Private/Group Mode Speaker on or off.

- With the Speaker on, you will hear incoming calls through the speaker.
- With the Speaker off, you will hear incoming calls through the earpiece.







Call Alert

Call Alert enables you to page an individual by sending an audible tone. A Call Alert allows the individual to respond when it is convenient. The alert plays intermittently until the individual clears it.

Selecting a Call Alert Tone Style





Your phone has ten selectable Call Alert tones.



Setting an Alert Tone Style

1. Press , , , . The display shows you the current Alert tone.
 2. Select “Ok”.
 3. Press  or  to scroll through the available Alert tone styles.
 4. To listen to the selected Alert tone, press the Volume buttons on the side of the phone.
 5. Select “Ok” to select the Alert tone shown.
- To leave the Alert tone style unchanged, select “Cancl”*
6. Select “Exit”.



Sending a Call Alert

1. Press  to go to the “Prvt Ready” screen.
 2. Select “Alert”.
3. Enter the Private ID, or press  or  to scroll to the desired name. You may also select the name by pressing  and using Name Search.
 4. Press the PTT button.

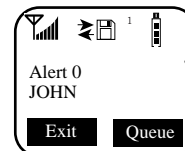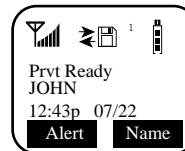

r750 plus

Receiving a Call Alert

When you receive a Call Alert, you will hear an alert tone and see a message on your display.

- To answer the Call Alert, press the PTT button.
- To clear the Call Alert without answering it, select “Clear”.
- To silence the Call Alert without clearing it, press any key other than the PTT button.

NOTE: Until the Call Alert is cleared or returned, the alert plays intermittently and you will not be able to receive any additional Phone, Private, Group, or Net calls.

Call Alert Queuing


If your carrier provides Call Alert Queuing, you can save up to eight Call Alerts in a queue for later use.

After you respond to the Call Alert, it is removed from the queue.


Clearing or Queuing a Call Alert

When you receive a Call Alert, do one of the following:

- To clear a Call Alert, select “Clear”.
- To place the Call Alert into the queue, select “Queue”.

Pressing  also queues the Call Alert.

If you receive multiple Call Alerts, the last received Call Alert displays and the remaining Call Alerts are stacked at the beginning of the queue.

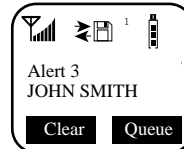

Responding to a Queued Call Alert

You can respond to the Call Alerts in any order. To select a Call Alert for response:

1. Select “Queue”.
2. Press **I** or **r** to scroll to the desired Call Alert.
3. Press the PTT button to respond to the Call Alert.

Quickstore of Private IDs

Quickstore allows you to quickly store a received or sent Private ID, without having to enter the programming menu.

From the Private Ready screen, with the Private ID displayed:

1. Select “Store”.

If an ID is greater than 12 characters in length, the ID wraps to the third line.

2. Enter the name associated with the Private ID.

3. Select “Store”. The Stored message displays.

If the list is full with the maximum 100 entries, you will get the message, “Prvt List Full”. You cannot add names until you remove some names from the list.

4. Next, the display returns to the Private Ready mode.

Storing Your Private ID



NOTE: For non-Crossfleet enabled networks only.

To store your Private ID in your *r750plus* phone:

1. Press ***1**, **#**, **2 abc**. The screen displays the message, “2=Own Pvt ID”.
2. Select “Ok”.
3. Enter the Private ID provided by your carrier.
4. Select “Store”.

To view your Private ID at any time after you store it:

1. Press ***1**, **#**, **2 abc**. The screen displays the message, “2=Own Pvt ID”. The next line displays your Private ID. *This is the number supplied by your carrier that you store in your phone.*
2. Select “Exit”.

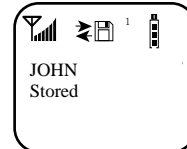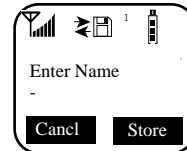


Making Group Calls

A Group Call allows you to communicate instantly with members of a selected Talkgroup—a pre-defined set of people who share a communication need.

Talkgroups appear on your display as numbers or programmed names, such as Talkgrp10 or Sales Team.

To make a Group Call:

1. Press  until “Group Ready” displays. Your most recently used talkgroup displays, for example, “Talkgrp 10”.
2. To place a call, do one of the following:
 - To speak to this talkgroup, press and hold the PTT button. Wait for the chirp, then speak into the microphone.
 - To speak to another talkgroup, press **l** or **r** until you see the desired talkgroup name. Press and hold the PTT button. Wait for the chirp, then speak into the microphone.
3. To listen, release the PTT button.



Receiving a Group Call





When you receive an incoming Group call, you will hear a brief chirp-like tone. Your *r750plus* phone automatically switches to Group mode, and the Talkgroup name displays.

1. Your phone must be idle, that is, not busy in an active call or on the browser.
2. Wait for the caller to finish speaking, then press and hold the PTT button. Begin speaking after you hear the chirp.
3. To listen, release the PTT button.

You can receive group calls only in the Talkgroups that you are provisioned for. For more information, see “Adding or Storing a Talkgroup” on Page 32.





Adding and Storing a Talkgroup

To add and store a talkgroup name to your *r750plus* phone:

1. Press , , , .
2. Select “Ok”.
3. At “Add New Entry?”, select “Ok”.
4. At “Enter ID”, enter the desired talkgroup number and select “Store”.
5. At “Enter Name”, enter a name for the talkgroup and select “Store”.


Area Selection

In Group mode, you can call only those talkgroup members in a specific location. This is useful when you know where the individuals are located within the service area.

1. Press  until you see “Group Ready” on your display.
2. Press , then select “Area”.
3. Press  or  to scroll through the targeted areas specified by your local carrier.
4. Select “Ok” to select the targeted area.

Private/Group Mode Speaker

You can hear Group calls through either the earpiece or the speaker.

Press the Speaker button  on the *r750plus* phone to turn the Private/Group Mode Speaker on or off.

With the Speaker on, you will hear incoming calls through the speaker. This is useful to monitor talkgroup activity in Group mode.

With the Speaker off, you will hear incoming calls through the earpiece.


Advanced Features

Some *r750plus* phones are provided with an advanced feature set as described in this section. Please contact your service provider for more information.


Multi-Simultaneous Talk Group Scan

Multi-Simultaneous Talkgroup Scan (Scan) allows users within a fleet to monitor more than one talkgroup. A Talkgroup Mode, within the range of 1-255, is comprised of up to four talkgroups (one Primary Talkgroup and up to three Secondary Talkgroups). Calls can only be initiated on the user's Primary Talkgroup; however, a user can respond to an active call on either a Primary or Secondary Talkgroup. Both Primary and Secondary Talkgroups, as well as the Talkgroup Mode, can be named (aliased). The Scan feature is set to "ON", but the user has the capability of disabling Scan through an option key. The unit will store the last Scan setting, and power on with that setting.

Entering Group Mode

1. Press the f key to power on your unit. Press  to enter Group Mode.

Two different Talkgroup Modes are displayed below. The Primary Talkgroup is indicated to the right of the Talkgroup Mode. The display on the left shows a non-aliased Primary Talkgroup, and the display on the right shows an aliased Primary Talkgroup.

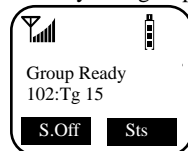

**Primary Talkgroup
Not Aliased**



**Primary Talkgroup
Aliased**

Initiating a Group Call

1. Press and hold the PTT button to initiate a group call on your Primary Talkgroup.

The example to the right illustrates the display if Fred pressed the PTT button to initiate a call on the Electricians talkgroup. This is Fred's Primary Talkgroup for Mode 3.




Fred's Display

All subscriber units that have affiliated with your Primary Talkgroup as either a Primary or Secondary Talkgroup in any Talkgroup Mode will receive your group call if they are not already engaged in an active call.

The following screens will be displayed on the receiver subscriber units indicating they have joined the call. The second line of the display will indicate the Mode number followed by Primary or Secondary Talkgroup, which may be aliased. The third line of the display indicates the PTT-ID of the unit initiating the group call, which can also be aliased.

Example: Jason joins the Electricians talkgroup. He has also selected Electricians as his Primary Talkgroup for Talkgroup 3, but he has no alias for his talkgroup, so the Talkgroup number (TG ID) is displayed. Fred's PTT-ID is displayed on the third line.

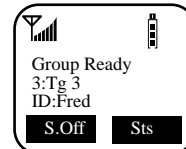

Jason's Display

Example: Julie joins the call and the unit updates the alias to indicate active Secondary Talkgroup (Mode 1, Secondary Talkgroup 3). Fred's PTT-ID is displayed on the third line.



Julie's Display

Responding to a Secondary Talkgroup

1. To respond to a call on a Secondary Talkgroup, press the PTT button.

Example: Julie responds to Fred by pressing the PTT button.



Julie's Display

r750 plus

Fred has released his PTT button, then begins to receive Julie's response.



Fred's Display

Jason receives Julie's response.

After the Secondary Talkgroup call is completed, all receiving subscriber units' displays will revert to their Primary Talkgroup of the selected Talkgroup Mode.




Jason's Display

Turning Scan On and Off


The capability to turn scan on and off is available as an option key.

1. Press the "Scan" option key.

Press the "S Off" soft option key to disable scan.

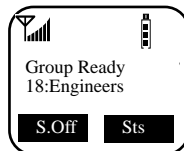

Scan Enabled

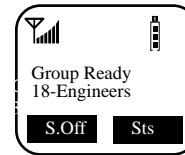

Scan Disabled

When Scan is disabled, you will not have access to your Secondary Talkgroups

Aliasing Talkgroup Mode

The r750plus phone allows you to Alias Talkgroup Modes and Primary and Secondary Talkgroups.

1. Press ***←**, **#**, **2 abc**, **5 kl**.
2. Select "Ok".
3. At "Add New Entry" select "Ok".

NOTE: Press **←** or **→** to Edit or Erase a Talkgroup Mode Alias.

4. Enter the ID of the desired talkgroup mode and press "Store".

NOTE: The Aliased Modes are displayed only while scrolling through the Talkgroup Mode or during Direct Entry. In an idle or transmission state, the Mode ID number is displayed. This ensures that the Mode ID number and Primary Talkgroup are displayed simultaneously on screen.

5. Then enter the name of the desired talkgroup mode alias and press "Store".

Talkgroup Mode Selection by Direct Entry

You may select a different Talkgroup Mode at any time.

1. Press the **1** key. To erase a digit, press **←**. To clear all digits, press and hold **←**. To return to your previously selected Talkgroup Mode, press the “Cancel” option key.
2. Press the **8** key.
3. Press the PTT button or the “Ok” option key. “Mode 18” will flash until affiliation is complete. If you selected the Talkgroup Mode by pressing the PTT button, you will initiate a call on your Primary Talkgroup.



Talkgroup Mode Selection by Memory Scroll

The Memory Scroll feature allows you to use the **←** or **→** keys to scroll through memory for Talkgroup Modes.

1. Press **r**. Press and hold this key to Auto Scroll through your lists more quickly.
2. Press the PTT button or the “Ok” option key.

NOTE: To transmit, press the PTT button; to listen only, press “Ok”.



Emergency Group Call


NOTE: If your *r750plus* phone has an orange button on top of the housing, the Emergency Call feature is present.

Emergency Group Call is a carrier-dependent feature. Please contact your carrier for service availability.

Placing an Emergency Group Call

An Emergency Group Call allows a user to have priority access to his talkgroup members and provide them visual and audible indications of an emergency condition. The Emergency call can be placed from any mode (private, group, phone, Net).

1. Press and hold the Emergency Button. The portable will emit an emergency start tone to indicate that you have successfully requested an emergency call.
2. Press the PTT button to talk. The currently selected Talkgroup Mode will be selected unless your organization pre-programmed an emergency Talkgroup Mode. If this is the case, the pre-programmed Emergency Talkgroup Mode will flash in the dis-

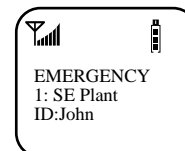

r750 plus

play. The Talkgroup Mode appears in the second line of the display as shown.

3. To end an emergency call, press and hold the Emergency Button for 3 seconds. The portable will return to the last selected talkgroup mode. The initiator cannot exit the emergency call without first cancelling the emergency call.

Canceling an Emergency Group Call

Press the Emergency Button until the unit generates an Emergency Call Cancel tone. This tone indicates the cancellation has occurred. The display will return to the non-emergency state.


An emergency call will be cancelled if no talkgroup activity occurs for 30 seconds. The dispatcher, or any other person provisioned to cancel an emergency call can also cancel the emergency call.

Receiving an Emergency Group Call

When an emergency call is initiated, other members of the talkgroup will be notified of an emergency condition.

The receiving unit will hear an Emergency Receive Tone, and the receiver's display will change to indicate the condition.

The first line of the display will indicate the ID or alias of the person initiating the emergency call. The second line will show you the Talkgroup Mode and Active Talkgroup name or number. The third line shows you the ID or alias of the person who is currently speaking. The third line will remain blank when the receiving unit initiates a transmission.

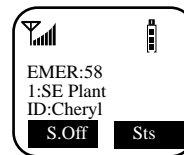

Receiver Operations During an Emergency Call

Other members of the Emergency Group Call can leave the emergency call and change modes (phone, group, private, Net) while involved in the call.

While listening to the emergency call, the receiving unit will not receive phone calls, Call Alerts, Message Mails, Status Messages, Private Calls or other group calls for the duration of the emergency call.

Status Message

Status Message lets you send a pre-defined message to the dispatcher or to another user's ID. Up to ten pre-defined alphanumeric Status Messages are available such as "At Lunch" or "En Route".

You can also send any numeric Status Message from 1-255. A Status Message can be sent by selecting both the Status Message and target ID (alias) of the person who is to receive the Status Message. You can reduce talk time by sending Status Messages. You can also leave a Status Message for receivers while they are away from their portables.

Entering the Status Message Function

1. Press the Status Option Key to get to the Status Message function. You must be in Group or Private Mode to access this function.

The second line of the display shows the Status Message (alpha or numeric) of the last successfully sent status.


2. Press Option "Exit" to return to either the group or Private mode. Press Option "Targt" to go to the Target ID selection screen.



Selecting a Status Message with Direct Entry

Direct Entry allows you to use the keypad to select the message you want to send. Enter any number from 1-255 to select a Status Message. The number can correspond to one of ten pre-programmed alphanumeric status messages or any other numeric Status Message within the range of 1-255.

1. Press 2.
2. Press "Ok". Pressing the PTT button at this time will send the message to the last unit to which you sent a successful message.
3. Press "Targt" to select a target for this message.

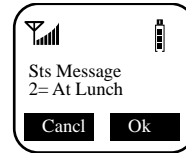

Selecting a Status Message Using Memory Scroll

You can select Status Messages by using the ◀ or ▶ keys to scroll through the ten named (aliased) Status Messages which you have programmed.

1. Press the ▶ until you find the message you want.
In this case we scrolled to the Status Message “At Lunch”.
2. Press “Ok”.
3. Press “Targt” to select a target for this message.



Selecting a Target by Direct Entry


1. Enter the numeric ID of the person to whom you are sending the message.
2. Press “Ok”.
3. Press the PTT button to send the message to the selected ID.



Selecting a Target by Memory Scroll


You can select a target by scrolling though the portable IDs or aliases by using the ◀ or ▶ keys.


1. Press the ◀ or ▶ key until you find the person to whom you want to send the message.
2. Press “Ok”.
3. Press the PTT button. The display shows the message that has been sent.

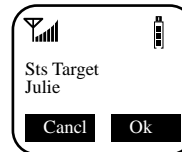

Selecting a Target by Alpha Search

You can select a portable ID by selecting the first letter of the name (alias). If no name is stored under a letter, the unit will automatically search forward, alphabetically, until the next name is found.

1. Press the “Name” key.
2. Press a numeric key. i.e.: Press  three times to view the names (aliases) that begin with the letter R.
3. Use either the ◀ or ▶ keys to scroll to the name (alias) who is to receive the Status Message.
4. Press the PTT button. The display shows the message that has been sent.

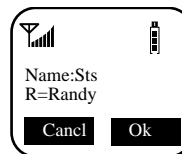

Sending a Status Message

After selecting both a Status Message and a desired target ID, press the PTT button to send the message. Two high pitched tones will be heard during transmission.

If successful, two high pitched tones will be heard to indicate the message was successfully delivered to the target portable.




If unsuccessful, an alert tone will be heard to indicate that the targeted unit is busy, out-of-range, or turned-off.




In either case, the portable will return to the status screen after 3 seconds.

Exiting the Status Message Function

Press the  key to exit the Status Message screen. Pressing the “Exit” option key from the Status Message screen will also allow you to exit the status message function.

Receiving a Status Message

The portable will receive a message along with alert tones. To silence the recurring alert tones only, press any key except  or the “Clear” option key. In case of a non-aliased sender ID, the Quickstore option is available.



If a non-aliased ID is sent, the Quickstore softkey is displayed.

All calls remain blocked until this message is cleared.

ID List Programming

Feature menu #26 allows you to program ten status messages, each up to 12 characters long.



Isolated Site Operation


Isolated Site Operation (ISO) allows group call communications to continue within a single cell site when connectivity to the network is lost by allowing the cell to operate in a local, one cell only mode. ISO is limited to dispatch talkgroup calls only. In all modes the display will update to include “-Isoft” on the first line. Talkgroup communications will be limited to only those units that are connected to the ISO cell, and only on the talkgroup or Talkgroup Mode that the subscriber unit last used before the cell entered the ISO state.

Entering ISO


The portable will enter the ISO state when its cell becomes isolated from the network, assuming the portable has no available neighbor cells. It will display one of the following screens: (The LED indicator is off in ISO unless the unit is transmitting. While transmitting, the LED will be green.)

NOTE:If the portable is powered on in an ISO cell, it will enter the ISO state if there are no available neighbor cells.


Phone Mode

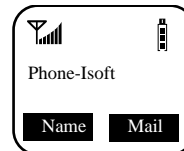


Group Call Mode

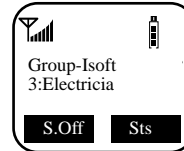

Private Call Mode

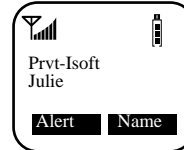

Net Mode

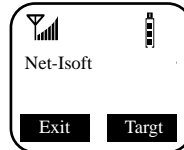


Initiating a Group Call

If the portable has Scan enabled when the site enters ISO, the portable will be able to initiate a call on its Primary Talkgroup and can respond to calls started on either the Primary or any Secondary Talkgroup.

The portable will not be able to select a new Talkgroup Mode while in ISO condition.

If the portable has Scan disabled when the site enters ISO, the portable will be able to initiate and respond to calls on the Primary Talkgroup only.

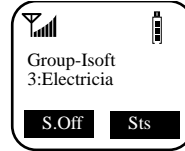

Exiting ISO

When the cell returns to normal operation, the unit will revert back to standard operation. The green LED indicator will resume blinking.

If the unit goes out of range of the ISO cell and has no available neighbor cells, the unit will go out of service.



Other Operations


Since the ISO operation is limited to group calls only, any attempts to communicate in other modes (phone, private, alert, status) will result in a "Service Not Available" message. However, all other functions (memory scroll, direct entry, feature menu programming, etc.) are still operable.

Using Mail Services

NOTE: Some features may be network dependent or subscription only, and may not be available in all areas. Contact your service provider for more information.

Your r750plus phone provides the following mail services:

- Net Mail
- Voice Mail
- Message Mail



When you receive a new message, the  icon appears and flashes.

- To read your new mail immediately, select “Now”.
- To read your new mail later, select “Later”.

An asterisk * next to a mail service indicates new mail.

To use message services, select “Mail” from any Ready screen. The inbox screen opens with your message services listed.

To select a message service, scroll to highlight the service or press the corresponding number. For example, to access your Message Mail, press 2.

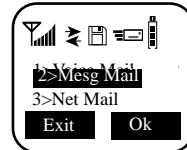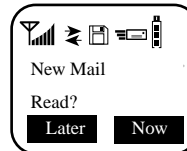


Net Mail

Net Mail alerts you when you receive alerts from the Browser, for example, notification of an e-mail or fax.

From any mode:


1. Select “Mail”.
2. Select “Net Mail”, then select “Ok”.

The Alerts inbox opens and displays the type of Net Mail alerts.

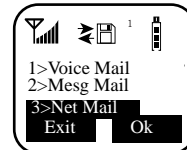

The Inbox screen opens.

3. Scroll to the type of alert that you wish to view, then select “Ok”.

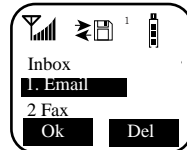

4. To read the message, select “View”.



Alert

5. After you read the message, do one of the following:



- Select “Menu” to view a list of actions that you can take for this message, such as reply, delete, save, and so forth.
- Or, select “Next” to read the next message.




Voice Mail

When your *r750plus* phone receives a Voice Mail message:

- The icon appears on your display.
- The Voice Mail alert tone sounds (if Mail Notification is turned on).
- The message, “New Voice Mail Waiting” appears on your display.
- An exclamation point (!) on the display indicates that you have at least one urgent message.

From any mode:

1. Select “Mail”.
2. Select “Voice Mail”.

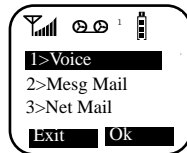


Menu

The Voice Mail inbox opens and displays the number of your new and total Voice Mail messages.

To retrieve your voice mail immediately:

1. Select “Dial”. This action automatically places a call to your voice mailbox. The most recent message is retrieved first.
2. To close your voice mailbox, select “Exit”.

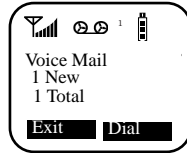

Alert Receipt During Phone Call

Through your programming menu (*, #, 15) you can delay Voice Mail and Message Mail Alerts so that you are not interrupted by the alert tone while on a call. You can choose the following:

- Receive All Alerts
- Delay All Alerts

r750 plus

- Receive Message Mail Alerts only

See “Setting Programming Menus” on page 49 for more information.

Message Mail

Message Mail can be either a numeric page or a text message of up to 140 characters. Your phone can receive and store 16 mail messages at any time.


1. To postpone reading your mail and to clear the display, select “Later”. The icon stops flashing but remains on your display to remind you that you have unread messages.

To read your mail now:

2. Select “Now”. The screen will briefly display the number of new and saved messages in your mailbox.
3. A list of all your messages will display. Highlight the message that you wish to read and select “Read”.

To read you mail later:

4. From any mode, select “Mail”. The Mailbox opens.

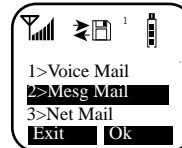

5. Select “Mesg Mail”.

Your message mailbox opens and briefly displays the number of new and saved messages currently in your mailbox.



Next, a list of all messages will display. Select the message that you wish to read and select “Read”.




Saving and Erasing Mail

Your message shows the time and date that the sender entered it in the network

After you read a text or numeric message, you can either Save or Erase the message. Press **•** under the desired option.



Auto Call Back

You can respond to numeric pages and text messages containing a call-back number. To automatically dial a number contained within a Message Mail, press .

Mail Memory Full

If all 16 message registers are full, your phone displays the message “Mail Waiting, Memory Full”. You cannot receive new Message Mail until you empty register space by erasing saved or unread messages.

Using Your Phone as a Modem

NOTE: Some features may be network dependent or subscription only, and may not be available in all areas. Contact your service provider for more information.

You can use your *r750plus* phone as a modem for data transfer from your laptop, handheld device, or desktop computer. This is particularly useful when there is no wired phone line (wall jack) available.

You simply attach a data cable (available separately) to your phone and your computer. From that point, your phone is your modem. This allows you to send or receive time-critical information such as e-mail, a field service report, or files. In addition, you can also send or receive faxes.

This type of wireless connection uses one of two types of data connection: circuit-switched data and packet data.

- Circuit-switched data is typically used for sending and receiving faxes and for transferring large files.
- Packet data is used for small file transfers such as e-mail.

To use these services, you must install the iDEN Wireless Data Services software (available separately). For more information on setting up your computer and your *r750plus* phone for Packet and Circuit Data calls, see the *Wireless Data Services User's Guide* and contact your carrier.

TTY Users

You can use your phone and computer in TTY mode. Your computer screen and keyboard replace the standard TTY device. For more information, please see the *Wireless Data Services User's Guide*.

Setting Programming Menus

You can customize the settings on your phone using the Programming Menu.

1. Press **MENU** until you see “Prgm” on the display.
2. Select “Prgm”.
3. Select “Ok”.
4. Press **◀** or **▶** to scroll to the desired Programming Menu Option or enter the number of the Option.

NOTE: You can press ***↵**, **#↵** and then the corresponding keypad number to get to the desired programming menu.

Table 6: Programming Menu Options

Keypad Number	Menu Option	Function
1	Own Ph #	Automatically store the telephone number of your phone after you receive the first incoming call (Line1). You can also enter the number and view it.
2	Own Pvt ID	Display the private number of your phone.
3	Mail Display	Turn on and off the New Mail message that is displayed with incoming Voice, Message, or Net Mail.
4	Manual Lock:Off	Lock your phone to prevent unauthorized use. You must enter a pass code to unlock it.
5	Auto Lock:Off	Automatically lock your phone each time it is powered on to prevent unauthorized use.
6	Auto Answer:Off	Turn on or off automatic answering of incoming phone calls after 1-4 rings.

Table 6: Programming Menu Options (Continued)

Keypad Number	Menu Option	Function
9	Vibrate Alert:Off	Receive a non-audible alert for incoming phone and circuit data calls and messages. See “ <i>VibraCall® Alert</i> ” on page 15.
10	Last Call Timer	Display the duration of the most recent phone call.
11	Display Timer:Off	Turn on or off automatic display of the Last Call Timer at the end of each phone call.
12	Reset Timer	Display cumulative airtime of all phone calls since last reset.
13	Total Timer	Display cumulative airtime of all phone calls.
14	1 Minute Beep:Off	Automatically signal each minute of elapsed phone airtime with an audible beep.
15	Alert Receipt	Delay Voice Mail and Message Mail Alerts so that users are not interrupted by the alert tone while on a call. Users can choose to: Delay All Alerts; Receive All Alerts; Receive Message Mail Alerts only. See “ <i>Alert Receipt During Phone Call</i> ” on page 45.
16	Backlight Timer	Specify the duration of the Backlight Timer (0, 10, 20, or 30 seconds).
20	Phone/Prvt List	Add phone and private numbers in one procedure. See “ <i>Combined Phone Number and Private ID List</i> ” on page 22.

Table 6: Programming Menu Options (Continued)

Keypad Number	Menu Option	Function
21	Phone List Edit	Edit and erase up to 100 frequently called phone numbers and associated names. See <i>“Editing and Erasing Phone List Entries”</i> on page 24.
22	Prvt ID List Edit	Edit and erase up to 100 Private numbers and associated names. See <i>“Editing and Erasing Private ID List Entries”</i> on page 25.
23	Talkgrp List Program	Add/Edit/Erase numbers and associated names for up to 100 pre-programmed talkgroups. See <i>“Adding and Storing a Talkgroup”</i> on page 32
24	Area List Program	Add/Edit/Erase numbers and associated names for up to 50 targeted areas.
25	Talkgroup Mode List Program	Add/Edit/Erase numbers and associated names for up to 30 pre-programmed talkgroup modes.
26	Status Message List Programming	Add/Edit/Erase numbers and associated names for up to 10 alphanumeric Status Messages.
30	Ringer Volume	Set the ringer volume using the volume control keys, or lower the volume to silence the ringer. See <i>“Setting the Ringer Volume”</i> on page 16.
31	Set Ring Style	Select a distinct ring style for incoming phone calls. See <i>“Setting a Ring Style for the Alternate Line”</i> on page 16.

Table 6: Programming Menu Options (Continued)

Keypad Number	Menu Option	Function
32	Mail Volume	Set the volume of incoming Message Mail, Voice Mail, and Net alert tones using the volume control keys, or lower the volume to silence the mail alert tones.
33	Earpiece Volume	Set the default earpiece volume using the volume control keys.
34	Keypad Volume	Set the volume of the keypad tones using the volume control keys, or to silence the keypad tones.
35	Speaker Volume	Temporarily adjust the Group/Private Speaker volume for noisy environments.
36	Spkr Vol Set Tone	Turn the speaker volume set tones on or off.
37	Set Alert Style	Select a distinct Call Alert tone. See "Selecting a Call Alert Tone Style" on page 29.
38	Silent Group	Silence all incoming Group call alerts and voice activity. When set, your screen displays the message, Group-Silent.
40	Change Passcode	Change your secret four-digit pass code from the initial setting 0000.
60	Set Baud Rate	Set the modem baud rate between the phone and the PC. See the <i>Wireless Data Services User's Guide</i> .
61	Data Ring Volume	Set the default data ringer volume using the volume control buttons. See the <i>Wireless Data Services User's Guide</i> .

Table 6: Programming Menu Options (Continued)

Keypad Number	Menu Option	Function
62	Pgm Data #	View your circuit data (fax) number. See the <i>Wireless Data Services User's Guide</i> .
63	IP Address	Use the scroll keys to view the Internet Protocol (IP) Address-1 for your browser, as programmed in your phone. If your phone is cabled to a computer, view IP Address-2, the stored IP address of your computer. See the <i>Wireless Data Services User's Guide</i> .
64	Reset KBytes Tx/Rx	View the number of Kilobytes sent and received for packet data. See the <i>Wireless Data Services User's Guide</i> .
65	Lines per Screen (Browser and Mail menu)	View the display in 4 lines, 12 characters or 6 lines, 16 characters.
70	Language	Select one of four languages for your display text. <i>The default is English.</i> See "Changing the Display Language" on page 11.
71	Time/Date	Select the format for the time and date display. See "Setting the Time and Date" on page 9.

NOTE: Important! Do not perform the following shaded menu options unless you are instructed to do so by your carrier. You could damage your phone.

Table 7: Other Programming Menu Options

Option Number	Menu Option	Function
41	Feature Reset	Returns all feature settings to their original defaults.
42	Master Clear	Performs Feature Reset and erases all stored lists.
43	Master Reset	Resets the phone's identification number.
44	Change Service Key	Changes or resets the fraud prevention service key.
50	NAM	Selects alternate Numeric Assignment Module (NAM). See local carrier for information.
51	Network ID	Edits the pre-programmed Network number list and selects roaming options.

About Error Codes

You may receive operational status messages under certain conditions. Before contacting your carrier, note the message, numeric code, and the conditions under which it appeared. Table 8 lists and describes the operational status messages.

Table 8: Error Codes

Status Messages	Message Description
Number Not in Service	The number that you entered is not valid.
User Not Available	The party that you called is either busy, out-of-range, or turned off. Please try again later.

Table 8: Error Codes (Continued)

Status Messages	Message Description
User Not Authorized	The party that you called has not purchased this service.
Please Try Later	This service is temporarily not available. Please try again later.
User Busy in Private	The party that you called is busy in a Private call.
Service Restricted	This service was restricted by your carrier or it was not purchased.
Service Not Available	This feature is not available on the current network.
System Busy Try Later	The system is experiencing heavy traffic. Please try again later.
Service Conflict	This service cannot be enabled because an incompatible service has already been turned on.
Please Try Again	An error occurred. Note the error code and try again.
User Busy in Data	The party that you called is busy in a data call.
Self Check Error	A fault was detected with your phone. If this error recurs, note the error code and contact your carrier.
Self Check Fail	An operational fault was detected with your phone. Note the numeric code, turn your phone off, and contact your carrier immediately.

Optional Accessories

Batteries

NOTE: For best results, charge the batteries within the temperature range of 10° C to 40° C (50° F to 104° F).

NOTE: Prolonged charging is not recommended. See Table 9 for battery charging guidelines.

Charging the Battery

To get the maximum use from the battery, charge it overnight before you use it for the first time. See Table 9 for battery charging times.

Table 9: Battery Charging Times

Motorola Battery		Charging Time to 90%:
Kit Number	Description Chemistry	Rapid Charger
NTN9037	NiMH	100 minutes
NTN9038	Intrinsically Safe* NiMH	100 minutes

* For users who work in hazardous environments, Intrinsically Safe Battery, NTN9038, is offered. Please contact your carrier for availability and the specific environments approved for this battery.

Battery Operating Instructions

- Extreme temperatures will degrade battery performance. Do not store your battery where temperatures exceed 60°C (140°F) or fall below -20°C (4°F).
- The battery capacity will be degraded if stored for long periods while fully charged. If long term storage is required, store at half capacity.
- For optimal battery life, use a Motorola iDEN approved NiMH Charger with your Motorola iDEN NiMH battery. Other chargers may not fully charge your NiMH or may yield a reduced number of charge cycles.

Rapid Travel Charger

Using the NTN9035 Rapid Travel Charger, you can charge a battery from an electrical outlet.

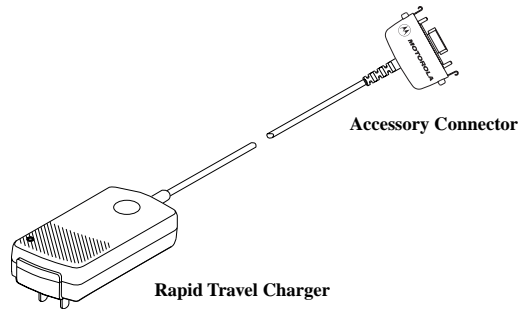


Figure 2. Using the Travel Charger

Using the Rapid Travel Charger (110V/220V/240V)

1. While holding the *r750plus* phone with its front facing you, insert the accessory connector (with the Motorola logo facing you) into the slot on the bottom of the *r750plus* phone until you hear a click.
2. Insert the Rapid Travel Charger transformer into an AC wall outlet. The power light (green LED) on the accessory power supply will come on.

Rapid Travel Charger Operating Specifications

Input voltage range: 110V/220V/240V.

Operating temperature range: 0°C to +50°C.

r750 plus

Vehicular Battery Charger

The NTN9034 Vehicular Battery Charger enables in-vehicle communications by charging the NiMH battery and providing power to your *r750plus* phone.

The power light (green LED) will light when the Vehicular Battery Charger is receiving power.

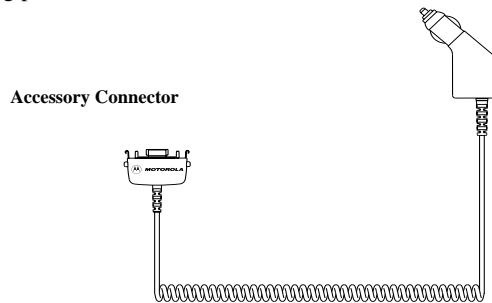


Figure 3. Using the Vehicular Battery Charger

Using the Vehicular Battery Charger

1. Attach the Vehicular Battery Charger's accessory connector to the bottom of the *r750plus* phone. While holding the *r750plus* phone with its front toward you, insert the accessory connector (with the Motorola logo facing you) into the slot on the bottom of the *r750plus* phone until you hear a click.
2. Remove the vehicle's cigarette lighter plug from the cigarette lighter receptacle.
3. Plug the Vehicular Battery Charger into the cigarette lighter receptacle. The power light (green LED) will turn on.
4. The *r750plus* phone may be turned off, turned on, or in use.

Removing the Vehicular Battery Charger

1. Unplug the Vehicular Battery Charger from the vehicle's cigarette lighter receptacle.
2. Press the buttons on the accessory connector and pull the accessory connector from the bottom of the *r750plus* phone.

Operating Specifications

Operating voltage range: 10.8 - 33.0 Vdc.

Operating temperature range: -30°C to +60°C

Desktop Dual-Pocket Charger

The NTN9036 Desktop Dual-Pocket Charger charges Motorola authorized batteries, as listed on Page 56, for the *r750plus* phone.

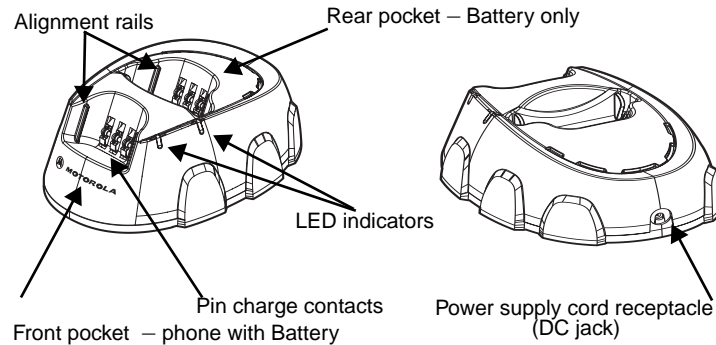


Figure 4. Desktop Dual-Pocket Charger

Charging a battery

1. Plug the power supply DC jack of the fast charger modulus SPN4366C, into the receptacle in the back of the Desk-top Dual-Pocket Charger.
2. Plug the transformer end of the of the fast charger modulus SPN4366C, into any standard AC wall outlet.
3. Insert an *r750plus* phone with an attached battery, into the charger's front pocket. To do this, align the slots on the sides of the battery with the rails on the sides of the charger pocket. Make sure the metal contacts on the back of the battery are in contact with the charger contacts.
4. If the *r750plus* phone is properly seated in the front pocket, the charger's front pocket LED indicator will light.
5. The charger has the capability of displaying the battery's charge status. The indicator will show the following: solid red=1 - 30%; solid yellow=31 - 60%; flashing green=61 - 90%; solid green=91 - 100%.

NOTE: Charging times may vary when performing data operations.

Data Operation

1. Insert the flat end of the iDEN Data Cable (NKN6522A) into the phone's bottom Accessory connector.
2. Connect the opposite end of the data cable to the PC.

r750 plus

Inserting and removing a battery from the rear pocket

Insert

Remove

Figure 5. Adding and Removing a Battery from the Rear Pocket

1. Insert the battery with the Motorola label facing forward. To do this, align the sides of the battery with the charger rails.
2. Make sure the metal contacts on the back of the battery are in contact with the charging contacts.
3. To remove the battery, pull it up and out of the Charger.

NOTE: If a battery is in the rear pocket, and the phone with a battery is inserted into the front pocket, the battery in the front pocket will charge to full capacity before the battery in the rear pocket is charged. The LED for the rear pocket flashes yellow, indicating that its battery is waiting to be charged.

NOTE: To remove the battery from the rear pocket, hold the base of the charger and pull the battery up.

Desktop Charger Status

The Charger displays the battery's charge status. The indicator will show one of the following:

solid red =1-30%; solid yellow =31-60%; flashing green =61-90%; solid green =91-100%.

Desktop Charger Troubleshooting

If the battery is not charging and you see:

Flashing yellow indicator -

- The flashing yellow LED is used to indicate that the Charger's pocket is in a wait state.
- If a battery is in the rear pocket, the rear pocket's LED continues to flash yellow until the battery in the front pocket is more than 90% charged (front pocket's LED is solid green). This is normal operation.
- To protect your battery's life expectancy, the Charger does not rapid charge a battery when its temperature is below 5°C (41°F) or above 45°C (113°F).

No LED indication -

- Check that the *r750plus* phone with battery, or a battery alone, is inserted correctly.
- Make sure that the power supply is plugged into an appropriate AC outlet and that the connector is properly seated.
- *Rear pocket only:* Remove the battery from the Charger. Use an ordinary pencil eraser to clean the three metal contacts on the battery and then place the battery in the Charger.
- If the LED indicator remains turned OFF, the battery may be defective and should be replaced.

Flashing red LED indicator -

- Remove the battery from the Charger. Use an ordinary pencil eraser to clean the three metal contacts on the battery and then place the battery in the Charger.
- If the LED indicator remains turned OFF, the battery may be defective and should be replaced.

Both LEDs flash red -

- This indicates that the incorrect power supply is plugged in.

r750 plus

Audio Adapter

The FLN2854A Audio Adapter connects an earpiece microphone or headset to your *r750plus* phone for privacy and hands-free operation.

The Audio Adapter fits onto the bottom of the *r750plus* phone and provides a standard 2.5mm jack connection for an earpiece microphone or headset.

The following audio accessories are compatible with the audio adapter:

- Earpiece with Microphone (NTN8367)
- Heavy Duty Headset (NTN8513)
- Lightweight Headset (NTN8496)
- Headset Over the Ear Style (NTN8497)

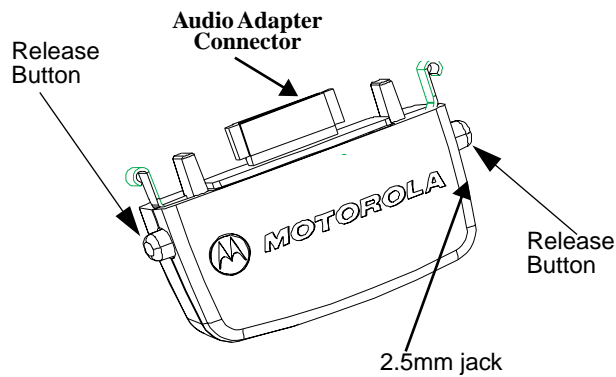


Figure 6. Using the Audio Adapter

Using the Audio Adapter

1. Hold the phone and the Audio Adapter facing you so that you see the Motorola logo on the adapter.
2. Insert the Audio Adapter's connector into the *r750plus* phone Bottom Accessory Connector. You will hear the connector snap into place.

NOTE: When the audio adapter and earpiece or headset are connected, all audio, including tones, will be routed to the audio accessory's earpiece.

Attaching/Detaching the Earpiece Microphone or Headset

1. Insert the 2.5mm plug of the earpiece microphone or headset cord into the jack of the Audio Adapter.
2. Pull on the plug, not on the cord, to remove the earpiece microphone.

Removing the Audio Adapter

1. Simultaneously press the release buttons located on either side of the Audio Adapter and pull the Audio Adapter from the *r750plus* phone.

Battery Belt Clip

The Battery Belt Clip (HLN9844A) and the Large Belt Clip (HLN9714) provide a convenient means by which to carry your *r750plus* phone with you.

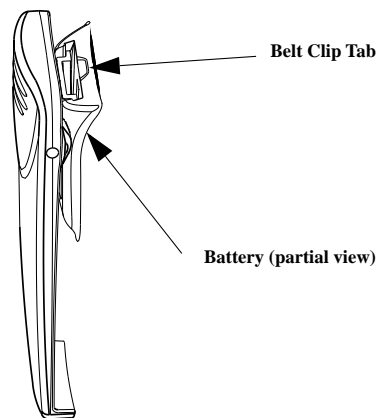


Figure 7. Battery Belt Clip

Using the Battery Belt Clip

1. Slide the belt clip into the back of the battery (push until the clip locks into place).
2. Clip the *r750plus* phone to your belt.
3. To remove the clip from the battery, push the holder tab outward and slide the clip out of the battery.

NOTE: A small flathead screwdriver is recommended to push the holder tab outward when removing the clip.

Carry Case*

- The Carry Case FLN9580A or the Leather Carry Case RLN5372A protects your *r750plus* phone while on the go.
- Includes a leather belt clip for easy attachment to a belt or purse

*Remove the belt clip from the phone before inserting it into the Carry case.

r750 plus

- Accommodates most *r750plus* phone accessories including travel chargers, audio accessories, vehicle accessories, and data accessories.

Hard-Install Car Kit

NOTE: The F2570A Hard-Install Car Kit enables in-vehicle communications by providing extended RF coverage, the ability to connect to 12-Vdc or 24-Vdc power sources, data interface, and the ability to rapid-charge the battery. Please note that the customer should purchase an external antenna.

The F2570A includes:

- External PTT Switch, Kit No. FLN9299A
- External 4-watt Speaker, Kit No. FSN5526A
- Power Cable, Kit No. FKN4901
- Junction Box, Kit No. FLN2799A
- Cradle for r750 VA, Kit No. FLN2810A

An external Push-To-Talk (PTT) button is also included. When the phone is turned off, the Hard-Install Car Kit charges the Standard battery in 75 minutes to 90% capacity. Charging time will be longer if the phone is operational during charge time.


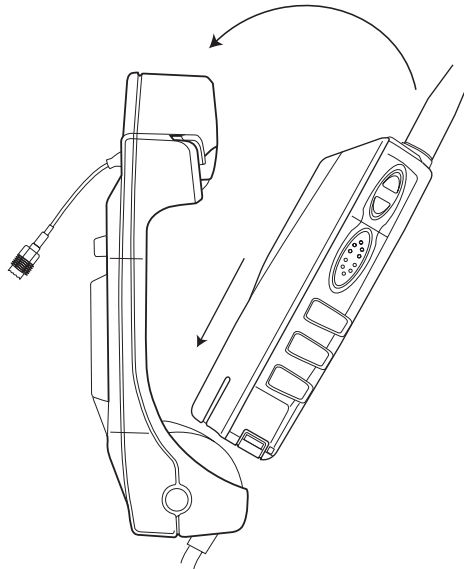


Figure 8. Hard-Install Car Kit

Remote Speaker/Microphone

The FLN2800A Remote Speaker/Microphone (RSM) provides a convenient means of communicating by having a speaker, a microphone, and a Push-to-Talk (PTT) button in a single, hand-held or clip-on accessory. The RSM also includes a 3.5 mm audio jack (located on the opposite side of the PTT) to accept secondary receiver audio accessories.

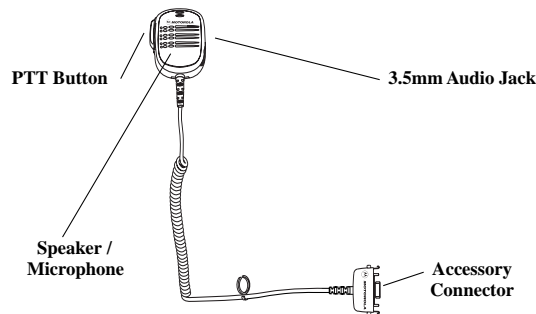


Attaching and Removing the Swivel Clip

To attach the swivel clip to the remote speaker/microphone:

1. Position the clip with the release tab pointing upward and align the metal plate edges of the swivel clip with the plastic slots on the RSM's rear housing.
2. While holding the clip open, slide the metal plate in and push down firmly until the parts snap together.

To remove the swivel clip from the remote speaker/microphone:

1. Carefully push the flat blade of a #2 slotted screwdriver (or similar instrument) between the RSM's housing and the swivel clip's metal release tab, as shown in the figure.
2. While performing step 1, push the swivel clip toward the top of the RSM.
3. As the release tab disengages, remove the screwdriver and pull the swivel clip completely away from the unit.



Connecting the Remote Speaker/Microphone to the Portable

To attach the accessory connector, position the portable so that it faces you.

r750 plus



1. Position the accessory connector so that its coiled cord extends from the bottom of the portable and its latch is on your left.
2. Insert the RSM's accessory connector into the bottom of the portable (push both tabs on the accessory connector when inserting into the portable).
3. Push the accessory connector firmly against the portable to make sure it is held in place.
4. Attach the smaller end of the cable-restraint clip on the straight portion of the coiled cord.
5. Attach the larger end of the cable-restraint clip to the base of the antenna.
6. Adjust the cord length in the smaller end of the cable restraint clip until it is comfortable.

Operation

Please read the safety information contained in the user's guide supplied with the portable before operating this equipment.

The remote speaker/microphone (RSM) only operates when the portable is in the voice-dispatch mode (group or private call).

Wearing the RSM

For optimum performance from your RSM, wear the radio and RSM so that the accessory cord will not cross over or touch the antenna. Also, try to wear the radio and accessory combination fairly close to each other to avoid strain on the accessory connector.



Receiving:

When the RSM is connected to the radio's bottom accessory connector, the radio's speaker is muted, and the audio is only heard from the RSM speaker. Similarly, when a secondary receiver audio accessory is plugged into the 3.5 mm audio jack, audio to the RSM is rerouted to the secondary accessory.

Transmitting:

Connecting the remote speaker/microphone to the radio **does not** disable the radio's microphone and PTT button.

Product Safety and RF Exposure for Portable Radios



Before using this radio, read this section which contains important operating instructions for safe usage and RF energy awareness and control information for compliance with RF energy exposure limits in applicable national and international standards.

This information provided in this section supersedes the general safety information contained in user guides published prior to February 2002

Compliance with RF Energy Exposure Standards

NOTICE: This radio is intended for use in occupational/ controlled applications where users have been aware of the potential for exposure and can exercise control over their exposure. This radio device is NOT authorized for general population, consumer or similar use.

Federal Communication Commission Regulations

The FCC has established limits for safe exposure to radio frequency (RF) emissions from portable two-way radios. The FCC requires manufacturers to demonstrate compliance with RF exposure limits before portable two-way radios can be marketed in the U.S. When two-way radios are approved for occupational/controlled environment exposure limits, the FCC requires users to be fully aware of, and exercise control over, their exposure. Awareness and control of RF exposure can be accomplished by education or training through appropriate means such as information and instructions in user manuals or safety booklets. This user safety section includes useful information about RF exposure and helpful instructions on how to control your RF exposure.

Your Motorola two-way radio is designed and tested to comply with a number of national and international standards and guidelines (listed below) regarding human exposure to RF electromagnetic energy. **This radio complies with IEEE (FCC) and ICNIRP exposure limits for occupational/controlled RF exposure environments at usage factors of up to 50% talk- 50% listen.** In terms of measuring RF energy for compliance with FCC exposure guidelines, **your radio radiates measurable RF energy**

r750 plus


only while it is transmitting (during talking), not when it is receiving (listening) or in standby mode.

Your Motorola two-way radio complies with the following RF energy exposure standards and guidelines:

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI)/ Institute of Electrical and Electronic Engineering (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineering (IEEE) C95. 1-1999 Edition
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation - Human Exposure) Standard, 2001
- ANATEL, Brasil Regulatory, Resolution 256 (April 11, 2001) “additional requirements for SMR, cellular and PCS product.”

Compliance and Control Guidelines and Operating Instructions for Portable Two-Way Radios

To control your exposure and ensure compliance with the occupational/controlled environment exposure limits, always adhere to the following procedures:

- **Transmit no more than 50% of the time. To transmit (talk), push the Push-to-Talk button. To receive calls, release the PTT button. Transmitting 50% of the time or less is important since the radio generates measurable RF energy exposure only when transmitting (in terms of measuring standards compliance).**
 - **Hold the radio in a vertical position in front of the face with the microphone (and other parts of the radio including the antenna) at least one to two inches (2.5 to 5 centimeters) away from the lips. Keeping the radio at a proper distance is important since RF exposures decrease with distance of antenna.**
- 
- **For body-worn operation, always place the radio in a Motorola-approved clip, holder, case, or body harness for this product. Using non-Motorola-approved accessories may result in exposure levels which exceed the FCC’s occupational/controlled**

RF exposure limits.

- **If you are not using a body-worn accessory and not using the radio in the intended use position in front of the face, ensure the antenna and the radio are kept one inch(2.5 centimeters) from the body when transmitting. Keeping the radio at a proper distance is important since RF exposures decreases with distance from the antenna.**
- **Use only Motorola-approved supplied or replacement antennas, batteries, and accessories. Use of non-Motorola approved antennas, batteries, and accessories may exceed FCC RF exposure guidelines. For a list of Motorola approved antennas, batteries, and other accessories see the “Optional Accessories” Section in this manual, and also visit the following web site which lists approved accessories: [http:// www. motorola.com/cgiss/ index.shtml](http://www.motorola.com/cgiss/index.shtml)**

For additional information on exposure requirements or other training information, visit [http://www. motorola.com/rfhealth](http://www.motorola.com/rfhealth).

Electromagnetic Interference/Compatibility

- **NOTE:**Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, **turn off your radio in any facility where posted notices instruct you to do so.** Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your radio when on board an aircraft. Any use of a radio must be in accordance with applicable regulations per airline crew.

Medical Devices

Pacemakers

The Advanced Medical Technology Association (AdvaMed) recommends that a minimum separation of 6 inches (15 cm) be maintained between a handheld wireless radio product and a pacemaker. These recommendations are consistent with those of the U.S. Food and Drug Administration.

r750 plus

Persons with pacemakers should:

- ALWAYS keep the radio product more than 6 inches (15 cm) from their pacemaker when the radio product is turned ON.
- Not carry the radio product in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the radio product OFF immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless radio products may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Driver Safety

Check the laws and regulations on the use of radios in the area where you drive. Always obey them.

When using your radio while driving, please

- Give full attention to driving and to the road
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.



WARNING

OPERATIONAL WARNINGS

For Vehicles With an Air Bag

Do not mount or place a mobile radio in the area over an air bag or in the air deployment area. Air bags inflate with great force. If a portable radio is placed in the air bag deployment area and the air bag inflates, the radio may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your radio prior to entering any area with potentially explosive atmosphere, unless it is a portable radio type especially qualified for use in such areas as “Intrinsically Safe” for example Factory Mutual, CSA, UL, or CENELEC). Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

The areas with potentially explosive atmosphere referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust or metal powders. Areas with potentially explosive atmospheres are often, but not always, posted.

Blasting Caps and Blasting Areas

To avoid possible interference with blasting operations, turn off your radio when you are near electrical blasting caps, in a blasting area, or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.



Caution

Operational Cautions

Antennas

Do not use any portable radio product that has a damaged antenna.

If a damaged antenna comes into contact with your skin, a minor burn can result.

Batteries

All batteries can cause property damage and/or bodily injury, such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.


Intrinsically Safe Radio Information

FMRC Approved Equipment

Anyone intending to use a radio in a location where hazardous concentrations of flammable material exist (hazardous atmosphere) is advised to become familiar with the subject of intrinsic safety and with the National Electric Code NFPA 70 (National Fire Protection Association) Article 500 (hazardous [classified] locations).

An Approval Guide, issued by Factory Mutual Research Corporation (FMRC), lists manufacturers and the products approved by FMRC for use in such locations. FMRC has also issued a voluntary approval standard for repair service ("Class Number 3605").

FMRC Approval labels are attached to the radio to identify the unit as being FMRC Approved for specified hazardous atmospheres. This label specifies the hazardous Class/Division/Group along with the part number of the battery that must be used. Depending on the design of the portable unit, this FM label can be found on the back or the bottom of the radio housing. The Approval mark is shown below.

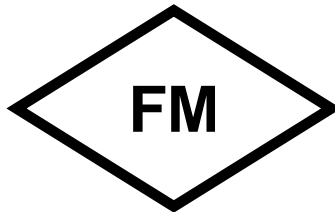

APPROVED



WARNING

- Do not operate radio communications equipment in a hazardous atmosphere unless it is a type especially qualified (e.g. FM Approved) for such use. An explosion or fire may result.
- Do not operate the FMRC Approved Product in a hazardous atmosphere if it has been physically damaged (e.g. cracked housing). An explosion or fire may result.
- Do not replace or charge batteries in a hazardous atmosphere. Contact sparking may occur while installing or removing batteries and cause an explosion or fire.
- Do not replace or charge accessories in a hazardous atmosphere. Contact sparking may occur while installing or removing accessories and cause an explosion or fire.
- Do not disassemble an FMRC Approved Product in any way that exposes the internal circuits of the unit.

Radios must ship from the Motorola manufacturing facility with the hazardous atmosphere capability and FM Approval labeling. Radios will not be “upgraded” to this capability and labeled in the field. A modification changes the unit’s hardware from its original design configuration. Modifications can only be done by the original product manufacturer at one of its FMRC audited manufacturing facilities.



WARNING

- Failure to use an FMRC Approved Product unit with an FMRC Approved battery or FMRC Approved accessories specifically approved for that product may result in the dangerously unsafe condition of an unapproved radio combination being used in a hazardous location.
- Unauthorized or incorrect modification of an FMRC Approved Product unit will negate the Approval rating of the product.

Repair of FMRC Approved Products

REPAIRS FOR MOTOROLA FMRC APPROVED PRODUCTS ARE THE RESPONSIBILITY OF THE USER.

You should not repair or relabel any Motorola-manufactured communication equipment bearing the FMRC Approval label ("FMRC Approved Product") unless you are familiar with the current FMRC Approval standard for repairs and service ("Class Number 3605")

You may want to consider using a repair facility that operates under 3605 repair service approval.



WARNING

- Incorrect repair or relabeling of any FMRC Approved Product could adversely affect the Approval rating of the unit.
- Use of a radio that is not intrinsically safe in a hazardous atmosphere could result in serious injury or death.

FMRC's Approval Standard Class Number 3605 is subject to change at any time without notice to you. You may want to obtain a current copy of 3605 from FMRC. Per the December, 1994 publication of 3605, some key definitions and service requirements are as follows:

r750 plus

Repair

A repair constitutes something done internally to the unit that would bring it back to its original condition - Approved by FMRC. A repair should be done in an FMRC Approved repair facility.

Items not considered as repairs are those in which an action is performed on a unit which does not require the outer casing of the unit to be opened in a manner which exposes the internal electrical circuits of the unit. You do not have to be an FMRC Approved Repair Facility to perform these actions.

Relabeling

The repair facility shall have a method by which the replacement of FMRC Approval labels are controlled to ensure that any relabeling is limited to units that were originally shipped from the Manufacturer with an FM Approval label in place. FMRC Approval labels shall not be stocked by the repair facility. An FMRC Approval label shall be ordered from the original manufacturer as needed to repair a specific unit. Replacement labels may be obtained and applied by the repair facility provided there is satisfactory evidence that the unit being relabeled was originally an FMRC Approved unit. Verification may include, but is not limited to: a unit with a damaged Approval label, a unit with a defective housing displaying an Approval label, or a customer invoice indicating the serial number of the unit and purchase of an FMRC Approved model.


Do Not Substitute Options or Accessories

The Motorola communications equipment certified by Factory Mutual is tested as a system and consists of the FM Approved portable, FM Approved battery, and FM Approved accessories or options, or both. This FM Approved portable and battery combination must be strictly observed. There must be no substitution of items, even if the substitute has been previously Approved with a different Motorola communications equipment unit. Approved configurations are listed in the FM Product Listing Manual that was included with your radio.

Accessory Safety Information

IMPORTANT: SAVE THESE ACCESSORY SAFETY INSTRUCTIONS

- Before using any battery or battery charger, read all the instructions for and cautionary markings on (1) the battery, (2) the battery charger, which may include a separate wall-mounted power supply or transformer, and (3) the radio product using the battery.
- Do not expose any battery charger to water, rain, or snow as they are designed for indoor or in-vehicle use only.

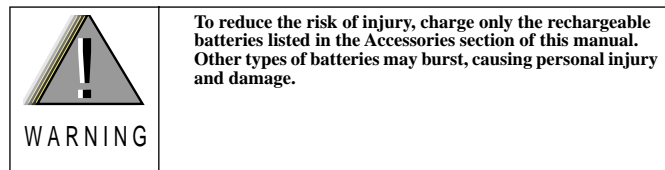

- To reduce the risk of damage to the cord or plug, pull by the plug rather than the cord when you disconnect the battery charger from the power source outlet.
- Do not operate any battery charger with a damaged cord or plug - replace them immediately.
- Battery chargers may become warm during operation, but not hot. If it becomes hot to the touch, unplug it from the power outlet immediately and discontinue its use.
- Use of a non-recommended attachment to a battery charger may result in a risk of fire, electric shock, or injury to persons.
- Make sure the battery charger power cord is located so that it will not be stepped on, tripped over, or subjected to damage or stress.
- An extension cord should not be used with any battery charger unless absolutely necessary. Use of an improper extension cord could result in a risk of fire and electric shock. If an extension cord must be used, make sure that:
 - The pins on the plug of the extension cord are the same number, size, and shape as those on the plug of the charger.
 - The extension cord is properly wired and in good electrical condition.
 - The cord size is 18AWG for lengths up to 100 feet and 16AWG for lengths up to 150 feet.
- Do not operate any battery charger if it has received a sharp blow, has been dropped, or has been damaged in any way; take it to a qualified service technician.
- Do not disassemble a battery charger; take it to a qualified service technician when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.

r750 plus

- Maximum ambient temperature around the power supply or transformer of any battery charger should not exceed 40°C (104°F).
- The output power from the power supply or transformer must not exceed the rating given on the Desktop Dual-Pocket Charger.
- The disconnection from the line voltage is made by unplugging the power supply from the AC receptacle.
- To reduce risk of electric shock, unplug any battery charger from the outlet before attempting any maintenance or cleaning.
- For optimum charging performance, turn off the radio product while charging it in any battery charger.

Warranty

Limited Warranty Motorola Communication Products

NOTE: This Warranty applies within the fifty (50) united states and the District of Columbia.

I. What This Warranty Covers and For How Long:

MOTOROLA, INC. (“MOTOROLA”) warrants the MOTOROLA manufactured iDEN Communication Products listed below (“Product”) against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

iDEN Subscriber Digital Mobile and Portable Units	One (1) Year
Product Accessories	One (1) Year
Batteries	One (1) Year

Rechargeable Batteries will be replaced during the applicable warranty period if:

- a. the battery capacity falls below 80% of rated capacity, or
- b. the battery develops leakage.

MOTOROLA, at its options, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA. Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment if expressly excluded from this warranty. Because each system

r750 plus

which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

II. General Provisions:

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product, Repair, replacement or refund of the purchase price, at MOTOROLA'S options, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

III. State Law Rights:

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

IV. How to Get Warranty Service:

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by MOTOROLA through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service. You can also call MOTOROLA SSC: 1-800-323-9949 for warranty service location information.

V. What This Warranty Does Not Cover:

- a. Defects or damage resulting from use of the Product in other than its normal and customary manner.
- b. Defects or damage from misuse, accident, water, or neglect.

- c. Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- d. Breakage or damage to antennas unless caused directly by defects in material workmanship.
- e. A Product subjected to unauthorized Product modifications, disassemblies or repairs (including, without limitation, the addition to the Product of non-MOTOROLA supplied equipment) which adversely affect performance of the Product or interfere with MOTOROLA'S normal warranty inspection and testing of the Product to verify any warranty claim.
- f. Product which has had the serial number removed or made illegible.
- g. Rechargeable batteries if:
 - (1). Any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
 - (2). The damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- h. Freight costs to the repair depot.
- i. A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA'S published specifications or the FCC type acceptance labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.
- j. Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
- k. Normal and customary wear and tear.

VI. Patent and Software Provisions:

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- a. that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- b. that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- c. Should the Product or parts become, or in MOTOROLA'S opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its

r750 plus

option and expense, either to procure for such purchaser the right to continue to using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software, such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to product any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise or rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

Limited Warranty Motorola Communication Products (International)

I. What This Warranty Covers and For How Long:

MOTOROLA warrants the MOTOROLA manufactured iDEN Communication Products listed below (“Product”) against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

iDEN Subscriber Digital Mobile and Portable Units	One (1) Year
Product Accessories	One (1) Year

Rechargeable Batteries will be replaced during the applicable warranty period if:

- a. the battery capacity falls below 80% of rated capacity, or
- b. the battery develops leakage.

MOTOROLA, at its options, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA. Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment if expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

II. General Provisions:

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product, Repair, replacement or refund of the purchase price, at MOTOROLA'S option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

III. How to Get Warranty Service:

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by MOTOROLA through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service.

IV. What This Warranty Does Not Cover:

- a. Defects or damage resulting from use of the Product in other than its normal and customary manner.
- b. Defects or damage from misuse, accident, water, or neglect.
- c. Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- d. Breakage or damage to antennas unless caused directly by defects in material workmanship.
- e. A Product subjected to unauthorized Product modifications, disassemblies or repairs (including, without limitation, the addition to the Product of non-MOTOROLA supplied equipment)

- f. Product which has had the serial number removed or made illegible.
- g. Rechargeable batteries if:
 - 1. Any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
 - 2. the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- h. Freight costs to the repair depot.
- i. A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA'S published specifications or the local type acceptance labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.
- j. Scratches or other cosmetic damage to Product surfaces that does not effect the operation of the Product.
- k. Normal and customary wear and tear.
- l. Exclusion for defects or damage arising from use of the products in connection with non-MOTOROLA equipment.

V. Patent and Software Provisions:

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- a. that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- b. that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- c. Should the Product or parts become, or in MOTOROLA'S opinion be likely to become, the subject of a claim of infringement of a patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue to using the Product or parts or to replace or modify the same so that it becomes non-

r750 plus

infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product or any parts thereof. In no event shall MOTOROLA be liable for any incidental, special or consequential damages arising from any claim of patent infringement or alleged infringement.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software, such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to product any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise or rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

Patent & Trademark Information

This product is protected under one or more of the following patents:

4291475, 4365221, 4369516, 4374370, 4378603, 4390963, 4398265, 4400584, 4400585, 4434461, 4455534, 4486624, 4491972, 4523155, 4546329, 4574243, 4581602, 4581749, 4585957, 4593155, 4594657, 4602218, 4605987, 4616314, 4617520, 4628529, 4629829, 4633141, 4636593, 4636741, 4648125, 4649543, 4654655, 4680787, 4704588, 4711361, 4715063, 4717884, 4730195, 4731813, 4736277, 4737976, 4741018, 4742562, 4761621, 4764737, 4775998, 4791527, 4794489, 4797929, 4797947, 4798975, 4802236, 4803726, 4809356, 4811377, 4811404, 4817157, 4827507, 4829543, 4831647, 4843621, 4845772, 4851966, 4852090, 4860336, 4860341, 4868576, 4870686, 4872196, 4873683, 4876552, 4876656, 4876740, 4879533, 4885553, 4887050, 4890199, 4896124, 4896361, 4897873, 4903326, 4903327, 4904549, 4904992, 4905288, 4905301, 4912602, 4916262, 4918431, 4918732, 4922178, 4941203, 4942570, 4945570, 4956854, 4959851, 4963812, 4964121, 4970475, 4972355, 4972432, 4972455, 4975808, 4977589, 4977616, 4979207, 4984219, 4984290, 4989230, 4992753, 4996529, 5008925, 5010309, 5010570, 5014294, 5014346, 5017856, 5018188, 5020076, 5020091, 5020092, 5020093, 5023580, 5023866, 5023911, 5025387, 5027388, 5028083, 5028859, 5029233, 5036532, 5038253, 5040127, 5042071, 5045824, 5053924, 5055800, 5055802, 5055803, 5057762, 5058136, 5059885, 5060264, 5063340, 5065408, 5067139, 5070310, 5077757, 5077790, 5081674, 5083304, 5087004, 5093632, 5095503, 5107487, 5109400, 5111162, 5113400, 5113436, 5117073, 5117441, 5117449, 5117450, 5121047, 5121288, 5121412, 5122480, 5122722, 5124889, 5127040, 5127042, 5127100, 5128834, 5133010, 5134717, 5140286, 5140635, 5142551, 5142696, 5144533, 5146620, 5148471, 5148473, 5150075, 5150359, 5150384, 5151643, 5152006, 5152007, 5153590, 5157693, 5160898, 5162144, 5163159, 5164652, 5166596, 5166642, 5168522, 5170173, 5170485, 5170492, 5175729, 5175759, 5175874, 5182749, 5185566, 5185790, 5187640, 5187809, 5192924, 5193223, 5195106, 5195108, 5198887, 5200655, 5201069, 5203009, 5203012, 5203013, 5203021, 5204977, 5205751, 5210793, 5211581, 5212815, 5212826, 5214675, 5214774, 5216389, 5220290, 5220936, 5222078, 5222104, 5222251, 5230007, 5230093, 5233506, 5233633, 5235492, 5237257, 5237570, 5239127, 5241545, 5241548, 5241592, 5241688, 5242767, 5243355, 5247544, 5247565, 5249302, 5251331, 5255292, 5257414, 5259005, 5260170, 5260988, 5261119, 5262710, 5263052, 5263055, 5265271, 5267230, 5276588, 5276707, 5276913, 5276915, 5278832, 5278994, 5280630, 5280637, 5280644, 5285443, 5287013, 5287553, 5287555, 5287556, 5289505, 5297142, 5299232, 5301365, 5308716, 5321705, 5321737, 5321847, 5323421, 5325405, 5325429, 5327578, 5327642, 5331123, 5333153, 5336984, 5338909, 5343213, 5349588, 5351245, 5359696, 5361400, 5363071, 5365549, 5366826, 5367538, 5367558, 5371791, 5373101, 5375143, 5375258, 5379324, 5381114, 5384825, 5392000, 5392023, 5392331, 5396654, 5401927, 5402447, 5402448, 5404580, 5404582, 5406146, 5406562, 5408693, 5410275, 5410741, 5414711, 5420759,

r750 plus

5424689, 5428362, 5428820, 5428836, 5430416, 5432017, 5434947, 5436802, 5438684, 5442680, 5444764, 5446763, 5446766, 5448763, 5448770, 5448771, 5453997, 5457744, 5459640, 5459774, 5461643, 5463351, 5463406, 5463628, 5463646, 5463674, 5463688, 5463694, 5465409, 5465412, 5469177, 5471671, 5475752, 5477192, 5485506, 5485513, 5486843, 5487184, 5488649, 5490177, 5491739, 5493198, 5493700, 5493714, 5495206, 5495208, 5497126, 5497382, 5497383, 5499273, 5499394, 5499397, 5502437, 5504494, 5504812, 5506490, 5508709, 5509048, 5510693, 5511235, 5513078, 5513996, 5519303, 5519346, 5519506, 5519777, 5524276, 5526398, 5528666, 5530399, 5530922, 5533119, 5535258, 5535434, 5539360, 5542016, 5542103, 5542106, 5542116, 5544250, 5546275, 5546380, 5551078, 5551627, 5553137, 5553376, 5554996, 5555550, 5557743, 5559471, 5559522, 5559806, 5561436, 5561437, 5561852, 5565881, 5566224, 5568548, 5570453, 5572223, 5572224, 5574976, 5577267, 5577268, 5583520, 5584054, 5586146, 5588041, 5589796, 5590177, 5594778, 5594951, 5598129, 5598431, 5600341, 5604050, 5604468, 5604787, 5606332, 5606560, 5606730, 5613229, 5613863, 5615233, 5615259, 5615260, 5621763, 5621766, 5625316, 5625683, 5628001, 5628057, 5628089, 5629979, 5630159, 5630210, 5630213, 5630215, 5631538, 5633484, 5633786, 5634202, 5640690, 5642368, 5646576, 5649306, 5649309, 5656914, 5656917, 5657418, 5659601, 5660945, 5661433, 5664973, 5666429, 5668871, 5670912, 5673001, 5673003, 5673287, 5674326, 5675591, 5675702, 5678201, 5678221, 5678227, 5680063, 5684384, 5691947, 5692046, 5692101, 5696497, 5696821, 5699070, 5699389, 5699408, 5701130, 5701244, 5701589, 5703470, 5703539, 5703909, 5706019, 5706313, 5708445, 5710862, 5710987, 5711001, 5715520, 5715524, 5717307, 5722052, 5724004, 5726983, 5729221, 5732350, 5737327, 5737685, 5738954, 5739792, 5740525, 5742894, 5745116, 5745566, 5745848, 5747970, 5748727, 5754141, 5754455, 5754583, 5754645, 5754956, 5758271, 5760714, 5761300, 5761610, 5764100, 5764111, 5764730, 5764743, 5766794, 5771182, 5771471, 5777521, 5777856, 5784368, 5784419, 5784585, 5787128, 5787577, 5793315, 5793866, 5796822, 5797101, 5798716, 5799011, 5799256, 5801513, 5801567, 5802111, 5805992, 5807012, 5808585, 5808586, 5809020, 5809419, 5809421, 5809430, 5809433, 5809544, 5812093, 5812542, 5812590, 5814798, 5815507, 5815570, 5815804, 5815805, 5815807, 5815820, 5821820, 5822726, 5826224, 5831826, 5832080, 5832388, 5835006, 5835535, 5835785, 5838202, 5841851, 5842122, 5844943, 5846094, 5848072, 5848152, 5848356, 5848718, 5850440, 5854549, 5854785, 5854972, 5856763, 5856766, 5857148, 5857192, 5859522, 5859567, 5859890, 5861853, 5862460, 5862493, 5864799, 5865487, 5867063, 5867127, 5867140, 5867510, 5870670, 5872744, 5877633, 5878075, 5878209, 5878336, 5878353, 5880637, 5880646, 5881377, 5889737, 5889768, 5889859, 5892410, 5893036, 5894597, 5896054, 5896261, 5898933, 5900829, 5901347, 5901357, 5903825, 5903852, 5905956, 5907418, 5907615, 5909102, 5910944, 5912648, 5920549, 5920550, 5923007, 5924044, 5925835, 5925942, 5926119, 5926503, 5926751, 5930268, 5930288, 5930299, 5933330, 5936516, 5936972, 5939939, 5940452, 5940746, 5943027, 5945852, 5945964, 5946395, 5949020, 5950131, 5950139, 5953413, 5954817, 5955700, 5955999, 5956626, 5963848, 5963876, 5964858, 5966101, 5966667, 5966671, 5969545, 5974042, 5977916, 5980268,

Patent & Trademark Information

5982881, 5983082, 5987012, 5988577, 5995050, 5996178, 5999115, 5999821, 5999832, 6002922, 6002937, 6005498, 6006104, 6008636, 6009168, 6009309, 6009325, 6009336, 6009552, 6011699, 6011784, 6011959, 6011961, 6012634, 6014376, 6014552, 6016312, 6016422, 6018584, 6018651, 6018671, 6020787, 6021332, 6023191, 6023615, 6025753, 6035182, 6035191, 6035522, 6038457, 6040683, 6040720, 6041241, 6043721, 6043786, 6044153, 6047066, 6047084, 6049192, 6049233, 6049532, 6049704, 6049725, D284759, D285439, D288432, D288683, D289156, D292578, D292920, D295627, D295973, D295975, D296187, D297734, D297735, D297736, D299136, D299137, D299232, D300742, D300827, D301473, D301476, D301883, D302015, D303656, D304189, D305427, D305717, D306015, D306163, D306293, D306299, D306441, D306583, D306594, D307271, D309301, D309451, D314173, D315330, D315346, D315543, D315559, D315565, D315907, D316417, D316859, D320780, D322783, D324024, D324388, D325028, D325029, D325032, D325583, D325915, D327061, D327062, D328302, D332261, D332785, D334746, D337332, D338012, D338887, D339127, D339335, D339336, D339337, D339564, D339578, D339581, D339582, D340709, D340710, D340711, D340906, D341589, D342248, D342663, D342729, D342730, D342741, D343173, D343615, D343616, D343834, D343835, D343836, D344087, D344271, D344444, D344511, D344512, D344945, D345977, D346785, D346786, D346798, D348071, D348250, D348427, D348470, D348665, D348666, D348668, D348674, D348880, D349273, D349701, D350113, D350348, D350349, D350350, D351375, D351840, D352497, D352503, D352946, D353131, D353361, D353587, D353588, D353591, D354055, D354062, D355181, D355895, D356084, D356309, D357224, D357249, D357457, D357680, D357681, D358148, D359052, D359734, D359735, D359959, D360398, D360632, D361070, D361763, D362840, D362852, D365094, D365817, D366872, D367640, D368479, D368696, D369162, D369359, D369797, D370016, D370463, D370672, D372237, D372481, D372703, D372896, D372919, D373585, D373764, D374013, D374014, D374227, D374424, D374872, D375732, D375733, D375734, D375932, D375935, D375952, D376127, D377792, D377934, D378366, D378911, D379558, D379624, D379981, D379982, D380468, D380751, D381021, D381664, D382537, D382538, D382872, D383115, D383748, D383749, D383759, D384080, D384662, D384951, D384952, D385271, D385283, D385555, D385873, D385874, D385875, D385877, D385888, D386175, D386494, D386757, D387054, D387055, D387199, D387346, D388078, D388079, D388080, D388081, D388082, D388424, D388429, D388430, D388775, D388783, D388793, D389157, D389476, D389478, D389488, D389641, D390221, D390222, D390509, D391567, D391955, D391966, D393470, D394256, D394423, D394425, D394433, D394438, D394439, D395301, D395302, D395431, D395642, D395875, D396472, D397337, D397689, D397694, D398926, D400161, D400165, D400204, D400209, D400496, D400526, D400527, D400874, D401554, D401929, D403265, D404397, D405080, D405782, D405801, D406098, D406191, D406586, D406695, D406812, D407063, D407685, D407708, D408401, D408402, D408418, D408783, D408815, D409186, D410459, D410460, D410929, D411165, D411196, D411202, D411204, D411507, D411535, D411843, D411844, D412000, D412487, D412709, D413893, D413898, D414159, D415122, D415499, D416226, D417224, D417449, D419155, D419290, D419565, D419956, D420008, D420977, D421005, D421443, D421982, D422275, D422595

r750 plus

Additional patents are pending.

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ®Reg. U.S. Pat. & Tm. Off. © Copyright 2000 Motorola, Inc. All rights reserved. Manufactured under one or more of the U.S. patents listed in the User's Guide.

T9 is a trademark owned by Tegic Communications, Inc.

All other product or service names mentioned in this manual are the property of their respective trademark owners.

Owner's Information

Mobile Equipment Identifier (IMEI)

Own Phone Number

Own Private Number

Date Purchased

Dealer Telephone Number

Customer Service Number

r750 plus

Private Number Directory

Private Number	Name
1	
2	
3	
4	
5	
6	
7	
8	
9	

Talkgroup Directory

Talkgroup Number	Name
1	
2	
3	
4	
5	
6	
7	
8	
9	