



PROFESSIONAL DIGITAL TWO-WAY RADIO

# MOTOTRBO™ SL Series PORTABLES USER GUIDE



# Contents

Declaration of Conformity.....	13
Notes.....	15
Important Safety Information.....	16
Software Version.....	17
Computer Software Copyrights....	18
Handling Precautions.....	19

RF Energy Exposure and Product Safety Guidelines and Instructions.....	20
--	----

Notes.....	21
------------	----

Getting Started.....	22
How to Use This Guide.....	22
What Your Dealer/System Administrator Can Tell You.....	22

Preparing Your Radio for Use.....	23
Charging the Battery.....	23
Attaching the Battery.....	24
Attaching the Earpiece/Audio Accessory.....	24
Powering Up the Radio.....	25
Adjusting the Volume.....	25

Identifying Radio Controls.....	26
---------------------------------	----

Radio Controls.....	26
Using the 4-Way Navigation Disc.....	27
Using the Keypad.....	28

Capacity Plus.....	42
Linked Capacity Plus.....	42

## **Additional Radio Controls in Non-Connect Plus Mode.....30**

Push-To-Talk (PTT) Button.....	30
Programmable Buttons.....	30
Assignable Radio Functions.....	31
Assignable Settings or Utility Functions.....	33
Accessing the Programmed Functions.....	33
Identifying Status Indicators.....	34
Display Icons.....	34
Call Icons.....	37
Utilities Icons.....	37
Mini Notice Icons.....	38
Sent Item Icons.....	38
Job Tickets Icons.....	39
LED Indicator.....	39
Audio Tones.....	40
Indicator Tones.....	41
Switching Between Connect Plus and Non-Connect Plus Modes.....	41
IP Site Connect.....	41

## **Making and Receiving Calls.....44**

Selecting a Site.....	44
Roam Request.....	44
Site Restriction.....	44
Selecting a Zone.....	44
Selecting a Channel.....	45
Receiving and Responding to a Radio Call... 46	
Receiving and Responding to a Group Call.....	46
Receiving and Responding to a Private Call.....	47
Receiving an All Call.....	48
Receiving and Responding to a Phone Call.....	48
Making a Radio Call.....	49
Making a Group Call.....	50
Making a Private Call.....	51
Making an All Call.....	52
Making a Phone Call with the One Touch Access Button.....	52
Making a Private Call with a One Touch Call Button.....	54

Making a Group, Private or All Call with the Programmable Number Key .....	55
Making a Phone Call with the Programmable Phone Button.....	56
Stopping a Radio Call.....	57
Talkaround.....	58
Monitoring Features.....	59
Monitoring a Channel.....	59
Permanent Monitor.....	59

## **Advanced Features in Non- Connect Plus Mode..... 60**

Radio Check.....	60
Sending a Radio Check.....	60
Remote Monitor.....	61
Initiating Remote Monitor.....	62
Scan Lists.....	63
Viewing an Entry in the Scan List.....	63
Viewing an Entry in the Scan List by Alias Search.....	64
Editing the Scan List.....	64
Scan.....	68
Setting an Active Scan List.....	68
Starting and Stopping Scan.....	69

Responding to a Transmission During a Scan.....	69
Deleting a Nuisance Channel.....	70
Restoring a Nuisance Channel.....	70
Contact Settings.....	70
Making a Group Call from Contacts....	71
Making a Private Call from Contacts .....	72
Making a Phone Call from Contacts...	73
Making a Call Alias Search .....	75
Making a Group, Private, Phone or All Call by Alias Search .....	77
Assigning an Entry to a Programmable Number Key .....	78
Removing the Association between Entry and Programmable Number Key .....	79
Adding a New Contact.....	80
Sending a Message to a Contact.....	80
Call Indicator Settings.....	81
Activating and Deactivating Call Ringers for Call Alert .....	81
Activating and Deactivating Call Ringers for Private Calls .....	81
Activating and Deactivating Call Ringers for Text Message.....	82

Activating and Deactivating Call Ringers for Telemetry Status with Text.....	83	Sending an Emergency Alarm with Voice to Follow .....	93
Assigning Ring Styles.....	83	Reinitiating an Emergency Mode.....	94
All Tones.....	84	Exiting Emergency Mode.....	94
Ring Alert Type Selection.....	84	Text Message Features.....	94
Escalating Alarm Tone Volume.....	85	Writing and Sending a Text Message.....	95
Call Log Features.....	85	Sending a Quick Text Message.....	96
Viewing Recent Calls.....	86	Sending a Quick Text Message.....	97
Missed Call Screen.....	86	Accessing the Drafts Folder.....	98
Storing an Alias from a Call List.....	86	Managing Fail-to-Send Text Messages.....	100
Deleting a Call from a Call List.....	86	Managing Sent Text Messages.....	102
Viewing Details from a Call List.....	87	Receiving a Text Message.....	105
Call Alert Operation.....	87	Managing Received Text Messages.....	105
Receiving and Responding to a Call Alert.....	88	Job Tickets.....	109
Making a Call Alert from the Contact List.....	88	Accessing the Job Ticket Folder.....	109
Making a Call Alert with the One Touch Access Button.....	89	Responding to the Job Ticket.....	110
Emergency Operation.....	89	Deleting a Job Ticket.....	111
Receiving an Emergency Alarm.....	90	Privacy.....	111
Responding to an Emergency Alarm.....	90	Covert Mode.....	113
Sending an Emergency Alarm.....	91	Entering Covert Mode.....	113
Sending an Emergency Alarm with Call.....	92	Exiting Covert Mode.....	113
		Dual Tone Multi Frequency (DTMF).....	113
		Multi-Site Controls.....	113
		Starting an Automatic Site Search....	114
		Stopping an Automatic Site Search..	115

Starting a Manual Site Search.....	115	Notification List.....	127
Security.....	116	Accessing the Notification List.....	128
Radio Disable.....	116	Over-the-Air-Programming (OTAP).....	128
Radio Enable.....	118	Utilities.....	129
Lone Worker.....	119	Locking and Unlocking the Keypad..	129
Password Lock Features.....	120	Turning Keypad Tones On or Off.....	129
Accessing the Radio from		Turning the Option Board	
Password.....	120	Feature(s) On or Off.....	130
Unlocking the Radio from Locked		Identifying Cable Type.....	130
State.....	121	Turning the Voice Operating	
Turning the Password Lock On or		Transmission (VOX) Feature	
Off.....	121	On or Off.....	130
Changing the Password.....	122	Controlling the Display Backlight.....	131
Bluetooth Operation.....	123	Turning the Radio Tones/Alerts On	
Turning Bluetooth On and Off.....	123	or Off.....	132
Finding and Connecting to a		Setting the Tone Alert Volume	
Bluetooth Device.....	124	Offset Level.....	132
Finding and Connecting from a		Turning the Talk Permit Tone On	
Bluetooth Device (Discoverable		or Off.....	133
Mode).....	125	Setting the Text Message Alert	
Disconnecting from a Bluetooth		Tone.....	134
Device.....	125	Changing the Display Mode.....	134
Switching Audio Route.....	126	Adjusting the Display Brightness.....	135
Viewing Device Details.....	126	Wallpaper Mode.....	136
Editing Device Name.....	126	Screen Saver Mode.....	136
Deleting Device Name.....	127	Audio Accessory.....	137
Bluetooth Mic Gain.....	127	Auto Keypad Lock.....	137

Language.....	138
Turning the LED Indicator On or Off.....	138
Voice Announcement.....	138
Digital Mic AGC (Mic AGC-D).....	139
Intelligent Audio.....	140
Turning the Acoustic Feedback Suppressor Feature On or Off.....	141
Text Entry Configuration.....	142
Flexible Receive List.....	147
Accessing General Radio Information.....	150
RSSI Values.....	153

## **Additional Radio Controls in Connect Plus Mode..... 154**

Push-To-Talk (PTT) Button.....	154
Programmable Buttons.....	154
Assignable Radio Functions.....	155
Assignable Settings or Utility Functions.....	155
Identifying Status Indicators in Connect Plus Mode.....	156
Display Icons.....	156
Call Icons.....	158
Sent Item Icons .....	158

LED Indicator.....	159
Indicator Tones.....	160
Audio Tones.....	160

## **Making and Receiving Calls in Connect Plus Mode..... 161**

Selecting a Site.....	161
Roam Request.....	161
Site Lock On/Off.....	161
Site Restriction.....	161
Selecting a Zone.....	162
Using Multiple Networks.....	162
Selecting a Call Type.....	163
Receiving and Responding to a Radio Call.....	163
Receiving and Responding to a Group Call.....	163
Receiving and Responding to a Private Call.....	164
Receiving an All Call.....	165
Making a Radio Call.....	165
Making a Call with the Channel Selector Knob.....	166
Making a Private Call with a One Touch Call Button.....	168



Making a Call with the Programmable Manual Dial Button.....	168
---	-----

## Advanced Features in Connect

### Plus Mode..... 170

Auto Fallback.....	170
Indications of Auto Fallback Mode....	170
Making/Receiving Calls in Fallback Mode.....	170
Returning to Normal Operation.....	171
Radio Check.....	171
Sending a Radio Check.....	171
Remote Monitor.....	172
Initiating Remote Monitor.....	172
Scan.....	173
Starting and Stopping Scan.....	173
Responding to a Transmission During a Scan.....	174
User Configurable Scan.....	174
Turning Scan On or Off.....	175
Editing the Scan List.....	175
Understanding Scan Operation.....	176
Contacts Settings.....	177
Making a Private Call from Contacts.....	177

Making a Call Alias Search.....	178
Adding a New Contact.....	179
Call Indicator Settings.....	179
Activating and Deactivating Call Ringers for Call Alert .....	179
Activating and Deactivating Call Ringers for Private Calls.....	180
Activating and Deactivating Call Ringers for Text Message.....	181
Assigning Ring Styles.....	181
Escalating Alarm Tone Volume.....	182
Call Log Features.....	182
Viewing Recent Calls.....	183
Deleting a Call from a Call List.....	183
Viewing Details from a Call List.....	184
Call Alert Operation.....	184
Receiving and Responding to a Call Alert.....	184
Making a Call Alert from the Contact List.....	184
Making a Call Alert with the One Touch Access Button.....	185
Emergency Operation.....	185
Receiving an Incoming Emergency..	187
Saving the Emergency Details to the Alarm List.....	188
Deleting the Emergency Details.....	188

Responding to an Emergency Call... 188	Responding to an Emergency Alert.. 189	Initiating an Emergency Call..... 189	Initiating an Emergency Call with Voice to Follow..... 190	Initiating an Emergency Alert..... 190	Exiting Emergency Mode..... 191	Text Message Features..... 191	Writing and Sending a Text Message..... 192	Sending a Quick Text Message..... 193	Sending a Quick Text Message with the One Touch Access Button..... 194	Accessing the Drafts Folder..... 195	Managing Fail-to-Send Text Messages..... 197	Managing Sent Text Messages..... 199	Receiving a Text Message..... 202	Reading a Text Message..... 202	Managing Received Text Messages. 202	Privacy..... 206	Making a Privacy-Enabled (Scrambled) Call..... 207	Security..... 207	Radio Disable..... 207	Radio Enable..... 209	Password Lock Features..... 210	Accessing the Radio from Password..... 210	Unlocking the Radio from Locked State..... 211	Turning the Password Lock On or Off..... 211	Changing the Password..... 212	Bluetooth Operation..... 213	Turning Bluetooth On and Off..... 213	Finding and Connecting to a Bluetooth Device..... 214	Finding and Connecting from a Bluetooth Device (Discoverable Mode)..... 215	Disconnecting from a Bluetooth Device..... 215	Switching Audio Route..... 216	Viewing Device Details..... 216	Editing Device Name..... 216	Deleting Device Name..... 217	Bluetooth Mic Gain..... 217	Notification List..... 217	Accessing the Notification List..... 218	Utilities..... 218	Turning the Radio Tones/Alerts On or Off..... 218
--	--	---------------------------------------	---	--	---------------------------------	--------------------------------	--	---------------------------------------	--	--------------------------------------	---	--------------------------------------	-----------------------------------	---------------------------------	--------------------------------------	------------------	---	-------------------	------------------------	-----------------------	---------------------------------	---	---	---	--------------------------------	------------------------------	---------------------------------------	--	---	---	--------------------------------	---------------------------------	------------------------------	-------------------------------	-----------------------------	----------------------------	--	--------------------	--

Turning Keypad Tones On or Off.....	219
Setting the Tone Alert Volume	
Offset Level.....	219
Turning the Talk Permit Tone On	
or Off.....	220
Changing the Display Mode.....	220
Adjusting the Display Brightness.....	221
Controlling the Display Backlight.....	222
Locking and Unlocking the Keypad..	222
Language.....	223
Turning the LED Indicator On or Off.	223
Identifying Cable Type.....	224
Voice Announcement.....	224
Wallpaper Mode.....	225
Screen Saver Mode.....	225
Audio Accessory.....	226
Auto Keypad Lock.....	226
Digital Mic AGC (Mic AGC-D).....	226
Intelligent Audio.....	227
Turning the Acoustic Feedback	
Suppressor Feature On or Off.....	228
Text Entry Configuration.....	229
Accessing General Radio	
Information.....	234

## Accessories.....245

Antennas.....	245
Audio Accessories.....	245
Batteries.....	245
Bluetooth.....	245
Cables.....	245
Carry Devices.....	245
Chargers.....	246
Miscellaneous Accessories.....	246

## Batteries and Chargers Warranty.....247

The Workmanship Warranty.....	247
The Capacity Warranty.....	247


## Limited Warranty.....248

MOTOROLA COMMUNICATION	
PRODUCTS.....	248
I. WHAT THIS WARRANTY COVERS	
AND FOR HOW LONG:.....	248
II. GENERAL PROVISIONS:.....	249
III. STATE LAW RIGHTS:.....	249
IV. HOW TO GET WARRANTY SERVICE:.....	249
V. WHAT THIS WARRANTY DOES NOT	
COVER:.....	250
VI. PATENT AND SOFTWARE	
PROVISIONS:.....	250

VII. GOVERNING LAW:.....252

## Declaration of Conformity

This declaration is applicable to your radio only if your radio is labeled with the FCC logo shown below.

<b>Declaration of Conformity</b>
Per FCC CFR 47 Part 2 Section 2.1077(a)

Responsible Party
Name: Motorola Solutions, Inc.
Address: 1303 East Algonquin Road, Schaumburg, IL 60196-1078, U.S.A.
Phone Number: 1-800-927-2744
Hereby declares that the product:
Model Name: <b>SL7550/ SL7590/ SL7580</b>
conforms to the following regulations:
FCC Part 15, subpart B, section 15.107(a), 15.107(d) and section 15.109(a)

## Class B Digital Device

As a personal computer peripheral, this device complies with Part 15 of the FCC Rules. This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference, and
- 2 This device must accept any interference received, including interference that may cause undesired operation.

### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notes

## Important Safety Information

### RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios

#### ATTENTION!

#### **This radio is restricted to Occupational use only.**

Before using the radio, read the RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and Regulations.

For a list of Motorola-approved antennas, batteries, and other accessories, visit the following website:

<http://www.motorolasolutions.com>

*Any modification to this device, not expressly authorized by Motorola, may void the user's authority to operate this device.*

*Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type*

*and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.*

*This radio transmitter has been approved by Industry Canada to operate with Motorola-approved antenna with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.*



## Informations importantes sur la sécurité

### Exposition aux radiofréquences et sécurité du produit pour radios bidirectionnelles portatives

#### ATTENTION!

Cette radio ne doit être utilisée qu'à des fins professionnelles. Avant d'utiliser la radio, lisez le guide Exposition aux radiofréquences et sécurité du produit pour radios bidirectionnelles portatives, qui contient d'importantes instructions de fonctionnement pour une utilisation sécuritaire et des informations sur l'exposition aux fréquences radioélectriques afin d'assurer la conformité aux normes et règlements applicables.

Pour obtenir une liste d'antennes et d'autres accessoires approuvés par Motorola, consultez le site Web:

<http://www.motorolasolutions.com>

*Selon la réglementation d'Industrie Canada, cet émetteur radio ne peut être utilisé qu'avec une antenne dont le type et le gain maximal (ou minimal) sont approuvés par Industrie Canada pour cet émetteur. Afin de limiter les interférences radio pour les autres utilisateurs, le type et le gain de l'antenne doivent être choisis de façon à ce que la puissance isotrope rayonnée équivalente (P.I.R.E.) ne soit pas plus forte qu'il ne le faut pour établir la communication.*

*Le présent émetteur a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne agréés par Motorola et ayant un gain admissible maximal ainsi que l'impédance requise pour chaque type d'antenne indiqué.*

*Les types d'antenne non inclus, dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.*

---

## Software Version

All the features described in the following sections are supported by the radio's software version **R02.30.00** or later.

See [Checking the Firmware Version and Codeplug Version](#) on page 151 to determine your radio's software version.

Check with your dealer or system administrator for more details of all the features supported.

## Computer Software Copyrights

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

The AMBE+2™ voice coding Technology embodied in this product is protected by intellectual property rights

including patent rights, copyrights and trade secrets of Digital Voice Systems, Inc.

This voice coding Technology is licensed solely for use within this Communications Equipment. The user of this Technology is explicitly prohibited from attempting to decompile, reverse engineer, or disassemble the Object Code, or in any other way convert the Object Code into a human-readable form.

U.S. Pat. Nos. #5,870,405, #5,826,222, #5,754,974, #5,701,390, #5,715,365, #5,649,050, #5,630,011, #5,581,656, #5,517,511, #5,491,772, #5,247,579, #5,226,084 and #5,195,166.

---

## Handling Precautions

The MOTOTRBO Series Digital Portable radio meets IP54 specifications, allowing the radio to withstand adverse field conditions such as being exposed to water or dust.

- Keep your radio clean and exposure to water should be avoided to help ensure proper functionality and performance.
- To clean the exterior surfaces of the radio, use a diluted solution of mild dishwashing detergent and fresh water (i.e. one teaspoon of detergent to one gallon of water).
- These surfaces should be cleaned whenever a periodic visual inspection reveals the presence of smudges, grease, and/or grime.



**Caution:** The effects of certain chemicals and their vapors can have harmful results on certain plastics. Avoid using aerosol sprays, tuner cleaners and other chemicals.

## RF Energy Exposure and Product Safety Guidelines and Instructions

For more detailed proper usage instructions, warnings and cautions, refer to the RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios booklet.

- To ensure a comfortable audio level and compliance with RF energy exposure limits, do not hold the radio against the ear or alongside the



head. Do not hold near ear. See user guide for proper use.

- Use only in front of the face or with Motorola Solutions approved audio accessories and carry cases to ensure compliance with RF energy exposure limits.



Wear in approved carry holder.

---

## Notes

# Getting Started

## How to Use This Guide

---

This User Guide covers the basic operation of the MOTOTRBO Portables.

However, your dealer or system administrator may have customized your radio for your specific needs. Check with your dealer or system administrator for more information.

For features that are available in **both** conventional Analog and Digital modes, **no** icon is shown.

Conventional Analog Mode-Only features are not available in Connect Plus mode of operation. See [Additional Radio Controls in Connect Plus Mode](#) on page 154 for more information.

For features that are available in a conventional multi-site mode, see [IP Site Connect](#) on page 41 for more information.

Selected features are **also** available on the single-site trunking mode, **Capacity Plus**. See [Capacity Plus](#) on page 42 for more information.

Selected features are **also** available in the multi-site trunking mode, **Linked Capacity Plus**. See [Linked Capacity Plus](#) on page 42 for more information.

## What Your Dealer/System Administrator Can Tell You

---

You can consult your dealer or system administrator about the following:

- Is your radio programmed with any preset conventional channels?
- Which buttons have been programmed to access other features?
- What optional accessories may suit your needs?
- What are the best radio usage practices for effective communication?
- What maintenance procedures will help promote longer radio life?

---

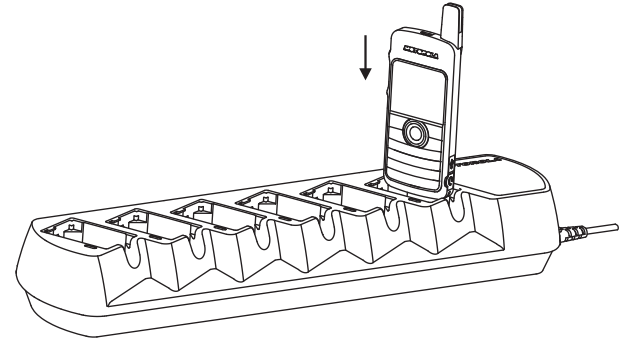
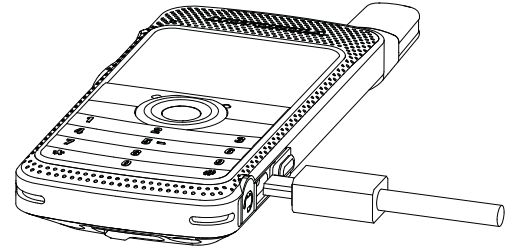
## Preparing Your Radio for Use

### Charging the Battery

---

Your radio is powered by a Lithium-Ion (Li-Ion) battery. To avoid damage and comply with warranty terms, charge the battery using a Motorola charger *exactly* as described in the charger user guide. All chargers can charge only Motorola authorized batteries. Other batteries may not charge. It is recommended your radio remains powered off while charging.

Charge a new battery 14 to 16 hours before initial use for best performance. Prior to charging a battery with the radio, it is recommended to turn the radio off. Batteries charge best at room temperature.



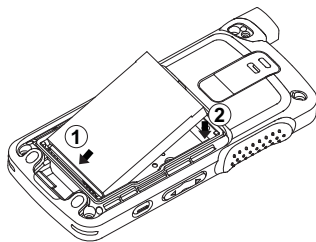
The battery charging icon will be displayed until the user unplugs the USB cable or takes the radio out of the charger.

---

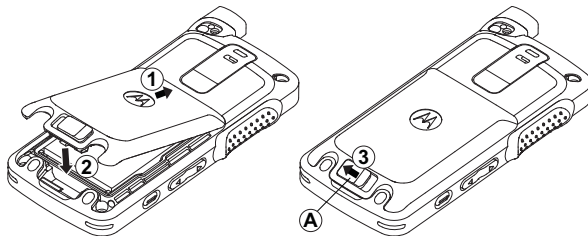


## Attaching the Battery

- 1 Align the battery contacts with the contacts inside the battery compartment. Insert the contact side of the battery first. Gently push the battery into place.

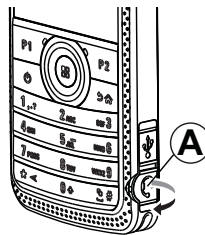


- 2 To attach battery cover, align it in place and slide the battery latch (A) until it snaps into place. Slide battery latch into lock position.



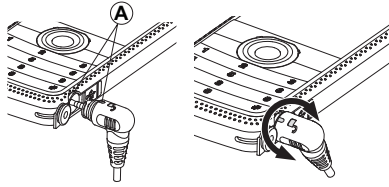
## Attaching the Earpiece/Audio Accessory

The audio jack (A) is located on the antenna side of the radio. It is used to connect accessories to the



radio.

- 1 Lift up the flap of the Audio Jack cover. Align the indicators (A) on both the connector and housing, then push until it fits properly.
- 2 Rotate connector clockwise or counterclockwise to lock.
- 3 To unlock, rotate until the indicators on both the connector and housing are aligned. Pull out the connector gently to disconnect from radio.

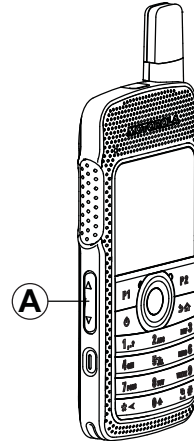


## Adjusting the Volume

To increase the volume, push the **Volume Button (A)** up.

*To decrease the volume, push the volume button down.*

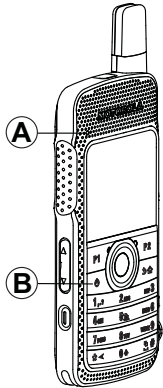
**Note:** Your radio can be programmed to have a minimum volume offset where the volume level cannot be lowered past the programmed minimum volume. Check with your dealer or system administrator for more information.



## Powering Up the Radio

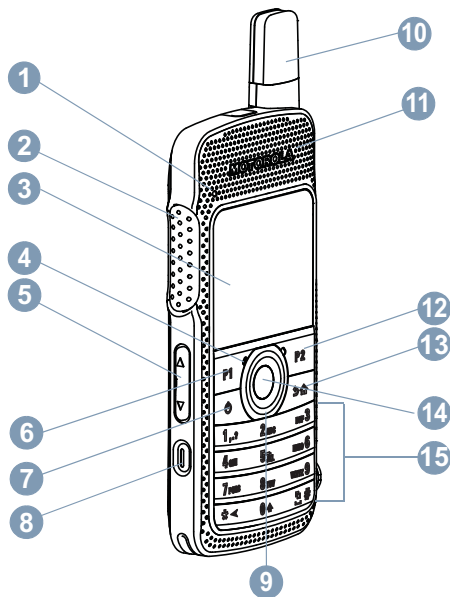
Press the **On/Off button (B)** on the front keypad. You see a welcome message or welcome image.

The LED blinks green (A).



## Identifying Radio Controls

### Radio Controls

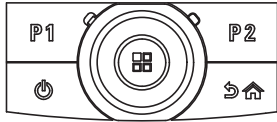


- 1 LED Indicator
- 2 Push-to-Talk (**PTT**) Button
- 3 Display
- 4 Microphone
- 5 Volume Button
- 6 Front Button P1<sup>[1]</sup>
- 7 On/Off Button
- 8 Emergency Button<sup>[1]</sup>
- 9 4-way Navigation Disc
- 10 Antenna
- 11 Speaker
- 12 Front Button P2<sup>[1]</sup>
- 13 Back/Home Button
- 14 Menu/OK Button
- 15 Keypad

<sup>1</sup> These buttons are programmable.

## Using the 4-Way Navigation Disc


You can use the 4-way navigation disc,





, to scroll through options, increase/decrease values, and navigate vertically.

Category	Direction	
	▲ or ▼	◀ or ▶
Menu	Vertical Navigation	-
Lists	Vertical Navigation	-
View Details	Vertical Navigation	Previous/Next Item

Numeric Values	Increase/Decrease	-
----------------	-------------------	---

You can use the 4-way navigation disc, , as a number, alias, or free form text editor.

The  button can be used to change the channels in the home screen.





Press  to select your desired channel.

Editor Category	Direction	
	▲ or ▼	◀ or ▶
Number	-	-
Alias	-	Move cursor one character left/right.
Free Form Text	Move cursor up/down	Move cursor one character left/right.

## Using the Keypad

You can use the 3 x 4 alphanumeric keypad to access your radio's features. You can use the keypad to enter subscriber aliases or IDs, and text messages. Many characters require that you press a key multiple times. The next table shows the number of times a key needs to be pressed to generate the required character.

Key	Number of Times Key is Pressed												
	1	2	3	4	5	6	7	8	9	10	11	12	13
	1	.	,	?	!	@	&	'	%	—	:	*	#
	A	B	C	2									
	D	E	F	3									
	G	H	I	4									
	J	K	L	5									
	M	N	O	6									
	P	Q	R	S	7								
	T	U	V	8									

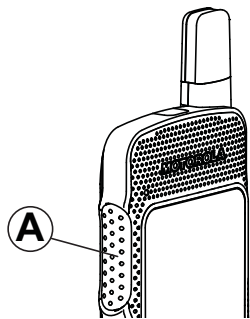
Key	Number of Times Key is Pressed												
	1	2	3	4	5	6	7	8	9	10	11	12	13
	W	X	Y	8									
	0	<b>Note:</b> Press to enter “0” and long press to activate the CAPS lock. Another long press to turn off the CAPS lock.											
	* or del	<b>Note:</b> Press during text entry to delete the character. Press during numeric entry to enter a “*”.											
	# or space	<b>Note:</b> Press during text entry to insert a space. Press during numeric entry to enter a “#”. Long press to change text entry method.											

## Additional Radio Controls in Non-Connect Plus Mode

### Push-To-Talk (PTT) Button

---

The PTT button on the side of the radio (A) serves two basic purposes:



- While a call is in progress, the PTT button allows the radio to transmit to other radios in the call.

Press and hold down PTT button to talk. Release the PTT button to listen.

The microphone is activated when the PTT button is pressed.

- While a call is not in progress, the PTT button is used to make a new call (see [Making a Radio Call](#) on page 49).

If the Talk Permit Tone (see [Turning the Talk Permit Tone On or Off](#) on page 133) is enabled, wait until the short alert tone ends before talking.

During a call, if the Channel Free Indication feature is enabled on your radio (programmed by your dealer), you will hear a short alert tone the moment the target radio (the radio that is receiving your call) releases the PTT button, indicating the channel is free for you to respond.

You will also hear a continuous talk prohibit tone, if your call is interrupted, indicating that you should release the PTT button, for example when the radio receives an Emergency Call.

### Programmable Buttons

---

Your dealer can program the programmable buttons as shortcuts to **radio functions** depending on the duration of a button press:

- Short press – Pressing and releasing rapidly.

- Long press – Pressing and holding for the programmed duration.
- Hold down – Keeping the button pressed.

**Note:** The programmed duration of a button press is applicable for all assignable radio/utility functions or settings. See [Emergency Operation](#) on page 185 for more information on the programmed duration of the Emergency button.

## Assignable Radio Functions

**Actions** — A programmable button to access a CPS programmable action list.

**Audio Routing** — Toggles audio routing between internal and external speakers.

**Bluetooth® Audio Switch** — Toggles audio routing between internal radio speaker and external Bluetooth-enabled accessory.

**Contacts** — Provides direct access to the Contacts list.

**Call Alert** — Provides direct access to the contacts list for you to select a contact to whom a Call Alert can be sent.

**Call Log** — Selects the call log list.

**Channel Announcement** — Plays zone and channel announcement voice messages for the current channel.

**Display Radio Alias** — Shows radio display name.

**Emergency** — Depending on the programming, initiates or cancels an emergency.

**Intelligent Audio** — Toggles intelligent audio on or off.

**Job Tickets** — Allows the user to view and act upon job tickets.

**Manual Dial** — Depending on the programming, initiates a Private or Phone Call by keying in any subscriber ID or phone number.

**Manual Site Roam**<sup>[2]</sup> — Starts the manual site search.

---

<sup>2</sup> Not applicable in Capacity Plus and Linked Capacity Plus



**Mic AGC On/Off** — Toggles the internal microphone automatic gain control (AGC) on or off.

**Monitor** — Monitors a selected channel for activity.

**Notifications** — Provides direct access to the Notifications list.

**Nuisance Channel Delete**<sup>[2]</sup> — Temporarily removes an unwanted channel, except for the Selected Channel, from the scan list. The Selected Channel refers to the user's selected zone/channel combination from which scan is initiated.

**One Touch Access** — Directly initiates a predefined Private, Phone or Group Call, a Call Alert or a Quick Text message.

**Option Board Feature** — Toggles option board feature(s) on or off for option board-enabled channels.

**Permanent Monitor**<sup>[2]</sup> — Monitors a selected channel for all radio traffic until function is disabled.

**Phone** — Provides direct access to the Phone Contacts list

**Power Battery Indicator** — Displays the current status of the battery level.

**Privacy** — Toggles privacy on or off.

**Radio Alias and ID** — Provides radio alias and ID.

**Radio Check** — Determines if a radio is active in a system.

**Radio Enable** — Allows a target radio to be remotely enabled.

**Radio Disable** — Allows a target radio to be remotely disabled.

**Remote Monitor** — Turns on the microphone of a target radio without it giving any indicators.

**Repeater/Talkaround**<sup>[2]</sup> — Toggles between using a repeater and communicating directly with another radio.

**Ring Alert Type** — Provides direct access to the Ring Alert Type Setting.

**Scan**<sup>[2]</sup> — Toggles scan on or off.

**Site Info** — Displays current Linked Capacity Plus site name and ID. Plays site announcement voice messages for the current site (this function is unavailable when Voice Announcement is disabled).

**Site Lock On/Off**<sup>[2]</sup> — When toggled on, the radio searches the current site only. When toggled off, the

radio searches other sites in addition to the current site.

**Telemetry Control** — Controls the Output Pin on a local or remote radio.

**Text Message** — Selects the text message menu.

**Transmit Interrupt Remote Dekey** — Stops the transmission of a remote monitored radio without giving any indicators, or an ongoing interruptible call to free the channel.

**Unassigned** — Unassigned programmable button.

**Voice Announcement On/Off** — Toggles voice announcement on or off.

**Voice Operating Transmission (VOX)** — Toggles VOX on or off.

**Zone** — Allows selection from a list of zones.

### Assignable Settings or Utility Functions

**All Tones/Alerts** — Toggles all tones and alerts on or off.

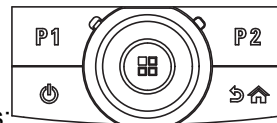
**Brightness** — Allows brightness to be set via the manual brightness mode or auto brightness control via the radio's photo sensor.

**Display Mode** — Toggles the day/night display mode on or off.

**Wallpaper** — Displayed on home screen.






## Accessing the Programmed Functions


You can access various radio functions through one



of the following ways:

- A short or long press of the relevant programmable buttons.
- Use the 4-Way Navigation Disc as follows:

- 1 Press  to access the menu. Press the appropriate Menu Scroll button ( or ) to access the menu functions.
- 2 To select a function or enter a sub-menu, press the  button.
- 3 To go back one menu level, or to return to the previous screen, press the  button. Long

press the  button to return to the Home screen.

**Note:** Your radio automatically exits the menu after a period of inactivity and returns to your Home screen.

## Identifying Status Indicators

### Display Icons

Your radio has a 2 inch landscape display with QVGA (Quarter Video Graphics Array) 16-bit color resolution.

The following are icons that appear on the radio's display. Icons are displayed arranged left-most in order of appearance/usage.



#### Received Signal Strength Indicator (RSSI)

The number of bars displayed represents the radio signal strength. Four bars indicate the strongest signal. This icon is only displayed while receiving.



#### Monitor

Selected channel is being monitored.



#### Bluetooth Not Connected

The Bluetooth feature is enabled but there is no remote Bluetooth device connected.



#### Bluetooth Connected

The Bluetooth feature is enabled. The icon stays lit when a remote Bluetooth device is connected.



#### Bluetooth Discoverable

The Bluetooth feature is enabled and radio is in discoverable mode.















#### High Volume Data







Radio is receiving high volume data and channel is busy.








#### Job Ticket Notification

	Notification List has items to review.
	<b>Option Board</b> The Option Board is enabled. (Option board enabled models only)
	<b>Option Board Non-Function</b> The Option Board is disabled.
	<b>Over-the-Air Programming Delay Timer</b> Indicates time left before automatic restart of radio.
	<b>Scan</b> <sup>[3][4]</sup> Scan feature is enabled.
	<b>Scan- Priority 1</b> <sup>[3][4]</sup> Radio detects activity on channel/group designated as Priority 1.
	<b>Scan- Priority 2</b> <sup>[3][4]</sup>

	Radio detects activity on channel/group designated as Priority 2.
	<b>Flexible Receive List</b> Flexible receive list is enabled.
	<b>Emergency</b> Radio is in Emergency mode.
	<b>Secure</b> The Privacy feature is enabled.
	<b>Unsecure</b> The Privacy feature is disabled.
	<b>Site Roaming</b> <sup>[3]</sup> The site roaming feature is enabled.
	<b>Talkaround</b> <sup>[3][4]</sup> In the absence of a repeater, radio is currently configured for direct radio to radio communication.

	<b>Battery</b> The number of bars (0 – 4) shown indicates the charge remaining in the battery. Blinks when the battery is low.
	<b>Battery Discharging Status</b> Shows battery discharging status.
	<b>All Tones Disabled</b> No ring tones available.
	<b>Call Log</b> Radio call log.
	<b>Contact</b> Radio contact is available.
	<b>Message</b> Incoming message.





	<b>Silent Ring</b> Silent ring mode is enabled.
	<b>Ring Only</b> Ringing mode is enabled.
	<b>Vibrate</b> Vibrate mode is enabled.
	<b>Vibrate and Ring</b> Vibrate and Ring mode is enabled.
	<b>Keypad</b> Keypad locked.

<sup>3</sup> Not applicable in Capacity Plus

<sup>4</sup> Not applicable in Linked Capacity Plus

## Call Icons

The following icons appear on the radio's display during a call. These icons also appear in the Contacts list to indicate ID type.

	<p><b>Private Call</b></p> <p>Indicates a Private Call in progress.</p>
	<p><b>Group Call/All Call</b></p> <p>Indicates a Group Call or All Call in progress.</p>
	<p><b>Phone Call as Private Call</b></p> <p>Indicates a Phone Call as Private Call in progress. In the Contacts list, it indicates a phone alias (name) or ID (number).</p>
	<p><b>Phone Call as Group/All Call</b></p> <p>Indicates a Phone Call as Group/All Call in progress. In the Contacts list, it indicates a group alias (name) or ID (number).</p>



### Bluetooth PC Call

Indicates a Bluetooth PC Call in progress. In the Contacts list, it indicates a Bluetooth PC Call alias (name) or ID (number).



### Private Call Alert

In the Contacts list, it indicates a subscriber alias (name) or ID (number).

## Utilities Icons

The following icons appear beside menu items on the radio's display that offer the following options.



### Checkbox (Empty)

Indicates the option is not selected.



### Checkbox (Checked)

Indicates the option is selected.



### Brightness

Indicates the brightness level.



### Brightness Highlighted

Highlights the brightness level.

## Mini Notice Icons

The following icons appear momentarily on the radio's display after an action to perform task is taken.



### Successful Transmission (Positive)

Successful action taken.



### Failed Transmission (Negative)

Failed action taken.



### Transmission in Progress (Transitional)

Transmitting. This is seen before indication for Successful Transmission or Failed Transmission.

## Sent Item Icons

The following icons appear at the top right corner of the radio's display in the Sent Items folder.



### Sent Successfully

OR

The text message is sent successfully.



### Individual or Group Message Read

OR

The text message has been read.



### Individual or Group Message Unread

OR

The text message has not been read.





### Send Failed



OR

The text message has not been sent.



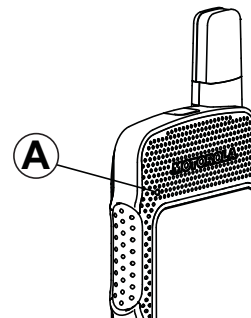
	<b>In-Progress</b>
OR	— The text message to a group alias or ID is pending transmission.
	— The text message to a subscriber alias or ID is pending transmission, followed by waiting for acknowledgement.

### Job Tickets Icons

	<b>All Jobs</b> Indicates all jobs listed.
	<b>New Jobs</b> Indicates new jobs.

### LED Indicator

The LED indicator (A) shows the operational status of



your radio.

<b>Blinking red</b>	Radio is transmitting at low battery condition, receiving an emergency transmission or has failed the self-test upon powering up.
<b>Solid yellow</b>	Radio is monitoring a digital conventional channel or in Bluetooth Discoverable Mode. Also indicates fair battery charge when programmable button is pressed.
<b>Blinking yellow</b>	Radio is scanning for activity or receiving a Call Alert, flexible receive



	list is enabled or all local Linked Capacity Plus channels are busy.
<b>Double blinking yellow</b>	Radio is no longer connected to the repeater while in Capacity Plus or Linked Capacity Plus; all Capacity Plus or Linked Capacity Plus channels are currently busy . Auto Roaming is enabled, radio is actively searching for a new site, or radio has yet to respond to a group call alert. Also indicates that radio has yet to respond to a group call alert, or radio is locked.
<b>Solid green</b>	Radio is powering up or transmitting. Also indicates full charge of the battery when the programmable button is pressed.
<b>Blinking green</b>	Radio is powering up, receiving a non-privacy- enabled call or data, detecting activity, or retrieving Over-the-Air Programming transmissions over the air.

**Rapidly blinking green**

Radio is receiving a privacy-enabled call or data.


**Note:**

While in conventional mode, when the LED blinks green, it indicates the radio detects activity over the air. Due to the nature of the digital protocol, this activity may or may not affect the radio's programmed channel.

For Capacity Plus and Linked Capacity Plus, there is no LED indication when the radio is detecting activity over the air.

**Audio Tones**

Alert tones provide you with audible indications of the radio's status or the radio's response to data received.

High pitched tone	Low pitched tone
<b>Continuous Tone</b> 	A monotone sound. Sounds continuously until termination.

High pitched tone	Low pitched tone
<b>Periodic Tone</b> <input type="checkbox"/> <input type="checkbox"/> _____ 	Sounds periodically depending on the duration set by the radio. Tone starts, stops, and repeats itself.
<b>Repetitive Tone</b> <input type="checkbox"/> _____ 	A single tone that repeats itself until it is terminated by the user.
<b>Momentary Tone</b> <input checked="" type="checkbox"/> _____ 	Sounds only once for a short period of time defined by the radio.

### Indicator Tones

High pitched tone <input type="checkbox"/>	Low pitched tone <input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> _____	Positive Indicator Tone
<input type="checkbox"/> _____	Negative Indicator Tone

## Switching Between Connect Plus and Non-Connect Plus Modes

---

To switch to a non-Connect Plus mode, you must change to another zone, if programmed by your dealer or system administrator. Check with your dealer or system administrator to see if your radio has been programmed with non-Connect Plus zones, and what features are available while operating in non-Connect Plus zones.

## IP Site Connect

---

This feature allows your radio to extend conventional communication beyond the reach of a single site, by connecting to different available sites which are connected via an Internet Protocol (IP) network.

When the radio moves out of range from one site and into the range of another, it connects to the new site's repeater to send or receive calls/data transmissions. Depending on your settings, this is done automatically or manually.

If the radio is set to do this automatically, it scans through all available sites when the signal from the current site is weak or when the radio is unable to

detect any signal from the current site. It then locks on to the repeater with the strongest Received Signal Strength Indicator (RSSI) value.

In a manual site search, the radio searches for the next site in the roam list that is currently in range (but which may not have the strongest signal) and locks on to it.

**Note:** Each channel can only have either Scan or Roam enabled, not both at the same time.

Channels with this feature enabled can be added to a particular roam list. The radio searches the channel(s) in the roam list during the automatic roam operation to locate the best site.

A roam list supports a maximum of 16 channels (including the Selected Channel).

**Note:** You cannot manually add or delete an entry to the roam list. Check with your dealer or system administrator for more information.

## Capacity Plus

---

Capacity Plus is a single-site trunking configuration of the MOTOTRBO radio system, which uses a pool of channels to support hundreds of users and up to 254

Groups. This feature allows your radio to efficiently utilize the available number of programmed channels while in Repeater Mode.

You hear a negative indicator tone if you try to access a feature not applicable to Capacity Plus via a programmable button press.

Your radio also has features that are available in conventional digital mode, IP Site Connect, Capacity Plus and Linked Capacity Plus. However, the minor differences in the way each feature works does **NOT** affect the performance of your radio.

Check with your dealer or system administrator for more information on this configuration.

## Linked Capacity Plus

---

Linked Capacity Plus is a multi-site multi-channel trunking configuration of the MOTOTRBO radio system, combining the best of both Capacity Plus and IP Site Connect configurations.

Linked Capacity Plus allows your radio to extend trunking communication beyond the reach of a single site, by connecting to different available sites which are connected via an Internet Protocol (IP) network. It also provides an increase in capacity by efficiently

utilizing the combined available number of programmed channels supported by each of the available sites.

When the radio moves out of range from one site and into the range of another, it connects to the new site's repeater to send or receive calls/data transmissions. Depending on your settings, this is done automatically or manually.

If the radio is set to do this automatically, it scans through all available sites when the signal from the current site is weak or when the radio is unable to detect any signal from the current site. It then locks on to the repeater with the strongest Received Signal Strength Indicator (RSSI) value.

In a manual site search, the radio searches for the next site in the roam list that is currently in range (but which may not have the strongest signal) and locks on to it.

Any channel with Linked Capacity Plus enabled can be added to a particular roam list. The radio searches these channels during the automatic roam operation to locate the best site.

**Note:** You cannot manually add or delete an entry to the roam list. Check with your dealer or system administrator for more information.

Similar to Capacity Plus, icons of features not applicable to Linked Capacity Plus are not available in the menu. You hear a negative indicator tone if you try to access a feature not applicable to Linked Capacity Plus via a programmable button press.

Check with your dealer or system administrator for more information on this configuration.

## Making and Receiving Calls

### Selecting a Site

A site provides coverage for a specific area. A Connect Plus site has a site controller and a maximum of 15 repeaters. In a multi-site network, the Connect Plus radio will automatically search for a new site when the signal level from the current site drops to an unacceptable level.

#### Roam Request

A Roam Request tells the radio to search for a different site, even if the signal from the current site is acceptable.

**Note:** This is programmed by your dealer.

Press the programmed **Roam Request** button. You hear a tone, indicating the radio has switched to a new site. The display shows Site ID <Site Number>.

#### Site Restriction





Your Connect Plus radio system administrator has the ability to decide which network sites your radio is and

is not allowed to use. Your radio does not need to be reprogrammed to change the list of allowed and disallowed sites. If your radio attempts to register at a disallowed site, you see a brief message stating: Site <number given> Not Allowed. The radio then searches for a different network site.

### Selecting a Zone

A zone is a group of channels. Your radio supports up to 250 zones, with a maximum of 160 channels per zone.


#### 1 Access the Zone feature.

Radio Controls	Steps
<b>Programmed Zone button</b>	Press the programmed <b>Zone</b> button.
<b>Radio menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Zone and press  to select.</li> </ol>


The current zone is displayed and indicated by a



2 Select the required zone.

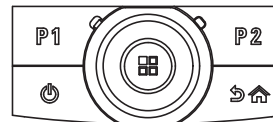
Radio Control	Steps
<p>▲ or ▼</p>	<p>▲ or ▼ and scroll to the required zone.</p>
<p><b>Keypad</b></p>	<ol style="list-style-type: none"> <li>1 Enter the first character of the required zone.</li> <li>2 A blinking cursor appears allowing you to continue entering the subsequent characters of the required zone.</li> </ol> <p><b>Note:</b> Press ◀ to move one space to the left. Press ▶ to move one space to the right. Press the  key to delete any unwanted characters.</p> <p><b>Note:</b> The first line of the display shows the characters you keyed in. The second line shows a zone that matches what you have already keyed in. The alias search is case-insensitive. If there are two or more</p>



Radio Control	Steps
	<p>zones matches the keyed in characters, the radio displays the zone that is listed first in the zone list.</p>

- 3 Press  to select. The display shows <Zone> Selected momentarily and returns to the selected zone screen.

### Selecting a Channel

Transmissions are sent and received on a channel. Depending on your radio's configuration, each channel may have been programmed differently to support different groups of users or supplied with different features. After selecting the relevant Zone, select the relevant channel you require to transmit or receive on.



- On the navigation disc, press  to access the Channel List (while on the Home Screen). The active channel is displayed and indicated by a .

## Receiving and Responding to a Radio Call

---

Once the channel, subscriber ID or group ID is displayed, you can proceed to receive and respond to calls.

The LED lights up solid green while the radio is transmitting and blinks green when the radio is receiving.

**Note:** The LED lights up solid green while the radio is transmitting and blinks green rapidly when the radio is receiving a privacy-enabled call. To unscramble a privacy-enabled call, your radio must have the same Privacy Key, OR the same Key Value and Key ID (programmed by your dealer), as the transmitting radio (the radio you are receiving the call from).

**Note:** See [Privacy](#) on page 111 for more information.

## Receiving and Responding to a Group Call

To receive a call from a group of users, your radio must be configured as part of that group.

When you receive a Group Call (while on the Home screen), the LED blinks green. The first line of the display shows the caller alias, and the RSSI icon. The second line displays the group alias and the Group Call icon (in Digital mode only). Your radio unmutes and the incoming call sounds through the radio's speaker.

- 1 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
  - If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.
  - If the Voice Interrupt feature is enabled, press the **PTT** button to stop the current call from the transmitting radio and free the channel for you to talk/respond.

The LED lights up solid green.

---

- 2 Wait for one of the following tones to finish (if enabled), and speak clearly into the microphone.
  - the Talk Permit Tone

— the **PTT** Sidetone

---

### 3 Release the **PTT** button to listen.

---

If there is no voice activity for a predetermined period of time, the call ends.

**Note:** See [Making a Group Call](#) on page 50 for details on making a Group Call.

**Note:** If the radio receives a Group Call while not on the Home screen, it remains on its current screen prior to answering the call.

**Note:** Long press the  button to go to the Home screen to view the caller alias before replying.

## Receiving and Responding to a Private Call

A Private Call is a call from an individual radio to another individual radio.

When you receive a Private Call, the LED blinks green. The first line of the display shows the subscriber alias or ID, and the RSSI icon. The second line displays `Private Call` and the Private Call icon. Your radio unmutes and the incoming call sounds through the radio's speaker.

### 1 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.
- If the Voice Interrupt feature is enabled, press the **PTT** button to stop the current call from the transmitting radio and free the channel for you to talk/respond.

The LED lights up solid green.

---

### 2 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.

---

### 3 Release the **PTT** button to listen.

---

If there is no voice activity for a predetermined period of time, the call ends.

The display shows `Call Ended`.

See [Making a Private Call](#) on page 51 for details on making a Private Call.



## Receiving an All Call

An All Call is a call from an individual radio to every radio on the channel. It is used to make important announcements requiring the user's full attention.

When you receive an All Call, a tone sounds and the LED blinks green.

The first line of the display shows the caller alias, and the RSSI icon. The second line displays All Call and the All Call icon. Your radio unmutes and the incoming call sounds through the radio speaker.

Once the All Call ends, the radio returns to the previous screen before receiving the call. An All Call does not wait for a predetermined period of time before ending.

If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is now available for use.

You cannot respond to an All Call.

**Note:** See *Making an All Call* on page 52 for details on making an All Call.

**Note:** The radio stops receiving the All Call if you switch to a different channel while receiving the call. During an All Call, you will **not** be able to use any programmed button functions until the call ends.

## Receiving and Responding to a Phone Call

### Phone Call as Private Call

When you receive a Phone Call as a Private Call, the Phone Call icon appears in the top right corner; the display shows the caller alias or Phone Call.

If Phone Call capability is not enabled in your radio, the first line of the display shows *Unavailable* and your radio mutes the call. Your radio returns to the previous screen when the call ends.

1 Press the **PTT** button to talk and release it to listen.

---

2 Press  to end the call.

The display shows *Ending Phone Call*.

If successful, a tone sounds and the display shows *All Call* and *Call Ended*.

If unsuccessful, your radio returns to the Phone Call screen. Repeat Step 2 on page 48 to end the call.

---

### Phone Call as Group Call

When you receive a Phone Call as a Group Call,

- 1 Press the **PTT** button to talk and release it to listen.

- 
- 2 Press  to end the call.

The display shows Ending Phone Call.

If successful, a tone sounds and the display shows All Call and Call Ended.

If unsuccessful, your radio returns to the Phone Call screen. Repeat Step 2 on page 49 to end the call.

---

### Phone Call as All Call

When you receive a Phone Call as an All Call, the Phone Call icon appears in the top right corner; the display shows All Call and Phone Call.

If Phone Call capability is not enabled in your radio, the first line of the display shows Unavailable and your radio mutes the call.

**Note:** When you receive a Phone Call as an All Call, you can respond to the call or end the call, only if an All Call type is assigned to the channel.

- 1 Press the **PTT** button to talk and release it to listen.

- 
- 2 Press  to end the call.

The display shows Ending Phone Call.

If successful, a tone sounds and the display shows All Call and Call Ended.

If unsuccessful, your radio returns to the Phone Call screen. Repeat Step 3 to end the call.

---

### Making a Radio Call

After selecting your channel, you can select a subscriber alias or ID, or group alias or ID by using:

- The **PTT** button.
- A programmed **One Touch Access** button – The One Touch Access feature allows you to make a

Group or Private Call to a predefined ID easily. This feature can be assigned to a short or long programmable button press. You can **ONLY** have one ID assigned to a **One Touch Access** button. Your radio can have multiple **One Touch Access** buttons programmed.

- The programmed number keys – This method is for Group, Private and All Calls only and is used with the keypad (see [Making a Group, Private or All Call with the Programmable Number Key](#) on page 55).
- A programmable button – This method is for Phone Calls only (see [Making a Phone Call with the Programmable Phone Button](#) on page 56).
- The Contacts list (see [Contact Settings](#) on page 70).
- Manual Dial – This method is for Private and Phone Calls only and is dialed using the keypad (see [Making a Private Call from Contacts](#) on page 72, and ).

**Note:** Your radio must have the Privacy feature enabled on the channel to send a privacy-enabled transmission. Only target radios with the same Privacy Key OR the same Key Value and Key ID as your radio will be able to unscramble the transmission.

**Note:** See [Privacy](#) on page 111 for more information.

## Making a Group Call

To make a call to a group of users, your radio must be configured as part of that group.

- 1 Do one of the following.
  - Select the channel with the active group alias or ID. See [Selecting a Channel](#) on page 45
  - Press the programmed **One Touch Access** button.

---

- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 3 Press the **PTT** button to make the call. The LED lights up solid green. The Group Call icon appears in the top right corner. The first text line shows the group call alias.

---

- 4 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.

---

- 5 Release the **PTT** button to listen. When the target radio responds, the LED blinks green, the radio unmutes and the response sounds through the radio's speaker. You see the

Group Call icon, the group alias or ID, and transmitting radio alias or ID on your display.

---

- 6** If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

If there is no voice activity for a predetermined period of time, the call ends. Radio returns to the screen you were on prior to initiating the call.

---

### Making a Private Call

While you can receive and/or respond to a Private Call initiated by an authorized individual radio, your radio must be programmed for you to initiate a Private Call.

There are two types of Private Calls. The first type, where a radio presence check is performed prior to setting up the call, while the other sets up the call immediately.

Only **one** of these call types can be programmed to your radio by your dealer.

You will hear a negative indicator tone, when you make a Private Call via the Contacts list, Call Log,

**One Touch Access** button, the programmed number keys, or the Channel Selector Knob, if this feature is not enabled.

Use the Text Message or Call Alert features to contact an individual radio. See [Text Message Features](#) on page 94 or [Call Alert Operation](#) on page 87 for more information.

- 1** Do one of the following.
    - Select the channel with the active subscriber alias or ID. See [Selecting a Channel](#) on page 45
    - Press the programmed **One Touch Access** button.
- 

- 2** Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 

- 3** Press the PTT button to make the call.

If you release the PTT button while the radio is setting up the call, it exits without any indication and returns to the previous screen.

The LED lights up solid green, the radio unmutes and the response sounds through the radio's speaker. The Private Call icon appears on the top

right corner. The first text line shows the subscriber alias. The second text line displays the call status..

---

- 4 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 

- 5 Release the **PTT** button to listen.

When the target radio responds, the LED blinks green, the radio unmutes and the response sounds through the radio's speaker.

---

- 6 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

If there is no voice activity for a predetermined period of time, the call ends. You hear a short tone. The display shows `Call Ended`.

---

Your radio may be programmed to perform a radio presence check prior to setting up the Private Call. If the target radio is not available, you hear a short tone and see negative mini notice on the display.

## Making an All Call

This feature allows you to transmit to all users on the channel. Your radio must be programmed to allow you to use this feature.


Users on the channel cannot respond to an All Call.

- 1 Select the channel with the active All Call group alias or ID. See [Selecting a Channel](#) on page 45
  - 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
  - 3 Press the **PTT** button to make the call. The LED lights up solid green. The Group Call icon appears in the top right corner. The first text line shows `All Call`.
  - 4 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 

## Making a Phone Call with the One Touch Access Button

- 1 Press the programmed **One Touch Access** button to make a Phone Call to the predefined alias or ID.

If the entry for the **One Touch Access** button is empty, a negative indicator tone sounds. If the access code was not preconfigured in the Contacts list, the display shows `Access Code:`.

Enter the access code and press  to proceed.


The LED lights up solid green. The Phone Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.

If the call-setup is successful, the DTMF tone sounds. You hear the dialing tone of the telephone user. The first text line shows the subscriber alias. The Phone Call icon remains in the top right corner.

If the call-setup is unsuccessful, a tone sounds and the display shows `Phone Call Failed`. Your radio returns to the Access Code input screen. If the access code was preconfigured in the Contacts list, the radio returns to the screen you were on prior to initiating the call.

- 
- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 

- 3 Press the PTT button to talk and release it to listen.

To enter extra digits, if requested by the Phone Call, enter the extra digits using the keypad and press  to proceed.

The DTMF tone sounds with each keypad press, and the radio returns to the previous screen.

- 
- 4 Press to end the call.

If de-access code was not preconfigured in the Contacts list, the display shows `De-Access Code:`. Press the **One Touch Access** button, if it is programmed with the de-access code. If the entry for the **One Touch Access** button is empty, a negative indicator tone sounds.

The DTMF tone sounds with each keypad press, and the display shows `Ending Phone Call`.


If the end-call-setup is successful, a tone sounds and the display shows `Call Ended`.

If the end-call-setup is unsuccessful, your radio returns to the Phone Call screen. Repeat Step 4 on page 53 or wait for the telephone user to end the call.

**Note:**

When the telephone user ends the call, a tone sounds and the display shows `Call Ended`.

If the call ends while you are entering the extra digits requested by the Phone Call, your radio returns to the screen you were on prior to initiating the call.

During channel access, press  to dismiss the call attempt. A tone sounds to indicate success.

During the call, if you press the **One Touch Access** button with the deaccess code preconfigured or enter the deaccess code as the input for extra digits, your radio attempts to end the call.

The access or deaccess code cannot be more than 10 characters.

---

### Making a Private Call with a One Touch Call Button

**Note:** Programmable buttons press must be initiated from the Home screen.

The One Touch Call feature allows you to easily make a Private Call to a pre-defined Private Call alias

or ID. This feature can be assigned to a short or long programmable button press.

You can **ONLY** have one alias or ID assigned to a One Touch Call button. Your radio can have multiple One Touch Call buttons programmed.

- 1 Press the programmed **One Touch Call** button to make a Private Call to the pre-defined Private Call alias or ID.

---

- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 3 Press the PTT button to make the call.  
The LED lights up solid green.  
The display shows the Private Call alias or ID.

---

- 4 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

---

- 5 Release the **PTT** button to listen.  
When the target radio responds, the LED blinks green.

---

- 6 If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the

target radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

If there is no voice activity for a predetermined period of time, the call ends.

---

### Making a Group, Private or All Call with the Programmable Number Key

The Programmable Number Key feature allows you to make a Group, Private or All Call to a predefined alias or ID easily. This feature can be assigned to all the available number keys on a keypad.

You can **ONLY** have one alias or ID assigned to a number key, but you can have more than one number key associated to an alias or ID.

- 1 Long press the programmed number key, when you are on the Home screen, to make a Group, Private or All Call to the predefined alias or ID.  
If the number key is not associated to an entry, a negative indicator tone sounds.

---

- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 3 Press the **PTT** button to make the call.

The LED lights up solid green, the radio unmutes and the response sounds through the radio's speaker. The Group/Private Call icon appears in the top right corner. The first text line shows the caller alias. The second text line displays either the call status for a Private Call or All Call for All Call.

- 
- 4 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.

---

  - 5 Release the **PTT** button to listen.  
When the target radio responds, the LED blinks green, the radio unmutes and the response sounds through the radio's speaker..

---

  - 6 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.  
  
If there is no voice activity for a predetermined period of time, the call ends. Radio returns to the screen you were on prior to initiating the call.  
  
For a Private Call, you hear a short tone when the call ends.




See [Assigning an Entry to a Programmable Number Key](#) on page 78 for details on assigning an entry to a number key on the keypad.

---


## Making a Phone Call with the Programmable Phone Button

1 Press the programmed **Phone** button to enter into the Phone Entry list.

---

2 ▲ or ▼ to the required subscriber alias or ID, and press  to select.

If the access code was not preconfigured in the Contacts list, the display shows `Access Code:`.

Enter the access code and press the  button to proceed.

The LED lights up solid green. The Phone Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.

If the call-setup is successful, the DTMF tone sounds. You hear the dialing tone of the telephone user. The first text line shows the subscriber alias.

The Phone Call icon remains in the top right corner.

If call-setup is unsuccessful, a tone sounds and the display shows `Phone Call Failed`. Your radio returns to the Access Code input screen. If the access code was preconfigured in the Contacts list, the radio returns to the screen you were on prior to initiating the call.

---

3 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.


---

4 Press the **PTT** button to talk and release it to listen.

---

5 To enter extra digits, if requested by the Phone Call, do one of the following.


— Press any keypad key to begin the input of the extra digits. The first line of the display shows `Extra Digits:`. The second line of the display shows a blinking cursor. Enter the extra digits

and press the  button to proceed. The DTMF tone sounds and the radio returns to the previous screen.

- Press **One Touch Access** button. The DTMF tone sounds. If the entry for the **One Touch Access** button is empty, a negative indicator tone sounds.

6 Press  to end the call.

If deaccess code was not preconfigured in the Contacts list, the first line of the display shows De-Access Code: . The second line of the display shows a blinking cursor. Enter the deaccess code

and press the  button to proceed. The radio returns to the previous screen.

The DTMF tone sounds and the display shows Ending Phone Call.


If the end-call-setup is successful, a tone sounds and the display shows Call Ended.

If the end-call-setup is unsuccessful, your radio returns to the Phone Call screen. Repeat Steps 4 on page 56 and 5 on page 56 or wait for the telephone user to end the call.

When you press **PTT** button while in the Phone Contacts screen, a tone sounds and the display shows Press OK to Place Phone Call.

When the telephone user ends the call, a tone sounds and the display shows Phone Call Ended.

If the call ends while you are entering the extra digits requested by the Phone Call, your radio returns to the screen you were on prior to initiating the call.

**Note:** During channel access, press  to dismiss the call attempt and a tone sounds.

**Note:** During the call, when you press **One Touch Access** button with the deaccess code preconfigured or enter the deaccess code as the input for extra digits, your radio attempts to end the call.

**Note:** The access or deaccess code cannot be more than 10 characters.

## Stopping a Radio Call

This feature allows you to stop an ongoing Group or Private Call to free the channel for transmission. For example, when a radio experiences a “stuck microphone” condition where the **PTT** button is inadvertently pressed by the user.

Your radio must be programmed to allow you to use this feature.

- 1 Press the programmed **Transmit Interrupt Remote Dekey** button, while on the relevant channel.
- 2 Wait for acknowledgment.

The radio sounds a positive indicator tone and the display shows `Remote Dekey Success`, indicating that the channel is now free. The display shows `Call Interrupted`, and the radio sounds a negative indicator tone until the **PTT** button is released, if it is transmitting an interruptible call that is stopped via this feature.

**OR**

The radio sounds a negative indicator tone and the display shows `Remote Dekey Failed`.

## Talkaround














You can continue to communicate when your repeater is not operating, or when your radio is out of the repeater's range but within talking range of other radios.

This is called "talkaround".

**Note:** This feature is not applicable in Capacity Plus and Linked Capacity Plus.

The Talkaround setting is retained even after powering down.

You can toggle between talkaround and repeater modes by pressing the programmed **Repeater/Talkaround** button **OR** using the radio menu as described next.

- 1  to access the menu.
- 2  or  to `Utilities` and press  to select.
- 3  or  to `Radio Settings` and press  to select.
- 4  or  to `Talkaround` and press  to select.  
You can also use  or  to change the selected option.
- 5 Press  to enable/disable the Talkaround.

The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.

---

## Monitoring Features

---

### Monitoring a Channel

Use the Monitor feature to make sure a channel is clear before transmitting.

This feature is not applicable in Capacity Plus and Linked Capacity Plus.

- 1 Press and hold the programmed **Monitor** button and listen for activity.

The Monitor icon appears on the display and the LED lights up solid yellow. You hear radio activity or total silence, depending on how your radio is programmed. This indicates that the channel is in use.

- 2 Press the **PTT** button to talk and release it to listen.
- 

### Permanent Monitor

Use the Permanent Monitor feature to continuously monitor a selected channel for activity.

**Note:** This feature is not applicable in Capacity Plus and Linked Capacity Plus.

- 1 Press the programmed **Permanent Monitor** button to activate permanent monitoring of the channel.  
Radio sounds an alert tone, the LED lights up solid yellow, and the display shows **Permanent Monitor On**. The Monitor icon appears on the display.
  - 2 Press the programmed **Permanent Monitor** button to exit Permanent Monitor mode.  
Radio sounds an alert tone, the LED turns off, and display shows **Radio sounds an alert tone**, the LED turns off.
-



## Advanced Features in Non-Connect Plus Mode

### Radio Check

If enabled, this feature allows you to determine if another radio is active in a system without disturbing the user of that radio. No audible or visual notification is shown on the target radio.




#### Sending a Radio Check




- 1 Access the Radio Check feature.

Radio Control	Steps
<b>Programmed Radio Check button</b>	<ol style="list-style-type: none"> <li>1 Press the programmed <b>Radio Check</b> button.</li> <li>2 ▲ or ▼ to the required subscriber alias or ID and press  to select.</li> </ol>
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu</li> </ol>

#### Radio Control


#### Steps

- 2 ▲ or ▼ to **Contacts** and press  to select
- 3 Use one of the steps described next to select the required subscriber alias or ID
  - select the subscriber alias or ID directly
    - ▲ or ▼ to the required subscriber alias or ID and press  to select.
  - use the **Manual Dial** menu
    - ▲ or ▼ to **Manual Dial** and press  to select.

Radio Control	Steps
	<ul style="list-style-type: none"> <li>— ▲ or ▼ to Radio Number and press  to select.</li> <li>— If there was previously dialed ID, the ID appears along with a blinking cursor. Else, the first line of the display shows Radio Number:; the second line of the display shows a blinking cursor. Use the keypad to edit/enter the ID, and press  to select.</li> </ul>
	<p>4 ▲ or ▼ to Radio Check and press  to select.</p>

The display shows transitional mini notice, indicating the request is in progress. The LED lights up solid green.

## 2 Wait for acknowledgement.

If the  button is pressed when the radio is waiting for acknowledgement, a tone sounds, and the radio terminates all retries and exits Radio Check mode.

If Radio Check is successful, a positive indicator tone sounds and the display shows positive mini notice.

If Radio Check is unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Radio returns to the subscriber alias or ID screen.

## Remote Monitor




Use the Remote Monitor feature to turn on the microphone of a target radio (subscriber alias or IDs only). No audible or visual indication is given to the target radio. You can use this feature to monitor,

remotely, any audible activity surrounding the target radio.

Your radio must be programmed to allow you to use this feature.




### Initiating Remote Monitor





- 1 Access the Remote Monitor feature.

Radio Control	Steps
<b>Programmed Remote Monitor Button</b>	<ol style="list-style-type: none"> <li>1 Press the programmed <b>Remote Monitor</b> button.</li> <li>2 ▲ or ▼ to the required subscriber alias or ID and press  to select.</li> </ol>
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu</li> <li>2 ▲ or ▼ to <b>Contacts</b> and press  to select</li> <li>3 Use one of the steps described next to select the required subscriber alias or ID</li> </ol>

### Radio Control

### Steps

- select the subscriber alias or ID directly
- ▲ or ▼ to the required subscriber alias or ID and press  to select.
- use the **Manual Dial** menu
  - ▲ or ▼ to **Manual Dial** and press  to select.
  - ▲ or ▼ to **Radio Number** and press  to select.
- If there was previously dialed ID, the ID appears along with a blinking cursor. Else, the first line of the display shows

Radio Control	Steps
	<p>Radio Number;; the second line of the display shows a blinking cursor. Key in the subscriber alias or ID and press  to select.</p> <p>4  or  to Remote Mon. and press  to select.</p>

The display shows transitional mini notice, indicating the request is in progress. The LED lights up solid green.

## 2 Wait for acknowledgement.

If successful, a positive indicator tone sounds and the display shows positive mini notice. Your radio starts playing audio from the monitored radio for a programmed duration and display shows Rem. Monitor. Once the timer expires, the radio sounds an alert tone and the LED turns off.

If unsuccessful, the radio sounds a negative indicator tone the display shows negative mini notice.

## Scan Lists

Scan lists are created and assigned to individual channels/ groups. Your radio cycles through the programmed scan list for the current channel looking for voice activity. At each channel in the cycle the radio also cycles through the group list for that channel.


Your radio can support up to 250 scan lists, with a maximum of 16 members in a list.

You can add, delete, or prioritize channels by editing a scan list.


You can attach a new scan list to your radio via Front Panel Programming.

**Note:** This feature is not applicable in Capacity Plus and Linked Capacity Plus.


### Viewing an Entry in the Scan List

1  to access the menu.



- 2 ▲ or ▼ to Scan and press  to select.


---

- 3 ▲ or ▼ to View/Edit List and press  to select.


---

- 4 Use ▲ or ▼ to view each member on the list.  
 The Priority icon appears left of the member's alias, if set, to indicate whether the member is on a Priority 1 or Priority 2 channel list. You **cannot** have multiple Priority 1 or Priority 2 channels in a scan list.  
 There is no Priority icon if priority is set to **None**.


### Viewing an Entry in the Scan List by Alias Search

- 1  to access the menu.

---

- 2 ▲ or ▼ to Scan and press  to select.

---




- 3 ▲ or ▼ to View/Edit List and press  to select.

---

- 4 Key in the first character of the required alias.

A blinking cursor appears.

- 5 Use the keypad to type the required alias.


Press  to move one space to the left. Press  to move one space to the right. Press the  key to delete any unwanted characters.

The first line of the display shows the characters you keyed in. The second line of the display shows an alias that matches what you have keyed in.


The alias search is case-insensitive. If there are two or more entries with the same name, the radio displays the entry that is listed first in the scan list.


### Editing the Scan List


#### Adding a New Entry to the Scan List

- 1  to access the menu.



---

- 2 ▲ or ▼ to Scan and press  to select.

- 3 ▲ or ▼ to View/Edit List and press  to select.




- 4 ▲ or ▼ to Add Member and press  to select.


- 5 Select the required alias or ID by

Radio Control	Steps
<b>Radio Navigation Buttons</b>	▲ or ▼ to the required alias or ID.
<b>Keypad</b>	<p>Key in the first character of the required alias.</p> <p>A blinking cursor appears.</p> <p>Press ◀ to move one space to the left. Press ▶ to move one space to the right. Press the  key to delete any unwanted characters.</p> <p>Long press  to change the text entry method.</p>




### Radio Control Steps

The first line of the display shows the characters you keyed in. The next lines of the display show the short listed search results. The alias search is case-insensitive. If there are two or more aliases with the same name, the radio displays the alias that is listed first in the list.

- 6 Press  to select.
- 7 ▲ or ▼ to the required priority level and press  to select.  
The display shows Entry Saved, followed immediately by Add Another?.
- 8 Do one of the following:
- ▲ or ▼ to Yes and press  to select, and repeat Steps 5 on page 65 to 7 on page 65.

— ▲ or ▼ to No and press  to save the current list.




### Deleting an Entry from the Scan List


- 1  to access the menu.
- 2 ▲ or ▼ to Scan and press  to select.
- 3 ▲ or ▼ to View/Edit List and press  to select.
- 4 Select the required alias or ID by

Radio Control	Steps
Radio Navigation Buttons	▲ or ▼ to the required alias or ID.
Keypad	Key in the first character of the required alias. A blinking cursor appears.

### Radio Control

### Steps




Press  to move one space to the left. Press  to move one space to the right. Press the  key to delete any unwanted characters.

Long press  to change the text entry method.




The first line of the display shows the characters you keyed in. The next lines of the display show the short listed search results. The alias search is case-insensitive. If there are two or more aliases with the same name, the radio displays the alias that is listed first in the list.



- 5 Press  to select.

- 6 ▲ or ▼ to Delete and press  to select.


- 7 Do one of the following:
- At Delete Entry?, ▲ or ▼ to Yes and press  to delete entry. The display shows Entry Deleted.
  - ▲ or ▼ to No and press  to return to the previous screen.
- 
- 8 Repeat Steps 4 on page 66 to 7 on page 67 to delete other entries.
- After deleting all required aliases or IDs, long press  to return to the Home screen.

### Setting and Editing Priority for an Entry in the Scan List




- 1  to access the menu.
- 
- 2 ▲ or ▼ to Scan and press  to select.
- 
- 3 ▲ or ▼ to View/Edit List and press  to select.
- 
- 4 Select the required alias or ID by

Radio Control	Steps
<b>Radio Navigation Buttons</b>	▲ or ▼ to the required alias or ID.
<b>Keypad</b>	<p>Key in the first character of the required alias.</p> <p>A blinking cursor appears.</p> <p>Press ◀ to move one space to the left. Press ▶ to move one space to the right. Press the  key to delete any unwanted characters.</p> <p>Long press  to change the text entry method.</p> <p>The first line of the display shows the characters you keyed in. The next lines of the display show the short listed search results. The alias search is case-insensitive. If there are two or more aliases with</p>




Radio Control	Steps
	the same name, the radio displays the alias that is listed first in the list.

- 5 Press  to select.

---

  - 6  or  to Edit Priority and press  to select.

---

  - 7  or  to the required priority level and press  to select.  
The display shows Entry Saved before returning to the previous screen.
- Note:**  
The Priority icon appears left of the member's name.  
There is no Priority icon if priority is set to **None**.

## Scan

---

When you start a scan, your radio cycles through the programmed scan list for the current channel looking for voice activity.


The LED blinks yellow and you see the Scan icon on the display.


There are two ways of initiating scan:

- **Main Channel Scan (Manual):** Your radio scans all the channels/groups in your scan list. On entering scan, your radio may – depending on the settings – automatically start on the last scanned “active” channel/group or on the channel where scan was initiated.
- **Auto Scan (Automatic):** Your radio automatically starts scanning when you select a channel/group that has Auto Scan enabled.


**Note:** This feature is not applicable in Capacity Plus and Linked Capacity Plus.

### Setting an Active Scan List


- 1  to access the menu.
-

- 2 ▲ or ▼ to Scan and press  to select.

---

- 3 ▲ or ▼ to Set Active List and press  to select.

---

- 4 ▲ or ▼ to the required list and press  to select.

---

The list selected will be your active scan list.


### Starting and Stopping Scan

While scanning, the radio will only accept data (e.g. text message, location, telemetry, or PC data) if received on its Selected Channel.


You can start and stop scanning by pressing the programmed **Scan** button **OR** follow the procedure described next.

- 1 Use the Channel Selector Knob to select a channel programmed with a scan list.


---

- 2  to access the menu.

---

- 3 ▲ or ▼ to Scan and press  to select.

- The display shows Turn On if scan is disabled.
  - The display shows Turn Off if scan is enabled.
- 

- 4 Press  to select.
    - The LED blinks yellow and the Scan icon is displayed, when Scan is enabled.
    - The LED turns off and the Scan icon is not displayed, when Scan is disabled.
- 

### Responding to a Transmission During a Scan

During scanning, your radio stops on a channel/group where activity is detected. Your radio unmutes and the incoming call sounds through the radio's speaker. The radio stays on that channel while the activity is present and for a programmed time period known as "hang time".

- 1 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
 

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond.
-

- 2 Press the **PTT** button during hang time. The LED lights up solid green.

---

- 3 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

---

- 4 Release the **PTT** button to listen.  
If you do not respond within the hang time, the radio returns to scanning other channels/groups.

### Deleting a Nuisance Channel

If a channel continually generates unwanted calls or noise (termed a “nuisance” channel), you can temporarily remove the unwanted channel from the scan list.

This capability does not apply to the channel designated as the Selected Channel.

Deleting a “nuisance” channel is **only** possible through the programmed **Nuisance Channel Delete** button. This feature is **not** accessible through the menu.

- 1 When your radio “locks on to” an unwanted or nuisance channel, press the programmed

**Nuisance Channel Delete** button until you hear a tone.

- 2 Release the **Nuisance Channel Delete** button. The nuisance channel is deleted.

### Restoring a Nuisance Channel

To restore the deleted nuisance channel, do one of the following:

- Turn the radio off and then power it on again.
- Stop and restart a scan via the programmed **Scan** button or menu.
- Change channel or zone.

### Contact Settings

Contacts provides “address-book” capabilities on your radio. Each entry corresponds to an alias or ID that you use to initiate a call.

Each entry, depending on context, associates with **one** of five types of calls: Group Call, Private Call, All Call, PC Call or Dispatch Call.

PC Call and Dispatch Call are data-related. They are only available with the applications. Refer to the data applications documentation for more information.

**Note:**

If the Privacy feature is enabled on a channel, you can make privacy-enabled Group Call, Private Call, and All Call on that channel. Only target radios with the same Privacy Key OR the same Key Value and Key ID as your radio will be able to unscramble the transmission.

See [Privacy](#) on page 111 for more information.

Additionally, Contacts menu allows you to assign each entry to a programmable number key or more on a keypad. If an entry is assigned to a number key, your radio can perform a quick dial on the entry.

Your radio supports maximum of 1000 Contact list entries.


Each entry within Contacts displays the following information:

- Call Type
- Call Alias
- Call ID




**Note:**

You can add or edit subscriber IDs for the Digital Contacts list.



**Making a Group Call from Contacts**

- 1  to access the menu.

---

- 2  or  to `Contacts` and press  to select. The entries are alphabetically sorted.

---

- 3  or  to the required group alias or ID.

---

- 4 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 5 Press the **PTT** button to make the call. The LED lights up solid green. The first line displays the subscriber alias or ID. The second line displays `Private Call` and the Private Call icon

---

- 6 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.

---

- 7 Release the **PTT** button to listen. When any user in the group responds, the LED blinks green, the display shows the transmitting user's ID, the radio unmutes and the response sounds through the radio's speaker.

---




- 8 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.




If there is no voice activity for a predetermined period of time, the call ends.

- 9 You hear a short tone. The display shows `Call Ended`.




### Making a Private Call from Contacts








- 1  to access the menu.

---

- 2  or  to `Contacts` and press  to select.  
The entries are alphabetically sorted.

---

- 3 Use one of the steps described next to select the required subscriber alias or ID:
  - select the subscriber alias or ID directly
    -  or  to the required subscriber alias or ID and press  to select.

- use the `Manual Dial` menu
  -  or  to `Manual Dial` and press  to select.
  -  or  to `Radio Number` and press  to select.
  - If there was previously dialed ID, the ID appears along with a blinking cursor. Else, the first line of the display shows `Radio Number:;`; the second line of the display shows a blinking cursor. Use the keypad to edit/enter the ID. Press  to select.

- 4 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 5 Press the **PTT** button to make the call. The LED lights up solid green. The first line displays the subscriber alias or ID. The second line displays `Private Call` and the Private Call icon.

---

- 6 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.

- 7 Release the **PTT** button to listen.  
When the target radio responds, the LED blinks green and the display shows the transmitting user's ID. the radio unmutes and the response sounds through the radio's speaker.


---

- 8 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.




If there is no voice activity for a predetermined period of time, the call ends.

The display shows `Call Ended`.

### Making a Phone Call from Contacts











- 1  to access the menu.

---

- 2  or  to `Contacts` and press  to select.  
The entries are alphabetically sorted.

---


- 3 Use one of the steps described next to select the required subscriber alias or ID:


- select the subscriber alias or ID directly
-  or  to the required subscriber alias or ID and press  to select.
- use the `Manual Dial` menu
-  or  to `Manual Dial` and press  to select.
-  or  to `Phone Number` and press  to select.
- The first line of the display shows `Phone Number:` , the second line of the display shows a blinking cursor. Use the keypad to enter a telephone number, and press  to select the entered number.

If the entry selected is empty, a negative indicator tone sounds and the display shows `Phone Call Invalid #`.

When you press **PTT** button while in the Phone Contacts screen, a negative indicator tone sounds and the display shows `Press OK to Place Phone Call`.

4 ▲ or ▼ to Call Phone and press  to select.

5 If the access code was not preconfigured in the Contacts list, the first line of the display shows Access Code: . The second line of the display shows a blinking cursor. Enter the access code and press  to proceed.

During channel access, press  to dismiss the call attempt and a negative indicator tone sounds. Your radio returns to the Call Phone screen.

The access code cannot be more than 10 characters.

The first line of the display shows Calling. The second line of the display shows the subscriber alias or ID, and the Phone Call icon.

If successful, the DTMF tone sounds. You hear the dialing tone of the telephone user. The first line of the display shows the subscriber alias or ID, and the RSSI icon. The second line of the display shows Phone Call and the Phone Call icon.

If unsuccessful, a tone sounds and the display shows Phone Call Failed. Your radio returns to

the Access Code input screen. If the access code was preconfigured in the Contacts list, the radio returns to the screen you were on prior to initiating the call.

6 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.


7 Do one of the following:

- Press the **PTT** button to talk and release it to listen.

**Note:**

The RSSI icon disappears during transmission.

To enter extra digits, if requested by the Phone Call, press any keypad key to begin the input of extra digits. The first line of the display shows Extra Digits: . The second line of the display shows a blinking cursor. Enter the extra

digits and press  to proceed. The DTMF tone sounds and the radio returns to the previous screen.

If the call ends while you are entering the extra digits requested by the Phone Call, your radio

returns to the screen you were on prior to initiating the call.

- Press **One Touch Access** button.

**Note:**

The DTMF tone sounds.


If the entry for the **One Touch Access** button is empty, a negative indicator tone sounds.

During the call, when you press **One Touch Access** button with the deaccess code preconfigured or enter the deaccess code as the input for extra digits, your radio attempts to end the call.

During channel access and access/deaccess code or extra digits transmission, your radio responds to **On/ Off/Volume Control Knob** and **Channel Selector Knob** only. A tone sounds for every invalid input.

- 
- 8 Press  to end the call.

- 
- 9 If deaccess code was not preconfigured in the Contacts list, the first line of the display shows De-Access Code: . The second line of the display

shows a blinking cursor. Enter the deaccess code and press  to proceed.

The deaccess code cannot be more than 10 characters.

The DTMF tone sounds and the display shows Ending Phone Call.

If successful, a tone sounds and the display shows Phone Call Ended. Your radio returns to the Call Phone screen.

If unsuccessful, your radio returns to the Phone Call screen. Repeat Steps 8 on page 75 and 9 on page 75 or wait for the telephone user to end the call.

When the telephone user ends the call, a tone sounds and the display shows Phone Call Ended.

---

### Making a Call Alias Search

You can also use alias or alphanumeric search to retrieve the required subscriber alias.


This feature is only applicable while in Contacts.

**Note:**




Press  button or  to exit alias search.

If you release the PTT button while the radio is setting up the call, it exits without any indication and returns to the previous screen.

Your radio may be programmed to perform a radio presence check prior to setting up the Private Call. If the target radio is not available, you hear a short tone and see negative mini notice on the display.

- 1  to access the menu.

---





- 2  or  to **Contacts** and press  to select. The entries are alphabetically sorted.

---

- 3 Key in the first character of the required alias. A blinking cursor appears.

---

- 4 Use the keypad to type the required alias.

Press  to move one space to the left. Press  to move one space to the right. Press the  key to delete any unwanted characters. Long press  to change text entry method.

The first line of the display shows the characters you keyed in. The next lines of the display show the short listed search results. The alias search is case-insensitive. If there are two or more entries with the same name, the radio displays the entry that is listed first in the Contacts list.

- 5 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 6 Press the **PTT** button to make the call. The LED lights up solid green. The display shows the destination alias.

---

- 7 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.

---

- 8 Release the PTT button to listen. When the target radio responds, the LED blinks green, the radio unmutes and the response sounds through the radio's speaker.

---

- 9 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

If there is no voice activity for a predetermined period of time, the call ends.

The display shows `Call Ended`.

---

## Making a Group, Private, Phone or All Call by Alias Search

You can also use alias or alphanumeric search to retrieve the required subscriber alias.

This feature is only applicable while in `Contacts`.

### Note:




Press  button or  to exit alias search.

If you release the PTT button while the radio is setting up the call, it exits without any indication and returns to the previous screen.

Your radio may be programmed to perform a radio presence check prior to setting up the Private Call. If the target radio is not available, you hear a short tone and see `Party Not Available` on the display; the radio returns to the menu prior to initiating the radio presence check.

1  to access the menu.

---




2  or  to `Contacts` and press  to select.  
The entries are alphabetically sorted.

---

3 Key in the first character of the required alias.  
A blinking cursor appears.

---

4 Use the keypad to type the required alias.

Press  to move one space to the left. Press  to move one space to the right. Press the  key to delete any unwanted characters.

The first line of the display shows the characters you keyed in. The second line of the display shows an alias that matches what you have keyed in. The alias search is case-insensitive. If there are two or more entries with the same name, the radio displays the entry that is listed first in the `Contacts` list.

---

5  or  to scroll to desired entry, if necessary.

---

6 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

7 Press the **PTT** button to make the call.

The LED lights up solid green. The first line displays the target radio's ID. The second line displays the call type and the Call icon.

**8** Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

**9** Release the **PTT** button to listen. When the target radio responds, the LED blinks green.


**10** If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the target radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

If there is no voice activity for a programmed period of time, the call ends.




You hear a short tone. The display shows `Call Ended`.

### Assigning an Entry to a Programmable Number Key




**Note:** See *Making a Group, Private or All Call with the Programmable Number Key* on page 55 for details on making a Group, Private or All Call with the programmed number key(s).

- 1**  to access the menu.




---

- 2**  or  to `Contacts` and press  to select. The entries are alphabetically sorted.










---

- 3**  or  to the required alias or ID and press  to select.

---

- 4**  or  to `Program Key` and press  to select.

---

- 5**  or  to the desired number key and press  to select.  
  
If the number key is currently assigned to another entry, the display shows `The Key is Already Assigned` and then, the first line of the display shows `Overwrite?`. Do one of the following.
  -  or  to `Yes` and press  to overwrite the number key assignment.
  -  or  to `No` and press  to return to the previous step.

Each entry can be associated to different number keys. You see a ✓ before each number key that is assigned to an entry. If the ✓ is before *Empty*, that number key is not assigned.



If a number key is assigned to an entry in a particular mode, this feature is not supported when you long press the number key in another mode.

The radio sounds a positive indicator tone and the display shows *Contact Saved*.



The screen automatically returns to the previous menu.




## Removing the Association between Entry and Programmable Number Key

- 1 Access the required alias or ID via:

Radio Control	Steps
<b>Programmed number key</b>	Long press the programmed number key to the required alias or ID; press  to select.
<b>Menu</b>	1  to access the menu

### Radio Control Steps


- 2 ▲ or ▼ to *Contacts* and press  to select. The entries are alphabetically sorted.
- 3 ▲ or ▼ to the required subscriber alias or ID and press  to select.

- 2 ▲ or ▼ to *Program Key* and press  to select.
  - 3 ▲ or ▼ to *Empty* and press  to select. The first line of the display shows *Clear from all keys? .*
  - 4 ▲ or ▼ to *Yes* and press  to select.
- Note:** When an entry is deleted, the association between the entry and its programmed number key(s) is removed.









The radio sounds a positive indicator tone and the display shows `Contact Saved`.






The screen automatically returns to the previous menu.


- 7 If adding a Radio Contact, ▲ or ▼ to the required ringer type and press  to select. The radio sounds a positive indicator tone and the display shows positive mini notice.

### Adding a New Contact


- 1  to access the menu.
- 2 ▲ or ▼ to `Contacts` and press  to select.
- 3 ▲ or ▼ to `New Contact` and press  to select.
- 4 ▲ or ▼ to the required contact type, either `Radio Contact` or `Phone Contact`, and press  to select.
- 5 Use the keypad to enter the contact number and press  to confirm.
- 6 Use the keypad to enter the contact name and press  to confirm.

### Sending a Message to a Contact

- 1  to access the menu.
- 2 ▲ or ▼ to `Contacts` and press  to select.
- 3 ▲ or ▼ to `New Contact` and press  to select.
- 4 ▲ or ▼ to the required contact type, either `Radio Contact` or `Phone Contact`, and press  to select.
- 5 ▲ or ▼ to the required alias and press  to select.

6 ▲ or ▼ to Send Message and press  to select.

---

7 Press  to send the message.

---

## Call Indicator Settings


---

### Activating and Deactivating Call Ringers for Call Alert


You can select, or turn on or off ringing tones for a received Call Alert.

1  to access the menu.


---

2 ▲ or ▼ to Utilities and press  to select.


---

3 ▲ or ▼ to Radio Settings and press  to select.


---

4 ▲ or ▼ to Tones/Alert and press  to select.


---

5 ▲ or ▼ to Call Ringers and press  to select.

---

6 ▲ or ▼ to Call Alert and press  to select.  
The current tone is indicated by a ✓.

---

7 ▲ or ▼ to the required tone and press  to select.

You can also use ◀ or ▶ to change the selected option.

✓ appears beside selected tone.

---

### Activating and Deactivating Call Ringers for Private Calls


You can turn on or off the ringing tones for a received Private Call.

1  to access the menu.


---

2 ▲ or ▼ to Utilities and press  to select.


---

3 ▲ or ▼ to Radio Settings and press  to select.


---

4 ▲ or ▼ to Tones/Alerts and press  to select.

---


5 ▲ or ▼ to Call Ringers and press  to select.

---

6 ▲ or ▼ to Private Call and press  to select.

You can also use ◀ or ▶ to change the selected option.

---

7 Press  to enable/disable the Private Call ringing tones.


The display shows ✓ beside Enabled, if Private Call ringing tones are enabled.

The ✓ disappears from beside Enabled, if Private Call ringing tones are disabled.


---

## Activating and Deactivating Call Ringers for Text Message


You can turn on or off the ringing tones for a received Text Message.

1  to access the menu.


---

2 ▲ or ▼ to Utilities and press  to select.


---

3 ▲ or ▼ to Radio Settings and press  to select.


---

4 ▲ or ▼ to Tones/Alerts and press  to select.

---


5 ▲ or ▼ to Call Ringers and press  to select.

---

6 ▲ or ▼ to Text Message and press  to select.







The current tone is indicated by a ✓.

---



- 7 ▲ or ▼ to the required tone and press  to select.  
✓ appears beside selected tone.

## Activating and Deactivating Call Ringers for Telemetry Status with Text

You can turn on or off the ringing tones for a received Telemetry Status with Text.

- 1  to access the menu.
- 
- 2 ▲ or ▼ to Utilities and press  to select.
- 
- 3 ▲ or ▼ to Radio Settings and press  to select.
- 
- 4 ▲ or ▼ to Tones/Alerts and press  to select.
- 
- 5 ▲ or ▼ to Call Ringers and press  to select.
- 
- 6 ▲ or ▼ to Telemetry and press  to select.



The current tone is indicated by a ✓.


- 7 Do one of the following:
- ▲ or ▼ to the preferred tone and press  to select. The display shows Tone <Number> Selected and a ✓ appears left of the selected tone.
  - ▲ or ▼ to Turn Off and press  to select. The display shows Telemetry Ringer Off and a ✓ appears left of Turn Off.

## Assigning Ring Styles


You can program your radio to sound one of ten predefined ringing tones when receiving a Call Alert or a Text Message from a particular contact.

The radio sounds out each ring style as you navigate through the list.


- 1  to access the menu.
- 
- 2 ▲ or ▼ to Contacts and press  to select.  
The entries are alphabetically sorted.

- 3 ▲ or ▼ to the required alias or ID and press  to select.


---

- 4 ▲ or ▼ to View/Edit and press  to select.


---

- 5 ▲ or ▼ to Ringer and press  to select.


---

- 6 ▲ or ▼ to required ring style and press  to select.  
A ✓ indicates the current selected tone.


---

- 7 ▲ or ▼ to the required tone and press  to select. ✓ appears beside selected tone.  
The display shows Contact Saved.

### All Tones

- 1  to access the menu.

---

- 2 ▲ or ▼ to Utilities and press  to select.


- 3 Go to Radio Settings. Select Tones/Alerts. Select All Tones. Toggle All Tones to be enabled or disabled.

### Ring Alert Type Selection


You can program your the radio calls to one predetermined vibrate call. If All Tones status is disabled, the radio displays the All Tone Mute icon.

If All Tones status is enabled, the related ring alert type is displayed.

The radio sounds one vibration if it is a momentary ring style. The radio will vibrate repetitively if it is a repetitive ring style. When set to Ring & Vibrate, the radio sounds a specific ring tone if there is any incoming radio transaction (i.e. Call Alert, Message or Job Ticket). It sounds like a good key tone or missed call. If the notification list is not empty, the radio repeats a vibration every 5 minutes.

- 1  to access the menu.

---

- 2 ▲ or ▼ to Utilities and press  to select.


- 3 Go to Radio Settings. Select Tones/Alerts. Select Ring Alert Type.
- 

- 4 Choose from one of the following:




- Ring
  - Vibrate
  - Vibrate & Ring
  - Silent
- 

### Escalating Alarm Tone Volume




You can program your radio to continually alert you when a radio call remains unanswered. This is done by automatically increasing the alarm tone volume over time. This feature is known as Escalert.




- 1  to access the menu.




---



  - 2  or  to Utilities and press  to select.

---




  - 3  or  to Radio Settings and press  to select.
- 

- 4  or  to Tones/Alerts and press  to select.
- 

- 5  or  to Escalert and press  to select.

You can also use  or  to change the selected option.

---

- 6 Press  to enable/disable the Escalert.  
The display shows  beside Enabled.  
The  disappears from beside Enabled.
- 

### Call Log Features


Your radio keeps track of all recent outgoing, answered, and missed Private Calls. Use the call log feature to view and manage recent calls.

You can perform the following tasks in each of your call lists:




- Store ID to Contacts
- Delete
- View Details

## Viewing Recent Calls




The lists are Missed, Answered, and Outgoing.

- 1  to access the menu.



---

- 2  or  to Call Log and press  to select.

---

- 3  or  to preferred list and press  to select. The display shows the most recent entry at the top of the list.


---


- 4  or  to view the list.  
Press the **PTT** button to start a Private Call with the current selected alias or ID.

## Missed Call Screen

Whenever a call is missed, your radio displays a missed call message in the notification list. The display shows Missed Calls.


Do one of the following:

- Press  to view the missed call ID. The missed call log list appears on display.




- Press  to store or delete the entry.

## Storing an Alias from a Call List




You can also store an ID without an alias.

- 1  to access the menu.





---

- 2  or  to Call Log and press  to select.


---

- 3  or  to the required list and press  to select.




---


- 4  or  to Store and press  to select. A blinking cursor appears. If needed, key in the alias for that ID and press . The display shows positive mini notice.

## Deleting a Call from a Call List


- 1  to access the menu.


---

- 2  or  to Call Log and press  to select.



- 3 ▲ or ▼ to the required list and press  to select.

When you select a call list and it contains no entries, the display shows *List Empty*, and sounds a low tone if Keypad Tones are turned on (see [Turning Keypad Tones On or Off](#) on page 129).

- 4 ▲ or ▼ to the required alias or ID and press  to select.

- 5 ▲ or ▼ to *Delete Entry?* and press  to select.


- 6 Do one of the following:


- Press  to select *Yes* to delete the entry. The display shows *Entry Deleted*.
- ▲ or ▼ to *No*, and press the  button to return to the previous screen.


## Viewing Details from a Call List

- 1  to access the menu.

- 2 ▲ or ▼ to *Call Log* and press  to select.

- 3 ▲ or ▼ to the required list and press  to select.

- 4 ▲ or ▼ to the required alias or ID and press  to select.

- 5 ▲ or ▼ to *View Details* and press  to select.  
Display shows details.

## Call Alert Operation

Call Alert paging enables you to alert a specific radio user to call you back when they are able to do so.


This feature is applicable for subscriber aliases or IDs only and is accessible through the menu via *Contacts* or manual dial.



## Receiving and Responding to a Call Alert

When you receive a Call Alert page, you see the notification list listing a Call Alert with the alias or ID of the calling radio on the display.

When you hear a repetitive tone and the LED blinks yellow, do one of the following:





- Press the **PTT** button while the display still shows the Call Alert in the Notification List to respond with a Private Call.
- Press  to exit the Notification List. The alert is moved to the Missed Call Log.











See [Notification List](#) on page 127 for details about the Notification List.




See [Call Log Features](#) on page 85 for details about the Missed Call List.

---

### Making a Call Alert from the Contact List

- 1  to access the menu.
- 
- 2  or  to Contacts and press  to select.
- 

- 3 Use one of the steps described next to select the required subscriber alias or ID:
    - select the subscriber alias or ID directly
      -  or  to the required subscriber alias or ID and press  to select.
    - use the Manual Dial menu
      -  or  to Manual Dial and press  to select.
      -  or  to Radio Contact and press  to select.
      - The first line of the display shows Radio Number: , the second line of the display shows a blinking cursor. Enter the subscriber ID you want to page and press .
- 

- 4  or  to Call Alert and press  to select.  
The display shows Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.

The LED lights up solid green when your radio is sending the Call Alert.

If the Call Alert acknowledgement is received, the display shows positive mini notice.

If the Call Alert acknowledgement is not received, the display shows negative mini notice.

---

### Making a Call Alert with the One Touch Access Button

- Press the programmed **One Touch Access** button to make a Call Alert to the predefined alias or ID.

The display shows `Call Alert` and the subscriber alias or ID, indicating that the Call Alert has been sent.

The LED lights up solid green when your radio is sending the Call Alert.

If the Call Alert acknowledgement is received, the display shows positive mini notice.

If the Call Alert acknowledgement is not received, the display shows negative mini notice.

## Emergency Operation

---

An Emergency Alarm is used to indicate a critical situation. You are able to initiate an Emergency at any time on any screen display even when there is activity on the current channel.

Your dealer can set the duration of a button press for the programmed **Emergency** button, except for long press, which is similar with all other buttons:

The **Emergency** button is assigned with the Emergency On/Off feature. Check with your dealer for the assigned operation of the **Emergency** button.

### Note:

If the short press for the **Emergency** button is assigned to turn on the Emergency mode, then the long press for the **Emergency** button is assigned to exit the Emergency mode.

If the long press for the **Emergency** button is assigned to turn on the Emergency mode, then the short press for the **Emergency** button is assigned to exit the Emergency mode.

Your radio supports **three** Emergency Alarms:

- Emergency Alarm

- Emergency Alarm with Call
- Emergency Alarm with Voice to Follow

**Note:** Only **ONE** of the Emergency Alarms above can be assigned to the programmed **Emergency** button.







In addition, each alarm has the following types:



- **Regular** – Radio transmits an alarm signal and shows audio and/or visual indicators.
- **Silent** – Radio transmits an alarm signal without any audio or visual indicators. Radio receives calls without any sound through the radio's speaker, until you press the **PTT** button to initiate the call.
- **Silent with Voice** – Radio transmits an alarm signal without any audio or visual indicators, but allow incoming calls to sound through the radio's speaker.

## Receiving an Emergency Alarm



On receiving an emergency alarm the emergency icon appears, a tone sounds, the LED blinks red and the radio displays the emergency caller alias. If more than one alarm has occurred all emergency caller aliases are displayed in an Alarm List.

- 1 When receiving an emergency alarm, do one of the following:

- If a single emergency call alias is displayed, press  to view more details. press  again to view your action details.
- If the multiple emergency caller aliases are displayed in the Alarm List,  or  to the required alias and press  to view more details. Press  again to view your action items.

- 2 Press  and select Yes to exit the Alarm List.  
To revisit the Alarm List, press  to access the menu and select **Alarm List**.

## Responding to an Emergency Alarm

- 1 In the Alarm List,  or  to the required alias.
- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.  
If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the

transmitting radio releases the **PTT** button, indicating the channel is now available for use.

---

- 3** Press **PTT** button to transmit non-emergency voice to the same group that the Emergency Alarm was targeted to.

Emergency voice can only be transmitted by the emergency initiating radio. All other radios (including the emergency receiving radio) transmit non-emergency voice.

The LED lights up solid green. Your radio remains in the Emergency mode.

---

- 4** Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 

- 5** Release the PTT button to listen.  
When the emergency initiating radio responds, the LED blinks green, the LED blinks green, the radio unmutes and the response sounds through the radio's speaker. You see the Group Call icon, the group ID, and transmitting radio ID on your display.
- 

- 6** Your radio displays the Alarm List.
- 

## Sending an Emergency Alarm

This feature allows you to send an Emergency Alarm, a non-voice signal, which triggers an alert indication on a group of radios.

If your radio is set to Silent, it will not display any audio or visual indicators during Emergency mode.

Press the programmed **Emergency On** button.

The display shows Tx Alarm and the destination alias. The LED lights up solid green and the Emergency icon appears on the Home screen display.

When an Emergency Alarm acknowledgement is received, the Emergency tone sounds and the LED blinks green. The display shows Alarm Sent.

If your radio does not receive an Emergency Alarm acknowledgement, and after all retries have been exhausted, a tone sounds and the display shows Alarm Failed.

Radio exits the Emergency Alarm mode and returns to the Home screen.

---

## Sending an Emergency Alarm with Call

This feature allows you to send an Emergency Alarm to a group of radios. Upon acknowledgement by a radio within the group, the group of radios can communicate over a programmed Emergency channel.

If your radio is set to Silent, it will not display any audio or visual indicators during Emergency mode, or allow any received calls to sound through the radio's speaker, until you press the **PTT** button to initiate the call.

If your radio is set to Silent with Voice, it will not display any audio or visual indicators during Emergency mode, but allow incoming calls to sound through the radio's speaker. The indicators will only appear once you press the **PTT** button to initiate, or respond to, the call.

### 1 Press the programmed **Emergency On** button.

The display shows Tx Alarm and the destination alias. The LED lights up solid green and the Emergency icon appears on the Home screen display.

When an Emergency Alarm acknowledgment is received, the Emergency tone sounds and the LED blinks green. The display shows Alarm Sent.

---

- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 3 Press **PTT** button to make the call. The LED lights up solid green and the Group icon appears on the display.

---

- 4 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

---

- 5 Release the **PTT** button to listen. If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond.

---

- 6 Press the **PTT** button to respond.

---

- 7 Once your call ends, press **Emergency Off** button to exit the Emergency mode. The radio returns to the Home screen.

---

## Sending an Emergency Alarm with Voice to Follow

This feature allows you to send an Emergency Alarm to a group of radios. Your radio's microphone is automatically activated, allowing you to communicate with the group of radios without pressing the **PTT** button.

This activated microphone state is also known as "hot mic".

If your radio has Emergency Cycle Mode enabled, repetitions of hot mic and receiving period are made for a programmed duration.

**Note:** During Emergency Cycle Mode, received calls sound through the radio's speaker.

If you press the **PTT** button during the programmed receiving period, you will hear a prohibit tone, indicating that you should release the **PTT** button. The radio ignores the **PTT** press and remains in Emergency mode.

**Note:** If you press the PTT button during hot mic, and continue to press it after the hot mic duration expires, the radio continues to transmit until you release the PTT button.

If your radio is set to Silent, it will not display any audio or visual indicators during Emergency mode, or allow any received calls to sound through the radio's speaker, until the programmed hot mic transmission period is over, and you press the **PTT** button.

If your radio is set to Silent with Voice, it will not display any audio or visual indicators during Emergency mode when you are making the call with hot mic, but allow sound through the radio's speaker when the target radio responds after the programmed hot mic transmission period is over. The indicators will only appear when you press the **PTT** button.

**Note:** If the Emergency Alarm request fails, the radio does not retry to send the request, and enters the hot mic state directly.

- 1 Press the programmed **Emergency On** button. The display shows Tx Alarm and the destination alias. The LED lights up solid green and the Emergency icon is displayed.

---

- 2 Once the display shows Alarm Sent, speak clearly into the microphone. When hot mic has been enabled, the radio automatically transmits without a **PTT** press until the hot mic duration expires. While transmitting,

the LED lights up solid green and the Emergency icon appears on the display.

---

- 3 The radio automatically stops transmitting when the cycling duration between hot mic and receiving calls expires, if Emergency Cycle Mode is enabled.

---

  - 4 Once the hot mic duration expires, the radio automatically stops transmitting. To transmit again, press the **PTT** button.
- 

### Reinitiating an Emergency Mode

**Note:** This feature is only applicable to the radio sending the Emergency Alarm.

There are two instances where this can happen:

- You change the channel while the radio is in Emergency mode. This exits the Emergency mode. If Emergency Alarm is enabled on this new channel, the radio reinitiates Emergency.
- You press the programmed **Emergency On** button during an Emergency initiation/transmission state. This causes the radio to exit this state, and to reinitiate Emergency.

### Exiting Emergency Mode

**Note:** This feature is only applicable to the radio sending the Emergency Alarm.

Your radio exits Emergency mode when **one** of the following occurs:

- Emergency Alarm acknowledgement is received (for **Emergency Alarm** only)
- All retries to send the alarm have been exhausted
- The **Emergency Off** button is pressed.

#### **Note:**

If your radio is powered off, it exits the Emergency mode. The radio will not reinitiate the Emergency mode automatically when it is turned on again.

If you change channels when your radio is in Emergency mode to a channel that has no emergency system configured, No Emergency is shown on your display.

### Text Message Features

---





Your radio is able to receive data, for example a text message, from another radio or an e-mail application.




The **maximum** length of characters for a text message, including the subject line (seen when receiving message from an e-mail application), is **140** whereas for receiving this is 280 characters.




**Note:** Long press  at any time to return to the Home screen.


## Writing and Sending a Text Message










- 1 Access the **Text Message** feature.

Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Messages and press  to select.</li> </ol>

- 2  or  to **Compose** and press  to select. A blinking cursor appears.
- 3 Use the keypad to type your message.

Press  to move one space to the left. Press  or the  key to move one space to the right.

Press the  key to delete any unwanted characters. Long press  to change text entry method.

- 4 Press  once message is composed.
- 5 Depending on whether you want to send, save, re-edit, or delete the newly composed message, do one of the following.
  -  or  to **Send**, and press  to send the message.
  -  or  to **Save**, and press  to save the message to the Drafts folder.
  -  to edit the message.
  -  again to choose between deleting the message or saving it to the Drafts folder.

The display shows transitional mini notice, confirming your message is being sent.



If the message is sent successfully, a tone sounds and the display shows positive mini notice.

If the message cannot be sent, a low tone sounds and the display shows negative mini notice.


If the text message fails to send, the radio returns you to the **Resend** option screen (see [Managing Fail-to-Send Text Messages](#) on page 100)




### Sending a Quick Text Message




Your radio supports a maximum of 50 Quick Text messages as programmed by your dealer.




While Quick Text messages are predefined, you can edit each message before sending it.






- 1 Access the **Text Message** feature.


Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	1  to access the menu.

Radio Controls	Steps
	2  or  to <b>Messages</b> and press  to select.





- 2  or  to **Quick Text** and press  to select.

- 3  or  to the required Quick Text and press  to select.




- 4 Use the keypad to edit the message, if required.  
Press  to move one space to the left. Press  or the  key to move one space to the right.  
Press the  key to delete any unwanted characters. Long press  to change text entry method.


- 5 Press  once message is composed.

- 6 Depending on whether you want to send, save, re-edit, or delete the newly composed message, do one of the following.

- ▲ or ▼ to **Send**, and press  to send the message.
- ▲ or ▼ to **Save**, and press  to save the message to the Drafts folder.
-  to edit the message.
-  again to choose between deleting the message or saving it to the Drafts folder.

- 7 If you are sending the message, select the recipient by

- ▲ or ▼ to the required alias or ID and press  to select.
- ▲ or ▼ to **Manual Dial**, and press  to select. The first line of the display shows **Radio Number:**. The second line of the display shows a blinking cursor. Key in the subscriber alias or ID and press .

The display shows , transitional mini notice, confirming your message is being sent.

If the message is sent successfully, a tone sounds and the display shows positive mini notice.

If the message cannot be sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the **Resend** option screen (see [Managing Fail-to-Send Text Messages](#) on page 100).

---

### Sending a Quick Text Message

- Press the programmed **One Touch Access** button to send a predefined Quick Text message to a predefined alias or ID.

The display shows transitional mini notice, confirming your message is being sent.

If the message is sent, a tone sounds and the display shows positive mini notice.

If the message cannot be sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the **Resend** option screen (see [Managing Fail-to-Send Text Messages](#) on page 100).

## Accessing the Drafts Folder


You can save a text message to send it at a later time.

If a **PTT** button press or a mode change causes the radio to exit the text message writing/editing screen while you are in the process of writing or editing a text message, your current text message is automatically saved to the Drafts folder.

The most recent saved text message is always added to the top of the Drafts list.





The Drafts folder stores a maximum of ten (10) last saved messages. When the folder is full, the next saved text message automatically replaces the oldest text message in the folder.




### Note:




Long press  at any time to return to the Home screen.

### Viewing a Saved Text Message





- 1 Access the **Text Message** feature.




Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Messages and press  to select.</li> </ol>



- 2  or  to Drafts and press  to select.

- 3  or  to the required message and press  to select.

### Editing and Sending a Saved Text Message




- 1 Press  again while viewing the message.
- 2  or  to Edit and press  to select. A blinking cursor appears.
- 3 Use the keypad to type your message.





Press  to move one space to the left. Press  or the  key to move one space to the right.

Press the  key to delete any unwanted characters. Long press  to change text entry method.

4 Press  once message is composed.

5 Select the message recipient by

—  or  to the required alias or ID and press  to select.

—  or  to Manual Dial, and press  to select. The first line of the display shows Radio Number: . The second line of the display shows a blinking cursor. Key in the subscriber alias or ID and press .

The display shows transitional mini notice, confirming your message is being sent.





If the message is sent successfully, a tone sounds and the display shows positive mini notice.




If the message cannot be sent, a low tone sounds and the display shows negative mini notice.




If the text message cannot be sent, it is moved to the Sent Items folder and marked with a Send Failed icon.

### Deleting a Saved Text Message from Drafts

1 Access the **Text Message** feature.




Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	1  to access the menu. 2  or  to Messages and press  to select.

2  or  to Drafts and press  to select.

3  or  to the required message and press  to select.

4 Press  again while viewing the message.

---

5  or  to Delete and press  to delete the text message.

---


### Managing Fail-to-Send Text Messages

You can select one of the following options while at the Resend option screen:

- Resend
- Forward
- Edit

**Note:** If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only edit and forward a Fail-to-Send message.

### Resending a Text Message

— Press  to resend the same message to the same subscriber/group alias or ID.

If the message is sent successfully, a tone sounds and the display shows positive mini notice.

If the message cannot be sent, the display shows negative mini notice.




### Forwarding a Text Message





Select Forward to send the message to another subscriber/ group alias or ID.

1  or  to Forward and press  to select.

---

2 Select the message recipient by

—  or  to the required alias or ID and press  to select.

—  or  to Manual Dial, and press  to select. The first line of the display shows Radio Number: . The second line of the display shows a blinking cursor. Key in the subscriber alias or ID and press .

The display shows Text Message:  
<Subscriber/Group Alias or ID>, confirming your message is being sent.


If the message is sent successfully, a tone sounds and the display shows positive mini notice.

If the message cannot be sent, a low tone sounds and the display shows negative mini notice.




### Editing a Text Message


Select **Edit** to edit the message before sending it.

**Note:** If a subject line is present (for messages received from an e-mail application), you cannot edit it.

- 1 ▲ or ▼ to **Edit** and press  to select. A blinking cursor appears.


- 2 Use the keypad to edit your message.


Press  to move one space to the left. Press  or the  key to move one space to the right.


Press the  key to delete any unwanted characters. Long press  to change text entry method.


- 3 Press  once message is composed.

- 4 Depending on whether you want to send, save, re-edit, or delete the newly composed message, do one of the following.


- ▲ or ▼ to **Send**, and press  to send the message.



- ▲ or ▼ to **Save**, and press  to save the message to the Drafts folder.

-  to edit the message.

-  again to choose between deleting the message or saving it to the Drafts folder.

- 5 If you are sending the message, select the recipient by

- ▲ or ▼ to the required alias or ID and press  to select.

- ▲ or ▼ to **Manual Dial**, and press  to select. The first line of the display shows **Radio Number:**. The second line of the display shows a blinking cursor. Key in the subscriber alias or ID and press .

The display shows **Text Message:**  
 <Subscriber/Group Alias or ID>, confirming  
 your message is being sent.


If the message is sent successfully, a tone sounds  
 and the display shows positive mini notice.

If the message cannot be sent, a low tone sounds  
 and the display shows negative mini notice.

## Managing Sent Text Messages





Once a message is sent to another radio, it is saved  
 in Sent Items. The most recent sent text message is  
 always added to the top of the Sent Items list.



The Sent Items folder is capable of storing a  
 maximum of thirty (30) last sent messages. When the  
 folder is full, the next sent text message automatically  
 replaces the oldest text message in the folder.




**Note:** Long press  at any time to return to the  
 Home screen.

### Viewing a Sent Text Message

- 1 Access the **Text Message** feature.

Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Messages and press  to select.</li> </ol>

- 2  or  to Sent Items and press  to select.

- 3  or  to the required message and press  to select.

A subject line may be shown if the message is  
 from an e-mail application.


The icon at the top right corner of the screen  
 indicates the status of the message (see [Sent Item Icons](#) on page 38).




### Sending a Sent Text Message

You can select one of the following options while  
 viewing a sent text message:


- Resend
- Forward
- Edit
- Delete

**Note:** If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only edit, forward, or delete a Sent message.

1 Press  again while viewing the message.




2  or  to one of the options described next and press  to select.

Option	Steps
<b>Forward</b>	Select <b>Forward</b> to send the selected text message to another subscriber/group alias or ID (see <a href="#">Forwarding a Text Message</a> on page 100).
<b>Edit</b>	Select <b>Edit</b> to edit the selected text message before sending it (see <a href="#">Editing a Text Message</a> on page 101).

Option	Steps
<b>Delete</b>	Select <b>Delete</b> to delete the text message.
<b>Resend</b>	<p>Select <b>Resend</b> to resend the selected text message to the same subscriber/group alias or ID.</p> <p>The display shows transitional mini notice, confirming that the same message is being sent to the same target radio.</p> <p>If the message is sent successfully, a tone sounds and the display shows positive mini notice.</p> <p>If the message cannot be sent, a low tone sounds and the display shows negative mini notice.</p> <p>If the message fails to send, the radio returns you to the <b>Resend</b> option screen. Press  to resend the message to the same subscriber/group alias or ID.</p>



Option	Steps
--------	-------

**Note:** Changing the volume, and pressing any button, except for , , or , returns you to the message.

**Note:** The radio exits the **Resend** option screen if you press the **PTT** button to initiate a Private or Group Call, or to respond to a Group Call. The radio also exits the screen when it receives a text or telemetry message, an emergency call or alarm, or a call alert.

**Note:** The display returns to the **Resend** option screen if you press the **PTT** button to respond to a Private Call (except when the radio is displaying the Missed Call screen), and at the end of an All Call.

If you exit the message sending screen while the message is being sent, the radio updates the status of the message in the Sent Items folder





without providing any indication in the display or via sound.


If the radio changes mode or powers down before the status of the message in Sent Items is updated, the radio cannot complete any In-Progress messages and automatically marks it with a Send Failed icon.

The radio supports a maximum of five (5) In-Progress messages at one time. During this period, the radio cannot send any new message and automatically marks it with a Send Failed icon.

### Deleting All Sent Text Messages from Sent Items

- 1 Access the **Text Message** feature.


Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to <b>Messages</b> and press  to select.</li> </ol>


- 2 ▲ or ▼ to **Sent Items** and press  to select.

When you select **Sent Items** and it contains no text messages, the display shows **List Empty**, and sounds a low tone if **Keypad Tones** are turned on (see [Turning Keypad Tones On or Off](#) on page 129).

- 3 ▲ or ▼ to **Delete All** and press  to select.

- 4 Choose one of the following.

— ▲ or ▼ to **Yes** and press  to select. The display shows positive mini notice.

— ▲ or ▼ to **No** and press  to return to the previous screen.

## Receiving a Text Message


When your radio receives a message, the display shows the alias or ID of the sender and the Message icon at the far left of the screen.

You can select **Read** when receiving a text message.

### Note:

The radio exits the Text Message alert screen and sets up a Private or Group Call to the sender of the message if the **PTT** button is pressed when the radio is displaying the alert screen.

## Reading a Text Message


- 1 ▲ or ▼ to **Read?** and press  to select.

Selected message in the Inbox opens.

A subject line may be shown if the message is from an e-mail application.

- 2 Do one of the following:

— Press  to return to the Inbox.

— Press  a second time to reply, forward, or delete the text message.

## Managing Received Text Messages


Use the Inbox to manage your text messages. The Inbox is capable of storing a maximum of 30 messages.

Text messages in the Inbox are sorted according to the most recently received.


Your radio supports the following options for text messages:

- Reply
- Forward
- Delete
- Delete All




**Note:** If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only forward, delete, or delete all Received messages.

**Note:** Long press  at any time to return to the Home screen.




### Viewing a Text Message from the Inbox

- 1  to access the menu.



---

- 2  or  to Messages and press  to select.

---




- 3  or  to Inbox and press  to select.

---


- 4  or  to view the messages.

A subject line may be shown if the message is from an e-mail application.




### 5 Do one of the following:

- Press  to select the current message, and press  again to reply, quick reply, forward, or delete that message.
- Long press  to return to the Home screen.




### Viewing a Telemetry Status Text Message from the Inbox

- 1  to access the menu.




---

- 2  or  to Messages and press  to select.

---


- 3  or  to Inbox and press  to select.

---

- 4  or  to the required message and press  to select.





You cannot reply to a Telemetry Status text message.




The display shows Telemetry: <Status Text Message>.




- 5 Long press  to return to the Home screen.

### Replying to a Text Message from the Inbox


- 1 Access the **Text Message** feature.

Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	<p>1  to access the menu.</p> <p>2  or  to Messages and press  to select.</p>







- 2  or  to Inbox and press  to select.

- 3  or  to the required message and press  to select.

A subject line may be shown if the message is from an e-mail application.


- 4 Press  once more to access the sub-menu.

- 5 Do one of the following:

-  or  to Reply and press  to select.
-  or  to Quick Reply and press  to select.

A blinking cursor appears.

- 6 Use your keypad to write/edit your message.

- 7 Press  once message is composed.

The display shows transitional mini notice, confirming your message is being sent.





If the message is sent successfully, a tone sounds and the display shows positive mini notice,




If the message cannot be sent, a low tone sounds and the display shows negative mini notice,




If the message cannot be sent, the radio returns you to the **Resend** option screen (see [Managing Fail-to-Send Text Messages](#) on page 100).

### Deleting a Text Message from the Inbox


- 1 Access the **Text Message** feature.




Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	<ol style="list-style-type: none"><li>1  to access the menu.</li><li>2  or  to <b>Messages</b> and press  to select.</li></ol>




- 2  or  to **Inbox** and press  to select.

- 3  or  to the required message and press  to select.

A subject line may be shown if the message is from an e-mail application.





- 4 Press  once more to access the sub-menu.




- 5  or  to **Delete** and press  to select.

- 6  or  to **Yes** and press  to select. The display shows positive mini notice and the screen returns to the **Inbox**.

### Deleting All Text Messages from the Inbox

- 1 Access the **Text Message** feature.

Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	<ol style="list-style-type: none"><li>1  to access the menu.</li><li>2  or  to <b>Messages</b> and press  to select.</li></ol>


- 2  or  to **Inbox** and press  to select.

When you select **Inbox** and it contains no text messages, the display shows **List Empty**, and sounds a low tone if **Keypad Tones** are turned on (see [Turning Keypad Tones On or Off](#) on page 129).

---

3 ▲ or ▼ to **Delete All** and press  to select.

---

4 ▲ or ▼ to **Yes** and press  to select.  
The display shows positive mini notice.

---

## Job Tickets

Your radio is able to receive **Job Tickets**, which are messages from the dispatcher listing out tasks that need to be performed.

You can respond to **Job Tickets** in order to sort them into **Job Ticket Folders**. By default, the folders are "All", "New", "Started", and "Completed". Check with your dealer or system administrator for an additional 10 folders.

Your radio supports a maximum of 100 **Job Tickets**, all of which can be seen in the "All" folder. New **Job Tickets** and **Job Tickets** with recent change in state

are listed first. Upon reaching the maximum number of **Job Tickets**, the next **Job Ticket** automatically replaces the last **Job Ticket** in your radio.



### Note:

**Job Tickets** are retained even after radio is powered down and powered up again.

Your radio will automatically detect and discard the duplicated **Job Tickets** with the same subject line.












## Accessing the Job Ticket Folder

Access the **Job Ticket** folder.





Radio Control	Steps
<b>Programmed Job Ticket button</b>	<ol style="list-style-type: none"> <li>1 Press the programmed <b>Job Ticket</b> button.</li> <li>2 ▲ or ▼ to the required folder and press  to select.</li> </ol> <p><b>Note:</b> You can also press  and the corresponding number key (1–9) to access the required folder.</p>











## Radio Control Steps

### Menu

- 1  to access the menu.
- 2  or  to Job Tickets and press  to select.
- 3  or  to the required folder and press  to select.  
**Note:** You can also press  and the corresponding number key (1–9) to access the required folder.
- 4  or  to the required Job Ticket and press  to select.

### Responding to the Job Ticket

- 1  to access the menu
- 2  or  to Job Tickets and press  to select

- 3  or  to the required folder and press  to select.  
You can also press the corresponding number key (1–9) to access the required folder.
- 4  or  to the required Job Ticket and press  to select.
- 5 Press  once more to access the sub-menu.  
You can also press the corresponding number key (1–9) to **Quick Reply**.
- 6  or  to the required Job Ticket and press  to select.  
You can also press the corresponding number key (1–9) to respond to the job ticket.






The display shows transitional mini notice, confirming your message being sent.

If the message is sent, a tone sounds and the display shows positive mini notice.

If the message is not sent, a low tone sounds and the display shows negative mini notice.


## Deleting a Job Ticket

Delete a Job Ticket.


Radio Control Steps	
<b>Programmed Job Ticket button</b>	<ol style="list-style-type: none"><li>1 Press the programmed <b>Job Ticket</b> button.</li><li>2 ▲ or ▼ to All and press  to select</li></ol>
<b>Menu</b>	<ol style="list-style-type: none"><li>1  to access the menu</li><li>2 ▲ or ▼ to Job Tickets and press  to select</li><li>3 ▲ or ▼ to All and press  to select</li><li>4 ▲ or ▼ to the required Job Ticket and press  to select.</li></ol>

## Radio Control Steps


**Note:** At Step 4, while viewing the Job Ticket, press

 to delete.

5 Press  again while viewing the Job Ticket.

6 ▲ or ▼ to Delete and press  to select

**Note:** You can also press

 to delete.

## Privacy

If enabled, this feature helps to prevent eavesdropping by unauthorized users on a channel by the use of a software-based scrambling solution. The signaling and user identification portions of a transmission are not scrambled.

Your radio must have privacy enabled on the channel to send a privacy-enabled transmission, although this is not a necessary requirement for receiving a



transmission. While on a privacy-enabled channel, the radio is still able to receive clear (unscrambled) transmissions.

Your radio supports two types of privacy:

- Basic Privacy
- Enhanced Privacy.

Only **ONE** of the privacy types above can be assigned to the radio.

To unscramble a privacy-enabled call or data transmission, your radio must be programmed to have the same Privacy Key (for Basic Privacy), OR the same Key Value and Key ID (for Enhanced Privacy) as the transmitting radio.

If your radio receives a scrambled call that is of a different Privacy Key, OR a different Key Value and Key ID, you will either hear a garbled transmission (Basic Privacy) or nothing at all (Enhanced Privacy).


If the radio has a privacy type assigned, the Home screen shows the Secure or Unsecure icon, except when the radio is sending or receiving an Emergency call or alarm.

The LED lights up solid green while the radio is transmitting and blinks green rapidly when the radio is receiving an ongoing privacy-enabled transmission.




You can access this feature by

- Pressing the programmed **Privacy** button to toggle privacy on or off.
- Using the Radio Menu as described by the steps described next.




**Note:** Some radio models may not offer this Privacy feature. Check with your dealer or system administrator for more information.

- 1  to access the menu.






---


  - 2  or  to Utilities and press  to select.


---

  - 3  or  to Radio Settings and press  to select.

---

  - 4  or  to Privacy and press  to select.
- You can also use  or  to change selected option.
-

- 5 Press  to enable/disable Privacy.  
The display shows ✓ beside Enabled.  
The ✓ disappears from beside Enabled.
- 

- Press the  button and the 2, 5, and 8 numeric keys in tandem. Radio will go back to normal mode.
  - Power cycle the radio via the On/Off button.
- 


## Covert Mode

---

Your radio is capable of Covert Mode. During covert mode, all keypad and programmed button access are blocked. When enabled, all visual indications (display, LED's and backlight) are enabled.

This feature allows audio or tone only via a wired accessory or a Bluetooth accessory.

### Entering Covert Mode

Press the  button and the 2, 5, and 8 numeric keys in tandem in home screen.

---

### Exiting Covert Mode

To exit Covert Mode, do one of the following:

## Dual Tone Multi Frequency (DTMF)

---

The Dual Tone Multi Frequency (DTMF) feature allows the radio to operate in a radio system with an interface to telephone systems.

- 1 Press and hold the **PTT** button to initiate a DTMF call.
- 2 Enter the desired number, \* or #.

You can turn off the DTMF tone by disabling all radio tones and alerts (see [Turning the Radio Tones/Alerts On or Off](#) on page 132).

---

## Multi-Site Controls

---








These features are applicable when your current radio channel is part of an IP Site Connect or Linked Capacity Plus configuration.







See [IP Site Connect](#) on page 41 and [Linked Capacity Plus](#) on page 42 for more details about these configurations.

### Starting an Automatic Site Search

**Note:** The radio **only** scans for a new site if the current signal is weak or when the radio is unable to detect any signal from the current site. If the RSSI value is strong, the radio remains on the current site.

Start Automatic Site search by

Radio Control	Description
<b>Site Lock On/Off button</b>	Press the programmed <b>Site Lock On/Off</b> button to toggle the start/stop automatic site search.
<b>Radio menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Utilities and press  to select.</li> <li>3  or  to Radio Settings and press  to select.</li> </ol>

Radio Control	Description
4	 or  to Site Roaming and press  to select.
5	 or  to Site Lock and press  to select.

If the current channel is

- a multi-site channel with an attached roam list **AND**
- is out of range,

the radio also performs an automatic site search (that is the site is unlocked) during

- a **PTT** button press or
- data transmission.











A tone sounds and the display shows Site Unlocked.




The radio then returns to the Home screen. The display shows the Site Roaming icon and channel alias.

The LED blinks yellow rapidly when the radio is actively searching for a new site, and turns off once the radio locks on to a site.

## Stopping an Automatic Site Search

When your radio is actively searching for a new site, you can stop the search by

Radio Control	Description
<b>Site Lock On/Off button</b>	Press the programmed <b>Site Lock On/Off</b> button to toggle the start/stop automatic site search.
<b>Radio menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Utilities and press  to select.</li> <li>3  or  to Radio Settings and press  to select.</li> <li>4  or  to Site Roaming and press  to select.</li> </ol>


Radio Control	Description
	5  or  to Site Lock and press  to select.





A tone sounds and the display shows Site Locked.

The radio then returns to the Home screen. The LED turns off and the display shows the channel alias.

## Starting a Manual Site Search

Start a Manual Site Search by

Radio Control	Description
<b>Manual Site Roam button</b>	Press the programmed <b>Manual Site Roam</b> button to start the manual site search.
<b>Radio menu</b>	1  to access the menu.

Radio Control	Description
2	▲ or ▼ to Utilities and press  to select.
3	▲ or ▼ to Radio Settings and press  to select.
4	▲ or ▼ to Site Roaming and press  to select.
5	▲ or ▼ to Active Search and press  to select.

A tone sounds, the display shows Finding Site, and the LED blinks green.

If a new site is found, a tone sounds and the LED turns off. The display shows Site <Alias> Found.

If there is no available site within range, a tone sounds and the LED turns off. The display shows Out of Range.

If a new site is within range, but the radio is unable to connect to it, a tone sounds and the LED turns off. The display shows Channel Busy.

The radio returns to the Home screen.

## Security





You can enable or disable any radio in the system. For example, you might want to disable a stolen radio, to prevent the thief from using it, and enable that radio, when it is recovered.





**Note:** Performing Radio Disable and Enable is limited to radios with these functions enabled. Check with your dealer or system administrator for more information.

### Radio Disable

- 1 Access this feature by

Radio Controls	Steps
<b>Radio Disable button</b>	<b>1</b> Press the programmed <b>Radio Disable</b> button.

Radio Controls	Steps
	<p>2 ▲ or ▼ to the required alias or ID and press  to select.</p>
<b>Radio menu</b>	<p>1  to access the menu.</p> <p>2 ▲ or ▼ to <code>Contacts</code> and press  to select. The entries are alphabetically sorted.</p> <p>3 Use one of the steps described next to select the required subscriber alias or ID</p> <ul style="list-style-type: none"> <li>— select the required alias or ID directly</li> <li>— ▲ or ▼ to the required alias or ID and press  to select.</li> <li>— use the <code>Manual Dial</code> menu</li> </ul>


Radio Controls	Steps
	<ul style="list-style-type: none"> <li>— ▲ or ▼ to <code>Manual Dial</code> and press  to select.</li> <li>— ▲ or ▼ to <code>Radio Number</code> and press  to select.</li> <li>— The first line of the display shows <code>Radio Number: .</code> the second line of the display shows a blinking cursor. Use the keypad to enter the subscriber alias or ID and press .</li> </ul> <p>4 ▲ or ▼ to <code>Radio Disable</code> and press  to select.</p>

The display shows `Radio Disable: <Subscriber Alias or ID>` and the LED lights up solid green.

- 2 Wait for acknowledgment.



If successful, the radio sounds a positive indicator tone and the display shows positive mini notice.

If not successful, the radio sounds a negative indicator tone and the display shows negative mini notice.

Do not press  during the Radio Disable operation as you will not get an acknowledgement message.





## Radio Enable

- 1 Access this feature by

Radio Controls	Steps
<b>Radio Enable button</b>	<ol style="list-style-type: none"> <li>1 Press the programmed <b>Radio Enable</b> button.</li> <li>2 ▲ or ▼ to the required alias or ID and press  to select.</li> </ol>
<b>Radio menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> </ol>


## Radio Controls




### Steps

- 2 ▲ or ▼ to **Contacts** and press  to select. The entries are alphabetically sorted.
- 3 Use one of the steps described next to select the required subscriber alias or ID
  - select the required alias or ID directly
    - ▲ or ▼ to the required alias or ID and press  to select.
  - use the **Manual Dial** menu
    - ▲ or ▼ to **Manual Dial** and press  to select.
    - ▲ or ▼ to **Radio Number** and press  to select.

## Radio Controls

## Steps

— The first line of the display shows Radio Number: . the second line of the display shows a blinking cursor. Use the keypad to enter the subscriber alias or ID and press .


4  or  to Radio Enable and press  to select.

The display shows Radio Enable: <Subscriber Alias or ID> and the LED lights up solid green.

## 2 Wait for acknowledgment.

If successful, the radio sounds a positive indicator tone and the display shows positive mini notice.

If not successful, the radio sounds a negative indicator tone and the display shows negative mini notice.

Do not press  during the Radio Enable operation as you will not get an acknowledgement message.

## Lone Worker

This feature raises an emergency if there is no user activity, such as any radio button press or activation of the channel selector, for a predefined time.

Before raising the emergency, when the inactivity timer expires, the radio warns the user via an audio indicator.

If there is still no acknowledgment by the user before the predefined reminder timer expires, the radio initiates an Emergency Alarm.

Only **one** of the following Emergency Alarms can be assigned to this feature:

- Emergency Alarm
- Emergency Alarm with Call
- Emergency Alarm with Voice to Follow

The radio remains in the emergency state allowing voice messages to proceed until action is taken. See



[Emergency Operation](#) on page 89 on ways to exit Emergency.

**Note:** This feature is limited to radios with this function enabled. Check with your dealer or system administrator for more information.

## Password Lock Features




---



If enabled, this feature only allows you access your radio if the correct password is entered upon powering up.



### Accessing the Radio from Password

- 1 Power up your radio.  
You hear a continuous tone.

---

- 2 Do one of the following:
  - Enter your current four-digit password with the radio's keypad. The second line of the display shows **....**. Press  to proceed.
  - Enter your current four-digit password. Press  or  to edit each digit's numeric value. Each

digit changes to **.**. Press  to move to next digit. Press  to confirm your selection.

You hear a positive indicator tone for every digit entered. Press  to remove the last **.** on the display. You hear a negative indicator tone, if you press  when the second line of the display is empty, or if you press more than four digits.

If the password is correct, your radio proceeds to power up. See [Powering Up the Radio](#) on page 25.

If the password is incorrect, the display shows **Wrong Password**. Repeat Steps 1 on page 120 and 2 on page 120. Password less than four digits is incorrect.

After the third incorrect password, the display shows **Wrong Password** and then, shows **Radio Locked**. A tone sounds and the LED double blinks yellow.

Your radio enters into locked state for 15 minutes, and responds to inputs from **On/Off Button** and programmed **Backlight** button only.





**Note:**




The radio is unable to receive any call, including emergency calls, in locked state.




**Unlocking the Radio from Locked State**

- 1 If your radio was powered down after being in the locked state, power up the radio.  
A tone sounds and the LED double blinks yellow.  
The display shows `Radio Locked`.
- 2 Wait for 15 minutes.  
Your radio restarts the 15 minutes timer for locked state when you power up.
- 3 Repeat Steps 1 on page 210 and 2 on page 210 in [Accessing the Radio from Password](#) on page 210.


**Turning the Password Lock On or Off**




- 1  to access the menu.
- 2  or  to `Utilities` and press  to select.

- 3  or  to `Radio Settings` and press  to select.


- 4  or  to `Passwd Lock` and press  to select.

- 5 Enter the four-digit password.  
See Step 2 on page 210 in [Accessing the Radio from Password](#) on page 210.




- 6 Press  to proceed.  
If the password is incorrect, the display shows `Wrong Password`, and automatically returns to the previous menu.

- 7 If the password entered in the previous step is correct, press  to enable/disable password lock.  
The display shows  beside `Enabled`.  
The  disappears from beside `Enabled`.




## Changing the Password

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Settings and press  to select.


---

- 4  or  to Passwd Lock and press  to select.




---

- 5 Enter the four-digit password.  
See Step 2 on page 210 in [Accessing the Radio from Password](#) on page 210.

---

- 6 Press  to proceed.  
If the password is incorrect, the display shows Wrong Password, and automatically returns to the previous menu.

---

- 7 If the password entered in the previous step is correct,  or  to Change Pwd and press  to select.


---

- 8 Enter a new four-digit password.  
See Step 2 on page 210 in [Accessing the Radio from Password](#) on page 210.

---

- 9 Reenter the previously entered four-digit password. See Step 2 on page 210 in [Accessing the Radio from Password](#) on page 210.

---

- 10 Press  to proceed.  
  
If the reentered password matches the new password entered earlier, the display shows Password Changed.  
  
If the reentered password does **NOT** match the new password entered earlier, the display shows Passwords Do Not Match.  
  
The screen automatically returns to the previous menu.

---

## Bluetooth Operation

This feature allows you to use your radio with a Bluetooth enabled device (accessory) via a wireless Bluetooth connection. Your radio supports both Motorola and COTS (Commercially available Off-The-Shelf) Bluetooth-enabled devices.

Bluetooth operates within a range of 10 meters (32 feet) line of sight. This is an unobstructed path between your radio and your Bluetooth-enabled device.


It is not recommended that you leave your radio behind and expect your Bluetooth-enabled device to work with a high degree of reliability when they are separated.

At the fringe areas of reception, both voice and tone quality will start to sound “garbled” or “broken”. To correct this problem, simply position your radio and Bluetooth-enabled device closer to each other (within the 10-meter/32 feet defined range) to reestablish clear audio reception. Your radio’s Bluetooth function has a maximum power of 2.5 mW (4 dBm) at the 10-meter/32 feet range.




Your radio can support up to 3 simultaneous Bluetooth connections with Bluetooth-enabled devices of unique types. For example, a headset, a scanner, and a PTT-Only Device (POD). Multiple connections with Bluetooth-enabled devices of the same type are not supported.

Refer to your respective Bluetooth-enabled device’s user manual for more details on your Bluetooth-enabled device’s full capabilities.





### Turning Bluetooth On and Off

- 1  to access the menu.





---


- 2  or  to Bluetooth and press  to select.

---

- 3  or  to My Status and press  to select. The display shows On and Off. The current status is indicated by a .


---

- 4 Do one of the following:
  -  or  to On and press  to select. The display shows On and a  appears left of the selected status.

- ▲ or ▼ to Off and press  to select. The display shows Off and a ✓ appears left of the selected status.


---


## Finding and Connecting to a Bluetooth Device

Do not turn off your Bluetooth-enabled device or press  during the finding and connecting operation as this cancels the operation.


- 1 Turn on your Bluetooth-enabled device and place it in pairing mode. Refer to respective Bluetooth-enabled device's user manual.


- 
- 2 On your radio, press  to access the menu.


- 
- 3 ▲ or ▼ to Bluetooth and press  to select.

- 
- 4 ▲ or ▼ to Devices and press  to select.

- 
- 5 Do one of the following:

- ▲ or ▼ to the required device and press  to select.

- ▲ or ▼ to Find Devices to locate available devices. ▲ or ▼ to the required device and press  to select.

- 
- 6 ▲ or ▼ to Connect and press  to select. Display shows Connecting to <Device>. Your Bluetooth-enabled device may require additional steps to complete the pairing. Refer to respective Bluetooth-enabled device's user manual.

---

If successful, the radio display shows <Device> Connected. A tone sounds and ✓ appears besides the connected device. The Bluetooth Connected icon appears on the status bar.

If unsuccessful, the radio display shows Connecting Failed .


**Note:** If pin code is required, use the same entry method as Step 2 on page 210 in [Accessing the Radio from Password](#) on page 210.

## Finding and Connecting from a Bluetooth Device (Discoverable Mode)




Do not turn off your Bluetooth or your radio during the finding and connecting operation as this may cancel the operation.

- 1 Turn Bluetooth On.  
See [Turning Bluetooth On and Off](#) on page 123.




---

- 2  to access the menu.

---

- 3  or  to Bluetooth and press  to select.


---

- 4  or  to Find Me and press  to select.  
Your radio can now be found by other Bluetooth-enabled devices for a programmed duration. This is called Discoverable Mode.




---

- 5 Turn on your Bluetooth-enabled device and pair it with your radio.  
Refer to respective Bluetooth-enabled device's user manual.




## Disconnecting from a Bluetooth Device

- 1 On your radio, press  to access the menu.




---

- 2  or  to Bluetooth and press  to select.




---


- 3  or  to Devices and press  to select.

---

- 4  or  to the required device and press  to select.

---

- 5  or  to Disconnect and press  to select.  
Display shows Disconnecting from <Device>. Your Bluetooth-enabled device may require additional steps to disconnect. Refer to respective Bluetooth-enabled device's user manual.

The radio display shows <Device> Disconnected. A positive indicator tone sounds and  disappears beside the connected device. The Bluetooth Connected icon disappears on the status bar.


## Switching Audio Route

You can toggle audio routing between internal radio speaker and external Bluetooth-enabled accessory.




Press the programmed **Bluetooth Audio Switch** button.

- A tone sounds and display shows Route Audio to Radio.
- A tone sounds and display shows Route Audio to Bluetooth.




## Viewing Device Details

- 1  to access the menu.




---




- 2  or  to Bluetooth and press  to select.

---

- 3  or  to Devices and press  to select.


---

- 4  or  to the required device and press  to select.




- 5  or  to View Details and press  to select.

## Editing Device Name




You can edit the name of available Bluetooth-enabled devices.

- 1  to access the menu.




---

- 2  or  to Bluetooth and press  to select.




---

- 3  or  to Devices and press  to select.




---


- 4  or  to the required device and press  to select.

---

- 5  or  to Edit Name and press  to select.

---

- 6 Press  to move one space to the left. Press  to move one space to the right. Press  to delete

any unwanted characters. Long press  to change text entry method.

A blinking cursor appears. Use the keypad to type the required zone.

---

7 The display shows `Device Name Saved`.




---

### Deleting Device Name



You can remove a disconnected device from the list of Bluetooth-enabled devices.

1  to access the menu.




---

2  or  to Bluetooth and press  to select.




---

3  or  to `Devices` and press  to select.

---

4  or  to the required device and press  to select.

---

5  or  to `Delete` and press  to select.  
The display shows `Device Deleted`.




---

### Bluetooth Mic Gain




Allows control of the connected Bluetooth-enabled device's microphone gain value.

1  to access the menu.

---


2  or  to Bluetooth and press  to select.

---




3  or  to BT Mic Gain and press  to select.

---

4  or  to the BT Mic Gain type and the current values.

To edit values, press  to select.

---

5  or  to increase or to decrease values and press  to select.

---

### Notification List

Your radio has a Notification List that collects all your “unread” events on the channel, such as unread text message telemetry messages and missed calls.




Unread Job Tickets are also stored in the notification list.

The Notification icon appears on the status bar when the Notification List has one or more events.




For TMS and missed call/call alert notification events, the maximum number are 30 TMS and 10 missed calls/call alerts. This maximum number depends on individual feature (job tickets or TMS or missed calls/call alerts) list capability.

**Note:** After the events are read, they are removed from the Notification List.




### Accessing the Notification List

- 1  to access the menu.

---

- 2  or  to Notification and press  to select.

---

- 3  or  to the required event and press  to select.

Long press  to return to the Home Screen.

## Over-the-Air-Programming (OTAP)

Your radio can be updated by your dealer remotely, via OTAP, without needing to be physically connected. Additionally, some settings can also be configured via OTAP.

While undergoing OTAP, the LED blinks green.

**Note:** When the radio is receiving high volume data, the High Volume Data icon appears and channel is busy. A PTT button press at this time may cause a negative tone to sound.

Once the programming is complete, depending on your radio's configuration:

- A tone sounds, the display shows `Updating`  
`Restarting`, and your radio restarts (powers off and on again).
- Select between `Restart Now` or `Postpone`.  
Selecting `Postpone` allows your radio to return to the previous display, with an OTAP Timer icon visible, for a period of time before the automatic restart occurs.

Upon power up after the automatic restart occurs, the display shows `Sw Update Completed` if the OTAP

update is successful or Sw Update Failed if the OTAP update is unsuccessful.











See [Software Update](#) on page 152 for your updated software version.





## Utilities

### Locking and Unlocking the Keypad

You can lock your radio's keypad to avoid inadvertent key entry.

To lock/unlock your radio's keypad.

Option	Steps
<b>Locking the Keypad</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Utilities and press  to select.</li> <li>3  or  to Radio Settings and press  to select.</li> <li>4  or  to Keypad Lock and press  to select.</li> </ol>








Option	Steps
	You can also use  or  to change the selected option.
<b>Unlocking the Keypad</b>	Press  followed by  .


After the keypad is locked, the display shows Keypad Locked and returns to the Home screen.


After the keypad is unlocked, the display shows Keypad Unlocked and returns to the Home screen.

### Turning Keypad Tones On or Off


You can enable and disable keypad tones if needed.

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.

4 ▲ or ▼ to Tones/Alerts and press  to select.

5 ▲ or ▼ to Keypad Tones and press  to select.

You can also use ◀ or ▶ to change the selected option.

6 Press  to enable/disable keypad tones.  
The display shows ✓ beside Enabled.  
The ✓ disappears from beside Enabled.


### Turning the Option Board Feature(s) On or Off


A channel can support up to 6 option board features. Refer to your dealer or system administrator for more information.


- Press the programmed **Option Board Feature** button to toggle the feature on or off.

### Identifying Cable Type

You can select the type of cable your radio uses.

1  to access the menu.

2 ▲ or ▼ to Utilities and press  to select.

3 ▲ or ▼ to Radio Settings and press  to select.

4 ▲ or ▼ to Cable Type and press  to select.

At Step 4, you can also use ◀ or ▶ to change the selected option.

5 The current cable type is indicated by a ✓

### Turning the Voice Operating Transmission (VOX) Feature On or Off


This feature allows you to initiate a hands-free voice activated call on a programmed channel. The radio automatically transmits, for a programmed period, whenever the microphone on the VOX-capable accessory detects voice.

Pressing the **PTT** button during radio operation will disable VOX. To re-enable VOX, do one of the following:




- Turn the radio off and power it on again
- Press the programmed **VOX** button to toggle the feature on or off

or follow the steps described next to access this feature via the radio menu.




**Note:** Turning this feature on or off is limited to radios with this function enabled. Check with your dealer or system administrator for more information.

- 1  to access the menu.




---

- 2  or  to *Utilities* and press  to select.




---

- 3  or  to *Radio Settings* and press  to select.

---

- 4  or  to *VOX* and press  to select.

---

- 5 Press  to disable/enable VOX.  
The display shows  beside Enabled.  
The  disappears from beside Enabled.


---

## Controlling the Display Backlight




You can enable or disable the radio's display backlight as needed. The setting also affects the Menu Navigation Buttons and keypad backlighting accordingly.

Press the programmed **Backlight** button to toggle the backlight settings, or follow the procedure described next to access this feature via the radio menu.




The display backlight and keypad backlighting are automatically turned off if the LED indicator is disabled (see [Turning the LED Indicator On or Off](#) on page 138).

- 1  to access the menu.




---

- 2  or  to *Utilities* and press  to select.


---

- 3  or  to *Radio Settings* and press  to select.

---

- 4  or  to *Backlight* and press  to select.




You can also use ◀ or ▶ to change the selected option.


- 5 Press  to enable/disable the display backlight.  
The display shows ✓ beside Enabled.  
The ✓ disappears from beside Enabled.

### Turning the Radio Tones/Alerts On or Off


You can enable and disable all radio tones and alerts (except for the incoming Emergency alert tone) if needed.

Press the programmed **All Tones/Alerts** button to toggle all tones on or off, or follow the procedure described next to access this feature via the radio menu.

- 1  to access the menu.
- 2 ▲ or ▼ to Utilities and press  to select.
- 3 ▲ or ▼ to Radio Settings and press  to select.




- 4 ▲ or ▼ to Tones/Alerts and press  to select.


- 5 ▲ or ▼ to All Tones and press  to select.

- 6 Press  to enable/disable all tones and alerts.  
The display shows ✓ beside Enabled.  
The ✓ disappears from beside Enabled.


### Setting the Tone Alert Volume Offset Level

You can adjust the Tone Alert Volume Offset level if needed. This feature adjusts the volume of the tones/alerts, allowing it to be higher or lower than the voice volume.

- 1  to access the menu.
- 2 ▲ or ▼ to Utilities and press  to select.
- 3 ▲ or ▼ to Radio Settings and press  to select.

4 ▲ or ▼ to Tones/Alerts and press  to select.

---



5 ▲ or ▼ to Vol. Offset and press  to select.

---

6 ▲ or ▼ to the required volume value.  
The radio sounds a feedback tone with each corresponding volume value.

---

7 Do one of the following:


- Press  to keep the required displayed volume value.
  - Press  to exit without changing the current volume offset settings.
  - Repeat Step 6 on page 133 to select another volume value.
- 

### Turning the Talk Permit Tone On or Off


You can enable and disable the Talk Permit Tone if needed.

1  to access the menu.


---

2 ▲ or ▼ to Utilities and press  to select.


---

3 ▲ or ▼ to Radio Settings and press  to select.

---

4 ▲ or ▼ to Tones/Alerts and press  to select.

---

5 ▲ or ▼ to Talk Permit and press  to select.

You can also use ◀ or ▶ to change the selected option.

---

6 Press  to enable/disable the Talk Permit Tone.


The display shows ✓ beside Enabled.

The ✓ disappears from beside Enabled.




---

## Setting the Text Message Alert Tone




You can customize your radio's text message alert tone to Momentary or Repetitive for each entry in the Contacts list.

- 1  to access the menu.






---

- 2  or  to `Contacts` and press  to select.





---

- 3  or  to the required subscriber alias or ID and press  to select.

---

- 4  or  to `Message Alert` and press  to select.  
The display shows `Momentary` and `Repetitive`.  
  
You can also use  or  to change the selected option.











---

- 5  or  to the required setting and press  to enable  
 appears besides selected setting.

## Changing the Display Mode

You can change radio's display mode between Day or Night, as needed. This affects the color palette of the display.


Change the Display Mode

Radio Control	Steps
<b>Programmed Display Mode Button</b>	Press the programmed <b>Display Mode</b> button.
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to <code>Utilities</code> and press  to select.</li> <li>3  or  to <code>Radio Settings</code> and press  to select.</li> <li>4  or  to <code>Display</code> and press  to select.</li> </ol>

## Radio Control Steps

The display shows Day Mode and Night Mode.

**Note:** You can also use ◀ or ▶ to change the selected option.

- 5 ▲ or ▼ to the required setting and press  to enable. ✓ appears besides selected setting.

## Adjusting the Display Brightness

You can adjust radio's display brightness as needed.


**Note:** Display brightness cannot be adjusted when "Auto Brightness" is enabled.





Adjust the Display Brightness

## Radio Control Steps

- Programmed Display** 1 Press the programmed **Brightness** button.


## Radio Control Steps

- Brightness Button** 2 Decrease display brightness by pressing ◀ or increase the display brightness by pressing ▶. Select from setting of 1 to 8. Press  to confirm your entry.

- Menu**
- 1  to access the menu.
  - 2 ▲ or ▼ to Utilities and press  to select.
  - 3 ▲ or ▼ to Radio Settings and press  to select.
  - 4 ▲ or ▼ to Brightness and press  to select.
- The display shows a progress bar.















**Radio Control Steps**



- 5 Decrease display brightness by pressing ◀ or increase the display brightness by pressing ▶. Select from setting of 1 to 8. Press  to confirm your entry.

**Wallpaper Mode**

Your radio displays the Wallpaper background on home screen. The user can select from 5 default wallpapers.

- 1  to access the menu.
- 
- 2  or  to Utilities and press  to select.
- 
- 3  or  to Radio Settings and press  to select.
- 
- 4  or  to Display and press  to select.

- 5  or  to Wallpaper and press  to select.

You can also use  or  to change the selected option.

**Screen Saver Mode**

The screen saver feature allows the radio to save radio battery time. A Screen Saver Pre Duration is used to track the radio activities before entering screen saver mode.

Radio starts Screen Saver Pre Duration upon power up. Radio enters into screen saver mode when Screen Saver Pre Duration timer expires, the radio exits screen saver mode and responds to related transaction normally upon any user input and over the air transaction.

Radio restarts Screen Saver Pre Duration upon any user input and over the air transaction. After being in Screen Saver mode for 5 seconds, radio enters keypad lock state automatically. When any audio or Bluetooth accessory is connected, battery saver mode is enabled, radio enters screen saver mode.

If there is any user input or over the air transaction, the radio exits screen saver mode and responds to user interaction. The Screen Saver Pre Duration is restarted and the radio goes back to screen saver mode when it expires.

**Note:** The screen saver mode is to help improve battery life.


### Audio Accessory

The audio accessory has two modes: Normal and Battery Saver mode. When audio accessory is plugged in and the setting is in Battery Saver Mode, the radio restarts the timer and goes into screen saver mode. In this scenario, when there is any user input (including user input on radio and accessory attachment/detachment) or when receiving emergency alarm/call, the radio exits screen saver mode and responds to user event as normal. The Screen Saver timer restarts and the radio goes back to screen saver mode when the time allocated expires.




**Note:** This battery saver mode is to improve battery life. See Screen Saver box SRS for more details in this mode.

### Auto Keypad Lock




You can enable/disable your radio's auto keypad lock to avoid inadvertent key entry.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.





---

- 3  or  to Radio Settings and press  to select.

---


- 4  or  to Auto Keypad Lock and press  to select.

---




- 5 Do one of the following:
  - Press  to enable Auto Keypad Lock. The display shows  beside Enabled.
  - Press  to disable Auto Keypad Lock. The  disappears from beside Enabled.

## Language




You can set your radio display to be in your required language.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.





---

- 3  or  to Radio Settings and press  to select.

---

- 4  or  to Languages and press  to select.




---




- 5  or  to the required language and press  to enable.  appears beside selected language.




### Turning the LED Indicator On or Off




You can enable and disable the LED Indicator if needed.

- 1  to access the menu.

- 2  or  to Utilities and press  to select.

- 3  or  to Radio Settings and press  to select.













- 4  or  to LED Indicator and press  to select.





- 5 Press  to enable/disable the LED Indicator.  
The display shows  beside Enabled.  
The  disappears from beside Enabled.

### Voice Announcement

This feature enables the radio to audibly indicate the current Zone or Channel the user has just assigned, or programmable button press. This audio indicator can be customized per customer requirements. This is typically useful when the user is in a difficult condition to read the content shown on the display.





Toggle Voice Announcement On or Off.


Radio Control	Steps
<b>Programmed Voice Announcement Button</b>	Press the programmed <b>Voice Announcement</b> button.
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Utilities and press  to select.</li> <li>3  or  to Radio Settings and press  to select.</li> <li>4  or  to Voice Announcement and press  to select.</li> </ol> <p><b>Note:</b> You can also use  or  to change the selected option.</p> <ol style="list-style-type: none"> <li>5 Do one of the following:</li> </ol>

Radio Control	Steps
	<ul style="list-style-type: none"> <li>— Press  to enable Voice Announcement. The display shows  beside Enabled.</li> <li>— Press  to disable Voice Announcement. The  disappears from beside Enabled.</li> </ul>

### Digital Mic AGC (Mic AGC-D)

This feature controls the your radio's microphone gain automatically while transmitting on a digital system. It suppresses loud audio or boosts soft audio to a preset value in order to provide a consistent level of audio.



- 1  to access the menu.
- 
- 2  or  to Utilities and press  to select.

- 3 ▲ or ▼ to Radio Settings and press  to select.

You can also use ◀ or ▶ to change the selected option.

- 4 ▲ or ▼ to Mic AGC-D and press  to select.

- 5 Do one of the following:





- Press  to enable **Mic AGC-D**. The display shows ✓ beside Enabled.
- Press  to disable **Mic AGC-D**. The ✓ disappears from beside Enabled.

### Intelligent Audio



Your radio can automatically adjust its audio volume to overcome background noise in the environment, inclusive of all stationary and non-stationary noise sources. This feature is a Receive-only feature and does not affect Transmit audio.

**Note:** This feature is not applicable during a Bluetooth session.

Toggle Intelligent Audio On or Off.

Radio Control	Steps
<b>Programmed Intelligent Audio Button</b>	Press the programmed <b>Intelligent Audio</b> button.
<b>Menu</b>	<p>1  to access the menu.</p> <p>2 ▲ or ▼ to Radio Settings and press  to select.</p> <p>3 ▲ or ▼ to Radio Settings and press  to select.</p> <p>4 ▲ or ▼ to Intelligent Audio and press  to select.</p> <p><b>Note:</b> You can also use ◀ or ▶ to change the selected option.</p> <p>5 Do one of the following:</p>

## Radio Control Steps

- Press  to enable Intelligent Audio. The display shows ✓ beside Enabled.
- Press  to disable Intelligent Audio. The ✓ disappears from beside Enabled.

See [Accessories](#) on page 245 for recommended Bluetooth-enabled audio accessories with in-built Automatic Volume Control for similar performance.

### Turning the Acoustic Feedback Suppressor Feature On or Off











This feature allows you to minimize acoustic feedback in received calls.



Toggle Acoustic Feedback Suppressor Features On or Off

## Radio Control Steps

**Programmed Acoustic Feedback Suppressor Button** Press the programmed **Acoustic Feedback Suppressor** button.



## Menu

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.
- 4  or  to AF Suppressor and press  to select.



**Note:** You can also use  or  to change the selected option.

- 5 Do one of the following:

### Radio Control Steps


- Press  to enable Acoustic Feedback Suppressor. The display shows ✓ beside Enabled.
- Press  to disable Acoustic Feedback Suppressor. The ✓ disappears from beside Enabled.

- Predictive or Multi-Tap
- Language (If programmed)




**Note:** Press  at any time to return to the previous screen or long press  to return to the Home Screen. The radio exits the current screen once the inactivity timer expires.

### Word Predict




Your radio can learn common word sequences that you often enter. It then predicts the next word you may want to use after you enter the first word of a common word sequence into the text editor.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Settings and press  to select.

---

- 4  or  to Text Entry and press  to select.


### Text Entry Configuration

You can configure the following settings for entering text on your radio:



- Word Predict
- Word Correct
- Sentence Cap
- My Words

Your radio supports the following text entry methods:

- Numbers
- Symbols

- 5 ▲ or ▼ to **Word Predict** and press  to select.


You can also use ◀ or ▶ to change the selected option.


- 6 Do one of the following:
- Press  to enable **Word Predict**. The display shows ✓ beside **Enabled**.
  - Press  to disable **Word Predict**. The ✓ disappears from beside **Enabled**.

### **Word Correct**


Supplies alternative word choices when the word entered into the text editor is not recognized by the in-built dictionary.

- 1  to access the menu.



- 2 ▲ or ▼ to **Utilities** and press  to select.

- 3 ▲ or ▼ to **Radio Settings** and press  to select.

- 4 ▲ or ▼ to **Text Entry** and press  to select.

- 5 ▲ or ▼ to **Word Correct** and press  to select.

You can also use ◀ or ▶ to change the selected option.

- 6 Do one of the following:
- Press  to enable **Word Correct**. The display shows ✓ beside **Enabled**.
  - Press  to disable **Word Correct**. The ✓ disappears from beside **Enabled**.

### **Sentence Cap**


Automatically enables capitalization for the first letter in the first word for every new sentence.

- 1  to access the menu.




2 ▲ or ▼ to Utilities and press  to select.

---

3 ▲ or ▼ to Radio Settings and press  to select.

---



4 ▲ or ▼ to Text Entry and press  to select.

---

5 ▲ or ▼ to Sentence Cap and press  to select.


---

6 Do one of the following:


- Press  to enable Sentence Cap. The display shows ✓ beside Enabled.
  - Press  to disable Sentence Cap. The ✓ disappears from beside Enabled.
- 

### **Viewing Custom Words**


You can add your own custom words into your radio's in-built dictionary. Your radio maintains a list to contain these words.

1  to access the menu.


---

2 ▲ or ▼ to Utilities and press  to select.

---

3 ▲ or ▼ to Radio Settings and press  to select.


---

4 ▲ or ▼ to Text Entry and press  to select.

---

5 ▲ or ▼ to My Words and press  to select.


---

6 ▲ or ▼ to List of Words and press  to select.  
Display shows the list of custom words.


---

### **Editing Custom Word**


You can edit the custom words saved in your radio.

1  to access the menu.


---

2 ▲ or ▼ to Utilities and press  to select.


---

- 3 ▲ or ▼ to Radio Settings and press  to select.


---

- 4 ▲ or ▼ to Text Entry and press  to select.


---

- 5 ▲ or ▼ to My Words and press  to select.


---

- 6 ▲ or ▼ to List of Words and press  to select.  
Display shows the list of custom words.






---


- 7 ▲ or ▼ to the required word and press  to select.

---

- 8 ▲ or ▼ to Edit and press  to select.

---

- 9 Use the keypad to edit your custom word.  
Press  to move one space to the left. Press  or the  key to move one space to the right.  
Press the  key to delete any unwanted characters. Long press  to change text entry

method. Press  once your custom word is completed.


The display shows transitional mini notice, confirming your custom word is being saved.

If the custom word is saved, a tone sounds and the display shows positive mini notice.


If the custom word is not saved, a low tone sounds and the display shows negative mini notice.

### **Adding Custom Word**


You can add your own custom words into your radio's in-built dictionary.

- 1  to access the menu.


---


- 2 ▲ or ▼ to Utilities and press  to select.

---


- 3 ▲ or ▼ to Radio Settings and press  to select.

---

- 4 ▲ or ▼ to Text Entry and press  to select.

5 ▲ or ▼ to My Words and press  to select.




---




6 ▲ or ▼ to Add New Word and press  to select.

Display shows the list of custom words.

---

7 Use the keypad to edit your custom word.

Press  to move one space to the left. Press  or the  key to move one space to the right.

Press the  key to delete any unwanted characters. Long press  to change text entry method. Press  once your custom word is completed.

---

The display shows transitional mini notice, confirming your custom word is being saved.

If the custom word is saved, a tone sounds and the display shows positive mini notice.


If the custom word is not saved, a low tone sounds and the display shows negative mini notice.

### **Deleting a Custom Word**


You can delete the custom words saved in your radio.

1  to access the menu.

---

2 ▲ or ▼ to Utilities and press  to select.

---

3 ▲ or ▼ to Radio Settings and press  to select.


---

4 ▲ or ▼ to Text Entry and press  to select.


---

5 ▲ or ▼ to My Words and press  to select.

---


6 ▲ or ▼ to the required word and press  to select.


---

7 ▲ or ▼ to Delete and press  to select.

---







8 Choose one of the following.



— At Delete Entry?, press  to select Yes. The display shows Entry Deleted.

- ▲ or ▼ to No and press  to return to the previous screen.

### **Deleting All Custom Words**

You can delete all custom words from your radio's in-built.

- 1  to access the menu.
- 2 ▲ or ▼ to Utilities and press  to select.
- 3 ▲ or ▼ to Radio Settings and press  to select.
- 4 ▲ or ▼ to Text Entry and press  to select.
- 5 ▲ or ▼ to My Words and press  to select.
- 6 ▲ or ▼ to Delete All and press  to select.
- 7 Choose one of the following.

- At Delete Entry?, press  to select Yes. The display shows Entry Deleted.
- ▲ or ▼ to No and press  to return to the previous screen.

### **Flexible Receive List**

Flexible Receive List is a digital-only (currently supported in Capacity Plus and Linked Capacity Plus) feature that allows you to add, delete or edit members on the receive talkgroup list. Your radio can support a maximum of 16 members in the list.

#### **Turning the Flexible Receive List On or Off**

You can enable and disable the Flexible Receive List if needed.

















Enable the Flexible Receive List

Radio Control	Steps
<b>Programmed Flexible Receive List Button</b>	Press the programmed <b>Flexible Receive List</b> button.

Radio Control	Steps
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Utilities and press  to select.</li> <li>3  or  to Radio Settings and press  to select.</li> <li>4  or  to Flexible Rx List and press  to select.</li> <li>5 Press  to enable/disable the Flexible Rx List.</li> </ol>
Previous display	Current display
Turn On	Flexible Rx List On
Turn Off	Flexible Rx List Off



### Adding a New Entry to the Flexible Receive List

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.
- 4  or  to Flexible Rx List and press  to select.
- 5  or  to View/Edit List and press  to select.
- 6  or  to Add Member and press  to select.
- 7 Select the required alias or ID by

Radio Control	Steps
<b>Radio Navigation Buttons</b>	 or  to the required alias or ID.

## Radio Control

## Steps

## Keypad


Key in the first character of the required alias.


A blinking cursor appears.

Press ◀ to move one space to the left. Press ▶ to move one space to the right. Press the \*← key to delete any unwanted characters.

Long press # to change the text entry method.


The first line of the display shows the characters you keyed in. The next lines of the display show the short listed search results. The alias search is case-insensitive. If there are two or more aliases with the same name, the radio displays the alias that is listed first in the list.


8 Press  to select.  
The display shows Add Another?.


9 ▲ or ▼ to No and press  to select  
The display shows ✓.


## Deleting an Entry from the Flexible Receive List

1  to access the menu.



2 ▲ or ▼ to Utilities and press  to select.

3 ▲ or ▼ to Radio Settings and press  to select.

4 ▲ or ▼ to Flexible Rx List and press  to select.


5 ▲ or ▼ to View/Edit List and press  to select.


6 Select the required alias or ID by

Radio Control	Steps
<b>Radio Navigation Buttons</b>	▲ or ▼ to the required alias or ID.
<b>Keypad</b>	<p>Key in the first character of the required alias.</p> <p>A blinking cursor appears.</p> <p>Press ◀ to move one space to the left. Press ▶ to move one space to the right. Press the  key to delete any unwanted characters.</p> <p>Long press  to change the text entry method.</p> <p>The first line of the display shows the characters you keyed in. The next lines of the display show the short listed search results. The alias search is case-insensitive. If there are two or more aliases with</p>

Radio Control	Steps
	the same name, the radio displays the alias that is listed first in the list.

7 Press  to select.



8 ▲ or ▼ to Delete and press  to select.

9 ▲ or ▼ to Yes and press  to select.  
The display shows ✓.

### Accessing General Radio Information


Your radio contains information on the following:

- Battery
- Radio Alias and ID
- Firmware and Codeplug Versions
- Open-Source Software Information
- Software Update
- Site Information




Press  at any time to return to the previous screen or long press  to return to the Home screen. The radio exits the current screen once the inactivity timer expires.

### Accessing the Battery Information




Displays information on your radio battery.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Info and press  to select.

---

- 4  or  to Battery Info and press  to select.

The display shows the battery information.


For **IMPRES** batteries **ONLY**: The display reads Recondition Battery if the battery requires reconditioning in an IMPRES charger. After the reconditioning process, the display then shows the battery information.

### Checking the Radio Alias and ID




This feature displays the ID of your radio.

Press the programmed **Radio Alias and ID** button to check your radio alias and ID. You hear a positive indicator tone.




Follow the procedure described next to access this feature via the radio screen.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Info and press  to select.


---

- 4  or  to My ID and press  to select.  
The first line of the display shows the radio alias.  
The second line of the display shows the radio ID.




### Checking the Firmware Version and Codeplug Version

Displays the firmware version on your radio.






- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.

---


- 3  or  to Radio Info and press  to select.

---




- 4  or  to Versions and press  to select.  
The display shows the current firmware and codeplug versions.

### Checking the Open-Source Software Information




Displays the open-source software (OSS) information on your radio.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Info and press  to select.

---


- 4  or  to Versions and press  to select.

The display shows the Firmware Version information.




### Software Update

Displays the date and time of the latest software update carried out via Over-the-Air Programming.




**Note:** Software Update menu is only available after at least one successful OTAP session.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Info and press  to select.


---

- 4  or  to SW Update and press  to select.  
The display shows the date and time of the latest software update.




See [Over-the-Air-Programming \(OTAP\)](#) on page 128 for details on OTAP session.

### Site Information




Displays the current Linked Capacity Plus site name your radio is on.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Info and press  to select.




---

- 4  or  to Site Info and press  to select.  
The display shows the current Linked Capacity Plus site name.

See [Linked Capacity Plus](#) on page 42 for details on *Linked Capacity Plus*.

### RSSI Values

Your radio shows the Received Signal Strength Indicator (RSSI) icon at the top of your display. This feature allows you to view the RSSI values.

On the home screen, press  three times and immediately press , all within 5 seconds. The display shows current RSSI values. Long press the  to return to the Home Screen.

See [Display Icons](#) on page 34 for details on *RSSI icon*.

---

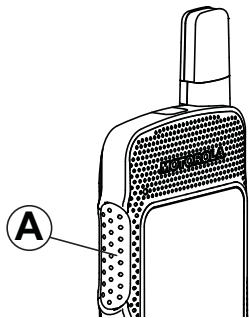
## Additional Radio Controls in Connect Plus Mode

---

### Push-To-Talk (PTT) Button

---

The PTT button on the side of the radio (A) serves two basic purposes:



- While a call is in progress, the PTT button allows the radio to transmit to other radios in the call.

Press and hold down PTT button to talk. Release the PTT button to listen.

The microphone is activated when the PTT button is pressed.

- While a call is not in progress, the PTT button is used to make a new call (see [Making a Radio Call](#) on page 165).

If the Talk Permit Tone (see [Turning the Talk Permit Tone On or Off](#) on page 133) is enabled, wait until the short alert tone ends before talking.

---

### Programmable Buttons

---

Your dealer can program the programmable buttons as shortcuts to **radio functions** depending on the duration of a button press:

- Short press – Pressing and releasing rapidly.
- Long press – Pressing and holding for the programmed duration.
- Hold down – Keeping the button pressed.

**Note:** The programmed duration of a button press is applicable for all assignable radio/utility functions or settings. See [Emergency Operation](#) on page 185 for more information on the programmed duration of the Emergency button.

## Assignable Radio Functions

**Actions** — A programmable button to access a CPS programmable action list.

**Bluetooth® Audio Switch** — Toggles audio routing between internal radio speaker and external Bluetooth-enabled accessory.

**Busy Queue Cancellation** – Exits the busy mode when a non-Emergency call in the Busy Queue was initiated. Emergency calls, once accepted into the Busy Queue, cannot be cancelled.

**Contacts** — Provides direct access to the Contacts list.

**Voice Announcement for Channel** — Plays zone and channel announcement voice messages for the current channel. This function is unavailable when Voice Announcement is disabled.

**Emergency On/Off** — Depending on the programming, initiates or cancels an emergency.

**Manual Dial** — Depending on the programming, initiates a Private Call by keying in any subscriber ID.

**One Touch Access** — Directly initiates a predefined Private Call, a Call Alert or a Quick Text message.

**Privacy** — Toggles privacy on or off.

**Radio Check** — Determines if a radio is active in a system.

**Radio Enable** — Allows a target radio to be remotely enabled.

**Radio Disable** — Allows a target radio to be remotely disabled.

**Remote Monitor** — Turns on the microphone of a target radio without it giving any indicators.

**Roam Request** – Requests to search for a different site.

**Scan** — Toggles scan on or off.

**Site Lock On/Off** — When toggled on, the radio searches the current site only. When toggled off, the radio searches other sites in addition to the current site.

**Text Message** — Selects the text message menu.

**Zone** — Allows selection from a list of zones.

## Assignable Settings or Utility Functions

**All Tones/Alerts** — Toggles all tones and alerts on or off.

**Backlight** — Toggles display backlight on or off.

**Brightness** — Allows brightness to be set via the manual brightness mode or auto brightness control via the radio's photo sensor.

**Display Mode** — Toggles the day/night display mode on or off.

**Keypad Lock** — Toggles keypad between locked and unlocked.

**Power Level** — Toggles transmit power level between high and low.






**Wallpaper** — Displayed on home screen.








## Identifying Status Indicators in Connect Plus Mode








### Display Icons





Your radio has a 2 inch landscape display with QVGA (Quarter Video Graphics Array) 16-bit color resolution.

The following are icons that appear on the radio's display. Icons are displayed arranged left-most in order of appearance/usage.

	<p><b>Received Signal Strength Indicator (RSSI)</b></p> <p>The number of bars displayed represents the radio signal strength. Four bars indicate the strongest signal. This icon is only displayed while receiving.</p>
	<p><b>Bluetooth Not Connected</b></p> <p>The Bluetooth feature is enabled but there is no remote Bluetooth device connected.</p>
	<p><b>Bluetooth Connected</b></p> <p>The Bluetooth feature is enabled. The icon stays lit when a remote Bluetooth device is connected.</p>
	<p><b>Bluetooth Discoverable</b></p> <p>The Bluetooth feature is enabled and radio is in discoverable mode.</p>
	<p>Notification List has items to review.</p>



	<b>Option Board</b> The Option Board is enabled. (Option board enabled models only)
	<b>Option Board Non-Function</b> The Option Board is disabled.
	<b>Scan</b> Scan feature is enabled.
	<b>Emergency</b> Radio is in Emergency mode.
	<b>Secure</b> The Privacy feature is enabled.
	<b>Unsecure</b> The Privacy feature is disabled.
	<b>Site Roaming</b> The site roaming feature is enabled.

	<b>Battery</b> The number of bars (0 – 4) shown indicates the charge remaining in the battery. Blinks when the battery is low.
	<b>Battery Discharging Status</b> Shows battery discharging status.
	<b>All Tones Disabled</b> No ring tones available.
	<b>Call Log</b> Radio call log.
	<b>Contact</b> Radio contact is available.
	<b>Message</b> Incoming message.
	<b>Silent Ring</b> Silent ring mode is enabled.

	<b>Ring Only</b> Ringing mode is enabled.
	<b>Vibrate</b> Vibrate mode is enabled.
	<b>Vibrate and Ring</b> Vibrate and Ring mode is enabled.
	<b>Keypad</b> Keypad locked.

### Call Icons



The following icons appear on the radio's display during a call. These icons also appear in the Contacts list to indicate ID type.



	<b>Private Call</b> Indicates a Private Call in progress.
	<b>Group Call/All Call</b>

Indicates a Group Call or All Call in progress.

### Sent Item Icons

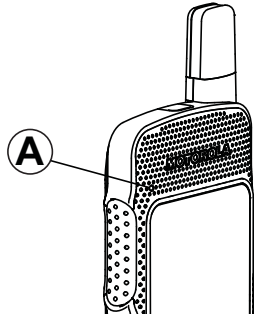
The following icons appear at the top right corner of the radio's display in the Sent Items folder.

	<b>Sent Successfully</b> OR The text message is sent successfully.
	
	<b>Individual or Group Message Read</b> OR The text message has been read.
	
	<b>Individual or Group Message Unread</b> OR The text message has not been read.
	

	<b>Send Failed</b>
OR	The text message has not been sent.
	

**LED Indicator**

The LED indicator (A) shows the operational status of



your radio.

<b>Blinking red</b>	Radio is transmitting at low battery condition, receiving an emergency transmission or has failed the self-test upon powering up.
<b>Rapidly blinking red</b>	Radio is receiving over-the-air file transfer (Option Board firmware file,

	Network Frequency file or Option Board Codeplug file) or upgrading to a new Option Board firmware file.
<b>Blinking green and yellow</b>	Radio is receiving a Call Alert, received a text message or Scan is enabled and is receiving activity.
<b>Solid yellow</b>	Radio is in Bluetooth Discoverable Mode. Also indicates fair battery charge when programmable button is pressed.
<b>Double blinking yellow</b>	Radio is actively searching for a new site.
<b>Blinking yellow</b>	Radio is receiving a Call Alert or Scan is enabled and is idle (not unmuted to any activity)
<b>Solid green</b>	Radio is powering up or transmitting. Also indicates full charge of the battery when the programmable button is pressed.
<b>Blinking green</b>	Radio is powering up, receiving a non-privacy- enabled call or data.





<b>Rapidly blinking green</b>	Radio is receiving a privacy-enabled call.
-------------------------------	--

**Note:**


**Indicator Tones**




High pitched tone <input type="checkbox"/>	Low pitched tone <input checked="" type="checkbox"/>
--	--

	Positive Indicator Tone
	Negative Indicator Tone

**Audio Tones**

Alert tones provide you with audible indications of the radio's status or the radio's response to data received.

High pitched tone	Low pitched tone
<b>Continuous Tone</b> 	A monotone sound. Sounds continuously until termination.

High pitched tone	Low pitched tone
<b>Periodic Tone</b> 	Sounds periodically depending on the duration set by the radio. Tone starts, stops, and repeats itself.
<b>Repetitive Tone</b> 	A single tone that repeats itself until it is terminated by the user.
<b>Momentary Tone</b> 	Sounds only once for a short period of time defined by the radio.

---

## Making and Receiving Calls in Connect Plus Mode

### Selecting a Site

---

A site provides coverage for a specific area. A Connect Plus site has a site controller and a maximum of 15 repeaters. In a multi-site network, the Connect Plus radio will automatically search for a new site when the signal level from the current site drops to an unacceptable level.

### Roam Request

A Roam Request tells the radio to search for a different site, even if the signal from the current site is acceptable.

**Note:** This is programmed by your dealer.

Press the programmed **Roam Request** button. You hear a tone, indicating the radio has switched to a new site. The display shows `Site ID <Site Number>`.

---

### Site Lock On/Off

When toggled on, the radio searches the current site only. When toggled off, the radio searches other sites in addition to the current site.

Press the programmed **Site Lock** button.

- You hear a positive indicator tone, indicating the radio has locked to the current site. The display shows `Site Locked`.
  - You hear a negative indicator tone, indicating the radio is unlocked. The display shows `Site Unlocked`.
- 

### Site Restriction

Your Connect Plus radio system administrator has the ability to decide which network sites your radio is and is not allowed to use. Your radio does not need to be reprogrammed to change the list of allowed and disallowed sites. If your radio attempts to register at a disallowed site, you see a brief message stating: `Site <number given> Not Allowed`. The radio then searches for a different network site.





## Selecting a Zone


The radio can be programmed with a maximum of 16 Connect Plus Zones and each Connect Plus zone contains a maximum of 16 assignable positions on the Channel Selector Knob.

Each assignable knob position can be used to start one of the following voice call types:





- Group Call
- Multigroup Call
- All Call
- Private Call

### 1 Access the Zone feature.

Radio Controls	Steps
<b>Programmed Zone button</b>	Press the programmed <b>Zone</b> button.
<b>Radio menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Zone and press  to select.</li> </ol>

The current zone is displayed and indicated by a .

### 2 Select the required zone.

Radio Control	Steps
 or 	 or  and scroll to the required zone.

### 3

Press  to select.

The display shows <Zone> Selected momentarily and returns to the selected zone screen.

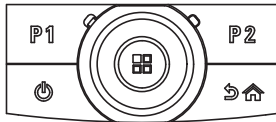
## Using Multiple Networks

If your radio has been programmed to use multiple Connect Plus networks, you can select a different network by switching to the Connect Plus zone that is assigned to the desired network. These network-to-zone assignments are configured by your dealer through radio programming.

## Selecting a Call Type

Use the 4-Way Navigation Disc to select a call type. This can be a Group Call, Multi-group Call, All Call or Private Call, depending on how your radio is programmed. If you navigate with the 4-Way Navigation Disc to a different Call Type this causes the radio to re-register with the Connect Plus site. The radio registers with the Registration Group ID that has been programmed for the newChannel Selector Knob position call type.

If you select a position that has no call type assigned to it, your radio sounds a continuous tone and the display shows *Unprogrammed*. Your radio does not operate when selected to an unprogrammed channel, use the 4-Way Navigation Disc to select a programmed channel instead.



Once the required zone is displayed (if you have multiple zones in your radio), use the 4-Way Navigation Disc to select the call type.

## Receiving and Responding to a Radio Call

Once the channel, subscriber ID or call type is displayed, you can proceed to receive and respond to calls.

The LED lights up solid green while the radio is transmitting and blinks green when the radio is receiving.

**Note:** The LED lights up solid green while the radio is transmitting and blinks green rapidly when the radio is receiving a privacy-enabled call. To unscramble a privacy-enabled call, your radio must have the same Privacy Key, OR the same Key Value and Key ID (programmed by your dealer), as the transmitting radio (the radio you are receiving the call from).

**Note:** See [Privacy](#) on page 206 for more information.

## Receiving and Responding to a Group Call

To receive a call from a group of users, your radio must be configured as part of that group.

When you receive a Group Call (while on the Home screen), the LED blinks green. The first line of the display shows the caller alias, and the RSSI icon. The second line displays the group alias and the Group

Call icon (in Digital mode only). Your radio unmutes and the incoming call sounds through the radio's speaker.

- 1 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.  
If the Voice Interrupt feature is enabled, press the **PTT** button to stop the current call from the transmitting radio and free the channel for you to talk/respond.  
The LED lights up solid green.

---

- 2 Wait for one of the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.

---

- 3 Release the **PTT** button to listen.

If there is no voice activity for a predetermined period of time, the call ends.

**Note:** See [Making a Group Call](#) on page 166 for details on making a Group Call.

**Note:** If the radio receives a Group Call while not on the Home screen, it remains on its current screen prior to answering the call.

**Note:** Long press the  button to go to the Home screen to view the caller alias before replying.

## Receiving and Responding to a Private Call

A Private Call is a call from an individual radio to another individual radio.

When you receive a Private Call, the LED blinks green. The first line of the display shows the subscriber alias or ID, and the RSSI icon. The second line displays `Private Call` and the Private Call icon. Your radio unmutes and the incoming call sounds through the radio's speaker.

- 1 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 2 Press the **PTT** button to respond to the call.  
The LED lights up solid green.

---

- 3 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.

---

- 4 Release the **PTT** button to listen.

If there is no voice activity for a predetermined period of time, the call ends.

The display shows `Call Ended`.

See [Making a Private Call](#) on page 166 for details on making a Private Call.

## Receiving an All Call

An All Call is a call from an individual radio to every radio on the site. It is used to make important announcements requiring the user's full attention.

When you receive an All Call, a tone sounds and the LED blinks green.

The first line of the display shows the caller alias, and the RSSI icon. The second line displays `All Call` and the All Call icon. Your radio unmutes and the incoming call sounds through the radio speaker.

Once the All Call ends, the radio returns to the previous screen before receiving the call. An All Call does not wait for a predetermined period of time before ending.

You cannot respond to an All Call.

**Note:** See [Making an All Call](#) on page 167 for details on making an All Call.

**Note:** The radio stops receiving the All Call if you switch to a different channel while receiving the call.

During an All Call, you will **not** be able to use any programmed button functions until the call ends.

## Making a Radio Call

---

After selecting your channel, you can select a subscriber alias or ID, or group alias or ID by using:

- The **PTT** button.
- A programmed **One Touch Access** button – The One Touch Access feature allows you to make a Private Call to a predefined ID easily. This feature can be assigned to a short or long programmable button press. You can **ONLY** have one ID assigned to a **One Touch Access** button. Your radio can have multiple **One Touch Access** buttons programmed.
- The Contacts list (see [Contacts Settings](#) on page 177).

**Note:** Your radio must have the Privacy feature enabled on the channel to send a privacy-enabled transmission. Only target radios with the same Key Value and Key ID as your radio will be able to unscramble the transmission.

**Note:** See [Privacy](#) on page 206 for more information.

## Making a Call with the Channel Selector Knob

### Making a Group Call

To make a call to a group of users, your radio must be configured as part of that group.

- 1 Select the channel with the active group alias or ID. See [Selecting a Call Type](#) on page 163.

---

- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 3 Press the **PTT** button to make the call. The LED lights up solid green. The Group Call icon appears in the top right corner. The first text line shows the group call alias.

---

- 4 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.

---

- 5 Release the **PTT** button to listen.  
When the target radio responds, the LED blinks green, the radio unmutes and the response sounds through the radio's speaker. You see the Group Call icon, the group alias or ID, and transmitting radio alias or ID on your display.

If there is no voice activity for a predetermined period of time, the call ends. Radio returns to the screen you were on prior to initiating the call.

---

### Making a Private Call

While you can receive and/or respond to a Private Call initiated by an authorized individual radio, your radio must be programmed for you to initiate a Private Call.

You will hear a negative indicator tone, when you make a Private Call via the Contacts list, Call Log, **One Touch Access** button, or the Channel Selector Knob, if this feature is not enabled.

Use the Text Message or Call Alert features to contact an individual radio. See [Text Message Features](#) on page 191 or [Call Alert Operation](#) on page 87 for more information.

- 1 Do one of the following.
    - Select the channel with the active subscriber alias or ID. See [Selecting a Call Type](#) on page 163.
    - Press the programmed **One Touch Access** button.
-

- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 

- 3 Press the PTT button to make the call.

If you release the PTT button while the radio is setting up the call, it exits without any indication and returns to the previous screen.

The LED lights up solid green, the radio unmutes and the response sounds through the radio's speaker. The Private Call icon appears on the top right corner. The first text line shows the subscriber alias. The second text line displays the call status..

---

- 4 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 

- 5 Release the **PTT** button to listen.

When the target radio responds, the LED blinks green, the radio unmutes and the response sounds through the radio's speaker.

If there is no voice activity for a predetermined period of time, the call ends. You hear a short tone. The display shows `Call Ended`.

---

Your radio may be programmed to perform a radio presence check prior to setting up the Private Call. If the target radio is not available, you hear a short tone and see negative mini notice on the display.

### **Making an All Call**

This feature allows you to transmit to all users on the site that are currently not engaged in another call. Your radio must be programmed to allow you to use this feature.

Users on the channel/site cannot respond to an All Call.

- 1 Select the channel with the active All Call group alias. See [Selecting a Call Type](#) on page 163.
- 

- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 

- 3 Press the **PTT** button to make the call. The LED lights up solid green. The Group Call icon appears in the top right corner. The first text line shows `All Call`.
- 

- 4 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
-



## Making a Multi-group Call

This feature allows you to transmit to all users on multiple groups. Your radio must be programmed to allow you to use this feature.

**Note:** Users on the groups cannot respond to a Multi-group Call.

1 Turn the Channel Selector Knob to select the Multi-group alias or ID.

---

2 Press the **PTT** button to make the call.

The LED lights up solid green. The display shows the Multi-group alias or ID.

Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

---

## Making a Private Call with a One Touch Call Button

**Note:** Programmable buttons press must be initiated from the Home screen.

The One Touch Call feature allows you to easily make a Private Call to a pre-defined Private Call alias or ID. This feature can be assigned to a short or long programmable button press.

You can **ONLY** have one alias or ID assigned to a One Touch Call button. Your radio can have multiple One Touch Call buttons programmed.

1 Press the programmed **One Touch Call** button to make a Private Call to the pre-defined Private Call alias or ID.

---

2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

3 Press the PTT button to make the call.

The LED lights up solid green.

The display shows the Private Call alias or ID.

---

4 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

---

5 Release the **PTT** button to listen.

When the target radio responds, the LED blinks green.

If there is no voice activity for a predetermined period of time, the call ends.

---

## Making a Call with the Programmable Manual Dial Button

## Making a Private Call

- 1** Press the programmed **Manual Dial** button to enter into the Manual Dial screen.  
The display shows `Number: .`

---
- 2** Use the keypad to enter a subscriber alias or Private ID.

---
- 3** Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---
- 4** Press the **PTT** button to make the call.  
The LED lights up solid green. The Private Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.

---
- 5** Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

---
- 6** Release the **PTT** button to listen.  
When the target radio responds, the LED blinks green.  
If there is no voice activity for a predetermined period of time, the call ends. You hear a short tone. The display shows `Call Ended.`

---

## Advanced Features in Connect Plus Mode

### Auto Fallback

---

Auto Fallback is a system feature that allows you to continue to make and receive non-emergency calls on the selected Group Contact in the event of certain types of Connect Plus system failures.

If one of these failures occurs, your radio attempts to roam to a different Connect Plus site. This search process may result in your radio finding an operable Connect Plus site, or it may result in your radio finding a “Fallback Channel” (if your radio is enabled for Auto Fallback). A Fallback Channel is a repeater that is normally part of an operable Connect Plus site, but is currently unable to communicate with either its site controller or the Connect Plus network. In Fallback mode, the repeater operates as a “stand-alone” digital repeater. Auto Fallback Mode supports non-emergency Group Calls only. No other call types are supported in Fallback Mode.

### Indications of Auto Fallback Mode

When your radio is using a Fallback channel, you hear the intermittent “Fallback Tone” approximately once every 15 seconds (except while transmitting). The display periodically shows a brief message, “Fallback Channel”. Your radio only permits PTT on the selected Group Contact (Group Call, Multigroup Call, or Site All Call). It does not allow you to make other types of calls.

### Making/Receiving Calls in Fallback Mode

#### Note:

Calls are heard only by radios that are monitoring the same Fallback channel and selected to the same Group. Calls are not networked to other sites or other repeaters.

Emergency voice calls or Emergency Alerts are not available in Fallback mode. If you press the emergency button in Fallback mode, the radio provides an invalid key press tone. Display-equipped radios also show the message, “Feature not available”.

Private (radio to radio) calls are not available in Fallback mode. If you attempt a call to a private contact, you will receive a denial tone. At this point

you should select a desired group contact. Other non-supported calls include Remote Monitor, Call Alert, Radio Check, Radio Enable, Radio Disable, Text messaging, Location Updates, and packet data calls.

Enhanced Traffic Channel Access (ETCA) is not supported in Auto Fallback mode. If two or more radio users press PTT at the same time (or at almost the same time), it is possible that both radios transmit until PTT is released. In this event, it is possible that none of the transmissions will be understood by receiving radios.

Making calls in Fallback mode is similar to normal functioning. Simply select the group contact you wish to use (using the radio's normal channel selection method), and then press the PTT to start your call. It is possible that the channel may be in use already by another group. If the channel is in use, you receive a busy tone and the display will say "Channel Busy". You may select Group, Multi-group or Site All Call contacts using your radio's normal channel selection method. While the radio is operating on the Fallback Channel, the Multigroup operates just like other Groups. It is only heard by radios that are currently selected to the same Multi-group. Enhanced Privacy is supported in Fallback mode.

## Returning to Normal Operation

If the site returns to normal trunking operation while you are in range of your Fallback repeater, your radio automatically exits Auto Fallback mode. You hear a registration "beep" when the radio successfully registers. If you are in the range of an operable site (that is not in Fallback mode), you may press the Roam Request button (if programmed for your radio) to force your radio to search for and register on an available site. If no other site is available, your radio returns to Auto Fallback mode after searching is complete. If you drive out of coverage of your Fallback repeater, your radio enters Search mode (display indicates "Searching").






## Radio Check

---

If enabled, this feature allows you to determine if another radio is active in a system without disturbing the user of that radio. No audible or visual notification is shown on the target radio.

### Sending a Radio Check

- 1 Access the Radio Check feature.

Radio Control	Steps
<b>Programmed Radio Check button</b>	<ol style="list-style-type: none"> <li>1 Press the programmed <b>Radio Check</b> button.</li> <li>2 ▲ or ▼ to the required subscriber alias or ID and press  to select.</li> </ol>
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2 ▲ or ▼ to <b>Contacts</b> and press  to select.</li> <li>3 ▲ or ▼ to the required subscriber alias or ID and press  to select.</li> <li>4 ▲ or ▼ to <b>Radio Check</b> and press  to select.</li> </ol>

The display shows the Target Alias, indicating the request is in progress. The LED lights up solid green.

- 2 Wait for acknowledgement.

If the target radio is active in the system, a tone sounds and the display briefly shows **Target Radio Available**.

If the target radio is not active in the system, a tone sounds and the display briefly shows **Target Radio Not Available**.

Radio returns to the subscriber alias or ID screen.

## Remote Monitor







Use the Remote Monitor feature to turn on the microphone of a target radio (subscriber alias or IDs only). No audible or visual indication is given to the target radio. You can use this feature to monitor, remotely, any audible activity surrounding the target radio.

Your radio must be programmed to allow you to use this feature.

### Initiating Remote Monitor

**Note:** Remote Monitor automatically stops after a programmed duration or when there is any user operation on the target radio.

- 1 Access the Remote Monitor feature.

Radio Control	Steps
<b>Programmed Remote Monitor Button</b>	<ol style="list-style-type: none"> <li>1 Press the programmed <b>Remote Monitor</b> button.</li> <li>2 ▲ or ▼ to the required subscriber alias or ID and press  to select.</li> </ol>
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2 ▲ or ▼ to <b>Contacts</b> and press  to select.</li> <li>3 ▲ or ▼ to the required subscriber alias or ID and press  to select.</li> <li>4 ▲ or ▼ to <b>Manual Dial</b> and press  to select.</li> <li>5 ▲ or ▼ to <b>Remote Mon.</b> and press  to select.</li> </ol>

The display shows the Target Alias, indicating the request is in progress. The LED lights up solid green.

## 2 Wait for acknowledgement.

If successful, a positive indicator tone sounds and the display shows **Rem. Monitor Successful**. Your radio starts playing audio from the monitored radio for a programmed duration and display shows **Rem. Monitor**. Once the timer expires, the radio sounds an alert tone and the LED turns off.

If unsuccessful, the radio sounds a negative indicator tone the display shows **Rem. Monitor Failed**.

## Scan


This feature allows your radio to monitor and join calls for groups/channels defined in a pre-programmed scan list. When scan is enabled, the scan icon appears on the status bar and the LED blinks green and yellow.

### Starting and Stopping Scan




**Note:** This procedure turns the Scan feature On or Off for all Connect Plus zones with the same Network

ID as your currently selected zone. It is important to note that even when the Scan feature is turned on via this procedure, scan may still be disabled for some (or all) groups on your scan list. See [Editing the Scan List](#) on page 175 for more information.




You can start and stop scanning by pressing the programmed **Scan** button **OR** follow the procedure described next.

- 1  to access the menu.

---

- 2  or  to Scan and press  to select.

---

- 3  or  to Turn On or Turn Off and press  to select.
  - The display shows Scan On if scan is disabled.
  - The display shows Scan Off if scan is enabled.

### Responding to a Transmission During a Scan

During scanning, your radio stops on a channel/group where activity is detected. The radio stays on that channel for a programmed time period known as “hang time”.

- 1 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 2 Press the **PTT** button during hang time. The LED lights up solid green.

---

- 3 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.

---

- 4 Release the **PTT** button to listen. If you do not respond within the hang time, the radio returns to scanning other groups.

### User Configurable Scan

If the Edit List menu is enabled, a user is able to Add and Remove the scan members from the Add Member menu. A Scan List member must be a regular Group Contact (i.e. not Multi-group or Site All Call/Network Wide All Call) that is currently assigned to a Channel Selector position in a Connect Plus Zone with the same Network ID as the currently selected Zone. The Talkgroup's Alias must also not match any Talkgroup that is already included in the current Zone's Scan List.

Scan can be turned on or off from the menu or by pressing a programmed **Scan On/Off** button.

This feature functions only when the radio is not currently involved in a call. If you are presently listening to a call, your radio cannot scan for other group calls, and is therefore unaware they are in progress. Once your call is finished, your radio returns to the control channel time slot and is able to scan for groups that are in the scan list.


### Turning Scan On or Off

**Note:** This procedure turns the Scan feature On or Off for all zones with the same Network ID as your currently selected zone. It is important to note that even when the Scan feature is turned on via this procedure, scan may still be disabled for some (or all) groups on your scan list. See the next section for more information.




If Scan is turned on, the Scan icon appears on your display. When Scan is on and you are not participating in a call, the LED blinks green and yellow.

The procedure for turning Scan on or off depends on how your radio is programmed. If programmed with a Scan On/Off button, use the button to toggle the




feature on or off. If your radio has been programmed so that Scan can be turned on or off via the menu, follow the procedure described next.

- 1  to access the menu.

---

- 2  or  to Scan and press  to select.

---

- 3  or  to Turn On or Turn Off and press  to select.
  - The display shows Scan On momentarily if scan is disabled.
  - The display shows Scan Off momentarily if scan is enabled.

### Editing the Scan List




**Note:** If the scan list entry happens to be the radio's currently selected group, the radio listens for activity on this group regardless of whether the list entry currently shows a check mark or not. Whenever a radio is not in a call, the radio listens for activity on its Selected Group, Multigroup, the Site All Call, and its Default Emergency Revert Group (if configured for one). This operation cannot be disabled.





Your scan list determines which groups can be scanned. The list is created when your radio is programmed. If your radio has been programmed to allow you to edit the scan list, you can selectively enable/disable scan for individual groups on the list. However, you cannot delete groups from the list or add groups to the list. This can only be done through radio programming.

1  to access the menu.

---

2  or  to View/Edit List and press  to select.


---

3  or  to the desired Group name.

If a check mark precedes the Group name, then scan is currently enabled for this Group.

If there is no check mark preceding the Group name, then scan is currently disabled for this Group.


---

4  to select the desired Group.

The display shows `Enable` if scan is currently disabled for the Group.

The display shows `Disable` if scan is currently enabled for the Group.

---

- 5 Select the displayed option (`Enable` or `Disable`) and press  to select. Depending on which option was selected, the radio momentarily displays `Scan Enabled` or `Scan Disabled` as confirmation.
- 

The radio displays the Zone scan list again. If scan was enabled for the Group, the check mark displays before the Group name. If scan was disabled for the Group, the check mark is removed before the Group name.

### Understanding Scan Operation

**Note:** If you scan into a call for a group that is not assigned to a channel position in your currently selected zone and you miss the call's Hang Time, you have to switch to the proper zone and then select the group's channel position to talk back to that group.

There are some circumstances in which you can miss calls for groups that are in your scan list. When you miss a call for one of the following reasons, this does not indicate a problem with your radio. This is a normal scan operation for Connect Plus.

- Scan feature is not turned on (check for the scan icon on the display).
- Scan list member has been disabled via the menu (see [Editing the Scan List](#) on page 175).
- You are participating in a call already.
- No member of the scanned group is registered at your site (Multisite systems only).

- Private Call
- Group Call
- Multigroup Call
- All Call Voice
- All Call Text†
- Dispatch Call

The Dispatch Call contact type is used to send a text message to a dispatcher PC through a third-party Text Message Server.

## Contacts Settings

---

### Note:


You can add, or edit subscriber IDs for Digital Contacts. Deleting subscriber IDs can only be performed by your dealer.

If the Privacy feature is enabled on a channel, you can make a privacy-enabled voice call on that channel. Only target radios with the same Privacy Key OR the same Key Value and Key ID as your radio are able to unscramble the transmission.




Contacts provide “address-book” capabilities on your radio. Each entry corresponds to an alias or ID that you use to initiate a call.

Each zone provides a Contact List with up to 100 contacts. The following contact types are available:




### Making a Private Call from Contacts



- 1  to access the menu.

---

- 2  or  to **Contacts** and press  to select. The entries are alphabetically sorted.

---

- 3 Use one of the steps described next to select the required subscriber alias or ID:
  - select the subscriber alias or ID directly
  -  or  to the required subscriber alias or ID and press  to select.
  - use the **Manual Dial** menu

- ▲ or ▼ to **Manual Dial** and press  to select.
- If there was previously dialed ID, the ID appears along with a blinking cursor. Use the keypad to edit/enter the ID. Press  to select.

- 
- 4 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 
- 5 Press the **PTT** button to make the call. The LED lights up solid green. .
- 
- 6 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.
- 
- 7 Release the **PTT** button to listen.

When the target radio responds, the LED blinks green and the display shows the transmitting user's ID.





If there is no voice activity for a predetermined period of time, the call ends.

You hear a short tone. The display shows **Call Ended**.

## Making a Call Alias Search

You can also use alias or alphanumeric search to retrieve the required subscriber alias.

This feature is only applicable while in **Contacts**.

- 1  to access the menu.
- 
- 2 ▲ or ▼ to **Contacts** and press  to select. The entries are alphabetically sorted.
- 
- 3 Key in the first character of the required alias, and then press ▲ or ▼ to locate the required alias.
- 
- 4 Use the keypad to type the required alias. Press ◀ to move one space to the left. Press ▶ to move one space to the right. Press the  key to delete any unwanted characters. Long press  to change text entry method.
- 
- 5 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 
- 6 Press the **PTT** button to make the call.

The LED lights up solid green. The display shows the destination alias.

---

7 Wait for the Talk Permit Tone to finish (if enabled), and speak clearly into the microphone.

---

8 Release the PTT button to listen.

When the target radio responds, the LED blinks green.

---

9 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

If there is no voice activity for a predetermined period of time, the call ends.




The display shows `Call Ended`.

---




### Adding a New Contact

1  to access the menu.


---

2  or  to `Contacts` and press  to select.


---

3  or  to `New Contact` and press  to select.




---

4 Use the keypad to enter the contact number and press  to confirm.

---

5 Use the keypad to enter the contact name and press  to confirm.

---

6 If adding a Radio Contact,  or  to the required ringer type and press  to select. The radio sounds a positive indicator tone and the display shows `Contact Saved`.

---

## Call Indicator Settings

---

### Activating and Deactivating Call Ringers for Call Alert


You can select, or turn on or off ringing tones for a received Call Alert.

1  to access the menu.


---

2 ▲ or ▼ to Utilities and press  to select.


---

3 ▲ or ▼ to Radio Settings and press  to select.


---

4 ▲ or ▼ to Tones/Alert and press  to select.


---

5 ▲ or ▼ to Call Ringers and press  to select.

---

6 ▲ or ▼ to Call Alert and press  to select.  
The current tone is indicated by a ✓.

---

7 ▲ or ▼ to the required tone and press  to select.


You can also use ◀ or ▶ to change the selected option.

✓ appears beside selected tone.

---

## Activating and Deactivating Call Ringers for Private Calls


You can turn on or off the ringing tones for a received Private Call.

1  to access the menu.


---

2 ▲ or ▼ to Utilities and press  to select.


---

3 ▲ or ▼ to Radio Settings and press  to select.


---

4 ▲ or ▼ to Tones/Alerts and press  to select.

---


5 ▲ or ▼ to Call Ringers and press  to select.

---


6 ▲ or ▼ to Private Call and press  to select.




You can also use ◀ or ▶ to change the selected option.




---


- 7 Press  to enable/disable the Private Call ringing tones.





The display shows  beside Enabled, if Private Call ringing tones are enabled.

The  disappears from beside Enabled, if Private Call ringing tones are disabled.

- 5  or  to Call Ringers and press  to select.

- 6  or  to Text Message and press  to select.




The current tone is indicated by a .




- 7  or  to the required tone and press  to select.  
 appears beside selected tone.


### Activating and Deactivating Call Ringers for Text Message

You can turn on or off the ringing tones for a received Text Message.

- 1  to access the menu.

- 2  or  to Utilities and press  to select.

- 3  or  to Radio Settings and press  to select.




- 4  or  to Tones/Alerts and press  to select.


### Assigning Ring Styles

You can program your radio to sound one of ten predefined ringing tones when receiving a Call Alert or a Text Message from a particular contact.


The radio sounds out each ring style as you navigate through the list.

- 1  to access the menu.


- 2  or  to Contacts and press  to select.  
The entries are alphabetically sorted.

3 ▲ or ▼ to the required alias or ID and press  to select.


---

4 ▲ or ▼ to View/Edit and press  to select.


---

5 ▲ or ▼ to Ringer and press  to select.

---

6 ▲ or ▼ to required ring style and press  to select.  
A ✓ indicates the current selected tone.

---

7 ▲ or ▼ to the required tone and press  to select. ✓ appears beside selected tone.  
The display shows Contact Saved.

---

### Escalating Alarm Tone Volume


You can program your radio to continually alert you when a radio call remains unanswered. This is done by automatically increasing the alarm tone volume over time. This feature is known as Escalert.

1  to access the menu.


---

2 ▲ or ▼ to Utilities and press  to select.


---

3 ▲ or ▼ to Radio Settings and press  to select.

---


4 ▲ or ▼ to Tones/Alerts and press  to select.

---

5 ▲ or ▼ to Escalert and press  to select.

You can also use ◀ or ▶ to change the selected option.

---

6 Press  to enable/disable the Escalert.  
The display shows ✓ beside Enabled.  
The ✓ disappears from beside Enabled.

---

### Call Log Features


Your radio keeps track of all recent outgoing, answered, and missed Private Calls. Use the call log feature to view and manage recent calls.

You can perform the following tasks in each of your call lists:




- Delete
- View Details

### Viewing Recent Calls




The lists are Missed, Answered, and Outgoing.

- 1  to access the menu.



---

- 2  or  to Call Log and press  to select.


---

- 3  or  to preferred list and press  to select.  
The display shows the most recent entry at the top of the list.




---

- 4  or  to view the list.  
Press the **PTT** button to start a Private Call with the current selected alias or ID.




### Deleting a Call from a Call List




- 1  to access the menu.

- 2  or  to Call Log and press  to select.





- 3  or  to the required list and press  to select.

When you select a call list and it contains no entries, the display shows *List Empty*, and sounds a low tone if Keypad Tones are turned on (see [Turning Keypad Tones On or Off](#) on page 129).

- 4  or  to the required alias or ID and press  to select.


- 5  or  to Delete Entry? and press  to select.

- 6 Do one of the following:




- Press  to select *Yes* to delete the entry. The display shows *Entry Deleted*.
-  or  to *No*, and press the  button to return to the previous screen.






## Viewing Details from a Call List

- 1  to access the menu.




---

- 2  or  to Call Log and press  to select.




---

- 3  or  to the required list and press  to select.

---

- 4  or  to the required alias or ID and press  to select.

---

- 5  or  to View Details and press  to select.  
Display shows details.

## Call Alert Operation


Call Alert paging enables you to alert a specific radio user to call you back when they are able to do so.

This feature is applicable for subscriber aliases or IDs only and is accessible through the menu via Contacts or manual dial.

## Receiving and Responding to a Call Alert

When you receive a Call Alert page, you see the notification list listing a Call Alert with the alias or ID of the calling radio on the display.


When you hear a repetitive tone and the LED blinks yellow and green, do one of the following:

- Press the **PTT** button while the display still shows the Call Alert in the Notification List to respond with a Private Call.
- Press  to exit the Notification List. The alert is moved to the Missed Call Log.




See [Notification List](#) on page 217 for details about the Notification List.




See [Call Log Features](#) on page 182 for details about the Missed Call List.


## Making a Call Alert from the Contact List

- 1  to access the menu.

---

- 2  or  to Contacts and press  to select.

- 3 Use one of the steps described next to select the required subscriber alias or ID:
- select the subscriber alias or ID directly
    - ▲ or ▼ to the required subscriber alias or ID and press  to select.
  - use the Manual Dial menu
    - ▲ or ▼ to Manual Dial and press  to select.
    - The first line of the display shows Radio Number: , the second line of the display shows a blinking cursor. Enter the subscriber ID you want to page and press .

- 4 ▲ or ▼ to Call Alert and press  to select.

The display shows Call Alert: <Subscriber Alias or ID>Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.

The LED lights up solid green when your radio is sending the Call Alert.

If the Call Alert acknowledgement is received, the display shows Call Alert Successful.

If the Call Alert acknowledgement is not received, the display shows Call Alert Failed.

---

### Making a Call Alert with the One Touch Access Button

- Press the programmed **One Touch Access** button to make a Call Alert to the predefined alias or ID. The display shows Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.

The LED lights up solid green when your radio is sending the Call Alert.

If the Call Alert acknowledgement is received, the display shows Call Alert Successful.

If the Call Alert acknowledgement is not received, the display shows Call Alert Failed.

---

### Emergency Operation

#### Note:

If your radio is programmed for “Silent” or “Silent with voice” emergency initiation, in most cases it

automatically exits silent operation after the Emergency Call or Emergency Alert is finished. The exception to this rule is when “Emergency Alert” is the configured Emergency Mode and “Silent” is the configured Emergency Type. If your radio is programmed in this manner, the silent operation continues until you cancel silent operation by pressing PTT or the button configured for “Emergency Off”.

Emergency voice calls and Emergency Alerts are not supported when operating in Connect Plus Auto Fallback mode. For more information see the [Auto Fallback](#) on page 170.

An Emergency Alert is used to indicate a critical situation. You can initiate an Emergency at any time on any screen display, even when there is activity on the current channel. Pressing the **Emergency** button initiates the programmed Emergency mode. The programmed Emergency mode may also be initiated by triggering the optional Man Down feature. The Emergency feature may be disabled in your radio.

Your dealer can set the duration of a button press for the programmed Emergency button, except for long press, which is similar with all other buttons:

- Short press – Between 0.05 seconds and 0.75 seconds.
- Long press – Between 1.00 second and 3.75 seconds.

The Emergency button is assigned with the Emergency On/Off feature. Check with your dealer for the assigned operation of the Emergency button.

- If short Emergency button short press is assigned to Emergency On, then Emergency button long press is assigned to Emergency Off.
- If Emergency button short press is assigned to Emergency On, then Emergency button short press is assigned to Emergency Off.

When your radio is selected to a Connect Plus zone, it supports three Emergency modes:

- **Emergency Call** – You must press the **PTT** button to talk on the assigned emergency time slot.
- **Emergency Call with Voice to Follow** – For the first transmission on the assigned emergency time slot, the microphone is automatically unmuted and you may talk without pressing the **PTT** button. The microphone stays “hot” in this fashion for a time period programmed into the radio. For subsequent

transmissions in the same Emergency call, you must press the **PTT** button.

- **Emergency Alert** – An Emergency Alert is not a voice call. It is an emergency notification that is sent to radios that are configured to receive these alerts. The radio sends an emergency alert via the control channel of the currently registered site. The Emergency Alert is received by radios in the Connect Plus network that are programmed to receive them (no matter which network site they are registered to).

Only ONE of the Emergency Modes can be assigned to the Emergency button per zone. In addition, each Emergency mode has the following types:

- Regular – Radio initiates an Emergency and shows audio and/or visual indicators.
- Silent – Radio initiates an Emergency without any audio or visual indicators. The radio will suppress all audio or visual indications of the Emergency until you press the **PTT** button to start a voice transmission.
- Silent with Voice – The same as Silent operation, except that the radio will also unmute for some voice transmissions.

## Receiving an Incoming Emergency


Your radio may be programmed to sound an alert tone and also display information about the incoming Emergency. If so programmed, upon receiving the incoming Emergency, the display shows the Emergency Details screen with the emergency icon, the Alias or ID of the radio that requested the Emergency, the Group Contact being used for the Emergency, and one additional line of information. The additional information is the name of the zone that contains the Group Contact.

At the present time, the radio displays only the most recently decoded Emergency. If a new Emergency is received before the prior Emergency is cleared, the details for the new Emergency replace the details of the previous Emergency.

Depending on how your radio has been programmed, the Emergency Details screen (or Alarm List screen) will stay on your radio's display even after the Emergency ends. You can save the emergency details to the Alarm List, or you can delete the emergency details as described in the following sections.



## Saving the Emergency Details to the Alarm List

Saving the emergency details to the Alarm List allows you to view the details again at a later time by selecting Alarm List from the Main Menu.

While the Emergency Details (or Alarm List) screen is displayed, press .


The **Exit Alarm List** screen displays.

Do one of the following.

- Select **Yes** and press  to save the emergency details to the Alarm List, and to exit the Emergency Details (or Alarm List) screen.
- Select **No** and press  to return to the Emergency Details (or Alarm List) screen.



---

## Deleting the Emergency Details

While the Emergency Details screen is displayed, press .

The **Delete** screen displays.

Do one of the following.

- Select **Yes** and press  to delete the emergency details.
- Select **No** and press  to return to the Emergency Details screen.

---

## Responding to an Emergency Call

**Note:** If you do not respond to the Emergency Call within the time allotted for the Emergency Call Hang Time, the Emergency call will end. If you want to speak to the group after the Emergency Call Hang Time expires, you must first select the channel position assigned to the group (if not already selected). Then, press **PTT** to start a non-Emergency Call to the group.

- 1 When receiving an Emergency Call, press any button to stop all Emergency Call received indications.
- 
- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 
- 3 Press the **PTT** button to initiate a voice transmission on the Emergency group.

All radios that are monitoring this group hear your transmission.

---

**4** Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone. The LED lights up green.

---

**5** Release the **PTT** button to listen. When the emergency initiating radio responds, the LED blinks green, the LED blinks green, the radio unmutes and the response sounds through the radio's speaker. You see the Group Call icon, the group ID, and transmitting radio ID on your display.

---

### Responding to an Emergency Alert

**Note:** The Group contact used for the Emergency Alert should not be used for voice communication. This could prevent other radios from sending and receiving Emergency Alerts on the same group.

An Emergency Alert from a radio indicates that the user is in an urgent situation. You may respond to the alert by initiating a private call to the radio who declared the emergency, initiating a group call to a designated talk group, sending the radio a Call Alert, initiating a Remote Monitor of that radio, etc. The

proper response is determined by your organization and the individual situation.

### Initiating an Emergency Call

#### Note:

If your radio is set to Silent, it does not display any audio or visual indicators during Emergency mode until you press the **PTT** button to initiate a voice transmission.

If your radio is set to Silent with Voice, it does not initially display any audio or visual indicators that the radio is in Emergency mode. However, your radio unmutes for the transmissions of radios responding to your emergency. The emergency indicators only appear once you press the **PTT** button to initiate a voice transmission from your radio.

For both “Silent” and “Silent with Voice” operation, the radio automatically exits silent operation after the Emergency Call is finished.

---

**1** Press the programmed **Emergency** button.

---

**2** Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 3 Press the **PTT** button to initiate a voice transmission on the Emergency group.

When you release the PTT button, the Emergency call continues for the time allotted for the Emergency Call Hang Time.

If you press the PTT button during this time, the Emergency call continues.

---

### Initiating an Emergency Call with Voice to Follow

Your radio must be programmed for this type of operation.

When enabled for this operation, when you press the programmed **Emergency** button, and when your radio receives the time slot assignment, the microphone is automatically activated without pressing the **PTT** button. This activated microphone state is also known as “hot mic”. The “hot mic” applies to the first voice transmission from your radio during the Emergency call. For subsequent transmissions in the same Emergency call, you must press the **PTT** button.

- 1 Press the programmed **Emergency** button.
- 

- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 

- 3 The microphone remains active for the “hot mic” time specified in your radio's codeplug programming. During this time, the LED lights up green.
- 

- 4 Press and hold the **PTT** button to talk longer than the programmed duration.
- 

### Initiating an Emergency Alert

**Note:** If your radio is programmed for “Silent” or “Silent with Voice”, it will not provide any audio or visual indications that it is sending an Emergency Alert. If programmed for “Silent”, the silent operation continues indefinitely until you press PTT or the button configured for “Emergency Off”. If programmed for “Silent with Voice”, the radio automatically cancels silent operation when the site controller broadcasts the Emergency Alert.

Press the orange **Emergency** button.

Upon transmitting the Emergency Alert to the site controller, the radio's display shows the

Emergency icon, the Group contact used for the Emergency Alert, and TX Alarm.

Once the Emergency Alert is successfully sent and is being broadcast for other radios to hear, a positive indicator tone sounds and the radio's display shows `Alarm Sent`. If the Emergency Alert is unsuccessful, a negative indicator tone sounds and the radio displays `Alarm Failed`.

---

### Exiting Emergency Mode

**Note:** If the Emergency call ends due to the expiration of the Emergency Hang Time, but the emergency condition is not over, press the Emergency button again to restart the process.

If you initiate an Emergency Alert by pressing the programmed **Emergency** button, your radio automatically exits Emergency mode after receiving a response from the Connect Plus system.

If you initiate an Emergency call by pressing the programmed **Emergency** button, your radio will be assigned a channel automatically when one becomes available. Once your radio has transmitted a message indicating the emergency, you cannot cancel your Emergency call. However, if you pressed the button by accident or the emergency no longer

exists, you may wish to say this over the assigned channel. When you release the PTT button, the Emergency call is discontinued after the Emergency Call Hang Time expires.

If your radio was configured for Emergency with Voice to Follow, use the "hot mic" period to explain your error, then press and release the PTT button to discontinue the transmission. The Emergency call is discontinued after the Emergency Call Hang Time expires.

---


### Text Message Features

Your radio is able to receive data, for example a text message, from another radio or a text message application.

The **maximum** length of characters for a text message, including the subject line (seen when receiving message from a text message application), is **140**.





The radio exits the current screen once the inactivity timer expires. Any text message in the writing/editing screen will automatically be saved to the Drafts folder.









**Note:** Long press  at any time to return to the Home screen.


## Writing and Sending a Text Message









- 1 Access the **Text Message** feature.

Radio Controls	Steps
<b>Program med Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Messages and press  to select.</li> </ol>

- 2  or  to Compose and press  to select. A blinking cursor appears.
- 3 Use the keypad to type your message.

Press  to move one space to the left. Press  or the  key to move one space to the right.

Press the  key to delete any unwanted characters. Long press  to change text entry method.

- 4 Press  once message is composed.
- 5 If you are sending the message, select the recipient by
  -  or  to the required alias or ID and press  to select.
  -  or  to Manual Dial, and press  to select. The first line of the display shows Number: . The second line of the display shows a blinking cursor. Key in the subscriber alias or ID and press .

The display shows **Sending Message**, confirming your message is being sent.

If the message is sent successfully, a tone sounds and the display shows **Message Sent**.

If the message cannot be sent, a low tone sounds and the display shows **Message Send Failed**.


If the text message fails to send, the radio returns you to the **Resend** option screen (see [Managing Fail-to-Send Text Messages](#) on page 197).

### Sending a Quick Text Message

Your radio supports a maximum of 10 Quick Text messages as programmed by your dealer.




While Quick Text messages are predefined, you can edit each message before sending it.




- 1 Access the **Text Message** feature.




Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	1  to access the menu.

#### Radio Controls

#### Steps




2  or  to **Messages** and press  to select.

- 2  or  to **Quick Text** and press  to select.


- 3  or  to the required Quick Text and press  to select.

A blinking cursor appears.





- 4 Use the keypad to edit the message, if required.

Press  to move one space to the left. Press  or the  key to move one space to the right.




Press the  key to delete any unwanted characters. Long press  to change text entry method.

- 5 Press  once message is composed.

- 6 Depending on whether you want to send, save, edit, or delete the newly composed message, do one of the following.

- ▲ or ▼ to Send, and press  to send the message.
- ▲ or ▼ to Save, and press  to save the message to the Drafts folder.
-  to edit the message.
-  again to choose between deleting the message or saving it to the Drafts folder.

- 7 If you are sending the message, select the recipient by

- ▲ or ▼ to the required alias or ID and press  to select.
- ▲ or ▼ to Manual Dial, and press  to select. The first line of the display shows Number: . The second line of the display shows a blinking cursor. Key in the subscriber alias or ID and press .

The display shows *Sending Message*, confirming your message is being sent.

If the message is sent successfully, a tone sounds and the display shows *Message Sent*.

If the message cannot be sent, a low tone sounds and the display shows *Message Send Failed*.

If the text message fails to send, the radio returns you to the *Resend* option screen (see [Managing Fail-to-Send Text Messages](#) on page 197).

---

### Sending a Quick Text Message with the One Touch Access Button

- Press the programmed **One Touch Access** button to send a predefined Quick Text message to a predefined alias or ID. The display shows *Sending Message*, confirming your message is being sent. If the message is sent, a tone sounds and the display shows *Message Sent*. If the message cannot be sent, a low tone sounds and the display shows *Message Send Failed*.

If the text message fails to send, the radio returns you to the **Resend** option screen (see [Managing Fail-to-Send Text Messages](#) on page 197).

### Accessing the Drafts Folder


You can save a text message to send it at a later time.

If a **PTT** button press or a mode change causes the radio to exit the text message writing/editing screen while you are in the process of writing or editing a text message, your current text message is automatically saved to the Drafts folder.

The most recent saved text message is always added to the top of the Drafts list.





The Drafts folder stores a maximum of ten (10) last saved messages. When the folder is full, the next saved text message automatically replaces the oldest text message in the folder.

#### Note:




Long press  at any time to return to the Home screen.

### Viewing a Saved Text Message

- 1 Access the **Text Message** feature.




Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Messages and press  to select.</li> </ol>

- 2  or  to Drafts and press  to select.

- 3  or  to the required message and press  to select.




### Editing and Sending a Saved Text Message


- 1 Press  again while viewing the message.

- 2  or  to Edit and press  to select.

A blinking cursor appears.




- 3 Use the keypad to type your message.





Press  to move one space to the left. Press  or the  key to move one space to the right.

Press the  key to delete any unwanted characters. Long press  to change text entry method.

- 4 Press  once message is composed.

- 5 Select the message recipient by

—  or  to the required alias or ID and press  to select.

—  or  to Manual Dial, and press  to select. The first line of the display shows Number: . The second line of the display shows a blinking cursor. Key in the subscriber alias or ID and press .

The display shows `Sending Message`, confirming your message is being sent.





If the message is sent successfully, a tone sounds and the display shows `Message Sent`.




If the message cannot be sent, a low tone sounds and the display shows `Message Send Failed`.


If the text message cannot be sent, it is moved to the Sent Items folder and marked with a Send Failed icon.

### Deleting a Saved Text Message from Drafts


- 1 Access the **Text Message** feature.

Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	<p>1  to access the menu.</p> <p>2  or  to Messages and press  to select.</p>


- 2  or  to `Drafts` and press  to select.

3 ▲ or ▼ to the required message and press  to select.

---

4 Press  again while viewing the message.

---

5 ▲ or ▼ to Delete and press  to delete the text message.


---

### Managing Fail-to-Send Text Messages

You can select one of the following options while at the Resend option screen:

- Resend
- Forward
- Edit

### Resending a Text Message

— Press  to resend the same message to the same subscriber/group alias or ID.

If the message is sent successfully, a tone sounds and the display shows positive mini notice.


If the message cannot be sent, the display shows negative mini notice.



### Forwarding a Text Message

Select Forward to send the message to another subscriber/ group alias or ID.

1 ▲ or ▼ to Forward and press  to select.

---

2 — ▲ or ▼ to the required alias or ID and press  to select.

— ▲ or ▼ to Manual Dial, and press  to select. The first line of the display shows Number: . The second line of the display shows a blinking cursor. Key in the subscriber alias or ID and press .

The display shows Sending Message, confirming your message is being sent.

If the message is sent successfully, a tone sounds and the display shows Message Sent.




If the message cannot be sent, a low tone sounds and the display shows Message Send Failed.

---

## Editing a Text Message




Select **Edit** to edit the message before sending it.



**Note:** If a subject line is present (for messages received from a text message application), you cannot edit it.

- 1  or  to **Edit** and press  to select. A blinking cursor appears.


---

- 2 Use the keypad to edit your message.
 

Press  to move one space to the left. Press  or the  key to move one space to the right.









Press the  key to delete any unwanted characters. Long press  to change text entry method.








---

- 3 Press  once message is composed.

---

- 4 Depending on whether you want to send, save, re-edit, or delete the newly composed message, do one of the following.

-  or  to **Send**, and press  to send the message.
-  or  to **Save**, and press  to save the message to the Drafts folder.
-  to edit the message.
-  again to choose between deleting the message or saving it to the Drafts folder.

- 5 If you are sending the message, select the recipient by
  -  or  to the required alias or ID and press  to select.
  -  or  to **Manual Dial**, and press  to select. The first line of the display shows **Number:**. The second line of the display shows a blinking cursor. Key in the subscriber alias or ID and press .

The display shows **Sending Message**, confirming your message is being sent.

If the message is sent successfully, a tone sounds and the display shows `Message Sent`.

If the message cannot be sent, a low tone sounds and the display shows `Message Send Failed`.

## Managing Sent Text Messages

Once a message is sent to another radio, it is saved in Sent Items. The most recent sent text message is always added to the top of the Sent Items list.





The Sent Items folder is capable of storing a maximum of thirty (30) last sent messages. When the folder is full, the next sent text message automatically replaces the oldest text message in the folder.




**Note:** Long press  at any time to return to the Home screen.




## Viewing a Sent Text Message

- 1 Access the **Text Message** feature.

Radio Controls	Steps
<b>Programmed Text Message</b>	Press the programmed <b>Text Message</b> button.

Radio Controls	Steps
<b>Message button</b>	
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Messages and press  to select.</li> </ol>

- 2  or  to Sent Items and press  to select.

- 3  or  to the required message and press  to select.

A subject line may be shown if the message is from a text message application.


The icon at the top right corner of the screen indicates the status of the message (see [Sent Item Icons](#) on page 158).




## Sending a Sent Text Message

You can select one of the following options while viewing a sent text message:




- Resend
- Forward
- Edit
- Delete

1 Press  again while viewing the message.

2  or  to one of the options described next and press  to select.

Option	Steps
<b>Forward</b>	Select <b>Forward</b> to send the selected text message to another subscriber/group alias or ID (see <a href="#">Forwarding a Text Message</a> on page 197).
<b>Edit</b>	Select <b>Edit</b> to edit the selected text message before sending it (see <a href="#">Editing a Text Message</a> on page 198).
<b>Delete</b>	Select <b>Delete</b> to delete the text message.

Option	Steps
<b>Resend</b>	<p>Select <b>Resend</b> to resend the selected text message to the same subscriber/group alias or ID.</p> <p>The display shows <b>Sending Message</b>, confirming that the same message is being sent to the same target radio.</p> <p>If the message is sent successfully, a tone sounds and the display shows <b>Message Sent</b>.</p> <p>If the message cannot be sent, a low tone sounds and the display shows <b>Message Send Failed</b>.</p> <p>If the message fails to send, the radio returns you to the <b>Resend</b> option screen. Press  to resend the message to the same subscriber/group alias or ID.</p> <p><b>Note:</b> If you exit the message sending screen while the message</p>

Option	Steps
	<p>is being sent, the radio updates the status of the message in the Sent Items folder without providing any indication in the display or via sound.</p> <p><b>Note:</b> If the radio changes mode or powers down before the status of the message in Sent Items is updated, the radio cannot complete any In- Progress messages and automatically marks it with a Send Failed icon.</p> <p><b>Note:</b> The radio supports a maximum of five (5) In-Progress messages at one time. During this period, the radio cannot send any new message and automatically marks it with a Send Failed icon.</p>

If you exit the message sending screen while the message is being sent, the radio updates the status of the message in the Sent Items folder





without providing any indication in the display or via sound.


If the radio changes mode or powers down before the status of the message in Sent Items is updated, the radio cannot complete any In-Progress messages and automatically marks it with a Send Failed icon.

The radio supports a maximum of five (5) In-Progress messages at one time. During this period, the radio cannot send any new message and automatically marks it with a Send Failed icon.

### Deleting All Sent Text Messages from Sent Items

- 1 Access the **Text Message** feature.



Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Messages and press  to select.</li> </ol>

- 2 ▲ or ▼ to **Sent Items** and press  to select.

When you select **Sent Items** and it contains no text messages, the display shows **List Empty**, and sounds a low tone if **Keypad Tones** are turned on (see [Turning Keypad Tones On or Off](#) on page 129).

- 3 ▲ or ▼ to **Delete All** and press  to select.

- 4 Choose one of the following.

- ▲ or ▼ to **Yes** and press  to select. The display shows positive mini notice.
- ▲ or ▼ to **No** and press  to return to the previous screen.

### Receiving a Text Message


When your radio receives a message, the display shows the **Notification List** with the alias or ID of the sender and the **Message icon**.

You can select one of the following options when receiving a text message:

- **Read**

- **Read Later**
- **Delete**



### Reading a Text Message

- 1 ▲ or ▼ to **Read?** and press  to select.

Selected message in the **Inbox** opens.

A subject line may be shown if the message is from a text message application.

- 2 Do one of the following:

- Press  to return to the **Inbox**.
- Press  a second time to reply, forward, or delete the text message.

### Managing Received Text Messages


Use the **Inbox** to manage your text messages. The **Inbox** is capable of storing a maximum of 30 messages.

Text messages in the **Inbox** are sorted according to the most recently received.


Your radio supports the following options for text messages:

- Reply
- Forward
- Delete
- Delete All




**Note:** If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only forward, delete, or delete all Received messages.

**Note:** Long press  at any time to return to the Home screen.




### Viewing a Text Message from the Inbox

- 1  to access the menu.



---

- 2  or  to Messages and press  to select.

---




- 3  or  to Inbox and press  to select.

---

- 4  or  to view the messages.


A subject line may be shown if the message is from a text message application.


### 5 Do one of the following:


- Press  to select the current message, and press  again to reply, quick reply, forward, or delete that message.
- Long press  to return to the Home screen.


### Replying to a Text Message from the Inbox

#### 1 Access the **Text Message** feature.


Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	1  to access the menu.

Radio Controls	Steps
	2 ▲ or ▼ to Messages and press  to select.


2 ▲ or ▼ to Inbox and press  to select.


3 ▲ or ▼ to the required message and press  to select.

A subject line may be shown if the message is from a text message application.

4 Press  once more to access the sub-menu.


5 Do one of the following:

— ▲ or ▼ to Reply and press  to select.

— ▲ or ▼ to Quick Reply and press  to select.

A blinking cursor appears.

6 Use your keypad to write/edit your message.

7 Press  once message is composed.

The display shows Sending Message, confirming your message is being sent.


If the message is sent successfully, a tone sounds and the display shows Message Sent.


If the message cannot be sent, a low tone sounds and the display shows Message Send Failed.


If the message cannot be sent, the radio returns you to the Resend option screen (see [Managing Fail-to-Send Text Messages](#) on page 197).


### Deleting a Text Message from the Inbox

1 Access the **Text Message** feature.


Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	1  to access the menu.

Radio Controls	Steps
	2 ▲ or ▼ to Messages and press  to select.


2 ▲ or ▼ to Inbox and press  to select.

3 ▲ or ▼ to the required message and press  to select.

A subject line may be shown if the message is from a text message application.



4 Press  once more to access the sub-menu.


5 ▲ or ▼ to Delete and press  to select.

6 ▲ or ▼ to Yes and press  to select.  
The display shows *Message Deleted*, and the screen returns to the Inbox.


### Deleting All Text Messages from the Inbox


1 Access the **Text Message** feature.

Radio Controls	Steps
<b>Programmed Text Message button</b>	Press the programmed <b>Text Message</b> button.
<b>Menu</b>	1  to access the menu. 2 ▲ or ▼ to Messages and press  to select.

2 ▲ or ▼ to Inbox and press  to select.

When you select *Inbox* and it contains no text messages, the display shows *List Empty*, and sounds a low tone if *Keypad Tones* are turned on (see [Turning Keypad Tones On or Off](#) on page 129).

3 ▲ or ▼ to Delete All and press  to select.

4 ▲ or ▼ to Yes and press  to select.  
The display shows *Inbox Cleared*.

## Privacy

---

If enabled, this feature helps to prevent eavesdropping by unauthorized users on a channel by the use of a software-based scrambling solution. The signaling and user identification portions of a transmission are not scrambled.

Your radio must have privacy enabled on the current channel selector position to send a privacy-enabled transmission, although this is not a necessary requirement for receiving a transmission. While on a privacy-enabled channel selector position, the radio is still able to receive clear (unscrambled) transmissions.

Your radio supports Enhanced Privacy.

To unscramble a privacy-enabled call transmission, your radio must be programmed to have the same Key Value and Key ID (for Enhanced Privacy) as the transmitting radio.

If your radio receives a scrambled call that is of a different Key Value and Key ID, you hear nothing at all (Enhanced Privacy).

If the radio has a privacy type assigned, the Home screen shows the Secure or Unsecure icon, except


when the radio is sending or receiving an Emergency call or alarm.

The LED lights up solid green while the radio is transmitting and blinks green rapidly when the radio is receiving an ongoing privacy-enabled transmission.




You can access this feature by

- Pressing the programmed **Privacy** button to toggle privacy on or off.
- Using the Radio Menu as described by the steps described next.






**Note:** Some radio models may not offer this Privacy feature. Check with your dealer or system administrator for more information.

- 1  to access the menu.



---




- 2  or  to Utilities and press  to select.



---

- 3  or  to Radio Settings or  or  to Connect Plus and press  to select.




---



- 4  or  to Enhanced Privacy.

If the display shows Turn On, press   

  to enable Privacy. The radio displays a message confirming your selection.

OR

If the display shows Turn Off, press   

  to disable Privacy. The radio displays a message confirming your selection.

If the radio has a privacy type assigned, the secure or unsecure icon appears on the status bar, except when the radio is sending or receiving an Emergency Alert.

during scanned calls, Site All Call, Emergency Call, and Private Call. Only receiving radios with the same Key Value and Key ID as your radio will be able to unscramble the transmission.




## Security

You can enable or disable any radio in the system. For example, you might want to disable a stolen radio, to prevent the thief from using it, and enable that radio, when it is recovered.

**Note:** Performing Radio Disable and Enable is limited to radios with these functions enabled. Check with your dealer or system administrator for more information.

### Radio Disable











- 1 Access this feature by








Radio Controls	Steps
<b>Radio Disable button</b>	1 Press the programmed <b>Radio Disable</b> button.
	2  or  to the required alias or ID and press  to select.

### Making a Privacy-Enabled (Scrambled) Call

Toggle privacy on using the programmed privacy button or by using the menu. Your radio must have the Privacy feature enabled for the currently selected channel position to send a privacy-enabled transmission. When privacy is enabled for the currently selected channel position, all voice transmissions made by your radio will be scrambled. This includes Group Call, Multigroup Call, talk-back



Radio Controls	Steps
<b>Radio menu</b>	<ol style="list-style-type: none"> <li>1  to access the menu.</li> <li>2  or  to Contacts and press  to select. The entries are alphabetically sorted.</li> <li>3 Use one of the steps described next to select the required subscriber alias or ID <ul style="list-style-type: none"> <li>— select the required alias or ID directly</li> <li>—  or  to the required alias or ID and press  to select.</li> <li>— use the Manual Dial menu <ul style="list-style-type: none"> <li>—  or  to Manual Dial and press  to select.</li> </ul> </li> </ul> </li> </ol>

Radio Controls	Steps
	<ul style="list-style-type: none"> <li>—  or  to Radio Number and press  to select.</li> <li>— The first line of the display shows Radio Number:., the second line of the display shows a blinking cursor. Use the keypad to enter the subscriber alias or ID and press .</li> </ul> <ol style="list-style-type: none"> <li>4  or  to Radio Disable and press  to select.</li> </ol>

The display shows Radio Disable: <Target Alias or ID> and the LED blinks green.




## 2 Wait for acknowledgment.

If successful, a positive indicator tone sounds and the display shows Radio Disable Successful.





If not successful, a negative indicator tone sounds and the display shows `Radio Disable Failed`.


## Radio Enable

### 1 Access this feature by

Radio Controls	Steps
<b>Radio Enable button</b>	<ol style="list-style-type: none"><li>1 Press the programmed <b>Radio Enable</b> button.</li><li>2 ▲ or ▼ to the required alias or ID and press  to select.</li></ol>
<b>Radio menu</b>	<ol style="list-style-type: none"><li>1  to access the menu.</li><li>2 ▲ or ▼ to <code>Contacts</code> and press  to select. The entries are alphabetically sorted.</li><li>3 Use one of the steps described next to select the required subscriber alias or ID</li></ol>

## Radio Controls Steps

- select the required alias or ID directly
  - ▲ or ▼ to the required alias or ID and press  to select.
- use the `Manual Dial` menu
  - ▲ or ▼ to `Manual Dial` and press  to select.
  - ▲ or ▼ to `Radio Number` and press  to select.
  - The first line of the display shows `Radio Number: .` the second line of the display shows a blinking cursor. Use the keypad to enter the subscriber alias or ID and press .

Radio Controls	Steps
	4 ▲ or ▼ to Radio Enable and press  to select.

The display shows Radio Enable: <Subscriber Alias or ID> and the LED lights up solid green.

## 2 Wait for acknowledgment.

If successful, a positive indicator tone sounds and the display shows Radio Enable Successful.

If not successful, a negative indicator tone sounds and the display shows Radio Enable Failed.



## Password Lock Features

If enabled, this feature only allows you access your radio if the correct password is entered upon powering up.

### Accessing the Radio from Password

- 1 Power up your radio.  
You hear a continuous tone.

## 2 Do one of the following:

- Enter your current four-digit password with the radio's keypad. The display shows ●●●●. Press  to proceed.
- Enter your current four-digit password. Press ▲ or ▼ to edit each digit's numeric value. Each digit changes to ●. Press ▶ to move to next digit. Press  to confirm your selection.

You hear a positive indicator tone for every digit entered. Press ◀ to remove the each ● on the display. You hear a negative indicator tone, if you press ◀ when the line is empty, or if you press more than four digits.

If the password is correct, your radio proceeds to power up. See [Powering Up the Radio](#) on page 25.

If the password is incorrect, the display shows Wrong Password. Repeat Step 2 on page 210.

After the third incorrect password, the display shows Wrong Password and then, shows Radio





Locked. A tone sounds and the LED double blinks yellow.




**Note:** The radio is unable to receive any call, including emergency calls, in locked state.




### Unlocking the Radio from Locked State

- 1 If your radio was powered down after being in the locked state, power up the radio.  
A tone sounds and the LED double blinks yellow.  
The display shows `Radio Locked`.
- 2 Wait for 15 minutes.  
Your radio restarts the 15 minutes timer for locked state when you power up.
- 3 Repeat Steps 1 on page 210 and 2 on page 210 in [Accessing the Radio from Password](#) on page 210.


### Turning the Password Lock On or Off




- 1  to access the menu.
- 2  or  to `Utilities` and press  to select.

- 3  or  to `Radio Settings` and press  to select.


- 4  or  to `Passwd Lock` and press  to select.

- 5 Enter the four-digit password.  
See Step 2 on page 210 in [Accessing the Radio from Password](#) on page 210.




- 6 Press  to proceed.  
If the password is incorrect, the display shows `Wrong Password`, and automatically returns to the previous menu.

- 7 If the password entered in the previous step is correct, press  to enable/disable password lock.  
The display shows  beside `Enabled`.  
The  disappears from beside `Enabled`.




## Changing the Password

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Settings and press  to select.


---

- 4  or  to Passwd Lock and press  to select.




---

- 5 Enter the four-digit password.  
See Step 2 on page 210 in [Accessing the Radio from Password](#) on page 210.

---

- 6 Press  to proceed.  
If the password is incorrect, the display shows Wrong Password, and automatically returns to the previous menu.

---

- 7 If the password entered in the previous step is correct,  or  to Change Pwd and press  to select.


---

- 8 Enter a new four-digit password.  
See Step 2 on page 210 in [Accessing the Radio from Password](#) on page 210.

---

- 9 Reenter the previously entered four-digit password. See Step 2 on page 210 in [Accessing the Radio from Password](#) on page 210.

---

- 10 Press  to proceed.  
  
If the reentered password matches the new password entered earlier, the display shows Password Changed.  
  
If the reentered password does **NOT** match the new password entered earlier, the display shows Passwords Do Not Match.  
  
The screen automatically returns to the previous menu.

---

## Bluetooth Operation

This feature allows you to use your radio with a Bluetooth enabled device (accessory) via a wireless Bluetooth connection. Your radio supports both Motorola and COTS (Commercially available Off-The-Shelf) Bluetooth-enabled devices.

Bluetooth operates within a range of 10 meters (32 feet) line of sight. This is an unobstructed path between your radio and your Bluetooth-enabled device.


It is not recommended that you leave your radio behind and expect your Bluetooth-enabled device to work with a high degree of reliability when they are separated.

At the fringe areas of reception, both voice and tone quality will start to sound “garbled” or “broken”. To correct this problem, simply position your radio and Bluetooth-enabled device closer to each other (within the 10-meter/32 feet defined range) to reestablish clear audio reception. Your radio’s Bluetooth function has a maximum power of 2.5 mW (4 dBm) at the 10-meter/32 feet range.




Your radio can support up to 4 simultaneous Bluetooth connections with Bluetooth-enabled devices of unique types. For example, a headset, and a PTT-Only Device (POD). Multiple connections with Bluetooth-enabled devices of the same type are not supported.

Refer to your respective Bluetooth-enabled device’s user manual for more details on your Bluetooth-enabled device’s full capabilities.





### Turning Bluetooth On and Off

- 1  to access the menu.





---


- 2  or  to Bluetooth and press  to select.


---

- 3  or  to My Status and press  to select. The display shows On and Off. The current status is indicated by a .


---

- 4 Do one of the following:
  -  or  to On and press  to select. The display shows On and a  appears left of the selected status.

- ▲ or ▼ to Off and press  to select. The display shows Off and a ✓ appears left of the selected status.


- ▲ or ▼ to Find Devices to locate available devices. ▲ or ▼ to the required device and press  to select.


## Finding and Connecting to a Bluetooth Device

Do not turn off your Bluetooth-enabled device or press  during the finding and connecting operation as this cancels the operation.


- 1 Turn on your Bluetooth-enabled device and place it in pairing mode. Refer to respective Bluetooth-enabled device's user manual.


- 2 On your radio, press  to access the menu.

- 3 ▲ or ▼ to Bluetooth and press  to select.

- 4 ▲ or ▼ to Devices and press  to select.

- 5 Do one of the following:

- ▲ or ▼ to the required device and press  to select.

- 6 ▲ or ▼ to Connect and press  to select. Display shows Connecting to <Device>. Your Bluetooth-enabled device may require additional steps to complete the pairing. Refer to respective Bluetooth-enabled device's user manual.

If successful, the radio display shows <Device> Connected. A tone sounds and ✓ appears besides the connected device. The Bluetooth Connected icon appears on the status bar.

If unsuccessful, the radio display shows Connecting Failed .


**Note:** If pin code is required, use the same entry method as Step 2 on page 210 in [Accessing the Radio from Password](#) on page 210.

## Finding and Connecting from a Bluetooth Device (Discoverable Mode)




Do not turn off your Bluetooth or your radio during the finding and connecting operation as this may cancel the operation.

- 1 Turn Bluetooth On.  
See [Turning Bluetooth On and Off](#) on page 123.




---

- 2  to access the menu.

---

- 3  or  to Bluetooth and press  to select.


---

- 4  or  to Find Me and press  to select.  
Your radio can now be found by other Bluetooth-enabled devices for a programmed duration. This is called Discoverable Mode.




---

- 5 Turn on your Bluetooth-enabled device and pair it with your radio.  
Refer to respective Bluetooth-enabled device's user manual.




## Disconnecting from a Bluetooth Device

- 1 On your radio, press  to access the menu.




---

- 2  or  to Bluetooth and press  to select.




---


- 3  or  to Devices and press  to select.

---

- 4  or  to the required device and press  to select.

---

- 5  or  to Disconnect and press  to select.  
Display shows Disconnecting from <Device>. Your Bluetooth-enabled device may require additional steps to disconnect. Refer to respective Bluetooth-enabled device's user manual.

The radio display shows <Device> Disconnected. A positive indicator tone sounds and  disappears beside the connected device. The Bluetooth Connected icon disappears on the status bar.




## Switching Audio Route

You can toggle audio routing between internal radio speaker and external Bluetooth-enabled accessory.




Press the programmed **Bluetooth Audio Switch** button.

- A tone sounds and display shows Route Audio to Radio.
- A tone sounds and display shows Route Audio to Bluetooth.




## Viewing Device Details

- 1  to access the menu.




---




- 2  or  to Bluetooth and press  to select.

---

- 3  or  to Devices and press  to select.


---

- 4  or  to the required device and press  to select.




- 5  or  to View Details and press  to select.

## Editing Device Name




You can edit the name of available Bluetooth-enabled devices.

- 1  to access the menu.




---

- 2  or  to Bluetooth and press  to select.




---

- 3  or  to Devices and press  to select.




---


- 4  or  to the required device and press  to select.

---

- 5  or  to Edit Name and press  to select.

---

- 6 Press  to move one space to the left. Press  to move one space to the right. Press  to delete

any unwanted characters. Long press  to change text entry method.

A blinking cursor appears. Use the keypad to type the required zone.

---

7 The display shows `Device Name Saved`.




---

### Deleting Device Name

You can remove a disconnected device from the list of Bluetooth-enabled devices.

1  to access the menu.




---

2  or  to Bluetooth and press  to select.




---

3  or  to `Devices` and press  to select.

---

4  or  to the required device and press  to select.

---

5  or  to `Delete` and press  to select.  
The display shows `Device Deleted`.




---

### Bluetooth Mic Gain




Allows control of the connected Bluetooth-enabled device's microphone gain value.

1  to access the menu.

---

2  or  to Bluetooth and press  to select.

---




3  or  to BT Mic Gain and press  to select.

---

4  or  to the BT Mic Gain type and the current values.

To edit values, press  to select.

---

5  or  to increase or to decrease values and press  to select.

---

### Notification List


Your radio has a Notification List that collects all your “unread” events on the channel, such as unread text messages, missed calls, and call alerts.

The Notification icon appears on the status bar when the Notification List has one or more events.




The list supports a maximum of forty (40) unread events. When it is full, the next event automatically replaces the oldest event.

**Note:** After the events are read, they are removed from the Notification List.




### Accessing the Notification List

- 1  to access the menu.

---

- 2  or  to Notification and press  to select.

---

- 3  or  to the required event and press  to select.


Long press  to return to the Home Screen.

### Utilities




### Turning the Radio Tones/Alerts On or Off

You can enable and disable all radio tones and alerts (except for the incoming Emergency alert tone) if needed.




Press the programmed **All Tones/Alerts** button to toggle all tones on or off, or follow the procedure described next to access this feature via the radio menu.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.




---

- 3  or  to Radio Settings and press  to select.


---

- 4  or  to Tones/Alerts and press  to select.

---

- 5  or  to All Tones and press  to select.

---

- 6 Press  to enable/disable all tones and alerts.

The display shows ✓ beside Enabled.


The ✓ disappears from beside Enabled.

The display shows ✓ beside Enabled.




The ✓ disappears from beside Enabled.

### Turning Keypad Tones On or Off




You can enable and disable keypad tones if needed.

- 1  to access the menu.




---

  - 2  or  to Utilities and press  to select.







---

  - 3  or  to Radio Settings and press  to select.

---


  - 4  or  to Tones/Alerts and press  to select.

---




  - 5  or  to Keypad Tones and press  to select.
- You can also use  or  to change the selected option.
- 
- 6 Press  to enable/disable keypad tones.

### Setting the Tone Alert Volume Offset Level




You can adjust the Tone Alert Volume Offset level if needed. This feature adjusts the volume of the tones/alerts, allowing it to be higher or lower than the voice volume.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.




---

- 3  or  to Radio Settings and press  to select.



---

- 4  or  to Tones/Alerts and press  to select.

---



- 5  or  to Vol. Offset and press  to select.

---

- 6  or  to the required volume value.








The radio sounds a feedback tone with each corresponding volume value.




#### 7 Do one of the following:




- Press  to keep the required displayed volume value.
- Press  to exit without changing the current volume offset settings.
- Repeat Step 6 on page 219 to select another volume value.



### Turning the Talk Permit Tone On or Off




You can enable and disable the Talk Permit Tone if needed.

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.

- 4  or  to Tones/Alerts and press  to select.

- 5  or  to Talk Permit and press  to select.

You can also use  or  to change the selected option.

- 6 Press  to enable/disable the Talk Permit Tone. The display shows  beside Enabled. The  disappears from beside Enabled.

### Changing the Display Mode

















You can change radio's display mode between Day or Night, as needed. This affects the color palette of the display.

Change the Display Mode

Radio Control	Steps
<b>Programmed Display Mode Button</b>	Press the programmed <b>Display Mode</b> button.

## Radio Control Steps

















## Menu

- 1  to access the menu.
  - 2  or  to Utilities and press  to select.
  - 3  or  to Radio Settings and press  to select.
  - 4  or  to Display and press  to select.  
The display shows Day Mode and Night Mode.
- Note:** You can also use  or  to change the selected option.
- 5  or  to the required setting and press  to enable.  appears besides selected setting.

## Adjusting the Display Brightness

You can adjust radio's display brightness as needed.

**Note:** Display brightness cannot be adjusted when "Auto Brightness" is enabled.


- 1  to access the menu.
- 
- 2  or  to Utilities and press  to select.
- 
- 3  or  to Radio Settings and press  to select.
- 
- 4  or  to Display and press  to select.
- 
- 5  or  to Brightness and press  to select.  
The display shows a progress bar.
- 
- 6 Decrease display brightness by pressing  or increase the display brightness by pressing .  
Select from setting of 1 to 8. Press  to confirm your entry.

## Controlling the Display Backlight




You can enable or disable the radio's display backlight as needed. The setting also affects the Menu Navigation Buttons and keypad backlighting accordingly.

Press the programmed **Backlight** button to toggle the backlight settings, or follow the procedure described next to access this feature via the radio menu.




The display backlight and keypad backlighting are automatically turned off if the LED indicator is disabled (see [Turning the LED Indicator On or Off](#) on page 138).

- 1  to access the menu.




---



- 2  or  to Utilities and press  to select.




---

- 3  or  to Radio Settings and press  to select.

---

- 4  or  to Backlight and press  to select.








You can also use  or  to change the selected option.




- 5 Press  to enable/disable the display backlight.  
The display shows  beside Enabled.  
The  disappears from beside Enabled.

## Locking and Unlocking the Keypad

You can lock your radio's keypad to avoid inadvertent key entry.

To lock/unlock your radio's keypad.

Option	Steps
<b>Locking the Keypad</b>	1  to access the menu.
	2  or  to Utilities and press  to select.
	3  or  to Radio Settings and press  to select.

Option	Steps
	<p>4 ▲ or ▼ to Keypad Lock and press  to select.</p> <p>You can also use ◀ or ▶ to change the selected option.</p>
<b>Unlocking the Keypad</b>	Press  followed by  .

After the keypad is locked, the display shows Keypad Locked and returns to the Home screen.


After the keypad is unlocked, the display shows Keypad Unlocked and returns to the Home screen.

## Language


You can set your radio display to be in your required language.

1  to access the menu.

2 ▲ or ▼ to Utilities and press  to select.

3 ▲ or ▼ to Radio Settings and press  to select.


4 ▲ or ▼ to Languages and press  to select.


5 ▲ or ▼ to the required language and press  to enable. ✓ appears beside selected language.


## Turning the LED Indicator On or Off

You can enable and disable the LED Indicator if needed.




1  to access the menu.

2 ▲ or ▼ to Utilities and press  to select.

3 ▲ or ▼ to Radio Settings and press  to select.














4 ▲ or ▼ to LED Indicator and press  to select.



- 5 Press  to enable/disable the LED Indicator.  
The display shows  beside Enabled.  
The  disappears from beside Enabled.













### Identifying Cable Type



You can select the type of cable your radio uses.

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.
- 4  or  to Cable Type and press  to select.  
At Step 4, you can also use  or  to change the selected option.
- 5 The current cable type is indicated by a 

### Voice Announcement


This feature enables the radio to audibly indicate the current Zone or Channel the user has just assigned, or programmable button press. This audio indicator can be customized per customer requirements. This is typically useful when the user is in a difficult condition to read the content shown on the display.

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.
- 4  or  to Voice Announcement and press  to select.  
You can also use  or  to change the selected option.
- 5 Do one of the following:




- Press  to enable Voice Announcement. The display shows ✓ beside Enabled.
- Press  to disable Voice Announcement. The ✓ disappears from beside Enabled.

## Wallpaper Mode




Your radio displays the Wallpaper background on home screen. The user can select from 5 default wallpapers.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.




---



- 3  or  to Radio Settings and press  to select.

---

- 4  or  to Display and press  to select.

---

- 5  or  to Wallpaper and press  to select.

You can also use  or  to change the selected option.

## Screen Saver Mode

The screen saver feature allows the radio to save radio battery time. A Screen Saver Pre Duration is used to track the radio activities before entering screen saver mode.

Radio starts Screen Saver Pre Duration upon power up. Radio enters into screen saver mode when Screen Saver Pre Duration timer expires, the radio exits screen saver mode and responds to related transaction normally upon any user input and over the air transaction.

Radio restarts Screen Saver Pre Duration upon any user input and over the air transaction. After being in Screen Saver mode for 5 seconds, radio enters keypad lock state automatically. When any audio or Bluetooth accessory is connected, battery saver mode is enabled, radio enters screen saver mode.

If there is any user input or over the air transaction, the radio exits screen saver mode and responds to user interaction. The Screen Saver Pre Duration

is restarted and the radio goes back to screen saver mode when it expires.

**Note:** The screen saver mode is to help improve battery life.


### Audio Accessory

The audio accessory has two modes: Normal and Battery Saver mode. When audio accessory is plugged in and the setting is in Battery Saver Mode, the radio restarts the timer and goes into screen saver mode. In this scenario, when there is any user input (including user input on radio and accessory attachment/detachment) or when receiving emergency alarm/call, the radio exits screen saver mode and responds to user event as normal. The Screen Saver timer restarts and the radio goes back to screen saver mode when the time allocated expires.




**Note:** This battery saver mode is to improve battery life. See Screen Saver box SRS for more details in this mode.

### Auto Keypad Lock




You can enable/disable your radio's auto keypad lock to avoid inadvertent key entry.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.





---

- 3  or  to Radio Settings and press  to select.

---





- 4  or  to Auto Keypad Lock and press  to select.




---



- 5 Do one of the following:
  - Press  to enable Auto Keypad Lock. The display shows  beside Enabled.
  - Press  to disable Auto Keypad Lock. The  disappears from beside Enabled.

### Digital Mic AGC (Mic AGC-D)

This feature controls the your radio's microphone gain automatically while transmitting on a digital system. It suppresses loud audio or boosts soft audio to a preset value in order to provide a consistent level of audio.





- 1  to access the menu.
- 
- 2  or  to Utilities and press  to select.

- 3  or  to Radio Settings and press  to select.

You can also use  or  to change the selected option.

- 4  or  to Mic AGC-D and press  to select.

- 5 Do one of the following:


- Press  to enable **Mic AGC-D**. The display shows  beside Enabled.
- Press  to disable **Mic AGC-D**. The  disappears from beside Enabled.

## Intelligent Audio

Your radio can automatically adjust its audio volume to overcome background noise in the environment, inclusive of all stationary and non-stationary noise













sources. This feature is a Receive-only feature and does not affect Transmit audio.



**Note:** This feature is not applicable during a Bluetooth session.


- 1  to access the menu.


### Radio Control Steps


#### Menu

- 1  to access the menu.
  - 2  or  to Radio Settings and press  to select.
  - 3  or  to Radio Settings and press  to select.
  - 4  or  to Intelligent Audio and press  to select.
- Note:** You can also use  or  to change the selected option.
- 5 Do one of the following:


Radio Control	Steps
	<ul style="list-style-type: none"> <li>— Press  to enable Intelligent Audio. The display shows ✓ beside Enabled.</li> <li>— Press  to disable Intelligent Audio. The ✓ disappears from beside Enabled.</li> </ul>


2 ▲ or ▼ to Utilities and press  to select.

3 ▲ or ▼ to Radio Settings and press  to select.

4 ▲ or ▼ to Intelligent Audio and press  to select.

5 Do one of the following:

- Press  to enable Intelligent Audio. The display shows ✓ beside Enabled.


- Press  to disable Intelligent Audio. The ✓ disappears from beside Enabled.

See [Accessories](#) on page 245 for recommended Bluetooth-enabled audio accessories with in-built Automatic Volume Control for similar performance.


### Turning the Acoustic Feedback Suppressor Feature On or Off


This feature allows you to minimize acoustic feedback in received calls.


Toggle Acoustic Feedback Suppressor Features On or Off

Radio Control	Steps
<b>Programmed Acoustic Feedback Suppressor Button</b>	Press the programmed <b>Acoustic Feedback Suppressor</b> button.
<b>Menu</b>	1  to access the menu.

## Radio Control Steps


2 ▲ or ▼ to Utilities and press  to select.

3 ▲ or ▼ to Radio Settings and press  to select.


4 ▲ or ▼ to AF Suppressor and press  to select.

**Note:** You can also use ◀ or ▶ to change the selected option.

5 Do one of the following:

— Press  to enable Acoustic Feedback Suppressor. The display shows ✓ beside Enabled.

## Radio Control Steps

— Press  to disable Acoustic Feedback Suppressor. The ✓ disappears from beside Enabled.



## Text Entry Configuration

You can configure the following settings for entering text on your radio:

- Word Predict
- Word Correct
- Sentence Cap
- My Words


Your radio supports the following text entry methods:

- Numbers
- Symbols
- Predictive or Multi-Tap
- Language (If programmed)




**Note:** Press  at any time to return to the previous screen or long press  to return to the Home Screen. The radio exits the current screen once the inactivity timer expires.

### **Word Predict**




Your radio can learn common word sequences that you often enter. It then predicts the next word you may want to use after you enter the first word of a common word sequence into the text editor.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.




---



- 3  or  to Radio Settings and press  to select.

---





- 4  or  to Text Entry and press  to select.

---

- 5  or  to Word Predict and press  to select.


You can also use  or  to change the selected option.

### 6 Do one of the following:




- Press  to enable Word Predict. The display shows  beside Enabled.
- Press  to disable Word Predict. The  disappears from beside Enabled.

### **Word Correct**




Supplies alternative word choices when the word entered into the text editor is not recognized by the in-built dictionary.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Settings and press  to select.



---

- 4  or  to Text Entry and press  to select.

- 5 ▲ or ▼ to Word Correct and press  to select.

You can also use ◀ or ▶ to change the selected option.


- 6 Do one of the following:


- Press  to enable Word Correct. The display shows ✓ beside Enabled.
- Press  to disable Word Correct. The ✓ disappears from beside Enabled.


### **Sentence Cap**

Automatically enables capitalization for the first letter in the first word for every new sentence.

- 1  to access the menu.



- 2 ▲ or ▼ to Utilities and press  to select.

- 3 ▲ or ▼ to Radio Settings and press  to select.

- 4 ▲ or ▼ to Text Entry and press  to select.


- 5 ▲ or ▼ to Sentence Cap and press  to select.

- 6 Do one of the following:

- Press  to enable Sentence Cap. The display shows ✓ beside Enabled.
- Press  to disable Sentence Cap. The ✓ disappears from beside Enabled.


### **Viewing Custom Words**

You can add your own custom words into your radio's in-built dictionary. Your radio maintains a list to contain these words.


- 1  to access the menu.

- 2 ▲ or ▼ to Utilities and press  to select.



3 ▲ or ▼ to Radio Settings and press  to select.


---

4 ▲ or ▼ to Text Entry and press  to select.

---

5 ▲ or ▼ to My Words and press  to select.

---

6 ▲ or ▼ to List of Words and press  to select.  
Display shows the list of custom words.


---

### **Editing Custom Word**


You can edit the custom words saved in your radio.

1  to access the menu.


---

2 ▲ or ▼ to Utilities and press  to select.


---

3 ▲ or ▼ to Radio Settings and press  to select.


---

4 ▲ or ▼ to Text Entry and press  to select.


---

5 ▲ or ▼ to My Words and press  to select.


---

6 ▲ or ▼ to List of Words and press  to select.  
Display shows the list of custom words.

---




7 ▲ or ▼ to the required word and press  to select.




---

8 ▲ or ▼ to Edit and press  to select.

---

9 Use the keypad to edit your custom word.

Press  to move one space to the left. Press  or the  key to move one space to the right.

Press the  key to delete any unwanted characters. Long press  to change text entry method. Press  once your custom word is completed.

---


The display shows transitional mini notice, confirming your custom word is being saved.

If the custom word is saved, a tone sounds and the display shows positive mini notice.




If the custom word is not saved, a low tone sounds and the display shows negative mini notice.

### **Adding Custom Word**




You can add your own custom words into your radio's in-built dictionary.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.




---

- 3  or  to Radio Settings and press  to select.




---

- 4  or  to Text Entry and press  to select.

---




- 5  or  to My Words and press  to select.




---

- 6  or  to Add New Word and press  to select.  
Display shows the list of custom words.

---

- 7 Use the keypad to edit your custom word.

Press  to move one space to the left. Press  or the  key to move one space to the right.

Press the  key to delete any unwanted characters. Long press  to change text entry method. Press  once your custom word is completed.

---


The display shows transitional mini notice, confirming your custom word is being saved.

If the custom word is saved, a tone sounds and the display shows positive mini notice.




If the custom word is not saved, a low tone sounds and the display shows negative mini notice.

### **Deleting a Custom Word**


You can delete the custom words saved in your radio.

- 1  to access the menu.


---

- 2  or  to Utilities and press  to select.


---

- 3 ▲ or ▼ to Radio Settings and press  to select.


---

- 4 ▲ or ▼ to Text Entry and press  to select.


---

- 5 ▲ or ▼ to My Words and press  to select.



---

- 6 ▲ or ▼ to the required word and press  to select.

---


- 7 ▲ or ▼ to Delete and press  to select.

---


- 8 Choose one of the following.
  - At Delete Entry?, press  to select Yes. The display shows Entry Deleted.
  - ▲ or ▼ to No and press  to return to the previous screen.

### ***Deleting All Custom Words***


You can delete all custom words from your radio's in-built.

- 1  to access the menu.


---

- 2 ▲ or ▼ to Utilities and press  to select.


---

- 3 ▲ or ▼ to Radio Settings and press  to select.


---

- 4 ▲ or ▼ to Text Entry and press  to select.



---

- 5 ▲ or ▼ to My Words and press  to select.

---

- 6 ▲ or ▼ to Delete All and press  to select.



---

- 7 Choose one of the following.
  - At Delete Entry?, press  to select Yes. The display shows Entry Deleted.
  - ▲ or ▼ to No and press  to return to the previous screen.

### **Accessing General Radio Information**


Your radio contains information on the following:

- Battery
- Degree of Tilt (Accelerometer)
- Radio Model Number Index
- Option Board Over-the-Air (OTA) Codeplug CRC
- Site Number
- Site Info
- Radio Alias and ID
- Firmware and Codeplug Versions
- Open-Source Software Information




Press  at any time to return to the previous screen or long press  to return to the Home screen. The radio exits the current screen once the inactivity timer expires.

### Accessing the Battery Information




Displays information on your radio battery.

- 1  to access the menu.




---

- 2  or  to `Utilities` and press  to select.

---

- 3  or  to `Radio Info` and press  to select.




---

- 4  or  to `Battery Info` and press  to select.

The display shows the battery information.


For **IMPRES** batteries **ONLY**: The display reads `Recondition Battery` if the battery requires reconditioning in an IMPRES charger. After the reconditioning process, the display then shows the battery information.

### Checking the Degree of Tilt (Accelerometer)




**Note:** The measurement on the display shows the degree of tilt at the moment you press  to accept the `Accelerometer` option. If you change the angle of the radio after pressing , the radio does not change the measurement shown on its display. It continues to display the measurement taken when  was pressed.

If the portable radio has been enabled for the Man Down Alarms, there is a menu option to check how the radio measures the degree of tilt. This is a helpful feature when the dealer or Radio System Administrator uses the MOTOTRBO Connect Plus




Option Board CPS programming software to configure the activation angle that will trigger the tilt alarm.

- 1  to access the menu.

---

- 2  or  to Utilities and press  to select.




---

- 3  or  to Radio Info and press  to select.

---


- 4 Tilt the radio at the angle that triggers the Tilt Alarm.

---




- 5  or  to Accelerometer and press  to select.  
The display shows the radio's angle of tilt (deviation from perpendicular vertical position) in degrees (example: 62 Deg.) Based on this, use MOTOTRBO Connect Plus Option Board CPS to configure the Activation Angle for 60 degrees (which is the closest programmable value). The Tilt Alarm timers are triggered when the Activation Angle is 60 degrees, or greater.

### Checking the Radio Model Number Index




This index number identifies your radio's model-specific hardware. Your radio system administrator may ask for this number when preparing a new Option Board codeplug for your radio.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Info and press  to select.

---




- 4  or  to Model Index and press  to select.  
The display shows the Model Number Index.

### Checking the CRC of the Option Board OTA Codeplug File




Follow the instructions below if your radio system administrator asks you to view the Option Board OTA Codeplug File CRC (Cyclic Redundancy Check). This menu option only appears if the Option Board received its last codeplug update OTA.

1  to access the menu.




---

2  or  to Utilities and press  to select.

---

3  or  to Radio Info and press  to select.

---

4  or  to OE OTA CPorc and press  to select.  
The display shows some letters and numbers.  
Communicate this information to your radio system administrator exactly as shown.

---

### Displaying the Site ID (Site Number)

**Note:** If you are not currently registered at a site, the display shows Not Registered.




The radio briefly shows the Site ID as it registers with a Connect Plus site. Following registration, the radio does not generally indicate the Site number. To display the registered Site number, do the following:

1  to access the menu.




---

2  or  to Utilities and press  to select.

---

3  or  to Radio Info and press  to select.

---

4  or  to Site Number and press  to select.  
The display shows the Network ID and the Site Number.

---

### Checking the Site Info

**Note:** If you are not currently registered at a site, the display shows Not Registered.




The Site Info feature provides information that can be useful to a service technician. It consists of the following information:

- Repeater number of current Control Channel repeater.
- RSSI: Last signal strength value measured from Control Channel repeater.
- Neighbor List sent by Control Channel repeater (five numbers separated by commas).




If you are requested to use this feature, please report the displayed information exactly as it appears on the screen.

1  to access the menu.




---

2  or  to Utilities and press  to select.

---

3  or  to Radio Info and press  to select.

---


4  or  to Site Info and press  to select.  
The display shows the Site Info.

---




### Checking the Radio ID

This feature displays the ID of your radio.




Follow the procedure described next to access this feature via the radio screen.

1  to access the menu.




---

2  or  to Utilities and press  to select.

---

3  or  to Radio Info and press  to select.

---

4  or  to My ID and press  to select.  
The display shows the radio ID.




---

### Checking the Firmware Version and Codeplug Version




Displays the firmware version on your radio.

1  to access the menu.




---

2  or  to Utilities and press  to select.

---

3  or  to Radio Info and press  to select.

---

4  or  to Versions and press  to select.  
The display a list with the following information:

- (Radio) Firmware Version
- (Radio) Codeplug Version
- Option Board Firmware Version
- Option Board Frequency Version
- Option Board Hardware Version

## Checking for Updates

Connect Plus provides the ability to update certain files (Option Board Codeplug, Network Frequency File and Option Board Firmware File) over-the-air.

**Note:** Check with the dealer or network administrator to determine whether this feature has been enabled for your radio.

Any display Connect Plus radio has the ability to show its current Option Board OTA Codeplug CRC, Frequency File version or Option Board firmware file version via a menu option. In addition, display radios that have been enabled for over-the-air file transfer can display the version of a "pending file". A "pending file" is a Frequency File or Option Board firmware file that the Connect Plus radio knows about via system messaging, but the radio has not yet collected all of the file's packets. If a display Connect Plus radio has a pending file, the menu provides options to:

- See the version number of the pending file
- See what percentage of packets has been collected so far

- Request the Connect Plus radio to resume collecting file packets

If the radio is enabled for Connect Plus over-the-air file transfer, there may be times when the radio automatically joins a file transfer without first notifying the radio user. While the radio is collecting file packets, the LED rapidly blinks red and the radio displays the High Volume Data icon on the Home Screen status bar.

**Note:** The Connect Plus radio cannot collect file packets and receive calls at the same time. If you wish to cancel the file transfer, press and release the PTT button. This causes the radio to request a call on the selected Contact Name, and it will also cancel the file transfer for that radio until the process resumes at a later time.

There are several things that can make the file transfer process start again. The first example applies to all over-the-air file types. The other examples apply only to the Network Frequency File and Option Board Firmware File:

- The radio system administrator re-initiates the over-the-air file transfer.



- The Option Board's pre-defined timer expires, which causes the Option Board to automatically resume the process of collecting packets.
- The timer has not yet expired, but the radio user requests the file transfer to resume via the menu option.

After the Connect Plus radio finishes downloading all file packets, it must upgrade to the newly acquired file. For the Network Frequency File, this is an automatic process and does not require a radio reset. For the Option Board Codeplug File, this is an automatic process that will cause a brief interruption to service as the Option Board loads the new codeplug information and re-acquires a network site. How quickly the radio upgrades to a new Option Board firmware file depends on how the radio has been configured by the dealer or system administrator. The radio will either upgrade immediately after collecting all file packets, or it will wait until the next time that the user turns the radio on.

**Note:** Check with your dealer or system administrator to determine how your radio has been programmed.


The process of upgrading to a new Option Board firmware file takes several seconds, and it requires

the Connect Plus Option Board to reset the radio. Once the upgrade starts, the radio use will not be able to make or receive calls until the process is completed.




### Firmware File

#### *Firmware Up to Date*




**Note:** If the Option Board firmware file is not Up to Date (and if the radio has partially collected a more recent Option Board firmware file version) the radio displays a list with additional options; `Version`, `%Received`, and `Download`.

- 1  to access the menu.




---

- 2  or  to `Utilities` and press  to select.




---

- 3  or  to `Radio Info` and press  to select.

---


- 4  or  to `Updates` and press  to select.

---




- 5  or  to `Firmware` and press  to select. The display shows `Firmware is Up to Date`.

---




## Pending Firmware – Version

- 1  to access the menu.




---

  - 2  or  to Utilities and press  to select.




---

  - 3  or  to Radio Info and press  to select.




---

  - 4  or  to Updates and press  to select.

---

  - 5  or  to Firmware and press  to select.




---

  - 6  or  to Version and press  to select.
- If there is a pending Option Board firmware file, the display shows the pending firmware version number.




If there is a pending Option Board firmware file, the display shows `Firmware is Up to Date`

## Pending Firmware – % Received




- 1  to access the menu.

- 2  or  to Utilities and press  to select.




---

  - 3  or  to Radio Info and press  to select.




---

  - 4  or  to Updates and press  to select.

---

  - 5  or  to Firmware and press  to select.


---

  - 6  or  to %Received and press  to select.  
The screen displays the percentage of firmware file packets collected so far.
- Note:** When at 100%, the radio needs to be power cycled Off and then On to initiate the firmware upgrade.




## Pending Firmware – Download

If the Connect Plus radio has previously left an OTA Option Board Firmware File Transfer with a partial file, the unit automatically rejoins the file transfer (if still ongoing) when an internal timer expires. If you want the unit to rejoin an ongoing Option Board Firmware File transfer prior to expiration of this




internal timer, use the Download option as described below.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.




---

- 3  or  to Radio Info and press  to select.




---

- 4  or  to Updates and press  to select.

---


- 5  or  to Firmware and press  to select.

---

- 6  or  to Download and press  to select.  
The display shows the following:

Download Available	Start Download
No Download Available	Download not available


- 7 Do one of the following:
  - Select Yes and press  to start the download.

- Select No and press  to return to the previous menu.




## Frequency File

### *Frequency File Up to Date*




**Note:** If the Frequency File is not Up to Date (and if the radio has partially collected a more recent frequency file version) the radio displays a list with additional options; Version, %Received, and Download.

- 1  to access the menu.




---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Info and press  to select.

---


- 4  or  to Frequency and press  to select.  
The display shows Freq. File is Up to Date.

### *Frequency File Pending – Version*

- 1  to access the menu.

2 ▲ or ▼ to Utilities and press  to select.

---

3 ▲ or ▼ to Radio Info and press  to select.


---

4 ▲ or ▼ to Updates and press  to select.

---

5 ▲ or ▼ to Frequency and press  to select.

---


6 ▲ or ▼ to Version and press  to select.  
If there is a pending Frequency File, the display shows the pending Frequency File version number.

---

#### *Frequency File Pending — % Received*

1  to access the menu.


---

2 ▲ or ▼ to Utilities and press  to select.


---

3 ▲ or ▼ to Radio Info and press  to select.

---

4 ▲ or ▼ to Updates and press  to select.

---

5 ▲ or ▼ to %Received and press  to select.  
The screen displays the percentage of frequency file packets collected so far.


---

#### *Frequency File Pending – Download*


If the Connect Plus radio has previously left an OTA Network Frequency File Transfer with a partial file, the unit automatically rejoins the file transfer (if still ongoing) when an internal timer expires. If you want the unit to rejoin an ongoing Network Frequency File transfer prior to expiration of this internal timer, use the Download option as described below.

1  to access the menu.


---

2 ▲ or ▼ to Utilities and press  to select.

---

3 ▲ or ▼ to Radio Info and press  to select.


---

4 ▲ or ▼ to Updates and press  to select.

---

5 ▲ or ▼ to Frequency and press  to select.

---

6 ▲ or ▼ to Download and press  to select.

Download Currently Unavailable	Download not available
Download Currently Available	Start Download

7 Do one of the following:

- Select Yes and press to start the download.
- Select No and press to return to the previous menu.

---

## Accessories

---

### Antennas

- 420 – 445 MHz Stubby Antenna, (PMAE4076\_)
- 438 – 470 MHz Stubby Antenna, (PMAE4077\_)
- 403 – 425 MHz Stubby Antenna, (PMAE4078\_)
- 450 – 490 MHz Stubby Antenna Kit, (PMAE4091\_)
- 480 – 527 MHz Stubby Antenna Kit, (PMAE4092\_)
- 806 – 870 MHz Stubby Antenna (PMAF4017\_)
- 896 – 941 MHz Stubby Antenna (PMAF4018\_)

---

### Audio Accessories

- Surveillance Earpiece with in-line microphone and PTT (PMLN5957\_)
- Swivel Earpiece with in-line microphone and PTT (PMLN5958\_)

---

### Batteries

- Lithium-Ion 1800 mAh Battery Pack (HKNN4013\_)

- Lithium-Ion 1370 mAh Battery Pack (PMNN4425\_) <sup>[5]</sup>

---

### Bluetooth

- HK200 Bluetooth Headset (US) (89409\_)
- Operations Critical Wireless Earpiece with 12 inch cable (US) (NNTN8125\_)
- Operations Critical Wireless Earpiece with 9.5 inch cable (US) (NNTN8126\_)
- Operations Critical Wireless Push-To-Talk POD (US) (NNTN8127\_)

---

### Cables

- Micro USB Programming Cable (25-124330-01R)

---

### Carry Devices

- Carry Holder (PMLN5956\_)
- Wrist Strap (PMLN6074\_)

---

<sup>5</sup> Not applicable to the 800/900 band.

## **Chargers**

---

- Multi-Unit Charger, US Plug (PMLN5916\_)
- Micro USB Charger, US Plug (PMPN4009\_)
- Micro USB Single-Unit Plug-In Charger (SPN5547\_)
- SL Series Tri-Unit Charger (PMLN6358\_)

## **Miscellaneous Accessories**

---

- 1370 mAH Battery Cover (PMLN6000\_)
- 1800 mAH Battery Cover (PMLN6001\_)

## Batteries and Chargers Warranty

### The Workmanship Warranty

The workmanship warranty guarantees against defects in workmanship under normal use and service.

All MOTOTRBO Batteries	Two (2) Years
IMPRES Chargers (Single-Unit and Multi-Unit, Non-Display)	Two (2) Years
IMPRES Chargers (Multi-Unit with Display)	One (1) Year

IMPRES Batteries, When Used Exclusively with IMPRES Chargers 18 Months

### The Capacity Warranty

The capacity warranty guarantees 80% of the rated capacity for the warranty duration.

Nickel Metal-Hydride (NiMH) or Lithium-Ion (Li-Ion) Batteries	12 Months
---	-----------



## Limited Warranty

### MOTOROLA COMMUNICATION PRODUCTS

#### I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

MOTOROLA SOLUTIONS, INC. ("MOTOROLA") warrants the MOTOROLA manufactured Communication Products listed below ("Product") against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

SL Series Digital Portable Radios	Two (2) Years
Product Accessories (Excluding Batteries and Chargers)	One (1) Year

MOTOROLA, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the

warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA.

Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or

operation of the system as a whole under this warranty.

## **II. GENERAL PROVISIONS:**

---

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product. Repair, replacement or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

## **III. STATE LAW RIGHTS:**

---

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

## **IV. HOW TO GET WARRANTY SERVICE:**

---

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by MOTOROLA through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service. You can also call MOTOROLA at 1-800-927-2744 US/Canada.

## V. WHAT THIS WARRANTY DOES NOT COVER:

---

- 1 Defects or damage resulting from use of the Product in other than its normal and customary manner.
- 2 Defects or damage from misuse, accident, water, or neglect.
- 3 Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- 4 Breakage or damage to antennas unless caused directly by defects in material workmanship.
- 5 A Product subjected to unauthorized Product modifications, disassembles or repairs (including, without limitation, the addition to the Product of non-MOTOROLA supplied equipment) which adversely affect performance of the Product or interfere with MOTOROLA's normal warranty inspection and testing of the Product to verify any warranty claim.
- 6 Product which has had the serial number removed or made illegible.
- 7 Rechargeable batteries if:

- 1 any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
- 2 the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- 8 Freight costs to the repair depot.
- 9 A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA's published specifications or the FCC certification labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.
- 10 Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
- 11 Normal and customary wear and tear.

## VI. PATENT AND SOFTWARE PROVISIONS:

---

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against

the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- 1 that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim,
- 2 that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise, and
- 3 should the Product or parts become, or in MOTOROLA's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished

hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product. The foregoing states the entire liability of MOTOROLA with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

## **VII. GOVERNING LAW:**

---

This Warranty is governed by the laws of the State of Illinois, U.S.A.





**MOTOROLA**

Motorola Solutions, Inc.  
1303 East Algonquin Road  
Schaumburg, Illinois 60196 U.S.A.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2011, 2012 Motorola Solutions, Inc. All rights reserved. August 2012.

[www.motorolasolutions.com/slseries](http://www.motorolasolutions.com/slseries)



**68009554001-H**