


PORTABLE USB WIRELESS SPEAKER BOX

NE-511

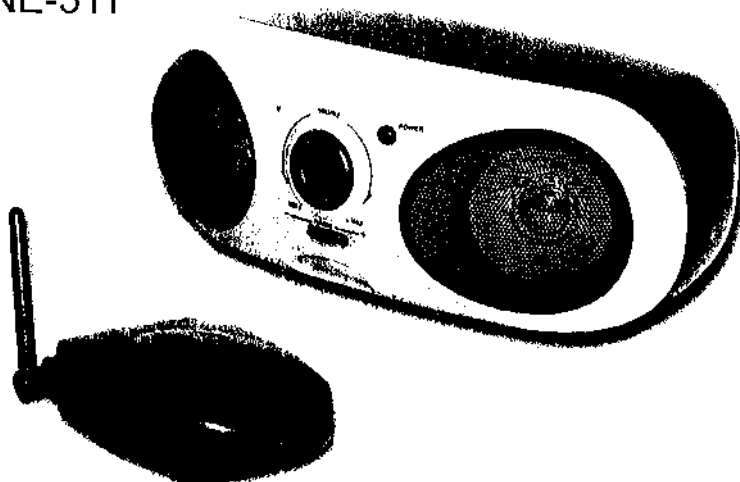

INSTRUCTION MANUAL

Film no.511ib20041207002

1.Warnings

- Do not attempt to repair or modify this unit.
- Do not use attachments not recommended by the manufacturer.
- Do not drop, shock or apply pressure to the unit. This may cause permanent damage.

Battery precautions

- Only use specified AA alkaline batteries or equivalent replacements with the transmitter.
- Only use specified C alkaline batteries or equivalent replacements with the main unit.
- Batteries may leak or explode if recharged, inserted improperly, disposed of in fire or mixed with different types.
- When installing batteries, observe proper +/- polarities. Batteries positioned incorrectly may leak and cause damage to the unit.
- Never attempt to recharge conventional dry cell batteries.
- Replace only with fresh, new batteries.
- If unit will not be used for a long period of time, remove batteries to prevent damage or injury due to possible battery leakage.
- Keep all batteries away from children.

Declaration

This is category 3 equipment intended for general consumer purpose


2. Overview

This 900MHz speaker system utilizes the latest advances in wireless transmission technology to deliver dynamic, high-quality audio from virtually any audio/video device, indoors and outdoors up to 100 feet away. Simply connect the transmitter to a desired audio source: DVD, CD, TV, VCR, HI-FI system or radio to enjoy wireless, full-spectrum sound without complicated wiring or installation.

3. Feature List

Transmitter

- Omni Directional
- Variable Frequency Adjustment
- Power Indicator
- RCA Input Supported
- USB Input Supported

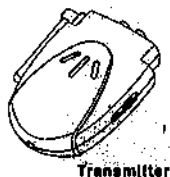


Main Unit

- Stereo Speakers
- Integrated Volume Control
- Frequency Fine Tuning
- Tuning Eye Circuitry (Red for powered on, Green and Red for tuned correctly)
- Earphones Output Supported




4.Part Description


SIDE VIEW

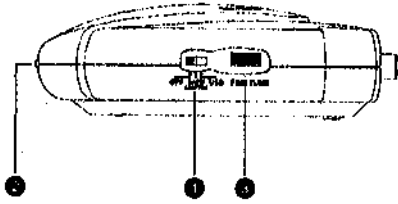

BACK VIEW

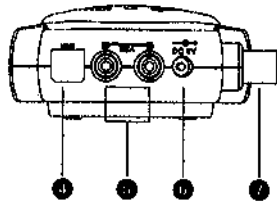


BOTTOM VIEW

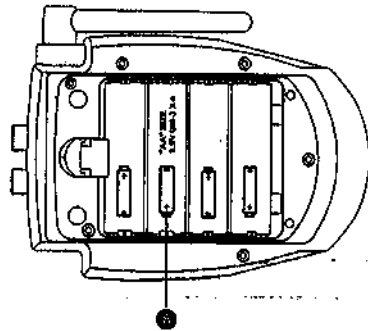

Transmitter:

- 1.ON/OFF/USB Switch
- 2.Power Indicator
- 3.Fine Tune Knob
- 4.USB input Jack
- 5.RCA Jack
- 6.6V DC Jack
- 7.Antenna
- 8.Battery Compartment

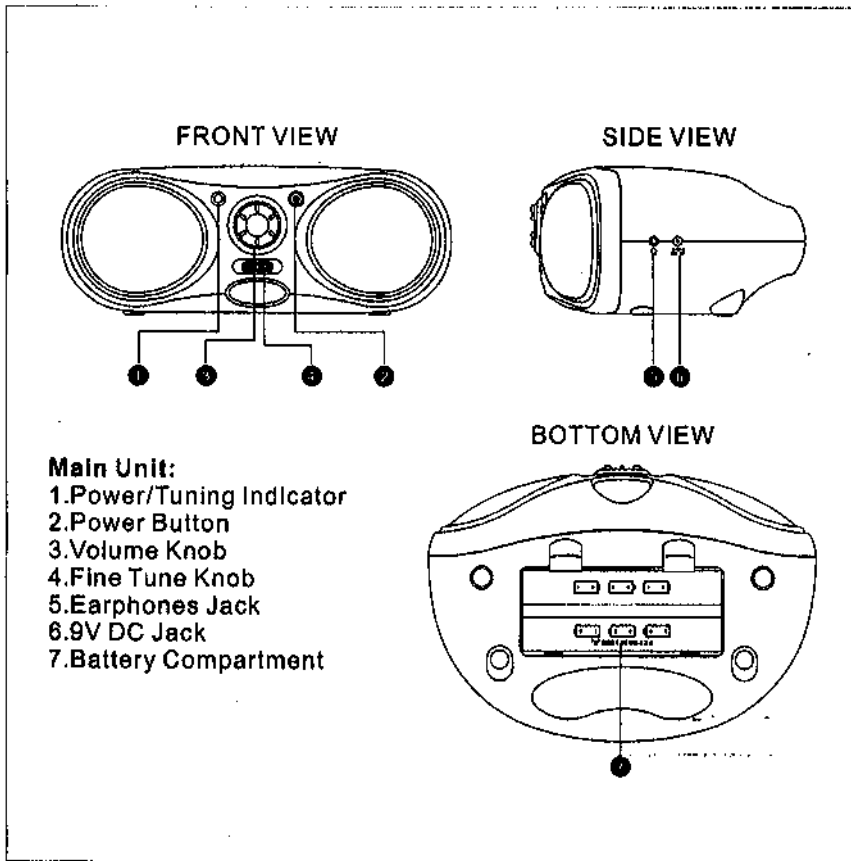

Accessories:



- 1.USB cable
- 2.RCA cable



5.Installation and Operation procedure


Transmitter Operation

- 1.Insert 4pcs of AA size battery into the battery compartment with correct polarity.
- 2.Connect any audio source (CD system, mp3 /radio/cassette player, TV, DVD, computer, etc) to the transmitter by insert the RCA cable into the desired audio device's output jack.
- 3.Insert another end of the RCA cable to the transmitter.
- 4.Switch ON and play the music from the audio source that the transmitter is connected to.
- 5.Slide the power switch to "ON" position. A red power indicator should be lit.
- 6.Adjust the fine tune knob to mid position.
- 7.Adjust the antenna to upright position.

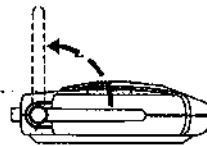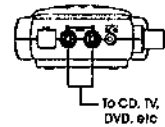

Main Unit Operation

1. Insert 6pcs of C size battery into the battery compartment with correct polarity.
2. Press the power button to switch ON the main unit. The indicator should be lit.
3. If the indicator illuminated red, rotate the tuning wheel until the indicator illuminated in green color. The main unit now should play the music from the audio source.
4. For optimal reception, place the transmitter and main unit are approximately 15 feet apart for initial alignment.

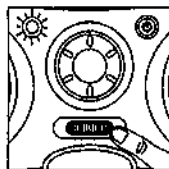

5. Pause the music play from the audio source.
6. Further fine tuning the main unit until the background noise are in minimum level while keeping the power indicator in green color.
7. Place the main unit and the transmitter to the desired location. Resume the music play from the audio source.
8. Adjust the desired volume of the main unit.

Note: When transmitting over long distances, the audio signal becomes weaker and interference increases.

6. More Helpful Information

1. Power the transmitter by adapter


The transmitter can operate by adapter instead of by batteries. To operate the transmitter by adapter, refer to the following steps:

I. Plug the 6V power adapter (not included) into a standard wall outlet.

II. Insert the power adapter plug firmly into the DC 6V jack at the right side of the transmitter.

III. Repeat steps 2-7 from *Transmitter Operation* and follow all steps from *Main Unit Operation*.

Note: Please use 6V 100mA approved adapter

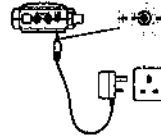

2. Power the transmitter by USB


The transmitter can also operate by USB. In this mode, users are not necessary to use batteries or adapter to power ON the transmitter. To operate by USB, refer to the following steps:

I. Connecting any audio source (computer, notebook, etc) to the transmitter by insert the USB cable into the desired audio device's output jack.

II. Insert another end of the USB cable to the transmitter.

III. Power ON and play music from the audio source that the transmitter is connected to.

IV. Slide the power switch to "USB" position. A red power indicator should be lit.

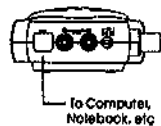

- V.Adjust the antenna to upright position.
- VI.Repeat all steps from *Main Unit Operation*.

3.Power the main unit by adapter

Note: The main unit can operate by adapter instead of by batteries.
To operate by adapter, refer to the following steps:

- I.Plug the 9V power adapter (not included) into a standard wall outlet.
- II.Insert the power adapter plug firmly into the DC 9V jack (+ ⊕ -) at the right side of the main unit.
- III.Repeat all steps from *Transmitter Operation* and steps 2-8 from *Main Unit Operation*.

Note: Please use 9V 1A approved power adapter.

7.Troubleshooting



No Sound

- Confirm the transmitter is powered on i.e. the power indicator lit.
- Confirm the main unit is powered on and tuned correctly i.e. the indicator illuminated in green color.
- Confirm the audio source is powered on and the adapter/USB cable installed correctly.
- Confirm the volume of the main unit is not at minimum level.
- Confirm the batteries are inserted in correct polarity.

Comments**Unclear Sound/
Distortion**

- Confirm the fresh batteries are installed.
- Check the indicator light in main unit is illuminated in green color. If not, adjust the fine tune knob until the light change from red to green.
- Check the transmitter antenna is in upright position.
- Try changing the physical location of the transmitter. Locate it as high and free of obstruction as possible.
- Try moving the transmitter and main unit closer together. Sending the signal through certain materials, such as glass, tile and metal can decrease the effective transmitting distance of the system.
- Check the audio source is clear and undistorted.
- Try slightly adjust the fine tune of the main unit for best performance.
- Try to adjust the fine tune of the transmitter to another frequency location and adjust the main unit to corresponding frequency location.

8.Safety Instruction

Statement of FCC compliance Model: NE-511

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

Grow-up Electronics Ltd. 創興電子有限公司
Table - Item 資料庫 - 產品資料 FANE511
Print By: USERS6
Print Date: 29/11/2004 16:04:45

Code FANE511
2nd/Short Desc FANE511
Status Active 有效

Description FANE511 **美國版**
Specification
Category FINISHED PRODUCTS
Unit PC
Brand NO BRAND
LPC
BarCode
Remark

Description FANE511 **美國版**
Specification

Product Source 產品來源, 成本 ----- Assembly 生產線

Reference Cost

Total Number of Parts : 203

Code	Description	Quantity	STD Cost	Sub Total	Wastage	WHH	Remark
FANE511-CASING(0)	FANE511 CASING(0) "殼殼殼"	1					
-280210051100	SPEAKER 3 * 4 OHM 3W * NE511	2				W2-methua stock	喇叭
-380153008000	WIRE 80mm BLACK (UL 1007 #26)	1				W2-methua stock	焊電池負片
-380153008002	WIRE 80mm RED (UL 1007 #26)	1				W2-methua stock	焊電池正片
-380153010806	WIRE 105mm BLUE (UL 1007 #26)	1				W2-methua stock	焊SP-
-380153010609	WIRE 105mm WHITE (UL 1007 #26)	1				W2-methua stock	焊SP+
-380153026200	WIRE 262mm BLACK (UL 1007 #26)	1				W2-methua stock	焊SP-
-380153026203	WIRE 262mm ORANGE (UL 1007 #26)	1				W2-methua stock	焊SP+
-4200300801PA	SCREW PA 3 X 8 "NIC"	12				W2-methua stock	PCB與面殼XS, 耳話板與底殼X1, 前殼與底殼X2, 喇叭與底殼頂殼X4
-4200301201PA	SCREW PA 3 X 12 "NIC"	6				W2-methua stock	頂殼與底殼頂殼X1
-440112083200	SPEAKER CLIP 832 NE368	4				W2-methua stock	喇叭器
-440140073800	主電池正負片 (+/-) S1738	1				W2-methua stock	
-440140073803	主電池負片 (-) S1738	1				W2-methua stock	
-440148073804	主電池正片 (+) S1738/S1538/S1498	1				W2-methua stock	
-440160003810	灰色纖維 39 X 28 X 5mm S1601 III NE365 兩打零件	3				W2-methua stock	
-440170048901	RUBBER FOOT 12.5 X 1.6 mm * 3M * 2"	4				W2-methua stock	貼在電池門內面
FANE511-CASING(1)	FANE511 CASING(1) "殼殼殼"	1				W2-methua stock	膠樽
-100810051101	LED 5MM 紅燈(膠樽) *GB-333RHD* NE511	1				GROW-UP (H.K.)	
-4200170431PM	SCREW PM 1.7 X 4 "NIC" *3.1mm*	1				W2-methua stock	VOL鈕
-4200170801PA	SCREW PA 1.7 X 8 "NIC" *3.1mm*	1				W2-methua stock	頂殼與底殼

(Speaker with USB)

Code	Description	Quantity	STD Cost	Sub Total	Wastage	WH	Remark
-4200200801PA	SCREW PA 2 X 8 "NIC"	10				W2-meihua stock	漏PCB板到磁器X4, 天線磁片到底
-440141062102	BATTERY SPRING (-) 2" S1621	1				W2-meihua stock	電池負片
-440141062103	BATTERY SPRING (+) 2" S1621	1				W2-meihua stock	電池正片
-440141062104	BATTERY SPRING (+) 2" S1621	1				W2-meihua stock	電池正片
-440141062105	BATTERY SPRING (+) 2" S1621	2				W2-meihua stock	電池正片
-440160005520	高密度海綿 55 X 28 X 3mm 621	1				W2-meihua stock	粘在電池門內面
-440200051100	MOUNTING PLATE NE511	1				W2-meihua stock	天線磁片
-440174006100	RUBBER FOOT 6 x 1mm NE510 / 417427	2				W2-meihua stock	磁殼
FANE511-CHASSIS(0)	FANE511 CHASSIS(0) 接收機主版	1				W2-meihua stock	
-100700000910	DIODE 2CC910=DIODE BB910/ALL MODEL	2				GROW-UP (H.K.)	D1,D2
-100284082270	I.C. D8227 "CHMC"	1				GROW-UP (H.K.)	IC2
-100810051100	LED 5MM 紅綠藍(國產) GB-3386GW-A *	1				GROW-UP (H.K.)	LED1
-1407000335500	MINI E. CAP 3.3 UF 50V	2				W2-meihua stock	C26,C80
-1407000475500	MINI E. CAP 4.7 UF 50V	2				W2-meihua stock	C62,C65
-140700105160	MINI E. CAP 10 UF 16V	2				W2-meihua stock	C81,C89
-1407000335100	MINI E. CAP 33 UF 10V	1				W2-meihua stock	C67
-1407000475100	MINI E. CAP 47 UF 10V	2				W2-meihua stock	C8,C9
-1407000476100	MINI E. CAP 100 UF 10V	6				W2-meihua stock	C4,C182,C187,C10,C14,C35
-1407000476100	MINI E. CAP 100 UF 15V	1				W2-meihua stock	C21
-1407000476100	MINI E. CAP 100 UF 15V	1				W2-meihua stock	C24,C188
-1407000476100	MINI E. CAP 220 UF 10V	2				W2-meihua stock	C20,C180
-1407000476100	E. CAP 1000 UF 10V (D8 X 14mm)	2				W2-meihua stock	IC2
-1407000476100	E. CAP 2200 UF 10V (D8 X 14mm)	1				W2-meihua stock	
-1407000476100	MYLAR CAP 0.15UF 100V +/-10% NE368	2				GROW-UP (H.K.)	C181,C186
-1407000476100	TRIMMER CAP 20PF CVN6207 NE368	1				GROW-UP (H.K.)	VC1
-1407000476100	SEMIFIXED F-637V 20K-G	1				GROW-UP (H.K.)	VR3
-1407000476100	S1655ANIF/A173FA176[英製]Christ218X	1					
-180150150124	VOLUME-F-124KP BSK L20FCX121G7WAO	1				GROW-UP (H.K.)	VR2
-180150150122	VOLUME-F-122KP ASOK L20728(K) W/O	1				GROW-UP (H.K.)	VR1
-200150048900	FM 线圈 7.5mm x 0.5mm M-S1439 /492	1				W2-meihua stock	ANT1
-200150048905	FM COIL 3 X 10.5T DIA. 0.3mm S1492	1				W2-meihua stock	L5
-200200007400	MOLDING COIL 4.5T "M745"	1				W2-meihua stock	L1
-240150047211	FM FILTER "OC" "1 SET" NE368	1				GROW-UP (H.K.)	SFE10,7MAS,CDA10,7MC
-260120048230	VERTICAL PUSH SWITCH "PB-22E60"482	1				W2-meihua stock	SW1
-380150000000	WIRE "COPPER" DIA.0.6mm GT900	0.0004				W2-meihua stock	J1,J2,J3,J4,J5,J6,J8,J9
-380200050230	FLAT CABLE 5 P L=230mm UL2651#26TC	1				W2-meihua stock	CN8
-4401600007620	白色海綿 76 x 23 x 4mm "ALL MODEL"	0.17				W2-meihua stock	L5
-440200073805	HEAT SINK (POWER) "Z" S1687/S1738/	1				W2-meihua stock	IC2
FANE511-CHASSIS(1)	FANE511 CHASSIS(1) 接收機主版	1				W2-meihua stock	
-100710000200	ZENOR 2.0V 1/2W +/-5% "SEMTECH"	1				GROW-UP (H.K.)	Z1
-140600108100	E. CAP 1000 UF 10V (D8 X 14mm)	3				W2-meihua stock	C54,C58,C62

(Speaker with USB)

Code	Description	Quantity	STD Cost	Sub Total	Wastage	WH	Remark
-140700106160	MINI E. CAP 10 UF 16V	4				W2-melhusa stock	C11.C28.C29.C31
-140700336100	MINI E. CAP 33 UF 10V	2				W2-melhusa stock	C7.C12
-140700476100	MINI E. CAP 47 UF 10V	2				W2-melhusa stock	C60.C67
-140700107100	MINI E. CAP 100 UF 10V	1				W2-melhusa stock	C30
-140700227100	MINI E. CAP 220 UF 10V	1				W2-melhusa stock	C21
-180110002001	SEMI-FIXED F-065 20K-TR NES11	2				GROW-UP (H.K)	VR3.VR5
-180110005001	SEMI-FIXED F-065 50K-TR NES11	1				GROW-UP (H.K)	VR2
-180150150012	VOLUME "F-12NFT" BSK WAO NES11	1				GROW-UP (H.K)	VOL1
-200150030115	FM COIL 3 X 11.5T DIA 3 X 11.5T X 0.5mm	1				W2-melhusa stock	L1
-200150051100	內置線杆天線 "110 X 0.7mm" NES11	1				W2-melhusa stock	ANT
-200152005000	CHOCK COIL 5MH * NES11	1				GROW-UP (H.K)	L2
-200152020000	CHOCK COIL 20MH NES11	1				GROW-UP (H.K)	L4
-200152000100	CHOCK COIL 10uH EC24-100K	2				GROW-UP (H.K)	L5.L8
-240154051100	晶振器 12MHz (+/- 30PPM) NES11	1				GROW-UP (H.K)	X3
-240154051101	晶振器 38KHz (+/- 30PPM) NES11	1				GROW-UP (H.K)	X2
-260100261100	BAND SWITCH (SK-23007 - VAC) NES11	1				W2-melhusa stock	S1
-260216000020	DC JACK "DS-210-B"	1				W2-melhusa stock	DC JACK1
-260216001100	RCA JACK "J80208-04Y-WR-N" NES11	1				W2-melhusa stock	SW1
-380257051100	接USB -C-01 90° USB插頭 NES11	1				W2-melhusa stock	CON
-380753000000	WIRE "COPPER" DIA 0.6mm GT900	0.0003				W2-melhusa stock	J1.J2.J3.J4.J5.J6
-380760012505	WIRE 125mm BLUE (5 X 0.8) (3 X 3)	1				W2-melhusa stock	焊電池正片
-380760000002	WIRE 80mm RED (5 X 0.8) (3 X 3)	1				W2-melhusa stock	焊電池正片
-380761000003	WIRE 60mm ORANGE (5 X 0.6) (3 X 3)	1				W2-melhusa stock	焊LED負
-380761000002	WIRE 60mm RED (5 X 0.6) (3 X 3)	1				W2-melhusa stock	焊LED正
FANES11-CHASSIS(2)	FANES11 CHASSIS(2) "JACK 鑲板"	1				W2-melhusa stock	
-340753051102	PCB "JACK8" NES11-4A NES11 ??? 未裝	1				W2-melhusa stock	
-100700004001	DIODE 1N4001 50V "DC"	1				GROW-UP (H.K)	D402
-120160022000	RESISTOR 220 OHM 1/16W +/-5%	2				GROW-UP (H.K)	R405.R406
-260210000020	DC JACK "DS-210-B"	1				W2-melhusa stock	DC403
-260250000020	EARPHONE JACK "ST-413-05W"(黑色)	1				W2-melhusa stock	SK402
-4202000001740	EYELET 1.7 X 4 "NIC"	5				W2-melhusa stock	BATT. BATT*. SPGND. SPR*. SPL*
FANES11-CHASSIS(3)	FANES11 CHASSIS(3) "高頻調射板" NES11	1				W2-melhusa stock	
-160700000910	DIODE 2C3P10(DIODE BBS10)"ALL MODEL"	1				GROW-UP (H.K)	D3
-380251030001	WAFER 3PIN * PH2.5mm "插針" NES11	2				W2-melhusa stock	CON1.CON2
-4402000048100	屏蔽盒 SH481	1				W2-melhusa stock	屏蔽盒
FAS1489-CHASSIS(2)	SH489 CHASSIS(2) "接收盒主板" (包裝一組接收盒)	1				W2-melhusa stock	
-240154980000	晶振器 "SC0580.000T0-39" Top Pacific"	1				W2-melhusa stock	Z1
-200150010015	FM COIL 1 X 1.5T DIA. 0.3mm SH492	1				GROW-UP (H.K)	L23.L26
-200150030015	FM COIL 3 X 1.5T DIA. 0.3mm SH492	2				W2-melhusa stock	L25.L27
-200150030026	FM COIL 3 X 2.5T DIA. 0.3mm SH492	2				W2-melhusa stock	L24
-200150030085	FM COIL 3 X 8.5T DIA. 0.3mm SH492	1				W2-melhusa stock	

(Speaker with USB)

Print Date : 29/11/2004 16:04:45

Print By : USER6

Code	Description	Quantity	STD Cost	Sub Total	Wastage	WH	Remark
-20015000135	FM COIL 3 X 13.5T DIA. 0.9mm (-) S1492	1				W2-melhua stock	L21
-380251048900	WAFER IPIN* S02-1P**材料* S1489	3				W2-melhua stock	B+ RF-OUT
-440200048901	屏蔽(鐵)盒支架 S1489 / S1492	1				W2-melhua stock	接收盒主板
-440200048902	屏蔽(鐵)盒頂蓋 (S1489 X 1PCS, S1492 X 2 PCS)	1				W2-melhua stock	用於接收主板部位
-440200048903	屏蔽(鐵)盒底蓋 (S1489 X 1 / S1492 X 2)	1				W2-melhua stock	用於接收主板部位
FANE511-SMD(X0)	FANE511 SMD(X0)*接收器主板*	1				W2-melhua stock	
-340150051100	PCB *接收板**NE511-1A* NE511 ??? 未決	1				W2-melhua stock	IC4
-100104153840	IC.CXA1538M "SONY" 3687383735&11FA7173FA7178H用打製零件Chntsl	1				GROW-LUP (H.K)	IC4
-1002944502PR	IC.XC52FP4502PR 4.5V* (S0T-89)	1				GROW-LUP (H.K)	IC3
-1003002712GR	TRANSISTOR 2SC2712GR-T-TOS "TOSHIBA"	3				GROW-LUP (H.K)	Q3.Q4.C5
-120230000000	CHIP RESISTOR 0 OHM (0603) +/-5%	1				GROW-LUP (H.K)	R2
-120230000470	CHIP RESISTOR 4.7 OHM (0603) +/-5%	1				GROW-LUP (H.K)	R70
-120230010000	CHIP RESISTOR 10 OHM (0603) +/-5%	1				GROW-LUP (H.K)	R17
-120230018000	CHIP RESISTOR 180 OHM (0603) +/-5%	2				GROW-LUP (H.K)	R6.R181
-120230022000	CHIP RESISTOR 220 OHM (0603) +/-5%	1				GROW-LUP (H.K)	R1
-120230047000	CHIP RESISTOR 470 OHM (0603) +/-5%	1				GROW-LUP (H.K)	R47
-120230056000	CHIP RESISTOR 560 OHM (0603) +/-5%	2				GROW-LUP (H.K)	R10.R20
-128231000100	CHIP RESISTOR 1K (0603) +/-5%	4				GROW-LUP (H.K)	R4.R5.R55.R56
-130231000220	CHIP RESISTOR 2.2K (0603) +/-5%	3				GROW-LUP (H.K)	R60.R64.R3
-120231000270	CHIP RESISTOR 2.7K (0603) +/-5%	1				GROW-LUP (H.K)	R7
-120231000330	CHIP RESISTOR 3.3K (0603) +/-5%	2				GROW-LUP (H.K)	R65.R66
-120231001000	CHIP RESISTOR 10K (0603) +/-5%	1				GROW-LUP (H.K)	R63
-120231001200	CHIP RESISTOR 12K (0603) +/-5%	1				GROW-LUP (H.K)	R16
-120231003300	CHIP RESISTOR 33K (0603) +/-5%	1				GROW-LUP (H.K)	R19
-120231010000	CHIP RESISTOR 100K (0603) +/-5%	3				GROW-LUP (H.K)	R15.R61.R67
-140410000003	CHIP CAP 3 PF (0603) +/-5% NPO	1				GROW-LUP (H.K)	R49.R59
-140410000007	CHIP CAP 7 PF (0603) +/-5% NPO	1				GROW-LUP (H.K)	C59
-140410000022	CHIP CAP 22PF (0603) +/-5% NPO	1				GROW-LUP (H.K)	C42
-140410000027	CHIP CAP 27 PF (0603) +/-5% NPO	1				GROW-LUP (H.K)	C19
-140410000056	CHIP CAP 56 PF (0603) +/-5% NPO	1				GROW-LUP (H.K)	C22
-140410000068	CHIP CAP 68 PF (0603) +/-5% NPO	1				GROW-LUP (H.K)	C25
-140410000100	CHIP CAP 100 PF (0603) +/-5% NPO	1				GROW-LUP (H.K)	C23
-140440010000	CHIP CAP 0.01 UF (0603) +80/-20%	2				GROW-LUP (H.K)	C189.C190
-140440002200	CHIP CAP 0.022 UF (0603) +80/-20% Y5V	3				GROW-LUP (H.K)	C3.C58.C72
-140440100000	CHIP CAP 0.1 UF (0603) +80/-20% Y5V	2				GROW-LUP (H.K)	C70.C71
-1404404070000	CHIP CAP 0.47UF (0603) 16V+80/-20% Y5V	1				GROW-LUP (H.K)	C11.C5
-140440000100	CHIP CAP 1 UF (0603) +80/-20% Y5V	2				GROW-LUP (H.K)	C63
-140540000202	CHIP CAP 2.2uF (0805)	4				GROW-LUP (H.K)	C74.C73.C116.C115

(Speaker with USB)

Code	Description	Quantity	STD Cost	Sub Total	Wastage	WH	Remark
FANES11-SMDX1	FANES11 SMDX1 "聖爵德王板"	1				W2-meiplus stock	
-340750051101	PCB "聖爵德"NES11-2A NES11 ??? 宋扶	1				W2-meiplus stock	
-1001932035M0	I.C. N1M2035M1E1 "NJR" NES11	1				GROW-UP (H.K)	IC1
-4002840M102S	I.C. CM102S NES11	1				GROW-UP (H.K)	IC3
-1002344502PR	I.C. XC62PP4502PR "4.5V" (SOT-89)	1				GROW-UP (H.K)	IC2
-100630273400	TRANSISTOR 25C2734 "HITACHI" NE366	1				GROW-UP (H.K)	Q7
-120230000000	CHIP RESISTOR 0 OHM (0603) +/-5%	1				GROW-UP (H.K)	R12
-120230001000	CHIP RESISTOR 10 OHM (0603) +/-5%	1				GROW-UP (H.K)	R2
-120230002000	CHIP RESISTOR 20 OHM (0603) +/-5%	2				GROW-UP (H.K)	R25,R27
-120231000150	CHIP RESISTOR 1.5K (0603) +/-5%	1				GROW-UP (H.K)	R35
-120231000200	CHIP RESISTOR 220 OHM (0603) +/-5%	2				GROW-UP (H.K)	R26,R37
-120231000180	CHIP RESISTOR 1.8K (0603) +/-5%	2				GROW-UP (H.K)	R15
-120231000560	CHIP RESISTOR 5.6K (0603) +/-5%	1				GROW-UP (H.K)	R34
-120231000820	CHIP RESISTOR 8.2K (0603) +/-5%	1				GROW-UP (H.K)	R19
-120231001000	CHIP RESISTOR 10K (0603) +/-5%	7				GROW-UP (H.K)	R14,R20,R21,R22,R23,R23,R10
-120231002200	CHIP RESISTOR 22K (0603) +/-5%	6				GROW-UP (H.K)	R1,R7,R8,R9,R31,R32
-120231002700	CHIP RESISTOR 27K (0603) +/-5%	1				GROW-UP (H.K)	R18
-120231003900	CHIP RESISTOR 39K (0603) +/-5%	1				GROW-UP (H.K)	R17
-120231007500	CHIP RESISTOR 75K (0603) +/-5%	2				GROW-UP (H.K)	R5,R13
-120270000000	CHIP RESISTOR 0 OHM (1206) +/-5%	2				GROW-UP (H.K)	R33,R53,R54,R6,R4
-140410000003	CHIP CAP 3 PF (0603) +/-5% NPO	5				GROW-UP (H.K)	C33,C34
-140410000008	CHIP CAP 8 PF (0603) +/-5% NPO	2				GROW-UP (H.K)	C36
-140410000010	CHIP CAP 10 PF (0603) +/-5% NPO	1				GROW-UP (H.K)	C2
-140410000022	CHIP CAP 22PF (0603) +/-5% NPO	2				GROW-UP (H.K)	C19,C23
-140410000100	CHIP CAP 100 PF (0603) +/-5% NPO	4				GROW-UP (H.K)	C4,C24,C27,C35
-140410000390	CHIP CAP 390 PF (0603) +/-5% NPO	1				GROW-UP (H.K)	C10
-140410000560	CHIP CAP 560 PF (0603) +/-5% NPO	1				GROW-UP (H.K)	C20
-140433001500	CHIP CAP 0.0015 UF (0603) +/-20%	5				GROW-UP (H.K)	C15,C5,C25,C63,C64
-140435000300	CHIP CAP 0.0033 UF (0603) +/-10%	1				GROW-UP (H.K)	C18
-140440100000	CHIP CAP 0.047 UF (0603) +/-20% Y5V	2				GROW-UP (H.K)	C65,C66
-140440100000	CHIP CAP 0.1 UF (0603) +/-20% Y5V	8				GROW-UP (H.K)	C6,C8,C13,C16,C26,C17,C59,C61
-140440000100	CHIP CAP 1 UF (0603) +/-20% Y5V	3				GROW-UP (H.K)	C1,C3,C22
-140540000202	CHIP CAP 2.2UF (0605)	2				GROW-UP (H.K)	C33,C32
FANES11-SMDX2	FANES11 SMDX2 "高頻射擊" NES11	1				W2-meiplus stock	
-340150049101	PCB "S481-2A" "高頻射擊" S481 2004年3月	1				W2-meiplus stock	
-100305273400	TRANSISTOR 25C2734 "HITACHI" NE366	2				GROW-UP (H.K)	Q1,Q2
-120230002200	CHIP RESISTOR 22 OHM (0603) +/-5%	1				GROW-UP (H.K)	R41
-120230004700	CHIP RESISTOR 47 OHM (0603) +/-5%	1				GROW-UP (H.K)	R42
-120230007900	CHIP RESISTOR 75 OHM (0603) +/-5%	1				GROW-UP (H.K)	R43
-120230010000	CHIP RESISTOR 100 OHM (0603) +/-5%	1				GROW-UP (H.K)	R36,R46
-120230022000	CHIP RESISTOR 220 OHM (0603) +/-5%	2				GROW-UP (H.K)	R44

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.