

NOKIA 3589i



Nokia 3589i

User Guide

What information is needed?	Numbers	Where is the number?
My number		Wireless service provider
Voice mail number		Wireless service provider
Wireless provider's number		Wireless service provider
Provider's customer care		Wireless service provider
Model number	Nokia 3589i	See "About your phone" on page 7.
Phone type	RH-44	See "About your phone" on page 7.
Electronic serial number (ESN)		See "Your phone's label" on page 6.



Note: Spanish translation of this guide follows page 100 of the English guide.

The wireless phone described in this guide is approved for use in CDMA networks.

LEGAL INFORMATION

Part No.9310502, Issue No. 1b

Copyright ©2003 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nokia 3589i, the Nokia Original Enhancements logos and Racket are trademarks or registered trademarks of Nokia Corporation. All other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Printed in Canada 8/2003

US Patent No 5818437 and other pending patents.

T9 text input software Copyright ©1999–2003. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

The BREW trademark is a trademark of QUALCOMM Incorporated.

The information in this user guide was written for the Nokia 3589i phone. Nokia operates a policy of on-going development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

EXPORT CONTROLS

This product contains commodities, technology or software exported from the United States in accordance with the Export Administration regulations. Diversion contrary to U.S. law is prohibited.

FCC/INDUSTRY CANADA NOTICE

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

Contents

1. For your safety	1	7. Call log	25
Quick guide	3	Check missed, received, or dialed calls	25
Menu shortcuts	4	Delete recent call lists	26
2. Welcome	5	Use call timers	26
Understand wireless network services	5	Turn on a current call timer	27
Learn about accessibility solutions	5	Clear call timers	27
Contact Nokia	6	Data timers	
Register your phone	6	(Data/fax and Minibrowser)	27
E-newsletters	6	8. Voice mailbox	28
Contact your service provider	6	Store your voice mailbox number	28
3. About your phone	7	Set greetings	28
Antennas	8	Listen to your voice messages	28
Battery	8	9. Text messages	29
Switch your phone on or off	9	Write a text message	29
Check the start screen	10	Use message templates	31
Use the selection keys	10	Learn about e-mail text messages	32
Use the scroll key	10	Receive text messages	32
Learn about the keys	10	Respond to a text message	33
Make and answer calls	11	Reply to a message	33
Memory use	11	Delete messages	34
View help system	12	Message settings	35
Browse phone menus	12	Organize text messages using folders	36
Phone book menu	13	10. Personalization	37
4. Phone setup	14	Learn about profiles	37
5. Text entry	15	Select a different profile	37
Write with ABC and 123 modes	15	Customize a profile	37
Write with predictive text	17	Screen saver	39
Tips for predictive text	19	Gallery	39
6. Contacts (Phone book)	20	Rename profiles	40
Save contacts and numbers	20	Timed profiles	41
Recall contacts and numbers	20	Set the display language	42
Use phone book menus	20	Set the clock	42
Edit a name or number	21	Customize the Welcome screen	43
Add a number to a phone book entry	21	Learn about voice commands	43
Delete stored contacts and numbers	23	11. Advanced features	45
Add other information to a phone book		View in-call options	45
entry	23	Use call forwarding	45
Use caller groups	23	Use call waiting	47
Check memory status	24	Make a conference call	47
		Send own caller ID when calling	47

Use automatic redial	48	15. Your phone and other devices. . . 68
Calling card	48	
Voice dialing	49	16. Minibrowser
1-touch dialing	51	Understand browsing sessions and
Caller Groups	52	indicators.....
Use Touch tones	53	Launching the minibrowser
Link phone book entries	54	Minibrowser menu
Learn about Voice Recorder	55	Navigate in the minibrowser
12. Security and System settings. . . 56		Links
Lock keypad (Keyguard)	56	Bookmarks
Security code	56	Receive messages via the
Phone lock	57	minibrowser
Call restrictions	58	End the minibrowser session
GPS (Location info sharing)	60	Disable minibrowser confirmations. . . .
Automatic update of service	60	17. Reference information
Learn about system selection	60	Care and maintenance
13. Organizer	62	Enhancements
Use the alarm clock	62	Battery information
Calendar	62	Chargers and other enhancements
Calculator	63	Nokia Xpress-on™ color covers
Stopwatch	64	18. Nokia One Year Limited
14. Get it now	66	Warranty
Launching an application	66	Appendix A
Download a new application	66	Appendix B
Remove an application	66	Index
Check memory status	66	
Other options available for		
applications	67	

1 For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.



SWITCH OFF WHERE PROHIBITED

Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Don't use a handheld phone while driving.



INTERFERENCE

All wireless phones may get interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELING

Don't use the phone at a refueling point. Don't use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Don't use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



USE SENSIBLY

Use only in the normal position. Don't touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your wireless phone is not water-resistant. Keep it dry.



BACKUP COPIES

Remember to make backup copies of all important data.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



CALLING

Ensure the phone is switched on and in service. Enter the phone number, including the area code, and press the **Send** key. To end a call, press the **End** key. To answer a call, press the **Send** key.



EMERGENCY CALLS

Ensure the phone is switched on and in service. Fully extend the whip antenna. Press the **End** key as many times as needed (for example, to exit a call, to exit a menu) to clear the display. Enter the emergency number, and press the **Send** key. Give your location. Do not end the call until told to do so.

• QUICK GUIDE



Make a call	Fully extend whip antenna. Enter phone number, press the Send key.
Answer a call	Press the Send key.
Answer a call with call waiting	Press the talk key or Answer .
End a call	Press the End key.
Ignore a call	Press Silence when your phone rings.
Redial	Press the Send key twice.
Adjust call volume	Press the right or left scroll keys. while in a call.
Use the in-call menu	While in a call, press the left soft key to select Options .
Use 1-touch dialing	Press and hold any key 2 through 9.
Save a name and number	Enter a number, press the left soft key to select Options , and select Save . Enter a name and press OK .
Recall a name/number	Press Contacts , select Search . Enter first character of name and press Search .
Recall a name/number during a call	Press Options , scroll to New call , press Select , press Search , and enter the first letter of the name to find.
Check voice mail	Press and hold the one key OR dial your voice mailbox number.
Send a text message	Press Menu 01-1-1 . Add recipient's phone number, and press Options . Scroll to Enter text , and press Select . Enter the message text, and press Options and select Send .
Send an e-mail message	Press Menu 01-1-1 . Add recipient's e-mail address, and press Options . Scroll to Enter text , and press Select . Enter the message text, and press Options and select Send .
Read new message	Press Show , and press Select .
Reply to a message	Press Options , select Reply , and select a reply option. Write the reply, press Options and select Send .
Reply to an e-mail message	Press Options , select Reply , and select a reply option. Write the reply, press Options and select Send .
Send a business card (SMS)	Recall a name from the phone book. Press Details , and press Options , select Send bus. card , select Via text msg . Enter the recipient's number or press Search to retrieve a number from the phone book. Press OK .

• MENU SHORTCUTS

1 MESSAGES

Text messages	01-1
Create message	01-1-1
Inbox	01-1-2
Outbox	01-1-3
Archive	01-1-4
Templates	01-1-5
My folders	01-1-6
Delete messages	01-1-7
Message settings	01-1-8
Add-ins	01-1-9
Voice messages	01-2
Minibrowser messages	01-3

2 CALL LOG

Missed calls	2-1
Received calls	2-2
Dialed numbers	2-3
Delete recent call lists	2-4
Call timers	2-5
Data/fax calls	2-6
Minibrowser calls	2-7

3 PROFILES

Normal	3-1
Silent	3-2
Meeting	3-3
Outdoor	3-4
Pager	3-5

4 SETTINGS

Call settings	4-1
Phone settings	4-2
Time settings	4-3
Display settings	4-4
Enhancement settings	4-5
Security settings	4-6
Network services	4-7
Restore factory settings	4-8

5 GALLERY¹

View folders	5-1
Add folder	5-2
Delete folder	5-3
Rename folder	5-4

6 SYSTEM

Roaming options	6-1
Mode	6-2

7 VOICE

Voice tags	7-1
Voice commands	7-2
Voice recorder	7-3

8 MINIBROWSER²

9 ORGANIZER

Alarm clock	9-1
Calendar	9-2
Calculator	9-3
Stopwatch	9-4

10 GET IT NOW¹

11 KEYGUARD


1 Menu options may not be visible, based on your service provider's requirements.

2 Menu options may not be visible, based on your service provider's requirements.



2 Welcome

Congratulations on the purchase of your Nokia mobile phone. Nokia recommends that you read this chapter before you use your new phone.

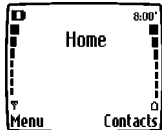

• UNDERSTAND WIRELESS NETWORK SERVICES

Your service provider's wireless network may be equipped to provide special features or functions for use with your Nokia phone. These features are called network services and may include some of the following:

- Voice mail and voice privacy
- Call waiting, call forwarding, and caller ID
- Text messages
- Ability to block or send your own caller ID
- News and information services
- Selected Internet access services

Sign up with a service provider

Before you can take advantage of your service provider's network services, you must sign up with a wireless service provider and subscribe to these services. Your service provider will make available descriptions of its services and instructions for using them.

Wireless service providers may differ from each other in certain ways. For example, some networks may not support special language-dependent characters. Contact your service provider regarding your service needs.

• LEARN ABOUT ACCESSIBILITY SOLUTIONS

Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. Nokia maintains a Web site that is dedicated to accessibility solutions. For more information about phone features, enhancements, and other Nokia products designed with your needs in mind, please visit the following Web site:

www.nokiaaccessibility.com

Your Nokia phone is equipped with a universal 2.5 mm enhancement jack that can be used to connect any cellular ready or cellular compatible TTY/TDD device's cable to your phone.

• CONTACT NOKIA

When you need help, the Nokia Customer Care Center can provide information about Nokia products. Please refer to the following table for more information on how to contact Nokia.

Customer Care Center, USA	Customer Care Centre, Canada
Nokia Mobile Phones 7725 Woodland Center Blvd., Suite #150 Tampa, Florida 33614 Telephone: 1-888-NOKIA-2U (1-888-665-4228) Fax: 1-813-249-9619 TTY/TDD Users Only: 1-800-24-NOKIA (1-800-246-6542)	Nokia Products Ltd. 601 Westney Road South Ajax, Ontario L1S 4N7 Telephone: 1-888-22-NOKIA (1-888-226-6542) Fax: 1-905-427-1070

If you ever need to call Nokia Customer Care, Nokia Customer Interaction Center, or your wireless service provider, you will need to provide specific information from your phone's label.

Your phone's label

The label inside the phone's back cover (under the battery) contains important information about your phone -- model, type and electronic serial numbers (ESN). Nokia recommends that you record this information on the title page. Do not remove or deface the label. When you call, have the phone and enhancement and this information available: phone model number, electronic serial number (ESN), and your ZIP code.

• REGISTER YOUR PHONE

Make sure to register your phone at www.warranty.nokiausa.com or 1-888-NOKIA-2U (1-888-665-4228) so that we can serve your needs better if you should call the Nokia Customer Care Center or have your phone repaired.

• E-NEWSLETTERS

When you register your phone, you can sign up for Nokia's e-newsletter *Nokia Connections*. You will receive tips and tricks on using your phone, enhancement information, and special offers.

• CONTACT YOUR SERVICE PROVIDER


Some service providers preprogram their customer support number into the phone. Press and hold the two key (or the key that your service provider instructs you to use) for two seconds to automatically dial their customer support number. If the service provider determines the problem is Nokia related, the representative will direct you to the Nokia Customer Care Center (USA) or Nokia Customer Interaction Centre (Canada).



Note: This one-key feature may not be available on all systems. Contact your service provider for availability.

3 About your phone

This section gives you a brief introduction to your phone and provides you with quick steps for making, answering, and managing your calls. The rest of this guide user provides complete details on phone use.

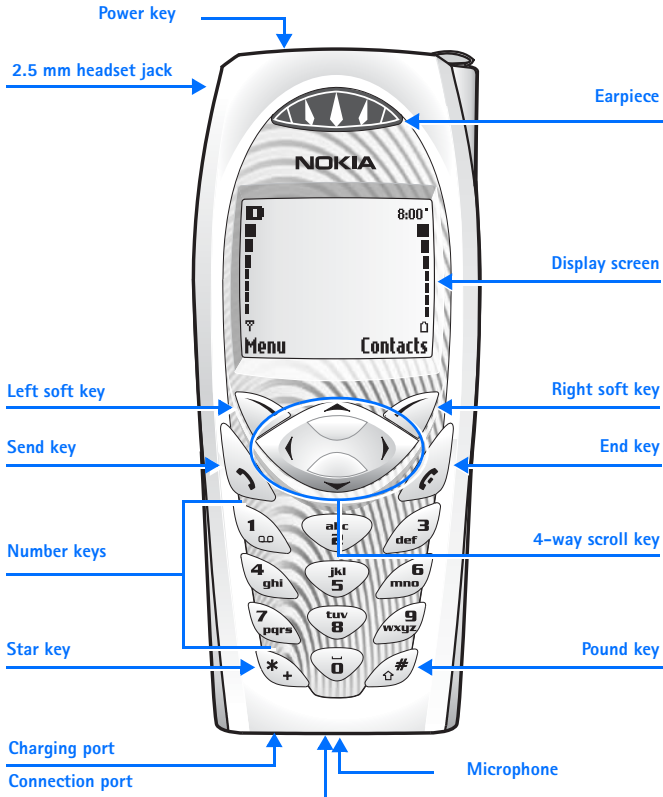

• ANTENNAS

Your phone has three antennas:


- Internal antenna is always active.
- Whip antenna is active when fully extended.

The GPS antenna is also internal and is activated when placing emergency calls or when is selected from the **Location info sharing** feature. For more information on **Location info sharing**, see "GPS (Location info sharing)" on page 62.

Do not touch either antenna unnecessarily when the phone is switched on.

Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

While in a call, hold the phone to your ear, placing your finger tips on the Nokia badge at the mid-center of the back cover (located below the antenna area on the back of your phone).

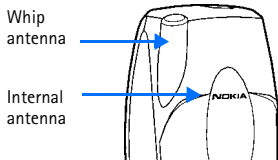


• BATTERY

Install




Warning: Use only the BLC-2 battery in this Nokia phone.

- 1 Remove the back cover.
- 2 Insert the battery with the label side up and the metal battery contacts aligned with the contact prongs on the phone.
- 3 Replace the cover by sliding it carefully over the whip antenna downward until you hear a click.



Charge


- 1 Connect the charger to an AC wall outlet.
- 2 Connect the lead from the charger to the charging port located on the bottom of the phone.
- 3 Disconnect the charger from the phone and AC outlet when the indicator bar stops scrolling.

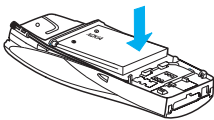


The battery can accept approximately one hour of additional charge. The message **Battery Full** displays.




Note: For best performance, charge the battery for 24 hours before you use the phone. The charging time depends on the charger and battery you use.

-  **Important:** Do not leave the battery connected to a charger for more than 72 hours, since prolonged maintenance charging could shorten its lifetime.

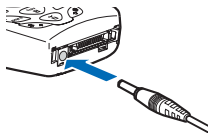


Remove

-  **Warning:** Use only your hands to remove the battery. Do not puncture, burn or use any objects that may damage the phone or the battery. Please recycle the battery, or dispose of the battery properly.

Make sure the phone has been turned off for ten seconds.

- 1 Remove the back cover of the phone.
- 2 Place your index finger in the space at the bottom of the battery, and press toward the top of the phone.
- 3 Take out the battery.

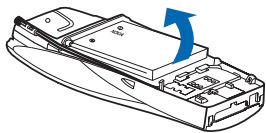

RUIM card slot


Your phone has a RUIM card slot built into its mechanics. However, the RUIM card slot is not functional in this phone model. Please avoid placing anything in this slot.

Important battery information

- Recharge your battery only with a charger approved by Nokia.
- You can switch the phone on and use it for calls while the battery is charging.
- If the battery is completely discharged, it may take a few minutes for the battery indicator to appear on the screen.
- If you switch the phone on after fully charging, the message **Battery full** displays momentarily.
- Charging time depends on the charger and battery used. Please see "Battery information" on page 80, for more information.
- If the battery has become completely discharged, you may need to recharge it for a few minutes before you can make or receive calls.


Prolong battery life

A battery lasts longer and performs better if you fully discharge it from time to time. To discharge your battery, leave your phone switched on until the battery drains completely. *Ignore any messages to recharge your battery and let the battery completely discharge.*

-  **Important:** Do not attempt to discharge the battery by any means other than those just described.

• SWITCH YOUR PHONE ON OR OFF

To switch your phone on or off, press and hold the power key (located on the top of the phone) for two seconds.

-  **Warning:** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

• CHECK THE START SCREEN

The start screen is the phone's display when no calls are in progress, and there are currently no menu or phone book entries displayed.

You can easily return to the start screen from any location (other than an active call) simply by pressing the **End** key.

• USE THE SOFT KEYS

Note the two soft keys beneath the screen. The function of these keys is determined by the word shown above them on the screen.



For example, pressing the left soft key when the word **Menu** appears above it shows the first of many menus. Scroll through the menus using the up scroll and down scroll keys.

Likewise, pressing the right soft key when **Contacts** appears above it displays the phone book menu.

• USE THE SCROLL KEY

Note the four-way scroll key in the center of the phone, beneath the screen. The function of this key is to scroll through the different menus and lists within the phone. Scroll left to decrease volume or to go directly to the **Create** menu. Scroll right to increase volume or to go directly to the **Calendar** menu.



• LEARN ABOUT THE KEYS

The following table contains a summary of how the various keys on your phone work.

Key	Description
Ⓚ	Power: Press and hold to switch the phone on or off. Pressing this key momentarily displays a list of profiles that can be selected. Power key also displays menu while using Minibrowser.
Send key	Send: Press the Send key to make a call to the name or number shown on the screen or to answer a call. Pressing this key when not in a call (or when not in the menu or phone book) displays a list of recently dialed numbers.

Key	Description
End key	End: Press the End key to end a call, to silence the ring from an incoming call, or to exit the phone book or menus completely. Used as Back key in Minibrowser.
0 through 9	Number: Use keys 0-9 to enter numbers and letters. Press and hold 1 to dial your voice mailbox. Press and hold 0 to launch the minibrowser.
#	# key: Press the # key to change case of text, or to enable or disable predictive text input.
*/+	* key: Press the * key to enter special characters (for example, punctuation) or access special characters menu.




• MAKE AND ANSWER CALLS



















Use the following table as a quick reference for making and answering calls.






Task	Instructions
Make a call	<ol style="list-style-type: none"> 1 Fully extend the whip antenna when placing or receiving calls. Enter the number using the keypad (include area code as needed). 2 Press the Send key. 3 Hold the phone as you would any other telephone, with the ear piece over your ear and the microphone near your mouth.
Answer a call	When your phone rings, press the Send key.
End a call	Press the End key to terminate the active call.
Reject a call	Press the End key to silence the ring when you don't want to answer a call.
Keypad	To avoid accidental calls, press left soft key then * key to lock your keypad.
Unlock keypad	To unlock the keypad, press Menu then the * key.

• REVIEW PHONE SYMBOLS

The following is a collection of the various indicators and icons you may see on your phone.

Symbol	Description
	A call is in progress
	You have selected the Silent profile (silencing your phone's ringer, keypad tones, warning tones, etc.)
	Keypad is active

Symbol	Description
	You have one or more voice messages waiting
	You have one or more unread text messages waiting
	Digital service is available
	Letters you enter appear as uppercase (ALL CAPS)
	Letters you enter appear in lowercase
	Letters you enter appear in sentence case (first word in sentence capitalized) or title case (in phone book)
	Characters you enter appear as numbers
	Predictive text mode is active. Predictive text feature available for Calendar and for text messages
	Predictive text mode activated. Characters you enter appear in sentence case (only first word in sentence capitalized)
	Predictive text mode activated. Characters you enter appear as uppercase letters
	Predictive text mode activated. Characters you enter appear as lowercase letters
	Insert symbol mode, used to enter special characters such as punctuation marks
	The alarm clock is set
	Indicates that a reminder has expired
	Indicates you are roaming
	Indicates call over a secure connection
	Indicates that a headset is connected (either via the 2.5mm jack or to the enhancement connector located at the bottom of phone)
	Indicates phone is in handsfree car kit

Symbol	Description
	Indicates a connection to data network
	Indicates you have a minibrowser message
	Indicates TTY/TDD mode is active
	Indicates Emergency is selected, and the phone's location information is shared only during an emergency call to the official emergency number programmed into your phone.
	Indicates Share location is selected, the location information is shared with the network whenever the phone is powered on and activated.

• MEMORY USE

In your phone, **Calendar Notes** and **BREW applications** share a common pool of memory (storage capacity). When either of these features are used, there is less available memory for the other feature which is also dependent on shared memory. This is especially true with heavy use of some features. If your use of a feature takes all of the shared memory, your phone may display a message saying **Memory full**. To proceed, you would need to delete some of the information or entries from these features to make additional memory space available. See "Check memory status" on page 26, for more information.

For example, entering 250 calendar notes may consume significant shared memory. Consequently, if you attempt to download a BREW content into your phone, a message saying **Memory Full** may appear. To proceed, you would need to delete some of the items/information occupying the memory.

• VIEW HELP SYSTEM

Your phone provides brief descriptions of menu options. To view help texts:


- 1 Scroll to a menu or submenu option.
- 2 Wait about 15 seconds. A short message appears, describing the option and what it does.
- 3 Use the scroll up and scroll down keys as needed to scroll through the text.

Press **Menu 4-2-5** to turn the phone's help system on or off.

• BROWSE PHONE MENUS

Your phone's menu system displays choices you can make to change settings on your phone or gives you access to various phone features. Your phone has 10 menus, plus the phone book menu (**Contacts**). Each menu can contain several levels of submenus.

A **header line** appears at the top of your screen when in the phone book or while navigating the menus. The header line provides you with a reminder of the phone book entry you are working with, or serves as a reminder of the menu or submenu with which you are working.

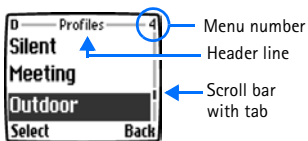

A **scroll bar** appears on the right side of the screen when you scroll through the main menu. A **tab** on the bar gives you a visual indication of your relative position in the menu structure.

The **menu number** is located at the top of the scroll bar.


Scroll through menus

- 1 At the start screen, press **Menu**, and scroll through the menus using the scroll up and scroll down keys.
- 2 Press **Options**, **Select**, or **OK**, pressing the soft key for the option you want.
- 3 Use scroll and soft keys to navigate menus; press the **End** key to return to start screen.

Use menu shortcuts

Menus and options are numbered so that you can jump directly to the option you use frequently. The numbers appear in the top right corner of the screen and show your location in the menu.

- 1 Press **Menu**.
- 2 Within three seconds, press **3-4-1** (**Profiles** > **Outdoor** > **Select**).

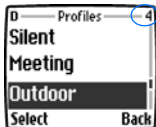

• PHONE BOOK MENU

From the start screen, press **Contacts**. The following phone book options are available:

Menu	Menu (cont'd.)
Search	Voice tags
Add new	Playback
Edit name	Change
Delete	Delete
One by one	Own number
Delete all	Caller groups
Add number	Family ^a
Options	Rename group
Scrolling view	Group ringing tone
Name list	Group logo
Name+number	Group members
Memory status	Remove name
1-touch dialing	Add name
View number	VIP
Change	Friends
Delete	Business
	Other

- a. Menu options for VIP, Friends, Business, and Other are identical to Family options.

4 Phone setup


Your sales package may include the FM stereo HS-2R headset for handsfree communications. You can make, answer, and end calls as usual with the FM stereo (HS-2R) headset connected. The headset fits into your ear and the microphone hangs at the side of your head. When using this headset you can speak at a normal volume.

Connect the headset

- 1 Plug the headset jack into the bottom of your phone.
- 2 Wrap the device around ear.

You can use the HS-2R button to answer or end a call, or activate voice dialing or voice commands.

You can also use the **Send** key to answer or the **End** key to end calls.

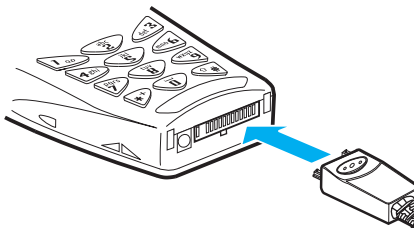

Adjust the volume

Adjustments to the ear piece volume can only be made during a call by pressing the scroll right key to increase volume or the scroll left key to decrease volume.

Adjust the brightness

You can make the screen brighter or darker by pressing **Menu 4-4-4**.

Press the scroll right key or the scroll left key to adjust the brightness. Press **OK** to confirm your changes.

5 Text entry



Warning: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.


You can enter letters, numbers, and special characters from the phone's keypad when you use the phone book, calendar, and text messaging or while you browse the Internet. There are two text entry methods: traditional text entry and predictive text input.

You have four modes available for entering information, based on the type of data you're entering (phone book, organizer notes or text messages):

Mode	The phone shows	Use for
ABC 	sentence or title case (first letter uppercase) all uppercase letters all lowercase letters	Entering contacts, numbers or addresses in phone book Entering notes in Calendar Writing a text message
123 	number entry	Entering numbers
Special characters 	special characters list	Entering punctuation or special characters
Predictive text 	in combination with ABC mode indicators	Writing SMS text messages or calendar notes


• WRITE WITH ABC AND 123 MODES


A status indicator in the upper left corner of your screen shows what mode you are using to enter information into your phone (phone book, calendar, or text messaging). The following table lists the characters you can use to enter text and numbers from your keypad:

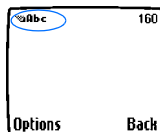

Key	Characters	Key	Characters
1	. @?!-,:&:'1	7	P Q R S 7
2	A B C 2	8	T U V 8
3	D E F 3	9	W X Y Z 9
4	G H I 4	0	Space, 0, return
5	J K L 5	*/+	Special characters menu
6	M N O 6	#	Changes letter case or mode.


Pressing a key repeatedly cycles you through all of that key's options. To enter a letter, press the appropriate key repeatedly until the desired letter appears. Continue this process until the word or name is completed.

 **Note:** If the next letter in the word you're entering is on the same key, wait two to three seconds for the cursor to advance, and enter the new letter, or press the **0** key to advance the cursor.

 **Important:** Your phone's language settings may affect the characters associated with your phone's keypad.

For example: to enter the name "Albert":

Press the two key	A
Press the five key three times	l
Press the two key two times	b
Press the three key two times	e
Press the seven key three times	r
Press the eight key	t

 **Note:** Default mode is sentence case where first letter of a name or sentence is automatically capitalized. Phone book default mode is title case where each word is capitalized.

OTHER OPTIONS

- **Delete mistakes**—If you make a mistake, press **Clear** to delete one character to the left. Press and hold the **Clear** key to speed up the erasing process.
- **Enter a space**—After you complete a word or name, press the **0** key to enter a space.
- **Change letter case**—Press the pound key to switch between the text entry modes or from uppercase and lowercase letters.
- **To start a new line**—Press the **0** key three times.

Enter numbers

Your phone automatically switches to 123 mode when entering a number into your phone book. When in ABC mode, you can insert numbers using any of the following methods:


- Press and hold the pound key for two seconds to switch to 123 mode, and press the desired number keys. Press and hold the pound key again to return to ABC mode.
- Press and hold the desired number key until the number appears on the display.
- Press the desired key repeatedly until the desired number appears.

Enter punctuation/other characters

You can enter punctuation, special characters, and symbols for text messages, notes, phone book entries, or Internet browsing.

You can add punctuation or special characters by these methods:

- Press the one key repeatedly in ABC mode to cycle through the most common punctuation marks and special characters.

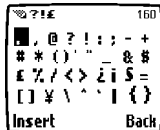

- Press the * key to display the characters and scroll to highlight the desired character, and press **Select**.



Important: Some networks may not support all language-dependent characters.

Use special characters in phone numbers

You can enter certain special characters in the phone numbers you save. Press the * key repeatedly to cycle through the four special characters available for phone numbers.


- * This character sends command strings to the network. Contact your service provider for more information.
- + This character is used to link a 1-touch dialing location to the number currently being entered.
- p This character creates a pause that occurs when the phone dials a number. Numbers entered to the right of this character are automatically sent as touch tones after a second pause.
- w This character causes the phone to wait for you to press **Send**.

• WRITE WITH PREDICTIVE TEXT

Predictive text input enters text quickly. Predictive text uses a highly compressed database (or dictionary) of common words and tries to anticipate the word you are entering.

Watching predictive text guess a word can be confusing, so you should disregard the screen until you enter all characters.

Example: To write "Nokia":

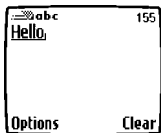


What you press	What you see
Press the six key - N	O
Press the six key - o	On
Press the five - k	Onl
Press the four key - i	Onli
Press the two key - a	Nokia

KEYS AND TOOLS FOR PREDICTIVE TEXT

Key	Description
2 – 9	Use for text entry. Press each key only once per letter. Press and hold the key to enter the number.
*/+	If the underlined word is not the word you intended, press this key repeatedly until the word you want appears. Press and hold this key to display a list of punctuation and special characters.
Spell	If the word entered isn't recognized, Spell appears above the left soft key. Press Spell , enter the desired word, and press Save .
Clear	Press once to delete the character to the left of the cursor. Press and hold to delete characters faster.
0	Press once to accept the word and add a space. Press and hold to enter a zero.
#	Press and hold to enter 123 mode. Enter the desired number, and press and hold again to return to predictive text.
1	Press once to add a period. Press 1 repeatedly to view other punctuation marks. Press once to add a punctuation mark that predictive text converts to an apostrophe. Press and hold to enter the numeral 1.
#	Press to switch between sentence case, lowercase, or uppercase modes or to switch to the above modes without predictive text.

Turn on predictive text input

You can turn on predictive text input from the **Options** menu while writing a text message. Once enabled, predictive text is available to all features that support it.

 in the screen's upper left corner indicates predictive text is active.

ENABLE PREDICTIVE TEXT (QUICK METHOD)

While creating a new text message or calendar note, press and hold the **Options** key for two seconds. The message **T9 prediction on** is displayed and the English language dictionary is enabled (or the most recently selected dictionary).

Turn off predictive text input

While creating a new text message, press and hold the **Options** key for two seconds, -OR-

- 1 Press **Options**, scroll to **Predictive text** and press **Select**.
- 2 Scroll to **Prediction off**, and press **Select**.

• TIPS FOR PREDICTIVE TEXT

Check a word

When you've finished writing a word and the word is correct as shown:

- Press the **0** key to confirm the word and enter a space. Continue with the next word. -OR-
- Insert a punctuation mark, and press the **0** key for a new sentence.

If the displayed word is not correct:

- Press the ***** key repeatedly until the correct word appears, and press the **0** key to confirm your choice and continue. -OR-
- Press **Options**, scroll to **Matches**, and press **Select**. Scroll to the correct word and press **Use**.
- Press the **0** key to confirm the word and enter a space.



Tip: When you enter punctuation at the end of a sentence, the phone switches to sentence case. The first letter of the next word automatically appears in uppercase.

ADD TO THE DICTIONARY

When your word is not in the dictionary, the left soft key becomes **Spell**.

- 1 Select **Spell** and enter the word using standard text entry.
- 2 Press **Save** to insert the correct word (and to save it to the dictionary).

INSERT NUMBERS AND SYMBOLS

The procedure for entering numbers with predictive text and standard text entry is the same. Please see "Enter numbers" on page 18.

The procedure for entering symbols with predictive text and standard text entry is the same. Please see "Enter punctuation/other characters" on page 18.

WRITE COMPOUND WORDS

- 1 Write the first part of the compound word, and press the scroll down key to accept that part.
- 2 Write the last part of the compound word. Press the **0** key to enter the word.

6 Contacts (Phone book)

You can save up to 500 entries (contacts and associated numbers) in your phone book. The phone's memory is capable of storing multiple numbers for each name (home, business, mobile, etc.), as well as text information (postal address, e-mail address, or note).





Note: The amount of detail stored for each entry may affect the total number of entries available.

• SAVE CONTACTS AND NUMBERS

To save contacts and numbers in your phone book. Follow these steps:

SAVE A NUMBER AND NAME (USING PHONE BOOK MENU)

- 1 Press **Contacts**.
- 2 Scroll to **Add new** and press **Select**.
- 3 Enter the name and press **OK**.
- 4 Enter the area code and phone number, and press **OK**.

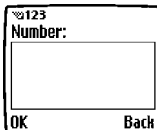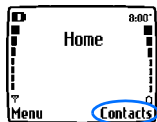

• RECALL CONTACTS AND NUMBERS

There are several ways to recall phone book entries. Once you locate the desired name and number from the phone book, you can perform any of the following tasks: call the number, edit or add information to the selected phone book entry, or delete the entry.

From the start screen, recall a phone book entry as follows:

- Press the scroll up or scroll down keys to display the phone book entries. Press repeatedly to scroll through the list of contacts.



Tip: When viewing the list of contacts, enter the first few letters of the desired entry. The phone book automatically jumps to that section of the phone book.

- Press **Contacts**, select **Search**, enter the first few letters of the entry, and press **Search**.

• USE PHONE BOOK MENUS

The phone book has several menu options from which you can choose. These options appear when you press **Contacts**. Use the scroll keys to move to the option you want to use.

Option	Description of function
Search	Allows you to search for a specific phone book entry
Add new	Allows you to add a new contact to your phone book
Edit name	Allows you to edit the name of a phone book entry
Delete	Allows you to delete phone book entries one by one or all at once
Add number	Allows you to add a phone number to an existing contact

Option	Description of function
Options	Displays a list of phone book options, including phone book memory status and scrolling view.
1-touch dialing	Allows you to assign phone book entries to any of the 8 speed dialing locations
Voice tags	Allows you to create and manage voice tags for voice dialing
Own number	Displays your phone number(s)
Caller groups	Allows you to organize phone book entries into groups and categories and assign special ringing tones and graphics to the group

Displaying the phone book

Your phone book's information can be displayed in two different ways:

- **Name list**—Entries displayed as a list of contacts.
- **Name+number**—Name and default number displayed.

When viewing the phone book, use the scroll up or scroll down to move through the phone book entries.

Change phone book view

- 1 Press **Contacts**, scroll to **Options**, and press **Select**.
- 2 Select **Scrolling view**, and scroll to the view option you want.
- 3 Press **OK** to confirm your choice.

• EDIT A NAME OR NUMBER

You can edit a phone book entry at any time.

- 1 Locate the phone book entry you wish to edit.
- 2 Press **Details**, and press **Options**.
- 3 Scroll to **Edit name** or **Edit number** and press **Select**.
- 4 Edit the name or number, and press **OK**.

• ADD A NUMBER TO A PHONE BOOK ENTRY

There are several ways to add additional numbers to an existing phone book entry. Your phone's memory book can store up to five numbers per entry.

Once you choose to add a number, you can assign one of the following **number types** for the additional numbers: **General**, **Mobile**, **Home**, **Work**, or **Fax**.

From the phone book

- 1 Press **Contacts**, scroll to **Add number**, and press **Select**.
- 2 Scroll to the entry you wish to modify, and press **Add no.**

- 3 Scroll to the category (**General, Mobile, Home, Work, or Fax**), and press **Select**.
- 4 Enter the number and press **OK**.

From the start screen

- 1 Enter the phone number using the keypad, and press **Options**.
- 2 Scroll to **Add to contact**, and press **Select**.
- 3 Scroll to the desired phone book entry, and press **Add**.
- 4 Scroll to the desired number type and press **Select**.

By recalling the name

- 1 Locate the phone book entry you wish to edit.
- 2 Press **Details**, and press **Options** again.
- 3 Scroll to **Add number**, and press **Select**.
- 4 Scroll to the desired number type and press **Select**.
- 5 Enter the number and press **OK**.

Change the number type

When you create a new phone book entry, your phone automatically assigns the **General** number type to the new number. You can use the **Options** menu to change the number type.

- 1 Recall the name from the phone book.
- 2 Press **Details**, and scroll to highlight the number you want to modify.
- 3 Press **Options**, scroll to **Change type**, and press **Select**.
- 4 Scroll to the number type you would like, and press **Select**.



Important: If you plan on using Nokia PC Suite to synchronize your phone book and your PC's PIM (Personal Information Manager) application, make sure all phone numbers are assigned the correct number type. PC Sync uses this information to synchronize contacts correctly between phone and PC.

Learn about primary number

If a phone book entry contains multiple numbers, the number entered when the phone book entry was created is designated as the **primary number**. When you highlight a phone book entry and press the **Send** key, your phone dials the primary number.

Consider designating the number you dial most often (for phone book entries containing multiple numbers per name) as the primary number.

CHANGE PRIMARY NUMBER

Any phone number can be designated the primary number.

- 1 Recall the phone book entry you want to modify.
- 2 Press **Details**, and scroll to the number you want to set as the primary number.
- 3 Press **Options**, scroll to **As primary no.**, and press **Select**.

• DELETE STORED CONTACTS AND NUMBERS

You can delete a number from a phone book entry, delete all details of a contact, or delete the entire contents of your phone book. Once you delete information, it cannot be recovered.

DELETE A NUMBER

- 1 Recall the phone book entry you want to modify.
- 2 Press **Details**, and scroll to the number you want to delete.
- 3 Press **Options**, scroll to **Delete number**, and press **Select**, and **OK**.

DELETE ENTIRE PHONE BOOK ENTRY

- 1 Highlight the phone book entry you want to delete, and press **Details**.
- 2 Press **Options**. Scroll to **Delete**, and press **Select**.
- 3 Press **OK** to delete the phone book entry (including all details).

DELETE THE ENTIRE PHONE BOOK

- 1 Press **Contacts**, scroll to **Delete**, and press **Select**.
- 2 Scroll to **Delete all** and press **Select**.
- 3 When you see the message **Are you sure?**, press **OK**.
- 4 Enter your security code, and press **OK**. For more information on the security code, see "Security code" on page 58.

• ADD OTHER INFORMATION TO A PHONE BOOK ENTRY

Once you have created a contact, you can add an e-mail address, a mailing address, or a note to that contact.



Note: Text information can only be added to existing contacts. For example, you cannot create a new contact with only an e-mail address.

- 1 Recall the phone book entry you want to modify.
- 2 Press **Details**, and press **Options** again.
- 3 Scroll to **Add details**, and press **Select**.
- 4 Scroll to the type of information you are adding (**E-mail**, **Street addr.**, etc.), and press **Select**.
- 5 Enter the information, and press **OK**.
- 6 Press the **End** key to return to the start screen.

• USE CALLER GROUPS

You can group phone book entries with similar attributes into *caller groups*: **Family**, **VIP**, **Friends**, **Business**, and **Other**. Each group has two user-defined attributes: *Group Name* and *Group Tone*.


Assign phone number to a caller group

- 1 Recall the desired phone book entry, and press **Details**.
- 2 Scroll to the desired phone number, and press **Options**.
- 3 Scroll to **Caller groups**, and press **Select**.
- 4 Scroll to the desired caller group (for example **Family**), and press **Select**.

Edit caller group options

You can edit various aspects of a caller group.

SETTING A RINGING TONE AND GRAPHIC FOR A CALLER GROUP

- 1 Press **Contacts**.
 - 2 Scroll to **Caller groups** and press **Select**.
 - 3 Scroll to one of the **caller groups** and press **Select**.
 - 4 Scroll to one of the following functions and press **Select**.
 - **Rename group**—Enter the new name for the caller group and press **OK**.
 - **Group ringing tone**—Scroll to the desired tone and press **OK**. **Default** is the tone selected for the currently selected profile.
 - **Group logo**—Choose to turn the group logo on or off for the selected caller group.
 - **Group members**—Press **Select** to view group members. To add or remove a member, press **Options**, and select **Add name** or **Remove name**.
-  **Note:** If you selected **Send graphic**, enter the recipient's phone number or recall it from phone book and press **OK**. Check with your service provider for availability of this feature.

• CHECK MEMORY STATUS

You can check the percentage of your phone's memory which is dedicated to the phone book, that is in use and the percentage that remains available.

- 1 Press **Contacts**.
- 2 Scroll to **Settings**, and press **Select**.
- 3 Scroll to **Memory status** and press **Select**.

7 Call log



Warning: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Your phone keeps a log (record) of call-related information including phone numbers and call times.



Before your phone can log missed or received calls properly:

- 1 You must have a subscription to caller ID service from your service provider.
- 2 Your phone must be turned on and in a digital service area.
- 3 The caller did not choose to block his/her caller ID.
- 4 Your phone's time and date must be set.



Note: If the incoming call has caller ID blocked, the number cannot be recorded in the call log. If you try to view the call log, the message **No new numbers** is displayed.

• CHECK MISSED, RECEIVED, OR DIALED CALLS

Your phone records information about the 60 most recently missed, received, and dialed calls (20 entries for each type of call). To view call log entries:

- 1 Press **Menu 2 (Call log)**, and scroll to the desired call type (**Missed calls**, **Received calls**, or **Dialed numbers**), and press **Select**.
- 2 Use the scroll up and scroll down keys to view the missed, received, or dialed calls. Scroll to the desired entry, and press **Options**.



Note: If the phone number recorded by the call log matches a number stored in your phone book, the name of the phone book entry is displayed.

View call log options

The table below contains a list of options available for all call log entries.

Option	Description
Call time	Shows the time when the call was missed, received or placed
Send message	Allows you to write and send a text message to numbers listed in the call log
View number	Displays the phone number when call log entry matches a number found in your phone book
Use number	Allows you to edit the number shown on the screen
Save	Saves the number in your phone book
Add to name	Adds the number to an existing phone book entry
Delete	Removes the number from the call log
Call	Redials the displayed number

Use call log shortcuts

MISSED CALLS

When you miss calls, the message **Missed calls** appears on the screen along with the number of calls missed.



Important: You are notified of missed calls only if your phone was turned on and you are in a digital service area.



Note: If you chose the **Forward if not answered** option in **Call Forwarding**, your phone treats these forwarded calls as missed calls.

DIALED NUMBERS

You can view the list of dialed calls without having to access the **Call log** menu. From the start screen:

- 1 Press the **Send** key to display the most recently dialed call.
- 2 Use the scroll up or the scroll down keys to view the other call log entries.
- 3 Press the **Send** key again to redial the number or press **Options** to work with the selected call log entry.

• DELETE RECENT CALL LISTS

Your phone's **Call log** uses **call lists** to store numbers of incoming, outgoing, and missed calls. Use the **Delete recent call lists** menu to delete the log of phone numbers dialed, received, or missed.

The **All** option clears all numbers in all lists, whereas the other options clear only the numbers associated with that list.



Caution: This operation cannot be undone. Clearing the **Dialed numbers** call list clears the list of dialed calls accessed by pressing the **Send** key.

- 1 Press **Menu 2-4 (Call log > Delete recent call lists)**.
- 2 Use the scroll up or the scroll down keys to highlight the desired option: **All**, **Missed**, **Dialed** or **Received**.
- 3 Press **Select** to confirm your selection.

• USE CALL TIMERS

Your phone uses **call timers** to track the amount of time you spend on each call. You can review phone use by checking the phone's call timers.



Important: The actual time invoiced for calls by your service provider may vary, depending upon network features, rounding-off for billing, and so forth.

ACCESS THE VARIOUS CALL TIMERS:

- 1 Press **Menu 2-5 (Call log > Call timers)**.
- 2 Use the scroll up or the scroll down keys to move through these options:

Option	Description
Duration of last call	Displays elapsed time of the last call you made
Duration of received calls	Displays total time for all incoming calls

Option	Description
Duration of dialed calls	Displays total time for all outgoing calls
Duration of all calls	Displays sum total for all incoming and outgoing calls
Life timer	Shows the time used for all calls for the life of the phone. This option cannot be reset.
Clear timers	Clears (deletes) all call timers except Life timer

• TURN ON A CURRENT CALL TIMER

Your phone can display a call timer showing elapsed time of the current call. When the call is completed, the timer displays the call length.

- 1 Press **Menu 2-5-1-1** (**Call log > Call timers > Duration of last call > Show call time on display**).
- 2 Scroll to **On** and press **OK**.

After a call ends, press any key to clear the current call time.

• CLEAR CALL TIMERS

- 1 Press **Menu 2-5-6** (**Call log > Call timers > Clear timers**).
- The **Lock code** field appears.
- 2 Enter your lock code and press **OK**.



Caution: This action cannot be undone.



Tip: If you use call timers to log the time spent on calls, record the information from call timers before you clear them.

• DATA TIMERS (DATA/FAX AND MINIBROWSER)

The call log records and displays the length of digital data/fax calls, as well as meters the amount of data transferred during data/fax calls. The call log also records this same information when you use the Minibrowser to access the wireless Internet.

Access data-related call timer

- Access data/fax call timers: Press **Menu 2-6** (**Call log > Data/fax calls**)
- Access minibrowser call timers: Press **Menu 2-7** (**Call log > Minibrowser calls**)

Data-related call timer options

The following call timer options are available for data/fax and browser calls:

- **Last sent (or received) data/fax**—amount of data displayed in kilobytes (KB)
- **All sent (or received) data/fax**—amount of data displayed in KB
- **Duration of last data/fax call**—length of time spent on last data call or browser session.
- **Duration of all data/fax calls**—running total of all calls.
- **Clear all data/fax logs**—clears all timers and data logs.

Minibrowser timer options

The available options for the minibrowser call timers are similar to those listed above for data/fax calls.

8 Voice mailbox



Warning: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Voice mail is a feature that enables those who call you to leave a voice message, in the event you are unable to answer your phone. Using your phone in conjunction with your service provider's voice mail system, you can retrieve your messages at any time.



Note: Check with your local service provider to subscribe to and use this feature.



• STORE YOUR VOICE MAILBOX NUMBER

Before you can retrieve any voice messages, you need to store your voice mailbox number in your phone:

- 1 Press **Menu 01-2-3 (Messages > Voice messages > Voice mailbox number)**.
- 2 Enter your voice mailbox phone number, and press **OK**.

Your voice mailbox number can be up to 32 digits long.



Note: If your phone number changes, you may need to re-enter your voice mailbox number.



Tip: You can store your voice mailbox password and/or PIN number as a part of your voice mailbox number. For more information, please see "Save touch tones as a phone book entry" on page 55.

• SET GREETINGS

Voice greetings may vary in different wireless systems. If you need information about how to record your greeting, contact your service provider.

• LISTEN TO YOUR VOICE MESSAGES



Note: The way you retrieve your voice messages varies, depending on your service provider. Call your service provider if you have any questions.

LISTEN TO MESSAGES WHEN NOTIFIED

If your phone plays an alert tone and **New voice message** is displayed, press **Listen** and follow the prompts. If you'd rather listen to your messages later, press **Exit**.

LISTEN TO MESSAGES LATER

- From the start screen, press and hold the one key for two seconds.

-OR-

- Press **Menu 01-2-1 (Messages > Voice messages > Listen to voice messages)**.

The message **Calling voice mailbox** appears on the screen. Follow the audio prompts from the voice mail system to review your messages.

9 Text messages



Warning: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

You can use the **Messages** menu (Menu 1) and Short Message Service (SMS) to read, write and send text messages to another phone in your network. You may also be able to use the Minibrowser's e-mail feature to send text messages to phones in other networks.



Important: When sending SMS messages, your phone may display the words **Message Sent** (where service is available). This is an indication that the message has been sent by your phone to the SMS network. This is not an indication that the message has been received at the intended destination. For more details about SMS services, check with your service provider.



Note: This function can be used only if it is supported by your network operator or service provider. Only devices that offer compatible e-mail features can receive and display messages. It may require a separate subscription.

• WRITE A TEXT MESSAGE

You can use the **Messages** menu to create and send text messages to another mobile phone in your network, to another mobile phone in another network, or to an e-mail recipient. You can also save a draft of your message in the **Outbox** folder for later use.

Create and send a text message



Important: Use this method when sending a message to recipients in the same wireless network. If the recipient has a different service provider, you may need to send the message as an e-mail (see "Create and send an e-mail message" on page 34).

- 1 From the start screen, press **Menu**, and select **Messages**.
- 2 Select **Text messages**, and select **Create message**.
- 3 Select either **Text** (up to 912 characters) or **Numeric page** (phone number only).



Note: The ability to send a numerical page may be dependent on your wireless network. Please contact your service provider for more information on text messaging in your area.

- 4 Scroll to **Add number**, and press **Select**.
- 5 Enter the phone number of the recipient, and press **OK**.
OR
Press **Search**, highlight the desired number stored in your phone book, and press **Select**.
- 6 Press **Options**, scroll to **Enter text**, and press **Select**.
- 7 Enter your message.

A character counter appears in the upper right-hand corner of the display. This phone supports 912 character SMS messages.

- 8 To send the message, press **Options**, and select **Send**.

USE OTHER OPTIONS

You may use the following as a shortcut for sending a new text message:

- 1 Enter the recipient's phone number, and press **Options**.
- 2 Scroll to Send message, and press **Select**. Continue the creation process as described above.

View message options

The table below lists several options available while creating a text message. To view these options, press **Options** at the text entry screen.

Option	Description
Send	Sends the current text message to the recipient(s)
List recipients	Allows to you add or remove recipients to the message
Settings	Allows you to mark a message as urgent, to request a delivery receipt or to specify a callback number
Save message	Saves the current message to the desired folder
Clear screen	Clears the screen of all text and characters
Exit editor	Used to return to the Messages menu
Insert contact	Used to insert a phone book entry into the text message
Insert number	Used to insert a phone book number into the text message
Use template	Adds text from a template to the current message
Add-ins	Add sounds, pictures or animations to a message
Styles	Change the font type, font size and alignment of message text
Predictive text	Allows you to enable or disable predictive text entry. Also used to select language of dictionary used
Matches	Displays a list of other options for the word currently displayed by predictive text

Use enhanced messaging options to create and send messages

Enhanced messaging functions in the same manner as text messaging, but it offers additional options for the style and content of text messages.



Note: Enhanced messaging services are not supported by all networks or providers. The ability to send or receive an enhanced message is network dependent. Check with your local service provider for more information on these options.

ADD SOUNDS, ANIMATIONS OR PICTURES TO A MESSAGE

- 1 Create a new text message as described in steps 1-5 in the section, "Create and send a text message" on page 31.
- 2 Press **Options**.
- 3 Select **Add-ins**.
- 4 Select **Sound, Animation** or **Picture**.

You can select from ten different sounds, 15 different animations and eight different pictures. These items can be added to your text message. You can attach multiple items to an outgoing text message.

CHANGE THE FONT STYLE OF A MESSAGE

- 1 Create a new text message as described in steps 1-5 in the section, "Create and send a text message" on page 31.
- 2 Press **Options**.
- 3 Select **Styles**.
- 4 Select **Font type, Font size** or **Text alignment**.
- 5 Scroll to the option you would like to apply to the text message and press **Select**.



Note: You can apply multiple options to each message you create.

• USE MESSAGE TEMPLATES

Templates are short, prewritten messages which can be inserted into new text messages.

- 1 Create a new text message as described in steps 1-6 in the section, "Create and send a text message" on page 31.
- 2 To use a template, press **Options**, scroll to **Use template**, and press **Select**.
- 3 Scroll to one of the available templates:

"Please call"	"I am late. I will be there at"
"I'm at home. Please call"	"See you in"
"I'm at work. Please call"	"See you at"
"I'm in a meeting, call me later at"	"Sorry, I can't help you on this."
"Meeting is canceled."	"I will be arriving at"

- 4 Press **Select** to enter the text into your new message.
- 5 Complete the process described earlier to send your message.

You can also create a new message while browsing the Templates folder.

- 1 Press **Menu 01-1-5 (Messages > Text messages > Templates)**.
- 2 Scroll to the desired template, and press **Select**.
- 3 Press **Options**, and select **Edit** to modify the message or **Use number** to select a recipient.
- 4 From the message options list, select **Send** to send your message.

• LEARN ABOUT E-MAIL TEXT MESSAGES

You can also use the Messages menu to write and send text messages to a person's Internet or corporate e-mail account or to phones in other networks. If the phone displays **Cannot Send to e-mail recipients**, your message will not be delivered to computer e-mail addresses, but it will be delivered to compatible phones that can receive e-mails.

Create and send an e-mail message

Use the same procedure for creating and sending e-mail messages as found in the section, "Write a text message" on page 31. However, select **Add e-mail**, and enter the e-mail address (or press **Search** and recall an e-mail address stored in your phone book).

Messages to phones in other networks

Most service providers can route e-mail messages to your phone (appearing as text messages). The following show examples of how your phone's e-mail address may appear:

```
2135551234@myserviceprovider.com
username@serviceprovider.com
2135551234@mobile.myserviceprovider.com
```


Sending messages outside your service provider's network with traditional text messaging can be difficult. However, you can send a text message as an e-mail to phones outside your service provider's network (the recipient's phone must be able to receive e-mail text messages).

Follow the instructions, "Write a text message" on page 31 but select **Add e-mail**. Enter the e-mail address associated with the recipient's phone number (or press **Search** and recall the e-mail address stored in your phone book).



Important: This feature may require subscription to special services. Check with your service provider for information and for your phone's e-mail address.

• RECEIVE TEXT MESSAGES



When you receive a text message, the  indicator and the text: **(#) Message(s) received** appears on the screen (where # is the number of new messages received).

- 1 Press **Show** to read the message or press **Exit** to view it later.
- 2 While reading the message, press **Options** to view the list of message options, and press **Select** to choose the desired option.

READ MESSAGES LATER

- 1 Press **Menu**, and select the **Messages** menu, and **Text messages**.
- 2 Scroll to **Inbox**, and press **Select**.
- 3 Scroll to the desired message, and press **Select** to read the message.



Note: The  icon in front of the message header indicates the message has not been read.  in front of the message header indicates you have already viewed the message.

- **RESPOND TO A TEXT MESSAGE**

You have several options when reading a text message. Press **Options** to display the choices:

Option	Description
Message details	Gives information about the message, such as date, time and sender's phone number
Delete	Deletes the current message
Reply	Allows you to reply to the current message
Use number	Captures phone number in the message (or from the message sender) with the option to Save (as new phone book entry), Add to name , Send message , or Call
Save	Saves current message to Archives folder
Forward	Use to forward current message to another user
Rename	Used to rename existing message title as seen in the message list
Use Web link	Captures the URL in the message and allows you to go directly to that site (via the Minibrowser) or to save it as a bookmark
Save address	Captures an e-mail address (or the sender of an e-mail text message)



Note: Some options may not be visible. For example, **Use Web link** appears only when a URL is in the SMS message.

- **REPLY TO A MESSAGE**

You can reply to a text message by a traditional text message or by an e-mail message. The message origin or the sender's wireless network affects how you reply to the message.

Replying via SMS

- 1 While viewing a message, press **Options**.
- 2 Scroll to **Reply** and press **Select**.

- 3 Scroll to one of the following reply types and press **Select**:
 - **Empty screen**—gives you an empty text buffer
 - **Original text**—includes original message in the reply message
 - **Template**—allows you to select a template from the **Templates** folder
 - **Standard answer templates** (including: **See you in**, **See you at**, **Sorry, I can't help you on this.**, **I will be arriving at**, **Please call**, **I'm at home**, **I'm at work**, **I'm in a meeting**).
- 4 After you write your reply, press **Options**, and select **Send**.

A copy of all sent messages (up to the memory limit) remain in your Outbox, unless you turn this feature off in **Message settings**.

Press **Back** to return to the Messages menu, or press the **End** key to return to the start screen.

Replying to an e-mail message

Use the methods described above for replying to SMS messages sent from an e-mail address.



Note: If the incoming e-mail message is improperly formatted, you may be required to re-enter the e-mail address by pressing **Options**, and then selecting **Add e-mail**.

• DELETE MESSAGES

You can erase individual messages or the contents of a folder. You can delete older or unwanted messages to free up memory for new messages.

The **Messages** menu has these delete options:

- **All read**—deletes all read messages from all folders (unread messages in **Inbox** remain intact)
- **Inbox**—deletes read messages in this folder (unread messages remain intact)
- **Outbox**—deletes all messages in this folder
- **Archive**—deletes all messages in this folder

Erasing messages in the message folders

- 1 At the start screen, press **Menu 01-1-7 (Messages > Text messages > Delete messages)**.
- 2 Highlight the folder whose contents you want deleted and press **OK**.
- 3 Enter your security code (if prompted) and press **OK**. For more information on security code, see "Security code" on page 58.

Erasing individual text messages

- 1 From the **Inbox**, **Outbox**, or **Archive** folder, highlight the message you wish to delete.
- 2 Press **Options**, scroll to **Delete** and press **Select**.
- 3 Press **OK** to confirm your choice.

Forward a message

You can forward any incoming text messages, whether they were sent as traditional text messages or as e-mail messages. You can forward a message to a single user or to a list of users.



Tip: When forwarding a message to multiple users, your recipient list can contain both phone numbers and e-mail addresses.

- 1 While viewing a message, press **Options**.
- 2 Scroll to **Forward** and press **Select**.
- 3 Select **Add e-mail** or **Add number**, and address the message.

For multiple recipients, press **Options** again, and add e-mail addresses or phone numbers.

- 4 Press **Options**, scroll to **Send**, and press **Select**.

To edit the forwarded message, select **Edit text** from the options menu before sending the message.

View a message's settings

You can assign the following settings from the message's **Options** menu:

- **Urgent**—sends the message marked *urgent* and appears in recipient's **Inbox** with higher priority than other messages
- **Deliv. note**—lets you know when your message has been delivered
- **Callback no.**—includes your number (or a number you enter or recall from the phone book) in the body of the message


ASSIGN MESSAGE OPTIONS

- 1 After entering text, press **Options**. Scroll to **Settings** and press **Select**.
- 2 Scroll to the desired setting, and press **Mark**.
- 3 Press **Done**, and press **Yes** to save changes to your message.
- 4 Scroll to **Send**, and press **Select** (or select a different menu option).

Learn about message memory

Messages are stored in the following locations:

- **Inbox**—stores new messages and read messages
- **Outbox**—saves copies of all sent messages or messages waiting to be sent (in the event the network is temporarily unavailable)
- **Archive**—used to file read messages and sent messages for long-term storage

A blinking  icon indicates the text message memory is full. You cannot receive, save, or send messages, until you delete older messages from your **Inbox**, **Outbox**, or **Archive**.

• MESSAGE SETTINGS

Specify several settings that affect the overall way your phone handles text messaging. Use (**Menu 01-1-8**) to configure the following:

- **Sending options**—used to specify normal or urgent priority, request delivery note, or specify

that a callback number be sent automatically.

- **Other settings**—used to specify the font size in which messages will be displayed. Also used to configure how your phone automatically handles incoming messages when your Inbox or Outbox are full, and saving copies of sent messages automatically. If the phone has Enhanced Messaging Services, and you can control the playback of sounds sent to your phone in messages.

• ORGANIZE TEXT MESSAGES USING FOLDERS

You have several options for storing and organizing your text messages. The following pages explain further about the various folder options.

- **Inbox**—Text messages you receive remain stored in your **Inbox** until you delete them or move them to the **Archive** folder.
- **Outbox**—Messages that can't be sent immediately can be saved so you can come back to it later. Your phone stores the message in the **Outbox**.

If you try to send a text message and the network is unavailable, the message is saved in the **Outbox**.

WORK WITH MESSAGES SAVED IN THE OUTBOX

- 1 From the **Text messages** menu, scroll to **Outbox** and press **Select**.
- 2 Scroll to the desired message, and press **Select**.
- 3 Press **Options**, and press **Resend** (or **Edit** if the message was a saved draft).

From this point, you have several options, including:

- Select **Edit message** and continue working with the message.
- Scroll to **Add e-mail**, **Add number**, or **Add list** to add additional recipients.
- Scroll to **Send**, and press **Select** to send the message.

10 Personalization



Warning: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

• LEARN ABOUT PROFILES



A **profile** refers to a group of settings you can use to customize the way your phone works. You can use existing profiles or you can customize a profile to suit your own preferences. You can customize: ringing options, vibrating alert, ringing tones, volume, keypad, screen saver, welcome note alert tones and warning tones.

Your phone has five profiles: **Normal** (default), **Silent**, **Meeting**, **Outdoor**, and **Pager**.

• SELECT A DIFFERENT PROFILE

QUICK METHOD

- 1 Press the power key briefly.
- 2 Use the scroll keys to highlight the profile you want to use, and press **OK** to select a profile.

USE PROFILES MENU

- 1 Press **Menu 3 (Profiles)**.
- 2 Scroll to the profile you want to use, and press **Select**.
- 3 Press **Select** again to choose the highlighted profile.

• CUSTOMIZE A PROFILE

- 1 Press **Menu 3 (Profiles)**.
- 2 Scroll to the profile you want to customize, and press **Select**.
- 3 Scroll to **Customize**, and press **Select**.




Set ringing options

You can choose how your phone rings to notify you of incoming calls. This setting does not affect text message alert tones.


- 1 From a profile's **Customize** menu, scroll to **Ring options**, and press **Select**.
- 2 Scroll to one of the ringing options described below, and press **Select**.


Option	Description
Ring	The phone rings normally.
Ascending	Ring volume begins softly, and increases in volume if the phone is not answered.
Ring once	The phone rings once to indicate an incoming call.

Option	Description
Beep once	The phone beeps once to indicate an incoming call.
Silent	The phone makes no sound.

 **Important:** The **Silent** or **Beep once** ringing option disables any melody you may choose. To hear a ringing tone while editing, make sure a different ringing option is selected.


Your phone can vibrate, indicating an incoming call (in addition to playing a ringing tone). Enabling a vibrating alert while selecting the Silent option causes your phone only to vibrate on incoming call.

 **Important:** The phone does not vibrate when connected to or placed in a charging device.

 **Important:** If you choose **Off**, no keypad tones are heard. The **Silent** profile automatically turns keypad tones off.

Set a ringing tone

A **ringing tone** is the melody your phone plays when you receive a call. You can set the ringing tone to a specific sound effect, or to a melody. Your phone has two types of ring tones. It can store MIDI tones and buzzer tones.

 **Important:** The **Silent** or **Beep once** ringing option disables any melody. To hear a ringing tone while editing, make sure one of the other ringing options is selected.

- 1 From a profile's **Customize** menu, scroll to **Ringing tone** and press **Select**.
- 2 Scroll through the options and listen until you hear a tone you want and press **Select**.

Set ringing volume

You can set the default ringing volume for incoming calls and alert tones.

- From a profile's **Customize** menu, scroll to **Ringing volume** and press **Select**.
- Scroll to an option and listen. When you hear the ringing volume you wish to use, press **Select**.

Wallpaper

You can set your phone to display a background picture (wallpaper) on the start screen. Wallpaper is only shown when the phone is in idle state. Some pictures are pre-saved in the graphics folder of the **Gallery** menu. You can also transfer images with from your PC and then save them in the **Gallery**. Your phone supports JPEG, GIF, TIFF, BMP, and PNG formats.

SELECT WALLPAPER

- 1 Press **Menu 4-4 (Settings > Display settings)**, and Select **Wallpaper**. After a brief pause, **On**, **Off**, and **Change image** appear in the display.
- 2 Select **Change image** from the list of options to activate wallpaper.
- 3 Use the scroll keys to browse the image gallery. When you arrive at the image of your choice, press **Options**, scroll to **Set as wallpaper**, and press **Select**.
- 4 If **Replace current wallpaper?** appears in the display, press **OK**. A message appears in the display confirming your selection.

ACTIVATE/DEACTIVATE WALLPAPER

- 1 Press **Menu 4-4 (Settings > Display settings)** and select **Wallpaper**. After a brief pause, **On, Off,** and **Change image** appear in the display.
- 2 Scroll to **On** or **Off** and press **Select**.

Color schemes

You can change the color of some display components in your phone, such as indicators and signal bars.

- 1 At the start screen, press **Menu 4-4-2 (Settings > Display settings > Color schemes)**. After a brief pause, a list of color schemes appear in the display.
- 2 Scroll to the color scheme of your choice and press **Select**. A message appears in the display confirming your selection.

• SCREEN SAVER

This option allows you to use as a screen saver when your phone is in the idle mode. The screen saver will be a digital clock which indicates the current time saved in your phone clock, and it is displayed on half of the screen.



Note: Your phone enters idle mode only when no activity is taking place.

Customize screen saver

The screen saver can be customized by adjusting the **Timeout** and **Maximum time** settings.



Tip: To minimize impact on battery performance, use longer Timeout settings and/or shorter Maximum time settings.

ADJUST TIMEOUT SETTINGS

The Timeout setting allows you to determine how long the phone must be in idle mode before the screen saver is activated. The default timeout setting for screen saver is 2 minutes.

To adjust this setting:

- 1 Press **Menu 4 (Settings)**.
- 2 Scroll to **Display settings** and press **Select**.
- 3 Scroll to **Screen saver timeout** and press **Select**.
- 4 Select **2 minutes, 5 minutes** and **Other**. The minimum value for **Other** is 5 seconds and the maximum value is 60 minutes.

• GALLERY

You can save pictures and ringing tones to folders in the gallery, or create folders of your own and save them there. You can also download images and tones.



Note: This feature uses shared memory. Please see "Check memory status" on page 26 for more information.



Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Open the Gallery

At the start screen, press **Menu 5 (Gallery)**. After a brief pause, the submenus in the following table appear in the display.

Option	Function
View folders	Explore the folders in the gallery menu. See "View folders" in the following section for more info
Add folder	Add a folder of your own
Delete folder	Delete a folder you've created
Rename folder	Rename a folder you've created

View folders


- 1 At the start screen, press **Menu > Gallery > View folders**, and then press **Select**. A list of folders appear in the display. If **View folders** does not appear, then proceed to the following step.
- 2 Scroll to a folder, such as **Graphics** or **Tones** and press **Open**.
- 3 Scroll through the list of graphics or tones, and press **Options**. Press **Select** to activate the option or to enter its submenu.

Option	Function
Open	Open the selected file; in the Tones folder, this option is named Play
Delete	Delete the selected file
Move	Move the file to another folder
Rename	Rename the selected file
Set as wallpaper/ Set as ring tone	Set the graphic as wallpaper. In the Tones folder, this option is Set as ringing tone ; the tone is applied to profile in use
Details	View details of the file, such as the name, time and date the file was created
Sort	Sort the files according to date, type, name, or size


● RENAME PROFILES

You can rename any profile except **Normal**. You may want to use your own name for a profile. When you select this profile, your name appears on the start screen.

- 1 Press **Menu 3 (Profiles)**.
- 2 Scroll to the desired profile and press **Select**.
- 3 Select **Customize**, scroll to **Profile name** and press **Select**.
- 4 Enter the new name and press **OK**.

 **Note:** You cannot rename the **Normal** profile.

Select and customize an enhancement profile

 **Note:** You must have an enhancement (such as a loopset) attached to your phone prior to selecting the **Enhancement settings** menu.

To select and customize profiles for use with the headset, handsfree device (car kit), loopset, and TTY/TDD:

- 1 Press **Menu 4-5 (Settings > Enhancement settings)**.
- 2 Scroll to one of the following Enhancement profiles and press **Select**: Handsfree, Headset, Loopset, or TTY/TDD.

HANDSFREE

For Handsfree, scroll to an option and press **Select** to enter the submenu and modify the settings.

- **Default profile**—Choose the profile to be activated automatically when your phone is connected to a car kit.
- **Automatic answer**—Calls are answered automatically after one ring when your phone is connected to a car kit. Scroll to **On** or **Off** and press **Select**.
- **Lights**—Choose to keep the phone lights always on or to shut off automatically after several seconds. Scroll to **On** or **Automatic** and press **Select**.

HEADSET

The **Default profile** and **Automatic answer** options are your available choices. Please refer to "Handsfree" for more information.

LOOPSET


The **Default profile** and **Automatic answer** options are available. Please refer to "Handsfree" for a description of these options. In addition, the following option is available:

Use loopset—Enable use of the LPS-4 mobile inductive loopset. Scroll to **Yes** or **No** and press **Select**.

TTY/TDD

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

Use TTY/TDD—Enable the use of a TTY/TDD device. Scroll to **Yes** or **No** and press **Select**.

 **Note:** If the loopset is enabled, you'll be asked to disable the loopset before enabling TTY/TDD. Press **Yes** to disable the loopset (thus enabling TTY/TDD). Press **No** to leave the loopset enabled.

• TIMED PROFILES

To activate a profile for a specific amount of time (up to 24 hours), you can utilize the **Timed** setting.

- 1 Press **Menu 3 (Profiles)** and scroll to the desired profile.
- 2 Scroll to **Timed** and press **Select**.

Set the expiration time (for example: 5:30 pm). When the timed profile expires, the previous profile is reactivated.

• SET THE DISPLAY LANGUAGE

You can set your phone to display these languages: English, Spanish or Portuguese.

- 1 Press **Menu 4-2-1** (**Settings > Phone settings > Language**).
- 2 Scroll to the language you want to use and press **Select**.

• SET THE CLOCK

Your phone contains a real-time clock that can be set two different ways: the clock can use the time and date information provided by the wireless system or the time can be set manually.

The clock will display the current time and date on the start screen. You can also choose to hide the clock if you prefer. Please see "Displaying or hiding the clock" on page 45.



Note: Your phone has an alarm clock. For more information, see "Use the alarm clock" on page 64.

Manually setting the clock

- 1 Press **Menu 4-3-1** (**Settings > Time settings > Clock**).
- 2 Scroll to **Set the time**, and press **Select**.
- 3 Enter the current time, and press **Select**. For example, to enter 7:30, enter 0730.
- 4 Scroll to **am** or **pm**, and press **Select**.

Selecting time format

- 1 Press **Menu 4-3-1** (**Settings > Time settings > Clock**).
- 2 Scroll to **Time format**, and press **Select**.
- 3 Scroll to either **24-hour** or **am/pm**, and press **Select**.

Allowing the network to set the clock

- 1 Press **Menu 4-3-3** (**Settings > Time settings > Auto update of date and time**).
- 2 Scroll to **On** (or **Confirm first**), and press **Select**.




Important: If you use the **Auto update of date and time** option while outside your digital network, you may be prompted to enter time manually (see above). Network time will replace the time and date when you re-enter your digital network.



Note: If your battery has been removed or has drained outside the digital network, you may be prompted to enter your own time (once the battery is replaced/recharged, and you're still outside of the digital network).

Displaying or hiding the clock

- 1 Press **Menu 4-3-1** (**Settings > Time settings > Clock**).
- 2 Depending on the current settings, either **Hide clock** or **Show clock** is highlighted.
- 3 Press **Select**.

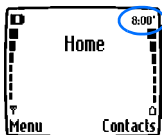

CUSTOMIZE THE WELCOME SCREEN

You can set your phone to display a brief message each time you switch on your phone. The message can include your name or a reminder and can be up to 44 characters long.

Create a startup message

- 1 Press **Menu 4-2-3** (**Settings > Phone settings > Welcome note**).
- 2 Enter the text of the startup message (using traditional text entry).
- 3 Press **Options**, and select **Save**.




LEARN ABOUT VOICE COMMANDS

The voice command feature provides handsfree operation of certain menu options and commands. Just like voice dialing, you must create a voice "tag" for the commands you want to use (please read "Assign a voice tag to a phone number" on page 52 for detailed information on voice tags).


The following is a list of menu options for use with voice commands:

Option	Description
Profiles	Used to switch between the available profiles (Normal, Silent, Meeting, Outdoor, and Pager)
Voice mailbox	Used to access your voice messages
Recorder	Used to start recording a memo
Call log	Used to access the Call log menu

Create a voice tag for a menu option

 **Important:** Please see "Important notes about voice tags" on page 52 for more information on creating voice tags.

- 1 Press **Menu 7-2** (**Voice > Voice commands**).
- 2 Scroll to the menu option you wish to tag, and press **Select**.
- 3 Press **Options**, and select **Add command**.
- 4 Press **Start**. After the tone sounds, speak the voice tag clearly into the microphone.

The phone replays then saves the recorded tag. The  icon appears next to commands which have voice tags assigned.

Use a voice command



Warning: Do not use voice command in an emergency situation. In emergencies, stress causes changes in your voice, which may keep the phone from recognizing your voice command.

- 1 At the start screen, press and hold **Contacts** for one to two seconds. A tone is heard and **Please speak now** is displayed.
- 2 After the tone, clearly speak the voice tag that you recorded previously into the microphone.

The only other option for initiating a voice command is to press the headset button momentarily at the start screen. The alert tones play through the headset.

Speak the voice tag into the headset microphone. The voice tag will playback through the headset to confirm your choice.

Work with voice tags

You can listen to an existing voice tag, rerecord a voice tag, or delete an existing tag.

- 1 Press **Menu 7-2 (Voice > Voice commands)**.
- 2 Scroll to the menu option you wish to tag, and press **Select**.
- 3 Press **Options**, scroll to either **Playback**, **Change**, or **Delete**, and press **Select**.



Note: If you chose **Change**, press **Start** to record again. The new tag replaces the old.

11 Advanced features



Warning: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



Note: Some in-call options are network services features. Please contact your service provider for information and availability.

This chapter describes advanced calling features such as conference calling, call waiting, and calling cards. Not all the features described here are available in all wireless network systems.

• VIEW IN-CALL OPTIONS

You can use certain features during a call. These **in-call options** cannot be used at all times.

- 1 To access an option during a call, press **Options**.
- 2 Scroll to one of the following options, and press **Select**:

Option	Description
Mute/End mute	Used to disable or enable the microphone. If mute is selected, End mute is displayed. These options affect any enhancements connected to the phone (headset, car kit).
New call	Used to initiate a new call while in a call (call-waiting and three-way calling).
End all calls	Used to end all active calls (call-waiting or three-way calling).
Touch tones	Used to enter a touch tone string (series of tones) manually or search for a string.
Contacts	Used to view phone book. Press Back to close phone book and return to call.
Menu	Used to display main menu.

• USE CALL FORWARDING

When you use **call forwarding**, your network redirects incoming calls to another phone number. Using this feature helps to prevent missing important phone calls.



Important: Call forwarding is a network-dependent feature and may not work the same in all networks. Contact your service provider for availability and for your network's feature codes.

Learn about call forwarding feature codes

Your network requires separate codes to activate and cancel various types of call forwarding. Your service provider can give you the feature codes for these network services.

When you store the codes in your phone, they are sent automatically to the network when you select a call forwarding option. Your phone can store the following type of feature code:

Feature code type	Description
Forward all calls	Forwards all incoming calls to the number you specify
Forward if busy	Forward incoming calls when you're in a call
Forward if not answered	Forwards incoming calls to another number when you are unable to answer
Forward if out of reach	Forwards incoming calls to another number when you're out of the network or when the phone is switched off
Forward all data calls	Forwards all incoming data calls to the number you specify
Cancel all call forwarding	Cancels any and all call forwarding options you may have set

Store a feature code

- 1 Press **Menu 4-7-5 (Settings > Network services > Network feature setting)**. The **Feature code** field appears after a few seconds.
- 2 Enter the feature code your service provider gave you (example *90 for activating **Forward if busy**), and press **OK**.
- 3 Press **Select** when **Call forwarding** is displayed.
- 4 Scroll to the type of forwarding that matches the feature code you entered (example: **Forward if busy**), and press **Select**.
- 5 Select **Activate**.

The Activate feature code is now stored in your phone, and you are returned to the **Feature code** field. Continue entering other feature codes (example *900 to cancel **Forward if busy**), or press the **End** key to return to the start screen.



Important: Once you enter a network feature code successfully, then the feature becomes visible in the **Network services** menu.

Activate/cancel call forwarding

After you store the correct feature codes, you can activate (or cancel) call forwarding as follows:

- 1 Press **Menu 4-7-5 (Settings > Network services > Network feature setting)**.
- 2 Select **Call forwarding**.
- 3 Scroll to the desired call forwarding option, and press **Select**.
- 4 Highlight **Activate** and press **Select**.
- 5 Enter the number to which you want your calls forwarded (or press **Search** to recall a number from the phone book), and press **OK**.
- 6 Your phone calls the network to activate (or cancel) the feature you've requested. The network sends a confirmation note when the feature is activated (or cancelled) successfully.

• USE CALL WAITING

This network service lets you receive an incoming call when you're already in a call. When you receive an incoming call, your phone displays the caller's phone number (or the caller's entry in your phone book). The phone also beeps, notifying you of the incoming call.

To Answer a waiting call, Press the **Send** key (or press **Answer**) to place the current active call on hold automatically and answer the new call.

To Switch between the two calls, accepting the waiting call puts the first caller on hold. To put the second caller on hold and reconnect with the first caller, press the **Send** key.

To end the active call, simply allow the other party to hang up; the call on hold then becomes the active call. OR:

- 1 Press the **End** key to terminate the active call.
- 2 The network redials with the call on hold. Answer the call as any normal incoming call.

• MAKE A CONFERENCE CALL

You can talk to two people at the same time. Conference calling is a network-dependent feature.



Note: Check with your service provider to make sure this service is available in your network.

- 1 Make a call to the first participant. When you're ready to place a call to the next party,
- 2 Press **Options**, and press **New call**.
- 3 Enter the number and press the **Send** key (or press **Search** to recall number from **Contacts**).
- 4 Press the **Send** key again to connect both parties.
- 5 To end the call, press the **End** key. This action disconnects both parties.

End calls

To end a conference call, press the **End** key. Or you can also press **Options**, and select **End all calls**.

Disconnect second party

While all three parties are connected, press the **Send** key to disconnect the second caller and keep the first call active.

Disconnect first party

To disconnect the first party and remain connected to the second party, have the first party terminate the call.

• SEND OWN CALLER ID WHEN CALLING

You can block caller ID when you call someone (your number will not be displayed on their caller ID). This feature may only be effective when calling a number equipped with caller ID.



Note: This feature is available only when supported by the wireless network and may not function if you are roaming.



Important: This feature works on a call-by-call basis. You must enable this feature each time you want to block the sending of your own number to the recipient's caller ID.

Store the feature codes

Before you can use the **Send own caller ID when calling** feature, you must store the feature codes for activating this feature. Once the code is stored in your phone, it is sent automatically to the network when you select this option from your phone's menu.

- 1 Press **Menu 4-7-5** (**Settings > Network services > Network feature setting**). The **Feature code** field appears after a few seconds.
- 2 Enter the feature code your service provider gave you (example *67 for activating **Send own caller ID when calling**), and press **OK**.
- 3 Select **No** to assign the activation code.

Place a call without sending your number

- 1 Press **Menu 4-7-4** (**Settings > Network services > Send own caller ID when calling**).
- 2 Scroll to **No**, and press **Select**.
- 3 Enter a phone number, and press **OK**. Press **Search** to recall a number from the phone book.

The phone automatically inserts the feature code into the dialing string and dials the phone number. The person you're calling cannot see your phone number on their caller ID.

• USE AUTOMATIC REDIAL

At times you may not be able to place a call (for example: due to the high volume of traffic on the wireless network). When the wireless network is busy or unavailable, select **Automatic redial** to retry the call.

- 1 Press **Menu 4-1-2** (**Settings > Call settings > Automatic redial**).
- 2 Scroll to **On** and press **Select**.

If the system is busy, your phone makes three additional call attempts. If you want to stop the automatic redial process before the last attempt, press the **End** key.



Important: This feature does not automatically retry a number.

• CALLING CARD

If you wish to use a calling card for long distance calls, you must first save your calling card information into your phone. Your phone is equipped to handle up to four calling cards.

Saving calling card information

- 1 Press **Menu 4-1-7** (**Settings > Call settings > Calling card**).
- 2 Enter your security code, and press **OK**.
For information on security code, see "Security code" on page 58.
- 3 Scroll to one of the four memory locations, and press **Options**.
- 4 Scroll to **Edit**, and press **OK**.

- 5 Select **Dialing sequence**. Scroll to one of the following sequence types, and press **Select**.

Dialing sequence	Use for cards that require you to:
Access number + phone number + card number	Dial 1-800 access number, phone number, and card number (+ PIN if required)
Access number + card number + phone number	Dial 1-800 access number, card number (+ PIN if required), and phone number
Prefix + phone number + card number	Dial the prefix (numbers that must precede the phone number) and phone number you want to dial, and card number (+ PIN if required)

- 6 Enter the required information (access number or prefix and card number). Press **OK** to confirm your entries.

- 7 Press **OK** to save your changes.

- 8 Scroll to **Card name**, and press **Select**. Enter the card name, and press **OK**.



Note: This procedure might not work with all calling cards. Please look at the back of your calling card or contact your long distance company for more information.

Choosing a calling card to use

Use **Menu 4-1-7 (Settings > Call settings > Calling card)** to select a calling card to use. You will be required to enter your security code.

Making calling card calls

After you have saved your calling card information in your phone, you can make a call using your calling card.

- 1 Enter the phone number, including any prefix (such as **0** or **1**) that your calling card may require when you make a calling card call. See your calling card for instructions.
- 2 Press and hold the **Send** key for a few seconds until your phone displays **Card call**.
- 3 Your phone displays **Wait for tone, then press OK**. When you hear the tone or system message, press **OK**.
- 4 Your phone displays **Wait for tone, then press OK again**. When you hear the tone or system message, press **OK**.

• VOICE DIALING

You can dial up to 25 of your phone book's stored numbers using the voice dialing feature. Before you can place a call using voice dialing, you must first assign a voice tag to the number. Before using voice dialing, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.

- When recording a voice tag or making a call by saying a voice tag, hold the phone in the normal position near to your ear.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.



Important: You must say the name exactly as you said it when you recorded it. This may be difficult in, for example, a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

Assign a voice tag to a phone number


You must record a voice tag (up to two seconds) for a phone number before you can use the voice dialing feature to dial it.

ADD A VOICE TAG TO A PHONE BOOK ENTRY

- 1 At the start screen, press the scroll up or the scroll down keys. Scroll to the desired phone book entry, and press **Details**.
- 2 Scroll to the phone number you want to tag and press **Options**.
- 3 Scroll to **Add voice tag** and press **Select**. (The phone displays **Press Start, then speak after the tone**).
- 4 Press **Start** and after the tone, speak the voice tag clearly into the phone's microphone.



Note: Your phone informs you if recording is not successful. Press **OK** to try again or **Back** to return to phone book.

The message **Voice tag saved** is displayed upon completion of the recording process. The  icon next to a phone number denotes that a voice tag exists for this number.

IMPORTANT NOTES ABOUT VOICE TAGS

- The recording process stops automatically; pressing **Quit** aborts the recording attempt.
- Unique tags are recognized more accurately. Consider using first and last name or first name, last name, and number type (for example, mobile, home, work, etc.) when tagging a number. For example, John Smith, work.
- Avoid pauses or silence as you record the voice tag.
- If the voice tag memory is full, the phone displays **Delete an existing voice tag?** Press **OK**, scroll to locate a tag to delete, and press **Delete**.
- Deleting a phone number deletes any associated voice tags.



Warning: Do not use a voice tag for dialing emergency numbers. In emergencies, stress causes changes in your voice, which may keep the phone from recognizing your voice command.

Dialing a number using voice dialing



Note: You must say the name exactly as you said it when you recorded it.

- 1 At the start screen, press and hold **Contacts** for two seconds. A tone is heard and **Please speak now** is displayed.

- 2 After the tone, clearly speak the voice tag that you recorded previously into the microphone.



Note: If the voice tag is not recognized by the phone (or if you fail to speak a tag within three seconds after the tone), the message **Name not recognized** is displayed, and you are returned to the start screen.

- 3 When the voice tag is recognized, the phone book entry will be displayed for three seconds and the voice tag is replayed through the ear piece.

After three seconds, the number is dialed.

The only other option for initiating voice dialing is to press the headset button momentarily at the start screen. The alert tones play through the headset.

Speak the voice tag into the headset microphone. The voice tag will playback through the headset to confirm your choice.

Work with voice tags

You can listen to an existing voice tag (in case you forgot what you recorded), rerecord a voice tag, or delete an existing tag.

- 1 At the start screen, press **Contacts**. Scroll to **Voice tags**, and press **Select**.



Note: This option displays a list of the contacts/numbers that have a voice tag assigned.

- 2 Scroll to the phone number whose voice tag you want to edit, and press **Options**.
- 3 Scroll to either **Playback**, **Change**, or **Delete**, and press **Select**.



Note: If you chose **Change**, press **Start** to begin rerecording. The new tag that is recorded replaces the old information.

• 1-TOUCH DIALING

When a phone number is assigned to one of the 1-touch dialing locations (2 - 9), you can call the phone number in either of the following ways:

- Press the number key that corresponds to a 1-touch dialing location and press the **Send** key.
- Press and hold the key that corresponds to a 1-touch dialing location until the call begins.

The one key is preassigned to dial your voice mailbox number and cannot be reassigned.

Set up 1-touch dialing

If you want to assign a number to one of the number keys (2-9), do the following:

- 1 Press **Contacts**.
- 2 Scroll to **1-touch dialing** and press **Select**.
- 3 Scroll to the desired number key (keys **2** through **9**), and press **Assign**.



Note: If a phone number is already assigned to a key, the phone book entry name is displayed and the left soft key is **Options**.

- 4 Enter the phone number manually, or press **Search** to locate a phone book entry.
- 5 Select the desired name or entry from the phone book. If more than one number is stored for that entry, scroll to the desired number and press **Select**.

1-touch dialing options

You can change or delete (clear) numbers assigned to 1-touch dialing or view the number assigned to a key from the 1-touch dialing menu.

- 1 Press **Contacts**.
- 2 Scroll to **1-touch dialing** and press **Select**.
- 3 Scroll to a key that is assigned a number, and press **Options**.
- 4 Scroll to either **View number**, **Change**, or **Delete**, and press **Select**.

• CALLER GROUPS

You can group phone book entries using one of the existing categories (**Family**, **VIP**, **Friends**, **Business**, and **Other**). Each group has its own unique ringing tone and logo.

When you receive a call from a number assigned to a caller group, the ringing tone for that caller group is used, and the caller group's logo is displayed on the screen. This feature can help you identify incoming calls more quickly.

ADD A NUMBER TO A CALLER GROUP

- 1 At the start screen, press the scroll down key to scroll to the desired phone book entry, and press **Details**.
- 2 Scroll to the phone number you want to use and press **Options**.
- 3 Scroll to **Caller groups**, and press **Select**.
- 4 Scroll to the desired caller group (for example **Friends**), and press **Select**.

SELECT A RINGING TONE AND GRAPHIC FOR A CALLER GROUP

- 1 Press **Contacts**.
- 2 Scroll to **Caller groups** and press **Select**.
- 3 Scroll to one of the **caller groups** and press **Select**.
- 4 Scroll to one of the following options and press **Select**:

Option	Description
Rename group	Used to rename the selected caller group
Group ringing tone	Used to select a ringing tone for this group. Scroll through list of ringing tones, and press OK
Group logo	Used to view, activate or deactivate group logo
Group members	Used to assign other phone book entries to the selected caller group

• USE TOUCH TONES



Warning: If you send touch tones while in analog mode, be careful not to send confidential information. Check your phone's display for the **D** icon, indicating the presence of a digital network.

Touch tones (sometimes known as DTMF tones) are those tones produced when you press the keys on your phone's keypad. You can use touch tones for many automated dial-up services such as banking and airlines, or for entering your voice mailbox number and password.

Touch tones are sent during an active call. You can send them manually from your phone's keypad, or send them automatically by saving them in your phone.

Set manual touch tone options

You may need to customize how your phone sends the touch tones for optimum performance with the system you're calling.

SET TOUCH TONE TYPE

- 1 Press **Menu 4-2-2-1** (**Settings > Phone settings > Touch tones > Manual touch tones**).
- 2 Select one of the following options, and press **Select**:

Option	Description
Continuous	Tone sounds for as long as you press and hold a key.
Fixed	Used to send tones of the duration you specify in the Touch tone length option.
Off	Used to turn off tones. No tones are sent when you press a key.

SET FIXED TOUCH TONE LENGTH

You can also specify touch tone length when using the **Fixed** option.

- 1 Press **Menu 4-2-2-2** (**Settings > Phone settings > Touch tones > Touch tone length**).
- 2 Scroll to **Short** (0.1 seconds) or **Long** (0.5 seconds), and press **Select**.

Send touch tone string manually

Before you begin, make sure that **Manual touch tones** is not set to **Off**.

- 1 During a call to the automated service, press **Options**, scroll to **Touch tones** and press **Select**.
- 2 Enter the touch tone string from your phone's keypad as required by the service you're calling, and press **Tones**.

Send touch tone string from phone book

You can save a touch tone string as a separate phone book entry, and recall and send the string using the in-call menu option **Touch tones**.

SAVE TOUCH TONES AS A PHONE BOOK ENTRY

Save the touch tone string (including any pause or wait characters that may be required) to a new entry in the phone book. For more information on saving contacts and number to your phone book see "Save contacts and numbers" on page 22.

RECALL TOUCH TONE STRING FROM THE PHONE BOOK

- 1 During a call to the automated service, press **Options**, scroll to **Touch tones** and press **Select**.
- 2 Press **Search**, scroll to the touch tone string entry in your phone book, and press **OK**.
- 3 Press **Tones** to send the touch tones.

Store touch tone string with phone number

You can store touch tone strings (for example: voice mailbox number and PIN code) as a part of a phone book entry. Once the string is stored, it is sent automatically (instead of entering the touch tones from the keypad).

- 1 Enter the phone number of the automated service.
- 2 Use the * key to enter a **w** or **p** after the number.
 - **w** (wait)—The phone waits for you to press **Send**. When you press **Send**, the phone sends the touch tone string you've saved.
 - **p** (pause)—The phone pauses for 2.5 seconds, and automatically sends the touch tone string you've saved.
- 3 Enter the touch tone string after the **w** or **p** characters as required by the service.
Example: **214-555-1234w1234#p5678#**
- 4 Save this phone book entry as you normally would.

Once the touch tone string is stored with the phone number, you can now call the number and have the touch tone strings sent automatically.

• LINK PHONE BOOK ENTRIES

You can store a number in one phone book location and link it to another phone book entry.

For example, linking the phone number of an automated service (example: automated banking service) with a touch tone string entry in your phone book (example: account and PIN numbers) automatically recalls and sends the touch tone string when you call the service.

USE LINKING OPTIONS

- 1 Store the touch tone string into your phone book.
- 2 Assign the phone book entry with the touch tones to a 1-touch dialing location (example: location 3). For more information on 1-touch dialing, see "1-touch dialing" on page 53.
- 3 Edit the automated service's phone number by adding +n to the end of the phone number (where n is the 1-touch dialing location).
Example: **214-555-1234+3**
- 4 Press **OK** to save your changes.
- 5 Dial the automated service's number from your phone book. Your phone automatically sends the touch tones when the call connects.



Important: You may need to enter a pause (p) before the + in order to account for delays in the automated system answering your call (example: **214-555-1234p+3**).

• LEARN ABOUT VOICE RECORDER

Recorder allows you to record audio memos and store them in your phone. Use this feature to record things like phone numbers and personal memos.

Total time available for all memos is one minute, up to 60 seconds. If one recorded memo is 60 seconds in length, then it must be deleted before other memos can be recorded.

The maximum number and length of remaining memos depends on how much memory is still available. A countdown timer is displayed while recording and shows remaining record time.

Record a memo

- 1 Press **Menu 7-3-1 (Voice > Voice recorder > Record)**.
- 2 After the tone, begin recording your memo.
- 3 When you finish recording, press **Stop**.
- 4 Enter the subject of the voice memo, and press **OK**.

Pressing **Back** instead of entering a subject discards the memo without saving. Pressing **OK** without entering a subject assigns the default name (**Recording**) to the memo.

Work with recorded memos

To view a list of recorded memos:

- 1 Press **Menu 7-3-2 (Voice > Voice recorder > Recordings list)**.
- 2 Scroll through the list of memos, and press **Options**.

The following options are available:

Option	Description
Playback	Plays back the selected message through the earpiece (phone or headset).
Edit title	Used to edit the memo's subject, or to rename memo.
Delete	Deletes selected voice memo.
Add alarm/Alarm	Used to add (edit, or remove) a reminder alarm for the memo.

Notes about voice recorder

- An incoming call interrupts voice memo playback. When call is complete, the phone returns to the **Options** menu for the selected voice memo.
- An incoming call stops voice memo recording. The recorded memo is automatically saved with the default name.
- You can enter numbers during memo playback (example: when voice memo contains a phone number). Pressing the **Send** key interrupts voice memo playback and places the call.


12 Security and System settings



Warning: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Your phone has a variety of security features that help prevent some of the following:

- Placing accidental or unintentional calls.
- Unauthorized use of your phone.
- Placing and accepting calls from certain phone numbers.
- Accidental erasing of information or restoring factory settings.

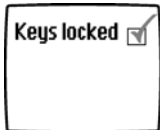

• LOCK KEYPAD (KEYGUARD)

With keypad lock (Keyguard) you can temporarily lock your phone's keypad and prevent the accidental placing of calls or pressing of the keypad (for example, when the phone is in your pocket or in your purse).

Press **Menu** followed by the * key (within three seconds) to activate Keyguard. You can answer a call with Keyguard activated. Press the **Send** key to answer the call. When you end the call, the keypad remains locked.

Press **Unlock** followed by the * key (within three seconds) to deactivate Keyguard and unlock your phone's keypad.



Important: The key icon appears at the top of the display. The left soft key is also labeled **Unlock**.



Important: When the phone is locked, calls may be possible to the emergency number programmed into your phone (for example, 911 or other official emergency number).

• SECURITY CODE



Important: Security code is a network dependent feature. Security code may be replaced by Lock code in some phones. If the phone prompts you to enter a Lock code instead of a Security code, then see "Learn about the lock code" on page 59.

Your phone prompts you for a five-digit **security code** for certain features and commands. Access is granted only after the correct security code has been entered successfully.

The default security code is **12345**. It is recommended that you change this code at once, write it down, and store it in a safe place away from your phone.



Important: When entering your security code, ********* is displayed on the screen to keep others from viewing your code.

You can delete the last entered digit by pressing **Clear** (or by pressing and holding **Clear** to delete all the digits more quickly). Enter the correct code or press **Back** to exit. If you enter an incorrect security code (**Code error** will appear) five times in a row, your phone won't accept any entries for the next five minutes.

Change your security code

- 1 Press **Menu 4-6 (Settings > Security settings)**. Enter your lock code.
- 2 Select **Access codes**.
- 3 Select **Change security code**.
- 4 Enter existing (or default) security code and press **OK**.
- 5 Enter new five-digit security code and press **OK**.
- 6 Re-enter your new five-digit security code for verification, and press **OK**.

Your phone displays the confirmation message **Security code changed**.



Important: If you change your security code and forget the new code, contact your service provider. Once you change the security code, the default code is no longer valid.

• PHONE LOCK

This feature protects your phone from unauthorized outgoing calls or access to information stored in the phone. When phone lock is activated, **Phone locked** is displayed when you turn your phone on or off.

After pressing either **Contacts** or **Menu**, you must enter the code. Once your lock code is accepted, your phone will function normally.



Important: **Call not allowed** displays if you try to place a call while the phone is locked.



Important: When the phone is locked, calls may be possible to the emergency number programmed into your phone (for example, 911 or other official emergency number).

Learn about the lock code

Your phone also has a [lock code](#). You will need the lock code to activate and deactivate the phone lock feature, or to change your lock code.

The default lock code is **1234**. If you enter an incorrect lock code five times in a row, your phone will prompt you for the security code (see page 58).

To change your lock code:

- 1 Press **Menu 4-6 (Settings > Security settings)**. Enter your lock code.
- 2 Select **Access codes**.
- 3 Select **Change lock code**.
- 4 Enter current (or default) lock code and press **OK**.
- 5 Enter new lock code and press **OK**.
- 6 Re-enter new lock code for verification, and press **OK**.



Important: When you change your lock code, store it in a safe place away from your phone. Avoid entering access codes similar to emergency numbers to prevent accidental emergency calls.

ACTIVATE AND DEACTIVATE PHONE LOCK

- 1 Press **Menu 4-6 (Settings > Security settings)**.
- 2 Enter the lock code, and press **OK**.

- 3 Select **Access codes**.
- 4 Select **Phone lock**.
- 5 Scroll to **On** or **Off**, and press **Select**.
- 6 Turn your phone off and back on to complete the phone lock activation (or deactivation).

ANSWER A CALL WITH PHONE LOCK ON

Press the **Send** key or **Answer**.

ALLOWED NUMBER WHEN PHONE LOCKED

When phone lock is on, the only outgoing calls allowed are to the following numbers:

- The emergency number programmed into your phone (for example, 911 or other official emergency number).
- The number stored in the **Allowed number when phone locked** location.

Store the unlocked phone number

- 1 Press **Menu 4–6 (Settings > Security settings)**
- 2 Enter lock code and press **OK**.
- 3 Select **Access codes**.
- 4 Select **Allowed number when phone locked**.
- 5 Enter phone number (or press **Search** to recall the number), and press **Select**.

Calling the allowed phone number

At the start screen, press the scroll down keys. When the number displays, press the **Send** key to place the call.



Important: Phone lock must be activated to use this feature.

• CALL RESTRICTIONS

This feature allows you to restrict incoming and outgoing calls. You can restrict all calls or create a custom list of numbers to restrict.

When you select either **Restrict outgoing calls** or **Restrict incoming calls** from the **Security settings** options, your options are:

- **Select**—Displays a list of all available restricted numbers. Select the numbers you want to restrict from this screen.
- **Add restriction**—Creates your own list of restricted numbers

Once you have added at least one restriction to either the outgoing or incoming calls list, the following options become visible:

- **Edit**—Edit an existing outgoing call restriction
- **Delete**—Deletes call restrictions from the list



Important: When calls are restricted, calls may be possible to the emergency number programmed into your phone (for example, 911 or other official emergency number).

Add a call restriction

You can add up to 10 restrictions for outgoing calls and 15 restrictions for incoming calls. The maximum number you can enter for each restriction is 15.

- 1 Press **Menu** > **Settings** > **Security settings** > **Call restrictions**.
- 2 Enter the security code and press **OK**.
- 3 Select either **Restrict outgoing calls** or **Restrict incoming calls**.
- 4 Scroll to **Add restriction** and press **Select**.
- 5 Enter the number string you wish to restrict and press **OK**. For example:
 - If you wish to restrict all calls that begin with 1, enter 1.
 - If you wish to restrict all calls that begin with 1972, enter 1972.
 - If you wish to restrict all calls that begin with 214, enter 214.
- 6 Enter a name to identify this restriction, or just press **OK**.



Note: When you create a new restriction, it is automatically selected (enabled) when it is saved.

Select call restrictions

- 1 Press **Menu** > **Settings** > **Security settings** > **Call restrictions**.
- 2 Enter your security code and press **OK**.
- 3 Scroll to **Restrict outgoing calls** or **Restrict incoming calls** and press **Select**. Then, scroll to **Select** and press **Select**.
- 4 Scroll to each restriction you wish to use and press **Mark**; press **Unmark** to deactivate existing restrictions.
- 5 Press **Done**, and press **Yes** to save the changes you've made.

Edit call restrictions

You can edit the name or number of an entry in the call restrictions list.

- 1 Press **Menu** > **Settings** > **Security settings** > **Call restrictions**.
- 2 Enter your security code and press **OK**.
- 3 Scroll to **Restrict outgoing calls** or **Restrict incoming calls** and press **Select**.
- 4 Scroll to **Edit** and press **Select**.
- 5 Scroll to the restriction you wish to edit, and press **Select**.
 - If no name is entered for a restriction, the restricted number displays.
- 6 Edit the number (as needed), and press **OK**.
- 7 Edit name (as needed), and press **OK**.

Erase call restrictions

You may want to delete a restriction that is no longer needed.

- 1 Press **Menu** > **Settings** > **Security settings** > **Call restrictions**.





- 2 Enter your security code and press **OK**.
- 3 Scroll to **Restrict outgoing calls** or **Restrict incoming calls** and press **Select**.
- 4 Scroll to **Delete** and press **Select**.
- 5 Scroll to the restriction you wish to delete, and press **OK**.
- 6 Press **OK** again to delete restriction.

• GPS (LOCATION INFO SHARING)

The GPS feature allows the phone to share position information over the network. For calls to emergency numbers, this position information may be used by the emergency operator to determine the position of the phone. The functionality of this feature is dependant on the network, satellite systems and the agency receiving the information. It may not function in all areas or at all times. The user can enable or disable the GPS feature for non-emergency calls by accessing the **Location info sharing** feature in the phone.

ENABLE OR DISABLE GPS (LOCATION INFO SHARING)

- 1 Press **Menu 4-1-1 (Settings > Call settings > Location info sharing)**.
- 2 Select either **Emergency** or **On**.

The profile selected in the **Location info sharing** menu, is shown on the lower right part of the screen. The default profile is **Emergency**. When **Emergency** is selected, and the phone's location information is shared only during an emergency call to the official emergency number programmed into your phone. The phone screen displays  or  in the upper left hand corner. When **Share location** is selected, the location information is shared with the network whenever the phone is powered on and activated. The screen displays  or  in the upper left hand corner.

- 3 When **On** is selected, the phone's location information is shared with the network whenever the phone is powered on and activated.



Note: Location information will always be shared with the network during emergency calls to the official emergency number programmed into the phone, regardless of which setting is selected. After placing an emergency call, the phone remains in emergency mode for five minutes. During this time, the location information will be shared with the network. For more information, see "Emergency calls" on page 77.

• AUTOMATIC UPDATE OF SERVICE

Your phone is capable of receiving updates to wireless services sent to your phone by your service provider. Use **Menu 4-1-4 (Settings > Call settings > Auto-update of service)** to turn this feature on or off.

• LEARN ABOUT SYSTEM SELECTION

The **System** menu (Menu 6) allows you to customize the way your phone chooses a system in which to operate while you are within or outside of your primary or home system.

Your phone is set to search for the most cost-effective system. If your phone can't find a preferred system, it selects a system automatically based on the option you choose in the **System** menu.



Important: Before selecting an item in the **System** menu, contact your service provider to find out how your selection will affect your service charges.

View Roaming options


The menu options you see in your phone are based on your service provider's network. Their network determines which options actually appear in the phone's menu. The following options that may appear in your phone:

Option	Description
Home only	You can make and receive calls in your home area only. While roaming, No Service appears and you cannot make or receive calls.
Automatic	Your phone automatically selects the best available system.

13 Organizer

Your phone has a calendar, alarm clock, stopwatch, and contact database—everything you need in an organizer or personal digital assistant.

• USE THE ALARM CLOCK

Your phone's alarm clock can be set to sound at a specified time. The  icon, displayed on the start screen, indicates that an alarm is set. The alarm clock works, even if the phone is off.



Important: The alarm clock works in conjunction with your phone's clock. Make sure your phone's time and date are correct before using this feature.

Set the alarm

- 1 Press **Menu 9-1 (Organizer > Alarm clock)**, and press **Select**.
- 2 Enter the alarm time, and press **OK**.
- 3 Select **am** or **pm**, and press **OK**.

Respond to an alarm

At the time of the alarm, the phone sounds an alert tone, displays a message, and flashes lights.

Pressing **Stop** or the **End** key stops the alarm from sounding, and returns you to the start screen. You can also use the **Snooze** feature:

- 1 Press the **Snooze** soft key.
- 2 Press any key (except the **End** key).
- 3 Allow the alarm to sound for one minute.

When snooze is enabled, the alarm will sound again in ten minutes.

Alarm when phone power is off

When the phone is switched off when the alarm sounds, the phone switches on and sounds the alarm tone. When you press **Stop**, you must choose whether to activate the phone for calls. Press **No** to switch off the phone or **Yes** to make and receive calls.



Warning: Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.

• CALENDAR



Warning: Your phone must be switched on to use the Calendar feature. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

You can record notes to remind you of meetings, phone calls, birthdays, or general reminders and set alarms.

You can also use the DKU-5 data cable with the Verizon Mobile Office Kit to synchronize your PIM calendar with your phone calendar.

Add a calendar note



Note: Predictive text input is available for Calendar notes.

- 1 From the day list view, scroll to the desired day and press **Options**.
- 2 Select **Make a note**.
- 3 Scroll to one of the following note types and press the roller:
 - **Meeting**—Enter the note (or press **Search** to recall a name from the phone book) and press **OK**. Enter the time and press **Options**.
 - **Call**—Enter the desired phone number (or press **Options** then **Search** to recall it from phone book) and press **OK**. Enter the time and press **OK**.
 - **Birthday**—Enter the person's name (or press **Options** then **Search** to recall it from phone book) and press **OK**. Press **Options** then **Save** and enter date of birth and year (optional). Press **OK**.
 - **Memo**—Enter the note. Press **Options** then **Save**. Enter a date for the memo, and press **OK**.
 - **Reminder**—Enter the note. Press **Options** then **Save**. Select an alarm option (**Alarm on**, **Alarm off**).
- 4 Scroll to the desired alarm option, and press **Select**.

The presence of an alarm is indicated by when you view the notes.

WHEN THE ALARM SOUNDS FOR A NOTE

The phone flashes its lights, beeps, and displays the note. When a **Call** note is displayed, you can call the number by pressing the **Send** key. To stop the alarm, press **Exit** or the **End** key.

• CALCULATOR

You can use your phone's calculator to add, subtract, multiply or divide numbers and convert currencies.



Warning: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Use the calculator

- 1 From the **Organizer** menu, scroll to **Calculator**, and press **Select**.
- 2 Enter the first number in the calculation (press the pound key for decimal point).
- 3 To add, press the * key once (+ appears); to subtract, press the * key twice (-); to multiply, press the * key three times (*); to divide, press the * key four times (/).
- 4 You can also press **Options**, scroll to **Add**, **Subtract**, **Multiply**, **Divide**, **Square**, or **Square root**, and press **Select**.
- 5 Enter the second number. Repeat steps three and four as many times as necessary.



Note: A subtotal is shown after you enter the next operand (+, -, *, or /).

- 6 For a total, press **Options** twice.
- 7 To start a new calculation, press and hold **Clear** for two seconds.



Note: This calculator has limited accuracy and rounding errors may occur, especially in long divisions.

• STOPWATCH

You can use your phone's **Stopwatch** feature to time an event in hours, minutes and seconds. The event's time can be saved, viewed, or deleted.



Warning: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



Important: Using the stopwatch consumes the battery and the phone's operating time will be reduced. Be careful not to let it run in the background when performing other operations with your phone.

Time an event using split timing

The split time function allows you to measure the total time for an event, yet allows you to capture the elapsed time at various intervals. To measure split time:

- 1 From the **Organizer** menu, scroll to **Stopwatch** and press **Select**.
- 2 Scroll to **Split timing**, and press **Select**.
- 3 Press **Start**. The running time appears on the display.

Once the split timer has started, you can:

- Press **Split**. The split time is displayed and the timer continues to display elapsed time.
- Press **Stop** to stop the timer and view the total elapsed time.

If you continue pressing **Split**, the most recent split time appears at the top of the list of split times. You can scroll to review previous times.

View timing options

Once you have stopped timing an event (using lap or split), you have the option to save the information, reset the stopwatch, or continue timing (split timing only).

While stopwatch is running, press **Stop**, and press **Options**. Select one of the following:

- **Save**—used to save the current timing data. Enter a name, and press **OK**.
- **Reset**—clears the current timing data and resets the timer.
- **Start**—restarts the split timer from the point the timer was stopped.

Time an event using lap timing

The lap time function allows you to measure the amount of time it takes to complete a cycle or lap. To measure lap time:

From the **Organizer** menu, scroll to **Stopwatch** and press **Select**. When the lap timer has started, you can:

- Press **Stop** to stop the timer and view the elapsed time.
- Press **Lap**. The lap time is displayed and the timer restarts from zero.

If you continue pressing **Lap**, the most recent lap time appears at the top of the list of lap times. You can scroll to review previous times.

Press **Stop** to stop the timer. The final lap's time is displayed.

Choose other stopwatch options

You can choose the following options from the **Stopwatch** menu.

Option	Description
Continue	Used to re-display active timer (example: if you receive a call while the timer is still running).
Show last time	Allows you to view the last measured time.
View times	Allows you to view the list of saved times.
Delete times	Allows you to delete the saved times. You can delete the saved times one by one or all at once.



Note: If you receive a call while using the Stopwatch, the timer continues running in the background. After ending the call, you can redisplay the timer by doing the following:

- 1 Press **Menu 9-4-1 (Organizer > Stopwatch > Continue)**.
- 2 Press **Select**.

14 Get it now



Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



Note: Get it now is a network dependent feature and will not be available in all phones. Please check with your service provider for more information.



Note: This feature shares memory space with other features. For more information, see "Memory use" on page 13.

• LAUNCHING AN APPLICATION

- 1 Press **Menu 9-1 (Get it now > Get it now)**. Select **OK**.
- 2 Select **Start**.

If the selection is a single application it will launch. Otherwise, a list of applications is displayed corresponding to the selected application set.

- 3 Scroll to the desired application and press **Select**. The application launches.

• DOWNLOAD A NEW APPLICATION

- 1 Press **Menu > Get it now > Get it now**, select **OK**.
- 2 At the next screen, press **OK**.
- 3 Select **Content** to download and press **Select**.



Note: Nokia does not provide any warranty for non Nokia applications. If you choose to download and install an application, you should take the same precautions, for security or content, as you would with any Internet site.

• REMOVE AN APPLICATION

- 1 Press **Menu > Get it now > Get it now**, select **OK**.
- 2 Scroll to **Options** and press **Select**.
- 3 Scroll to the application you wish to remove and press **Select**.
- 4 Scroll to **Remove** and press **Select**.



Note: The screen will display a question asking if you are sure you want to completely remove the application. Select **Yes**.

• CHECK MEMORY STATUS

Allows you to view memory available for Applications.

- 1 Press **Menu > Get it now > Get it now > Options > Information**.
- 2 You will see the amount of **Free memory** and the **Total memory**. This will vary according to the number of applications you have installed.

- **OTHER OPTIONS AVAILABLE FOR APPLICATIONS**

- **Delete**—delete the application or application set from the phone.
- **Check version**—check if a new version of the application is available for download from the mobile Internet services.
- **Details**—give additional information about the application.



Note: Check version and Internet link may not be available for all applications.

15 Your phone and other devices



Warning: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

You can connect your Nokia phone and compatible PC using the DKU-5 data cable. This cable is available for purchase as an enhancement or may be included in your sales package. Once your phone and PC are connected, you can access your phone's information from your PC, or use your phone as a wireless modem for digital data/fax calls.



Important: Digital data/fax services (including IS95, IS2000 2G and 3G packet data) are network-dependent features and may require a subscription to these services. Please check with your service provider for the availability of digital data/fax services.

Personal Computer

With your phone connected to your PC, you can use Nokia PC Suite to:

- make a backup copy of the data in your phone (Content Copier).
- edit phone book contacts, numbers, profiles, and settings by the PC keyboard (Phone Editor).
- synchronize your phone book and reminders with Personal Information Manager (PIM) applications (PC Sync).

Please refer to *Nokia PC Suite User Guide and PC/PDA Connectivity Guide* for instructions.

Modem

You can use your Nokia phone as a modem with your laptop computer or handheld device, to access the Internet or corporate networks.

For more information, refer to the *Verizon Mobile Office Kit*.

Download software



Important: This is a provider-dependent feature. Please check with your service provider to confirm your phone's ability to download software.

PC Suite, the PC Suite/PC connectivity user guide, and all related software is provided to you free of charge. These items can be downloaded from the US mobile phone products section of:

<http://www.nokia.com>

16 Minibrowser



Warning: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



Important: This feature is available only if your service provider's network supports mobile Internet access. Your service provider may also require that you subscribe to this additional service. For more information, contact your service provider.

The Minibrowser feature allows you to access special Internet content designed for viewing from your mobile phone. You can view news, get weather reports, check flight times, access financial information, and download ringing tones or graphics. You can save addresses of Web sites as bookmarks for quick and easy access.

• UNDERSTAND BROWSING SESSIONS AND INDICATORS

When you launch the minibrowser, two icons appear on the screen:



—Minibrowser icon (you are in a minibrowser session)



—Active call icon (you are being billed accordingly)

The minibrowser disconnects from the network after inactivity. This function minimizes your bill. You may be billed for several network connections in a single session. You can still access pages stored in memory without the connection. If you navigate to a page not stored in memory, a new connection is established and you will be billed accordingly.

• LAUNCHING THE MINIBROWSER

The first time you launch the minibrowser, you have a security setup process that takes 3-5 minutes.

- 1 Press **Menu**, scroll to **Minibrowser**, and press **Connect**.

A message appears, reminding you that you may be billed for the connection time. (You can disable this message. See "Disable minibrowser confirmations" on page 73.)

- 2 Press **Yes**. After a few seconds, the **Home Page** appears. (Your menu may vary.)

You can also launch the minibrowser by pressing and holding the **0** key from the start screen. To end a minibrowser session, press and hold the **End** key.

• MINIBROWSER MENU

While browsing, press and release the power key to display the **minibrowser** menu:

Option	Description
Reload	Reloads information for current page.
Home	Returns you to the Home page.
Bookmarks	Displays a list of bookmarks you've saved.

Option	Description
Bookmark site	Used to save a bookmark for the current page.
Version	Displays information about the software version and developers.
Advanced	Displays a several advanced browser options.
Downloads	Used to view or access downloaded ringing tones.
Exit browser	Exits the minibrowser and ends your browsing session.
Switch off!	Turns the phone off.

• NAVIGATE IN THE MINIBROWSER

- 1 Scroll through the menus and contents of a page.

Press the scroll up or scroll down keys to move through menus or the contents of a page (contents may not fit on one screen). To scroll quickly, press and hold the scroll key.



Important: There is no circular scrolling in minibrowser menus or pages. In other words, when you get to the end of a list or a body of text, the minibrowser does not automatically return you to the top of the list to begin scrolling again.

- 2 To go back to a previous page, press the **End** key.

Press the **End** key repeatedly to move back through previously viewed pages until the **Home Page** appears. Press **⓪**, scroll to **Home**, and press **OK**.

- 3 Select or open an item (for example, a link).

- Press the appropriate number key on your phone's keypad (if the item on the page is numbered), OR
 - Scroll to the item, and press the appropriate soft key (for example, to select or open a link).
- 4 To navigate to different screens or select special functions, use the soft keys. The function of each soft key can change with each page and depends on each highlighted item.

• LINKS

Links usually appear as items in a numbered list. When activated, a link will take you to another page or site or make a phone call if the sites support this feature. When you make a call, the connection terminates and the page you were viewing is stored in memory. When you end the call, that page is displayed again.

To activate a link, highlight the link and press the appropriate soft key. (If the link is a phone number, in some cases, you can also press the **Send** key to make the call.)

• BOOKMARKS

You can create a bookmark for a page so that you can quickly return to that page later. (You may also be able to create bookmarks via your personal account at your service provider's web site.)

BOOKMARK A PAGE

- 1 Go to the page for which you want to set a bookmark.
- 2 Press the power key to access the minibrowser menu.
- 3 Scroll to **Bookmark page** and press **Select**. (A message may ask you to confirm this action.)

GO TO A BOOKMARKED PAGE

- 1 From the **Home Page**, scroll to **Bookmarks**, and press **OK**. A list of your bookmarks appears.
- 2 Scroll to the bookmark you want to use, and press **Select**.




Tip: The first ten bookmarks are assigned to keys one – zero. Press and hold the number associated with the desired bookmark to go to the bookmarked site at any time during a browser session.

• RECEIVE MESSAGES VIA THE MINIBROWSER

Depending on your service provider, you may be able to receive text messages via the minibrowser. Unlike SMS text messages, minibrowser messages are not stored in the phone and must be accessed via the minibrowser's homepage.

Notification of new minibrowser messages

When a new minibrowser message is received, the  icon appears in the status bar. Depending on the message priority, you may also hear an alert tone and/or see **New message from:** displayed on your screen.

- If you receive the message while browsing, press **View** to read the message or **Skip**, allowing you to view the message later.
- If you receive the message while phone is idle, press **Connect** to launch the browser and view the message, or press **Back** to return to the start screen.

You can use the **Minibrowser messages** menu (**Menu 01–3**) to read your messages later.

Web links in minibrowser messages

You can receive minibrowser messages containing Web links. If you receive a message with a link, select **Use Web link** from the message's **Options** menu to open the link and go to the Web site.

You can also receive Web links in standard SMS messages. Selecting **Use Web link** from the message's **Options** menu launches the minibrowser and takes you to the link's site.

• END THE MINIBROWSER SESSION

Press and hold the **End** key. Press the power button, scroll to **Exit Minibrowser**, and press **OK**.

• DISABLE MINIBROWSER CONFIRMATIONS

You can specify whether or not you want your phone to display messages when you begin or end a browser session.

To modify minibrowser confirmations settings:

- 1 Press **Menu 4-1-6 (Settings > Call settings > Minibrowser confirmation)**. The following options appear:

Option	Description
Both	Confirmation required before connecting to the Internet, and before you terminate a browser session.
None	No confirmation notes are displayed.
On connection	Phone asks you to confirm your awareness to possible charges incurred for Internet access.
On exit	Phone asks you to confirm your wish to end browsing.

- 2 Scroll to the appropriate option, and press **OK**.



Tip: To prevent unintentional exiting of the minibrowser session, select either the **Both** or **On exit** options. This ensures that a confirmation message appears before exiting.



Note: If you press and hold the **End** key, the minibrowser session ends without confirmation (regardless of the minibrowser confirmation setting).

17 Reference information

• USE ENHANCEMENTS SAFELY

This section provides information about the phone's batteries, enhancements, and chargers. Be aware that the information in this section is subject to change as the batteries, chargers, and enhancements change.

This phone is intended for use when supplied with power from an ACP-7U, ACP-8U, ACP-12U, or LCH-9 charger. Other usage could invalidate any approval given to this apparatus and may be dangerous.



Warning: When you purchase batteries, chargers, and enhancements for your phone, use *only* batteries, chargers, and enhancements that have received approval from Nokia. The use of any other type may invalidate any approval or warranty applying to the phone, and could also be dangerous. For availability of approved batteries, chargers, and enhancements, check with your service provider.



Note: For information on how to charge and recharge your battery, please see "Charge" on page 8.

When the battery is fully charged, the indicator will tell you that the battery is fully charged.

When you are not using a charger, disconnect it from the power source. Do not leave the battery connected to a charger for more than 72 hours, since prolonged maintenance charging could shorten its lifetime. If left unused, a fully-charged battery will discharge over time.

Temperature extremes can affect the ability of your battery to charge. Therefore, allow it to cool down or warm up before trying to charge it.

When the battery is running out of power and your phone only has a few minutes of talk time remaining, a warning tone sounds and the **Battery low** message appears briefly. When no more talk time is left, a warning tone is sounded and the phone switches itself off.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Battery performance is particularly limited in temperatures below freezing.

Do not dispose of batteries in a fire!



Warning: Use only your hands to remove the battery. Do not puncture, burn or use any objects that may damage the phone or the battery. Please recycle the battery, or dispose of properly.

• IMPORTANT SAFETY INFORMATION

This section provides additional safety information. A brief overview of safety can be found in the section.

Traffic Safety

Do not use a handheld telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

PACEMAKERS

Pacemaker manufacturers recommend that a minimum separation of at least 6 inches (approximately 20 cm) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should always keep the phone more than 6 inches (20 cm) from their pacemaker when the phone is switched on
- Should not carry the phone in a breast pocket
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- Switch off the phone immediately if you have any reason to suspect that interference is taking place.

HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (for example, electronic fuel injection systems, electronic antiskid/antilock braking systems, electronic speed control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

POSTED FACILITIES

Switch your phone off in any facility where posted notices so require.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in property and/or bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Vehicles

Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or enhancements.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

FCC regulations prohibit using your phone while in the air. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, legal action or both.

Emergency calls



Important: This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore you should never rely solely upon any wireless phone for essential communications (for example, medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

Make an Emergency Call

- 1 If the phone is not on, switch it on.
- 2 Press the **End** key as many times as needed (for example, to exit a call, to exit a menu, etc.) to clear the display and ready the phone for calls.
- 3 Enter the emergency number for your present location (for example, 911 or any other official emergency number—emergency numbers vary by location).
- 4 Press the **Send** key.
 - If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this user guide and your local cellular service provider.
 - When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident - do not end the call until given permission to do so.

- **CERTIFICATION INFORMATION (SAR)**

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (for example, at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 1.18 W/kg and when worn on the body, as described in this user guide, is 0.96 W/kg. (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID **QMNRH-44**.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an enhancement that contains no metal and that positions the handset a minimum of 7/8 inch (2.2 cm) from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body worn enhancement, and are not holding the phone at the ear, position the handset a minimum of 7/8 inch (2.2 cm) from your body when the phone is switched on.

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at:

<http://www.nokia.com>.

• CARE AND MAINTENANCE

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and to enjoy this product for many years:

- Keep the phone and all its parts and enhancements out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside and may damage electronic circuit boards.
- Do not attempt to open the phone except to remove or change front and back covers. Nonexpert handling may damage it.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any enhancement. If any of them are not working properly, take them to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

• ENHANCEMENTS

To enhance your phone's functionality, a range of enhancements is available for you. You can select any of these items to help accommodate your specific communication needs. For availability of these and other enhancements, contact your service provider.



A FEW PRACTICAL RULES FOR ENHANCEMENT OPERATION

- Keep all enhancements out of the reach of small children.
- When disconnecting a power cord of an enhancement, grasp and pull the plug, not the cord.
- Check regularly that any vehicle-installed enhancements are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.
- Use only batteries, chargers, and enhancements that have been approved by Nokia. The use of any other types could invalidate any approval or warranty applying to the phone and could be dangerous. Refer to "Use enhancements safely" on page 75 for important battery usage information.

BATTERY INFORMATION



Note: The phone has a lithium ion (Li-Ion) battery. Dispose of batteries according to local regulations (for example, recycling). Do not dispose as household waste.

This section provides information about the phone's battery. Be aware that the information in this section is subject to change.

The tables shown in this section provide information about the battery that is available for your phone, charging times with the Standard Travel Charger (ACP-7U), the talk and standby times. Consult your service provider for more information.

Charging Times

Charging times for the BLC-2 Li-ion Battery (1000 mA) are approximate:

Battery option	ACP-7U
BLC-2 Li-ion	3 hrs 50 min

Standby and Talk Times

Mode	Talk time	Standby time
Digital	Up to 3 hrs	Up to 12 days
Analog	Up to 1 hr.	Up to 1 day



Note: Battery talk and standby times are estimates only and depend on signal strength, network conditions, features used, battery age and condition (including the effect of charging habits), temperatures to which battery is exposed, use in digital mode, and many other factors. Please note that the amount of time a phone is used for calls will affect its standby time. Likewise, the amount of time that the phone is turned on and in standby mode will affect its talk time.

Charging and Discharging

Your phone is powered by a rechargeable battery.

Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery. Use only batteries approved by Nokia and recharge your battery only with the chargers approved by the manufacturer.

Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger. Overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Temperature extremes can affect the ability of your battery to charge. Battery will not charge at temperatures above 140°F (60°C).

• CHARGERS AND OTHER ENHANCEMENTS

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from the devices listed on the following pages.



Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

For availability of approved enhancements, please check with your dealer.

When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

Learn about chargers and other enhancements

This section provides a list of the your phone's chargers and enhancements. Be aware that the enhancement information is subject to change as the chargers and enhancements change.

The chargers and enhancements are available for your phone. Contact your dealer for details and refer to the enhancements brochure in your sales package for all Nokia Original Enhancements.



Note: When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than a week, since prolonged maintenance charging of the battery could shorten its lifetime. If left unused, a fully charged battery will discharge over time.



Note: If the battery is completely empty, you cannot use the phone until it has enough charge to operate.

- Standard Battery (BLC-2)
- Standard Charger (ACP-7U)
- Travel Charger (ACP-12U)
- Portable Hands Free Device (BHF-1)
- Rapid Mobile Charger (LCH-12)
- FM Headset (HS-2R)
- Loopset™(LPS-4)
- Reactive Covers (SKR-321) and (SKR-322)
- Active Covers (SKR-661) and (SKR-662)
- Color covers (SKR-318) and (SKR-319)

Enhancements can be purchased at any Verizon Wireless retail location or at www.VerizonWireless.com.

• NOKIA XPRESS-ON™ COLOR COVERS

Your phone's Xpress-on cover is available in several fashion colors. Xpress-on covers may be purchased from your authorized Nokia dealer.



Warning: Before changing the cover, always switch off the power and disconnect the phone from the charger or any other device. Always store and use the phone with the covers attached.


REMOVE THE FRONT AND BACK COVERS



Warning: When the front cover is off the phone, be careful not to damage the phone's screen face or the rubber gasket around it.


Switch off the power. Disconnect the phone from the charger or any other device.

- 1 Push the release button, slide the cover downward, and lift off.
- 2 Gently pry the front cover away from the phone and lift the cover off the phone.

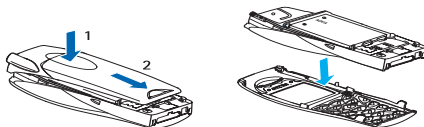



REMOVE AND REPLACE THE KEYPAD

- 1 Lift the keypad from the inside of the front cover.
- 2 Place the keypad into the new front cover and press into place.

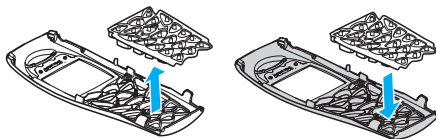

REPLACE THE FRONT AND BACK COVERS

- 1 Align the keypad with the proper openings in the front cover.
- 2 Gently push the front cover into the phone until it clicks into place.
- 3 Insert the two catches of the back cover in the corresponding slots in the phone.
- 4 Slide the cover towards the bottom of the phone until it locks into place.

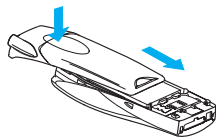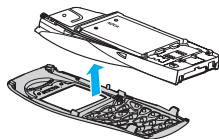

18 Nokia One Year Limited Warranty

Nokia Inc. ("Nokia") warrants that this cellular phone ("Product") is free from defects in material and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

- 1 The limited warranty for the Product extends for ONE (1) year beginning on the date of the purchase of the Product. This one year period is extended by each whole day that the Product is out of your possession for repair under this warranty.
- 2 The limited warranty extends only to the original purchaser ("Consumer") of the Product and is not assignable or transferable to any subsequent purchaser/end-user.
- 3 The limited warranty extends only to Consumers who purchase the Product in the United States of America.
- 4 During the limited warranty period, Nokia will repair, or replace, at Nokia's sole option, any defective parts, or any parts that will not properly operate for their intended use with new or refurbished replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Consumer for any such parts. Nokia will also pay for the labor charges incurred by Nokia in repairing or replacing the defective parts. The limited warranty does not cover defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts. Nokia's limit of liability under the limited warranty shall be the actual cash value of the Product at the time the Consumer returns the Product for repair, determined by the price paid by the Consumer for the Product less a reasonable amount for usage. Nokia shall not be liable for any other losses or damages. These remedies are the Consumer's exclusive remedies for breach of warranty.
- 5 Upon request from Nokia, the Consumer must prove the date of the original purchase of the Product by a dated bill of sale or dated itemized receipt.
- 6 The Consumer shall bear the cost of shipping the Product to Nokia in Melbourne, Florida. Nokia shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty.
- 7 The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:
 - a The Product has been subjected to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of Nokia, including damage caused by shipping.
 - b The Product has been damaged from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake or damage from exposure to weather conditions, an Act of God, or battery leakage, theft, blown fuse, or improper use of any electrical source, damage caused by computer or internet viruses, bugs, worms, Trojan Horses, cancelbots or damage caused by the connection to other products not recommended for interconnection by Nokia.
 - c Nokia was not advised in writing by the Consumer of the alleged defect or malfunction of the Product within fourteen (14) days after the expiration of the applicable limited warranty period.

- d The Product serial number plate or the enhancement data code has been removed, defaced or altered.
 - e The defect or damage was caused by the defective function of the cellular system or by inadequate signal reception by the external antenna, or viruses or other software problems introduced into the Product.
- 8 Nokia does not warrant uninterrupted or error-free operation of the Product. If a problem develops during the limited warranty period, the Consumer shall take the following step-by-step procedure:
- a The Consumer shall return the Product to the place of purchase for repair or replacement processing.
 - b If "a" is not convenient because of distance (more than 50 miles) or for other good cause, the Consumer shall ship the Product prepaid and insured to:
Nokia Inc., Attn: Repair Department
795 West Nasa Blvd.
Melbourne, FL 32901
 - c The Consumer shall include a return address, daytime phone number and/or fax number, complete description of the problem, proof of purchase and service agreement (if applicable). Expenses related to removing the Product from an installation are not covered under this limited warranty.
 - d The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer will be responsible for any expenses related to reinstallation of the Product.
 - e Nokia will repair the Product under the limited warranty within 30 days after receipt of the Product. If Nokia cannot perform repairs covered under this limited warranty within 30 days, or after a reasonable number of attempts to repair the same defect, Nokia at its option, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage. In some states the Consumer may have the right to a loaner if the repair of the Product takes more than ten (10) days. Please contact the Customer Service Center at Nokia at the telephone number listed at the end of this warranty if you need a loaner and the repair of the Product has taken or is estimated to take more than ten (10) days.
 - f If the Product is returned during the limited warranty period, but the problem with the Product is not covered under the terms and conditions of this limited warranty, the Consumer will be notified and given an estimate of the charges the Consumer must pay to have the Product repaired, with all shipping charges billed to the Consumer. If the estimate is refused, the Product will be returned freight collect. If the Product is returned after the expiration of the limited warranty period, Nokia's normal service policies shall apply and the Consumer will be responsible for all shipping charges.
- 9 YOU (THE CONSUMER) UNDERSTAND THAT THE PRODUCT MAY CONSIST OF REFURBISHED EQUIPMENT THAT CONTAINS USED COMPONENTS, SOME OF WHICH HAVE BEEN REPROCESSED. The used components comply with Product performance and reliability specifications.

- 10 ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR USE, SHALL BE LIMITED TO THE DURATION OF THE FOREGOING LIMITED WRITTEN WARRANTY. OTHERWISE, THE FOREGOING LIMITED WARRANTY IS THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. NOKIA SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF ANTICIPATED BENEFITS OR PROFITS, LOSS OF SAVINGS OR REVENUE, LOSS OF DATA, PUNITIVE DAMAGES, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF ANY SUBSTITUTE EQUIPMENT OR FACILITIES, DOWNTIME, THE CLAIMS OF ANY THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY, RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM BREACH OF THE WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL OR EQUITABLE THEORY, EVEN IF NOKIA KNEW OF THE LIKELIHOOD OF SUCH DAMAGES. NOKIA SHALL NOT BE LIABLE FOR DELAY IN RENDERING SERVICE UNDER THE LIMITED WARRANTY, OR LOSS OF USE DURING THE PERIOD THAT THE PRODUCT IS BEING REPAIRED.
- 11 Some states do not allow limitation of how long an implied warranty lasts, so the one year warranty limitation may not apply to you (the Consumer). Some states do not allow the exclusion or limitation of incidental and consequential damages, so certain of the above limitations or exclusions may not apply to you (the Consumer). This limited warranty gives the Consumer specific legal rights and the Consumer may also have other rights which vary from state to state.
- 12 Nokia neither assumes nor authorizes any authorized service center or any other person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty including the provider or seller of any extended warranty or service agreement.
- 13 This is the entire warranty between the Nokia and the Consumer, and supersedes all prior and contemporaneous agreements or understandings, oral or written, relating to the Product, and no representation, promise or condition not contained herein shall modify these terms.
- 14 This limited warranty allocates the risk of failure of the Product between the Consumer and Nokia. The allocation is recognized by the Consumer and is reflected in the purchase price.
- 15 Any action or lawsuit for breach of warranty must be commenced within eighteen (18) months following purchase of the Product.
- 16 Questions concerning this limited warranty may be directed to:
Nokia Inc.
Attn: Customer Service
7725 Woodland Center Blvd., Ste. 150
Tampa, FL 33614
Telephone: 1-888-NOKIA-2U (1-888-665-4228)
Fax: 1-813-249-9619
TTY/TDD Users Only: 1-800-24-NOKIA (1-800-246-6542)
- 17 The limited warranty period for Nokia supplied attachments and enhancements is specifically defined within their own warranty cards and packaging.

Manufactured or sold under one or more of the following US patents:

D405445	5642377	5796757	5991627	6084471	6414640	6580771	Others
D406583	5699482	5802465	6005889	6088342	6434186	6587685	4558302
D414189	5701392	5821891	6009129	6148290	6459689		4901307
D405784	5708656	5854978	6025802	6154455	6463031		5056109
D423515	5642377	5859843	6029065	6167083	6466173		5101501
4969192	5737323	5887250	6047071	6205325	6480700		5109390
5440597	5754976	5887252	6055264	6253075	6480155		5265119
5444816	5758278	5889770	6072787	6292474	6486835		RE32580
5491718	5790957	5929813	6076181	6332083	6496150		
5596571	5793744	5990740	6078570	6377813	6570909		

Appendix A

Message from the CTIA (Cellular Telecommunications & Internet Association) to all users of mobile phones.

© 2001 Cellular Telecommunications & Internet Association. All Rights Reserved. 1250 Connecticut Avenue, NW Suite 800, Washington, DC 20036.
Phone: (202) 785-0081

Safety is the most important call you will ever make.

A Guide to Safe and Responsible Wireless Phone Use

Tens of millions of people in the U.S. today take advantage of the unique combination of convenience, safety and value delivered by the wireless telephone. Quite simply, the wireless phone gives people the powerful ability to communicate by voice--almost anywhere, anytime--with the boss, with a client, with the kids, with emergency personnel or even with the police. Each year, Americans make billions of calls from their wireless phones, and the numbers are rapidly growing.

But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle--whether on the phone or not.

The basic lessons are ones we all learned as teenagers. Driving requires alertness, caution and courtesy. It requires a heavy dose of basic common sense---keep your head up, keep your eyes on the road, check your mirrors frequently and watch out for other drivers. It requires obeying all traffic signs and signals and staying within the speed limit. It means using seatbelts and requiring other passengers to do the same.

But with wireless phone use, driving safely means a little more. This brochure is a call to wireless phone users everywhere to make safety their first priority when behind the wheel of a car.

Wireless telecommunications is keeping us in touch, simplifying our lives, protecting us in emergencies and providing opportunities to help others in need.

When it comes to the use of wireless phones, *safety is your most important call.*

Wireless Phone "Safety Tips"

Below are safety tips to follow while driving and using a wireless phone which should be easy to remember.

- 1 Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
- 2 When available, use a hands free device. A number of hands free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
- 3 Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
- 5 Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to do" list while driving a car, you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip--dial only a few numbers, check the road and your mirrors, then continue.

- 7 Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix--they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
- 8 Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations--with your phone at your side, help is only three numbers away. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!
- 9 Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
- 10 Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you still can use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Careless, distracted individuals and people driving irresponsibly represent a hazard to everyone on the road. Since 1984, the Cellular Telecommunications Industry Association and the wireless industry have conducted educational outreach to inform wireless phone users of their responsibilities as safe drivers and good citizens. As we approach a new century, more and more of us will take advantage of the benefits of wireless telephones. And, as we take to the roads, we all have a responsibility to drive safely.

The wireless industry reminds you to use your phone safely when driving.

For more information, please call 1-888-901-SAFE.

For updates: <http://www.wow-com.com/consumer/issues/driving/articles.cfm?ID=85>

© 2001 Cellular Telecommunications & Internet Association. All Rights Reserved. 1250 Connecticut Avenue, NW Suite 800, Washington, DC 20036. Phone: (202) 785-0081

NOTES

Appendix B
Message from the FDA
(U.S. Food and Drug Administration)
to all users of mobile phones.

July 18, 2001 For updates: <http://www.fda.gov/cdrh/phones>

Consumer Update on Wireless Phones

U.S. Food and Drug Administration

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called cell mobile or PCS phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called cordless phones; which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be predisposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques, sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones.

Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a accompanied hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones
<http://www.fda.gov/cdrh/phones/index.html>
- Federal Communications Commission (FCC) RF Safety Program
<http://www.fcc.gov/oet/rfsafety>
- International Commission on Non-Ionizing Radiation Protection
<http://www.icnirp.de>
- World Health Organization (WHO) International EMF Project
<http://www.who.int/emf>
- National Radiological Protection Board (UK)
<http://www.nrpb.org.uk/>

NOTES

Index

Numerics

- 1-touch dialing 51
 - setup 51
- 3-way conference calls 47

A

- ABC and 123 modes 15
- access codes
 - lock code 57
 - security code 56
- accessibility
 - solutions 5
 - website 5
- accessories
 - battery 78
 - complete car kit 79
 - data cable 79
 - data cable DKU-5 79
 - loopset LPS-4 79
 - mobile holder 79
 - spare battery charger 79
- accessory
 - cigarette lighter charger 79
 - headset kit 79
 - standard travel charger 79
- activate
 - automatic redial 48
 - call forwarding 45, 46
 - loopset 41
 - TTY/TDD 41
- adjust the volume 14
- advanced calling features 45
- antenna
 - contact with 8
 - location 8
- Applications 66
- applications
 - launch 66
 - memory 66
- automatic redial 48
- automatic update of service 60

B

- battery
 - important information 9
 - prolonged charging 73
 - prolonging life 9
- battery low indication 73

C

- cable
 - connecting to a PC 68
- calculator 63
 - using 63
- calendar
 - alarms 63
 - make a note 63
 - note types 63
- call 59
- call forwarding 45, 46
 - activate 46
 - cancel 46
 - feature codes 46
- call lists, delete recent 26
- call restrictions 58
 - adding 58
 - editing 59
 - erasing 59
 - selecting 59
- call timers
 - clearing 27
 - turning on 27
- call waiting 47
 - answer a new call 47
 - switch between calls 47
- caller groups 23
 - assign a number 23
 - edit options 24
 - phone book menu 21
- calls
 - 1-touch dialing 51
 - 3-way calls 47
 - answer a call 11
 - call waiting 47
 - end a call 11

- ignoring 3
 - make a call 11
 - phone lock 57
 - redial last 3
 - reject a call 11
- car kit 79
- certification information 76
- change letter case 16
- characters, entering 16
- charge the battery 8
- clock
 - automatic settings 42
 - displaying the clock 43
 - hiding the clock 43
 - set the time 42
 - time format 42
- color covers 79
- connecting to a PC 68
- contacting Nokia 6
- contacting your service provider 6
- Content Copier (PC Suite) 68

D

- data cable 79
- data call timers 27
- Data Synchronization (PC Sync) 68
- dialed calls, checking 25
- dictionary, add words 19
- digital data 68
- display language 42
- download
 - applications 66
- download software 68
- dynamic memory 11

E

- edit a name or number 21
- e-mail 32
- emergency calls 75
- enter
 - characters 16
 - numbers 16
 - punctuation 16
- enter a space 16
- enter letters 15
- entering letters and numbers 15

- entering text
 - change letter case 16
 - enter a space 16
- erase mistakes 16
- erase names or numbers 21

F

- fax call timers 27

H

- headset
 - connect 14
 - setup 14
 - use 14
- headset kit 79
- help 12

I

- in-call options 45

K

- keyguard 56
- keypad
 - about 10
 - lock 56
- keys, selection 10

L

- label 6
- language setting 42
- letters, entering 15
- lock code 57
 - changing 57
- lock keypad 56
- loopset
 - description 79

M

- memory status, checking 24
- menus, phone 12
- messages
 - e-mail messages 32
 - options 30
 - receiving via minibrowser 71
 - text 29
 - using templates 31
 - writing 29

- Minibrowser
 - receiving messages via 71
- minibrowser timer options 27
- missed calls, checking 25
- mistakes, erasing 16
- mobile holder 79
- modem setup 68

N

- name or number edit 21
- navigate phone menus 12
- network services 5
 - subscribing 5
- Nokia PC Suite 68
- number type, changing 22
- number types 21
- numbers, add to message 19
- numbers, entering 16

O

- one-touch dialing 51
- options
 - in-call menu 45

P

- PC Connectivity 68
- PC Suite
 - Content Copier 68
 - Instructions 62, 68
 - PC Sync 68
- PC Suite (application) 68
- PC Sync (PC Suite) 68
- phone
 - certification information 76
 - radio frequency signals 76
- phone book
 - add entries 20
 - add number to entry 21
 - add other info 23
 - caller groups 23
 - change number type 22
 - change views 21
 - edit entry 21
 - erase names 23
 - erase numbers 23
 - erasing 23

- menus 20
 - opening 20
 - primary number 22
- phone book menu 13
- phone book menu options 13
- phone help 12
- phone lock 57
 - activating/deactivating 57
 - allowed number 58
 - lock code 57
 - making a call 58
- phone menus 12
- power on your phone 9
- predictive text 17
 - tips for 19
 - turning off 18
 - turning on 19
- primary number, specifying 22
- profile
 - customizing 37
 - defined 37
 - renaming 40
 - selecting 37
- punctuation, entering 16

R

- Rapid Cigarette Lighter Charger 79
- received calls, checking 25
- remove the battery 9
- restrict calls 58
- ring options, setting 37
- ring volume 38
- ring volume, setting 38
- ringing tone, setting 38
- rings and tones 37

S

- SAR 76
- save
 - street address 23
- scroll keys 12
- scroll through menus 12
- security 56
 - lock keypad 56
 - phone lock 57
 - security code 56

- security code
 - changing 56
- security settings
 - call restrictions 58
 - phone lock 57
- selection keys 10
- service provider
 - differences 5
 - signing up 5
- service provider, contacting 6
- set the ring volume and tone 38
- set up
 - your headset 14
 - your phone 8
- setting time (manual) 42
- setting time (network) 42
- shortcuts 12
- software download 68
- spaces, entering 17
- special characters 17
- specify a primary number 22
- standard travel charger 79
- start screen
 - about 10
 - indicators 10
- strings, touch tone 54
- switch on your phone 9
- symbols, inserting 19

T

- templates 31
- text messages
 - e-mail messages 32
- timed profiles 41
- touch tones
 - length 53
 - manual 53
 - sending 54
 - storing 54
- turn on your phone 9

U

- underlined words 19
- understanding wireless network services 5
- use the headset 14

V

- vibrating alert, setting 38
- view
 - dialed calls 25
 - missed calls 25
 - new text messages 32
 - received calls 25
- voice command
 - shortcut 4
- voice commands 43
 - create a voice tag 43
 - using 44
- voice dialing 49
 - dialing a number 50
 - important notes 50
 - voice tags 50
 - working with tags 44, 51
- voice mail greetings 28
- voice mail, setting up 28
- voice messages, listening to 28
- voice tags
 - add 50
 - change or erase 51
- volume, adjusting 14

W

- warning and game tones, setting 40
- welcome note, adding 43
- wireless network services 5

X

- Xpress-on color covers 79

NOTES

NOTES