


Model No. NT33130

Serial No. _____

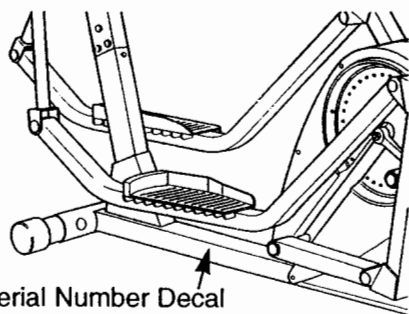

Serial Number Decal

NordicTrack®

ELLIPSE

USER'S MANUAL

QUESTIONS?


As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or if there are missing parts, we will guarantee complete satisfaction through direct assistance from our factory.

TO AVOID UNNECESSARY DELAYS, PLEASE CALL DIRECT TO OUR TOLL-FREE CUSTOMER HOT LINE. The trained technicians on our customer hot line will provide immediate assistance, free of charge to you.

CUSTOMER HOT LINE:

1-888-825-2588

Mon.-Fri., 6 a.m.-6 p.m. MST

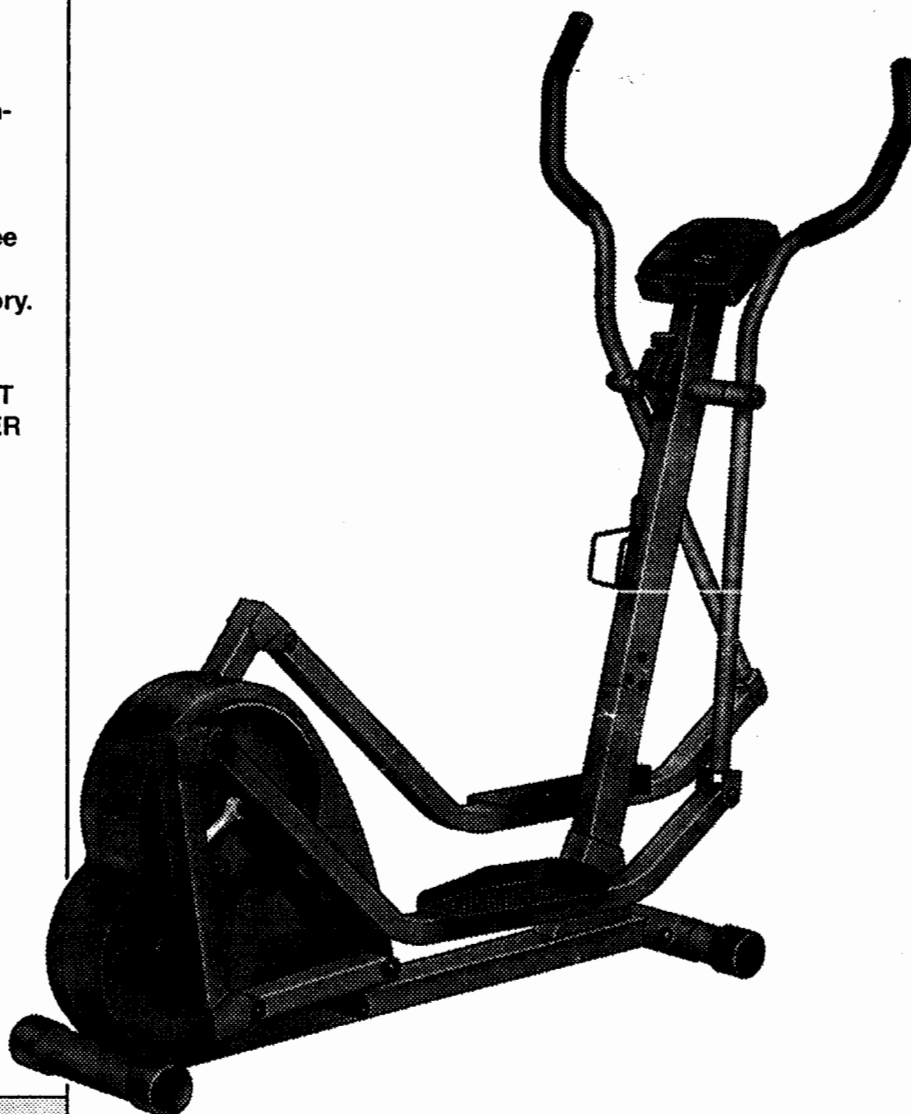

⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.



Visit our website at

www.nordictrack.com

*new products, prizes,
fitness tips, and much more!*




TABLE OF CONTENTS

IMPORTANT PRECAUTIONS	3
BEFORE YOU BEGIN	4
ASSEMBLY	5
HOW TO USE THE ELLIPTICAL CROSSTRAINER	9
MAINTENANCE AND TROUBLE-SHOOTING	11
CONDITIONING GUIDELINES	12
PART LIST	14
EXPLODED DRAWING	15
HOW TO ORDER REPLACEMENT PARTS	Back Cover
LIMITED WARRANTY	Back Cover

IMPORTANT PRECAUTIONS

⚠ WARNING: To reduce the risk of serious injury, read the following important precautions before using the elliptical crosstrainer.

1. Read all instructions in this manual before using the elliptical crosstrainer.
2. It is the responsibility of the owner to ensure that all users of the elliptical crosstrainer are adequately informed of all precautions.
3. The elliptical crosstrainer is intended for in-home use only. Do not use the elliptical crosstrainer in any commercial, rental, or institutional setting.
4. Place the elliptical crosstrainer on a level surface, with a mat beneath it to protect the floor or carpet. Keep the elliptical crosstrainer indoors, away from moisture and dust.
5. Inspect and tighten all parts every three months. Replace any worn parts immediately.
6. Keep children under the age of 12 and pets away from the elliptical crosstrainer at all times.
7. The elliptical crosstrainer should not be used by persons weighing more than 250 pounds.
8. Always hold the handlebars when mounting, dismounting, or using the elliptical crosstrainer (see page 9). Do not use the console as a support.
9. Always wear appropriate exercise clothing and athletic shoes when using the elliptical crosstrainer.
10. Keep your hands and feet away from moving parts where pinching could occur.
11. Keep your back straight when using the elliptical crosstrainer. Do not arch your back.
12. If you feel pain or dizziness at any time while exercising, stop immediately and begin cooling down.
13. When you stop exercising, allow the pedals to slowly come to a stop.
14. When moving the elliptical crosstrainer, use proper form; never lift the elliptical crosstrainer using only your back muscles.
15. The decal shown below has been placed on the elliptical crosstrainer. If the decal is missing or illegible, please call our Customer Service Department toll-free at 1-888-825-2588 to order a free replacement decal. Apply the decal in the location shown.

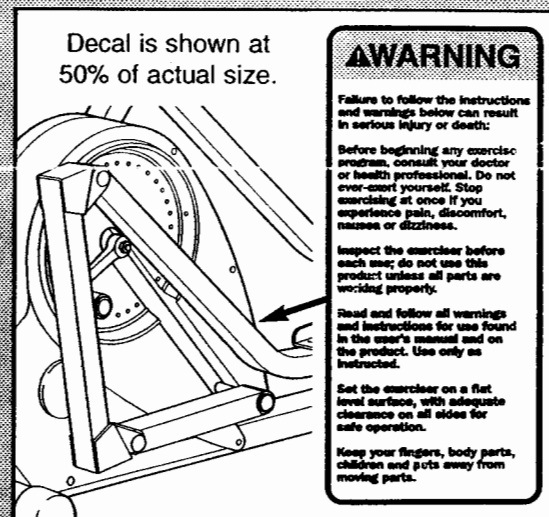

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.


BEFORE YOU BEGIN

Congratulations for selecting the new NordicTrack® 910e elliptical crosstrainer. The NordicTrack® 910e is an incredibly smooth exerciser that moves your feet in a natural elliptical path, minimizing the impact on your knees and ankles. And the unique NordicTrack® 910e features adjustable resistance and a motivational console to help you get the most from your workouts. Welcome to a whole new world of natural, elliptical-motion exercise from NordicTrack.

For your benefit, read this manual carefully before you use the NordicTrack® 910e. If you have addi-

tional questions, please call our Customer Service Department toll-free at 1-888-825-2588, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please note the product model number and serial number before calling. The model number is NT33130. The serial number can be found on a decal attached to the elliptical crosstrainer (see the front cover of this manual for the location of the decal).


Before reading further, please familiarize yourself with the parts that are labeled in the drawing below.

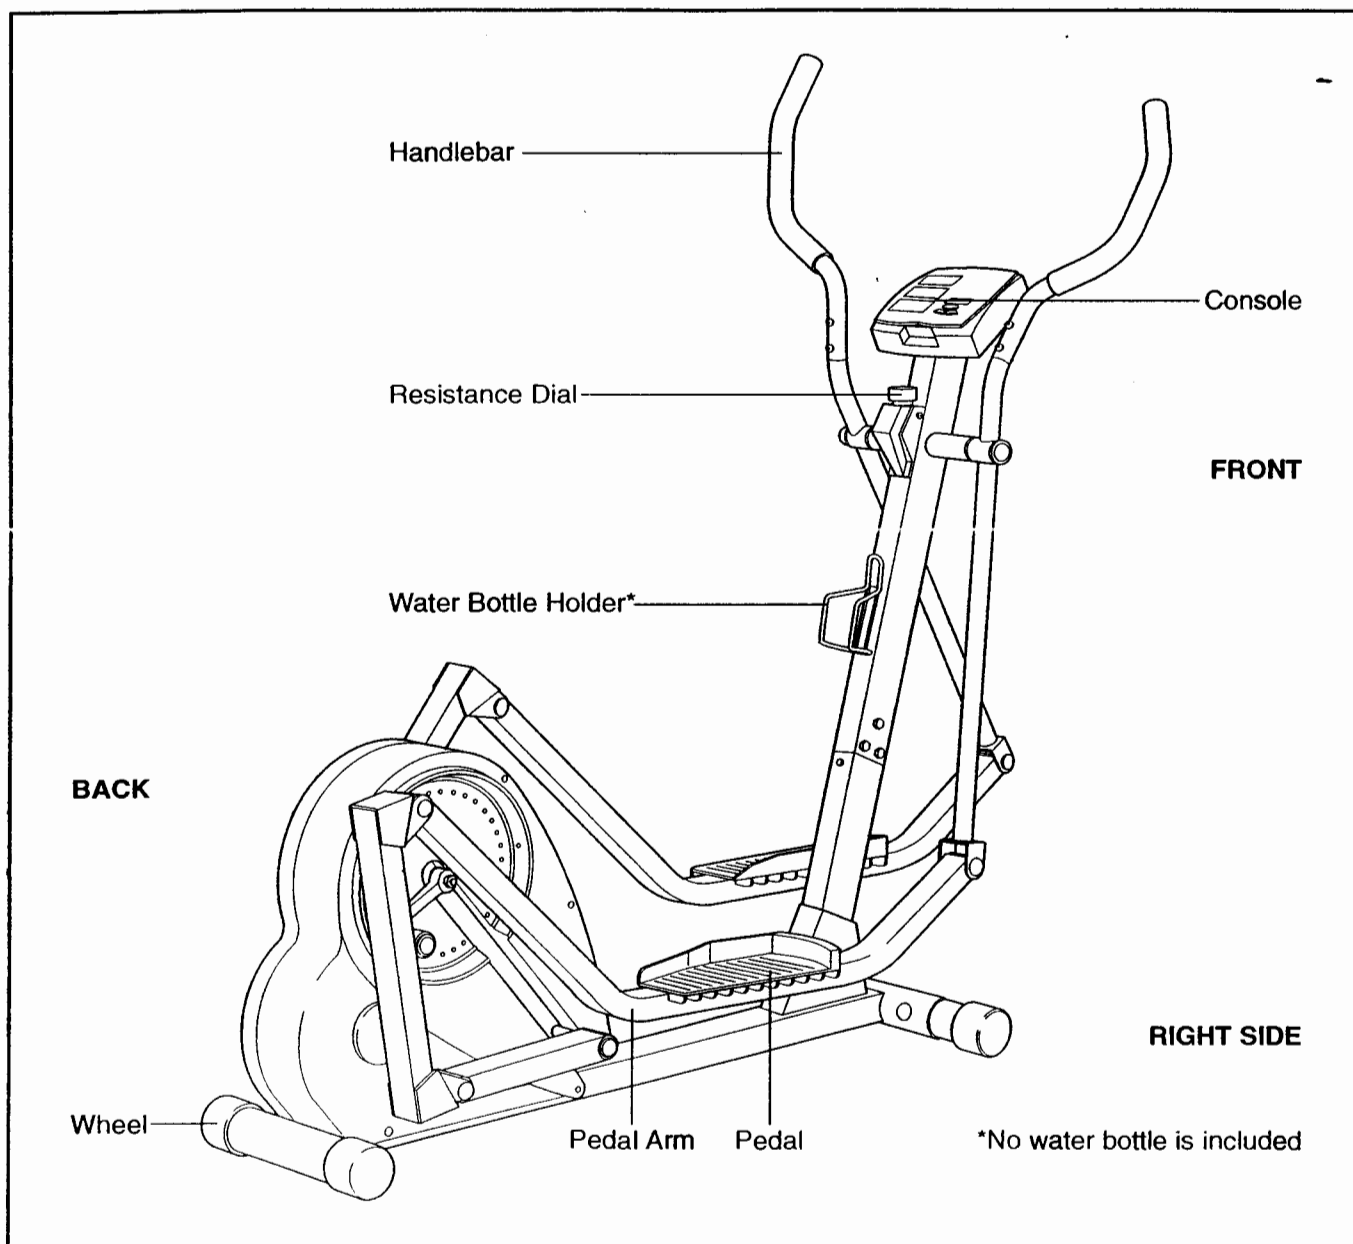


ASSEMBLY

Assembly requires two people. Place all parts of the elliptical crosstrainer in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed. **Assembly requires only the included tool.**

As you assemble the elliptical crosstrainer, use the drawings below to identify the small parts used in assembly. The number in parenthesis below each drawing refers to the key number of the part, from the PART LIST on page 14. The second number refers to the quantity used in assembly. **Note: Some small parts may have been pre-attached for shipping. If a part is not in the parts bag, check to see if it has been pre-attached.**

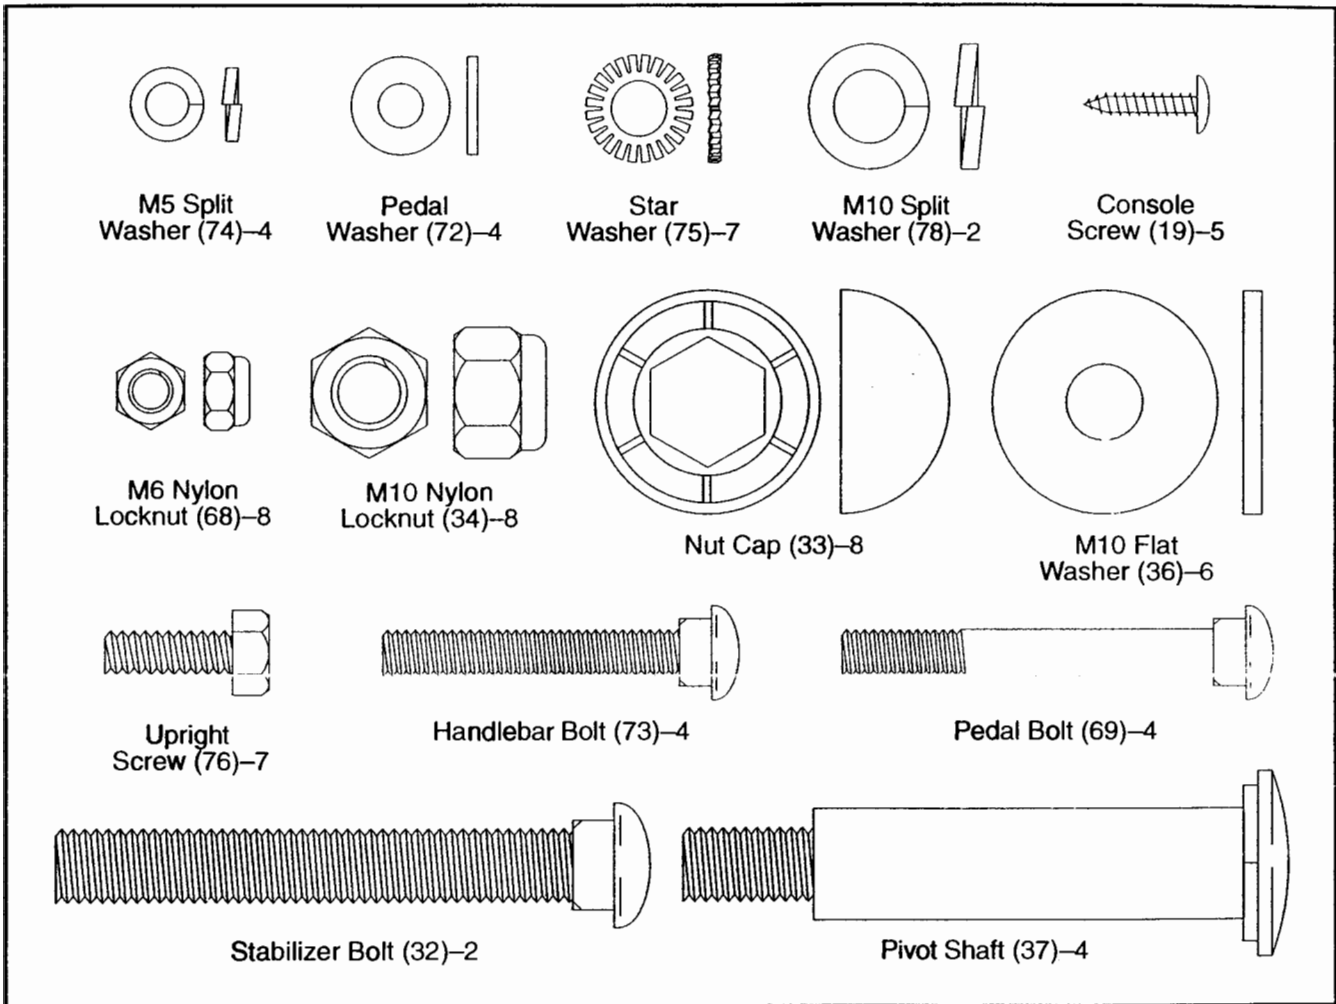


1. Hold the Front Stabilizer (30) against the curved bracket on the Frame (1). **Make sure that the Front Stabilizer is turned so the foam pads are facing the curved bracket.** Attach the Front Stabilizer with the two Stabilizer Bolts (32), two M10 Split Washers (78), and two M10 Nylon Locknuts (34). Press a plastic Nut Cap (33) onto each Nylon Locknut.

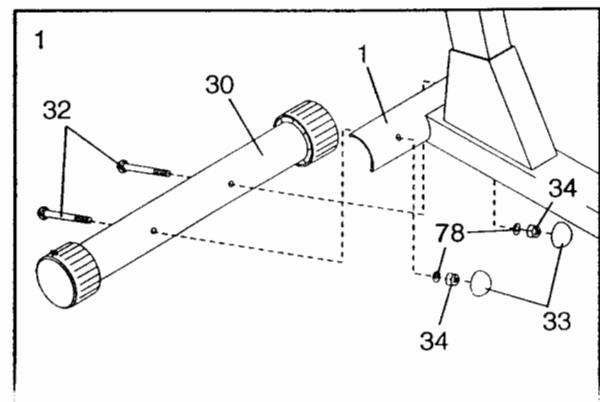

2. Remove the two Upright Screws (76) and Star Washers (75) from the Upright (2).


Pivot the Upright (2) to the vertical position as shown. Loosely thread seven Upright Screws (76) with Star Washers (75) into the Upright and the Frame (1). Then, firmly tighten all seven Upright Screws.

Tighten the Upright Nut (77).

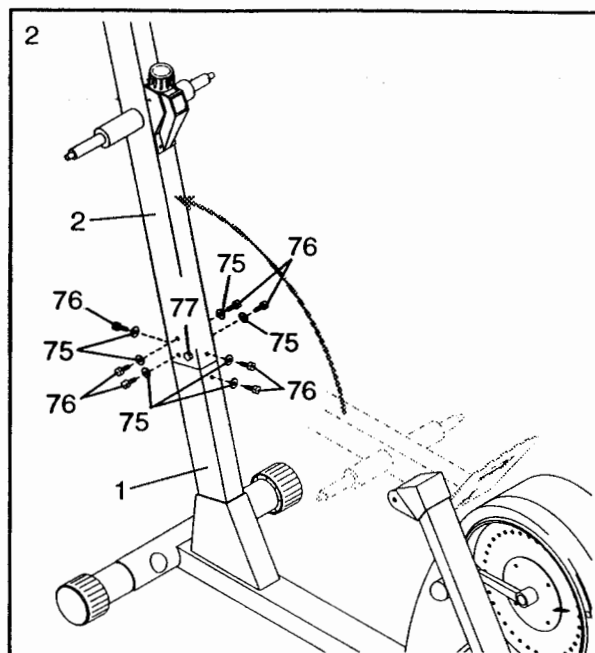

3. Identify the Left Pedal (13) by noting the position of the raised edge. Attach the Left Pedal to one of the Pedal Arms (7) with two Pedal Bolts (69), two Pedal Washers (72), and two M6 Nylon Locknuts (68) as shown. Note: There are three sets of holes in the Pedal Arm so the Left Pedal can be attached in any of three positions.


Attach the Right Pedal (not shown) to the other Pedal Arm (not shown) in the same way. Make sure that both Pedals are attached in the same position.

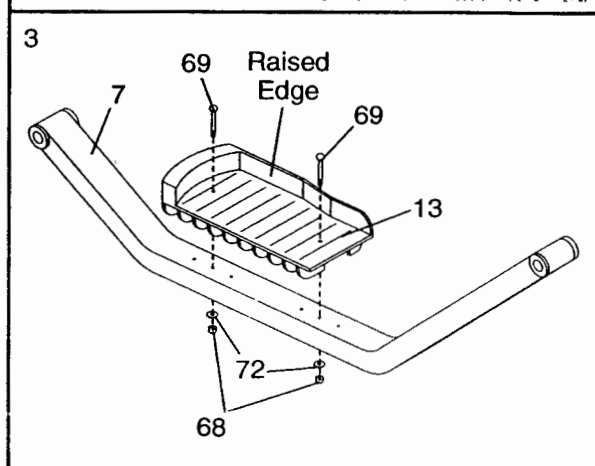

4. Identify the Left Handlebar Post (5), which is labeled with an "L" sticker.

Slide the Left Handlebar Post (5) onto the left end of the Handlebar Axle (21). **Make sure that the upper end of the Left Handlebar Post is angled forward as shown.** Tighten an M10 Nylon Locknut (34) with an M10 Flat Washer (36) onto the Handlebar Axle. Press a plastic Nut Cap (33) onto the Nylon Locknut.

Attach the Right Handlebar Post (3) to the right end of the Handlebar Axle (21) in the same way.

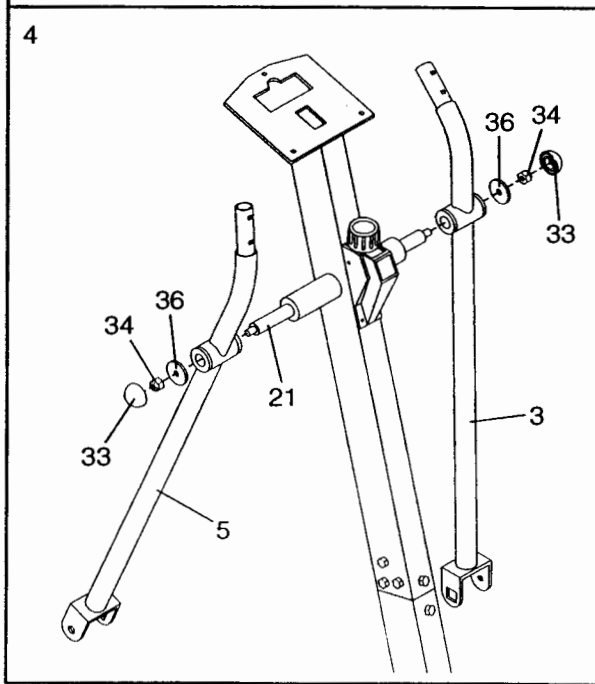


5. Set the Pedal Arm (7) with the Left Pedal (13) on the left side of the elliptical crosstrainer.

Hold the indicated end of the Pedal Arm (7) inside the bracket on the left Connecting Arm (8). Insert a Pivot Shaft (6) through both parts. **Make sure that the head of the Pivot Shaft is seated in the square hole in the Connecting Arm.**

Tighten an M10 Nylon Locknut (34) with an M10 Flat Washer (36) onto the Pivot Shaft (6). Press a Nut Cap (33) onto the Nylon Locknut.


Attach the other Pedal Arm (7) to the right Connecting Arm (not shown) in the same way.

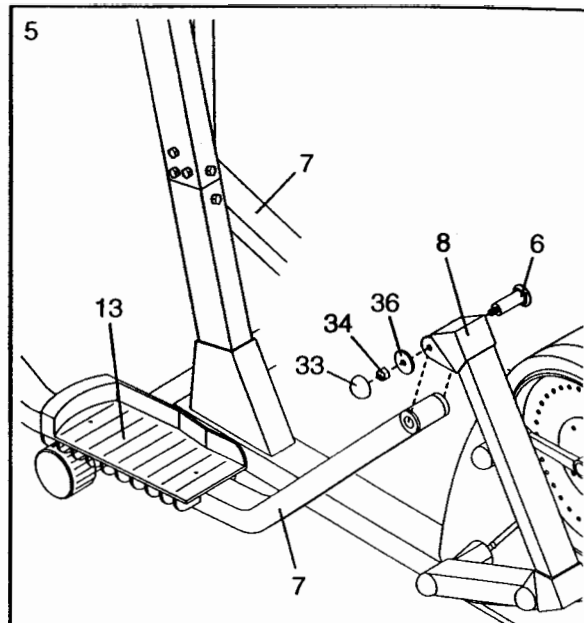

6. Hold the front end of the left Pedal Arm (7) inside the bracket on the Left Handlebar Post (5). Insert a Pivot Shaft (6) through both parts. **Make sure that the head of the Pivot Shaft is seated in the square hole in the Left Handlebar Post.**

Tighten an M10 Nylon Locknut (34) with an M10 Flat Washer (36) onto the Pivot Shaft (6). Press a Nut Cap (33) onto the Nylon Locknut.

Attach the right Pedal Arm (7) to the Right Handlebar Post (3) in the same way.

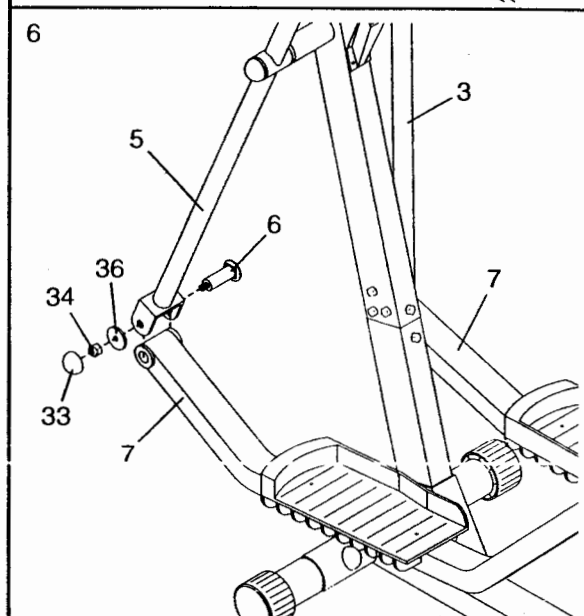


7. Identify the Left Handlebar (6), which is labeled with an "L" sticker.

Slide the Left Handlebar (6) onto the Left Handlebar Post (5). **Make sure that the Left Handlebar is turned as shown.** Attach the Left Handlebar with two Handlebar Bolts (73), two M5 Split Washers (74), and two M6 Nylon Locknuts (68).


Attach the Right Handlebar (4) to the Right Handlebar Post (3) in the same way.

Refer to the inset drawing. Press the Magnet Clip (79) onto the Right Handlebar (4). **Make sure that the Magnet Clip is seated in the indicated hole.**

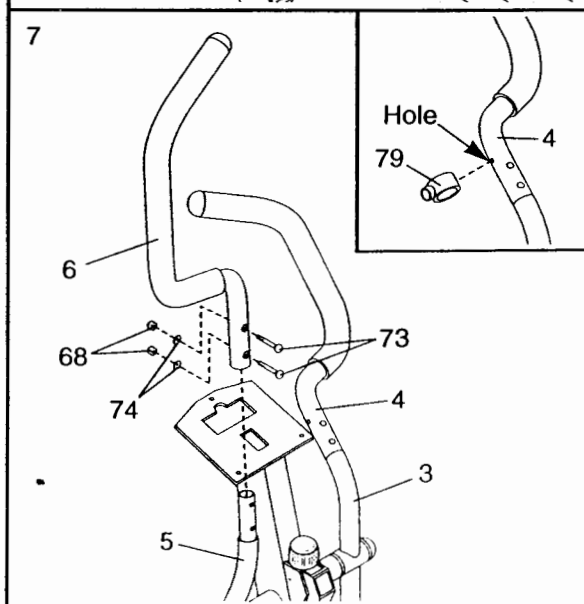

8. The Console (14) requires two "AA" batteries (included). To install the batteries, first turn the Console face down and remove the Battery Cover (15) as shown in the inset drawing. Next, insert the two batteries into the Console. **Make sure that the negative ends of the batteries (marked "—") are touching the springs in the Console.** Then, reattach the Battery Cover.

Attach the Console (14) to the Upright (2) with three Console Screws (19).

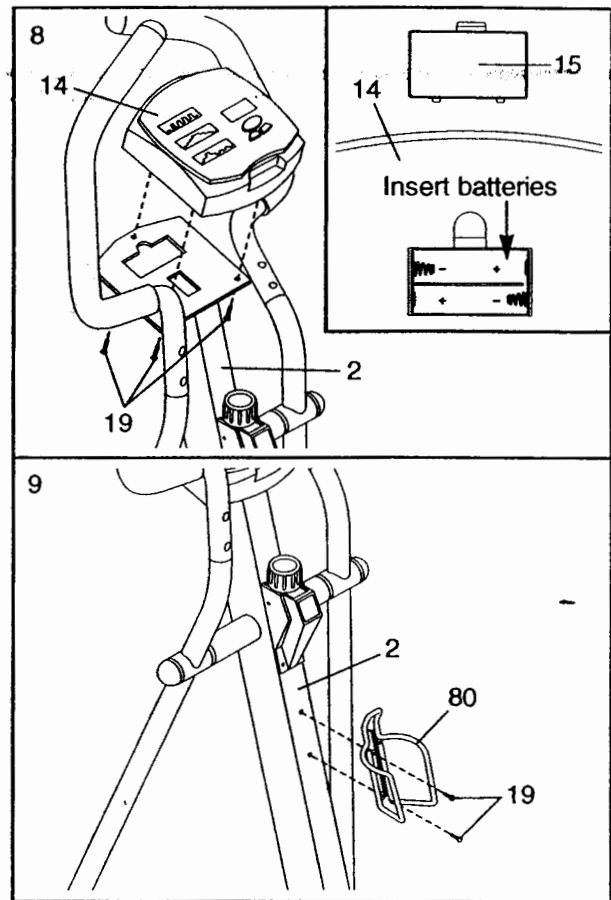


9. Attach the Water Bottle Holder (80) to the Upright (2) with two Console Screws (19). Note: No water bottle is included.

10. **Make sure that all parts of the elliptical crosstrainer are properly tightened. Note: Some hardware may be left over after assembly is completed.** To protect the floor or carpet from damage, place a mat under the elliptical crosstrainer.

HOW TO USE THE ELLIPTICAL CROSSTRAINER

EXERCISING ON THE ELLIPTICAL CROSSTRAINER


To mount the elliptical crosstrainer, hold the handlebars and step onto the pedal that is in the lowest position. Next, step onto the other pedal. Push the pedals until they begin to move with a continuous motion. **Note: The pedals can turn in either direction; choose the direction that is the most comfortable. To give variety to your exercise, change the direction of the pedals periodically.**

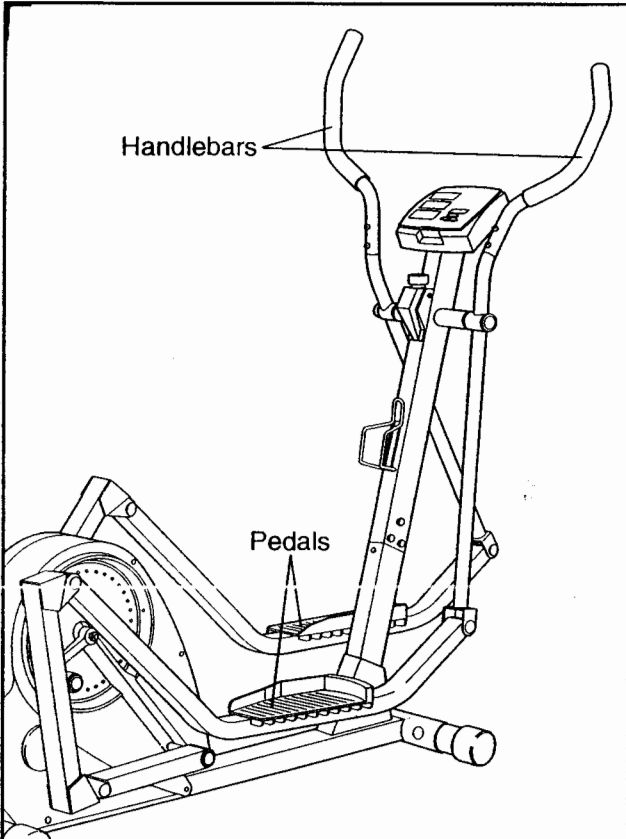

To dismount the elliptical crosstrainer, wait until the pedals come to a complete stop. **Note: The elliptical crosstrainer does not have a freewheel; the pedals will continue to move until the flywheel stops.** When the pedals are stationary, step off the highest pedal first. Then, step off the lowest pedal.


HOW TO ADJUST THE RESISTANCE

To adjust the resistance of the pedals, turn the resistance dial on the upright. Turn the dial clockwise to increase the resistance or counterclockwise to decrease the resistance. The scale below the resistance dial will help you select the desired resistance level.

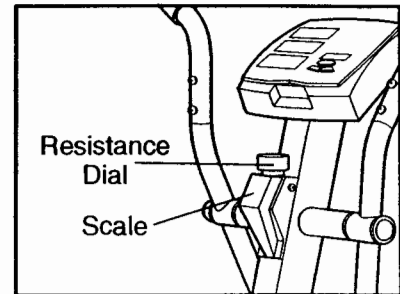

HOW TO USE THE HANDLEBARS

The handlebars are designed to work your upper body as you exercise on the elliptical crosstrainer. Alternately push and pull the handlebars in order to work your arms, back, and shoulders.

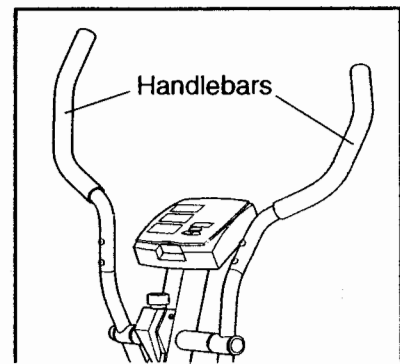

ADJUSTING THE POSITION OF THE PEDALS

The pedals can be adjusted to any of three positions. To change the position of the pedals, refer to assembly step 3 on page 6.

DESCRIPTION OF THE CONSOLE

As you exercise on the elliptical crosstrainer, the five-function console will display instant exercise feedback. In addition, the console allows you to set time or distance goals for your workouts. Three workout programs are also offered.

Each program guides you through an effective workout by prompting you to change the resistance of the pedals and the direction of the pedals at two-minute intervals. The five functions of the console are described below:

Scan—When an arrow points to the word “SCAN,” the console will display the time, speed, distance, and calories functions, for four seconds each, in a repeating cycle.

Time—When an arrow points to the word “TIME,” the console will display the elapsed time, up to 99 minutes and 59 seconds. Note: By pressing the ▲ or ▼ button while the time is displayed, you can set a time goal of 1 to 99 minutes. If a time goal is set, the console will count down instead of counting up.


Speed—When an arrow points to the word “SPEED,” the console will display your current speed, in miles per hour.

Distance—When an arrow points to the word “DISTANCE” (DIST), the console will display the distance you have traveled, up to 99.9 miles. Note: By pressing the ▲ or ▼ button while the distance is displayed, you can set a distance goal of 1 to 99 miles. If a distance goal is set, the console will count down instead of counting up.

Calories—When an arrow points to the word “CALORIES,” the console will display the approximate number of calories you have burned.

BATTERY INSTALLATION

Before the console can be operated, two “AA” batteries must be installed. See assembly step 8 on page 8 for installation instructions. Note: It is not necessary to remove the console to install batteries. Batteries can be installed through the access hole underneath the console.

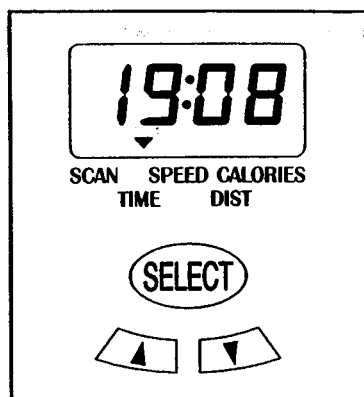


HOW TO OPERATE THE CONSOLE

Follow the steps below to operate the console. Note: If there is a thin sheet of clear plastic on the face of the console, remove it.

1. To turn on the power, press any button on the console or simply begin exercising.
2. Select one of the five functions:


Scan function—

When the power is turned on, the scan function will automatically be selected. One arrow will show that the scan function is selected, and a second arrow will show which function is currently displayed. Note: You can also select the scan function by repeatedly pressing the select button until an arrow points to the word “SCAN.”

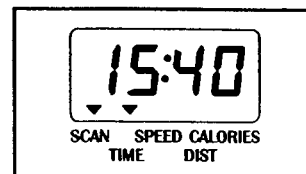

Time, speed, distance, or calories function—

To display one of these functions continuously, repeatedly press the select button. The arrows will show which function is selected. Make sure that there is not an arrow pointing to the word “SCAN.”

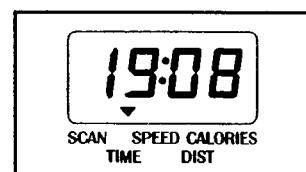

3. To reset the display, press the select button for four seconds.
4. To turn off the power, simply wait for about four minutes. **Note: If the pedals are not moved and the console buttons are not pressed for four minutes, the power will turn off automatically in order to conserve the batteries.**

HOW TO USE THE THREE WORKOUT PROGRAMS

Each workout program is designed to guide you through an effective twenty-minute workout. Refer to the three graphs on the console. Each graph is divided into ten columns and each column represents a two-minute period. The number at the top of each column shows the suggested resistance setting for that two-minute period. For example, to use the NORDIC CHALLENGE program, start with a low resistance setting during the first period, increase the setting during each of the next five periods, and then decrease the setting during each of the last three periods. To give variety to your workout, reverse the direction of the pedals each time the color of the column changes.

MAINTENANCE AND TROUBLE-SHOOTING


Inspect and tighten all parts of the elliptical crosstrainer every three months or as needed. Replace any worn parts immediately.

The elliptical crosstrainer can be cleaned with a soft, damp cloth. To prevent damage to the console, keep liquids away from the console and keep the console out of direct sunlight.

BATTERY REPLACEMENT


If the console does not function properly, the batteries should be replaced. For battery replacement instructions, refer to assembly step 8 on page 8. Note: It is not necessary to remove the console to replace the batteries. The batteries can be replaced through the access hole underneath the console.

If the console does not function properly after new batteries are installed, make sure that the magnet clip is in the proper position. The magnet clip should be seated in the hole in the right handlebar.

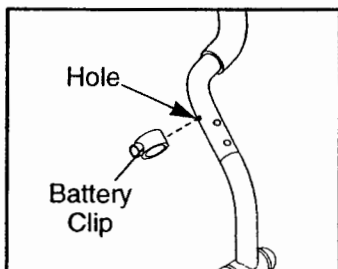


LUBRICATING THE ELLIPTICAL CROSSTRAINER

If the axles of the elliptical crosstrainer squeak as you exercise, apply a drop of household oil to each axle. Do not use spray lubricants. Never remove the side shields.

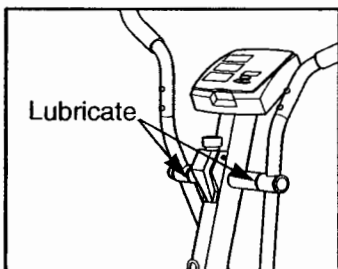

ADJUSTING THE LOCKNUTS ON THE PEDAL ARMS AND HANDLEBAR POSTS

If the elliptical crosstrainer does not move smoothly as you exercise, the nylon locknuts on the pedal arms and the handlebar posts can be adjusted. First, remove the three indicated nut caps from each side of

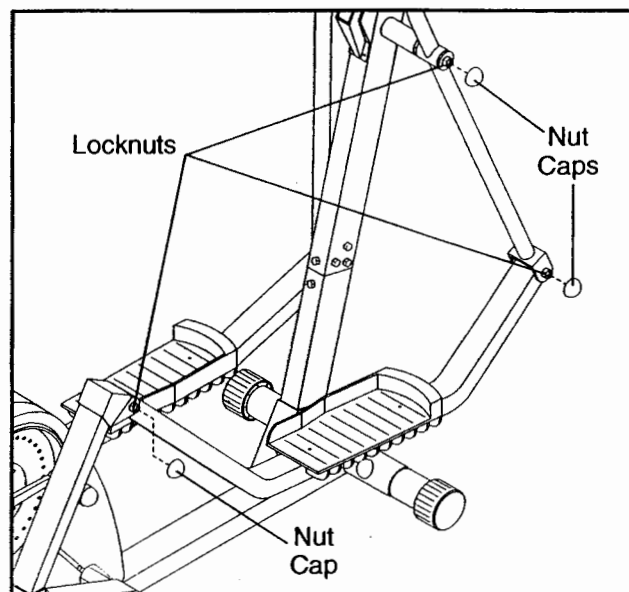

the elliptical crosstrainer. Next, loosen the indicated locknuts on each side of the elliptical crosstrainer about 1/4 turn. Exercise for a moment to see if the elliptical crosstrainer moves smoothly. If necessary, loosen the locknuts another 1/4 turn. Repeat this process until the elliptical crosstrainer moves smoothly. When the locknuts are properly adjusted, reattach the cap nuts.

CONDITIONING GUIDELINES

The following guidelines will help you to plan your exercise program. Remember that a proper diet and adequate rest are essential for successful results.

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems.

EXERCISE INTENSITY

Whether your goal is to burn fat or strengthen your cardiovascular system, the key to achieving the desired results is to exercise with the proper intensity. The proper intensity level can be found by using your heart rate as a guide. For effective exercise, your heart rate should be maintained at a level between 70% and 85% of your maximum heart rate as you exercise. This is known as your training zone.

You can find your training zone in the table below. Training zones are listed according to age and physical condition.

AGE	UNCONDITIONED TRAINING ZONE (BEATS/MIN)	CONDITIONED TRAINING ZONE (BEATS/MIN)
20	138-167	133-162
25	136-166	132-160
30	135-164	130-158
35	134-162	129-156
40	132-161	127-155
45	131-159	125-153
50	129-156	124-150
55	127-155	122-149
60	126-153	121-147
65	125-151	119-145
70	123-150	118-144
75	122-147	117-142
80	120-146	115-140
85	118-144	114-139

Burning Fat


To burn fat, you must exercise at a low intensity level for a sustained period of time. During the first few minutes of exercise, your body uses easily accessible *carbohydrate* calories for energy. Only after the first few minutes of exercise does your body begin to use stored *fat* calories for energy. If your goal is to burn fat, adjust the intensity of your exercise until your heart rate is near the low end of your training zone as you exercise.

Aerobic Exercise

If your goal is to strengthen your cardiovascular system, your exercise must be "aerobic." Aerobic exercise is activity that requires large amounts of oxygen for prolonged periods of time. This increases the demand on the heart to pump blood to the muscles, and on the lungs to oxygenate the blood. For aerobic exercise, adjust the intensity of your exercise until your heart rate is near the middle of your training zone.

HOW TO MEASURE YOUR HEART RATE

To measure your heart rate, first exercise for at least four minutes. Then, stop exercising and place two fingers on your wrist as shown. Take a six-second heart-beat count, and multiply the result by 10 to find your heart rate. For example, if your six-second heartbeat count is 14, your heart rate is 140 beats per minute. (A six-second count is used because your heart rate will drop rapidly when you stop exercising.) Adjust the intensity of your exercise until your heart rate is at the desired level.

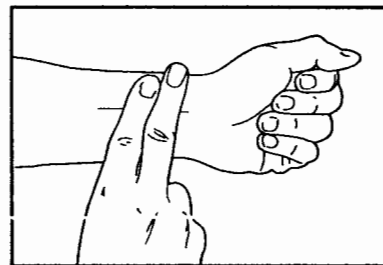

WORKOUT GUIDELINES

Each workout should include three important parts: (1) a warm-up, (2) training zone exercise, and (3) a cool-down.

Warming up

Warming up prepares the body for exercise by increasing circulation, delivering more oxygen to the muscles, and raising the body temperature. Begin each workout with 5 to 10 minutes of stretching and light exercise to warm up.

Training Zone Exercise

After warming up, increase the intensity of your exercise until your heart rate is in your training zone for 20 to 30 minutes.

Cooling Down

Finish each workout with 5 to 10 minutes of stretching. Stretching after exercise develops flexibility and helps prevent post-exercise problems.

EXERCISE FREQUENCY

To maintain or improve your condition, plan three workouts each week, with at least one day of rest between workouts. After a few months of regular exercise, you may complete up to five workouts each week, if desired.

The key to success is to make exercise a regular and enjoyable part of your daily life.

SUGGESTED STRETCHES

The correct form for several basic stretches is shown below. Move slowly as you stretch—never bounce.

1. Toe Touch Stretch

Stand with your knees bent slightly and slowly bend forward from your hips. Allow your back and shoulders to relax as you reach down toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Hamstrings, back of knees and back.

2. Hamstring Stretch

Sit with one leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Hamstrings, lower back and groin.

3. Calf/Achilles Stretch


With one leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward and move your hips toward the wall. Hold for 15 counts, then relax. Repeat 3 times for each leg. To cause further stretching of the achilles tendons, bend your back leg as well. Stretches: Calves, achilles tendons and ankles.

4. Quadriceps Stretch

With one hand against a wall for balance, reach back and grasp one foot with your other hand. Bring your heel as close to your buttocks as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Quadriceps and hip muscles.

5. Inner Thigh Stretch

Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin area as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Quadriceps and hip muscles.

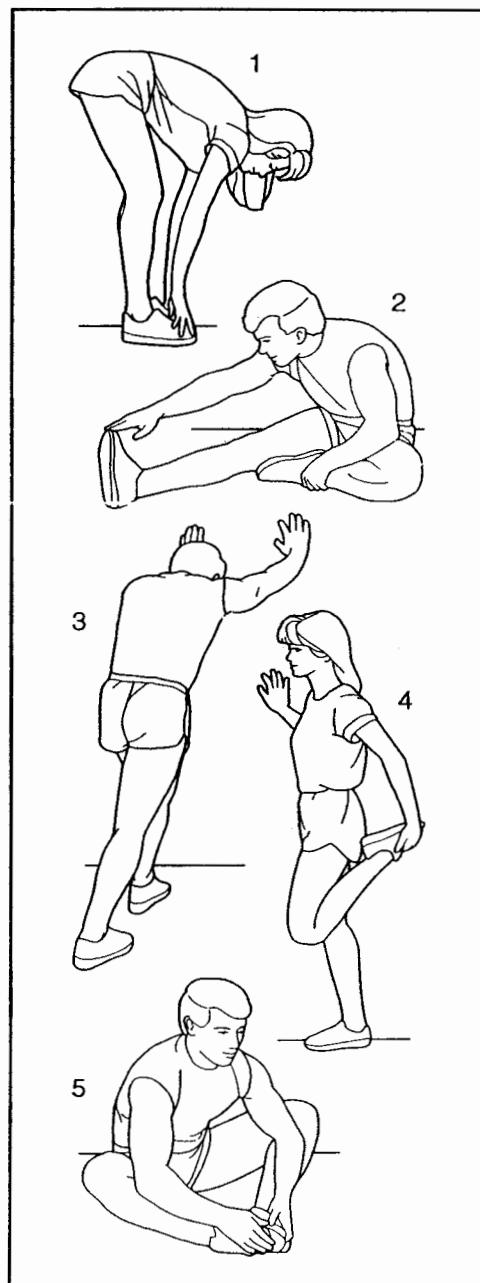

PART LIST—Model No. NT33130


R0200A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Frame	43	1	Long Upright Bolt
2	1	Upright	44	1	Idle Bolt
3	1	Right Handlebar Post	45	1	Idle Arm
4	1	Right Handlebar	46	1	Idle Spacer
5	1	Left Handlebar Post	47	3	Flywheel Bearing
6	1	Left Handlebar	48	1	Idle Wheel
7	2	Pedal Arm	49	1	Idle Nut
8	2	Connecting Arm	50	1	Drive Belt
9	2	Frame Arm	51	1	Resistance Strap
10	1	Left Side Shield	52	2	Tension Spring
11	1	Right Side Shield	53	1	Cable Clamp Nut
12	1	Right Pedal	54	4	Cable Clamp Washer
13	1	Left Pedal	55	1	Spring Link
14	1	Console	56	1	Cable Clamp Bolt
15	1	Battery Cover	57	3	Flange Nut
16	1	Reed Switch/Wire	58	1	Flywheel Bolt
17	1	Reed Switch Clamp	59	1	Crank Shaft
18	1	Clamp Screw	60	2	Crank Bearing
19	5	Console Screw	61	2	Snap Ring
20	2	Plastic Bushing	62	1	Right Crank Arm
21	1	Handlebar Axle	63	2	Nylon Washer
22	1	Resistance Control/Cable	64	1	Left Crank Arm
23	1	Resistance Knob	65	1	Large Pulley
24	1	Knob Screw	66	4	Pulley Nut
25	1	Resistance Control Cover	67	4	Pulley Screw
26	2	Control Screw	68	8	M6 Nylon Locknut
27	2	Cover Screw	69	4	Pedal Bolt
28	2	Foam Grip	70	12	Side Shield Screw
29	2	Handlebar Endcap	71	3	Long Side Shield Screw
30	1	Front Stabilizer	72	4	Pedal Washer
31	2	Endcap	73	4	Handlebar Bolt
32	2	Stabilizer Bolt	74	4	M5 Split Washer
33	14	Nut Cap	75	7	Star Washer
34	14	M10 Nylon Locknut	76	7	Upright Screw
35	24	Brass Bushing	77	1	Upright Nut
36	13	M10 Flat Washer	78	2	M10 Split Washer
37	6	Pivot Shaft	79	1	Magnet Clip
38	1	Flywheel	80	1	Water Bottle Holder
39	1	Eyebolt	81	2	Wheel
40	1	Eyebolt Washer	#	1	User's Manual
41	1	Eyebolt Nut	#	1	Universal Tool
42	1	Idle Spring			

Note: # indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts.

EXPLODED DRAWING—Model No. NT33130

R0200A

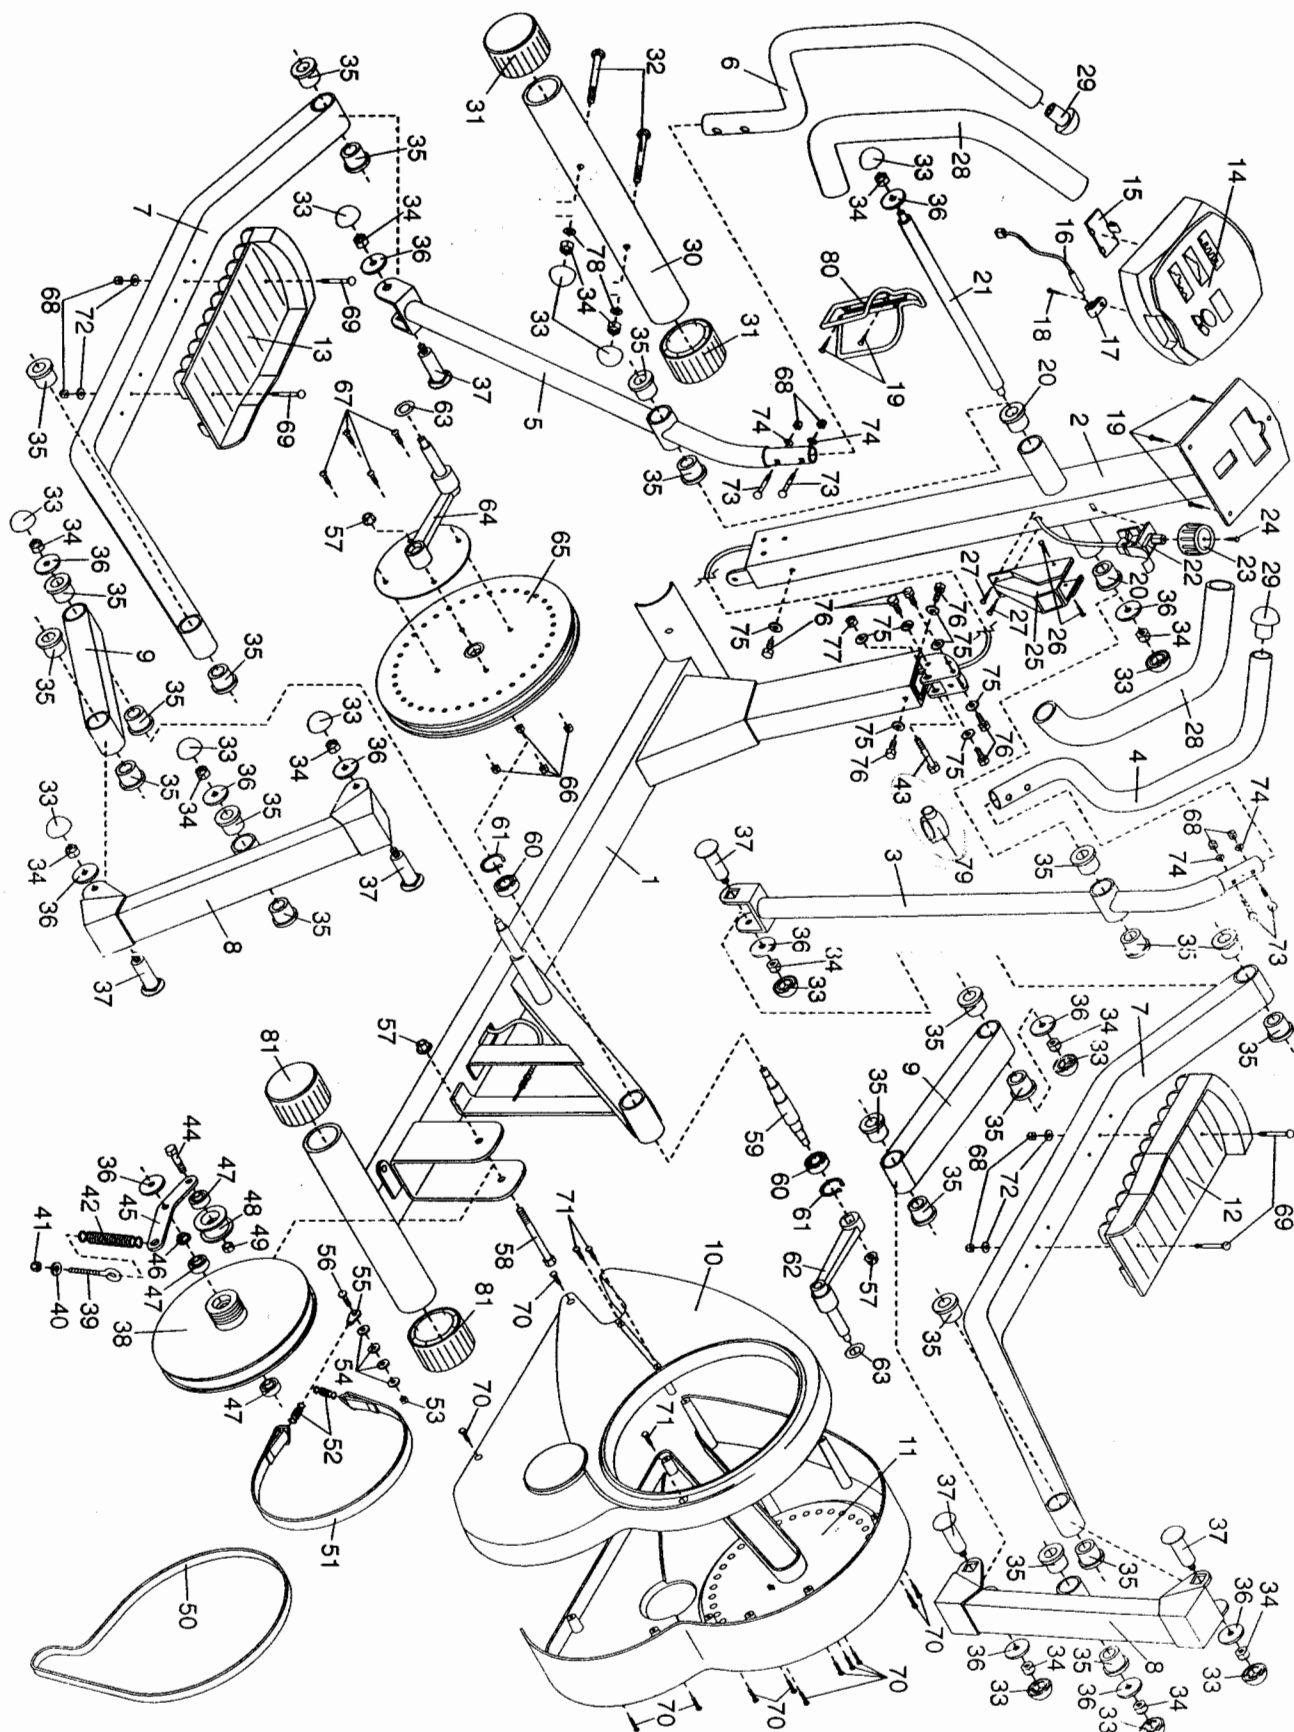

HOW TO ORDER REPLACEMENT PARTS

To order replacement parts, simply call our Customer Service Department toll-free at 1-888-825-2588, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please be prepared to give the following information when calling:

- The MODEL NUMBER of the product (NT33130)
- The NAME of the product (NordicTrack® 910e elliptical crosstrainer)
- The SERIAL NUMBER of the product (see the front cover of this manual)
- The KEY NUMBER and DESCRIPTION of the part(s) from page 14 of this manual.

LIMITED WARRANTY

WHAT IS COVERED—The entire NordicTrack® 910e elliptical crosstrainer ("Product") is warranted to be free of all defects in material and workmanship.

WHO IS COVERED—The original purchaser or any person receiving the Product as a gift from the original purchaser.

HOW LONG IS IT COVERED—ICON Health & Fitness, Inc. ("ICON"), warrants the product for one year after the date of purchase. Labor is covered for one year.

WHAT WE DO TO CORRECT COVERED DEFECTS—We will ship to you, without charge, any replacement part or component, providing the repairs are authorized by ICON first and are performed by an ICON trained and authorized service provider, or, at our option, we will replace the Product.

WHAT IS NOT COVERED—Any failures or damage caused by unauthorized service, misuse, accident, negligence, improper assembly or installation, alterations, modifications without our written authorization or by failure on your part to use, operate, and maintain as set out in your User's Manual ("Manual").

WHAT YOU MUST DO—Always retain proof of purchase, such as your bill of sale; store, operate, and maintain the Product as specified in the Manual; notify our Customer Service Department of any defect within 10 days after discovery of the defect; as instructed, return any defected part for replacement or, if necessary, the entire product, for repair.

USER'S MANUAL—It is VERY IMPORTANT THAT YOU READ THE MANUAL before operating the Product. Remember to do the periodic maintenance requirements specified in the Manual to assure proper operation and your continued satisfaction.

HOW TO GET PARTS AND SERVICE—Simply call our Customer Service Department at 1-888-825-2588 and tell them your name and address and the serial number of your Product. They will tell you how to get a part replaced, or if necessary, arrange for service where your Product is located or advise you how to ship the Product for service. Before shipping, always obtain a Return Authorization Number (RA No.) from our Customer Service Department; securely pack your Product (save the original shipping carton if possible), put the RA No. on the outside of the carton and insure the product. Include a letter explaining the product or problem and a copy of your proof of purchase if you believe the service is covered by warranty.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

No one is authorized to change, modify or extend the terms of this limited warranty. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

ICON HEALTH & FITNESS, INC., 1500 S. 1000 W., LOGAN, UT 84321-9813