



K Keypad lock/Format key 


In idle mode: Insert *. *Long press* to lock/unlock the keypad.
 During a call: Insert *.
 In call log reviewing mode: Press repeatedly to view the alternate dialing sequences.

L Mute key 

During a call: Mute/Unmute the handset microphone.

M Call transfer key & Intercom/Conference key 

In idle mode: Initiate an internal call.
 During a call: Hold the line and page another handset. *Long press* to start a conference between internal and external calls.

N Ringer on/off key & Pause key 

In idle mode: Insert #. *Long press* to turn the ringer on/off.
 During a call: Insert #.
 When predialling: *Long press* to insert a pause marked "P".
 In editing mode: *Long press* to switch between upper and lower case.

O Microphone


P Loudspeaker

Q Battery door

 Danger

Handsfree activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

3.3 Display icons

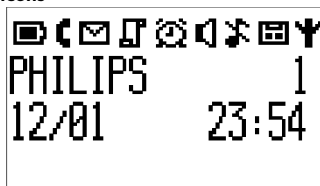

Indicates that the battery is fully charged. Icon blinks during charge and when the battery is low.



Indicates that the battery is fully discharged.



Indicates that an external call is connected or held. Icon blinks when receiving an incoming call.



Indicates new voice messages are received. Icon blinks when there are unread messages.



Displays when there are existing call log records or when call log is accessed. Icon blinks when there are new missed calls.



Displays when the alarm clock is activated.



Displays when the loudspeaker is activated.



Displays when ringer off is activated.




Indicates that the telephone answering machine is activated. Icon blinks when the memory for answering machine messages is full.



Indicates that the handset is registered and within range of the base station. Icon blinks when the handset is out of range or is searching for a base.

3.4 Overview of the base station

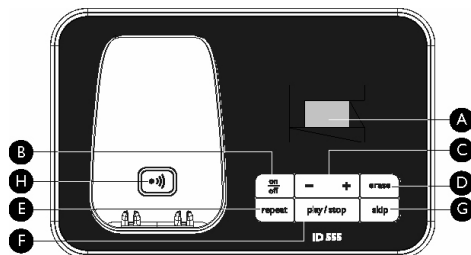

A Message Counter

Blinking: Indicates number of new messages.

Steady: Indicates number of old messages.

2 bars flashing: Indicates that there is no more memory left.

Indicates the volume level (L0 - L5) when **- +** is pressed.

Indicates the current message number during playback.

B On/Off key

In idle mode, **short press** to switch on/off the answering machine.

C Volume keys **- +**

Increase/Decrease speaker volume during message playback.

There are 5 volume levels.

The call screening is activated if the speaker volume is not set to off.

D Erase key

Delete current message during message playback.

Long press to delete all messages when the answering machine is in idle mode (unread messages will not be deleted).

E Repeat key

Go to previous message if pressed twice during message playback.

Replay current message if pressed once during message playback.

F Play/Stop key

Play phone messages (the first recorded will be played first).

Stop message playback.

G Skip key

Skip to the next message during message playback.

H Handset locator key


Page handset.

Long press to start registration procedure.

4 Getting started

4.1 Connect the base station

- 1 Place the base station in a central location near the telephone line socket and electricity socket.
- 2 Connect the line cord and the power cable to their corresponding connectors at the bottom of the base station as shown.

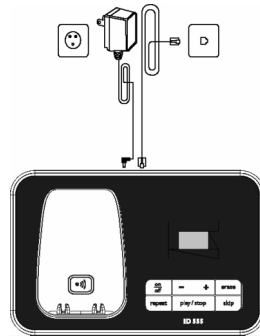

- 3 Connect the other end of the line cord to the telephone line socket and the other end of the power cable to the electricity socket.

Note

The line adaptor may not be attached to the line cord. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

Warning

Avoid placing the base station too close to large metal objects such as filing cabinets, radiators or electrical appliances. This can impair the range and sound quality. Buildings with thick internal and external walls may impair transmission of signals to and from the base.

Warning

The base station does not have an ON/OFF switch. Power is applied when the power adaptor is plugged into the unit and connected to the electricity socket. The only way to power down the unit is to unplug the power adaptor from the electricity socket. Therefore, ensure that the electricity socket is easily accessible. The power adaptor and telephone line cord have to be connected correctly, as incorrect connection could damage the unit.

Always use the telephone line cord supplied with the unit. Otherwise, you may not get a dial tone.

4.2 Install your phone

Before using the handset, the batteries have to be installed and fully charged.




4.2.1 Install battery



Warning

Always use Li-ion rechargeable battery supplied with your unit. There could be risk of battery leakage if you use other battery types.

- 1 Slide out the battery cover.



- 2 Place the batteries and replace the cover.

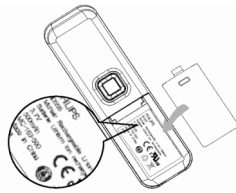


4.2.2 Charge battery

Warning




The handset must be charged for at least 24 hours before using it for the first time.


When the battery level becomes low, the low battery sensor alerts you by sounding an audible tone and blinking the battery icon.


If the battery level becomes exceedingly low, the phone automatically switches off and any function in progress will not be saved.




4.3 Menu structure

The table below describes the menu tree of your phone. Press  in idle mode to enter the main menu. Use navigation keys  to navigate within the menus and press left softkey  to enter each option.

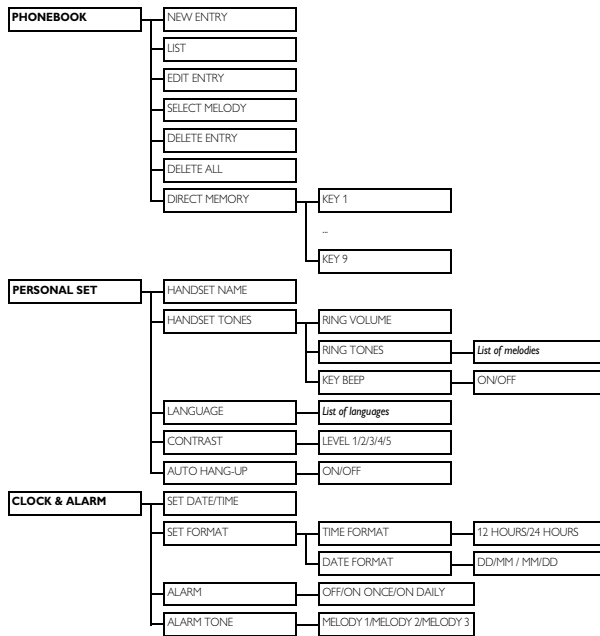

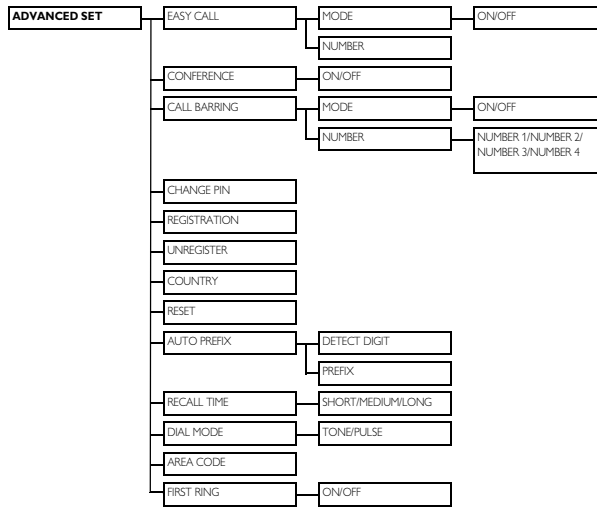

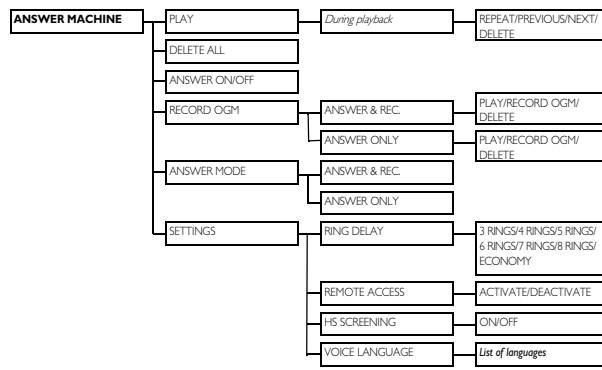

5 Using your phone

5.1 Make a call

5.1.1 Predialling

- 1 Dial the number (maximum 24 digits).
- 2 Press **TALK** or **END** key.
 - The call is initiated.

*** Tip**

You may insert a prefix number to the beginning of your predial number, see "Set area code" on page 38 for more information.

5.1.2 Direct dialling

- 1 Press **TALK** or **END** key to take the line.
- 2 Dial the number.
 - The call is initiated.

5.1.3 Call from redial list

- 1 Press **redial** key in idle mode.
- 2 Scroll **UP** to an entry in the redial list.
- 3 Press **TALK** or **END** key.
 - The call is initiated.

*** Tip**

The handset stores the last 20 numbers dialled. The last number dialled will appear first in the redial list. If the redial number matches a phonebook entry, the name will be displayed instead.

5.1.4 Call from the call log

- 1 Press **call log** in idle mode.
- 2 Scroll **UP** to **CALL LIST** or **ANSWER MACHINE** and press **SELECT** to enter the respective sub-menus.
- 3 Scroll **UP** to an entry.
- 4 Press **TALK** or **END** key.
 - The call is initiated.

Note

You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log (see "Access Call log" on page 27).

5.1.4.1 To choose the format for call log display

You must choose the correct format to dial the area code and number of the call log record chosen. The original incoming number from the call log will appear as a 7, 10 or 11-digit number. If it is a long distance call, the prefix digit 1 will automatically appear in front of the 10-digit local calls.

- 1 When viewing the call log, press **FORMAT** to change the format of the call log display as it should be dialled from your location. For example, if the call log entry appears as "234-567-8900":
 - Press **FORMAT** once to display "1-234-567-8900"
 - Press **FORMAT** twice to display "567-8900"
 - Press **FORMAT** 3 times to display "1-567-8900"

- Press **[*#]** 4 times to display "1-234-567-8900" again.
- 2 To dial the current displayed number, press **[*#]** key.
 - The call is initiated.

Note

You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log (see "Access Call log" on chapter 6.9.1).

When saving the call list entry to phonebook, the original incoming number will be saved instead of the current displayed number.

If the first 3 digits of the incoming number corresponds to the local area code set in your phone, they will be filtered automatically when you press the **[TALK]** or **[END]** key to dial. To change the local area code, please refer to see "Set area code" on chapter 9.10.

5.1.5 Call from the phonebook

- 1 Press **[Home]** in idle mode.
- 2 Scroll **[Up]** to a phonebook entry.
- 3 Press **[TALK]** or **[END]** key.
 - The call is initiated.

*** Tip**

Instead of scrolling **[Up]** to browse the phonebook entries, you can press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing **[2]** will show the entries starting with A. Pressing **[2]** again will show the entries starting with B, etc...

5.2 Answer a call

When the phone rings, press **[TALK]** key.

- The call is established.

Note

Incoming call has priority over other events. Whenever there is an incoming call, other status in progress such as phone setting, menu navigation, etc will be aborted.

Danger

When the handset rings during an incoming call, please do not hold the handset too close to your ear, as the volume of the ringing tone may damage your hearing.

5.2.1 Handsfree answering

When the phone rings, press **[M]** key.

- The handset loudspeaker is activated.

Danger

Handsfree activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

5.3 End a call

To end a conversation, press **[END]** key.

*** Tip**

If **AUTO HANG-UP** mode is activated (see "Activate/Deactivate Auto Hang-up" on page 31), you can simply place the handset back to its base station to end the call. This feature is activated by default.

Note

The call duration will be displayed on the handset screen for about 5 seconds.

6 Use more of your phone

6.1 Switch the handset on/off

Press and hold **[END]** key for 3 seconds to switch on/off the handset in idle mode.

6.2 Keypad lock/unlock

Press and hold **[*]** key for 2 seconds to lock/unlock the keypad in idle mode.

6.3 Text or number entry

When you select a field in which you can enter text, you can enter the letters that are printed on the keys by pressing the relevant key once or several times. For example, to enter the name "PAUL":

- 1 Press **[7]** once: **P**
- 2 Press **[2]** once: **PA**
- 3 Press **[8]** twice: **PAU**
- 4 Press **[5]** three times: **PAUL**

The table below gives you the character assignment during text or number entry:

Keys	Assigned characters
[1]	space 1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ §
[2]	a b c 2 à ä ç â æ
[3]	d e f 3 è é Δ Φ
[4]	g h i 4 i Γ

[5]	j k l 5 Λ
[6]	m n o 6 ñ ò ö
[7]	p q r s 7 β Π Θ Σ
[8]	t u v 8 ù ü
[9]	w x y z 9 ø Ω Ξ Ψ
[0]	. 0 , / ; " ' ! ; ? ; * + - % \ ^ _
#	Long press to switch between upper and lower case.
[*]	*

* Tip

Press **[BACK]** to delete the last digit or character entered.

6.4 Call in progress

Some options are available to you during a call. The available options are:

6.4.1 Adjust earpiece volume

During a call, press **[VOLUME UP]** to select from **VOLUME 1** to **VOLUME 3**.

6.4.2 Mute/Unmute microphone



When the microphone is muted, your correspondent cannot hear you.

- 1 During a call, press **[MUTE]** to turn off the microphone.
- 2 Press **[MUTE]** again to turn on the microphone.


6.4.3 Activate/Deactivate loudspeaker mode

Danger


Handsfree activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

- 1 During a call, press  key to activate the loudspeaker mode.
- 2 Press  key again to return to normal mode.

6.4.4 Adjust loudspeaker volume

During a call in handsfree mode, press  to select from **VOLUME 1** to **VOLUME 5**.

6.4.5 Initiate a second call (subscription dependent)

During a call, press  **OPTION** and select **START 2ND CALL** to put the current call on hold and initiate a second external call. Then enter the phone number of the second call.



6.4.6 Consult phonebook

During a call, press  **OPTION** and select **PHONEBOOK** to access and review phonebook entries.





6.5 Call waiting

If you have subscribed to Call Waiting service, the earpiece will emit a beep tone to inform you that there is a second incoming call. The number or

name of the second caller will also be displayed on your phone if you have subscribed to Caller Line Identification service (CLI). Please contact your network provider for more information on this service.

- When you receive a second incoming call while on the phone, press  +  to put the current call on hold and answer the second call

OR

- Press  +  to end the current call and answer the second call.
- Press  +  subsequently to toggle between these 2 calls.

The above operations may be different according to your network.

Note

The call waiting indicator displays during 40 seconds. The missed call information will be displayed in the call log. (see "Access Call log" on page 27)

6.6 Caller Line Identification

Caller Line Identification (CLI) is a special service that you may subscribe from your network operator. If you have subscribed to CLI service, the identity of the caller (caller's number or name) will be displayed on your handset during an incoming call. If you have not subscribed to this service, or if the caller has chosen to withhold the number, the identity of the caller will not be displayed. Please contact



your network provider for more information on this service.

6.7 Using your Phonebook

Your phone can store up to 200 phonebook memories, including 10 direct access memories (☐1☐ to ☐9☐). Depending on your country, Key 1 and Key 2 may be preset to the voice mail number and information service number of your network operator respectively. Each phonebook entry can have a maximum of 24 digits for the phone number and 14 characters for name.

6.7.1 Access phonebook

- 1 Press **PHONEBOOK** in idle mode and scroll **UP** to browse the phonebook.
 - *The phonebook entries are listed in alphabetical order.*
- 2 To view the details of a phonebook entry, scroll **UP** to the phonebook entry and press **SELECT**.
- 3 To dial a number from the phonebook, scroll **UP** to the phonebook entry and press **CALL**.

*** Tip**
 Instead of scrolling **UP** to browse the phonebook entries, you can press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing **1** will show the entries starting with A. Pressing **1** again will show the entries starting with B, etc...



6.7.2 Store a contact in the phonebook

- 1 Press **menu** in idle mode, press **SELECT** to enter **PHONEBOOK**, press **SELECT** to enter **NEW ENTRY**.
- 2 Enter the name of the contact (maximum 14 characters) and press **OK**.
- 3 Enter the phone number (maximum 24 digits) and press **OK**.
 - *A validation tone is emitted.*

*** Tip**
 You cannot store a new phonebook entry when the memory is full. In this case, you have to delete existing entries to make space for new entries.

6.7.3 Edit a phonebook entry

- 1 Press **menu** in idle mode, press **SELECT** to enter **PHONEBOOK**, scroll **UP** to **EDIT ENTRY** and press **SELECT**.
- 2 Scroll **UP** to select an entry you wish to edit and press **SELECT**.
- 3 Press **CLEAR** to erase the letters one by one, enter the name and press **OK**.
- 4 Press **CLEAR** to erase the digits one by one, enter the phone number and press **OK**.
 - *A validation tone is emitted.*



6.7.4 Set melody

With this function you can personalize the melody played when someone in the phonebook calls you.

Note

You need to subscribe to Caller Line Identification service to be able to benefit from this feature.

- 1 Press in idle mode, press to enter **PHONEBOOK**, scroll to **SELECT MELODY** and press .
- 2 Scroll to select an entry you wish to set the melody for and press .
- 3 Press to set or change the melody for the contact.
- 4 Scroll to the melody list and press to confirm.
 - A validation tone is emitted.

6.7.5 Delete a phonebook entry

- 1 Press in idle mode, press to enter **PHONEBOOK**, scroll to **DELETE ENTRY** and press .
- 2 Scroll to select an entry you wish to delete and press .
- 3 **DELETE?** is displayed on the screen. Press to confirm deletion.
 - A validation tone is emitted.

6.7.6 Delete the phonebook list

- 1 Press in idle mode, press to enter **PHONEBOOK**, scroll to **DELETE ALL** and press .
- 2 **DELETE ALL?** is displayed on the screen. Press to confirm deletion.
 - A validation tone is emitted.

6.7.7 Direct Access Memory

You can store up to 9 direct access memories (Keys to). A long press on the keys in idle mode will automatically dial the stored phone number. Depending on your country, Key 1 and Key 2 may be preset to the voice mail number and information service number of your network operator respectively.

6.7.7.1 Store Direct Access Memory

- 1 Press in idle mode, press to enter **PHONEBOOK**, scroll to **DIRECT MEMORY** and press .
- 2 Scroll to select a key (Keys 1 to 9) and press .
 - The stored number is displayed (if any).
- 3 Press to display the menu options.
- 4 Press to select **EDIT**.

- 5 Scroll \uparrow to the entry you wish to store as direct access memory and press \square SELECT to view the details.
- 6 Press \square SELECT to confirm.
 - A validation tone is emitted.

6.7.7.2 Delete Direct Access Memory

- 1 Press \square menu in idle mode, press \square SELECT to enter **PHONEBOOK**, scroll \uparrow to **DIRECT MEMORY** and press \square SELECT.
- 2 Scroll \uparrow to select a key (Keys 1 to 9) and press \square SELECT.
 - The stored number is displayed (if any).
- 3 Press \square SELECT to display the menu options.
- 4 Scroll \uparrow to **DELETE** and press \square SELECT.
 - A validation tone is emitted.

6.8 Using the Redial list

The redial list stores the last 20 numbers dialed. A maximum of 24 digits can be displayed for each entry.

6.8.1 Access Redial list

- 1 Press \square redial in idle mode and scroll \uparrow to browse the redial list.
 - The last number dialled will appear first in the redial list. If the redial number matches a phonebook entry, the name will be displayed instead.

Note

To return to idle mode, press \square END key.

6.8.2 Save a redial number into the phonebook

- 1 Press \square redial in idle mode and scroll \uparrow to select an entry. Press \square SELECT to view the details.
- 2 Press \square redial and press \square SELECT to select **SAVE NUMBER**.
- 3 Enter the name of the contact (maximum 14 characters) and press \square OK.
- 4 Edit the number if necessary and press \square OK.
 - A validation tone is emitted.

Note

Press \square CLEAR to delete the last digit or character entered.

6.8.3 Delete a redial number

- 1 Press \square redial in idle mode and scroll \uparrow to select an entry.
- 2 Press \square redial, scroll \uparrow to **DELETE** and press \square OK.
- 3 **DELETE?** is displayed on the screen. Press \square OK again to confirm deletion.
 - A validation tone is emitted.

6.8.4 Delete the redial list

- 1 Press \square redial in idle mode.
- 2 Press \square redial, scroll \uparrow to **DELETE ALL** and press \square OK.

- DELETED ALL?** is displayed on the screen.
 Press **OK** again to confirm deletion.
 - A validation tone is emitted.

6.9 Using the Call log

The call log offers quick access to the **CALL LIST** and **ANSWER MACHINE** events. If you have subscribed to Caller Line Identification service, the identity of the caller (caller's number or name) will be displayed together with the date and time of the call*. The **CALL LIST** records the last 50 entries of the incoming calls. The calls (missed and received) are displayed in chronological order with the most recent call at the top of the list. When the call list is empty, the screen displays **LIST EMPTY**.

Note

* If the identity of the caller is withheld or the network does not provide the date and time information, then only the date and time of the call will be displayed. If you have not subscribed to Caller Line Identification service, there will not be any information displayed in the call log.

6.9.1 Access Call log

- 1 Press **call log** in idle mode, scroll **up** to **CALL LIST** and **ANSWER MACHINE** and press **SELECT** to enter the respective sub-menus.

6.9.2 Save a call list entry into the phonebook

- 1 Press **call log** in idle mode and scroll **up** to select an entry. Press **SELECT** to view the details.
- 2 Press **radial** and press **SELECT** to select **SAVE NUMBER**.
- 3 Enter the name of the contact (maximum 14 characters) and press **OK**.
- 4 Edit the number (if necessary) and press **OK**.
 - A validation tone is emitted.

6.9.3 Delete a call list entry

- 1 Press **call log** in idle mode, press **SELECT** to enter **CALL LIST**, scroll **up** to an entry in the call list and press **OPTION**.
- 2 Scroll **up** to **DELETE ENTRY** and press **SELECT**.
- 3 Press **OK** to confirm deletion.
 - A validation tone is emitted.

6.9.4 Delete the call list

- 1 Press **call log** in idle mode, press **SELECT** to enter **CALL LIST**, scroll **up** to an entry in the call list and press **OPTION**.
- 2 Scroll **up** to **DELETE ALL** and press **SELECT**.
- 3 **DELETED ALL?** is displayed on the screen. Press **OK** to confirm deletion.
 - A validation tone is emitted.

6.10 Using the Intercom

Warning




Intercom and call transfer is only possible with handsets registered to the same base station.

This feature is only available when there are at least 2 registered handsets. It allows you to make free internal calls, transfer external calls from one handset to another and use the conference option.


6.10.1 Intercom another handset

Note



If the handset does not belong to ID555 range, this function may not be available.


- 1 Press  key in idle mode.
 - *Intercom is established immediately if there are only 2 registered handsets.*
- 2 If there are more than 2 registered handsets, the handset numbers which are available for intercom will be displayed. Scroll  to the specific handset you want to call and press .


6.10.2 Transfer an external call to another handset

- 1 During the call, press and hold  key to put the external call on hold (the caller can no longer hear you).


- *Intercom is established immediately if there are only 2 registered handsets.*

- 2 If there are more than 2 registered handsets, the handset numbers which are available for intercom will be displayed. Scroll  to the specific handset you want to call and press .



- 3 Press  key on the called handset to answer the internal call, where both internal callers can talk.
 - *The called handset rings.*
 - *Intercom is established.*

- 4 Press  key on the first handset to transfer the external call to the called handset.
 - *The external call is transferred.*

Note

If there is no answer from the called handset, press  key to resume the external call.

6.10.3 Answer an external call during intercom

- 1 When there is an incoming external call during an intercom, a new call tone is emitted.
- 2 To end the intercom and answer the external call, press . The handset will ring. Press  to answer the external call.
 - *Connection with the external call is established.*

*** Tip**

To put the internal call on hold and answer the incoming external call, press **TALK** key.

6.10.4 Switch between an internal and external call

To switch between an internal or external call, press **int** key.

6.10.5 Establish a three-party conference call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

- 1** During the call, press **int** key to put the external call on hold (the caller can no longer hear you).
 - *Intercom is established immediately if there are only 2 registered handsets.*
- 2** If there are more than 2 registered handsets, the handset numbers which are available for intercom will be displayed. Scroll **↵** to the specific handset you want to call and press **SELECT**.
 - *The called handset rings.*
- 3** Press **TALK** key on the called handset to answer the internal call, where both internal callers can talk.
 - *Intercom is established.*

- 4** Press and hold **int** key for 2 seconds on the first handset to start the three-party conference.

- **CONFERENCE** will be displayed on the screen once the conference call is established.

*** Tip**

If **CONFERENCE** mode is activated (see "Activate/Deactivate Conference mode" on page 34), a three-party conference call is automatically established if the second handset takes the line when there is already an external call in progress.

6.11 Paging

The paging feature enables you to locate a missing handset if the handset is in range and contains charged batteries.

- 1** Press **(*)0** key on the base station.
 - *All the registered handsets start to ring.*
- 2** Once retrieved, press any key on the handset to end the paging.

Note

If there are no key presses within 30 seconds, the handset and base station will automatically return to idle mode.

*** Tip**

To stop paging, press **(*)0** key on the base station again.

7 Personal settings

7.1 Change the Handset Name

You can name the handset and display the handset name in idle mode. The default handset name of your handset is **PHILIPS**.

- 1 Press in idle mode, scroll to **PERSONAL SET** and press **SELECT**, press **SELECT** to enter **HANDSET NAME**.
- 2 Edit the handset name (maximum 12 characters) and press **OK** to confirm.
 - A validation tone is emitted and the screen returns to previous menu.

7.2 Handset Tones

7.2.1 Set the Ring Volume

Danger

When setting the ring volume of your phone or when the handset rings during an incoming call, please do not hold the handset too close to your ear as the volume of the ringing tone may damage your hearing.

There are 5 levels of ring volume, including progressive volume.

- 1 Press in idle mode, scroll to **PERSONAL SET** and press **SELECT**, scroll to

HANDSET TONES and press **SELECT**. Press **SELECT** again to enter **RING VOLUME**

- 2 Scroll to your desired volume level and press **OK** to confirm.
 - A validation tone is emitted and the screen returns to previous menu.

Note

When the volume is set to off, the icon will be displayed on the screen.

7.2.2 Set the Ring Melody

There are 15 polyphonic ring melodies available on your handset.

- 1 Press in idle mode, scroll to **PERSONAL SET** and press **SELECT**, scroll to **HANDSET TONES** and press **SELECT**. Scroll to **RING TONES** and press **SELECT**.
- 2 Scroll to your desired melody to play the melody.
- 3 Press **OK** to set the ring melody.
 - A validation tone is emitted and the screen returns to previous menu.

7.2.3 Activate/Deactivate Key Beep

A single beep is emitted when a key is pressed. You can enable or disable the key beep. By default, the key beep is **ON**.

- 1 Press in idle mode, scroll to **PERSONAL SET** and

press **SELECT**, scroll to **HANDESET TONES** and press **SELECT**. Scroll to **KEY BEEP** and press **SELECT**.

- 2 Scroll to **ON** or **OFF** and press **OK** to confirm.
 - A validation tone is emitted and the screen returns to previous menu.

7.3 Change the Display Language

Your handset can support different display languages.

- 1 Press **menu** in idle mode, scroll to **PERSONAL SET** and press **SELECT**, scroll to **LANGUAGE** and press **SELECT**.
- 2 Scroll to your desired language and press **SELECT** to confirm.
 - A validation tone is emitted and the screen returns to previous menu.

* Tip

Once the display language is set, the option menus on the handset will switch to display in the selected language immediately. However, it will not change the language of the predefined outgoing message of your answering machine.

7.4 Set Contrast Level

There are 5 contrast level options (**LEVEL 1**, **LEVEL 2**, **LEVEL 3**, **LEVEL 4** or **LEVEL 5**). The default contrast level is **LEVEL 2**.

- 1 Press **menu** in idle mode, scroll to **PERSONAL SET** and press **SELECT**, scroll to **CONTRAST** and press **SELECT**.
- 2 Scroll to your desired contrast level (**LEVEL 1**, **LEVEL 2**, **LEVEL 3**, **LEVEL 4** or **LEVEL 5**) and press **SELECT** to confirm.
 - A validation tone is emitted and the screen returns to previous menu.

7.5 Activate/Deactivate Auto Hang-up

This function enables you to end a call automatically by simply replacing the handset on the base station. By default, the Auto Hang-up feature is **ON**.

- 1 Press **menu** in idle mode, scroll to **PERSONAL SET** and press **SELECT**, scroll to **AUTO HANG-UP** and press **SELECT**.
- 2 Scroll to **ON** or **OFF** and press **SELECT** to confirm.
 - A validation tone is emitted and the screen returns to previous menu.