

P-04B

INSTRUCTION MANUAL '10.5



DOCOMO W-CDMA•GSM/GPRS System

Thank you for selecting the "docomo PRIME series P-04B".

Read this manual before use to correctly operate your P-04B.

About operation explanation of P-04B

The operating procedures for the P-04B are also published in electronic form as in "使いかたナビ (Guide)" that is installed onto your FOMA terminal, and "Instruction Manual (Detailed Version)" as a PDF. (In Japanese only)

 $igoplus^{"}$ Instruction Manual" (this volume) $igoplus^{"}$

Description of displayed content and operating procedures for basic functions

◆"使いかたナビ (Guide)" (installed onto your FOMA terminal)◆

Description of the outline of frequently used functions and of operations

From the P-04B MENU トLifeKitト使いかたナビ (Guide) ※ This function is available in Japanese mode only.

"Instruction Manual (Detailed Version)" (PDF)

Use your personal computer to visit the following, and download detailed information about all the functions and their operating procedures. (In Japanese only) http://www.nttdocomo.co.jp/support/trouble/manual/ download/index.html

% Note that the URL and published contents may be modified without notice.

Basic Package

 P-04B Handset (With Warranty and Back Cover P42)







Instruction Manual



• P-04B CD-ROM



• See page 89 for optional items that support this FOMA terminal.

For Using This Manual

- Note that "P-04B" is referred to as "FOMA terminal" in this manual.
- Most operating procedures and displays in this manual are described with the default settings of the "WHITE" handset. Further, displays and illustrations described in this manual are for reference. The actual ones might differ.
- Most operating procedures and displays in this manual are described when the FOMA terminal is in Normal Style.



Contents	FOMA Terminal2 What You can Do with P-04B3 Part Names and Functions4	Styles 6 Precautions 7 Handling Precautions 15	Introduction ► P.1 ~
Before Using	Character Entry28 Sound/Screen Setting30 Select Ring Tone, Changing Displays, etc.	Lock/Security	Basic Operation ▶ P.18 ~
Call Telephone40 Making a Call/Videophone Call, Receiving a Call/Videophone Call, Network Services, WORLD WING, etc.	Mail48 Send i-mode Mail, Deco-mail, Decome-Anime, Receive i-mode Mail, Area Mail, etc.	Phonebook	Connect ▶ P.40 ~
i-mode/Full Browser55 Access Sites, Full Browser, Viewing and Operating Sites, Add Bookmark, Screen Memo, etc.	i-Channel58	Map/GPS58	Search ▶ P.55 ~
Camera60 Shoot Still Images/Moving Pictures, etc.	1Seg63 Watch 1Seg, etc. Music67 Music&Video Channel, Music Player, etc.	i-α ppli/i-Widget ······69 Starting i-αppli, etc. i-motion/Movie ······ 71 Play i-motion/Movie, etc.	Enjoy ▶ P.60 ~
Osaifu-Keitai	Convenient Tools74 Schedule, Alarm, Bar Code Reader, Bluetooth	Data Management	More Convenient ▶ P.72 ~
Support82 Troubleshooting, Warranty and After-sales Service, i-mode Fault Diagnosis Site, Updating Software, etc.	Appendix90 Function List, Main Specifications, SAR, Export Administration Regulations, Intellectual Property Right	Index103	Others ► P.82 ~

*It is prohibited to copy all or part of this manual without permission. *The instructions contained in this manual may be changed without notice.

- Because the FOMA terminal uses a radio wave, you cannot use it in places where the radio wave do not reach, where it is weak even outdoors, or where are out-of-service area, such as inside tunnels, basements, or buildings. You might not be able to operate the FOMA terminal even when you are in a place with a fine view such as in a high-rise building or apartment. Note that you may experience interruption of calls even if the three antennas respond to a strong radio wave, and you remain without moving to use the FOMA terminal.
- Use the FOMA terminal carefully to avoid disturbing other people when in public, or in crowded or quiet places.
- Since the FOMA terminal uses radio waves as the medium of telecommunication, calls may be tapped by a third party. However, the W-CDMA·GSM/GPRS system automatically supports tapping prevention, so your conversation will be incomprehensible to the third party, because it is recognized as mere noise.
- The FOMA terminals change your voice into digital signals and send them to the other party. In places where the radio waves are weak, the digital signals may not be converted correctly, and in such a case, the voice may sound different from the actual original one.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS. Neither DOCOMO
 nor the certifiers as listed herein make any representation and warranty as for the security in the use of SSL/TLS. In the
 event that the user shall sustain damage or loss due to the use of SSL/TLS, neither DOCOMO nor the certifiers shall be
 responsible for any such damage or loss.

Certifiers: VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd.,

SECOM Trust Systems Co., Ltd., Comodo CA Ltd, and Entrust, Inc.

- This FOMA terminal supports FOMA Plus-Area and FOMA High-Speed Area.
- The FOMA terminal can be used only via the FOMA network provided by DOCOMO and in DOCOMO's roaming area.
- You are advised that you make separate notes of information (such as Phonebook entries, schedule events, text memos, record messages, voice memos, movie memos) stored in the FOMA terminal and keep them in a safe place. Note that we cannot be held responsible for the unlikely event of loss of the stored content due to a malfunction, repair, change of your model, or other mishandling of the FOMA terminal.

11

 You are advised to save your important data on the microSD card. If you have a personal computer, you can transfer and save data such as Phonebook entries, mail messages, schedule events, and others on the personal computer by using DOCOMO keitai datalink.

What You can Do with P-04B

使いかたナビ (Guide)

You can check "使いかたナビ (Guide)" onscreen for how to operate a function you want.

Even when you do not have the printed "Instruction Manual" at hand, you can easily operate your FOMA terminal by referring to it.

※This function is available in Japanese mode only.

International Roaming P.47

You can use the FOMA terminal overseas the same way as you use it in Japan, including phone number and mail address. (3G/ GSM areas are supported.)



eco Mode ► P.35

You can easily switch to the eco Mode to minimize battery consumption by a simple key operation.

Camera

►**P.60**

▶ P.23

Using the high-imagequality camera with its 13,200,000 pixels, you can shoot the scenes you want to straight away since it takes so little time for auto focusing and shooting to be ready from startup.

Dot Illum.

Animations are displayed in dot illum., and they advise you of incoming calls, dates, remaining battery charge level and so on.

O〇鉄道 現在、運転見合わせ中 です…。 でう…。 「ひつじのしつじくんタ」 © NTT DOCOMO


i-concier

i-concier is a service that enables you to receive useful information from a character (Machi-chara image) on the Stand-by display and download schedule event (i-schedule) files for your convenience.

▶ P.73

% i-concier is available in Japanese only.

Part Names and Functions

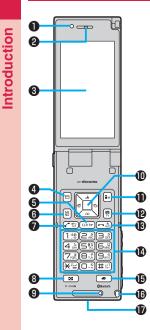

Light sensor

For sensing brightness (Do not cover it with your hands or do not put a sticker on it. Doing so might disable you to detect the brightness.)

Bearpiece

For listening to the other party's voice

Oisplay

• Mail key For showing the Mail menu

GCLR Clear key/i-Widget key

(B) Menu key For showing the Main menu

For using earphone

Connect an optional connector-terminal-compatible earphone. When using a connector-terminal-non-compatible earphone, use an optional plug adapter for connection.

Start key/Hands-free switch key

Picture album key For activating Picture Album

OMicrophone

For speaking to the other party

- Command navigation key For operating functions and menus

B Power/End key

For turning on/off the power or ending a call

Numeric keys

For entering phone numbers and text

D Multi key For showing the Task menu


Book for Horizontal Open Style

Connector terminal Integrated terminal for connecting earphone or for charging, etc.

Flat plug connector of the Flat-plug Earphone/Microphone with Switch Earphone terminal (Flat-plug)

Plug for the handset side

Example for connecting the Flat-plug Earphone/Microphone with Switch (option)

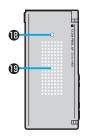

22

23

Call/Charging indicator

Lights while you are receiving a call or message, talking, or charging.

PDot illum.

Animation appears here while you are receiving a call or message.

@Infrared data port

For using infrared communication and the infrared remote control

②Camera

For shooting portraits and/or landscapes

2 mark

An IC card is installed. Use it for Osaifu-Keitai or iC communications.

Back cover

Remove this when attaching/removing the battery pack, UIM, and microSD card.

@FOMA antenna/1Seg antenna

The antenna is embedded in the handset Do not cover the antenna with your hand for better communication/reception.

Strap hole

Flash/Photo light

②Speaker

Charging terminal



For turning up the earpiece volume during a call

Image: Side ▼ key

For turning down the earpiece volume during a call

- Recording key
- B Shutter key

For shooting a subject by the camera

One-push open button

For opening the FOMA terminal (Be careful not to drop the FOMA terminal by the rebound when opened.)






Styles

The P-04B comes with two styles.

Normal Style

You can open the FOMA terminal easily by one-push key operation. (One-push Open)


- You can open it also manually without using the button.
- You need to close the FOMA terminal manually. If it does not close, open it fully and then close it.

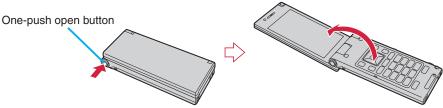

Horizontal Open Style

Open the display unit while you are softly depressing part A. Now you can watch 1Seg broadcast programs or messages in Horizontal Open Style.

• When you open the display unit, ensure that the hook is correctly engaged. If the hook is not correctly engaged, re-open the FOMA terminal after closing it once.

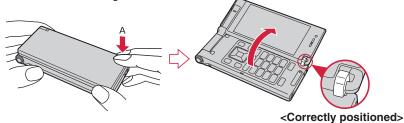

ALWAYS FOLLOW THESE DIRECTIONS

Before using the FOMA terminal, read these safety precautions carefully so that you can use it correctly.


After reading the precautions, keep them in a safe place.

Precautions

- Be sure to observe these safety precautions because they are designed to protect you or those around you from causing injury and to avoid unnecessary damage to the property.
- The symbols below indicate the levels of danger or damage that can be caused if the particular precautions are not observed.

A Danger	This symbol indicates that incorrect handling will almost certainly cause death or serious injury.
Warning	This symbol indicates that incorrect handling poses a risk of causing death or serious injury.
Caution	This symbol indicates that incorrect handling poses a risk of causing injury or damage to the product or property.

The following symbols show specific directions:

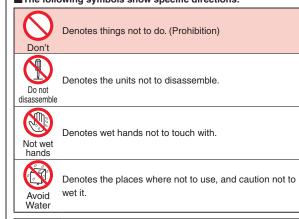



Denotes mandatory instructions (matters that must be complied with).

₽₽

Denotes the symbol to pull the power plug out of an

Pull the outlet.

power plug out

Safety Precautions" are divided into the following six sections:

General precautions for FOMA terminal, batteries, adapters, and UIM	P.8
Precautions for FOMA terminal	
Precautions for batteries	P11
Precautions for adapters	P12
Precautions for UIM	
Notes on using near electronic medical equipment	P.13

General precautions for FOMA terminal, batteries, adapters, and UIM

Danger

Do not use, store or leave the FOMA terminal and its accessories in places with a Don't high temperature such as near fire or places exposed to direct sunlight, or in cars under the blazing sun.

Fire, burns, or injury may result.



Do not place the FOMA terminal or its accessories inside cooking appliances such as microwave ovens or highpressure containers.

Fire, burns, injury or electric shock may result



Do not attempt to disassemble or remodel the FOMA terminal or its accessories.

Fire, burns, injury or electric shock may disassemble result.



Do not allow the FOMA terminal or its accessories to get wet either from water, drinking water or pet urine.

Fire, burns, injury or electric shock may result.



With your FOMA terminal, use the batteries and adapters specified by NTT DOCOMO, INC. Fire, burns, injury or electric shock may

Do not throw the FOMA terminal

or accessories, or subject them

result.

Warning

to severe shocks.



Fire, burns, injury or electric shock may result.



Do not allow electrically conductive foreign objects (such as metal pieces or pencil

leads) to come into contact with the FOMA terminal's charging terminal or connector terminal. Do not allow such objects to gain entry into the FOMA terminal.

Fire, burns, injury or electric shock may result.

Do not cover or wrap the FOMA terminal or its accessories with a cushion or other such Don't objects while it is being used or

> recharged. Fire or burns may result.



Before entering a gas station or other places where flammable gases are in the atmosphere, be absolutely sure to turn off the FOMA terminal and, if it is being charged, stop the charging operation.

Otherwise, the flammable gases may ianite.

Use the Osaifu-Keitai with the FOMA terminal turned off when you are near a gas station. (When IC Card Lock is set, release the lock, and then turn off the power.)



If odor, overheat, discoloration, or deformation is detected during use, battery charge, or storage, immediately observe the following:

- Pull the power plug out of the outlet or cigarette lighter socket.
- Turn off the power to the FOMA terminal.
- Remove the battery pack from the FOMA terminal.

Fire, burns, injury or electric shock may result.



Do not place the FOMA terminal or accessories on unstable locations such as wobbly tables Don't or slanted locations. They may fall off and cause injury.





Do not store in humid or dusty places, or in high temperature environments.

Fire, burns or electric shock may result.



If the FOMA terminal and its accessories are going to be used by a child, the supervising adult should explain how to operate them correctly. During use, the supervising adult should also check that they are being used as instructed. Otherwise, injury may result.



Keep out of the reach of babies and infants.

Accidental swallowing or injury may result.



Be especially careful when vou use the FOMA terminal for a long time with the adapter connected.

If you use the i-appli programs, talk on the videophone, watch 1Seg programs and so on for a prolonged period of time while charging, the temperature of the FOMA terminal, battery pack or adapter may rise.

If you remain in direct contact with hightemperature parts, redness, itching, a rash or low-temperature skin burns may result depending on the state of your health or physical constitution.







While using infrared communication, do not point the FOMA terminal's infrared data port at a home electrical appliance which is equipped with an infrared device.

Precautions for FOMA terminal

Warning

The infrared device may malfunction. possible causing an accident.

Do not shine the flash/photo light close to eves.

Doing so can damage eyesight. Also, accidents such as injury might occur if Don't someone is startled or dazzled by the light.



Do not allow liquids such as water, or foreign materials such as metal pieces or flammable materials to get into the UIM or microSD card slot of the FOMA

terminal.

Fire, burns, injury or electric shock may result.



Do not turn on the flash/photo light to drivers of cars, and others.

Don't It disturbs driving, and accidents may result.



Turn off the FOMA terminal in places where use is prohibited such as in airplanes and hospitals.

Otherwise, the electronic devices and electronic medical equipment in those places may be adversely affected. If the Auto Power ON function is set, deactivate the setting, then turn the power off.

For use inside medical facilities. make sure that you comply with their regulations.

Engaging in any prohibited acts such as using the FOMA terminal in an airplane is punishable by law.



When talking in Hands-free mode or when a ring tone is sounding, be absolutely sure to keep the FOMA terminal away from your ear.

Further, when you play games or play back music with the earphone/microphone connected, adjust the sound volume to moderate volume.

The excessive sound volume impairs your hearing.

Further, accidents may result due to the hardness of hearing of surrounding sound.

Do

For those with weak heart conditions, the vibrator and ring volume must be adjusted carefully.

Otherwise, the functions may adversely affect your heart.

If you are using an electronic medical device or other type of device, check with its

Do manufacturer or vendor as to whether it will be affected by the signals from the FOMA terminal.

> The FOMA terminal may adversely affect the device

Turn off the FOMA terminal when near electronic devices using high-precision control or weak signals.

The FOMA terminal may cause the electronic devices to malfunction and have other adverse effects.

* Electronic devices that may be affected.

Hearing aids, implanted cardiac pacemakers, implanted defibrillators, other electronic medical equipment. fire alarms, automatic doors and other automatically controlled devices. If you use an implanted cardiac pacemaker, implanted defibrillator or any other electronic medical equipment, consult the manufacturer or retailer of the device for advice regarding possible effects from the radio waves.



If the display part or camera lens is broken, be careful about broken glasses or the exposed interior of the FOMA terminal.

Plastic panels are used for the surfaces of the display area and camera lens. making it hard for their glass to break into pieces. However, if you touch the damaged or exposed parts by mistake. vou may injure vourself.

Caution



Do not swing the FOMA terminal about by its strap or other parts.

You may hit yourself or others, possibly causing injury or other accidents.

Do not use the FOMA terminal if it has been damaged.

Fire, burns, injury or electric shock may Don't result.

If the FOMA terminal's display has been damaged and its liquid crystal has leaked out. Don't keep your face, hands and skin clear from it.

Otherwise, the loss of evesight or injury to your skin may result.

If the crystal liquid gets into the eves or mouth, immediately rinse it out with clean water and then seek medical attention. When it adheres to your skin or clothes. immediately wipe it away with alcohol etc., and then rinse it out with water and soap.



Do not open the FOMA terminal by pressing the one-push open button near persons around you or your face.

The FOMA terminal may hit you or persons around you, causing accidents and injuries.



Do not use the FOMA terminal with the hook for Horizontal Open Style protruded. Otherwise, injury may result.

Before using the FOMA terminal inside a car, check with its manufacturer or dealer whether

Do the signals from the FOMA terminal will have any adverse effects.

In some vehicle models, the signals may adversely affect the electronic devices inside the vehicle. Such cases are rare. However, if this happens, stop using the FOMA terminal immediately.



Itching, rash or eczema may be caused depending on

- your physical conditions or
- predisposition. If an abnormality occurs, stop using the FOMA terminal immediately, and then seek medical attention. See "List of materials used" on page 14.



Be careful not to get your finger or a strap caught in the parts when you close or open the FOMA terminal.

Otherwise, injury or other accidents may result.



Do



View the display in a sufficiently light place keeping a certain distance from your eyes.

Otherwise, your eyesight may become impaired.

Precautions for batteries

Check the description on the label of the battery pack for the type of battery.

Description	Туре
Li-ion 00	Lithium-ion battery



Danger



Do not let any metal object such as a wire come in contact the battery terminals. Also do not carry or store the battery

together with any metal objects like a necklace.

Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



When installing the battery in the FOMA terminal, check that it is facing the right way, and if the battery cannot be installed easily, do not force it into place. Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



Do not throw the battery into fire. Otherwise, the battery pack may ignite,

burst or overheat and its electrolyte may leak.

Do not pierce it with nails, hit it with a hammer, or step on it. Otherwise, the battery pack may ignite.

Don't burst or overheat and its electrolyte may leak

If the battery fluid gets into your eyes, do not rub them. Flush your eves with clean water and seek Do medical attention immediately. Otherwise, the loss of eyesight may result.





Don't

Never use the FOMA terminal if it has damages such as deformities or scratches as a result of dropping it.

Warning

Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.

Immediately stop using the FOMA terminal and keep it away

Do

from fire if the battery leaks or emits an odor. The leaked battery fluid may ignite.

causing fire or burst.

Be careful that your pets do not bite into the battery pack.

Otherwise, the battery pack may ignite, Do burst or overheat and its electrolyte may leak.





battery with other waste. The battery may catch fire or damage the environment. After insulating the battery terminals with tape, take the unneeded battery to a handling counter such as a docomo Shop or dispose of it in accordance with local waste disposal regulations.

Do not dispose of the exhausted

Caution



Do not use or attempt to charge a wet battery.

Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak



If the electrolyte fluid inside the battery has leaked out, do not allow it to come into contact

with the skin on your face. hands or any other part of your body.

Contact may result in loss of sight or skin problems.

If you get the fluid in your eyes or mouth, or on skin or clothing, immediately wash the affected areas with clean water If you get it in your eyes or mouth. immediately seek medical attention after rinsina.

Precautions for adapters



Warning

Do not use the adapter if its cord has been damaged. Fire, burns or electric shock may result.

Do not use the AC adapter and desktop holder in steamy places such as a bathroom. Fire, burns or electric shock may result.

Don't The DC adapter is for use only in a negative (-) grounded vehicle. Do not use it in a positive (+) grounded vehicle. Fire, burns or electric shock may result.

O Don't

If a thunderstorm is nearby, do not touch the adapter. Otherwise, you may receive an electric shock.



Never short-circuit the charging terminal when the adapter is plugged into the power outlet or cigarette lighter socket.


Also, never touch the charging terminal with fingers or other bare skin.

Fire, burns or electric shock may result.



hands

Do

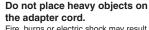

Fire, burns or electric shock may result.

When plugging the AC adapter into the power outlet, or when unplugging it from the outlet,

Don't do not allow metal straps or other metal objects to come in contact with it.

Fire, burns or electric shock may result.

Do not touch the adapter cord or power outlet with wet hands. Fire, burns or electric shock may result.

- Use the adapter at the specified V AC.
- When charging the FOMA terminal overseas, use the AC adapter available for use overseas to charge the FOMA terminal.

Supplying the wrong voltage to the AC adapter may result in a fire, burns or electric shocks.

AC adapter: 100 V AC

DC adapter: 12/24 V DC

[For negative (-) grounded vehicles only]

AC adapter available for use overseas: 100 V to 240 V AC

100 V to 240 V AC

[Connect only to household AC outlet]



If a fuse of the DC adapter has blown, replace it with a specified fuse. Fire, burns or electric shock may result.

Do F

For the specified fuse, refer to each instruction manual. Keep the power plugs dust-free.



V

ŏ

Do

When plugging the AC adapter into the power outlet, plug it in securely.

Fire, burns or electric shock may result.

Fire, burns or electric shock may result.



When unplugging the adapter from the power outlet or cigarette lighter socket, do

Do not yank the adapter cord, but take hold of the power plug to unplug it.

Fire, burns or electric shock may result.



out

When you do not intend to use the adapter for a long period of time, disconnect the power plug from the power outlet or cigarette lighter socket.

Fire, burns or electric shock may result.



If liquids such as water get in the adapter, unplug the power cord immediately from the outlet or cigarette lighter socket. Fire, burns or electric shock may result.



Before cleaning, pull the power plug out of the outlet or cigarette lighter socket.

Pull the Fire, burns or electric shock may result. power plug

Precautions for UIM



Do

Caution

Be careful not to touch the cut surface of the UIM when removing it.

Otherwise, injury may result.

Notes on using near electronic medical equipment

The description below meets "Guidelines on the Use of Radiocommunication Equipment such as Cellular Telephones - Safeguards for Electronic Medical Equipment" by the Electromagnetic Compatibility Conference Japan.

Warning

Do

Comply with the following in hospitals or health care facilities:

- · Do not carry the FOMA terminal into operating rooms, intensive care units (ICU) or coronary care units (CCU).
 - Turn off the FOMA terminal in hospital wards
 - · If there is any electronic medical equipment near you, turn off the FOMA terminal even when in a location such as a lobby.
 - · Comply with any regulations of hospital and health care facilities instructing you not to use or carry in a mobile phone.
 - If the Auto Power ON function is set. deactivate the setting, then turn the power off.



Turn off the FOMA terminal in trains during the rush hour or other crowded areas as there may be someone near you with an implanted cardiac pacemaker or implanted defibrillator. The FOMA terminal's signals may

adversely affect the operation of implanted cardiac pacemakers and implanted defibrillators.



If you use an implanted cardiac pacemaker or implanted defibrillator, use the mobile phone 22 cm or more away from an implanted cardiac pacemaker or implanted defibrillator.

The FOMA terminal's signals may adversely affect the operation of implanted cardiac pacemakers and implanted defibrillators.



Patients using electronic medical equipment other than implanted cardiac pacemakers or implanted defibrillators (outside medical establishments for treatment at home, etc.) should check the influence of radio waves upon the equipment by consulting its manufacturer.

The FOMA terminal's signals may adversely affect the operation of electronic medical equipment.

				Material/Finishing
re it is used	Material/Finishing	Battery pack	Resin area	Polycarbonate
Display surface	Polycarbonate + glass fiber/UV coating		Label	PET resin
Dot illum. surface	Polycarbonate/UV coating		Terminal area	Glass epoxy substrate/
Operation key	ABS resin/UV coating			nickel plating + gold plating
surface,	Ŭ	Screw (Batter	y compartment)	Steel/nickel plating
Battery surface,		Hinge area		Polyamide + glass fiber/UV coating
Back cover		Hinge area (ce	enter)	ABS resin/UV coating
ninal	Stainless steel/nickel plating + tin plating	Hinge area (he	orizontal open side)	PET resin
ninal cover	Polycarbonate + elastomer resin/	Flash/Photo lig	ght area	Polycarbonate
	5	Hinge area for	Horizontal Open	ABS resin/UV coating
		Style		
				Polycarbonate/
	,	Horizontal Open Style		tin vapor deposition + UV coating
	, , , , , , , , , , , , , , , , , , ,	Hook for Horizontal Open Style		Stainless steel/
<u> </u>	, ,			nickel plating + chrome plating
ne command				Polycarbonate + ABS resin/UV coating
de ▼ key	ů – – – – – – – – – – – – – – – – – – –			
		,		
				Polycarbonate/UV coating
inal				Polycarbonate
				Aluminum/alumite treatment
	,			
				LCP resin
	Acrylic urethane			Stainless steel/nickel plating
Hinge side cap		[compartment)		
	, , , , , , , , , , , , , , , , , , ,			
	Acrylic urethane			
e horizontal open ea	Elastomer resin			
rtment surface	Polycarbonate			
Resin part	PPS resin			
Terminal area	Beryllium copper/			
	Operation key surface, Battery surface, Back cover ininal ninal cover rea igation key re command de ▼ key inal Key area Sheet area Open/close stopper Hinge side cap e horizontal open ea rtment surface Resin part	Operation key surface, Battery surface, Battery surface, Back cover ABS resin/UV coating ninal Stainless steel/nickel plating + tin plating Polycarbonate + elastomer resin/ UV coating Polycarbonate/ tin vapor deposition + UV coating rea Acrylic urethane rea Acrylic resin/surface hard coating igation key Polycarbonate/ eluminum vapor deposition + UV coating rea Acrylic resin/surface hard coating igation key Polycarbonate/ aluminum vapor deposition + UV coating rea Acrylic resin/UV coating rea Acrylic varbonate/ aluminum vapor deposition + UV coating de ▼ key ABS resin/UV coating Polycarbonate/ aluminum vapor deposition + UV coating inal Phosphor bronze/ nickel plating + gold plating Key area Polycarbonate Sheet area PET resin Open/close stopper Acrylic urethane Hinge side cap Acrylic urethane aborizontal open aa Acrylic urethane Polycarbonate Elastomer resin aa rtment surface Polycarbonate Resin part PPS resin	Operation key surface, Battery surface, Back cover ABS resin/UV coating Battery surface, Back cover Stainless steel/nickel plating + tin plating ninal Stainless steel/nickel plating + tin plating ninal Stainless steel/nickel plating + tin plating Hinge area (new flags area for Style Polycarbonate / UV coating Polycarbonate/ tin vapor deposition + UV coating Hinge area for Style rea Acrylic urethane Horizontal Op rea Acrylic resin/Surface hard coating Horizontal Op igation key Polycarbonate/ aluminum vapor deposition + UV coating Wetal part of the Horizontal Op de ▼ key ABS resin/UV coating Becording inal Phosphor bronze/ nickel plating + gold plating Roller area for Style Recording key Polycarbonate/ aluminum vapor deposition + UV coating Metal part of the button Sheet area PET resin Open/close stopper Acrylic urethane A horizontal open Acrylic urethane Metal part of the button Sot (Battery compartment) a horizontal open Elastomer resin Sot (Battery compartment) Sot (Battery compartment) Polycarbonate Fesin part PPS resin Ferminal area Terminal area	Dornation Rey ABS resin/UV coating Screw (Battery compartment) Battery surface, Battery surface, Screw (Battery compartment) Battery surface, Polycarbonate / thinge area Hinge area (center) Innal Polycarbonate + elastomer resin/ Hinge area (horizontal open side) Innal Polycarbonate + elastomer resin/ Hinge area (horizontal open side) Polycarbonate/ In vapor deposition + UV coating Hinge area for Horizontal Open Style rea Acrylic resin/surface hard coating Metal part of hinge area for Horizontal Open Style rea Acrylic resin/UV coating Upper area of roller for Horizontal Open Style rea Acrylic resin/UV coating Wetal part of hinge area for Horizontal Open Style rea Acrylic resin/UV coating Upper area of roller for Horizontal Open Style rea Acrylic resin/UV coating Recording key open/close stopper Polycarbonate/ Upper area for Horizontal Open Style Resin part Polycarbonate Sot (Battery compartment) a horizontal open Acrylic urethane Metal part of the one-push open button mickel plating + gold plating Metal part of the one-push open button Metal part

Handling Precautions

General notes

Do not wet the equipment.

The FOMA terminal, battery, adapter, and UIM are not waterproofed. Do not use them in environments, which are high in humidity such as in bathrooms, and do not allow them to get wet from rain. Furthermore, if carrying them against your body, they become moist due to perspiration and the internal parts may become corroded, causing malfunction. If the parts are found to have been damaged due to exposure to the liquids, any repairs will not be covered by warranty, or repairs may not be possible. This may be repaired at a cost if repairs are possible.

Use a dry soft cloth such as the one for cleaning glasses to clean the equipment.

- The display may be scratched if it is rubbed hard with a dry cloth.
- Stains may result from droplets of water or dirt if they are left on the display.
- Do not use alcohol, thinner, benzene, detergent or other solvents for cleaning, otherwise the printing may be removed or discoloration may result.

Occasionally clean the terminals of the equipment using a dry cotton swab, etc.

The soiled terminals deteriorate the connection and might cause power discontinuity or incomplete charging. Wipe the terminals with a cotton swab, etc.

Take care not to damage the terminals when cleaning them.

Do not place the FOMA terminal near an air conditioner outlets.

Condensation may form due to rapid changes in temperature, and this may corrode internal parts and cause malfunction.

Do not apply excessive force onto the FOMA terminal and battery pack.

If you put the FOMA terminal in a bag along with many other articles or sit with the FOMA terminal in a clothes pocket, the display, internal circuitry and the battery pack could be damaged or malfunction. Also, if an external device is left connected to the connector terminal (earphone/ microphone terminal), the connector could be damaged, or malfunction.

Carefully read each instruction manual attached to the FOMA terminal, adapter, or desktop holder.

Do not rub or scratch the display part with metals.

Doing so might cause damage to the part, resulting in trouble or malfunction.

Notes on handling the FOMA terminal

Avoid using in extremely high or low temperatures.

The FOMA terminal should be used within a temperature range of 5° C to 35° C and a humidity range of 45% to 85%.

■If the FOMA terminal is operated near a landline phone, television set, radio or other devices in use, it may adversely affect the devices. Operate the FOMA terminal as far away from these devices as possible.

It is recommended that you make separate notes of the information stored in the FOMA terminal and keep such notes in a safe place.

We take no responsibility for any loss of the stored data items.

Do not drop the FOMA terminal or subject it to strong impacts. Malfunction or damage may result.

- Do not insert an external device to the connector terminal (earphone/microphone terminal) at a slant when connecting, and do not pull it out when it is inserted. Malfunction or damage may result.
- Make sure that nothing, such as a strap, gets caught between the parts of the FOMA terminal when you close it. Otherwise, malfunction or damage may result.
- The FOMA terminal becomes warm during use or charging but this is not an abnormality. Use the FOMA terminal as it is.
- Do not leave the camera in places exposed to direct sunlight.

Pixels may be discolored or burns may result.

When using the FOMA terminal, ensure that you shut the lid for the connector terminal.

Dust or water might enter into the FOMA terminal, causing malfunction.

Do not use the FOMA terminal with the back cover left removed.

The battery pack might come out, or malfunction or damage may result.

Do not apply an excessively thick sticker onto the surfaces of the display, keys, or buttons.

Otherwise, malfunctioning, damage or problems with operation may result.

While you are using the microSD card, never take it off or turn off the power to the FOMA terminal.

Data may be erased or malfunction may result.

Do not place magnetic cards or similar objects near the FOMA terminal or between phone parts.

Magnetic data on cash cards, credit cards, telephone cards and floppy disks, etc. may be deleted.

Do not bring magnetic substances close to your FOMA terminal.

Problems with operation may result if items with strong magnetic fields are brought close to the FOMA terminal.

Notes on handling batteries

Batteries have a limited life.

Though it varies depending on the usage state, you are advised to replace the battery if its usable time is extremely short even when you fully charge it. Make sure that you buy the specified battery.

Charge the battery in a place with an appropriate ambient temperature of 5°C to 35°C.

The usable time of the battery differs depending on the usage environment or its remaining life.

- Depending on how the battery pack is used, it might swell as its operating life becomes short, but this is not a problem.
- Note the following points when you store a battery pack over a long period:
 - Storage in a fully charged state (the state immediately after charging is completed)
 - Storage with no battery power left (the state you cannot turn on the power of the handset due to battery drain)

These may lower the battery pack's performance and shorten its operating life.

You are advised to store the battery pack in the state of two or three bars of battery icon indication as a guide for when you store it for a long period.

Notes on handling adapters

Charge the battery in a place with an appropriate ambient temperature of 5°C to 35°C.

Charge the battery where:

- There is very little humidity, vibration, and dust.
- There are no land-line phones, television sets or radios nearby.
- While you are charging, the adapter may become warm. This is not a malfunction, so you can keep on using.
- Do not use the DC adapter for charging the battery when the car engine is not running. The car battery could go flat.
- When using the power outlet having the disengaging prevention mechanism, observe the instructions given in that instruction manual.
- Do not give a strong shock. Also, do not deform the charging terminal. Malfunction may result.

Notes on handling the UIM

Do not apply more force than is necessary when installing or removing the UIM.

- The warranty does not cover damage caused by inserting the UIM into some other types of IC card reader/writer.
- Always keep the IC portion clean.
- Use a dry soft cloth such as the one for cleaning glasses to clean the equipment.

It is recommended that you make separate notes of the information stored on the UIM and keep such notes in a safe place.

We take no responsibility for any loss of the stored data items.

- For the environmental protection, bring any unneeded UIMs to a handling counter such as a docomo Shop.
- Do not damage, carelessly touch, or shortcircuit the IC.

Data might be lost or malfunction may result.

Do not drop the UIM or subject it to strong impacts.

Malfunction may result.

Do not bend the UIM or place something heavy on it.

Malfunction may result.

Into the FOMA terminal, do not insert the UIM with a label or sticker pasted. Malfunction may result.

Notes on using Bluetooth function

- As the security for communication using the Bluetooth function, the FOMA terminal supports the security function that meets the Bluetooth Specification. However, the security may not be sufficient depending on the configuration. Take care of the security for communication using the Bluetooth function.
- Note that even if any leak of data or information occurs while making connection using the Bluetooth function, we take no responsibility.
- With the FOMA terminal, you can use the following: Headset, Hands-Free, Audio, Dial-up Communication, Object Push, and Serial Port. With Audio, you might be able to use Audio Video Remote Control. (Only with the compatible Bluetooth devices)

Radio frequencies

The radio frequencies the Bluetooth function of the FOMA terminal uses are as follows:

2.4	FH 1	

- 2.4 : Indicates radio facilities that use 2400 MHz frequencies.
- FH : Indicates the modulation system is the FH-SS system.
- 1 Indicates that a supposed coverage distance is 10 meters or less.
 - Indicates that all radio frequencies 2400 MHz through 2483.5 MHz are used, and that the frequencies for mobile object identifiers shall not be avoided.

Cautions on Using Bluetooth Devices Bluetooth operates at radio frequencies assigned to the in-house radio stations for mobile object identifiers that have to be licensed and are used in production lines of a factory, specific unlicensed low power radio stations, and amateur radio stations (hereafter, referred to "another radio station") in addition to scientific, medical, industrial devices, or home electric appliances such as microwave ovens.

- 1. Before using this product, make sure that "another radio station" is not operating nearby.
- If radio interference between this product and "another radio station" occurs, move immediately to another place or turn off power to avoid interference.
- 3. For further details, contact "docomo Information Center" on the back page of this manual.

Notes on handling the FeliCa reader/writer

- The FeliCa reader/writer function on the FOMA terminal uses very weak radio waves which do not require to be licensed as radio stations.
- The FeliCa reader/writer is operated on the 13.56 MHz frequencies. When you use another reader/writer nearby, take enough distance between your FOMA terminal and the reader/writer. Further, ensure that there are no radio stations that use the same frequencies.

Caution

Do not use the modified FOMA terminal. Using a modified FOMA terminal infringes the Radio Law.

The FOMA terminals are granted technical regulations conformity certification as the specified radio equipment under the Radio Law and bear a "technical conformity mark "or on the nameplate as evidence of conformity. Unscrewing the FOMA terminal and modifying internal components void the technical regulations conformity certification. Do not use the FOMA terminal in this state, which infringes the Radio Law.

Be especially careful not to operate the FOMA terminal while driving.

You will be imposed punishment if you use the mobile phone in your hand while driving. If you answer a call out of necessity, tell the caller with Hands-free that you will call him/her back, park your car to somewhere safe, and then dial.

Use the Bluetooth functions in Japan only. The Bluetooth functions on the FOMA terminal have been authorized in compliance with the radio transmission standards in Japan.

You might be imposed punishment if you use them overseas.

Use the FeliCa reader/writer functions in Japan only.

The FeliCa reader/writer functions on the FOMA terminal have been authorized in compliance with the radio transmission standards in Japan. You might be imposed punishment if you use them overseas.

Before Using

Attaching UIM (FOMA Card)/Battery Pack

Remove the back cover.

While pressing the " — " part of the back cover in direction A, slide the back cover (2 mm or more) in direction B to unlock and remove it.

B

Cut

Insert the UIM.

With the golden IC surface downward, push the UIM slowly to the end while pressing surface.

• Take care not to damage the IC portion.

When you remove the UIM

Pull it out slowly while sliding.


About UIM

The UIM is an IC card that holds your information such as phone numbers. You cannot use the FOMA terminal for communications such as voice/videophone calls, i-mode, or sending/receiving mail, unless the UIM is inserted.



Attach the battery pack.

With the arrow mark facing up, fit the tab side of the battery pack to the FOMA terminal securely, and then push the

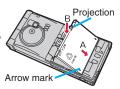

battery pack in direction B while pressing it against direction A.

When you remove the battery pack

Engage your nail on the projection of the battery pack, and lift it up.

Attach the back cover.

With the back cover stayed open about 2 mm, match it to the groove on the FOMA terminal. Then while pushing




the back cover as a whole downward, slide it in the direction of the arrow, and then install.

- Confirm there is no gap between the back cover and the FOMA terminal.
- Ensure that you turn off, close, and take hold of the FOMA terminal when you install or remove the UIM.
- You cannot use the UIM (blue) on your FOMA terminal. If you have that blue one, have it replaced at a docomo Shop.

Charging

Charging Using the Desktop Holder

Plug the connector of the AC Adapter (option) horizontally with its engraved side facing down into the connector terminal of the Desktop Holder (option).

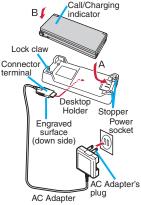


- Pull out the AC Adapter plug, and plug it into a
- household power socket of 100 V AC.
- Put the bottom of the FOMA terminal into the stopper of the desktop holder (A) to fit the head to the lock claw, and then depress the FOMA terminal until it clicks (B).
 - Be sure to charge the FOMA terminal with the FOMA terminal closed.
 - Be careful that a commercial strap is not caught between the FOMA terminal and desktop holder.

When charging is completed, hold the desktop holder with fingers and lift up the head of FOMA terminal to remove.

Charging Only with the AC Adapter

Pull out the cover of the connector terminal in direction A, and turn it in direction B.

Insert the connector with the engraved surface facing up until it clicks.

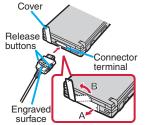

- For detaching, pull out the connector horizontally while pressing the release buttons. Malfunction could result if you try to pull it forcibly.
- When charging starts, the Call/Charging indicator lights in red. When charging is completed, it turns off.

Turning Power ON



Press and hold r for at least one second.

After the Wake-up display is displayed, the Stand-by display appears.

To turn power off

Press and hold for at least two seconds.

The Initial Setting display appears when any of items through step 1 to step 5 at right have not been initialized. In that case, follow onscreen instructions.



Configuring Initial Setting

The Initial Setting display appears when you turn on the power for the first time.

Set the date and time.

You can set the date and time. You can also correct the date and time automatically.

Set your Terminal Security Code.

You can set your Terminal Security Code required for setting functions.

• "0000" is set at purchase.

Set Keypad Sound.

You can select whether to let a keypad sound play.

Set Location Request Set.

You can select whether to notify your current location for when a GPS location provision request arrives.

Set the size of fonts.

You can set the size of fonts on the display at a time.

Checking Your Own Phone Number

(MENU) from the Stand-by display > Phonebook

Own number

You can press of to switch the tabs.

- From the display on the right, press (() Edit) to store your name, mail address, etc.
- Refer to "Mobile Phone User's Guide [i-mode] FOMA version" for how to check or change your mail address.

- 10:00 = 8 090XXXXXXXX Edit FUNC 4 dtrans Own number

Switching to English Display

(MENU) from the Stand-by display ▶ 設定/サービス (Set./Service) ▶ディスプレイ (Display) ▶ バイリンガル (Select language)

Select "English (英語)".


• When you install the UIM onto the FOMA terminal, the "バイリンガル (Select language)" setting is saved on the UIM.


You can check your own phone number also by pressing MENU O from the Stand-by display.



Screen Explanation

Viewing Display/Icon

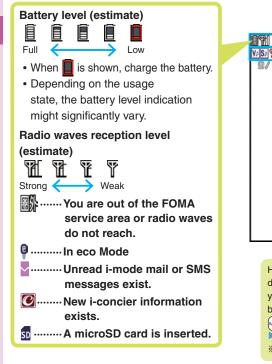

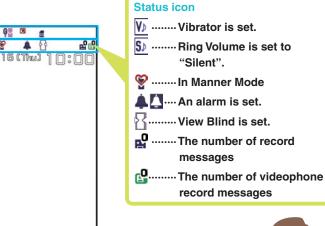

Here are given descriptions of the main icons. For descriptions of other icons appearing in the display, you can get them following the procedures as shown below:

www from the Stand-by display LifeKit ・ 使いかたナビ (Guide) シ表示アイコン説明 (Icons) ※This function is available in Japanese mode only.





Proceed to respective functions from icons

You can proceed to respective functions from "Status icon", "Notification icon", and "Desktop icon".

1. ● from the Stand-by display
Use ○ to highlight an icon ○ ○ (Select)

Dot Illum.

Information and animation are displayed on the dot illum. just as shown in the examples below.

|--|



While a call is being received

When mail messages have been received successfully

- Information and animation are displayed also in the following case:
- \cdot When you close the FOMA terminal
- · Time signal (0 minutes every hour)
- · When charging starts
- While a mail message is being received or when the receiving is unsuccessfully completed
- · When you start playback or operate the MUSIC Player
- The dot illum. is displayed while the FOMA terminal is closed. However, it will be displayed while the FOMA terminal is open during camera shooting.
- The information and animation displayed will differ depending on the settings.

If you press 🔺 while the FOMA terminal is closed

The "time", "date" and "remaining battery charge level/ signal status" are displayed. Each time \blacktriangle is pressed, the display changes.


When a missed call or unread mail is found, the missed call or unread mail animation is displayed first.

Navigation Displays and Key Operations

Key Operations in Normal Style

Key operations you can do while you are operating a function are shown at the bottom of the display. (Navigation displays)

Key assignments and basic navigation displays

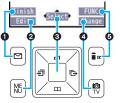

0	Operations you can perform with the 🖾 key.	Finish 🔛
0	Operations you can perform with the KENU key.	Edit Store
3	Operations you can perform with the o key.	Select Set
0	Directions in which you can scroll and select items with the 👩 key.	< ‡ >
4	Operations you can perform with the revealed key.	Change Detail
6	Operations you can perform with the $\overline{\mathbf{i}}\mathbf{R}$ key.	FUNC Set

Navigation Displays while Dialing


Enter numeric strings in the Stand-by display. Then key operations for the function that you can use according to the number of digits appear in the display. You can now get the target function by one touch. You can start up the functions like Calculator,

Schedule, Alarm etc.

<Example> Enter 0916 to display Schedule.

1. Press O(9) (1) (6) from the Stand-by display.



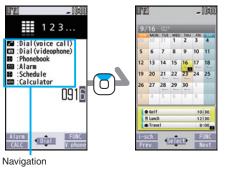

Command navigation key

Moves the cursor or highlighted display up. (Hold down to scroll continuously.)

· Scrolls the page up.

• Fixes the operation.

- Moves the cursor to the left.
- Scrolls back page by page. (Hold down to scroll continuously.)


- Moves the cursor to the right.
- Scrolls forward page by page. (Hold down to scroll continuously.)

- Moves the cursor or highlighted display down. (Hold down to scroll continuously.)
- Scrolls the page down.

Key Operations in Horizontal Open Style

Key operations you can do are shown the same way as in Normal Style at the bottom of the display.

- While the vertical display is shown, you can operate the same way as in Normal Style even in Horizontal Open Style.
- Even when you have operated on the horizontal display, the display might switch to the vertical display depending on the function.

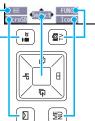

Difference in key operations

Key assignments differ between Normal Style and Horizontal Open Style. Follow and operate respective Navigation displays.

<Example: Displaying the Function Menu on the Inbox Folder list>

In Normal Style

Press (in)



In Horizontal Open Style



i Bodymo

MessageR

NessageF

Trash box

Select

S lotv. Inbox

- 10:00



Menu Operation

Main Menu

17 9/15(Thu) 10:00 New3 0 Stand-by display

Press (MENU) from the Stand-by display to show Main Menu.

Menu icons



Main Menu

Use 🔂 to highlight a menu icon and press 💽 (Select). Functions categorized by every menu item are displayed. Repeat selecting items to call up the target function.

- You can press (CLR) to return to the previous display. When you press (from any display, the Stand-by display returns.
- You can display some functions by pressing MENU + menu number from the Stand-by display.
- See "Function List" for the menu items and menu numbers of each function. (See page 90)
- In this volume, the descriptions of operating procedures are given primarily starting with the Stand-by display.

Horizontal Open Menu

Press (MENU) from the horizontal Stand-by display to open Horizontal Open Menu that enables you to guickly access the functions that are available to the horizontal display.



 Some operating procedures and menus shown on the Horizontal Open Menu differ from those on the display in Normal Style as described in this manual.

Simple Menu

Simple Menu is a menu focusing on only basic functions for easy operation. By setting "Menu icon setting" to "Simple menu", you can show the Simple Menu by pressing (MENU) from the Stand-by display.




· Some operating procedures or items which appear on the display in Simple Menu differ from the ones described in this manual.

Function menu

When "**FUNC**" is displayed at the lower right of the display, you can use functions such as Store, Edit, and Delete by pressing (\mathbf{sr}) .

<Example> Display the Function menu of a Phonebook entry

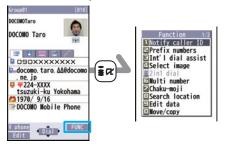

• With a function that can also be operated using a key, the numeric key number or other display may appear on the right of the function name.

Functions Start to Work by Simple Operation


Depending on the function, you can start it either by selecting a menu item or by key operation from the Stand-by display.

The following are the functions you can start by pressing keys for at least one second.

Key	Performance	
	Switches Key Lock on/off.	
	Shows the Registration display for Phonebook entries.	
	Executes Check New Messages.	
	Shows the Software list.	
MENU	Sets/Releases IC Card Lock.	
	Starts 1Seg.	
5	Sets/Releases eco Mode.	
6	Sets/Releases Personal Data Lock.	
8	Switches View Blind on/off.	
$(\mathbf{*})$	Activates/Deactivates Public mode (Drive mode).	
#	Activates/Deactivates Manner Mode.	
録画	Activates MUSIC Player.	
ð	Activates the camera in Digicam Mode.	
Operations while the FOMA terminal is closed		
Key	Performance	
	Activates/Deactivates Manner Mode.	
録画	Activates MUSIC Player.	

Character Entry

You can enter characters on the Registration display for Phonebook entries or the Composition display for mail messages, etc.

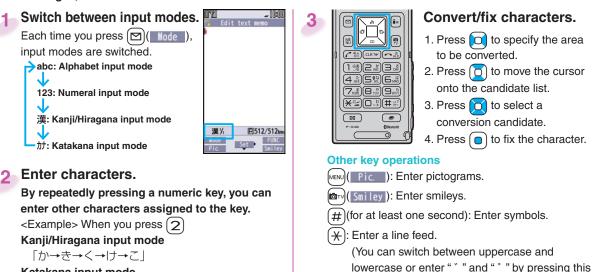

key after you enter a character.)


CLR: Clear text.

(for at least one second): Undo the fixed/erased

characters.

Katakana input mode


Alphabet input mode

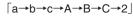

Numeral input mode

[2]

<Example> Entering "夕ダの菓子" in a text memo.

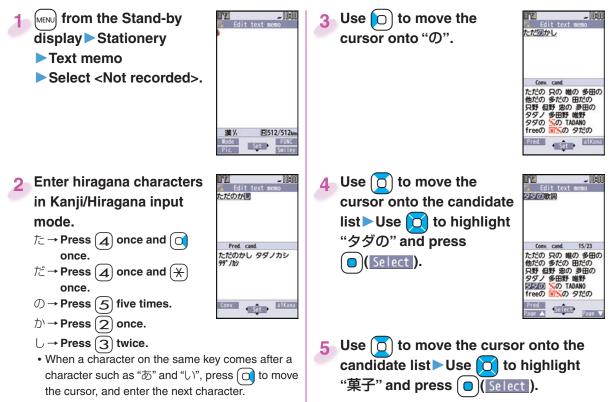

Sound/Screen Setting

Changing Ring Tone

<Example> Changing the ring tone for incoming voice calls

- (MENU) from the Stand-by display
- Set./Service Sound
- Select ring tone

Select "Phone".

- Press (Play) to check the content actually played back or displayed.
- To set a ring tone for mail messages, videophone calls, and so on, select the corresponding item.

Select "Select ring tone".

- Select a type of ring tone.
- Select a folder Select a ring tone.

Adjusting Ring Volume

<Example> Adjusting the ring volume for incoming voice calls

- from the Stand-by display
 - Set./Service Sound Ring volume

Select "Phone".

- To adjust ring volume for mail messages, videophone calls, and so on, select the corresponding item.
- Use 👩 to

() to adjust the volume.

Setting Vibrator

You can set the vibrator to notify you of incoming calls. <Example> Setting the vibrator for incoming voice calls

- From the Stand-by display
 - Set./Service Incoming call
 - Vibrator

Select "Phone".

• To set a vibrator for mail messages, videophone calls, and so on, select the corresponding item.

Select a pattern.

Using Manner Mode

Just by pressing a key, you can make a tone from the FOMA terminal such as a ring tone, keypad sound, and alarm sound silence. When you start Manner Mode, not a sound but the vibrator works to notify you of incoming calls or messages.



Press and hold *#* for at least one second from the Stand-by display.

2718[Thu] 10:00

"" appears on the Stand-by display.

To release

Perform the same operation.

Using Original

You can use "Original" to tailor your FOMA terminal to how it works while Manner Mode is ON.

- 1. ↓ from the Stand-by display Set./Service Incoming call Manner mode set Original
- 2. Set each item.
- 3. Press (☐ (Finish).
- Even in Manner Mode, the shutter tone, and focus lock tone from the camera, and the start and end tones of the voice recorder play.

Setting Keypad Sound OFF

You can silence a Keypad sound for when you press a key.

- MENU from the Stand-by display
 - Set./Service Sound Keypad sound

2 Select "OFF".

Changing Display Settings

Set Stand-by display

- From the Stand-by display
 - Set./Service Display
 - Display setting
- 2 Select "Stand-by display".
 - To set a display for making/receiving calls, or to show a battery icon, select the menu that corresponds to that item.
- 3 Select a type of image.
- Select a folder ► Select an image.

Changing the Display Brightness

You can set Backlight to OFF. Then the display dims, and the keys turn off. You can also set the time that is to elapse before operation switches to the Power Save Mode.


- If the Stand-by display
 ► Set./Service ► Display ► Backlight
- Select "Lighting" ► Select "OFF".
- Enter a time for switching to the Power Saver Mode (time to power saver: in seconds).

Power Saver Mode

Operation switches to the Power Saver Mode when the time set using time to power saver has elapsed without the FOMA terminal being operated. Power Saver Mode clears away images on the display, suppressing power consumption of the battery.

Making Display Hard to Be Seen by the People Around

You can set "View blind" to make it harder for the people around you to see the display from oblique angles.

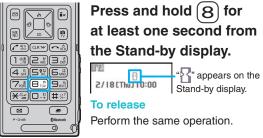

Selecting a Pattern of the Main Menu Display



Select a pattern.

Menu set

Changing Font Size

You can change font sizes at a time.

- ▶ Set./Service > Display
- Font size setting

Select "Set at one time".

• You can also specify a font size for each function such as "Mail" or "Phonebook".

Select a font size.

Changing Machi-chara Setting

You can change the Machi-chara image which appears to tell you missed calls, new mail messages, new i-concier information and others.

- ▶ From the Stand-by display
 ▶ Set./Service > Display > Machi-chara
 - Set to Machi-chara



Using Kisekae Tool

You can set the ring tone, Stand-by display, menu icons and others at a time.

- ▶ from the Stand-by display ▶ Set./Service ▶ Kisekae
- Pighlight a Kisekae Tool file and press (Set all).

Select "YES".

 Some menu configurations change according to the usage frequency depending on the type of the menu.

Reset Menu Icons to Default

- 1. (MENU) from the Stand-by display ► (IFUNC) ► Reset
- 2. Enter your Terminal Security Code
 - Select "Reset menu screen" ► Select "YES".

Changing Illumination

You can set the pattern of the illuminations such as for incoming calls and talking at a time.

MENU from the Stand-by display
 ▶ Set./Service ▶ Illumination

Select "All illum. setting".

• To set each illumination separately, select a type of illumination.

Select a pattern.

The indicator lights in the set – pattern when a mail message comes in or in other operations.



Checking Missed Calls and New Mail by Tone and Call/Charging Indicator

With the FOMA terminal closed, you can check for missed calls, new mail and others.

Press v while the FOMA terminal is closed.

- You can be notified by the electronic sound and lighting of the Call/Charging indicator. Double-beep tone:
- You have a missed call or new mail.
- Triple-beep tone:

You have no missed calls or new mail.

• When "Info notice setting" is set to "ボイス (voice)" on the Japanese display, a voice message announces that you have a missed call or new mail.

Switching to the eco Mode

Switching to the eco Mode to minimize battery consumption can be set using one key.



Press and hold (5) for at least one second from the Stand-by display.

"[®]" appears on the Stand-by display. 9/16(Thu) 10:00

To release

9 17 9

Perform the same operation.

eco Mode Setting

Set the items for minimizing battery consumption when operation has switched to the eco Mode.

- 1. (MENU) from the Stand-by display > Set./Service
 - Other settings Battery/eco mode set.
 - eco mode setting
- 2. Put a check mark for items to be set.
- 3. Press (☑) (Finish).

Lock/Security

Various Security Codes

Caution on security codes

- · You should avoid using the numbers for security codes such as denoting your birth date, part of your phone number, local address number, room number, "1111" or "1234" that is easily decoded by a third party. Also make sure that you take a note of the security codes you have selected just in case you forget them.
- Take care not to let others know your security codes. Even if your security codes are known and used by a third party, we at DOCOMO take no responsibility in any event for the resultant loss.
- If you do not remember your respective security codes. you need to bring an identification card such as your driver's license, the FOMA terminal and UIM to the handling counter of a docomo Shop.

For details contact "docomo Information Center" on the back page of this manual.

· The PUK (PIN unblock code) is described on the application form (your copy) that is handed over to you at a docomo Shop at the time of contract. If your contract has been made at a shop other than a docomo Shop, take with you something to prove yourself, like the driver license, and the UIM to the handling counter of a docomo Shop, or consult "docomo Information Center" on the back page of this manual. U

Terminal Security Code

"0000" at purchase

This is a four- to eight-digit number for deleting all files or changing settings. When the display for entering the Terminal Security Code appears, enter your four- to eight-digit code and press (Set). To change

1. ↓ from the Stand-by display > Set./Service > Lock/Security > Change security code.

Network Security Code Determining at the time of contract

This is a four-digit number required for your identification when you place an order for at a docomo Shop, docomo Information Center, or "お客様サポート (User support)" site, or when you use respective network services.

• "お客様サポート (User support)" is available in Japanese only.

To change

From i-mode, you can change your Network Security Code by selecting " ⁸₃ Menu" → "お客さまサポート (User support)" → "各種設定(確認·変更·利用) [Respective settings (Confirmation/Change/Use)]" → "ネットワーク暗 証番号変更 (Change Network Security Code)".

i-mode Password

"0000" at the time of your contract

This is a four-digit number required for registering/ deleting My Menu, applying for/canceling Message Services or i-mode pay services, etc.

To change

6 → "Change i-mode Password".

PIN1 Code/PIN2 Code "0000" at the time of your contract

The PIN1 code is a four- to eight-digit number for checking the user each time the UIM is inserted into the FOMA terminal or each time the FOMA terminal is turned on, to prevent the unauthorized use by a third party.

The PIN2 code is a four- to eight-digit number for executing Reset Total Cost, using the user certificate or applying for the issue of it.

When the PIN1 Code/PIN2 Code Entry display appears, enter your four- to eight-digit PIN1 code/PIN2 code and press ()(______).

 If you enter a wrong PIN1 code/PIN2 code three times in succession, it is locked and the FOMA terminal cannot be used.

To change

- 1. MENU from the Stand-by display ► Set./Service ► Lock/Security ► UIM setting
- 2. Enter your Terminal Security Code
 - Select "Change PIN1 code" or "Change PIN2 code".
- You need to have set "PIN1 code entry set" to "ON" to change the PIN1 code.

PUK (PIN Unblock Code)

The PUK (PIN unblock code) is the eight-digit number for releasing the PIN1 code and PIN2 code locks. You cannot change this code by yourself.

 If you enter a wrong PUK (PIN unblock code) 10 times in succession, the UIM is locked. In that case contact one of docomo Shops.

PIN1 Code Entry Set

You can set the FOMA terminal not to work unless you enter your PIN1 code when turning the power on.

- ▶ Set./Service ► Lock/Security
- UIM setting
- Enter your Terminal Security Code
 Select "PIN1 code entry set".
 - Select "ON" > Enter the PIN1 code. To release Select "OFF".

Various Lock Functions

A variety of lock functions is installed on your FOMA terminal such as preventing a third party from illegally using it, or protecting your private information in it.

Lock All	You can set your FOMA terminal not			
	to be used by a third party.			
	You can do no operations other than answering calls and turning on/off			
	the power.			
	1. (MENU) from the Stand-by display			
	Set./Service Lock/Security			
	►Lock all			
	Enter your Terminal Security Code.			
	 To cancel, enter your Terminal 			
	Security Code from the Stand-by			
	display.			
IC Card Lock	You can lock the IC card function.			
	You cannot use the Osaifu-Keitai,			
	ToruCa download, iC Communication,			
	etc.			
	1. Press and hold (MENU) for at least one			
	second from the Stand-by display.			
	• To cancel, perform the same operation			
	and enter your Terminal Security Code.			

Omakase	When you have lost your FOMA terminal or in other cases, you can lock	Restricting Incoming Calls		
Look 3	your personal data (such as Phonebook	Rejecting Calls from No Caller ID		
	entries) and the IC Card function of Osaifu-Keitai by contacting DOCOMO. • For details on Omakase Lock, refer to "Mobile Phone User's Guide [i-mode] FOMA version".	You can set whether to receive (accept) or not to receive (reject) a voice call and videophone call according to the reason for no caller ID. There are three reasons; "Unavailable", "PublicPhone", and "User unset".		
	Setting/Releasing Omakase Lock	1 (MENU) from the Stand-by display		
0120-524-360 (In Japanese only) Business hours: 24 hours (Every day of the year)		Set./Service Lock/Security		
	 Available from mobile phones and PHSs (including non-DOCOMO phones). Unavailable from some IP phones. You can set/release also from the My docomo site via your personal computer or other devices. (In Japanese only) 	Call setting w/o ID		
×Un • Yoi do		 2 Enter your Terminal Security Code > Select a reason for no caller ID. 3 Select "Accept" or "Reject". 		
Personal Data	You can lock functions which	 If you select "Accept", you can set a ring tone for incoming calls without caller IDs. 		
Lock	use personal information such as Phonebook entries or schedule events. 1. Press and hold (6) for at least one second from the Stand-by display.	Rejecting Calls from Parties which are not Stored in Phonebooks		
	 To cancel, perform the same operation and enter your Terminal Security Code. 	You can reject a call from a party whose phone number is not stored in the Phonebook.		
Key Lock	The keys except 🕞 are disabled.	1 (Internet from the Stand-by display		
	 Press and hold for at least one second from the Stand-by display. To release, perform the same operation. 	 Set./Service Lock/Security Reject unknown 		
	 Even during Key Lock, you can answer incoming calls by pressing	 Enter your Terminal Security Code Select "Accept" or "Reject". 		

Basic Operation

Reset to Default

Resetting the Function Settings

You can reset the items on "Function List", which are indicated by _____. (See page 90)

- The items indicated by might include the functions which do not return to their default settings or state.
 - from the Stand-by display
 - Set./Service Other settings
 - Reset settings
- Enter your Terminal Security Code
 Select "YES".

Deleting All the Saved Data

You can delete all stored files at a time, then all the settings of functions return to their defaults.

- ▶ From the Stand-by display
 ▶ Set./Service ▶ Other settings
 ▶ Initialize
- Enter your Terminal Security Code Select "YES".
- Select "YES".

Resetting Data by Remote Control

If you contract with the service of this function (Business mopera Anshin Manager), you can initialize data on your FOMA terminal (memory within the handset/microSD card/UIM) by your (administrator's) offer. Inquiries DOCOMO-enterprise-oriented website docomo Business Online From personal computers http://www.docomo.biz/ (in Japanese only) % You may not be able to access due to system maintenance, etc.

When Remote Reset starts

The display appears telling that operation is disabled and the initialization starts.

• When Remote Reset starts, all key operations except those for answering a voice call and holding answer (On Hold) are locked.

When the initialization starts, you are disabled to use all functions.

- When Remote Reset starts while a call is coming in or you are talking, all the key operations except those by (r) and (r) are locked. When the initialization starts, the incoming call and your talk are disconnected automatically.
- The microSD card might not be initialized when the FOMA terminal is connected to a personal computer.

Call Telephone

Making a Call/Videophone Call

Enter a Phone Number to Make a Call

- From the Stand-by display, enter a phone number starting with a city code.
- 2 Press 🌈 to make a call.
 - To make a videophone call, press (V phone) instead of
 - Press 🝙 to end the call.
- This FOMA terminal has no inward-facing camera. Therefore, the image sent to the other party is a Chara-den image, still image, or image being shot by the outward-facing camera.

You can put a call on hold by
pressing 💿 (Hold) during a
call.
You can release holding by
pressing (<u>Answer</u>).



Making a Call from Phonebooks

<Example> Search a Phonebook entry by the name stored in Phonebook

Press 🔘 from the Stand-by display.

Select "Name?".

From the second search, the search-method-selection display does not appear. To show it again, press (CLR).

• You can use another search method such as "Phone number?", "Mail address?", and others.

⊨Enter a part of the name ► 🖸

• If you enter nothing and press ; then you can display all Phonebook entries.

Select a Phonebook entry.

When an entry contains multiple phone numbers, press of to select a desired phone number.

Press (

To make a videophone call, press (♥) (V. phone) instead of

Using Redial/Received Calls to Make a Call

- Press () (Redial) or () (Received Calls) from the Stand-by display.
- Select a call record.
- Press 🍙 to make a call.
 - To make a videophone call, press (☑)(V phone) instead of (

Notifying the Other Party of Your Phone Number

- From the Stand-by display
 Set./Service NW services
 Caller ID notification
- Select "Activate/Deactivate".

Select "Activate".

• If you hear the guidance requesting your caller ID, either set the Caller ID notification or add "186" first and then try calling again.

Make an International Call

You can use WORLD CALL to make an international call from Japan.

- Contact "docomo Information Center" on the back page of this manual for inquiries about WORLD CALL.
- When using international carriers other than DOCOMO, contact them.
- O(for at least one second) from the Stand-by display ► Enter numbers in order of country/area code→area code (city code)→destination phone number.
 - When the area code (city code) begins with "0", enter it except for the "0". However, include "0" when making a call to some countries or regions such as Italy.
 - Press 🥜.
 - Press (V. phone) to make a videophone call.
- Select "Dial".
- DOCOMO videophones conform to "3G-324M standardized by the international standard 3GPP". You cannot connect to the videophone that uses a different format.

Receiving a Call/Videophone Call

A call comes in.

The ring tone sounds and the Call/Charging indicator lights.

Press (r) to answer the call.

When a videophone call comes in

You can receive the videophone call the same way as with a voice call.

The substitute image is sent to the other party.

Press 🗩 to end the call.

Adjusting Earpiece Volume

Press ▲ or ▼ during a call.

Press ▲/▼ to adjust the earpiece volume.

When You cannot Answer a Call

Activate Record Message

By activating Record Message, you can record a caller's voice/video message when you cannot answer the call.

- When a call comes in, an answer message is played back after the ring time elapses. Then, the caller's business is recorded with audio or video.
 - Ifrom the Stand-by display ► LifeKit
 Rec.msg/voice memo
 - Record message setting
 - Select "ON".
 - Select an answer message Enter a ring time (seconds).

When a voice or video message is recorded as Record Message, the notification icon like "Msg" or "Msg" appears in the Stand-by display. Select "Msg" or "Msg" icon to play either the voice or video message.



Connect

Using Public Mode (Drive Mode)

Once you activate Public mode (Drive mode), the guidance is played back telling that you cannot answer the call as you are currently driving or in a place where you should refrain from speaking on the phone. Then the call is disconnected.



From the Stand-by display, press and hold (\bigstar) for at least one second.

" appears on the Stand-by display.

To deactivate

Perform the same operation.



When a call comes in during Public mode (Drive mode), the ring tone does not sound and the record is stored in "Received calls". The alarm does not sound even when the specified alarm time comes.

Using Public Mode (Power Off)

Once you activate Public mode (Power off), the guidance is played back for an incoming call while the power is off, telling that you cannot answer the call as you are currently in a place where the power should be turned off (hospital, airplane, around priority seat in a train, etc.). Then the call is disconnected.



Press 🌈.

To deactivate

1. Enter 💥 25250 from the Stand-by display.

2. Press 🖍

Using Various Network Services

Network services available

The following are the DOCOMO network services available to the FOMA terminal.

• The network services are not available when you are out of the service area or out of reach of radio waves.

• For details, refer to "Mobile Phone User's Guide [Network Services]".

• For subscriptions and inquiries, contact "docomo Information Center" on the back page of this manual.

Service	Application	Monthly fee
Voice Mail Service	Required	Charged
Call Waiting Service	Required	Charged
Call Forwarding Service	Required	Free
Nuisance Call Blocking Service	Not required	Free
Caller ID Notification Service	Not required	Free
Caller ID Display Request Service	Not required	Free
Dual Network Service	Required	Charged

Service	Application	Monthly fee
English Guidance	Not required	Free
Multi Number	Required	Charged
2in1	Required	Charged
Public mode (Drive mode)	Not required	Free
Public mode (Power off)	Not required	Free
OFFICEED	Required	Charged
Melody Call	Required	Charged

• "OFFICEED" is a pay service that is available on a subscription basis.

For details, refer to the DOCOMO-enterprise-oriented website (in Japanese only).

http://www.docomo.biz/html/service/officeed/

- "Deactivate" does not mean that the contract for Voice Mail Service, Call Forwarding Service or other services is canceled.
- When new network services are provided by DOCOMO, you can add them as menus.
- The way the outline of respective networks is described in this volume is by the menus on the FOMA terminal.

Connect

Using Voice Mail Service

(MENU) from the Stand-by display Set./Service NW services

Voice mail

Activate the service

- Select "Activate" > Select "YES".
- You can also specify a ring time.

To play back the message

- 1. Select "Play messages" ► Select "Play (voice call)" or "Play (videophone)" ► Select "YES".
- 2. Operate following the voice guidance.

Using Call Waiting Service

- - (MENU) from the Stand-by display
 - Set./Service NW services
 - Call waiting

Activate the service

Select "Activate" Select "YES".

Answer an Incoming Call during a Call

Press ?. Each time you press ?, you can switch the parties you can talk with.

Using Call Forwarding Service

- (MENU) from the Stand-by display
- Set./Service NW services
- Call forwarding

Activate the service

- Select "Activate" > Select "Activate" Select "YES".
- · You can set the phone number of forwarding destination or ring time as well.

Services Available for FOMA Terminal

Available services	Phone number	Available services	Phone number
Directory assistance service		Emergency calls to police	(No prefix) 110
(Charges apply: guidance fee + call fee)	(No prefix) 104 Emergency calls to fire station and ambulance		(No prefix) 119
Telegrams (Telegram charges apply)	(No prefix) 115	Emergency calls for accidents at sea	(No prefix) 118
Time check (Charges apply)	(No prefix) 117		
Weather forecast (Charges apply)	City code of the	(Charges apply)	(No prefix) 171
	desired area + 177	Collect calls (Charges apply: guidance fee + call fee)	(No prefix) 106

• If you use "Call Forwarding Service" for the land-line phone and specify a mobile phone as the forwarding destination, callers may hear ringback tone even when the mobile phone is busy, out of the service area, during Self Mode, or the power is turned off depending on the settings of the land-line phone/mobile phone.

- This FOMA terminal supports "Emergency Location Report". When you make an emergency call such as at 110/119/118, information about the place where you are dialing from (location information) is automatically notified to emergency-response agencies such as police stations. It might happen that your correct location is not detected by emergency-response agencies depending on the location you dial from or radio wave conditions. When your location information is notified, the name of emergency-response agency is displayed on the Stand-by display. When you do not notify your phone number such as by adding "184" by every call, your location information and phone number are not notified. However, when an emergency-response agency has judged that the location information and phone number should be detected because of emergency priority such as for protection of human life, they might be notified regardless of your setting. Areas and timing "Emergency Location Report" introduced vary depending on the preparation of respective emergency-response agencies.
- When you make a call at 110/119/118 from the FOMA terminal, tell an operator that you are calling from a mobile phone and let them know your phone number, and then clearly tell where you are currently around, so that police/fire station can make a confirmation call to your mobile phone. Further, remain without moving while talking to prevent the call from being disconnected. Do not turn off the power immediately after the call, and make sure to place your phone standby for at least 10 minutes.
- You might not be connected to regional police/fire station depending on the area where you are calling from. If this happens, use public phones nearby or land-line phones.

Using Overseas

International Roaming (WORLD WING) is a service that allows you to keep using the telephone number and mail address of your FOMA terminal, which you are using in Japan, in a service area of an overseas carrier partnered with DOCOMO. It enables you to continue using the voice call, SMS and i-mode mail settings without having to make any changes.

- Concerning the areas where the service is supported This FOMA terminal is available within the service area of 3G network and GSM/GPRS network, and in the countries/regions supporting 3G 850MHz. Check the areas where you can use the service.
- Refer to the following before you use this FOMA terminal overseas:
- ・"海外ご利用ガイド (Guide for Overseas Use)" preinstalled in "My documents" in Data Box
- · "Mobile Phone User's Guide [International Services]"
- ・DOCOMO International Services website ※"海外ご利用ガイド (Guide for Overseas Use)" is available in Japanese only.
- For the country/area codes, international call access codes, and international prefix numbers for the universal number, refer to "Mobile Phone User's Guide [International Services]" or the DOCOMO International Services website.
- A fee charged for overseas use (call fee, packet communication fee) differs from that of in Japan.

Available Services Overseas

Communication Service	3G	GSM	GPRS
Voice call ^{*1}	0	0	0
Videophone call ^{%1}	0	_	—
SMS ^{%2}	0	0	0
i-mode ^{%3}	0	—	0
i-mode mail	0	—	0
i-Channel ^{*3*4}	0	_	0
i-concier ^{%5}	0	—	0
i-Widget ^{%6}	0	—	0
Packet communication by connecting with a personal computer	0	—	0

\bigcirc : Available — : Not available

- *1 During 2in1 use, calls cannot be made using the B number. When using multiple numbers, you cannot make calls using an additional number.
- 2 If the other party has a FOMA terminal, you can enter that party's phone number just as you would in Japan.
- %3 You need to establish i-mode International Settings.
- **4 You need to establish i-Channel International Settings. You will be charged a packet communication fee (which, in Japan, is included in the i-Channel fee) for automatically updating the basic channel information as well.
- *5 You need to establish overseas usage settings for i-concier. You will be charged a packet communication fee each time information is received.
- %6 You need to establish i-Widget roaming settings. When you show an i-Widget display, multiple Widget Appli programs might start. In that case, you are charged a packet communication fee for each communication.
- The GPS function is not available overseas.

11

 Some services are not available depending on the overseas carrier or network. For connectable countries, regions, and overseas carriers, refer to "Mobile Phone User's Guide [International Services]" or the DOCOMO International Services website.

Make a Call to Outside the Country You Stay at

- (for at least one second) from the Stand-by display Enter numbers in order of country/area code→area code (city code)→destination phone number
 - Enter "81" as a country/area code when you make an international call to Japan.
 - When the area code (city code) begins with "0", enter it except for the "0". However, include "0" when making a call to some countries or regions such as Italy.

 - Press () to make a call.
 - Press (V. phone) to make a videophone call.

Making a Call to a Person in the **Country You Stay at**

- From the Stand-by display enter a phone number.
- Press () to make a call.
 - Press (V. phone) to make a videophone call.

Make a Call to a Person who is Staying **Overseas and Using WORLD WING**

When you make a call to a person who is also internationally roaming, make the call the same way as to make international calls to Japan even if he/she is in the country you stay at.


Mail

Sending i-mode Mail

Once you subscribe to i-mode, you can exchange e-mail messages over the Internet. You can attach less than 2 Mbytes of up to 10 files (photos, moving pictures, etc.) with body text added. For details on i-mode mail, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

- from the Stand-by display
- Enter each item.

New

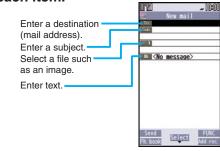


Press M Send).




Sending Deco-mail

You can change the color or size of characters or background color, or insert images or Deco-mail pictograms.

- from the Stand-by display New
 - You can also select "Template" to create Deco-mail.

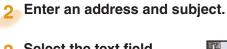

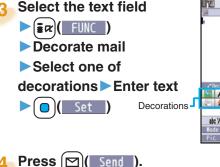




Sending Decome-Anime

You can create impressive messages by inserting text or images into a Flash file.

- 10:00

- from the Stand-by display Create new Decome-Anime
- Enter an address and subject.
- Select the text field Select "Phone" Highlight a template and press (NewMail).
- Edit characters and images Finish
- Send . Press ()
- Select "OK".

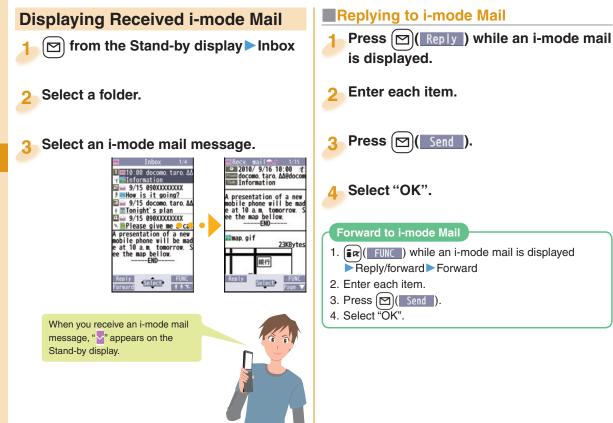

Connect

Checking New i-mode Mail

You can check the i-mode Center for a new mail message or Message R/F.



Press and hold register for at least one second from the Stand-by display. When you receive an i-mode mail message or Message R/F, the following display appears.

MessageR

Number of messages Select an item to show the display for selecting a message.

Sorting i-mode Mail

You can use "Auto-sort" to sort received/sent i-mode mail messages into a folder such as "Business" or "Friend" which has been created in advance. <Example> Sorting mail messages, which come from the address stored in the Phonebook, into a folder

- Highlight a folder from Inbox Folder list and press ⓐ ∞ (FUNC) > Sort > Auto-sort
- Select "Address sort".
- Select "Look-up address" ▶Select "Phonebook".
- Look up for Phonebook entries and select a target i-mode mail address.

Early Warning "Area Mail"

Receiving Area Mail

You can receive information such as about earthquake alerts that are issued from the Japan Meteorological Agency as an Area Mail message.

When an Area Mail message arrives, """ lights and the buzzer for Area Mail sounds.

The received content of some messages is automatically displayed. To erase the displayed content, press **()**.

• You can receive Area Mail messages even when you are not contracted to use i-mode.

Setting Area Mail

- ☑ from the Stand-by display
 ► Area Mail settings
- 2
- Select an item to be set
- Set each setting.
- You can also check "Check ring tone" for how your FOMA terminal works when you receive an Area Mail message.

Using SMS

You can send text messages to the mobile phone number at the other end.


Sending SMS

Press ⊡ from the Stand-by display Compose SMS


2 Enter each item.


- 10:00

Area Mail

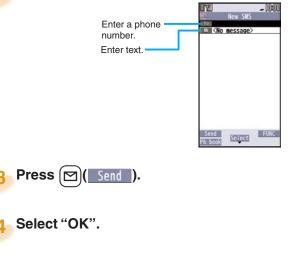

Displaying Received SMS Message

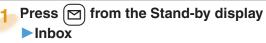

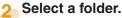

Select an SMS message.

When you receive an SMS message, " " appears on the Stand-by display.



Phonebook

Storing Phonebook Entries

Storing New Phone Numbers/Mail Addresses

Press and hold O for at least one second from the Stand-by display.

Select "Phone".

The display for entering a name appears. Enter a name and proceed.

When storing entries onto the Phonebook on the UIM

Select "UIM".

Enter each item.





Storing Phonebook Entries from Redial/Received Call Records

- Press ()(Redial) or ()(Received Calls) from the Stand-by display.
- Highlight a call record and press
 - Select "Add to phonebook".
- Select "Phone" > Select "New".
- Enter each item.
- <mark>5</mark> Press ⊠(Finish).
 - Register a birthday to the Phonebook to have it shown on Schedule.



Editing Phonebook Entries

- - from the Stand-by display
 - Search and select a Phonebook entry.
 - MENU (Edit)
 - Select an item to be edited
 - Edit the contents.
- Press ⊠(Finish).
- Select "YES".

Deleting Phonebook Entries

- 1
 - from the Stand-by display
 Search and select a Phonebook entry.
 - (FUNC) > Select "Delete data".
- Select "This phonebook".

Select "YES".

i-mode/Full Browser

Displaying i-mode Sites

i-mode is a service that enables you, by using the display of the FOMA terminal supporting i-mode (i-mode phone), to use online services such as site access, Internet access, and i-mode mail.

- i-mode is a pay service that is available on a subscription basis.
- For details on i-mode, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- You can display SSL/TLS*-compatible pages via i-mode and Full Browser.
 - SSL/TLS are the safer data communication systems using authentication/encryption technology to protect your privacy.

Press **F** from the Stand-by display.

You can access the B Menu. Repeat selecting items (links) to display the desired site.

- While you are online, "+" blinks.
- B Menu is available in English. Select "English" from the display on the right.



Before using i-mode

- Content of sites or websites is in general protected by copyrights law. You can use data such as text and images for your entertainment, which you download to your i-mode phone, but you cannot use them, part or whole of it as is, or modify them for the purpose of sale or redistribution, without approval from copyright holders.
- If you replace the UIM with another one or turn on the power with the UIM not inserted, you cannot display/ play back files, such as still images/moving pictures/ melodies you download from sites, attached files (still images/moving pictures/melodies and other files) sent/received by mail, screen memos, and Messages R/F depending on the model.
- When the file has been set for the Stand-by display or for specified ring tone, of which display or playback is restricted by the UIM, the settings return to default if you replace it with new one or turn the power on with the UIM not inserted.

Displaying Websites Designed for PC

You can browse Internet websites designed for PCs using the Full Browser function.

- Note that you are charged a high communication fee for the massive data communication such as browsing Internet websites having many images or downloading data. For details on the packet communication fee, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- You can browse Internet websites composed of frames. You can select a frame to display it as well.

Image For the Stand-by display i-mode ► Full Browser Home

- By default, a confirmation display appears asking whether you want to use Full Browser.
- You might not correctly display some Internet websites.

Switching the Browser

You can switch to Full Browser to show the Internet websites incorrectly displayed by i-mode.

- The billing system differs between i-mode and Full Browser. With the latter, as packet communications fee will be a large sum, you are advised to use i-mode packet flat-rate service.
 - R
 FUNC
 Switch to FB


Select "YES".

To switch from Full Browser to i-mode

- 1. (FUNC) while the website is displayed by Full Browser ►i-mode Browser
 - i-modeBRWSR Switch

Viewing and Operating Sites

Operations on site viewing display

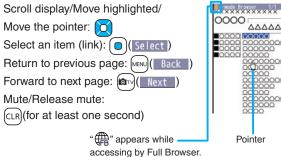

Storing Frequently Accessed Sites

Bookmark websites or i-mode sites you frequently visit to get easy access to them.



≣α)(__FUNC__) while the site is displayed ►Bookmark ►Add bookmark



Select "YES" Select a destination folder. To access a site stored in Bookmark

- 1. (MENU) from the Stand-by display ►i-mode ► Bookmark
- 2. Select a folder Select a bookmark.

Saving Site Content

If you save the page once you visited as a screen memo, you can easily refer to it without connecting to i-mode.

- Image: FUNC (FUNC) while the site is displayed
 Screen memo
 - Save screen memo/Add screen memo
- Select "Phone" ► Select "YES" ► Select a destination folder.

To display a saved screen memo

- 1. (MENU) from the Stand-by display ► i-mode ► Screen memo
- 2. Select "i-mode Browser" or "Full Browser".
- 3. Select a folder > Select a screen memo.
- In cases where, for instance, you have selected the setting for disabling the saving of the screen memos at the site, it may not be possible to save the screen memos properly depending on the site concerned.

i-Channel

This service distributes information such as news and weather forecast to i-Channel mobile phones. The automatically received latest information flows on the Stand-by display by tickers. You can read it on the i-Channel list by pressing the i-Channel key.

Further, two types of channels, "Basic channel" provided by DOCOMO and "Favorite channel" provided by IPs (Information Providers) are available. You are not charged a packet communication fee for auto-updates of "Basic channel" information.

You are charged a packet communication fee for auto-updates of "Favorite channel" information that will be available by registering your favorite channels. Note that you are charged separately a packet communication fee for browsing detailed information for both "Basic channel" and "Favorite channel". When you use the international roaming service, you are charged a packet communication fee for both auto-update and browsing detailed information.

- i-Channel is a pay service which is available on a subscription basis (You need to subscribe to i-mode to apply for i-Channel).
- For details on i-Channel, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
 The i-Channel service is provided in Japanese
- e

Accessing i-Channel

only.

Press 🕞 from the Stand-by display.

Select each channel to browse its detailed information.

Map/GPS

- GPS is operated by the United States Department of Defense, so the GPS radio wave conditions might be controlled (accuracy deterioration, radio wave supply suspension, etc.) depending on the defense strategy of the United States Department of Defense.
- Note that we do not take any responsibility for a loss such as pure economic loss resulting from the facts that you have missed the chance to check the positioned (communication) results, which have been caused by external factors such as malfunctions, erroneous operations, troubles, or power failure (including battery shortage) on the FOMA terminal.
- You cannot use the FOMA terminal as a navigating system for aircraft, vehicles, and people. Therefore, note that we are not held responsible for any damage resulting from the use of the location information for navigation.
- You cannot use GPS as a high-accuracy positioning device. Note that we do not take any responsibility for the damage caused by an error in the location information.

11

 You cannot use the GPS function when the FOMA terminal is out of the service area (or overseas).

Search

Checking Your Location

You can pinpoint your current location by positioning, and display the location information. You can also display a map using the location information and send this information by i-mode mail.

 You will not be charged a packet communication fee for checking your current location. However, a separate packet communication fee will be charged in cases where, for instance, a map has been displayed from the location information.

from the Stand-by display
 LifeKit ► Map/GPS ► Position location



Positioning

Positioned location result

The current location is positioned and displayed by the latitude and longitude.

To display the map of the current location

- 1. (∎r)(FUNC) from the Position Location Result display ► Read map
- GPS compatible i- α ppli starts and shows the map.

Reading Map

You can start GPS compatible i- α ppli, and you can read a map of current or specified location.

- At purchase, "地図アプリ (Map Application)" is set.
 - Image from the Stand-by display
 ► LifeKit ► Map/GPS ► Map

To change GPS compatible i- α ppli to be started

- 1. Mere from the Stand-by display ► LifeKit ► Map/GPS ► GPS settings
- 2. Map setting Select map
- Select an i-αppli program Select "OK".


When you use a GPS compatible i- α ppli, the location information is sent to the information provider of the i- α ppli program you use.



59

Camera

Viewing and Operating Finder Display

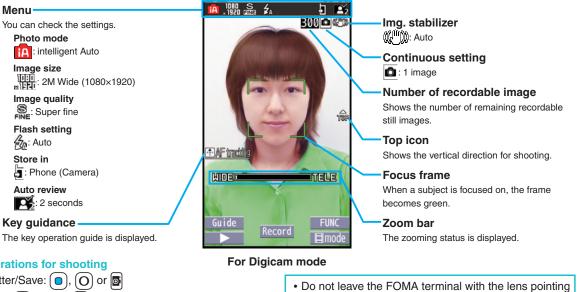

- to direct sunlight. Pixels may be discolored or burns may result.
- When the battery level is low, you may not be able to save still images/moving pictures you shoot.

60

Operations for shooting Shutter/Save: ●, ○ or ■ Zoom: ○(TELE)/○(WIDE) Focus function: ○, ★ or ■(halfway) Change camera-mode: ☞ Flash setting/Photo light set.: ■

Shooting Still Images/Moving Pictures

Shooting Still Images (Digicam Mode)

You can shoot still images within sizes ranging from Square (small) (480 x 480) to 13M (3120 x 4160).

- Press $[m_{TV}]$ from the Stand-by display. Press (🖸)(Record).

The still image is automatically saved to the set storage location.

Shooting Still Images (Photo Mode)

You can shoot still images in any size from Sub-QCIF (96 x 128) to 3M (1536 x 2048).

- 1. $[m_{\text{TV}}]$ from the Stand-by display \triangleright $[m_{\text{TV}}]$ (FUNC) Camera-mode Photo mode
- 2. Press () (Record).

Press

Shooting Moving Pictures

- **lo** w from the Stand-by display
 - lo⊤v)(⊟mode)
- Start recording by pressing

(Record) End the recording by

pressing () (Stop). Save .

Viewing Still Images/Moving **Pictures after Shooting**

The still image you shot is saved to "My picture" in Data Box. The shot moving picture is saved to " a motion/Movie" in Data Box.

The still image/moving picture can be set for the Stand-by display or other displays.

- (MENU) from the Stand-by display Data box
 - My picture or 🗟 motion/Movie
- Select the "Camera"
 - Select still image or a moving picture.

Picture Album

You can detect the faces of people appearing in the still images you have shot and expand them or add compensatory effects to the detected faces. You can also play slideshows in which the images are given a full measure of expressiveness using the effect function.

- 1. (from the Stand-by display Select still image.
- You can display the still images in Picture Album also by pressing (MENU) (Tom the Finder display in the Digicam Mode or Photo Mode.

Shooting Still Images Using Various Methods

Shooting Still Images Using Omakase Choice

You can shoot 8 still images in succession. The FOMA terminal automatically identifies those still images which were shot successfully on the basis of the focus and composition, and it displays them.

- **≣**𝔅 (**FUNC**) from the Finder display for Digicam Mode ► Cont. set.
 - Omakase choice
- Press () (Record).
- While the first still image identified as a successfully shot image is selected, the Post View display appears.
 - "W" is added to the three superior images.
 - You can check out other still images by pressing
 - Press (Save)
 - You can save all the shot images by pressing

3 Sel Whe

Shooting Still Images Using Auto Shutter

The number of people's faces recognized by face recognition and the distances between the faces are identified, and the scene is shot automatically. <Example> Using "Group shutter" to shoot groups of three people

- 1 (FUNC) from the Finder display for Digicam Mode ► Auto shutter
- 2 Select "Group shutter".

Select "Three".

When the faces of three people are recognized, the self timer is tripped, and three seconds later an image of the group is shot.

The still image is automatically saved to the set storage location.

63

Sea

Using 1Seg

1Seq is a service provided by television entrepreneurs (broadcasting stations). You are not charged a communication fee for receiving video and audio. For about fee charged by NHK, contact NHK,

% You are charged a packet communication fee for browsing "Data broadcasting site" and "i-mode site". You might be charged an information fee for using some sites (i-mode pay sites).

%For details on the 1Seq service, browse the following websites:

The Association for Promotion of Digital Broadcasting

From personal computer: http://www.dpa.or.ip/english/ From i-mode: http://www.dpa.or.ip/1seg/k/ (In Japanese only) %1Seq is not available overseas.

Radio waves

1Seg is one of the broadcasting services receiving radio waves (broadcasting waves) different from that used for the FOMA services. You might not be able to correctly receive 1Seg broadcast in places as follows:

- Places far away from radio towers that transmit broadcasting waves Mountain-ringed regions or behind buildings
- · In tunnels, underground, or recesses of buildings
- *The reception conditions might be improved by moving your FOMA terminal away from or close to you, or by moving yourself to another place.
- Battery level

If you try to start 1Seg when the battery is low, the battery alert tone sounds, and a confirmation display appears asking whether to start it. In addition, when the battery level becomes low while you are watching or recording a 1Seg program, the battery alert tone sounds.

• When you do nothing on the confirmation display for about one minute, 1Seg automatically terminates.

Messages on the display when you use 1Seg for the first time

When you use 1Seq for the first time after purchase, the Exemption Clause Confirmation display appears.

If you select "NO" on a confirmation display which appears after pressing ()(()(), the same confirmation display does not appear afterward.

Setting Channels

When you activate 1Seg for the first time or change the area you are in, you need to operate "Channel setting". Select "Auto channel setting" to enable you to search automatically for broadcast stations you can watch.

• You need to set this function when you are in the terrestrial digital TV broadcasting service area.

ISeg
▶ Channel setting

- Auto channel setting
- Select "YES".

Enjoy

Select "YES" Enter a title.

To execute Channel Setting by selecting an area

- 1. (MENU) from the Stand-by display ► 1Seg
 - Channel setting Select area
- 2. Select an area Select a prefecture.
- 3. Select "YES".

Watching 1Seg




Press and hold for for at least one second from the Stand-by display.

1Seg starts and the viewer display appears.

When you switch to Horizontal Open Style, you can watch a 1Seg program on the horizontal display.



Viewing and Operating Viewer Display

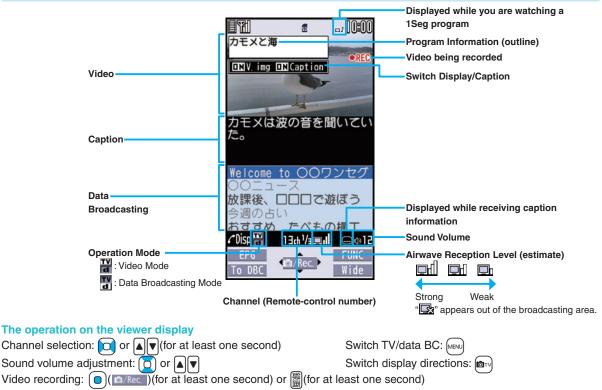

• The recorded video is saved on the microSD card.

Setting Timer for Watching or **Recording 1Seg Programs**

Set the date and time, a channel, and program name, and enter them to the TV Timer List or Timer Recording List. When the set time arrives, watching or recording starts.



from the Stand-by display > 1Seg

- Select "TV timer list" or "Timer recording list".
- Press (
- Enter each item.

Press 🖂

Playing Recorded Video

- - **MENU** from the Stand-by display Data box > 1Seg



While playing the video, press were to switch to horizontal display to make images appear enlarged.



Music

Music&Video Channel

Music&Video Channel is a service which automatically delivers up to about one-hour programs at night just by selecting your favorite music programs in advance. Further, you can enjoy high-quality video program of up to about 30 minutes. Programs are updated periodically and you can enjoy the delivered programs at any time such as on commuting.

- Before using Music&Video Channel
- Music&Video Channel is a pay service that is available on a subscription basis. (To apply for Music&Video Channel, you need to subscribe to i-mode and i-mode packet flat-rate service.)
- In addition to the service fee for using Music&Video Channel, you might be charged separately an information fee depending on the program.
- If you insert the UIM to the Music&Video Channel incompatible FOMA terminal after you subscribe to Music&Video Channel, you cannot use Music&Video Channel Service. Note that the service fee applies unless you cancel the Music&Video Channel subscription.
- You cannot set or download programs during international roaming.[®] Take procedures to halt the distribution of programs before going abroad. Then, after homecoming, resume the reception of distribution.
 [®] When you try to set or download programs during
 - When you try to set or download programs during international roaming, note that you are charged a packet communication fee for i-mode communication.
- For the details on Music&Video Channel, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- The Music&Video Channel service is provided in Japanese only.

Setting Programs

- Item from the Stand-by display ► MUSIC
 Music&Video Channel ► Set program
- 2 Follow the instructions on the display to set a program.


The program automatically downloads at night.

Playing Program

- - Menuly from the Stand-by display ► MUSIC
 Music&Video Channel

Select a program.

Operation while playing back a Music&Video Channel program Halt: (2)(()) Pause: (0)(()) Sound volume adjustment: () or () Search (fast forward): Press and hold ()

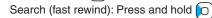



Downloading Chaku-uta Full[®] Music Files

You can download Chaku-uta Full[®] music files from sites.

Select a Chaku-uta Full[®] music file at a downloadable site.

Select "Save" Select "YES".

Select a destination folder.

• "Chaku-uta Full" is a registered trademark of Sony Music Entertainment Inc.

Handling music files

You can use music files saved on the microSD card for personal use only. Before using, give enough consideration not to infringe on the third party's intellectual property rights or other rights such as copyright.

Playing Music Files

MUSIC Player enables you to play Chaku-uta Full[®] music files you have downloaded from sites, or to play Windows Media[®] Audio (WMA) files you saved on the microSD card using your personal computer.

- from the Stand-by display ► MUSIC ► MUSIC Player
- 2 Select "All tracks" ► Select a music file.



Search (fast forward): Press and hold Search (fast rewind): Press and hold Sound volume adjustment: Replay next file: replay next file: replay previous file or go back to the beginning of the file: replay for at least one second)

68

i-appli/i-Widget

"i- α ppli" is a software program for i-mode mobile phones. By downloading various software programs from the i-mode site, you can use your FOMA terminal more conveniently. You can automatically update the stock price information or weather information, and enjoy games without accessing network.

Your press of the single i-Widget key (CLR) enables you to access the frequently used content such as calculator, clock, and stock price information (Widget Appli). You can add Widget Appli programs by downloading from sites provided by IPs (Information Providers).

- You are charged separately a packet communication fee for downloading i-αppli programs or Widget Appli programs.
- A multiple number of Widget Appli programs may start communicating when you open the i-Widget display. In that case, you are charged separately a packet communication fee.
- For details on i-αppli/i-Widget, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Starting i-αppli

Press and hold \mathbf{x} for at least one second from the Stand-by display.

2 Select a software program.



Using i-Widget

TT

 $\ensuremath{\mathsf{Press}}\xspace$ from the Stand-by display.

i-Widget that can simultaneously start multiple Widget Appli programs opens.

Select a Widget Appli program.

You can operate Widget Appli program separately.



Widget Appli-

Downloading i-*α***ppli from Sites**

- Select a software program from downloadable site.
- Select "OK" when downloading ends.

Select "YES".

You can delete the pre-installed i-αppli programs except for the "ケータイTOOL<辞書> (KEITAI TOOL Dictionary)". You can re-download deleted programs from the "P-SQUARE" site.
 You can download not only i-αppli programs but also the pre-installed Chara-den images, Machi-chara images, Kisekae Tool files, templates, dictionaries, and Deco-mail pictograms from the "P-SQUARE" site (in Japanese only).

 [®] Menu→メニューリスト (Menu List)→ケータイ電

話メーカー (Mobile Phone Maker)→P-SQUARE

- Deadlines for re-download services ·"モバイルGoogleマップ (Google Map for Mobile)": the end of May, 2013
 - ・"リバーシ (REVERSI)": the end of March, 2014
 - ・"ハイパー四川省 (Hyper Sichuan)": the end of March, 2014
- The services such as re-downloading might be halted or closed without notice even in the service period.

i-motion/Movie

i-motion is a file consisting from video, audio, and music which you can download to your FOMA terminal from i-motion sites that support i-motion. You can also set it for a ring tone.

Also, by using high speed communication, you can play back smooth and high-quality movie files provided by portal sites, movie specialty sites and other sites on the Internet.

- When downloading or streaming an i-motion/movie file, you might receive a bulky file. When data size required for sending or receiving is bulky, packet communications fees will be a large sum. You are advised to use i-mode packet flat-rate service.
- Two types of i-motion/movie files, streaming type and normal/download type are available.

Categories	Description
Streaming type	Plays data while receiving.
(cannot be saved)	
Normal/Download	When download is completed,
type (can be saved)	the Download Completion display
	appears. You can then play or
	save data.

Downloading i-motion/Movie

- Select an i-motion/movie file from an i-motion/movie downloadable site.
- 2 Select "Save" ► Select "YES".
- 3 Select a destination folder.

Playing i-motion/Movie

- ▶ from the Stand-by display ▶ Data box ▶ 🗟 motion/Movie
- Select a folder
 - Select an i-motion file or a movie file.

Osaifu-Keitai/ToruCa


Osaifu-Keitai function uses the IC card installed inside it to allow you to use the FOMA terminal to make payments, use coupons, take advantage of stamp rallies and so on simply by the FOMA terminal over the scanning devices found in stores or other locations. Furthermore, by the FOMA terminal over a scanning device, you can access sites and home pages, obtain the latest coupons using communication, and check the deposits of electronic money and the status of its use. Security of the card is well established so that you can use it carefree.

ToruCa is an electronic card that you can receive with Osaifu-Keitai for use as fliers, restaurant cards, and coupon tickets. You can download ToruCa files from scanning devices, sites, or data broadcasting, and can easily exchange them using mail, infrared communication, iC communication, or a microSD card. The downloaded ToruCa files are saved to "ToruCa" on "Osaifu-Keitai". For details on Osaifu-Keitai and ToruCa, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

- Data on the IC card (including electronic money, reward points, etc.) might be lost or deformed owing to the malfunction of the FOMA terminal. (You cannot deposit your FOMA terminal at our hand for repair, remaining data files on it. You are asked, as a rule, to delete them by yourself.) As to the support such as reissue, restoration, temporal storage, and transfer of data, consult the provider of your Osaifu-Keitai compatible service, except for the transfer by the iC transfer service. For your important data, be sure to use the service with backup support.
- In any case including malfunction or model change, we cannot be held responsible for the loss or deformation of data on the IC card or other losses caused regarding Osaifu-Keitai compatible services.
- When your FOMA terminal is stolen or lost, immediately inquire of the provider of your Osaifu-Keitai compatible service about the countermeasures.
- Even when the power is turned off or the battery runs out, the "Osaifu-Keitai" function is available by holding the \Im mark over the scanning device. The function may not be available, however, if you do not use the battery pack for a long time or leave the battery uncharged after the battery alert activates.

Place the normal mark of the FOMA terminal over a scanning device to use the target service.

The Call/Charging indicator lights when you bring your FOMA terminal close to the scanning device and communication becomes ready.

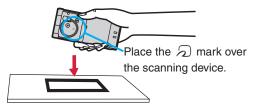

11


i-concier

"i-concier" works to serve you with a pleasant life just like a clerk or concierge does. The service holds your data (area information about your neighborhood, Schedule, ToruCa, Phonebook, etc.) and sends you information. with good timing, about a variety of things according to your living area, your current location, or your preference or interest. This service automatically updates schedule events or ToruCa files to the latest ones, and automatically adds useful information such as about the opening period of various shops to your Phonebook. It also allows you to share the schedules or images held by the DOCOMO's Data Storage Center with friends, family members or other groups. It also enables you to easily print out the images held, i-concier information is notified by a Machi-chara image (cartoon character that appears on the Stand-by display).

- For details on i-concler, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- i-concier is a pay service which is available on a subscription basis (You need to subscribe to i-mode to apply for i-concier).
- If you have not subscribed to Data Security Service but will newly subscribe to i-concier, you are to subscribe to Data Security Service as well as i-concier.
- Depending on the content (information, i-schedule, and others), you might be charged separately an information fee other than the i-concier monthly fee.
- You are charged a packet communication fee separately for receiving information except some.
- You are charged separately a packet communication fee for using detailed information.
- You are charged separately a packet communication fee for auto-updates of i-schedule, ToruCa, and Phonebook.
- · i-concier is available in Japanese only.

Receiving Information

When information arrives, blinks and the content is displayed on the Standby display.

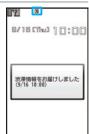

Select a message.

Displaying i-concier Screen

wew from the Stand-by display ▶i-concier

Select a piece of information.

Convenient Tools

Using Schedule

MENU from the Stand-by display ► Stationery ► Schedule

Select a date to show a schedule event of the selected date. Select the schedule event to confirm its details.

ER (FUNC) > Select "New".

You can store a new schedule event.

Enter each item.

5	Edit schedule	
	bject	
PI		
	cation informat	
	l day te(from)	0
	10/ 9/16 0:00	
Da	te(to)	
	10/ 9/16 23:59 peat	OFF
	arm	OFF
	ne Clock Alarm	Tone
≝De	tails	
Fini	Shi catan	
	Select	

22 23 24

Select

10:30

12:30

8:00

26 27 28 29 30

⊕ Golf

11 Lunch


Travel

4 Press 🖂 (Finish)

Using Alarm



MENU from the Stand-by display
► Stationery ► Alarm

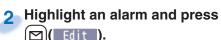

Enter each item.

Volume	0N OFF k Alarm Tone Level 4 times/5min. 0N OFF
Seli	ect



• The alarm does not sound in Public mode (Drive mode), Lock All, Personal Data Lock, or Omakase Lock.

Using Bar Code Reader

You can use the camera to scan QR codes and others, and store them as files.

From the scanned data, you can make calls, compose i-mode mail messages, access Internet websites, and so on.

When scanning with Bar Code Reader

- Scan the code as large as possible within the guide frame.
- · Autofocus works when you scan the code about 10 cm or more away from it.

When you scan the code in the outof-focus state, the recognition rate lowers.

· Scan so that the camera is in parallel with the code.

QR code

QR code is one of the 2-dimensional codes that denotes data in the vertical and horizontal directions.

• "株式会社NTTドコモ (NTT DOCOMO, INC.)" is displayed when you scan the QR code with the FOMA terminal

Scan a Code

<Example> Access P-SQUARE by using QR code on the right




QR code for accessing the site



Guide frame

(MENU) from the Stand-by display LifeKit Bar code reader

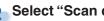

- Select "Scan code".
- Fit a code to the guide frame and press () The subject is focused on by autofocus function.
 - Press () (Start) to scan the code. A URL is displayed as a scanned result.

Select the URL 5

- Select "i-mode Browser"
- Select "YES".

Bluetooth Function

You can connect your FOMA terminal to a Bluetooth device such as Wireless Earphone Set 02 (option), and can talk on the phone or play music files.

Register a Bluetooth Device to the FOMA Terminal

You can search and register a Bluetooth device to the FOMA terminal. You need to place the Bluetooth device to be registered standby for registration beforehand.

<Example> Register Wireless Earphone Set 02 and connect using the Hands-free service

- If the Stand-by display ► LifeKit
 Bluetooth ► Register New Devices
- Select "OK".

Select Wireless Earphone Set 02 Select "YES".

• When you register a Bluetooth device other than Wireless Earphone Set 02, you need to enter "Bluetooth passkey".

Select "Hands-free".

Select "Headset" or "Hands-free" for talking, and select "Audio streaming" for playing music.

Connect the Bluetooth Device

- Image from the Stand-by display ► LifeKit
 ► Bluetooth ► Device list
- 2 Select a Bluetooth device
 - Select a service to connect to.

While the Bluetooth device is connected, "? blinks.



Data Management

Using microSD Card

If you do not have a microSD card, you need to purchase it.

• P-04B supports a commercial microSD card of up to 2 Gbytes and microSDHC card of up to 16 Gbytes (As of April 2010).

For the latest operation check information such as the memory capacity and manufacturers of microSD cards, access the following sites (in Japanese only). Note that the microSD cards other than published in the sites might not correctly work.

- · From i-mode to P-SQUARE
- (As of April 2010)

B Menu →メニューリスト (Menu List)
 →ケータイ電話メーカー (Mobile Phone

Maker) → P-SQUARE

QR code for accessing the site

11

· From personal computers http://panasonic.jp/mobile/

Note that the published information is the result obtained from the operation check, which does not necessarily guarantee all performances of those microSD cards.

 Make sure that you turn off the power, and then insert/remove the microSD card.

Inserting/Removing microSD Card

With the metal terminal surface facing downward, make sure that the cut edge is positioned at right and then insert.

Push it until it clicks.



When you remove the microSD card Push the microSD card until it stops and remove it.

• Note that the microSD card may pop out when you insert or remove it.

The inserting slot of the microSD card is in the inside of the back cover. To insert, first remove the back cover and battery pack.



Icons on the Display

מש פ 10:00

- sp: A microSD card is inserted.
- ⇒: Data is being read/written.
 - (Do not remove the microSD card nor turn off the FOMA terminal.)
- de termicroSD card is write-protected.
- The microSD card cannot be used. (Insert the microSD card again. If "ag" is still displayed, execute "Check microSD" or "microSD format".)

Formatting microSD Card

When you use the microSD card for the first time, you need to format (initialize) it.

- Be sure to use P-04B for formatting. The microSD card formatted using other devices such as personal computers may not work properly.
- Note that formatting deletes all content on the microSD card.
 - If rom the Stand-by display ► LifeKit
 MicroSD ► Refer microSD data
 ImicroSD Format
 - Enter your Terminal Security Code Select "YES".

Copying Data to the microSD Card

<Example> Copying a still image

- (MENU) from the Stand-by display
- Data box My picture
- Select a folder.
- 2 Highlight a still image to be copied and press (FUNC) > Select "Copy to microSD" > Select "Copy this".

Copying Data to the FOMA Terminal

<Example> Copying a still image

- (MENU) from the Stand-by display
- ► Data box ► My picture ► (microSD)
- Select a folder.
- 2 Highlight a still image to be copied and press (≣ 𝔄) (FUNC)
 - Select "Copy to phone"
 - Select "Copy this".

Displaying Data Stored on the microSD Card

<Example> Displaying still image

- from the Stand-by display
 - Data box My picture MENU (microSD)
- 2 Select a folder ► Select an image.

Check Capacity of microSD Card

You can check the used and unused memory space (estimate) on the microSD card.

- 1. ↓ From the Stand-by display LifeKit → microSD ► Refer microSD data
- 2. (FUNC) Select "microSD info".

Back up Data to the microSD Card

You can back up Phonebook entries, schedule events, ToDo items, messages, text memos, and bookmarks, and the settings on and information about your FOMA terminal collectively onto the microSD card. When restoring the backup data onto your FOMA terminal, they are collectively restored.

- Backing up data from the FOMA terminal onto the microSD card is collectively applied to all data, so data not created in the FOMA terminal is also backed up on the microSD card. When you restore such data onto your FOMA terminal, either data that was vacant on the microSD memory card at the time of backup write over data in the FOMA terminal or even data created later in the FOMA terminal is written over.
 - Image: From the Stand-by display ► LifeKit
 ► microSD ► Backup/Restore
 ► Backup to microSD
 - Enter your Terminal Security Code
 - Select "YES".


To restore backup data to FOMA terminal

- Image: Market Arrow Stand-by display ► LifeKit ► microSD
 ► Backup/Restore ► Restore to phone
- 2. Enter your Terminal Security Code ► Select "YES".

Sending/Receiving Data by Infrared Communication/iC Communication

You can send or receive data such as Phonebook entries to or from a device supporting the infrared communication function or iC communication function.

• You cannot exchange data depending on the other party's device or FOMA terminal.

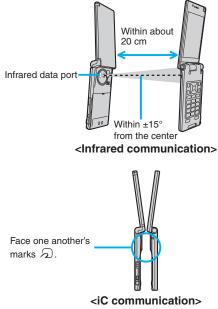

More Convenient

Sending Data

· For infrared communications, set the receiving end terminal first, and then start sending data within 30 seconds.

Function menu of the data to be sent Select "Send Ir data" or "fc transmission"

 Procedure for sending data might differ depending on the data.

Select "YES".

Receiving Data by Infrared Communication

- (MENU) from the Stand-by display LifeKit Receive Ir data Receive
- Select "YES".

Receiving Data by iC Communication

Face the 2 mark of the receiving end terminal which shows the Stand-by display, to the 2 mark of the sending end terminal

Select "YES".

Connect to Personal Computer

You can connect the FOMA terminal to a personal computer to transfer WMA files, images or other data stored on microSD card.

You can also connect to the internet and transfer the data.

- You will need the FOMA USB Cable with Charge Function 01/02 (option) or FOMA USB Cable (option).
- To perform data communication, you will need to install the "FOMA communication configuration file" (driver) on the CD-ROM provided.

For details, refer to the "Manual for PC Connection" on the CD-ROM provided.



Support

Troubleshooting

- First of all, check to see if you need to update the software program and then update it if necessary. See page 86 for how to update software programs.
- When symptom persists even after you check the countermeasures for the problem you suffer, contact the "Repairs" counter listed on the back page of this manual or a repair counter specified by DOCOMO.

The "Repairs" counter is available in Japanese only.

Power source

The FOMA terminal does not turn on.

- ··· Make sure the battery pack is attached to the FOMA terminal correctly. (See page 18)
- \cdots Make sure the battery is fully charged. (See page 19)

Charging

Cannot charge.

(The Charging indicator does not light, or it flickers.)

- ··· Make sure the battery pack is attached to the FOMA terminal correctly. (See page 18)
- ··· Make sure the power plug of the adapter is securely inserted into the outlet or cigarette lighter socket.
- ··· Make sure the adapter and the FOMA terminal are connected correctly. (See page 19)
- ... When you use an AC adapter (option), make sure its connector is firmly connected to the FOMA terminal or the desktop holder (option). (See page 19)
- ... When you use the desktop holder, make sure the connector terminal of the FOMA terminal is not stained. If it is stained, wipe the terminal part with a dry cotton swab, etc.
- If you talk on the phone, have communications, or operate other functions for a long time during battery charge, the temperature of the FOMA terminal may rise to flicker the Call/Charging indicator. In that case, charge the battery after the FOMA terminal cools down. (See page 19)

Operation of terminal

While you operate the FOMA terminal or charge the battery, they get hot.

···While operating or charging, or when you operate i-αppli programs, talk on the videophone, or watch 1Seg programs for a long time during battery charge, the FOMA terminal, battery pack, or adapter may become warm, but this is not a safety hazard, so you can continue to use them.

The usable time of the battery is short.

- ••• Make sure not to leave the FOMA terminal out-of-service-area for a long time. If your FOMA terminal is left out-of-service area, it searches for radio waves to establish communications, consuming more power.
- ... The usable time of the battery pack varies depending on the usage environment or its remaining life.
- Battery packs are consumables. The usable time slightly shortens each time you charge the battery. If the usable time becomes extremely short as compared with the default state even if fully charged, purchase the specified battery pack.

The power of the FOMA terminal shuts down and restarts.

If the terminal of the battery pack is stained, the connection might deteriorate to shut down the power. Wipe the battery terminal with a dry cotton swab, etc.

Pressing keys is disabled.

- ··· Make sure Lock All is deactivated. (See page 37)
- ··· Make sure Key Lock is deactivated. (See page 38)
- \cdots Make sure Side Keys Guard is set to "OFF".

The UIM is not recognized.

··· Make sure you insert the UIM in the correct direction. (See page 18)

Call

Cannot make a call by pressing numeric keys.

- ··· Make sure Keypad Dial Lock is deactivated.
- ··· Make sure Restrict Dialing is deactivated.
- ··· Make sure Lock All is deactivated. (See page 37)
- ··· Make sure Self Mode is deactivated.

Cannot talk.

- ... Turn off and on the FOMA terminal, or remove and attach/insert the battery pack or UIM. (See page 18, page 20)
- ... Depending on the radio wave property, you may not be able to make or receive a call even if the FOMA terminal is "within service area" or " I is displayed for a radio wave condition. Move to another place and redial.
- ··· Make sure the call restrictions such as Call Rejection, Call Acceptance, etc. are deactivated.
- Depending on the radio wave congestion state, calls and mail messages may be congested and hard to be connected in crowded places. In that case, the message "Please wait" or "Please wait for a while" is displayed and a busy tone sounds. Move to another place or wait for a while, and then redial.

Osaifu-Keitai

Cannot use Osaifu-Keitai function.

- If you remove the battery pack or activate Omakase Lock, the IC card function becomes unavailable regardless of the setting of IC Card Lock. (See page 18, page 37)
- \cdots Make sure IC Card Lock is deactivated. (See page 37)
- \cdots Make sure you place the mark on the FOMA terminal over the scanning device. (See page 72)

Warranty and After-sales Service

Warranty

- Make sure that you have received a warranty card provided at purchase. After checking the contents of the warranty card as well as "Shop name and date of purchase", keep the warranty card in a safe place. If you notice that necessary items of the warranty card are not filled in, immediately contact the shop where you purchased the FOMA terminal from. The term of the warranty is one year from the date of purchase.
- All or part of this product including the accessories may be modified for improvement without notice.

After-sales Services

$\ensuremath{\mathbb{O}}$ When there is a problem with the FOMA terminal

Before asking repairs, check "Troubleshooting" in this manual or in "使いかたナビ (Guide)" mounted on the FOMA terminal. ("使いか たナビ (Guide)" is available in Japanese mode only.) If the problem remains unsolved, contact the "Repairs" counter listed on the back page of this manual for malfunction and consult them.

The "Repairs" counter is available in Japanese only.

When repairs are necessitated as a result of consultation: Bring your FOMA terminal to a repair counter specified by DOCOMO. Note that your FOMA terminal is accepted for repair during the repair counter's business hours. Further, note that you may need to wait for fixing depending on the malfunction state.

In warranty period

- \cdot Your FOMA terminal is repaired charge free in accordance with the terms of warranty.
- Make sure that you bring the warranty card to the counter for repair. If you do not show the warranty card, or when troubles or malfunctions are regarded to be caused by your mishandling (the damages of liquid crystal display, connector, etc.), the repair cost is charged even within the warranty period.

• The cost for troubles caused by the use of devices and consumables other than those specified by DOCOMO is charged even within the warranty period.

Repairs may not be carried out in the following cases:

- When exposure to water is found at our repair counter (Example: When the waterproof sticker reacts)
- When, as a result of inspection at our repair center, corrosion is found due to exposure to water, dew condensation, or sweat, or when damage or deformation is found in the circuit board [Repairs might not be carried out when damage to the connector terminal (earphone/ microphone terminal) or LCD, or cracks in the body are found.]
- *Even if repair is feasible, the repair cost is charged when the trouble you suffer matches one of the symptoms listed above, which is not supported by the warranty.

After the warranty period

We will repair your FOMA terminal on request (charges will apply).

Spare parts availability period

The minimum storage period of the performance spare parts (parts required for maintaining performance) for the FOMA terminal is basically six years after the closure of its production. Note, however, that your FOMA terminal might not be repaired depending on the troubled portions because of the shortage of spare parts.

Other points to note

- Make sure not to modify the FOMA terminal or its accessories.
 We might reject to repair depending on the degrees of your modification. The following might be regarded as modifications:
 - · To put stickers, etc. onto the liquid crystal display or keys
 - \cdot To decorate the FOMA terminal using adhesives
 - \cdot To replace the coverings etc. with those of other than DOCOMO genuine products
- · Repairs of troubles or malfunctions resulting from the modifications are charged even within the warranty period.

- Do not peel the nameplate off the FOMA terminal. Note that when we cannot ensure the contents described on the nameplate and therefore cannot verify the product conformity to the technical standard, it might happen that we at DOCOMO reject to repair the malfunction.
- The information such as about function settings and Total Calls Duration, etc. might be reset depending on the troubles or repairs, or the way you handle the FOMA terminal. Set the settings again.
- The parts generating magnetism are used in the following portions of the FOMA terminal. Note that if you place a magnetism-sensitive object such as a cash card near the FOMA terminal, the card might become unusable.

Portions: speaker, earpiece

 If the FOMA terminal gets wet or becomes moist, immediately turn off the power and remove the battery pack; then visit a repair counter. The FOMA terminal may not be repaired depending on the condition.

i-mode Fault Diagnosis Site

You can check on your FOMA terminal whether sending/receiving mail messages, downloading images/melodies, and others are normally working. When you think your FOMA terminal is in trouble as a result of your check, contact the "Repairs" counter listed on the back page of this manual.

The "Repairs" counter is available in Japanese only.

• To connect to "iモード故障診断サイト (i-mode Fault Diagnosis Site)" [in Japanese only]

i-mode site: ಔ Menu→お知らせ (News)

→サービス·機能 (Services & Functions)

- → i モード (i-mode)
- → i モード故障診断 (i-mode Fault

Diagnosis)



QR code for accessing the site

• A packet communication fee for connecting to the i-mode Fault Diagnosis Site is free. (When you access it from overseas, you are charged a fee.)

Updating Software

This function is for updating software programs in the FOMA terminal by using packet communication if necessary. %A packet communication fee for updating software programs is free.

The DOCOMO website and "お客様サポート (User support)" in Japanese 🗄 Menu lets you know information about updating software programs. There are three methods for updating software programs; "Auto-update", "Update Now" and "Reserve Update".

- You can update software programs, with data retained, such as Phonebook entries, images shot by the camera, or downloaded data in the FOMA terminal; however note that data may not be protected depending on the conditions (such as malfunction, damage, or drench) your FOMA terminal is placed in. You are advised to back up important data. Note that data such as downloaded ones might not be backed up.
- Before using Software Update

You cannot use Software Update overseas.

- Do not remove the battery pack while updating software programs. You may fail to update.
- · Fully charge the battery before updating software programs.
- · It may take time to update (download or rewrite) software programs.
- You cannot make/receive calls, use communication functions, and other functions while updating software programs. (You can receive voice calls during download.)
- You are advised to update software programs when radio wave is strong enough with the three antennas displayed and while you are not moving. If radio wave conditions get worse while downloading software programs, or download is suspended, move to a place with better radio wave conditions and try again to update software programs.
- When updating software programs, the proprietary information about your FOMA terminal (model name or serial number, etc.) is automatically sent to the server (DOCOMO-managed server for Software Update). We at DOCOMO never use the sent information for purposes other than to update software programs.
- If you fail to update software programs, "Rewrite failed" is displayed and you cannot do all operations. In that case, you are kindly requested to come to a repair counter specified by DOCOMO.

Start Software Update from Icon

3

Select "Update notification icon" on the Stand-by display.



Update notification icon

Check whether you need to update software programs.

2 When update is necessary, "Update is needed" is displayed. And you can select either "Now update" or "Reserve".

- When you select "Now update", update immediately starts.
- When rewriting is completed, your FOMA



terminal automatically restarts and the Update Completion Confirmation display appears.

• When you select "Reserve", you can select the date and time you want.

Start Software Update from Menu

- From the Stand-by display
 - Set./Service Other settings
 - Software update
- Enter your Terminal Security Code
 Select "Update".



3 Go to step 2 of "Start Software Update from Icon" on page 87.

Check Harmful Data

About scanning function

You can detect data or application programs, which might cause troubles, from among those downloaded to your FOMA terminal, and then can delete the data or stop starting the application programs.

- This scan function provides a certain protective measure to filter out data that might cause troubles with your FOMA terminal at the time when you browse websites or receive messages. Note that when the virus pattern data supporting respective troubles is not yet downloaded to your FOMA terminal, or when no virus pattern data supporting them is found, this function is disabled to prevent troubles from occurring.
- The virus pattern data installed on the FOMA terminal differs in content by every model. Note that we at DOCOMO might stop to distribute the virus pattern data for models on market for last three years since their release.

Update pattern data

First of all, update the pattern data to make it the latest.

(MEW) from the Stand-by display Set./Service Lock/Security Scanning function Update YES YES OK

About displays for scanning results

About the display for scanned problem elements

The displays for scanning result

Alert level 0	Alert level 1	Alert level 2	Alert level 3	Alert level 4	 The alert displays
Operation may not run properly	Operation may not run properly Cancel operation?	Operation may not run properly Canceling operation	Operation may not run properly Delete data?	Operation may not run properly Deleting data	for displaying i-mode mail
ОК	YES	OK	YES	OK	messages or SMS
Detail	NO	Detail	NO	Detail	messages may
5	Detail		Detail		differ from those
OK Continues the	YES Stops and ends	OK Stops and ends	YES Deletes the data	OK Deletes the data	at left.
operation.	the operation.	the operation.	and ends the	and ends the	
	NO Continues the		operation.	operation.	
	operation.		NO Stops and ends		
			the operation.		

Introduction of Options and Related Devices

Combining various options with the FOMA terminal, you can realize more versatile use from personal purpose to business purposes. Some products may not be dealt in depending on the area. For details, consult a handling counter such as a docomo Shop. For details on options, refer to the user's manuals of respective options and related devices.

· Earphone/Microphone 01

Battery Pack P20
Back Cover P42
FOMA AC Adapter 01/02^{*1}
FOMA AC Adapter 01 for Global use^{*1}
FOMA DC Adapter 01/02
FOMA Portable Charging Adapter 01
FOMA Dry Battery Adapter 01
Desktop Holder P39
FOMA USB Cable with Charge Function 01/02^{*2}
FOMA USB Cable^{*2}
FOMA Indoor Booster Antenna^{*3}
FOMA Indoor Booster Antenna (Stand Type)^{*3}
Carry Case L 01
In-Car Holder 01
Flat-plug AV Output Cable P01^{*4}

Stereo Earphone Set 01
Earphone/Microphone with Switch P001/P002^{*5}
Flat-plug Earphone/Microphone with Switch P01/P02^{*4}
Flat-plug Stereo Earphone Set P01^{*4}
Earphone Plug Adapter P001^{*4}
Earphone Plug Adapter for External connector terminal 01
Earphone Plug Adapter 01
Flat-plug Connector/Stereo Mini-jack Conversion Adapter P01^{*4}
Bluetooth Headset F01^{*6}
AC Adapter for Bluetooth Headset F01
Wireless Earphone Set P01/02
Bone conduction microphone/receiver 01^{*4}/02
In-Car Hands-Free Kit 01^{*7}
FOMA In-Car Hands-Free Cable 01

- %1 See page 19 for charging batteries using AC adapter.
- %2 If you use a USB hub, outer devices may not work correctly.
- %3 Use it in Japan only.
- %4 Earphone Plug Adapter for External connector terminal 01 is required.
- *5 Earphone Plug Adapter P001 and Earphone Plug Adapter for External connector terminal 01 are required.
- %6 AC Adapter for Bluetooth Headset F01 is required.
- %7 $\,$ To charge the P-04B, FOMA In-Car Hands-Free Cable 01 is required.

Appendix

Function List

Execute "Reset settings" on page 39 for the items

indicated by

, to return to the respective defaults.

Mail	Inbox		
≌ Outbox			
	Draft		
	Compose message		
	Create new Decome-Anime		
	Templete	Deco-mail	
	Template	Decome-Anime	
	Check new message	s	
	Compose SMS		
	Check new SMS		
Receive option			
		Scroll	
		Font size setting	
		Mail list display	
		Message display	
		Mail security	
		Secret mail display	
	Mail settings	Auto color label	
		Pred. conv. at reply	
		Header/signature	
		Set check new messages	
		Auto-display	
		Receiving display	
		Receive option setting	

Mail	Mail settings	Attachment preference
Σ		Auto-start attachment
		Address/Spam Mail set.
		Feel * Mail
		Auto save setting
		Text predict
		Check settings
		SMS report request
	SMS settings	SMS validity period
	Sind Settings	SMS input character
		SMS center setting
		Receive setting
		Beep time
	Area Mail settings	Manner/Public mode set
		Check ring tone
		Other menu
		•
ē	🖁 Menu 🭳 Search	
node	ិ Menu Q Search Bookmark	
i-mode	Bookmark	i-mode Browser
i-mode	- 4	
i-mode	Bookmark	i-mode Browser
i-mode	Bookmark Screen memo	i-mode Browser
i-mode	Bookmark Screen memo Last URL	i-mode Browser
i-mode	Bookmark Screen memo Last URL	i-mode Browser Full Browser
i-mode	Bookmark Screen memo Last URL Enter URL	i-mode Browser Full Browser Channel list
i-mode	Bookmark Screen memo Last URL	i-mode Browser Full Browser Channel list Ticker ON/OFF
i-mode	Bookmark Screen memo Last URL Enter URL	i-mode Browser Full Browser Channel list Ticker ON/OFF Ticker font size set.
i-mode	Bookmark Screen memo Last URL Enter URL	i-mode Browser Full Browser Channel list Ticker ON/OFF Ticker font size set. Ticker color set.
i-mode	Bookmark Screen memo Last URL Enter URL	i-mode Browser Full Browser Channel list Ticker ON/OFF Ticker font size set. Ticker color set. Ticker scroll speed
i-mode	Bookmark Screen memo Last URL Enter URL i-Channel	i-mode Browser Full Browser Channel list Ticker ON/OFF Ticker font size set. Ticker color set. Ticker scroll speed

e	i-mode settings	Common settings
-mode		Check settings
I		Reset i-mode setting
	Full Browser Home	
ij	Software list (phone)	
i-αppli	appli (microSD)	Software list
·	8 appli (microsp)	appli data
	⁸ α ppli call logs	
		End stand-by info
		End Widget appli inf
	នី α ppli info	Security error history
		Auto start info
		Trace info
		Auto start setting
		Disp. software info
		i-Widget roaming set.
		i-Widget sound effect
		appli call settings
	⁸ α ppli settings	⁸ αppli volume
		Preferred tone
		αBacklight
		αPower saver
		αVibrator
		Check settings
	About 🗟 αppli	

Set./Service	Sound	Select ring tone (13)
ž		Ring volume (50)
š,		Keypad sound (30)
èt.		Melody effect (🔤 64)
0,		Headset usage setting (🔤51)
		Mail/Msg. ring time (📾 68)
		Charge sound
		Display setting (🔤 56)
		Backlight (📾 70)
		View blind
		Color theme setting (📾 86)
		Machi-chara
		Menu icon setting (🔤 57)
	Display	Horizontal open menu
		Private menu setting (2)
		Desktop icon (🔤63)
		Font (🔤 66)
		Font size setting
		Select language (15)
		Recv. mail/call at open
		Image quality
		LCD AI
		Icons (www.36)
		Dot illum.
		All illum. setting
		Incoming illumination (689)
	Illumination	Illumination in talk
	munimation	Missed/unread illum.
		Music&Video Ch illum.
		Illum. when closed
		Hourly illumination

Set./Service	Illumination	MUSIC illumination
		Bluetooth illumination
		IC card illumination
ët.		Check settings
0)	Kisekae	
	i-concier	Information disp. set.
		Self mode
		Lock all
		Personal data lock
		IC card lock
		Secret mode (wew 40)
		Secret data only (weil41)
	Lock/Security	Secret recv. call
	LOCK/Security	Keypad dial lock
		Reject unknown
		Call setting w/o ID (10)
		Change security code (📾 29)
		UIM setting
		Scanning function
		Lock setting
		Call data (📾 61)
	Call time/cost	Reset total cost&dura. (📾 60)
		Notice call cost
		CLR max cost icon
		Set time (www.31)
		World time watch
	Clock	Summer time
		Auto power ON/OFF
		Alarm setting
	Incoming coll	Vibrator (📾 54)
	Incoming call	Manner mode set (@20)

8	Incoming call	Answer setting (🔤 58)
Ż		Setting when opened
Set./Service		Record display set
et.		Disp. PH-book image
0		Set call/receive No.
		Ring time (🔤 90)
		Info notice setting (📾65)
		V.phone while packet
		Auto call/answer set.
		Melody Call setting
		Volume
		Setting when closed (18)
		Hold tone setting
	Talk	Shikkari Talk
		Noise reduction (🔤 76)
		Quality alarm (🔤 75)
		Reconnect signal (77)
	Videophone	Visual preference
		Select image
		Hands-free w/ V.phone
		Voice call auto redial
		Notify switchable mode
		Reject videophone
	Network setting	Prefix setting
	Tetwork Setting	Femtocell setting
		Caller ID notification (17)
		Voice mail
	NW services	Call waiting
		Call forwarding
		Nuis. call blocking
		Caller ID request

Others

92

ø		2in1 setting
ŝ	zi zi	Multi number
Set./Service		Arrival call act
	Set in-call arrival act	
Se		
		Remote access
		Dual network
	NW services	English guidance
		Overseas NW search
		Overseas setting
		Overseas service
		Additional service
		Contact DOCOMO
		OFFICEED
		Chaku-moji
		Work with style
		Side keys guard
		録画 long press set.
		Iong press set.
		Character input method (19935)
		Battery/eco mode set.
		Pause dial (🕬 84)
	Other settings	Sub-address setting
	_	Headset mic. setting
		Voice settings
		USB mode setting
		Check settings
		Reset settings (Jacobian 23)
		Initialize
		Software update
	1	oonthalo apaato

ŏ	My picture (@46)	
Data box	MUSIC	
	Music&Video Channe	el
	8 motion/Movie	
	Melody (mul6)	
	My documents	
	Kisekae Tool	
	Machi-chara	
	Chara-den	
		Image
	1Seg	Video
		Position memory
	Document viewer	
	Font	
	SD other files	
ij	Bar code reader	Scan code
LifeKit		Saved data
	Receive Ir data	Receive
	(menu 79)	Receive all
	microSD	Refer microSD data
	IIICIOSD	Backup/Restore
		Digicam mode
		Photo mode
	Camera	Movie mode
		View photos
		View movies

Ę		Device list	
.ifeKit		Register New Devices	
	Bluetooth	Activate Bluetooth/Bluetooth power OFF	
Bluetooth	Bideloolii	Accept registered	
		Accept dialup devices	
		Bluetooth settings	
		Мар	
		imadoco search	
		imadoco kantan search	
		i-area	
	Map/GPS	Map/GPS αppli	
		Position location	
		Notify of location	
		Location history	
		GPS settings	
		Play/Erase msg.	
	Dec. menturing	Play/Erase VP msg.	
	Rec. msg/voice	Record message setting	
	memo (55)	Voice memo	
		Voice announce	
	Voice recorder		
		Check/How to update	
		Exchanging history	
	Data Security	PB image sending	
	Service	Backup PB etc./update	
		Backup set./update	
		Backup images	
i-co	-concier		

농	Add to phonebook	Phone		
ğ		UIM		
Pe		Reading?		
Phonebook		Group?		
-		Memory No.?		
	Search phonebook	Name?		
		Phone number?		
		Mail address?		
		2-touch dial?		
	LUM energy in	Сору		
	UIM operation	Delete		
	Dialed/recv. calls	Dialed calls		
	(MENU 24)	Received calls		
	Own number (0)			
	Group setting			
	Restrictions	Restrict dialing		
		Call rejection		
		Call acceptance		
		Call forwarding		
		Voice mail		
		Font size setting		
	Phonebook settings	Voice dial setting		
	(MENU 26)	Mail group		
		Forwarding image		
	No. of phonebook			

Stationery	Alarm (@44)		
Ğ	Schedule (@45)		
ati	ToDo (95)		
5	Text memo (🔤 42)		
	Calculator (19985)		
	Dictionary		
		Common phrases	
	Phrase/own dict.	Own dictionary	
	(mm 38)	Download dictionary	
		Create learned wd list	
<u></u>	MUSIC Player		
MUSIC	Music&Video Channel		
	musica viaco onanin		
စ္မာ Activate 1Seg ပို Program guide			
13	Program guide		
	TV timer list		
	Timer recording list		
	Recording result		
	TVlink		
	Channel list		
	Channel setting	Select area	
	Channel Setting	Auto channel setting	
		Display/operation	
		Video	
	User settings	Display light	
		Sound effect	
		Recording	
		Data broadcasting	
1Se		1Seg eco mode	

<u>b</u> e		Reset channel setting	
1Seg	User settings	Reset storage area	
		Reset TV settings	
		Check TV settings	
i			
eits	DCMX		
Ϋ́	ToruCa		
Osaifu-Keitai		IC card lock	
0°	IC card lock set.	IC lock (power-off)	
		ToruCa from IC card	
		Auto reading ToruCa	
	Settings	Recv. ToruCa display	
	Ū	ToruCa from 1Seg	
		Check same ToruCa	
	Check IC owner		
	Change IC owner		
Search by i-mode			
Ś	Ø Redial		
Others	Public mode (Drive mode)		
đ	Manner mode		
-	eco mode		
	Videophone		
	Character input		

Main Specifications

Handset

Handset			
Model			P-04B
Dimensions (when closed)			Height: Approx. 111 mm
			Width: Approx. 50 mm
			Depth: Approx. 17.1 mm
			(at thickest point: Approx. 20 mm)
Weight (v pack atta		e battery	Approx. 131 g
Continuous standby	FOMA/ 3G	3G/GSM setting [3G]	In motion: Approx. 350 hours
time		3G/GSM	Standstill: Approx. 540 hours
		setting [Auto]	In motion: Approx. 340 hours
	GSM	3G/GSM	Standstill: Approx. 240 hours
		setting [Auto]	
Continuous	FOMA	/3G	Voice call :Approx. 190 minutes
talk time			Videophone call : Approx. 130 minutes
	GSM		Voice call: Approx. 230 minutes
1Seg watching time			Approx. 220 minutes (when Mobile W-Speed is OFF: Approx. 280 minutes) (in 1Seg eco Mode: Approx. 310 minutes)
Charging time			AC adapter: Approx. 120 minutes DC adapter: Approx. 120 minutes
LCD Type			TFT 262,144 colors
	Size		Approx. 3.3 inches
Number of pixels		er of pixels	409,920 pixels (480 dots x 854 dots)
Image	Image Type		CMOS
pickup Size device			1/2.4 inches

Camera	Number of effective pixels	Approx. 13,200,000 pixels	
	Number of recording pixels (maximum)	Approx. 13,000,000 pixels	
Recording	Number of recordable still images ^{%1}	Approx. 2,400 max. (default)	
	Number of still images for continuous shooting	For Digicam Mode in Continuous setting 3M: 8 2M Wide: 8 2M: 8 Stand-by: 8 For Continuous Mode VGA: 4 QVGA: 5 to 10 QCIF: 5 to 20 Sub-QCIF: 5 to 20	
Music playback	Continuous playback time ^{*2}	QCIF: 5 to 20 Sub-QCIF: 5 to 20 SD-Audio file (supports Play Background): Approx. 6,500 minutes ^{**3} Chaku-uta Full [®] music file (supports Play Background): Approx. 6,000 minutes ^{**3} i-motion file (including Chaku-uta [®] music file): Approx. 1260 minutes ^{**3} WMA file (supports Play Background): Approx. 4,600 minutes Music&Video Channel program (supports Play Background) Sound : Approx. 6,000 minutes Moving picture : Approx. 290 minutes	
-	Chaku-uta [®]	Approx. 202 Mbytes (default) ^{*4}	
capacity	Chaku-uta Full®		

"Chaku-uta" is a registered trademark of Sony Music Entertainment Inc.

%1: Image size: QVGA (320 x 240), Image quality: Normal, File size: 25 Kbytes

%2: The continuous playback time is the estimated duration that you can play back using the Stereo Earphone Set 01 (option) with the FOMA terminal closed.

%3: File format: AAC

%4: Shares with still images, i-motion files, melodies, PDF files, Music&Video Channel programs, Kisekae Tool files, Machi-chara images, font files, ToruCa files, and i-αppli programs.

Battery pack

Name of product	Battery Pack P20
Battery type	Li-ion (lithium ion) battery
Voltage	3.7 V
Capacity	800 mAh

Specifications of shooting

<Still image>

File format (Extension)	JPEG (jpg)
The number of files that can be saved to P-04B	Approx. 2,400 max. *1*2
The number of files that can be	Approx. 61,466 max. ^{%2}
saved to the microSD card (2 Gbytes)	

<Movie>

File format (Extension)	MP4, ASF (3gp, asf)
Recordable time to P-04B	Approx. 497 seconds max. *1*3
Recordable time to the microSD	Approx. 180 minutes max. **4
card (2 Gbytes)	

<Zoom (Digital)>

Digicam	Level of zoom	21 levels
	The maximum magnifications	Approx. 6.0 times
Photo	Level of zoom	21 levels
	The maximum magnifications	Approx. 16.2 times
Movie	Level of zoom	21 levels
	The maximum magnifications	Approx. 5.8 times

%1 Default setting

- %2 The number of files that can be saved under the conditions of "Image size: QVGA (320 x 240), Image quality: Normal, File size: 25 Kbytes".
- 3 Maximum recording duration per shot that can be saved to the main unit under the conditions of "Image size: Sub-QCIF (128 x 96), File size setting: Mail restriction (L), Image quality: Normal, Movie type set: Normal".
- **4 Maximum recording duration per shot that can be saved to the microSD card (64 Mbytes) under the conditions of "Image size: Sub-QCIF (128 x 96), File size setting: Long time, Image quality: Normal, Movie type set: Normal".

Recordable time of 1Seg

Maximum (total) recordable	Approx. 5,120 minutes
time to the microSDHC card (16	
Gbytes)	

- The maximum recordable time is the estimate for 224 kbps of video, 48 kbps of audio, and 52 kbps of data (including captions). The recordable time varies depending on the broadcasting station or program.
- The maximum file size for continuous recording is up to 2 Gbytes under SD-VIDEO specifications.

Number of savable/registerable items in FOMA Terminal

Function		Number of savable/registerable items
Phonebook		1,000
Schedule		2,500
Mail	Received mail	2,500 max. ^{%1%2}
	Sent mail	1,000 max. ^{%2}
Still image		3,500 max. ^{%2}
i-motion file		3,500 max. ^{%2}
Music&Video Downloaded		2
Channel program		
Saved program		10 max. ^{%2}
Kisekae-Tool		3,500 max. ^{%2}
i-appli		100 max. ^{**2}

%1 Includes pre-installed data.

%2 The number of savable/registerable items may decrease depending on the data volume.

Specific Absorption Rate (SAR) of Mobile Phone

SAR Certification Information

This model phone P-04B meets the MIC's* technical regulation for exposure to radio waves.

The technical regulation established permitted levels of radio frequency energy, based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit is 2 watts/kilogram (W/kg)** averaged over ten grams of tissue. The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The value of the limit is equal to the international guidelines recommended by ICNIRP***.

All phone models should be confirmed to comply with the regulation, before they are available for sale to the public. The highest SAR value for this model phone is 0.940 W/kg.

It was taken by the Telecom Engineering Center (TELEC), a Registered Certification Agency on the Radio Law. The test for SAR was conducted in accordance with the MIC testing procedure using standard operating positions with the phone transmitting at its highest permitted power level in all tested frequency bands. While there may be differences between the SAR levels of various phones and at various positions, they all meet the MIC's technical regulation. Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.

For further information about SAR, please see the websites as shown on the right:

 World Health Organization (WHO): http://www.who.int/peh-emf/en/

 ICNIRP: http://www.icnirp.de/

 MIC: http://www.tele.soumu.go.jp/e/sys/ele/index.htm

 TELEC: http://www.tele.cor.jp/ENG/Index_e.htm

 NTT DOCOMO: http://www.nttdocomo.co.jp/english/product/sar/

 Panasonic Mobile Communications Co., Ltd.: http://panasonic.jp/mobile/

Ministry of Internal Affairs and Communications

- ** The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.
- *** International Commission on Non-Ionizing Radiation Protection

European RF Exposure Information

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR* limits** for exposure to radio-frequency (RF) energy, which SAR* value, when tested for compliance against the standard was 0.639 W/kg. While there may be differences between the SAR* levels of various phones and at various positions, they all meet*** the EU requirements for RF exposure.

- * The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.
- ** The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- *** Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

Declaration of Conformity

<u>C€0168</u>

The product "P-04B" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a), 3.1(b) and 3.2. The Declaration of Conformity can be found on http://panasonic.net/pmc/support/index.html.

**The European RTTE approval of this product is limited to the use of the P-04B handset, Battery Pack and FOMA AC Adapter for Global use (100 to 240 V AC) only. Other accessories are not part of the approval.

FCC Notice

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information

This model phone meets the U.S. government's requirements for exposure to radio waves.

Your wireless phone contains a radio transmitter and receiver. Your phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is esigned to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the U.S. governmentadopted requirement for safe exposure. The tests are performed in various positions and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 0.746 W/kg, and when worn on the body in a holster or carry case, is 0.328 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section at http://www.fcc.gov/oet/ea/fccid/ after search on FCC ID UCE210027A.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

In the United States, the SAR limit for wireless mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

Important Safety Information

AIRCRAFT

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers a 'flight mode' or similar feature consult airline staff as to whether it can be used on board.

DRIVING

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

HOSPITALS

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

PETROL STATIONS

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

INTERFERENCE

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

For other Medical Devices:

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Export Administration Regulations

This product and its accessories might be covered by the Japan Export Administration Regulations ("Foreign Exchange and Foreign Trade Law" and its related laws). To export this product and its accessories, take the required measures on your responsibility and at your expenses. For details on the procedures, contact the Ministry of Economy, Trade and Industry.

Intellectual Property Right

Copyrights and Portrait Rights

You have no right to copy, modify, or distribute the contents such as text, images, music, or software programs downloaded from websites on the Internet, or images shot by the cameras of this product without permission from the copyright holder except for when the copy or quote is for personal use that is allowed by the copyright law. Note that it may be prohibited to shoot or record live performances or exhibitions even for personal use. Make sure that you refrain from shooting portraits of other persons and distributing such portraits over the Internet without consent, as this violates portrait riahts.

Trademarks

- "FOMA", "i-mode", "i-appli", "i-motion", "Deco-mail", "Chara-den", "ToruCa", "mopera", "WORLD CALL", "DCMX", "i-area", "WORLD WING", "OFFICEED", "2in1", "docomo PRIME series", and the logos of "FOMA", "i-mode", "i-appli", "iC", and "Music&Video Channel" are trademarks or registered trademarks of NTT DOCOMO, INC.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- · Free Dial logo mark is a registered trademark of NTT Communications Corporation.
- McAfee[®] is registered trademarks or trademarks of McAfee. Inc. and/or its affiliates in the US and/or other countries.
- G-GUIDE, G-GUIDE MOBILE and their logos are registered trademarks in Japan of U.S. Gemstar-TV Guide International, Inc. and/or its affiliates.
- · QuickTime is a registered trademark of Apple Inc., in the US and other countries.
- NAVIDIAL and NAVIDIAL logo mark are trademarks of NTT Communications Corporation.
- Microsoft®, Windows®, and Windows Vista® are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.
- · Windows Media® is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

 Powered by JBlend[™] Copyright 2002-2009 Aplix Corporation. All rights reserved.

JBlend and JBlend-related trademarks are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

- b) is a registered trademark of FeliCa Networks, Inc.
- microSDHC logo is a trademark of SD-3C, LLC.
- "Multitask" is a registered trademark of NEC Corporation.
- QR code is a registered trademark of Denso Wave Inc.
- . "VIERA®" and "One-push Open™" are trademarks or registered trademarks of Panasonic Corporation.
- Google and Google Map for Mobile are trademarks of Google Inc.
- · Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems. Inc. in the U.S. and other countries.
- Powered by Mascot Capsule[®]/Micro3D Edition[™] Mascot Capsule[®] is a trademark of HI CORPORATION
- Other company names and product names described in the text are trademarks or registered trademarks of those companies.

Others

 This product contains NetFront Browser, NetFront Document Viewer and NetFront Sync Client of ACCESS CO., LTD. ACCESS, the ACCESS logo, and NetFront are registered trademarks or trademarks of ACCESS CO., LTD, in the United States, Japan and/or other countries.



Copyright © 2010 ACCESS CO., LTD, All rights reserved.

- . This software is based in part on the work of the Independent JPEG Group.
- IrFront is a trademark or registered trademark of ACCESS CO., LTD, in Japan and other countries.

The IrDA Feature Trademark is owned by the Infrared Data Association and used under license therefrom.



Migg

не



 Contains Adobe® Flash® Lite® and Adobe Reader® Mobile technology by Adobe Systems Incorporated. Adobe Flash Lite Copyright @ 2003-2010 Adobe Systems Incorporated. All rights reserved.



Adobe Reader Mobile Copyright © 1993-2010 Adobe Systems Incorporated. All rights reserved.

Adobe, Adobe Reader, Flash, and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

- · FeliCa is a contactless IC card technology developed by Sony Corporation.
- · FeliCa is a registered trademark of Sony Corporation.
- "CROSS YOU" is a trademark of Sony Corporation.
- This product contains software licensed complying with GNU General Public License (GPL), GNU Lesser General Public License (LGPL), etc.

For more details, see "readme.txt" in the "GPL·LGPL%[COUT" folder on the bundled CD-ROM. ("readme.txt" is only available in Japanese version.)

 Wnn of OMROM SOFTWARE Co., Ltd. is used for conversion methods for Japanese language.

iWnn © OMRON SOFTWARE Co., Ltd. 2008-2010 All Rights Reserved.

- "Text Profiler" is trademark of OMRON Corporation.
- The Bluetooth[®] word mark and logos are owned by Bluetooth SIG, Inc. and any use
 of such marks by NTT DOCOMO, INC. is under license. Other trademarks and trade
 names are those of their respective owners.
- This product is loaded with Bluetooth[™] Stack for Embedded Systems Spec 2.0 by Toshiba Corp.
- MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.
- This product is licensed under the MPEG-4 patent portfolio license, AVC patent portfolio license and VC-1 patent portfolio license for the personal and noncommercial use of a consumer to
- encode video in compliance with the MPEG-4 Visual Standard, AVC Standard and VC-1 Standard ("MPEG-4/AVC/VC-1 Video") and/or
- (ii) decode MPEG-4/AVC/VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider licensed to provide MPEG-4/AVC/VC-1 Video.

No license is granted or implied for any other use.

Additional information may be obtained from MPEG LA, L.L.C. See http://www.mpegla.com.

 Copyright 2001 Seiko Epson Corporation. All Rights Reserved. PRINT Image Matching is a trademark of Seiko Epson Corporation.



The PRINT Image Matching logo is a trademark of Seiko Epson Corporation.

This product is manufactured or sold under license from InterDigital Technology Corporation.

 The abbreviations used for respective operating systems (Japanese version) in this manual are as shown below:

Windows 7 is the abbreviation of Microsoft[®] Windows[®] 7 (Starter, Home Basic, Home Premium, Professional, Enterprise, and Ultimate).

Windows Vista is the abbreviation of Windows Vista[®] (Home Basic, Home Premium, Business, Enterprise, and Ultimate).

Windows XP is the abbreviation of Microsoft[®] Windows[®] XP Professional operating system or Microsoft[®] Windows[®] XP Home Edition operating system.

- This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.
- Content providers are using the digital rights management technology for Windows Media contained in this device ("WM-DRM") to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM Software to play Secure Content ("WM-DRM Software"). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content ("Secure Content Owners") may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of Revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation lists onto your device on behalf of Secure Content Owners.

 "ケータイTOOL<辞書> (KEITAI TOOL <Dictionary>)" pre-installed in this product uses "English-Japanese/Japanese-English/Japanese dictionaries of Gakken Co., LTD".

💑 Index

Α

AC adapter	
After-sales services	84
Alarm	74
Antenna	5
Area mail	52
Auto shutter	62
Auto-sort	51

В

Back cover	5
Backlight	32
Bar code reader	75
Battery level	22
Battery pack	
Attaching/removing	18
Charging	19
Bluetooth function	76
Bookmark	57

С

Calendar	74
Call/charging indicator	5
Caller ID notification	41
Call forwarding service	45
Call setting without ID	38
Call waiting service	45

Camera	.5, 60
Shooting still images/moving	
pictures	61
Viewing still images/moving	
pictures after shooting	61
Channel setting	64
Character entry	28
Line feed	28
Pictograms	28
Smiley	28
Symbols	
Charging	19
Charging terminal	5
Check new messages	
Command navigation key	25
Connector terminal	4
Copyrights	

D

Deco-mail	49
Decome-Anime	49
Desktop holder	19
Desktop icon	23
Digicam mode	61
Display	4, 22
Display setting	31
Dot illum.	5, 23

Early warning "Area Mail"	. 52
Earphone	4
Earpiece	4
Earpiece volume	. 42
eco mode	. 35
English display	. 21
Export administration	
regulations	100

F.

FeliCa	5, 72, 80
Osaifu-Keitai	
Finder display	60
Flash	5
FOMA antenna	
FOMA card	
Font size setting	33
Full browser	
Function list	
Function menu	

G	
GPS	58
GPS compatible i-αppli	59

н

IC card lock 37 iC communication 80 i-concier......73 i-mode......55 i-mode fault diagnosis site 85 i-mode mail..... 48 Compose..... 48 Forward 50 Receive 50 Reply...... 50 Send...... 48 i-mode password 36 i-motion player.....61, 71 Info notice setting...... 34 Infrared data port.....5, 80 Initialize 39 Initial setting 20 Intellectual property right 101

Others

104

International calls	41
i-Widget	69

8
1
3

Light sensor	4
Lock all	37

Μ

Machi-chara	33
Mail	48
Main menu	26
Main specifications	96
Making a call	
Making a videophone call	40
Manner mode	31
Мар	58
Map application	59
Menu icon	26
Menu icon setting	
Microphone	
microSD card	
Back up/restore	80
Сору	79
Format	
Inserting/removing	77
5 3	

71
61
71
68
68
67

Ν

Navigation displays	. 24
Network security code	. 36
Network services	. 44
Normal style	6
Notification icon	
Numeric keys	4

0

Omakase choice	62
Omakase lock	38
One-push open	6
One-push open button	5, 6
Options	89
Original	31
Osaifu-Keitai	72
Out-of-service-area indication.	22
Overseas use	47
Own number	21

Р
Part names and functions 4
PC connection 81

Personal data	lock	38
Phonebook		

Add to phonebook 53
Delete data 54
Edit phonebook 54
Search phonebook 40
Photo light5
Picture album 61
Picture viewer 61
PIN1 code 36
PIN1 code entry set 37
PIN2 code
Portrait rights 101
Position location 59
Power on/off 20
Power saver mode 32
Public mode (Drive mode) 43
Public mode (Power off) 43
PUK (PIN unblock code) 37

Q

QR	code	75

Radio waves reception level	22
Received calls	41
Receiving a call	42
Receiving a videophone call	42
Record message	42
Redial	41
•	

3
9
9
)

S

SAR	
Scanning function	
Schedule	74
Screen memo	57
Security codes	35
Security scan function	
(Scanning function)	88
Select language	21
Select ring tone	30
Services available for FOMA	
terminal	
Simple menu	26
Site access	55
SMS	52
Software update	86
Speaker	5
Specific absorption rate	98
Stand-by display	26
Status icon	
Styles	6

т	
Terminal security code	36
Timer recording	66

ToruCa	72
Trademarks 1	01
Troubleshooting	82
TV timer	66

U		
UIM		
Update (Pattern data) 88		
V		

Vibrator	30
Video	66
Video recording	65
View blind	32
Viewer display	65
Voice mail service	

W	
Warranty	84
WORLD CALL	41

Numerics

1Seg 63	
1Seg antenna 5	

Access the following for checking or changing the contents of your contract, or for applying to respective services, and asking for related documents:

From i-mode

- i Menu 🕨 お客様サポート (User support) 🕨 お申込・お手続き (Applications/Procedures)
- ▶ 各種お申込・お手続き (Respective applications/procedures)

Packet communication charges free

From PC

- My docomo (http://www.mydocomo.com/) **▶** 各種お申込·お手続き (Respective applications/procedures)
- i Menu and My docomo are available in Japanese only.
- You will need your "network ID" for the access from i-mode.
- No packet communication charges are incurred for the access from i-mode. Accessing from overseas will incur charges.
- You will need your "docomo ID/password" for the access from a PC.



Using mobile phone with your manners!

When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

In the following cases, be certain to turn off the power.

Where use is prohibited

 Be sure to turn off the power to your FOMA terminal in airplanes, in hospitals and around priority seat in a train, etc.

In the following cases, be certain to set Public mode.

While driving

- Using the mobile phone in your hand while driving is subject to punishment.
- When in theaters, movie theaters, museums, and similar venues

Respect the privacy.

- Please be considerate of the privacy of individuals around vou when shooting and sending photos using camera-
- equipped mobile phones.

- If you do not have or you have forgotten your "network ID" or "docomo ID/password", contact the docomo Information Center listed on the back page of this manual.
- You may not be able to access the site depending on the details of your subscription.
- You may not be able to access the site due to system maintenance, etc.



An Environment Protection Program by DOCOMO

Simplified Version of the Manual

We, the publisher, have edited the Japanese Instruction Manual so that the descriptions of basic operational procedures for respective functions are simplified, and as a result, have succeeded to reduce the number of sheets of paper used. You can refer to "使いかたナビ (Guide)" (in Japanese only) that comes with the FOMA terminal, and the DOCOMO website for functions frequently used, and more detailed descriptions.

Collection and Recycling of Mobile Phones



To carry out the protection of environment and the reuse of precious resources, we at mobile phone and PHS carriers collect your disused mobile phones, batteries, or chargers for recycling to a shop having

the mark at left, regardless of brand names or makers. Kindly take your disused ones to a docomo Shop nearby.

General Inquiries

<docomo Information Center>

(Business hours: 9:00 a.m. to 9:00 p.m.)

(Intel) 0120-005-250 (toll free)

Service available in English, Portuguese, Chinese, Spanish, and Korean.

- * Available from mobile phones and PHSs (including non-DOCOMO phones).
- * Unavailable from part of IP phones.


(Business hours: 9:00 a.m. to 8:00 p.m.)

From DOCOMO mobile phones (In Japanese only)

From land-line phones (In Japanese only)

OI20-800-000 (toll free)

(No prefix) 151 (toll free) Unavailable from land-line phones, etc.

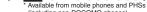

- (including non-DOCOMO phones).
- * Unavailable from part of IP phones.
- Please confirm the phone number before you dial.
- For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo Shop etc. near you on the NTT DOCOMO website or the i-mode site.

NTT DOCOMO website http://www.nttdocomo.co.jp/english/

i-mode site i Menu ▶ お客様サポート (User support) ▶ ドコモショップ (docomo Shop) (In Japanese only)

Loss or theft of FOMA terminal or payment of cumulative cost overseas <docomo center="" information=""></docomo>	Failures encountered overseas <network and="" center="" operation="" support=""></network>	
(available 24 hours a day) From DOCOMO mobile phones	(available 24 hours a day) From DOCOMO mobile phones	
International call access code for the country you stay at -81-3-6832-6600* (toll free)	International call access code for the country you stay at -81-3-6718-1414* (toll free)	
* You are charged a call fee to Japan when calling from a land-line phone, etc. % If you use P-04B, you should dial the number +81-3-6832-6600 (to enter *+", press and hold the "0" key for at least one second).	* You are charged a call fee to Japan when calling from a land-line phone, etc. % If you use P-948, you should dial the number +81-3-6718-1414 (to enter *+*, press and hold the '0' key for at least one second).	
From land-line phones <universal number=""></universal>	From land-line phones <universal number=""></universal>	

Universal number international prefix -8000120-0151*

* You might be charged a domestic call fee according to the call rate for the country you stay at. * For international call access codes for major countries and universal number international prefix, refer to the DOCOMO International Services website

international prefix -8005931-8600* Universal number

* You might be charged a domestic call fee according to the call rate for the country you stay at.

* For international call access codes for major countries and universal number international prefix, refer to the DOCOMO International Services website

If you lose your FOMA terminal or have it stolen, immediately take the steps necessary for suspending the use of the FOMA terminal.

If the FOMA terminal you purchased is damaged, bring your FOMA terminal to a repair counter specified by DOCOMO after returning to Japan.

Sales: NTT DOCOMO, INC. Manufacturer: Panasonic Mobile Communications Co., Ltd.



To prevent damage to the environment, bring used battery packs to a docomo service counter, a docomo agent or a recycle center.

Don't forget your mobile phone ... or your manners! When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you. May '10 (1st Edition) 3TR100265AAA F0410-1

Repairs

(In Japanese only)

(Business hours: 24 hours (open all year round)) From land-line phones

From DOCOMO mobile phones (In Japanese only)



0120-800-000 (toll free)

* Available from mobile phones and PHSs (including non-DOCOMO phones). * Unavailable from part of IP phones.