

REMOTE FAN WALL CONTROL

MODEL : UC7077T

NOTE:The frequencies on your Receiver and Transmitter have been preset at the factory. Before installing the Receiver, make sure the dip switches on the Receiver are set to the same position on the Transmitter.(Fig.1) The dip switches on the Transmitter are located on same side of the control.

1. SAFETY PRECAUTIONS :

- **WARNING : HIGH VOLTAGE :** Disconnect source of electrical power by removing fuse or switching off circuit breakers.
- Do not use with solid state fans.
- Electrical source and fan must be 100~120 volt,60 Hz. Maximum fan motor amps:1.0
Maximum light watts:300-incandescent only.
- Household electrical power can cause serious injury or death.

NOTE : BEFORE YOU BEGIN THE INSTALLATION OF YOUR NEW REMOTE CONTROL, MAKE SURE THE FAN IS SET TO THE HIGHEST SPEED.

2. CONNECTING THE TRANSMITTER

Remove wall plate, disconnect and remove the toggle switch from wall junction box. Using the wire nuts provided, make the electrical connections to the new Transmitter unit as shown in figure 2.

If your outlet box has a ground wire (green or bare copper)connect the wall transmitter's ground wire to it; otherwise connect the wall transmitter's ground wire directly to one of the screws from the outlet box.

Carefully tuck wire connections inside wall switch box. Secure Transmitter with the two screws (provided). Attach wall plate over control unit with the 2 screws previously removed(FIG 3)

3. OPERATING THE TRANSMITTER

- HIGH key – For fan High speed .
- MED key – For fan Medium speed .
- LOW key – For fan Low speed .
- OFF key – For fan speed off .
- REV key – For fan speed Reverse .
- L-1 key– Light Control key – For light brightness and ON/OFF control .
- L-2 key– Light Control key – For light brightness and ON/OFF control

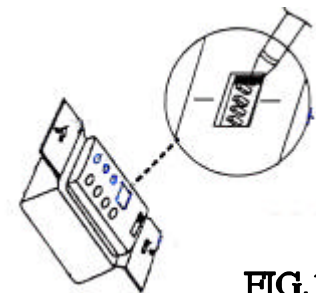


FIG.1

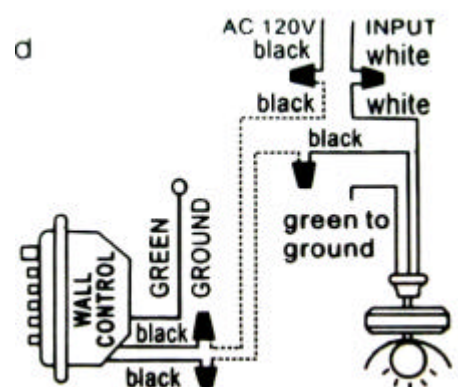


FIG.2

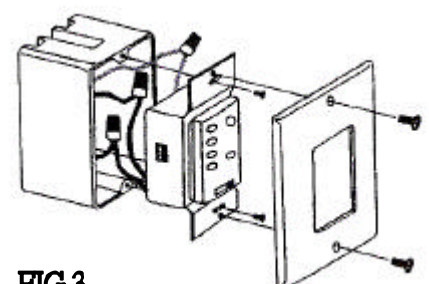


FIG.3

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user' s authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user' s authority to operate the device.