

TYPE OF EXHIBIT: INSTALLATION AND OPERATING INSTRUCTION MANUAL
FCC PART: 2.1033 (c)(3)
MANUFACTURER: RITRON, INC.
505 West Carmel Drive
Carmel, IN 46032
MODELS: RQX-156, RQX-156-XT
FCC ID: AIERIT18-156
DATE: November 6, 2003

IC STANDARDS:	RSP-100, Issue 8, Section 7.2(b)
INDUSTRY CANADA:	1084A-RIT18156
MODELS:	RQX-156-CANADA, RQX-156-XT-CANADA, RQX-156-BC, RQX-156-XT-BC

Included in this exhibit is a draft of the User Manual for the Ritron Models RQX-156 and RQX-156-XT VHF-FM Callbox Transceiver. A copy of this manual will be included with every radio.

This manual provides the end user with installation and operating instructions.

Signed: 
Kevin G. Matson - Project Engineer

RITRON®

OUTPOST™ Wireless Callbox Basic Owner's Manual



Ritron Pub. 14500042

Rev. A

03/04

Copyright© 2004 RITRON, INC. – ALL RIGHTS RESERVED

RITRON®, PATRIOT®, JOBCOM®, Quick Assist®, and Quiet Call® are registered trademarks of RITRON, INC.

OUTPOST™ and Quick Talk™ are trademarks of RITRON, INC.

P.O. Box 1998, Carmel, IN 46082-1998 • 505 W. Carmel Dr., Carmel, IN 46032 • USA

Phone: 317-846-1201 or 800-USA-1-USA (800-872-1872) • FAX: 317-846-4978

Web: www.radiocallbox.com • E-mail: ritron@ritron.com

TABLE OF CONTENTS

<u>Description</u>	<u>Page</u>
WHAT THIS MANUAL COVERS	ii
Basic Operation	
OUTPOST CALLBOX MODEL NUMBERS.....	1
ABOUT THE OUTPOST WIRELESS CALLBOX	1
OPERATING THE OUTPOST CALLBOX	2
EXPOSURE TO RADIO FREQUENCY ENERGY	2
<u>LICENSE REQUIRED</u>	
FCC Licensing	3
How to Obtain an FCC License	3
Safety Standard	3
INDUSTRY CANADA Regulations.....	3
INDUSTRY CANADA License Application.....	3
Service.....	3
<u>INSTALLATION INSTRUCTIONS</u>	
Callbox Controls and Connectors	4
FIG-1: Callbox Assembly, Controls and Connectors	4
OUTPOST Installation Instructions	5
XT OUTPOST Installation Instructions.....	5
FIG-2: XT Callbox Mounting Brackets – Vertically Installed	5
FIG-3: XT Callbox Assembly.....	6
<u>PROGRAMMING</u>	
HOW TO READOUT CURRENT RADIO PROGRAMMING	7
HOW TO FIELD PROGRAM FREQUENCY & TONE CODES	8
HOW TO FIELD PROGRAM 2-TONE DECODE	9
HOW TO FIELD PROGRAM RADIO FEATURES	10
Table 1: Programmable Frequency Codes	11
Table 2: Programmable QC Tone Codes.....	12
Table 3: Programmable DQC Codes	12
Table 4: Programmable 2-Tone Codes.....	12
Table 5: Programmable Features	12
Advanced Features	
FIELD PROGRAMMING GATE GUARD	13
OPTIONAL OUTPOST CALLBOX FEATURES	13
XT Gate Guard Installation Instructions	14
FIG-4: Charge Jumper in Charge Position	14
FIG-5: XT Callbox Gate Guard Assembly with Battery Back-Up.....	15
OPTIONAL GATE GUARD PROGRAMMING.....	16
INTERCOM (ALWAYS-ON) PROGRAMMING	16
HOW TO SEAL THE ANTENNA.....	17
RITRON Limited Warranty	18

WHAT THIS MANUAL COVERS

This manual covers programming, operation and installation of the OUTPOST 2-Way Callbox models RQX-156, RQX-156-XT, RQX-456, and RQX-456-XT.

OUTPOST CALLBOX MODEL NUMBERS

VHF MODELS

- RQX-156 Standard VHF Callbox
- RQX-156-XT Vandal-Resistant VHF Callbox

UHF MODELS

- RQX-456 Standard UHF Callbox
- RQX-456-XT Vandal-Resistant UHF Callbox

The model number is located on the front of the standard Callbox enclosure, behind the removable faceplate. On XT models the Standard enclosure is located inside the yellow vandal-resistant box.

VHF radios are designed to operate within the 12 MHz band between factory standard 150 and 162 MHz.

UHF radios are designed to operate within the 20 MHz band between factory standard 450 and 470 MHz.



Standard Callbox



XT Callbox

THANK YOU FOR CHOOSING RITRON

Congratulations on your purchase of the OUTPOST Callbox.

Your new radio is the culmination of RITRON's 25 years of designing, manufacturing, and supplying reliable, professional wireless communication products. Ritron wireless products will improve the operation, safety, and profitability of any organization by providing instant voice communications between employees throughout the workplace.

ABOUT THE OUTPOST CALLBOX

The OUTPOST Callbox is a 2-way radio transceiver used to communicate directly with portable, mobile and stationary radios, or through radio repeaters.

Each OUTPOST Callbox is equipped with the following features:

- **Field Programming.** The Callbox allows you to quickly program your radio in the field without the need for a PC programmer. Each radio can be field programmed to one of 26 VHF or 77 UHF channel table frequencies, and one of 51 QC or 83 DQC interference eliminator codes.
- **MURS Frequencies.** VHF models can be programmed from a list of 5 MURS frequencies that require no FCC licensing in this service.
- **QC (Quiet Call) interference eliminator codes.** The Callbox can be programmed from a list of 51 QC Sub-audible codes.
- **DQC (Digital Quiet Call) interference eliminator codes.** Each Callbox can be programmed from a list of 83 DQC Sub-audible codes.
- **Two-Tone Decoding.** The Callbox can be programmed to decode unique two-tone codes for selective signaling of the Callbox or Switch Output activation in GateGuard applications.
- **Battery Powered.** The OUTPOST Callbox is powered by 6 Alkaline, D-cell batteries that can operate the radio for up to one year.
- **Low battery alert.** The Callbox will send a short beep at the end of each transmission when the batteries approach end-of-life. This allows the user plenty of time to replace the batteries and assure uninterrupted service.
- **Wide or narrow band operation.** The radio can be programmed for wide or narrow operation by selecting from a wide variety of field programmable table frequencies, or by PC programming.
- **Companded Audio.** The radio can be field programmed to enable or disable audio companding. Companding will compress transmit audio before sending it, and expand receive audio before it is heard on the speaker to reduce the background noise common in radio communications.
- **Sensor Input.** Each OUTPOST has a single sensor input that can cause the radio to send an alert tone when sensor input is detected.
- **Switch Output.** The OUTPOST has a single 1-Amp switch output that can be set when the Callbox receives a unique Two-Tone code.
- **“Automatic Turn-Off” or “Intercom” mode operation.** The OUTPOST Callbox can operate in the standard “Automatic Turn-Off” mode, where the radio is normally off until the Call Button is pressed, or can be programmed for “Intercom” mode where the radio is always on.

OPERATING THE OUTPOST CALLBOX

The OUTPOST will not receive a call unless a call is 1st initiated by the OUTPOST.

THE OUTPOST AUTOMATICALLY SHUTS OFF WHENEVER THERE IS INACTIVITY FOR TEN (10) SECONDS.**To Initiate a Call:**

Press and hold the ON/PTT Button on the unit, listen for the “beep”, and begin speaking into the MIC. For best communication, speak as closely as possible into the microphone. The OUTPOST has been designed for the caller to speak into the OUTPOST Callbox from a distance of 3 feet or less.

To Receive a Response:

1. When you have finished speaking, release the ON/PTT Button.
2. Any reply will be heard through the OUTPOST speaker. If a reply is not received within 10 seconds of releasing the ON/PTT Button, the unit sounds a low double tone and shuts off automatically.
3. To call again, press and hold the ON/PTT Button and begin speaking after the “beep”.

Operation Notes:

The OUTPOST must be powered with D-cell Alkaline batteries ONLY, or alternatively, with an external 12 VDC power supply.

If there has been no activity for 10 seconds, i.e., either the ON/PTT Button has not been pressed and released or a reply has not been received, the unit automatically shuts OFF. The automatic turn-off feature is designed to increase battery life.

Low battery alert:

The Callbox will send a short beep at the end of each transmission when the batteries approach end-of-life. This allows the user plenty of time to replace the batteries and assure uninterrupted service.

EXPOSURE TO RADIO FREQUENCY ENERGY

These products generate radio frequency (RF) energy when the ON/PTT button on the front of the unit is depressed. These products have been evaluated for compliance with the maximum permissible exposure limits for RF energy at the maximum power rating of the unit when using antennas available from RITRON.

These products are not to be used by the general public in an uncontrolled environment unless compliance with the Uncontrolled / General Population limits for RF exposure can be assured.

RQX-456: For both the AFB-1545 and RAM-1545 antennas, at the 20 cm (7.9 inches) minimum expected separation distance and greater, the maximum RF exposure is well below the General Population / Uncontrolled limits. Antennas other than those available from RITRON have not been tested for compliance and may or may not meet the exposure limits at the distances given. Higher gain antennas are capable of generating higher fields in the strongest part of their field and would, therefore, require a greater separation from the antenna.

RQX-156: To comply with the General Population/Uncontrolled limits, all persons must be at least 7.9 inches (20 cm) from the AFB-1545 antenna which is supplied by RITRON to be attached directly to the rear of the unit. For the RITRON RAM-1545 magnet mount antenna which can be located away from the unit, all persons must be at least 10.8 inches (28 cm) from the antenna. Antennas other than the two mentioned above have not been tested for compliance and may or may not meet the exposure limits at the distances given. Higher gain antennas are capable of generating higher fields in the strongest part of their field and would, therefore, require a greater separation from the antenna.

To limit exposure to RF energy to levels below the limit, please observe the following:

- Use only the antenna(s) available from RITRON for these models. **DO NOT** operate the radio without an antenna.
- Keep talk times as short and infrequent as possible. **DO NOT** depress the ON/PTT button when not actually wishing to transmit. These radios are equipped with an internal timer to limit continuous transmit times.
- When transmitting, make certain that the distance limits for the particular model in use are observed.
- **DO NOT** allow children to operate the radio.

When used as directed, this series of radios is designed to comply with the FCC's RF exposure limits for “Uncontrolled / General Population”. In addition, they are designed to comply with the following Standards and Guidelines:

- FCC OET Bulletin 65, Edition 97-01, Supplement C, Evaluating Compliance with FCC Guidelines for Human Exposure to Radio Frequency Electromagnetic Fields.
- American National Standards Institute (C95.1-1992), IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.
- American National Standards Institute (C95.3-1992), IEEE Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields-RF and Microwave.

LICENSE REQUIRED

FCC Licensing

The FCC requires the owners of the radios to obtain a station license before using them.

The station licensee is responsible for ensuring that transmitter power, frequency and deviation are within the limits specified by the station license. The station licensee is also responsible for proper operation and maintenance of the radio equipment. This includes checking the transmitter frequency and deviation periodically, using appropriate methods.

To get an FCC license for VHF or UHF frequencies, submit FCC application Form 600 as indicated in the block at right. Your Ritron dealer can help you with this process.

How to Obtain an FCC Radio License

Because your Ritron radio operates on Private Land Mobile frequencies, it is subject to the Rules and Regulations of the FCC, which requires all operators of these frequencies to obtain a station license before operating their equipment. Make application for your FCC license on FCC Forms 600 and 159.

To have forms and instructions faxed to you by the FCC, call the FCC Fax-On-Demand system at 202-418-0177 from your fax machine; request Document 000600 & Form 159.

To have Document 000600 & Form 159 mailed to you, call the FCC Forms Hotline at 800-418-FORM (800-418-3676).

For help with questions concerning the license application, contact the FCC at 888-CALL-FCC (888-225-5322).

You must decide which radio frequency(ies) you can operate on before filling out your application.

For help determining your frequencies, call Ritron at 800-USA-1-USA (800-872-1872).

Safety Standards

The FCC (with its action in General Docket 79-144, March 13, 1985) has adopted a safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated equipment. Ritron observes these guidelines and recommends that you do also:

- DO NOT hold the radio so that the antenna is very close to or touching exposed parts of the body, especially the face or eyes, while transmitting. Keep the radio vertical, four inches away while talking into the front panel.
- DO NOT press the Push-To-Talk except when you intend to transmit.
- DO NOT operate radio equipment near electrical blasting caps or in an explosive atmosphere.
- DO NOT allow children to play with any radio equipment that contains a transmitting device.
- Repair of Ritron products should be performed only by Ritron authorized personnel.

INDUSTRY CANADA Regulations

Industry Canada requires the owners of the radios to obtain a radio license before using them.

An application form for your Industry Canada license is included with your radio. Additional application forms can be obtained from the nearest Industry Canada District office. A list of these offices is included for your information.

INDUSTRY CANADA License Application

1. Fill in the items per the instructions. If you need additional space for any item, use the reverse side of the application.
2. Use a typewriter or print legibly.
3. Make a copy for your files.
4. Prepare a check or money order to "Receiver General for Canada", for the amount listed on the following schedule for each radio purchased. (Licenses are renewed annually on April 1st. Refer to the following schedule for application fees for each month.)
5. Mail the completed application, along with your check or money order, to the closest Industry Canada District Office.

Month of Application	Initial Fee	Month of Application	Initial Fee
April.....	\$52	October.....	\$33
May.....	\$50	November.....	\$29
June.....	\$46	December.....	\$26
July.....	\$43	January.....	\$23
August.....	\$40	February.....	\$20
September.....	\$36	March.....	\$16

Notes: Fees are subject to change without notice. The annual renewal fee is \$41

Service

Federal law prohibits you from making any internal adjustments to the transmitter, and/ or from changing transmit frequencies unless you are specifically designated by the licensee.

If your radio equipment fails to operate properly, or you wish to have the radio programmed, contact your authorized dealer or Ritron.

<u>U.S. Manufacturer:</u>	<u>Canadian Representative:</u>
RITRON, INC. Repair Department 505 West Carmel Drive Carmel, IN 46032 USA	Lenbrook Communications 633 Granite Court Pickering, ON L1W 3K1
Phone: 317-846-1201 FAX: 317-846-4978	Phone: 905-831-6555 FAX: 905-831-6936

CALLBOX CONTROLS AND CONNECTORS

Antenna Connector

The antenna radiates radio signals. Before using the OUTPOST Callbox, make sure the antenna is securely fastened into the 50Ω BNC antenna connector. If the Outpost is to be used outdoors, see page 15 for instructions on properly sealing the antenna connector.

RF Mating Connectors

An internal cable from the antenna connector is terminated into a phono style connector for connection to the radio circuit board.

Captive Plastic Case Screws

A captive plastic case screw is located in each corner of the case front. These 4 screws are used to secure the case front containing the radio, to the case back that contains the batteries.

Charge Jumper

The charge jumper can be set to trickle charge rechargeable backup batteries.

+12 VDC Input

Two screw terminal style connectors are used for the “+” and “-” connection of an external +12 VDC input for installation without batteries.

Sensor Input

Two screw terminal style connectors are used for the “+” and “-” connection of an external DC level sensor.

Switch Output

Two screw terminal style connectors are used for the “+” and “-” connections of a 5A switch closure output.

Speaker Connector

The internal speaker is connected to the radio printed circuit board with a polarized connector.

On/PTT Connector

The On/PTT switch is connected to the radio printed circuit board with a polarized connector.

Pre-Drilled Mounting Holes

Mounting holes located in the 4 corners of the case back are pre-drilled for mounting to a plate, wall or post. Once mounted, the case front is secured to the case back through these same threaded holes.

Program Cable Connector

An RJ11 style connector is used to connect the cable from the PC programmer to the radio.

Program Button

A small, momentary pushbutton is used for field programming the OUTPOST Callbox.

Program Display


A single digit LED display is used for field programming the radio.

Battery Holder

The battery holder inside the case back is used for the installation of 6 D-cell alkaline batteries. Refer to the diagram below, or the labels beneath the cells, for correct installation of the batteries.

Battery Mating Connectors

Polarized, 2-pin mating connectors are used to connect the batteries to the radio circuit board.

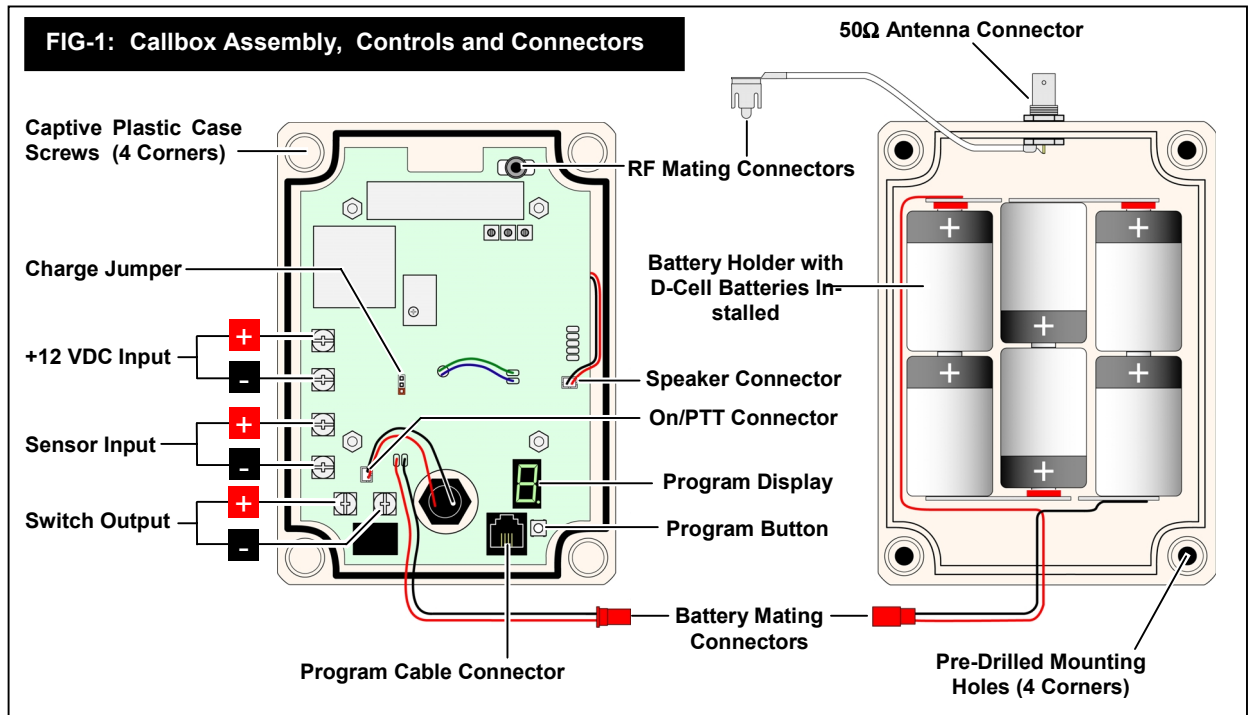

OUTPOST INSTALLATION INSTRUCTIONS

The OUTPOST can be mounted to virtually any surface with four (4) #6 panhead screws. Choose a type of screw thread and screw length which will hold firmly in the surface to which the unit will be mounted.

To MOUNT the OUTPOST: (Refer to FIG-1)

1. Loosen the (4) captive screws in the front corners of the case and separate the case front from the case back. These screws are captive to the housing; to prevent damaging them, **DO NOT** remove the screws from the housing.
2. Install 6 D-cell alkaline batteries into the battery holder. Refer to FIG-1, or the labels beneath the cells, for correct installation of the batteries.
3. If required, program the radio. Refer to the programming section of this manual for details.
4. Disconnect the RF mating connectors and the battery mating connectors. Set the case front containing the radio circuit board aside.
5. Insert a #6 panhead screw into each of the four (4) corner holes in the OUTPOST case back. Position the case back in the chosen installation location and secure it in place with the four screws.

CAUTION
Do not drill or penetrate the OUTPOST case with any additional holes. Use only the pre-drilled mounting holes.

6. Re-connect the RF mating connectors and the battery mating connectors between the case front and case back.
7. Fasten the case front to the case back with the four(4) captive screws. Do not over-tighten the plastic screws to prevent damage.
8. Insert, rotate and lock the antenna onto the antenna connector. Orient the antenna vertically.
9. If the OUTPOST is to be used outdoors, it is imperative that the antenna connector be sealed with sealing tape after the antenna has been installed. Use Grainger #2A-459, Radio Shack #278-1647, or equivalent. Refer to "Sealing the Antenna" instructions in this manual.
10. To install the message placard, align the center of the hole over the ON/PTT Button, and the mushroom-head fastener strips on the back of the placard with the strips on the front of the Outpost case. Press firmly to interlock the strips, snapping the panel into position.

Coverage

Depending on the unit location and installation, the OUTPOST can cover up to 1 mile. To increase range, use an external antenna that is mounted higher. See the RAM-1545 Magnet Mounted Antenna on page ii.

XT OUTPOST INSTALLATION INSTRUCTIONS

The XT OUTPOST can be mounted to virtually any surface with four (4) ¼" diameter fasteners. Choose a type of screw thread and screw length which will hold firmly in the surface to which the unit will be mounted.

To MOUNT the XT OUTPOST: (Refer to FIG-3)

1. Remove the front faceplate from the XT Callbox. The faceplate is secured to the case with 4 vandal-resistant buttonhead, Torx screws. Use the T-25 Torx bit included with the radio to remove these screws.
2. Remove the "Mounting Bracket" kit secured to the inside of the XT Callbox case.
3. Loosen the (4) captive screws in the front corners of the internal Callbox case and separate the case front from the case back. These screws are captive to the housing; to prevent damaging them, **DO NOT** remove the screws from the housing.
4. Install 6 D-cell alkaline batteries into the battery holder. Refer to FIG-2, or the labels beneath the cells, for correct installation of the batteries.
5. If required, program the radio. Refer to the programming section of this manual for details.
6. Fasten the internal case front to the case back with the four(4) captive screws. Do not over-tighten the plastic screws to prevent damage.
7. Re-fasten the front faceplate to the radio with the 4 buttonhead Torx screws.
8. Install the 4 mounting brackets to the back of the XT Callbox case as shown in FIG-3 below with the #10-32 bolts provided. The mounting brackets can be installed vertically, as shown, or horizontally.
9. Position the XT Callbox in the chosen installation location and secure it in place with four screws through the mounting brackets.

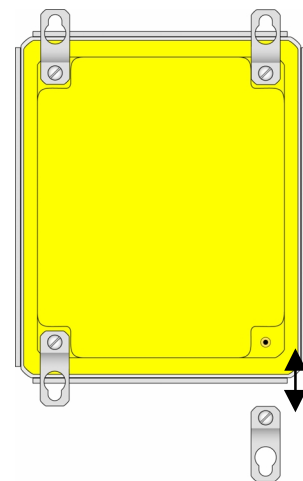


FIG-2: XT Callbox Mounting Brackets – Vertically Installed


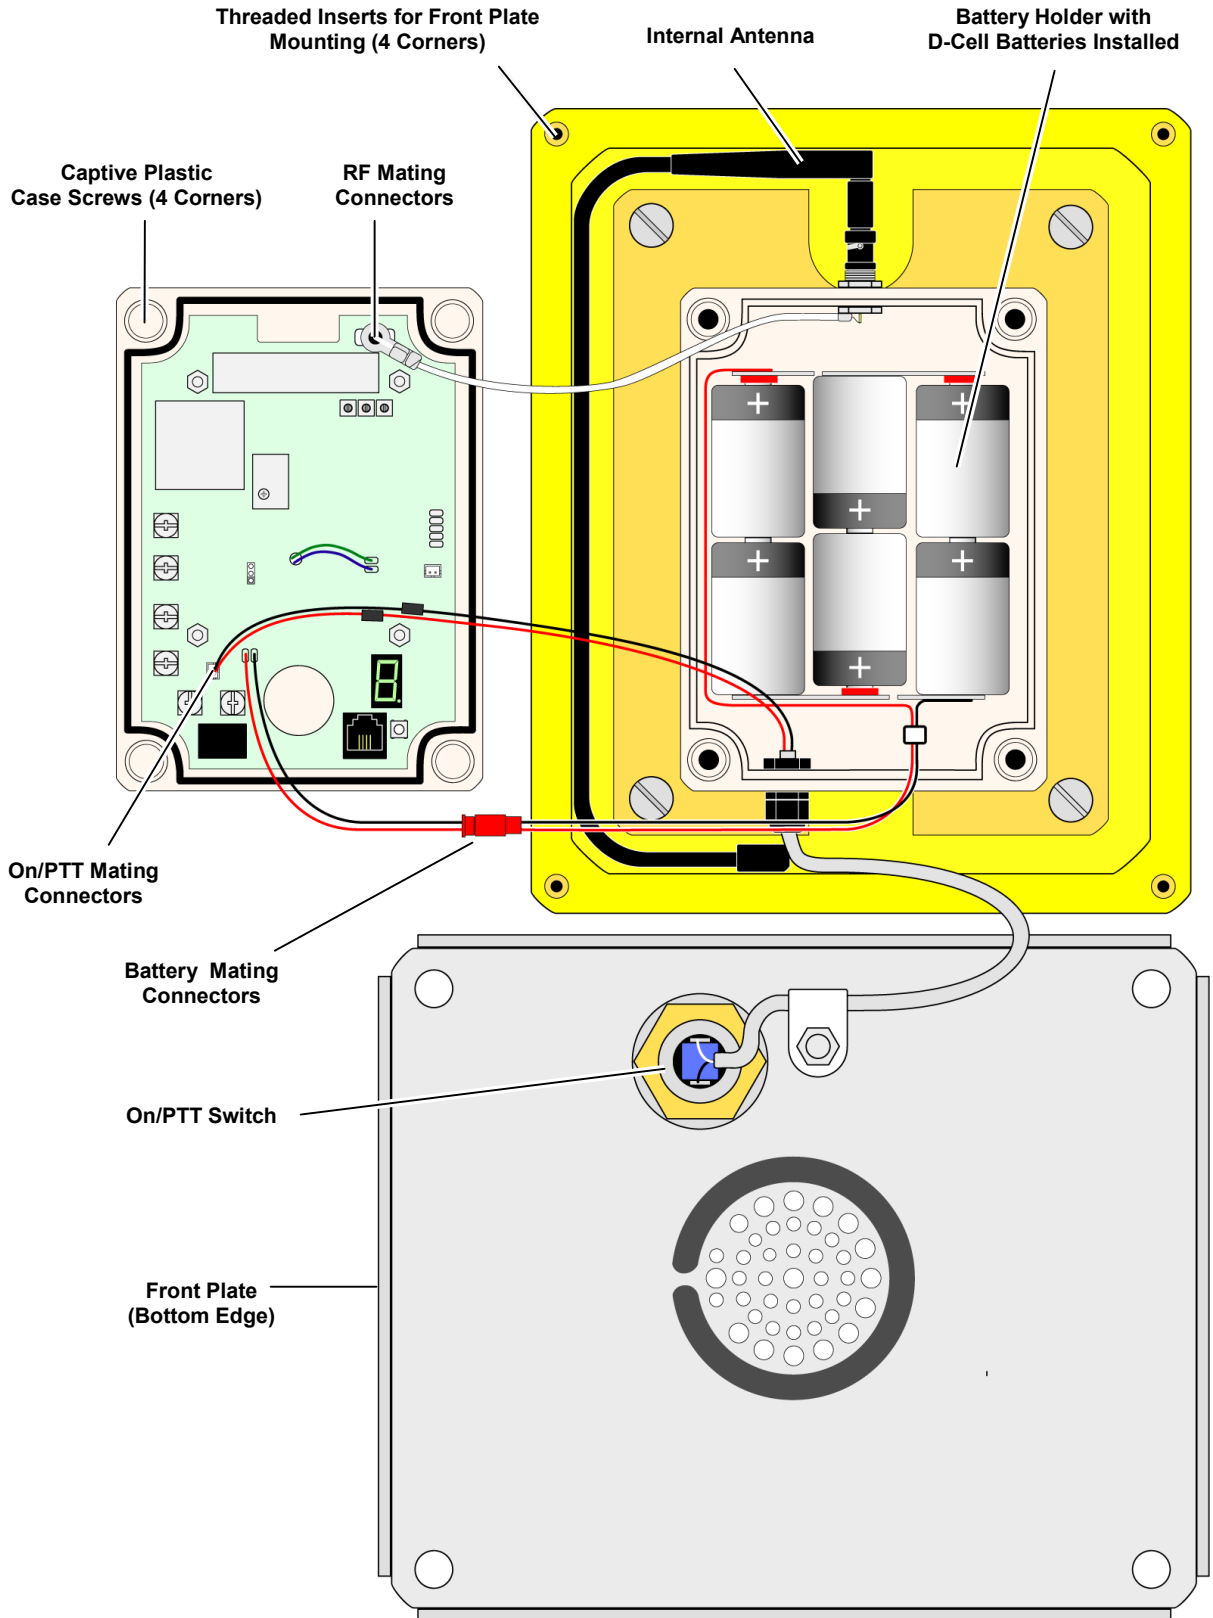


FIG 3: XT Callbox Assembly

HOW TO READOUT CURRENT RADIO PROGRAMMING

- Loosen the (4) captive screws in the front corners of the case. These screws are captive to the housing; to prevent damaging them, DO NOT remove the screws from the housing.
- Separate the case front from the case back, leaving the battery connected to the radio. Make sure the unit has batteries installed. **NOTE:** The voltage of the batteries must be greater than 6 VDC to program properly.
- Press and release the ON/TRANSMIT button on the front of the Callbox to turn the radio on.
- Press and release the Program button (See FIG-1 on page 3 for location). The radio will begin to display a series of four digits; with each digit separated by a hyphen.
- Write down the four digits. The first two digits indicate the frequency code and the last two digits the tone code; see [Table 1](#) and [Table 2](#) on pages 12 and 13. In this example an RQX-456 is programmed to operate on the "Brown Dot" frequency of 464.500 MHz (Frequency code "04") with 100.0 Hz tone (Tone code "12").



- If a 5th digit is displayed, the channel has been programmed for DQC and the last three digits indicate the DQC code; see [Table 3](#) on page 13. In this example an RQX-456 was programmed to operate on the "Brown Dot" frequency of 464.500 MHz (Frequency code "04") with a DQC code of "723".



- If more than 5 digits are displayed, the radio has been programmed for 2-Tone Paging Decode. The frequency and tone codes will be displayed, followed by a "C", then the radio will display the 2-Tone paging code; see [Table 4](#) on page 13. In this example an RQX-456 was programmed to operate on the "Brown Dot" frequency of 464.500 MHz (Frequency code "04") with 100.0 Hz tone (Tone code "12") and 2-tone paging decode frequencies of 330.5 Hz and 569.1 Hz (2-Tone code "91").



- If the channel is PC-programmed with any frequency or tone not listed in [Table 1](#), [Table 2](#) or [Table 3](#) on pages 12 and 13, the radio will sound the error tone on contents read out and display an "E".



- Normal radio operation resumes after the programming information has been displayed.

HOW TO FIELD PROGRAM FREQUENCY AND TONE CODES

To match other radios, the owner can select Frequency, Tone and DQC Codes from [Table 1](#), [Table 2](#) and [Table 3](#) on pages 12 and 13. In our example we will program an RQX-456 to operate on the "Brown Dot" frequency of 464.500 MHz with 100.0 Hz tone.

- 04** 1. Refer to [Table 1](#) on page 12 to determine the two-digit frequency code and write it down.
- 12** 2. Refer to [Table 2](#) on page 13 to determine the two-digit tone code for 100.0 Hz and write it down.
- 3. Loosen the (4) captive screws in the front corners of the case. These screws are captive to the housing; to prevent damaging them, **DO NOT** remove the screws from the housing.
- 4. Separate the case front from the case back, leaving the battery connected to the radio. Make sure the unit has batteries installed.
NOTE: The voltage of the batteries must be greater than 6 VDC to program properly.
- 5. Press and release the ON/TRANSMIT button on the front of the unit to turn the radio on.



- 6. Press and hold the Program Button (See FIG-1 on page 3 for location). A "P" will appear on the program display as you enter program mode and the radio will start beep rapidly.
- 7. Release the program button after the beeping has stopped. The radio will display a series of six characters for Radio Identification, with each character separated by a hyphen.

The 1st two characters indicate the model number, the 3rd and 4th characters indicate the radio type, and the 5th and 6th characters indicate the firmware revision.



- 8. After the Radio Identification has been displayed the radio will emit a triple beep indicating that the radio is in program mode.

- 9. Enter the 1st digit of the frequency code by clicking the PTT button until the program display shows the desired number. Pause—the radio will sound a low tone and show a hyphen across the center of the display to indicate that it is ready to accept the next digit.
- 10. Enter the 2nd digit of the frequency code by clicking the PTT button until the program display shows the desired number. Pause—the radio sounds a low tone and will show a hyphen across the center of the display to indicate that it is ready to accept the next digit.
- 11. Enter the 1st digit of the tone code (or 1st digit of the DQC code) by clicking the PTT button until the program display shows the desired number. Pause—the radio sounds a low tone and will show a hyphen across the center of the display to indicate that it is ready to accept the next digit.
- 12. Enter the 2nd digit of the tone code (or 2nd digit of the DQC code) by clicking the PTT button until the program display shows the desired number. Pause—the radio sounds a low tone and will show a hyphen across the center of the display to indicate that it is ready to accept the next digit.

- 13. **FOR DQC CODES ONLY** – Enter the 3rd digit of the DQC code by clicking the PTT button until the program display shows the desired number. Pause—the radio sounds a low tone and will show a hyphen across the center of the display to indicate that it is ready to accept the next digit.



- 14. Press and release the ON/TRANSMIT button to save your programming. A triple beep will sound to indicate that programming was successful and the radio will turn off.
NOTE: An error tone will sound if you attempt to save an incorrect code, an "E" will appear on the display and the radio will turn off. Check the digits you are attempting to enter, then start over.

- 15. Turn the radio back on for normal operation.

HOW TO FIELD PROGRAM 2-TONE DECODE


For special applications, it is desirable to program the Callbox for 2-Tone decode operation. The user is able to field program the radio for one of the 9 pre-determined tone pairs specified in [Table 4](#) on page 13. These tone pairs correspond to field programmable 2-Tone encode codes available in other RITRON portable and base radios. In our example we will program an RQX-456 to operate with 2-Tone decode frequencies of 389.0 and 669.9 Hz.

NOTE: Field programming frequency and tone codes will remove all 2-Tone programming. If 2-Tone operation is required, the 2-tone code must be re-programmed after field programming of the frequency and tone codes.

- 94** 1. Refer to [Table 4](#) on page 13 to determine the two-digit code for 2-tone decode on 389.0 and 669.9 Hz and write it down.
- 2. Loosen the (4) captive screws in the front corners of the case. These screws are captive to the housing; to prevent damaging them, DO NOT remove the screws from the housing.

- 3. Separate the case front from the case back, leaving the battery connected to the radio. Make sure the unit has batteries installed.
NOTE: The voltage of the batteries must be greater than 6 VDC to program properly.

- 4. Press and release the ON/TRANSMIT button on the front of the unit to turn the radio on.



-  5. Press and hold the Program Button (See FIG-1 on page 3 for location). A "P" will appear on the program display as you enter program mode and the radio will start beep rapidly.


- 6. Release the program button after the beeping has stopped. The radio will display a series of six characters for Radio Identification, with each character separated by a hyphen.


The 1st two characters indicate the model number, the 3rd and 4th characters indicate the radio type, and the 5th and 6th characters indicate the firmware revision.



- 7. After the Radio Identification has been displayed the radio will emit a triple beep indicating that the radio is in program mode.

-   8. Enter the 1st digit of the 2-Tone code by clicking the PTT button until the program display shows the desired number. Pause—the radio will sound a low tone and show a hyphen across the center of the display to indicate that it is ready to accept the next digit.

-  9. Enter the 2nd digit of the 2-Tone code by clicking the PTT button until the program display shows the desired number. Pause—the radio sounds a low tone and will show a hyphen across the center of the display to indicate that it is ready to accept the next digit.

-  10. Press and release the ON/TRANSMIT button to save your programming. A triple beep will sound to indicate that programming was successful and the radio will turn off.
NOTE: An error tone will sound if you attempt to save an incorrect code, an "E" will appear on the display and the radio will turn off. Check the digits you are attempting to enter, then start over.

- 11. Turn the radio back on for normal operation.

HOW TO FIELD PROGRAM RADIO FEATURES

The OUTPOST Callbox can be field programmed for a number of features that include companding, Gate Guard, and speaker volume level. Refer to Table 5 on page 13 for the single digit codes available for field programming. In our example we will program an RQX-456 for Gate Guard operation.


NOTE: Field programming frequency and tone codes will turn companding and Gate Guard OFF. If companding or Gate Guard operation is required, the single-digit Radio Feature code must be re-programmed after field programming of the frequency and tone codes.

5 1. Refer to [Table 5](#) on page 13 to determine the single-digit code used to enable Gate Guard.

2. Loosen the (4) captive screws in the front corners of the case. These screws are captive to the housing; to prevent damaging them, **DO NOT** remove the screws from the housing.

3. Separate the case front from the case back, leaving the battery connected to the radio. Make sure the unit has batteries installed.
NOTE: The voltage of the batteries must be greater than 6 VDC to program properly.

4. Press and release the ON/TRANSMIT button on the front of the unit to turn the radio on.


 5. Press and hold the Program Button (See FIG-1 on page 3 for location). A "P" will appear on the program display as you enter program mode and the radio will start beep rapidly.


6. Release the program button after the beeping has stopped. The radio will display a series of six characters for Radio Identification, with each character separated by a hyphen.

The 1st two characters indicate the model number, the 3rd and 4th characters indicate the radio type, and the 5th and 6th characters indicate the firmware revision.



7. After the Radio Identification has been displayed the radio will emit a triple beep indicating that the radio is in program mode.

 8. Enter the single-digit code by clicking the PTT button until the program display shows the desired number. Pause—the radio will sound a low tone and show a hyphen across the center of the display to indicate that it is ready to accept the next digit.

 9. Press and release the ON/TRANSMIT button to save your programming. A triple beep will sound to indicate that programming was successful and the radio will turn off.
NOTE: An error tone will sound if you attempt to save an incorrect code, an "E" will appear on the display and the radio will turn off. Check the digits you are attempting to enter, then start over.

10. Turn the radio back on for normal operation.

TABLE 1: PROGRAMMABLE FREQUENCY CODES

UHF Business Band			
Code	Frequency	Color Dot	BW
01	467.7625	J	25
02	467.8125	K	25
03	464.5500	Yellow Dot	25
04	464.5000	Brown Dot	25
05	467.8500	Silver Star	25
06	467.8750	Gold Star	25
07	467.9000	Red Star	25
08	467.9250	Blue Star	25
09	469.2625		25
10	462.5750	White Dot	25
11	462.6250	Black Dot	25
12	462.6750	Orange Dot	25
13	464.3250		25
14	464.8250		25
15	469.5000		25
16	469.5500		25
17	463.2625		25
18	464.9125		25
19	464.6000		25
20	464.7000		25
21	462.7250		25
22	464.5000	Brown Dot	12.5
23	464.5500	Yellow Dot	12.5
24	467.7625	J	12.5
25	467.8125	K	12.5
26	467.8500	Silver Star	12.5
27	467.8750	Gold Star	12.5
28	467.9000	Red Star	12.5
29	467.9250	Blue Star	12.5
30	461.0375		12.5
31	461.0625		12.5
32	461.0875		12.5
33	461.1125		12.5
34	461.1375		12.5
35	461.1625		12.5
36	461.1875		12.5
37	461.2125		12.5
38	461.2375		12.5
39	461.2625		12.5
40	461.2875		12.5
41	461.3125		12.5
42	461.3375		12.5
43	461.3625		12.5
44	462.7625		12.5
45	462.7875		12.5
46	462.8125		12.5
47	462.8375		12.5
48	462.8625		12.5
49	462.8875		12.5
50	462.9125		12.5
51	464.4875		12.5
52	464.5125		12.5
53	464.5375		12.5
54	464.5625		12.5
55	466.0375		12.5
56	466.0625		12.5
57	466.0875		12.5
58	466.1125		12.5

UHF Business Band		
Code	Frequency	BW
59	466.1375	12.5
60	466.1625	12.5
61	466.1875	12.5
62	466.2125	12.5
63	466.2375	12.5
64	466.2625	12.5
65	466.2875	12.5
66	466.3125	12.5
67	466.3375	12.5
68	466.3625	12.5
69	467.7875	12.5
70	467.8375	12.5
71	467.8625	12.5
72	467.8875	12.5
73	467.9125	12.5
74	469.4875	12.5
75	469.5125	12.5
76	469.5375	12.5
77	469.5625	12.5
00	DELETE CODE*	

VHF Business Band			
Code	Frequency	Color Dot	BW
03	151.625	Red Dot	25
04	151.955	Purple Dot	25
05	151.925		25
06	154.540		25
07	154.515		25
08	154.655		25
09	151.685		25
10	151.715		25
11	151.775		25
12	151.805		25
13	151.835		25
14	151.895		25
15	154.490		25
16	151.655		25
17	151.745		25
18	151.865		25
24	151.700		12.5
25	151.760		12.5
26	152.700		25
00	DELETE CODE *		

VHF MURS **			
Code	Frequency	Color Dot	BW
01	154.600	Green Dot	25
02	154.570	Blue Dot	25
19	151.820	MURS	12.5
20	151.880	MURS	12.5
21	151.940	MURS	12.5
22	154.600	MURS	12.5
23	154.570	MURS	12.5
00	DELETE CODE *		

Canada Models		
UHF Business Band		
Code	Frequency	BW
01	458.6625	25
02	469.2625	25
00	DELETE CODE*	

Canada Models		
VHF Business Band		
Code	Frequency	BW
01	151.055	25
02	151.115	25
00	DELETE CODE*	

British Columbia Models		
VHF Business Band		
Code	Frequency	BW
01	154.100	25
02	158.940	25
00	DELETE CODE*	

TABLE 2: PROGRAMMABLE QC TONE CODES

Code	Frequency	Code	Frequency	Code	Frequency	Code	Frequency
01	67.0	14	107.2	27	167.9	40	159.8
02	71.9	15	110.9	28	173.8	41	165.5
03	74.4	16	114.8	29	179.9	42	171.3
04	77.0	17	118.8	30	186.2	43	177.3
05	79.7	18	123.0	31	192.8	44	No Tone
06	82.5	19	127.3	32	203.5	45	183.5
07	85.4	20	131.8	33	210.7	46	189.9
08	88.5	21	136.5	34	218.1	47	196.6
09	91.5	22	141.3	35	225.7	48	199.5
10	94.8	23	146.2	36	233.6	49	206.5
11	97.4	24	151.4	37	241.8	50	229.1
12	100.0	25	156.7	38	250.3	51	254.1
13	103.5	26	162.2	39	69.4	00	Delete

TABLE 3: PROGRAMMABLE DQC CODES

Code	Code	Code	Code	Code	Code	Code	Code
023	072	152	244	331	423	532	662
025	073	155	245	343	431	546	664
026	074	156	251	346	432	565	703
031	114	162	261	351	445	606	712
032	115	165	263	364	464	612	723
043	116	172	265	365	465	624	731
047	125	174	271	371	466	627	732
051	131	205	306	411	503	631	734
054	132	223	311	412	506	632	743
065	134	226	315	413	516	654	754
071	143	243					

TABLE 4: PROGRAMMABLE 2-TONE CODES

Code	Tone 1	Tone 2
91	330.5	569.1
92	349.0	600.9
93	368.5	634.5
94	389.0	669.9
95	410.8	707.3
96	433.7	746.8
97	457.9	788.5
98	483.5	832.5
99	330.5	600.9

TABLE 5: PROGRAMMABLE FEATURES

Code	Feature
1	Companding ON
2	Companding OFF
3	Volume Level - Medium
4	Volume Level - High
5	Gate Guard ON
6	Gate Guard OFF
7	
8	
9	

NOTE: Companding will compress transmit audio before sending it, and expand receive audio before it is heard on the speaker to reduce the background noise common in radio communications. Companding is not recommended unless all radios in the system are companded.

FIELD PROGRAMMING GATEGUARD

The XT OUTPOST can be field programmed for basic Gate Guard operation, or PC programmed to suit your unique requirements.

To field program the Gate Guard:

1. Program the frequency and tone codes per the "How to Field Program Frequency and Tone Codes" instructions on page 9.
2. Program the 2-Tone code per the "How to Field Program 2-Tone Decode" instructions on page 10.
3. Program the Callbox for Gate Guard operation per the "How to Field Program Radio Features" instructions on page 11.

The XT OUTPOST Callbox will now operate in GateGuard mode as follows:

- The Callbox will be in "Automatic Turn-Off" mode. The ON/PTT button must 1st be pressed as described in "Operating the OUTPOST Callbox" section on page 2 before normal two-way communications can be established.
- If the Callbox does not send or receive a signal for more than 10 seconds the Callbox will automatically turn off. The ON/PTT button must be pressed to turn the Callbox back on.

When the Callbox receives the correct 2-Tone signal the Callbox Switch Output will momentarily close for 1 second. The Callbox will automatically transmit a confirmation tone after the 2-tone has been decoded.

OPTIONAL OUTPOST CALLBOX FEATURES

The OUTPOST Callbox has many optional features available through PC Programming.

Two-Way Intercom

The Automatic Turn-Off feature is selected by default as described in the "Operating the OUTPOST Callbox section". As an option OUTPOST can be PC programmed to operate as a two-way intercom. When the Automatic Turn-Off feature is not selected the 10 second automatic shut-off is disabled and the Callbox will operate in a "standby" mode, allowing the Callbox to receive calls at any time.

Operating the Callbox in two-way Intercom mode significantly increases the battery drain, and is therefore not recommended for battery powered applications. Refer to "External 12 VDC Power Supply" in the Installation section of this manual. If battery powered operation is required, battery drain can be reduced with the "Battery Saver" feature detailed in this section.

Battery Saver

When the Outpost Callbox is programmed to operate in Two-way Intercom mode, Battery Saver can in-

crease battery life in both internal or external battery powered applications.

With Battery Saver activated, the Callbox will periodically "wake-up" and listen for a received signal before returning to a low current "sleep" state. The time between "wake-up" states can be PC programmed between .25 - 8 seconds. A longer time between "Wake-up" states will result in increased battery life.

The Callbox immediately leaves Battery Saver mode any time the ON/PTT Button is pressed or a signal is received, and will not return to Battery Saver until the 10 second RQX Reset Time has expired.

RQX Reset Time

Set from the factory for 10 seconds, the RQX Reset Time can be PC programmed for 1-255 seconds. A shorter inactivity time will result in increased battery life. In standard "Wake-Up" operation a longer inactivity timer will allow more time for a response before the Callbox turns off.

Switch Output

The OUTPOST Callbox can be PC programmed to open and close the Switch Output whenever a unique 2-tone code is received. The switch output is a simple contact closure that may be used to open and close a gate, switch on a light, sound an alarm or any other application where an ON/OFF switch is required.

The Callbox can be field or PC programmed to alternately open and close the switch using a single 2-tone code, or can be PC programmed for unique open and close 2-tone codes. Field programming offers nine 2-tone codes that correspond to field programmable 2-tone codes available in select RITRON portable and base radios.

Sensor Input

The Callbox can be PC programmed to send a warning tone when a change in the Sensor Input is detected. The Sensor Input can be set to respond to an open or closed switch.

Response Tone

The OUTPOST Callbox can be PC programmed to send a unique Response tone after it receives a signal to indicate the current status of the Switch Output or the Sensor Input.

Battery Back-Up Alert

In installations with an external 12 VDC power supply and internal battery back-up, the OUTPOST can be PC programmed to send an alert tone at the end of each transmission when the unit is operating on the back-up battery.

Busy Channel TX Inhibit

When a user is transmitting on your radio frequency without your tone, you will not be allowed to transmit. The radio will beep a series of long, low tones while the ON/PTT button is held down (like a busy signal).

XT GATE GUARD INSTALLATION INSTRUCTIONS

The XT OUTPOST GATE GUARD can be mounted to virtually any surface with four (4) #6 panhead screws. Choose a type of screw thread and screw length which will hold firmly in the surface to which the unit will be mounted.

To MOUNT the XT OUTPOST GATE GUARD: (Refer to FIG-5)

1. Remove the front faceplate from the XT Callbox. The faceplate is secured to the case with 4 vandal-resistant buttonhead, Torx screws. Use the T-25 Torx bit included with the radio to remove these screws.
2. Remove the "Mounting Bracket" kit secured to the inside of the XT Callbox case.

Due to the wide variety of installation possibilities, RIITRON does not provide the cables or hardware required to bring external connections into the XT Callbox. When selecting your cable hardware be sure it will adequately seal the cable to the case.

3. Carefully study the internal construction of the XT Callbox and determine the location on the outside case where the external supply and Gate Guard hook-up will be brought in. Consider clearance with your desired hardware.
4. Remove the 4 flathead screws securing the internal mounting plate and remove entire internal case assembly. The front faceplate will be attached to the internal case assembly, handle with care.
5. Drill the hole in the XT Callbox case required for your cable installation.
6. Install the 4 mounting brackets to the back of the XT Callbox case shown in FIG-2. The mounting brackets can be installed vertically, as shown, or horizontally.
7. Thread your external hookup cable through the hole with approximately 6 inches of cable inside the case. Your external cable will be connected to the XT Callbox 6-conductor interface cable with wirenuts, dress your external wires accordingly. With your selected hardware, secure and seal the cable to the XT Callbox case.
8. Position the XT Callbox case in the chosen installation location and secure it in place with four screws through the mounting brackets.
9. If programming is required, loosen the (4) captive screws in the front corners of the internal Callbox case and separate the case front from the case back. These screws are captive to the housing; to prevent damaging them, DO NOT remove the screws from the housing.

10. Program the radio, if required. Refer to the programming section of this manual for details. To program the radio you must first apply +12VDC external power, or install a charged back-up battery. Refer to FIG-1 for hookup of an external +12VDC supply.
11. If rechargeable NiCd batteries are used for battery backup the "Charge Jumper" must be placed into the "charge" position as shown.

!! CAUTION !!

If rechargeable batteries are NOT used for battery backup, be sure the "Charge Jumper" is NOT in the "charge position. Charging alkaline batteries will damage the cells and reduce battery life!

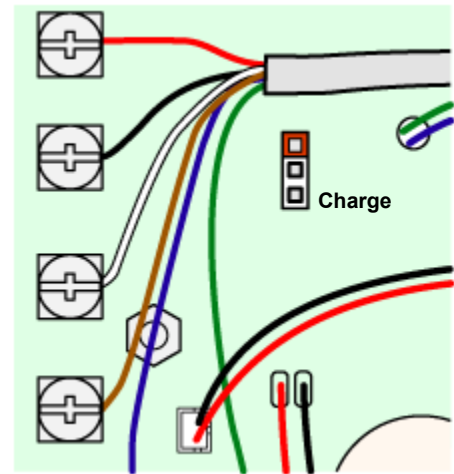


FIG-4: Charge Jumper in Charge Position

12. Fasten the internal case front to the case back with the four(4) captive screws. Do not over-tighten the plastic screws to prevent damage.
13. Secure the internal case assembly to the XT Callbox with the 4 flathead screws through the internal mounting plate. Refer to FIG-5 for correct orientation and location of the antenna and cables. The front faceplate is attached to the internal case assembly, handle with care.
14. Re-fasten the front faceplate to the radio with the 4 buttonhead Torx screws.

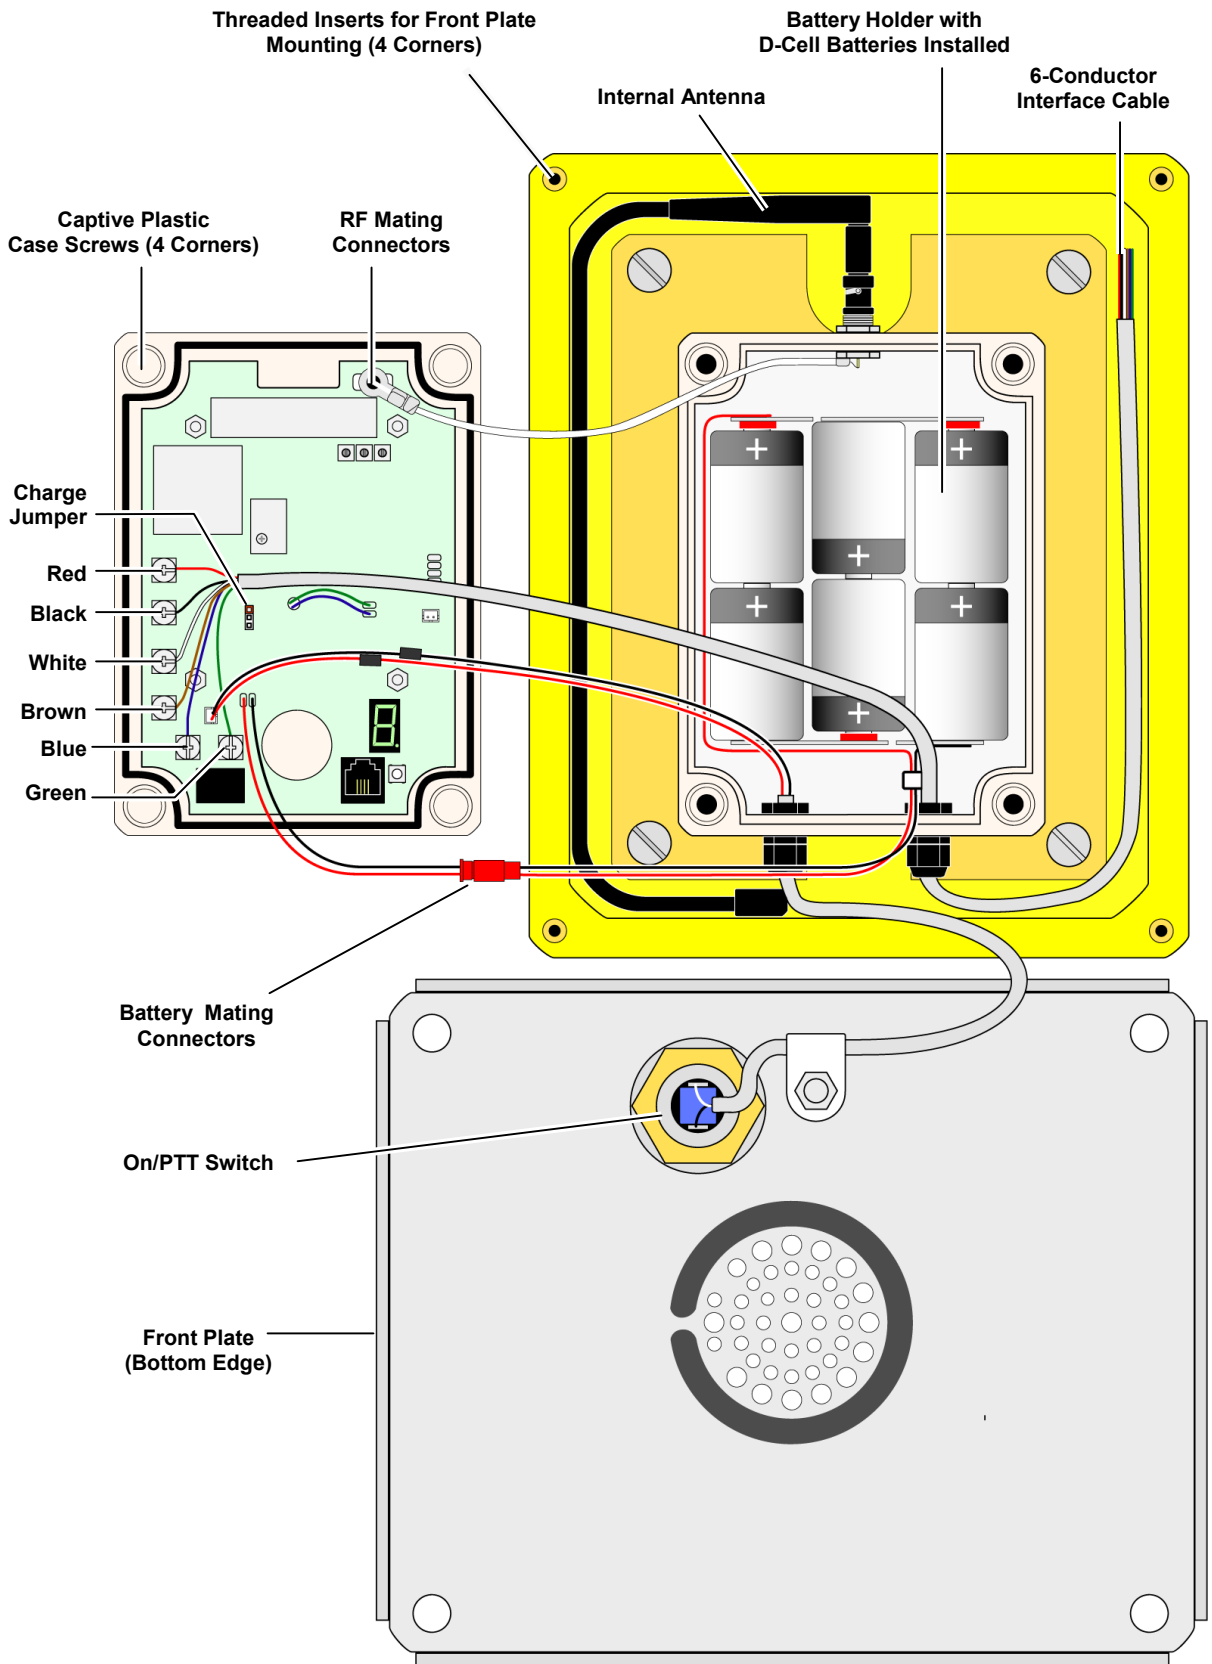


FIG 5: XT Callbox GateGuard Assembly with Battery Back-up

OPTIONAL GATE GUARD PROGRAMMING

The XT OUTPOST can be PC programmed to customize Gate Guard operation.

Intercom (Always On) will leave the Callbox tuned on at all times, allowing Gate Guard operation even if there is no one at the Callbox. The higher current requirements of Intercom mode make it undesirable in battery powered installations.

Battery Saver can be used to reduce battery drain when Intercom (Always On) operation is required on a battery powered installation. With Battery Saver activated, the Callbox will periodically “wake-up” and listen for a received signal before returning to a low current “sleep” state. The time between “wake-up” states can be PC programmed between 1-255 seconds. A longer time between “Wake-up” states will result in increased battery life.

Ring Tone will sound an alert tone on the Callbox speaker, similar to a telephone ring tone, whenever 2-tone has been successfully decoded. This will alert the Callbox user that the gate is being opened or closed.

Inactivity Timer is set from the factory for 10 seconds, but can be PC programmed for 1-255 seconds. A shorter inactivity time will result in increased battery life. In standard “Wake-Up” operation a longer inactivity timer will allow more time for a response before the Callbox turns off.

Gate Guard Latch operation allows programming of separate ON and OFF 2-tone codes. The Outpost will close the Switch Output upon receiving the ON code, and open the Switch Output upon receiving the OFF code.

If the Gate Guard Latch option is used with an ON code only, the Switch Output will automatically turn OFF when the radio:

1. is turned off as a result of the Inactivity Timer in “Wake-Up” mode or,
2. goes to the low current “sleep” state in “Intercom (Always-On)” mode with battery saver enabled.

When reading out the radio programming as described in the “How to Readout Current Radio Programming” section, the ON code will be displayed.

Sensor Output can be programmed to detect a logic level and transmit an Alert tone when a change in logic level is detected. Separate alert tones are used for OPEN (logic level high) and CLOSED (logic level low).

Battery Back-Up Alert is used in installations with an external 12 VDC power supply and internal battery back-up. The OUTPOST can be programmed to send an alert tone at the end of each transmission when the unit is operating on the back-up battery.

Busy Channel TX Inhibit will not allow you to transmit when another user is already transmitting on your radio frequency without your tone. The radio will beep a series of long, low tones while the ON/PTT button is held down (like a busy signal).

INTERCOM (ALWAYS-ON) PROGRAMMING

The XT OUTPOST can be PC programmed to operate as a two-way intercom. When this feature is activated the automatic shut-off is disabled and the radio will remain on in a “stand-by” mode, allowing it to receive a call from another radio at any time. The higher current requirements of Intercom operation make it undesirable in battery powered installations.

Intercom (Always On) must be set for the Callbox to remain tuned on at all times.

Battery Saver can be used to reduce battery drain on a battery powered installation. With Battery Saver activated, the Callbox will periodically “wake-up” and listen for a received signal before returning to a low current “sleep” state. The time between “wake-up” states can be PC programmed between 1-255 seconds. A longer time between “Wake-up” states will result in increased battery life.

2-Tone Decode allows selective calling to a Callbox in a radio system where there is more than one Callbox. When the Callbox is programmed for 2-tone decode in “Intercom (Always-On)” mode it will sound an alert tone on the Callbox speaker, similar to a telephone ring tone, whenever 2-tone has been successfully decoded. This will alert any users in the immediate area that there is an incoming call on the Callbox.

Ring Tone must be set to sound the alert tone on the Callbox speaker when 2-tone is successfully decoded.

Monitor can be set when used with 2-Tone decode to allow the Callbox to hear all radio traffic on the channel. If Monitor is not set, the Callbox will only hear a broadcast after it has successfully decoded the correct 2-tone code. Normal conversation can follow after the 2-tone code is decoded and the radio will automatically reset back to 2-tone decode after 10 seconds of inactivity.

Busy Channel TX Inhibit will not allow you to transmit when another user is already transmitting on your radio frequency without your tone. The radio will beep a series of long, low tones while the ON/PTT button is held down (like a busy signal).

HOW TO SEAL THE ANTENNA

If the OUTPOST Callbox is to be used outdoors it is imperative that the entire antenna connection be sealed with seal tape to provide proper operation and prevent voiding warranty.

Seal tape can be purchased at most Industrial Supply Stores, Hardware and Home Center Stores, or Electronic Supply Stores.


Regardless of the antenna used, it is always best to weatherproof the antenna connection using seal tape.

NOTICE

Failure to follow these instructions will cause damage to the product, prevent proper sealing of the enclosure and will void the Manufacturers Warranty.

Applying Seal Tape:

1. Attach the antenna to the 50Ω BNC connector on the OUTPOST Callbox enclosure.
2. Begin wrapping seal tape at the base of the antenna connector such that it is sealed to the enclosure top.
3. Overlap the seal tape as you tightly wrap upward around the connector and antenna. Continue to overlap seal tape around the connector base, past the articulated portion of the antenna and several inches up the thin, shiny section of the antenna.

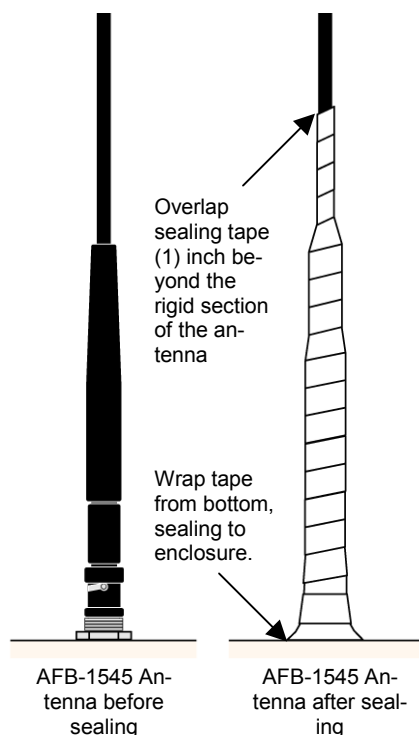

RITRON, INC. LIMITED WARRANTY

WHAT THIS WARRANTY COVERS:

RITRON, INC. ("RITRON") provides the following warranty against defects in materials and/or workmanship in **RITRON Radios and Accessories** under normal use and service during the applicable warranty period (as stated below). "Accessories" means antennas, holsters, chargers, earphones, speaker/microphones and items contained in the programming and programming/service kits.

<u>WHAT IS COVERED</u>	<u>FOR HOW LONG</u>	<u>WHAT RITRON WILL DO</u>
OUTPOST Callboxes	1 year*	During the first year after date of purchase, RITRON will repair or replace the defective product, at RITRON's option, parts and labor included at no charge.
Accessories	90 days*	<i>*After date of purchase</i>

WHAT THIS WARRANTY DOES NOT COVER:

- Any technical information provided with the covered product or any other RITRON products;
- Installation, maintenance or service of the product, unless this is covered by a separate written agreement with RITRON;
- Any products not furnished by RITRON which are attached or used with the covered product, or defects or damage from the use of the covered product with equipment that is not covered (such as defects or damage from the charging or use of batteries other than with covered product);
- Defects or damage, including broken antennas, resulting from:
 - misuse, abuse, improper maintenance, alteration, modification, neglect, accident or act of God,
 - the use of covered products other than in normal and customary manner or,
 - improper testing or installation;
- Defects or damages from unauthorized disassembly, repair or modification, or where unauthorized disassembly, repair or modification prevents inspection and testing necessary to validate warranty claims;
- Defects or damages in which the serial number has been removed, altered or defaced.
- Batteries if any of the seals are not intact.

IMPORTANT: This warranty sets forth the full extent of RITRON's express responsibilities regarding the covered products, and is given in lieu of all other express warranties. What RITRON has agreed to do above is your sole and exclusive remedy. No person is authorized to make any other warranty to you on behalf of RITRON. Warranties implied by state law, such as implied warranties of merchantability and fitness for a particular purpose, are limited to the duration of this limited warranty as it applies to the covered product. Incidental and consequential damages are not recoverable under this warranty (this includes loss of use or time, inconvenience, business interruption, commercial loss, lost profits or savings). Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. Because each covered product system is unique, RITRON disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

WHO IS COVERED BY THIS WARRANTY: This warranty is given only to the purchaser or lessee of covered products when acquired for use, not resale. This warranty is not assignable or transferable.

HOW TO GET WARRANTY SERVICE: To receive warranty service, you must deliver or send the defective product, delivery costs and insurance prepaid, within the applicable warranty period, to **RITRON, INC., 505 West Carmel Drive, Carmel, Indiana 46032, Attention: Warranty Department**. Please point out the nature of the defect in as much detail as you can. You must retain your sales or lease receipt (or other written evidence of the date of purchase) and deliver it along with the product. If RITRON chooses to repair or replace a defective product, RITRON may replace the product or any part or component with re-conditioned product, parts or components. Replacements are covered for the balance of the original applicable warranty period. All replaced covered products, parts or components become RITRON's property.

RIGHTS TO SOFTWARE RETAINED : Title and all rights or licenses to patents, copyrights, trademarks and trade secrets in any RITRON software contained in covered products are and shall remain in RITRON. RITRON nevertheless grants you a limited non-exclusive, transferable right to use the RITRON software only in conjunction with covered products. No other license or right to the RITRON software is granted or permitted.

YOUR RIGHTS UNDER STATE LAW: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

WHERE THIS WARRANTY IS VALID: This warranty is valid only within the United States, the District of Columbia and Puerto Rico.