




OPERATOR'S MANUAL ROUTER TABLE RT601W

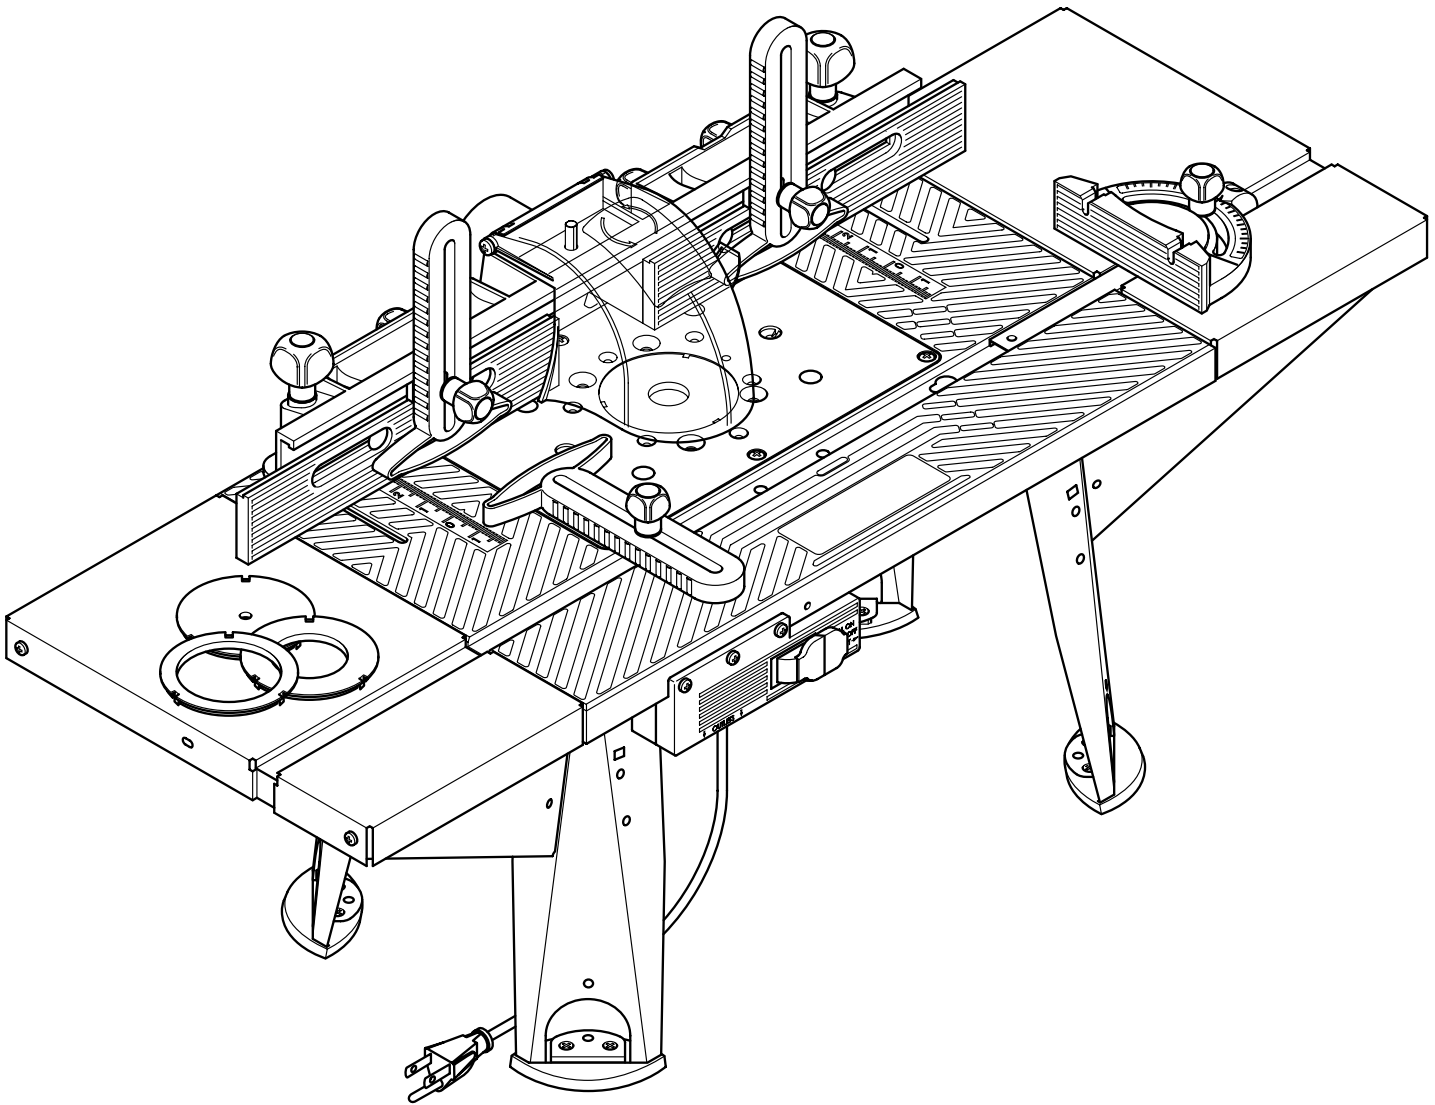

Power tools and some accessories Not included.

Your new router table has been engineered and manufactured to Ryobi's high standard for dependability, ease of operation, and operator safety. Properly cared for, it will give you years of rugged, trouble-free performance.

WARNING: To reduce the risk of injury, the user must read and understand the operator's manual.

Thank you for purchasing a Ryobi router table.

SAVE THIS MANUAL FOR FUTURE REFERENCE

TABLE OF CONTENTS


- Introduction2
- Rules for Safe Operation3-4
- Unpacking and checking contents4
- Features and Specifications5
- Package contents and hardware legend6-9
- Assembly10-14
- Securing the router table14
- Mounting the router15-18
- Switch box19-20
- Operation21-25
- Accessories25
- Repair parts26-27

INTRODUCTION

Your router table has many features for making the use of a router more pleasant and enjoyable. Safety, performance, and dependability have been given top priority in the design of this router table making it easy to maintain and operate.

⚠ WARNING:
 Do not attempt to use this product until you have read thoroughly and completely understand the operator’s manual. Pay close attention to the safety rules, including Dangers, Warnings, and Cautions. If you use your router table properly and only for what it is intended, you will enjoy years of safe, reliable service.

The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning tool operation, always wear safety goggles or safety glasses with side shields and a full face shield when needed. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always wear eye protection which is marked to comply with ANSI Z87.1.

 **Look for this symbol to point out important safety precautions. It means attention!!! Your safety is involved.**

RULES FOR SAFE OPERATION

WARNING:

Means that failure to follow this safety statement may result in extensive product damage, serious personal injury, or death.

WARNING:

■ **Read all safety instructions before using**

Read the owner's manual carefully. Learn its applications and limitations as well as the specific potential hazards.

■ **Ground all tools (unless double insulated)**

If tool is equipped with an approved 3-conductor cord and a 3-prong grounding type plug to fit the proper grounding type receptacle, the green conductor in the cord is the grounding wire. NEVER connect the green wire to a live terminal.

■ **Keep away from hazardous materials**

Normal sparking of the motor could ignite fumes, flammable liquids, or combustibles.

■ **Protect yourself against personal injury**

DO NOT operate any tool while under the influence of drugs, alcohol, or any medication.

■ **Dress for safety**

Do not wear loose clothing, gloves, neckties, or jewelry, as these items can get caught and draw you into moving parts. ALWAYS wear non-slip footwear. Tie back long hair. Roll long sleeves above the elbow.

■ **Avoid accidental starting**

Make sure all switches are in "OFF" position before plugging in.

■ **Never stand on tool**

Serious injury could occur if the tool is tipped or if the cutting tool is accidentally contacted. DO NOT store materials above or near the tool, making it necessary to stand on the tool to reach them.

■ **Protect and use suitable cords**

NEVER carry tool by cord or yank it to disconnect from receptacle. Protect cord from heat, oil and sharp edges. For outdoor operation, use extension cords intended for outdoor use.

■ **Avoid a dangerous environment**

DO NOT use power tools in damp or wet locations or expose them to rain. Keep work area well lit and provide an adequate surrounding work space.

■ **Check direction of feed**

Feed workpiece against the router bit's direction of rotation.

■ **Check damaged parts**

Before further use of the tool, a guard or other part that is damaged should be carefully checked to ensure that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, broken parts, mounting and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.

■ **Never leave tool running unattended**

Turn power off. Do not leave tool until it comes to a complete stop.

■ **Secure router table**

DO NOT attempt to use your router table unless it is fastened firmly to your workbench or floor.

■ **Disconnect tools before servicing**

When changing bits, make sure router is unplugged.

■ **Keep guards in place**

Be sure guards are in working order, properly adjusted, and aligned.

■ **KEEP HANDS AWAY FROM CUTTING AREA**

RULES FOR SAFE OPERATION

CAUTION:

Means that failure to follow this safety statement may result in minor or moderate personal injury, or property or equipment damage.

CAUTION:

■ **Store properly**

Do not store router table outdoors or in a damp location.

■ **Keep work area clean**

ALWAYS keep your work area clean, uncluttered, and well lit. DO NOT work on or place router table legs on floor surfaces that are slippery from sawdust, oil, water, or wax.

■ **Do not force the tool**

Do not force tool or attachment to do a job for which it was not designed. It will do the job better and more safely at the rate for which it was designed.

■ **Use clamps or a vise to hold work when practical**

Using clamps or a vise to hold work is safer than using your hand. It also frees both hands to operate the tool.

■ **Do not overreach**

Keep proper footing and balance at all times.

■ **Maintain tools with care**

Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.

■ **Use recommended accessories**

Consult this manual for recommended accessories. Follow the instructions that accompany the accessories. The use of improper accessories may cause hazards.

■ **Remove adjusting keys and wrenches**

Form the habit of checking to see that keys and adjusting wrenches are removed from the tool before turning it on.

■ **Ensure safety of others**

Keep visitors and children a safe distance away from the work area, especially when operating a power tool. Visitors should wear the same safety equipment as the operator.

■ **SAVE THESE INSTRUCTIONS**

UNPACKING AND CHECKING CONTENTS

Separate all parts from packaging materials and check each item against the package contents listed in this manual, found on pages 6-9.

If any parts are damaged or missing, please call (800) 525-2579 for assistance.

Your **RYOBI**® router table is shipped complete in one carton. Make sure all items are accounted for before discarding any of the packing materials.

FEATURES AND SPECIFICATIONS

Table weight.22.5 lbs.
Table work space.574 square inches
Dimensions40-5/8"L x 14-1/8"W x 14"H

ROUTER TABLE features include:

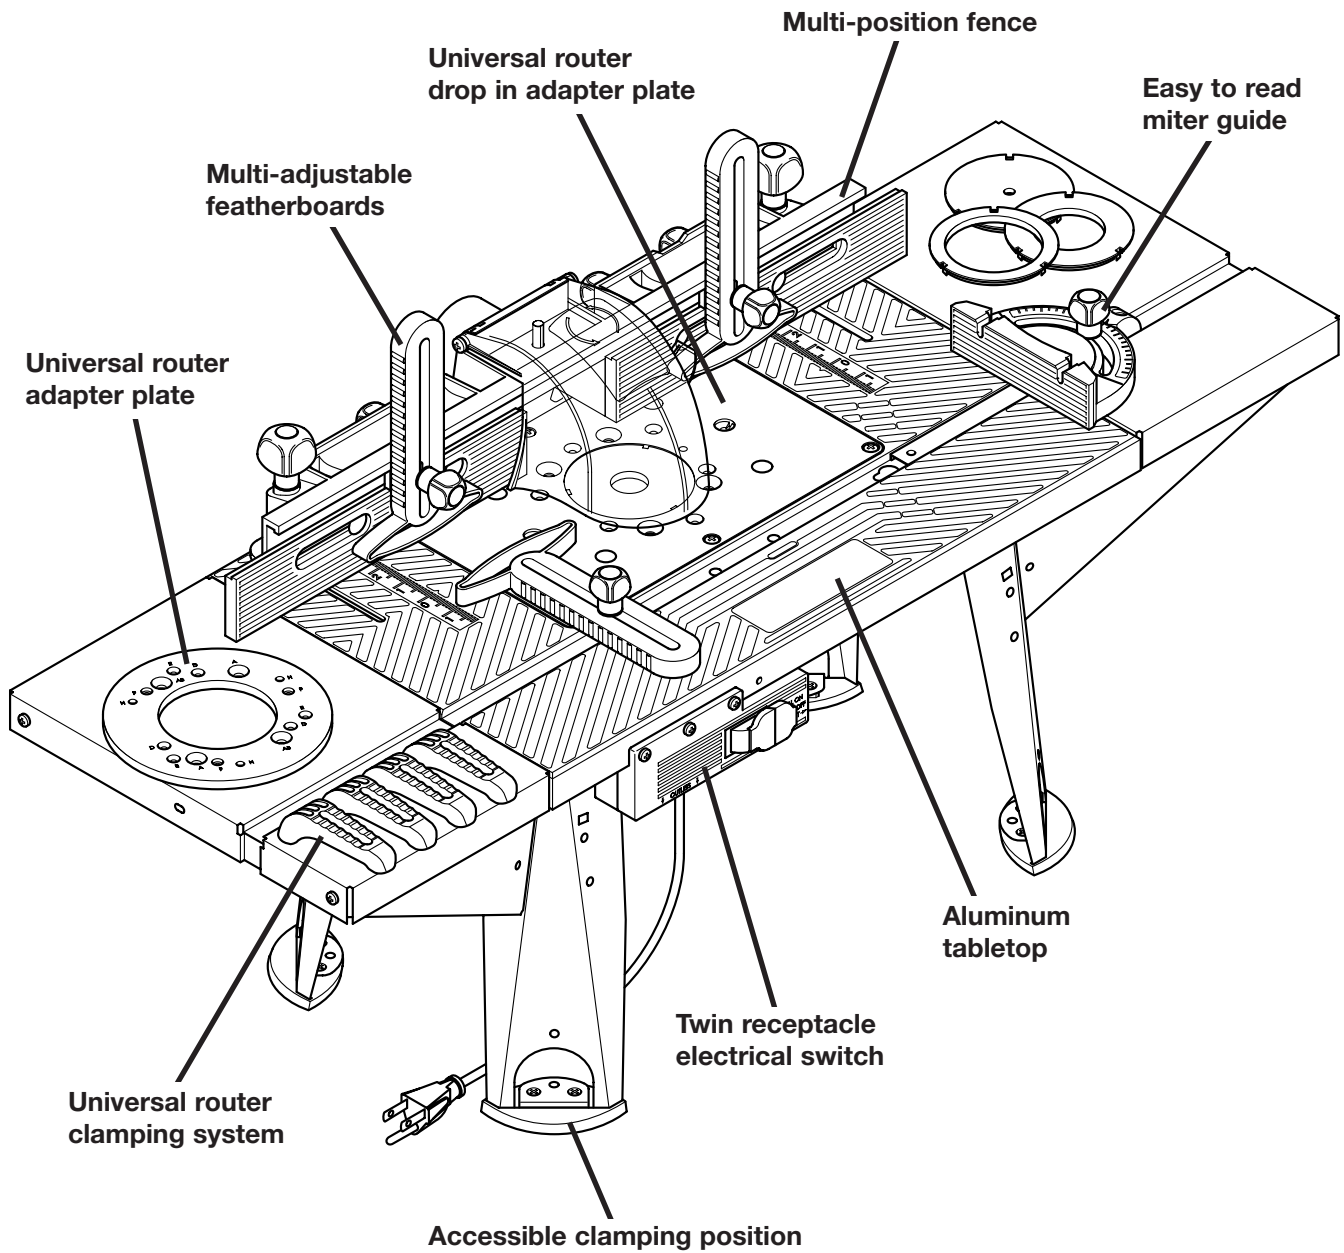


Fig. 1

⚠ WARNING:


Do not attempt to modify this tool or create accessories not recommended for use with this tool. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

PACKAGE CONTENTS AND HARDWARE LEGEND

ITEM DESCRIPTION QTY.


A Safety shield 1

A

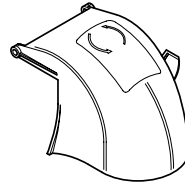


B Fence 1

B

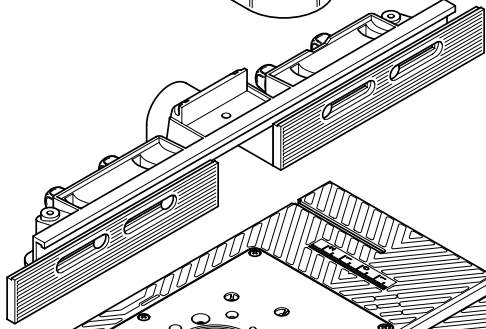


C Tabletop 1

C

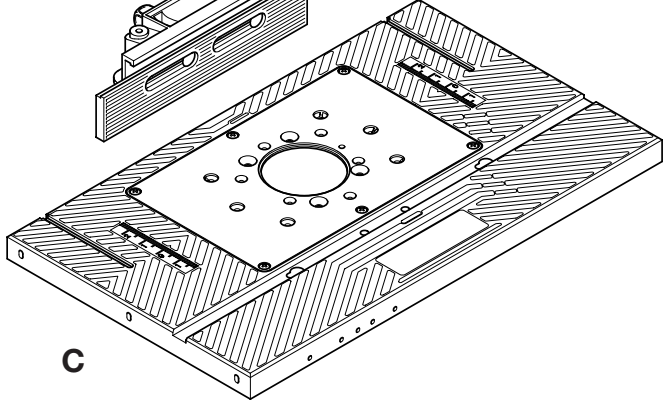

D Extension 2

D

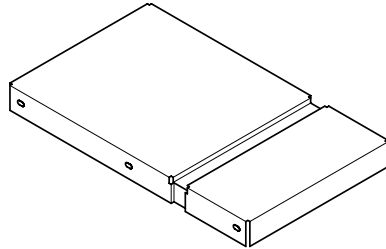

E Leg support, left 2

E




F Leg support, right 2

F




G Leg 4

G




H Switch box 1

H

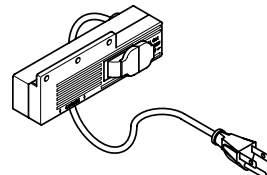










PACKAGE CONTENTS AND HARDWARE LEGEND

ITEM	DESCRIPTION	QTY.	
J	Miter guide	1	J
K	Miter bar	1	K
L	Knob screw	2	L
M	Knob	8	M
N	Miter pointer	1	N
P	Footpad	4	P
Q	Featherboard	3	Q
R	Sliding block	2	R
S	Swivel piece	4	S
T	Clamp	4	T
U	Adapter plate	1	U

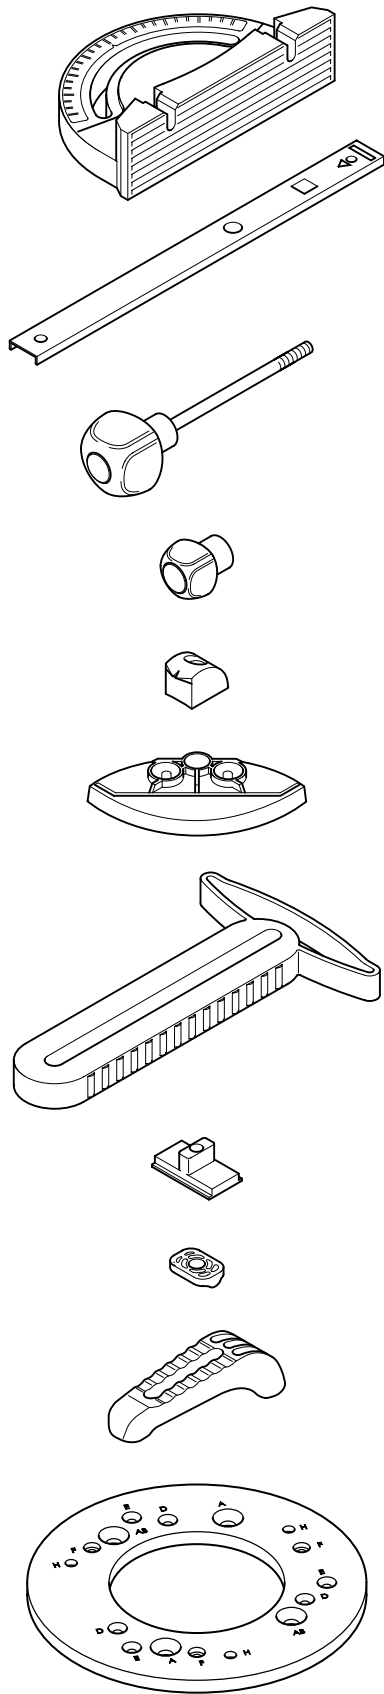


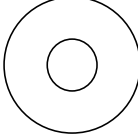



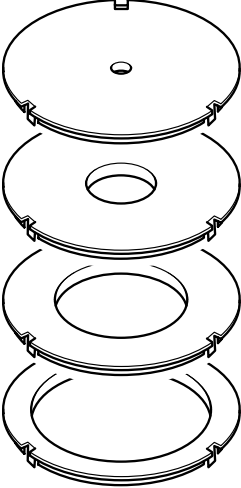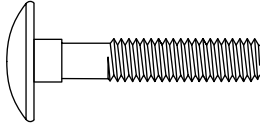




PACKAGE CONTENTS AND HARDWARE LEGEND

Note: Hardware parts shown (screws, nuts, washers) are actual size.

ITEM	DESCRIPTION	QTY.		
V	Locating pin	3	V	
W	Tabletop insert	1	W	
X	Tabletop insert, small hole	1	X	
Y	Tabletop insert, medium hole	1	Y	
Z	Tabletop insert, large hole	1	Z	
AA	Carriage bolt (M 6 x 30)	1	AA	
AB	Countersink screw with nose (M 6 x 65)	4	AB	
AC	Self tapping pan head screw (5 x 12)	21	AC	
AD	Pan head screw (M 5 x 16)	18	AD	
AE	Pan head screw (M 6 x 25)	2	AE	
AF	Hex head bolt (M 6 x 35)	3	AF	
AH	Allen screw (M 6 x 10)	1	AH	

PACKAGE CONTENTS AND HARDWARE LEGEND

Note: Hardware parts shown (screws, nuts, washers) are actual size.

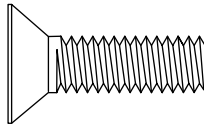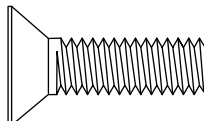ITEM	DESCRIPTION	QTY.		
AJ	Countersink screw (M 4 x 12)	8	AJ	
AK	Washer (6.4 DIN 9021)	10	AK	
AL	Washer (6.4 DIN 125)	4	AL	
AM	Toothed washer (5.3 DIN 6797)	34	AM	
AN	Hex nut (M 4)	8	AN	
AP	Hex nut (M 5)	18	AP	
AQ	Hex nut (M 6)	4	AQ	
AR	Square nut (M 6)	2	AR	
AS	Countersink screw (5/16" - 18 x 3/4")	3	AS	
AT	Countersink screw (M 8 x 20)	3	AT	

ASSEMBLY


WARNING:

The router or router table should never be connected to a power supply when you are assembling parts, making adjustments, installing or removing cutters, cleaning, or when not in use. Disconnecting the router and router table will prevent accidental starting that could cause serious personal injury.

ASSEMBLING THE ROUTER TABLE

See Figure 2


1. Place router tabletop (C) upside down on a flat surface.
2. Position extensions (D) on ends of tabletop with flat sides down (upside down). Note: Align miter guide slots in all three parts as shown.
3. Attach each extension to the ends of the table and fasten together using 6 pan head screws (AD), 6 toothed washers (AM) and 6 hex nuts (AP) provided. Use a #2 Phillips screwdriver to keep from stripping the screw heads. For the nuts use an adjustable wrench or a combination wrench (size 10 mm).

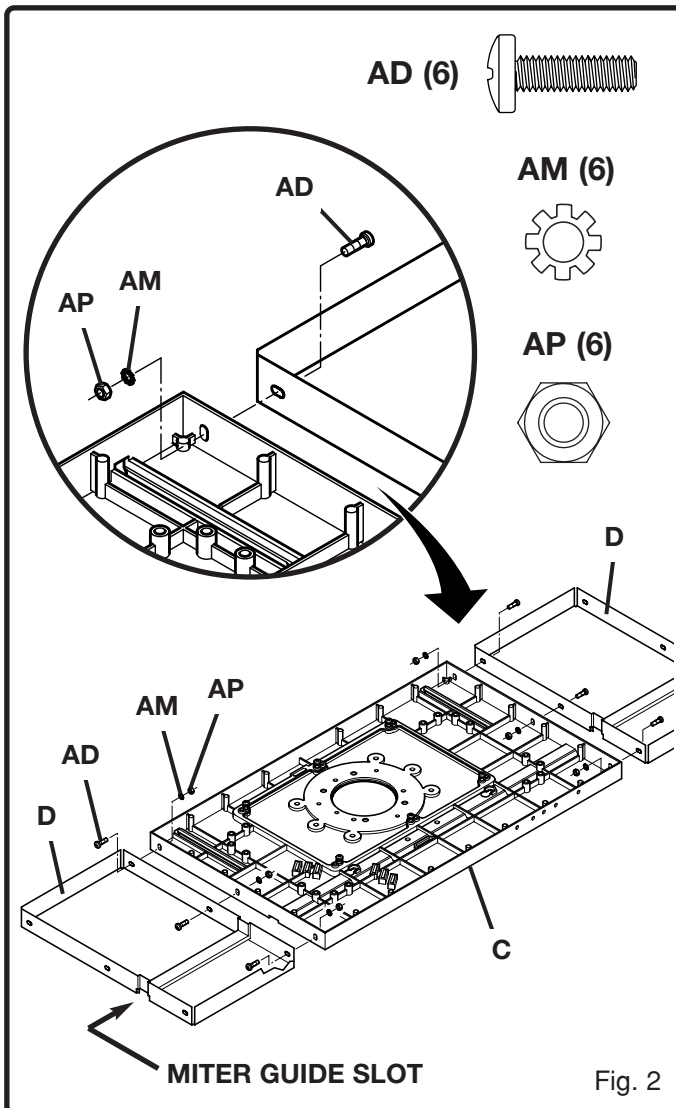

ATTACH THE TABLE LEGS

See Figure 3

4. Place footpads (P) on the bottom of table legs (G) and fasten together using 8 countersink screws (AJ) and 8 hex nuts (AN) provided. Use a #1 Phillips screwdriver to keep from stripping the screw heads.
5. Attach legs (G) securely to table top with 16 pan head screws (AC). Use a #2 Phillips screwdriver to keep from stripping the screw heads.

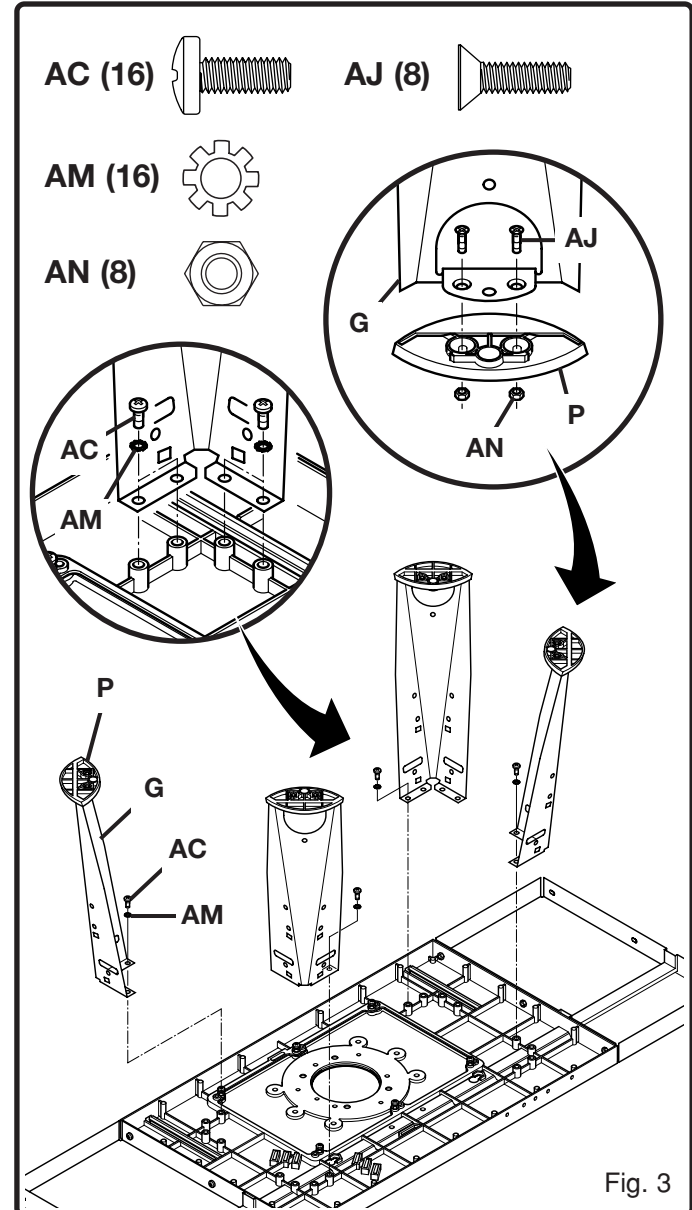


ASSEMBLY

TO ATTACH THE SWITCH BOX

See Figure 5


8. Use a #2 Phillips screwdriver to attach switch box (**H**) to the table with 3 self tapping screws (**AC**).

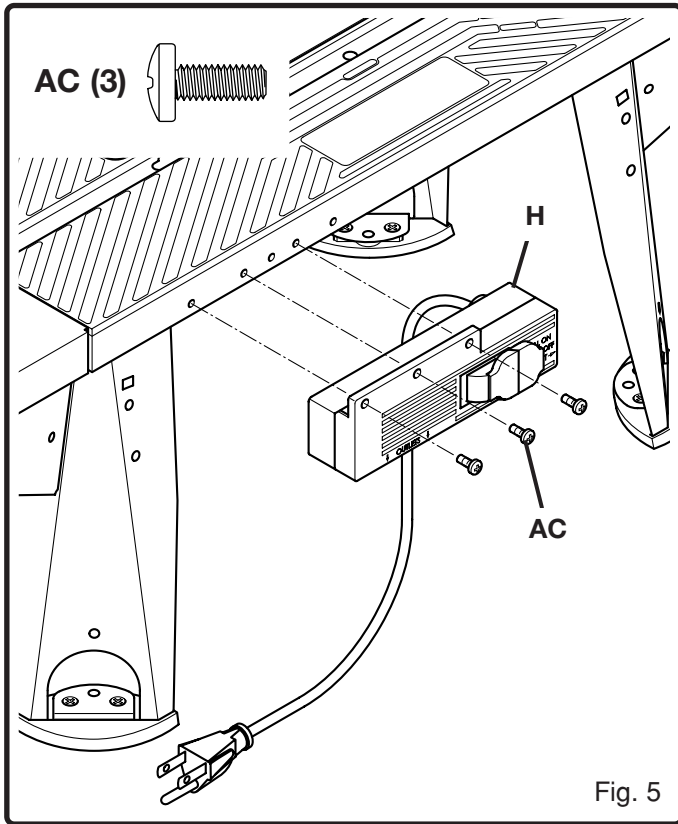

TO ATTACH THE FENCE

See Figure 7

10. Attach the safety shield (**A**) to the fence (**B**) with 2 pan head screws (**AE**). Use a #3 Phillips screwdriver to tighten the screws.

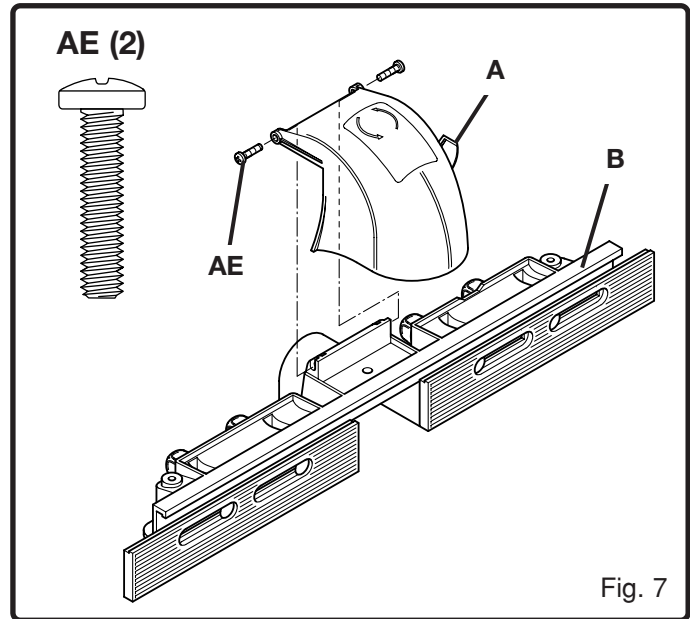



See Figure 8

11. Place the 2 washers (**AK**) on top of the 2 holes in the fence, insert the 2 knob screws (**L**) into the holes and fasten on the other side with the 2 square nuts (**AR**).
NOTE: Do not tighten the 2 square nuts at this stage.

ASSEMBLE THE INSERTS

See Figure 6


9. Three of the inserts are for use with a specific size bit. Insert (**W**) is for used for mounting the router by using the centering pin (description later in your manual).

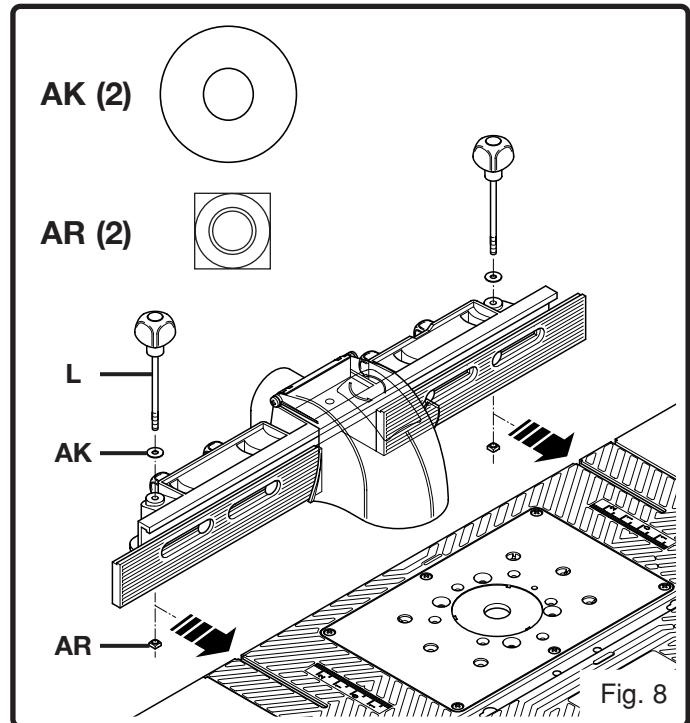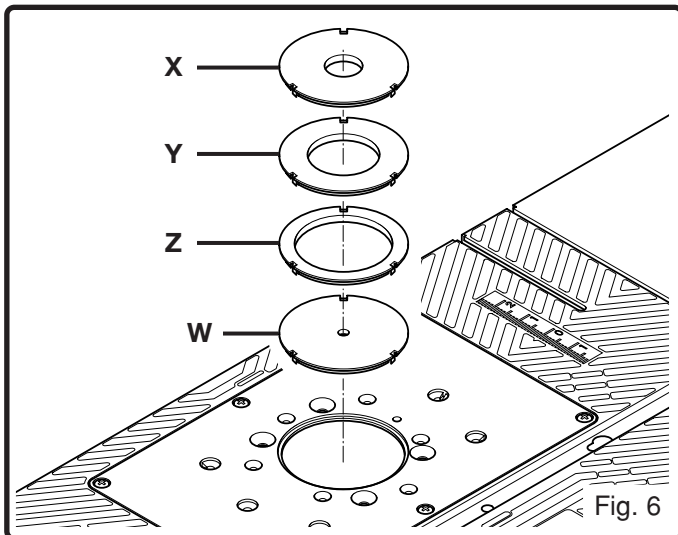

ASSEMBLY

See Figure 9


- Position the fence at the rear of the tabletop so that the 2 square nuts (**AR**) are positioned in the 2 slots in the table. Slide the fence forward (always parallel with the front of the table). When the fence is in the desired location, tighten the knob screws (**L**) by turning clockwise.

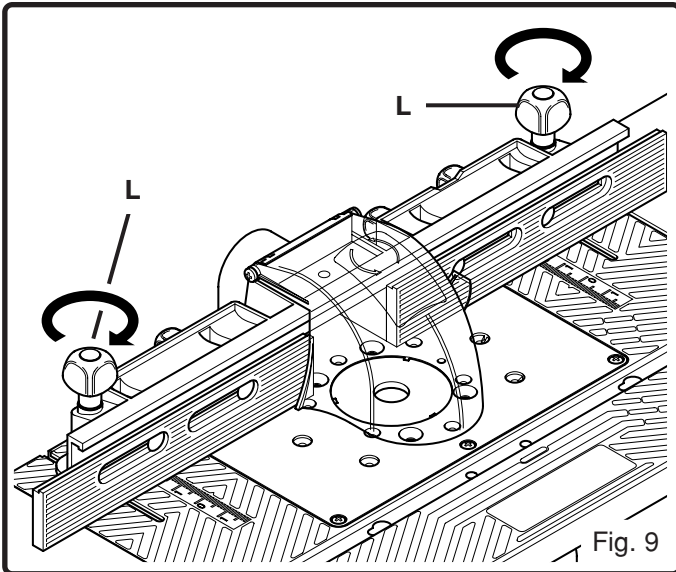

ASSEMBLE 2 FEATHERBOARDS FOR THE FENCE


See Figure 10

- Insert the hex head screw (**AF**) into the sliding block (**R**). Place the sliding block into the slot of the featherboard (**Q**). Secure by placing washer (**AK**) over the hex head screw (**AF**). Screw together by turning the knob (**M**) clockwise. **NOTE:** Do not completely tighten at this stage.

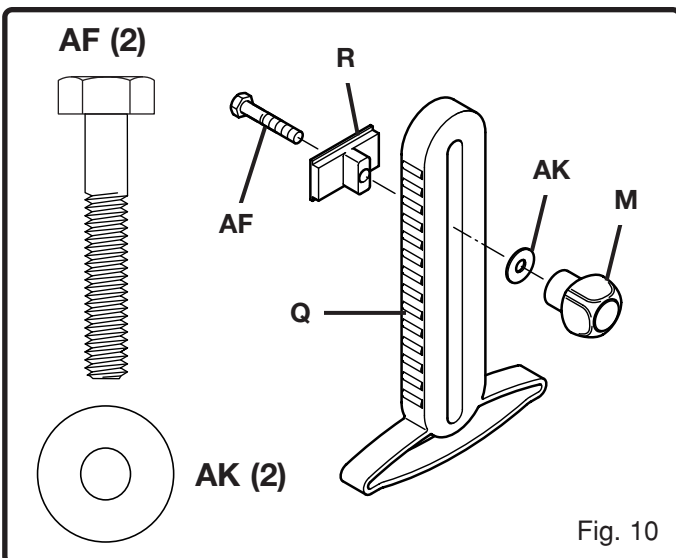

See Figure 11


- Position the featherboards on the fence and secure by turning the knobs (**M**) clockwise.

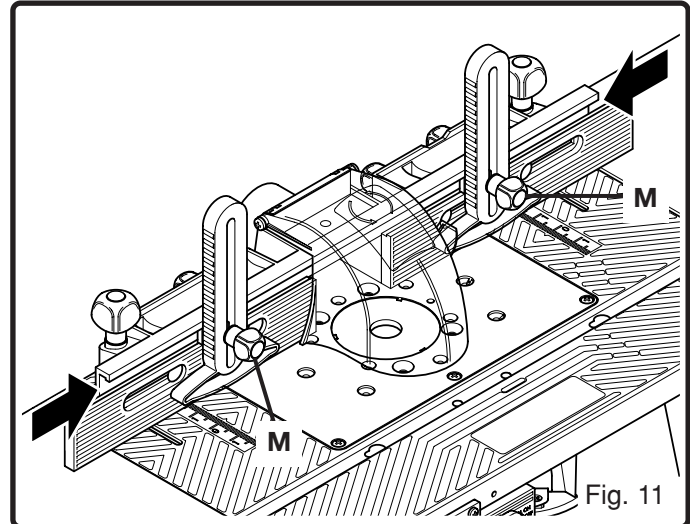

ASSEMBLE THIRD FEATHERBOARD ON TABLETOP

See Figure 12

- Insert the hex head screw (**AF**) through the hex head hole in tabletop. Position the featherboard (**Q**) over the bolt. Screw together by placing washer (**AK**) over the bolt and turning the knob (**M**) clockwise. **NOTE:** This assembly must be securely tightened in the key hole slot in the tabletop.

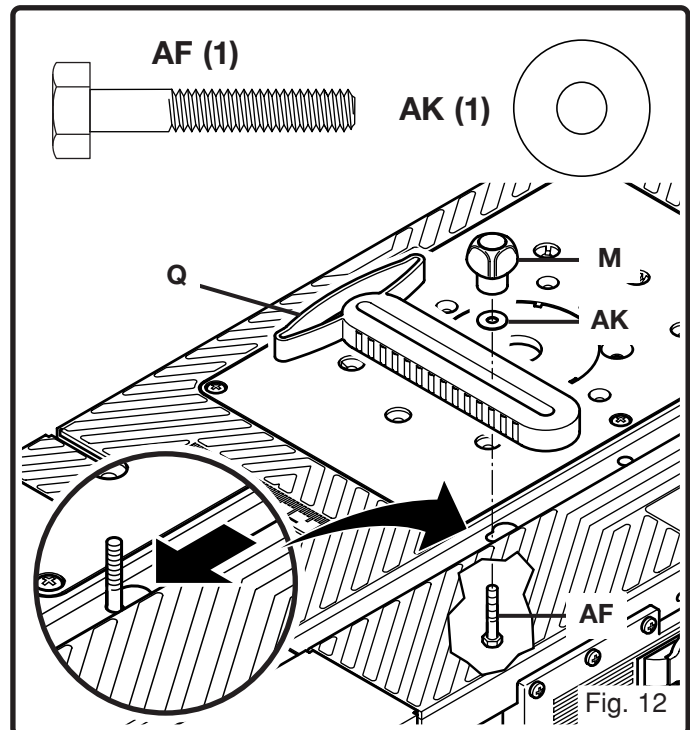

ASSEMBLY

ASSEMBLE THE MITER GUIDE

See Figure 13

- Place the miter guide head (**J**) on top of the miter bar (**K**). Now fasten together by screwing the self tapping screw (**AC**) into the miter guide head. Assemble miter guide by threading carriage bolt (**AA**) through miter bar (**K**). Place washer (**AK**) and knob (**M**) on end of carriage bolt. Tighten knob and then attach miter pointer (**N**) to rear of miter bar (**K**) with self tapping screw (**AC**).

⚠ WARNING:

Before mounting the router make sure you have read and understood pages 10-14 of your owner's manual.

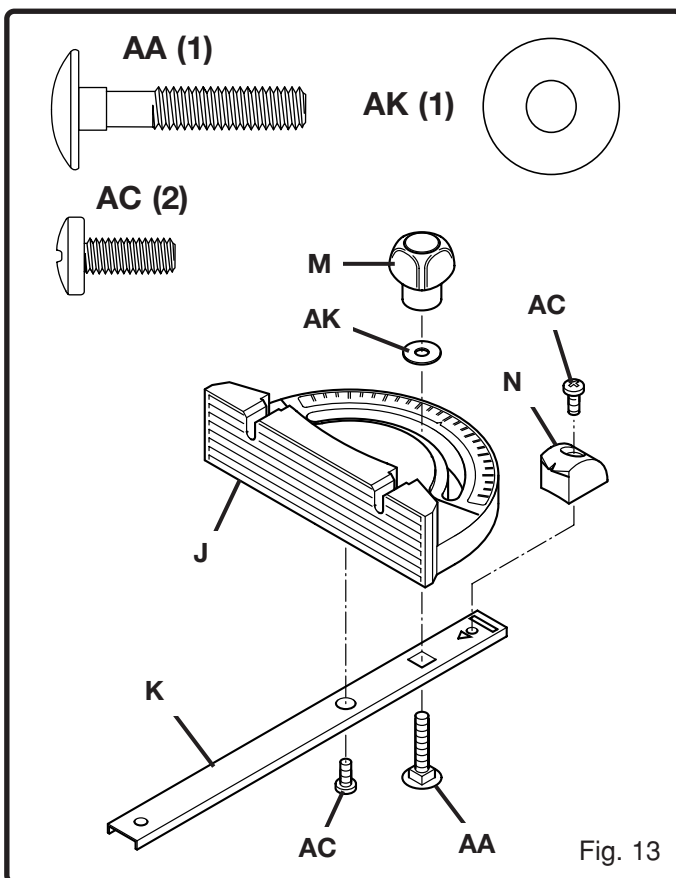


Fig. 13

SECURING THE ROUTER TABLE

⚠ WARNING:

DO NOT use the router table unless it is firmly mounted to a stable work surface. Failure to securely mount the router table could lead to serious personal injury and/or property damage.

See Figure 14

- Secure router table to the work surface using wood screws or sheet metal screws and washers (not provided) through the holes in the legs or use a one hand bar clamp to clamp the leg to the work surface.

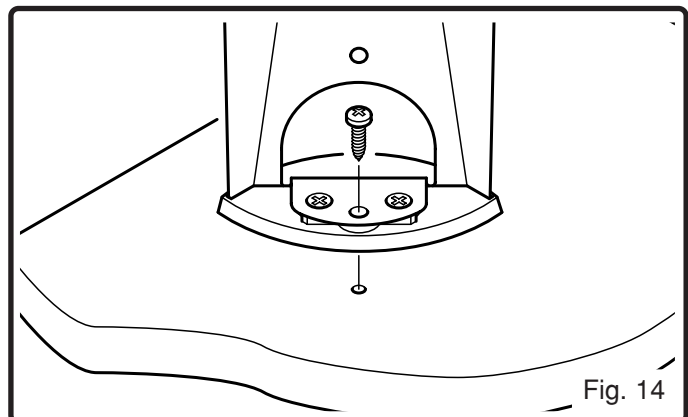


Fig. 14

MOUNTING THE ROUTER

⚠ WARNING:

Always unplug router and remove router bits before mounting to router table. Remove the fence, the insert, the featherboards and the miter guide from the tabletop before mounting the router.

There are two methods for attaching routers to router table. The table will accept routers with bases up to 7" in diameter. See chart below to determine whether your router will mount directly to the table (**Method I.**) It is also possible to attach the router to router table with the clamping system (**Method II.**)

Brand	Model #	Adapter hole pattern
Ryobi®	R160K, R160V R161K, R161KT R162K, R165 R180, R180PL R1801M	A/AB
Porter Cable®	690, 691 693LRPK 694VK, 892 893PK, 895PK 1001, 8931 9690LR	D
Milwaukee®	26941 5615-21 5616-21 5619-20	D
Hitachi®	KM12VC	D
Black & Decker®	7612	F
DeWalt®	DW 610	F
	DW 616	D
Skil®	1810, 1815 1820, 1823 1825, 1835 1845-02	E

Brand	Model #	Adapter hole pattern
Craftsman®	17504, 17505 17506, 17511 17515, 17528 17533, 26834	E
	27500, 27510 27511	A

Note: F hole pattern present in adapter plate only.

See Figure 15

NOTE: If your router is not one of those listed in the chart above, place the drop in plate on the router base plate and rotate until the holes in the plates are aligned. When the hole patterns line up, the mounting scheme has been identified.

NOTE: For additional mounting with the drop in plate see page 18.

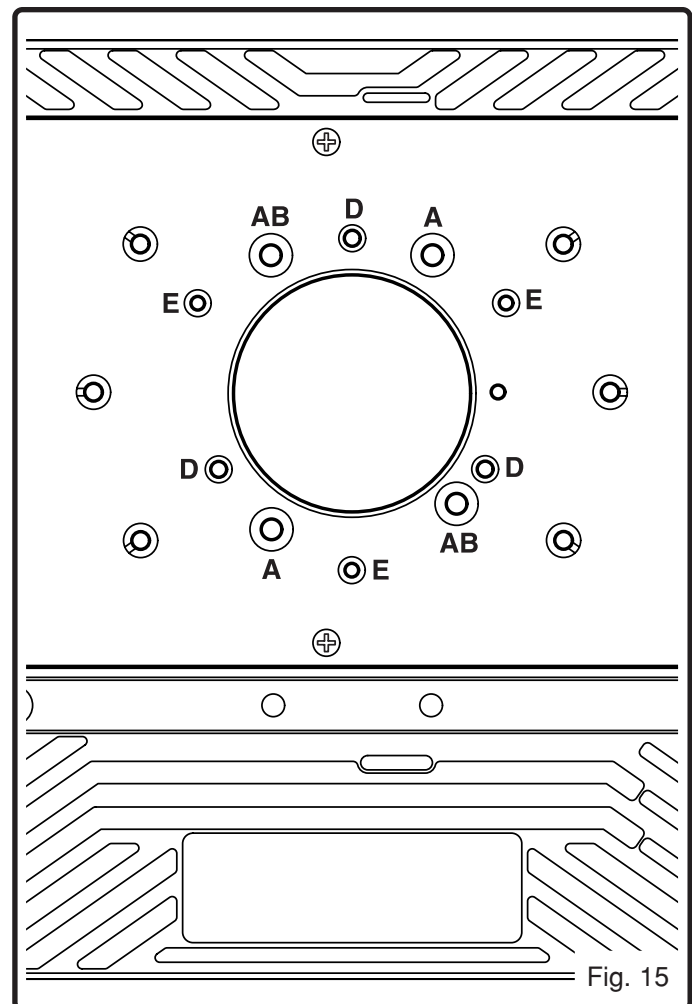


Fig. 15

MOUNTING THE ROUTER

I. Mounting routers directly to the table

Note: Refer to Hole Pattern Chart on page 15 to determine the correct hole pattern for your router.


See Figure 16

1. Remove router base plate from router by removing screws.
2. Loosen knobs and slide fence so that it clears mounting holes
3. While holding router upside down, position it underneath the table so that the center of the router is within the center ring of the tabletop.
4. Rotate router until mounting holes in router base line up with the holes in the tabletop.
5. Insert three machine screws from router base plate through holes in tabletop and into router mounting holes. Tighten securely.
6. **Routers with A and AB hole pattern** use the three countersink screws (**AS**), to attach the router to the table top. For Ryobi routers RE600 and RE601 use three countersink screws (**AT**).
7. To mount Craftsman routers that use the **E-hole pattern** to the table top, use three 10 - 32 x 1/2" countersink screws (not provided).

NOTE: For ease of use, position the router so the ON-OFF switch is accessible from the front of the table.

WARNING:

Make sure the screws from router base plate match the countersinks in the table and are long enough to mount the router securely. Replace if necessary.

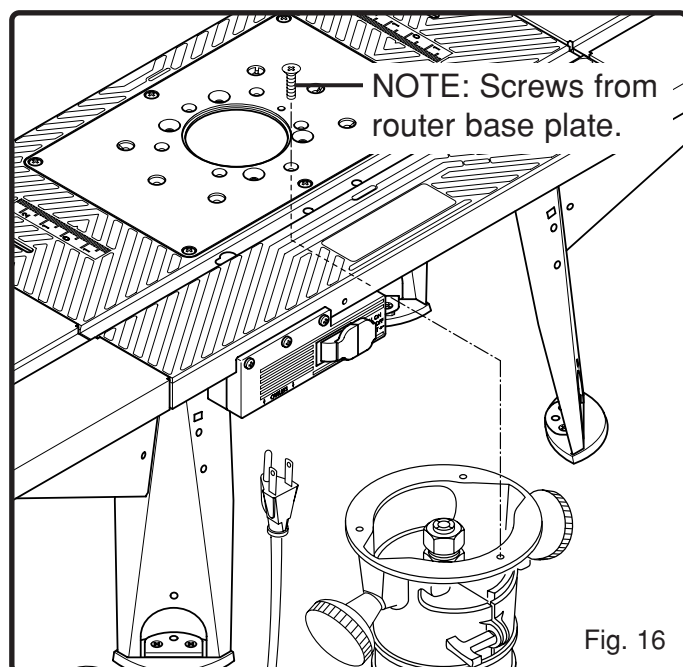

II. Mounting Routers with the universal clamping system

Note: All routers will require using the adapter plate (**U**) and locating pins (**V**) when mounting the router to the router table with the universal clamping system. Refer to Hole Pattern Chart on page 15 to determine the correct hole pattern for your router.


See Figure 17

1. Remove Base plate from router.
2. Place the adapter base plate (**U**) on the router base according to the mounting hole position chart on page 15.
3. Use screws removed from the router base plate to attach the adapter base plate to the router base. Tighten securely.

WARNING:

Make sure screws from router base plate match the countersinks in the adapter plate and are long enough to attach the base plate securely. Replace if necessary.


4. Routers with A and AB hole pattern use three countersink 5/16" - 18 X 3/4" screws (**AS**), to attach the adapter plate (**U**) to the router. For Ryobi routers RE600 and RE601 use three M 8 x 20 countersink screws (**AT**).
5. To mount Craftsman routers that use the **E-hole pattern** to the adapter plate (**U**), three 10 - 32 x 1/2" countersink screws are required (not provided).

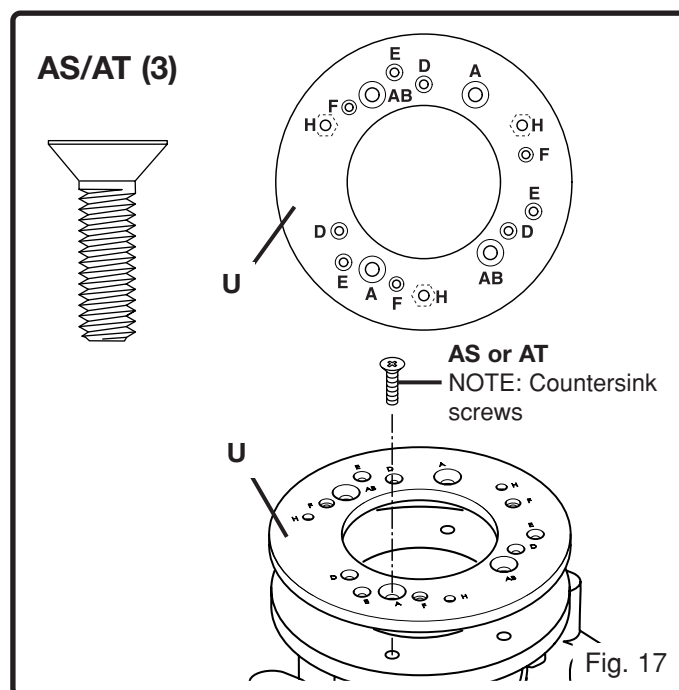

MOUNTING THE ROUTER


See Figure 18

6. Screw the three locating pins (**V**) into nuts on adapter plate from top side at hole position **H**.

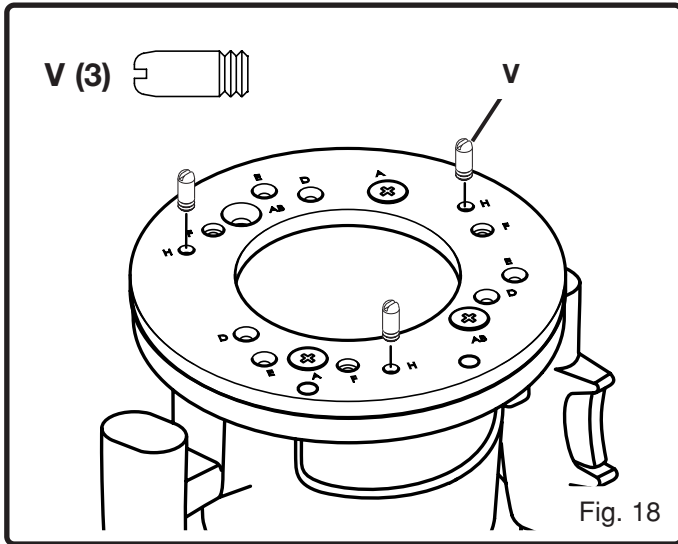


See Figure 20

8. Turn the router table upside-down. Align the three locating pins in the bottom of the table top as shown.

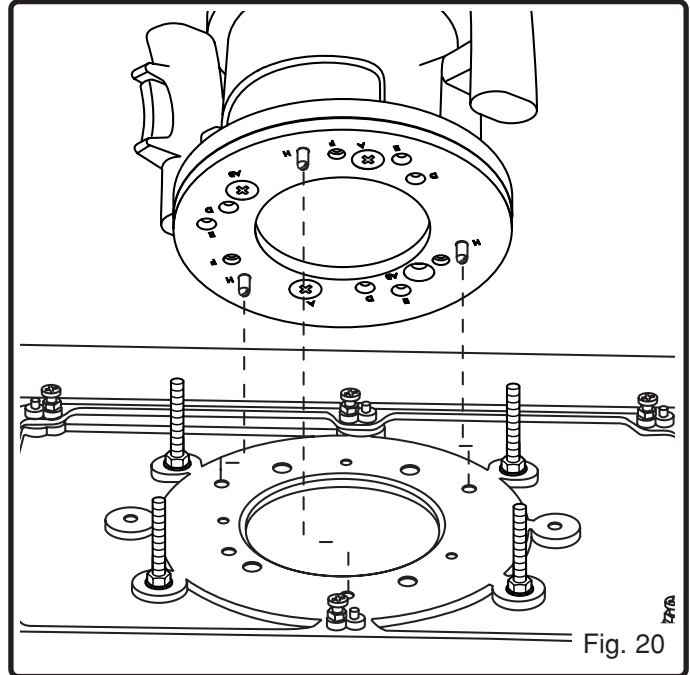


See Figure 19

7. Insert the 4 countersink screws (**AB**) through holes in table top. Tighten securely with the 4 hex nuts (**AQ**) placing the 4 washer (**AL**) between the nuts (**AQ**) and the tabletop. Use an adjustable wrench or a combination wrench (size 10 mm) to tighten the nuts.

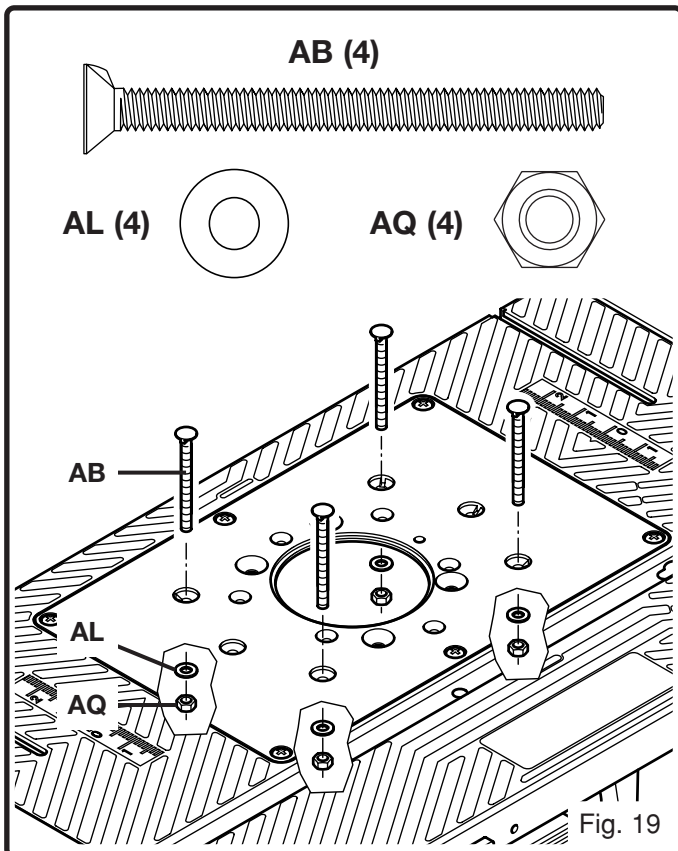

See Figure 21

9. Place clamp (**T**), swivel piece (**S**), washer (**AK**), and knob (**M**) on screw (**AB**) as shown. Leave assembly loose to allow clamp to be adjusted. Repeat the above procedures for the 3 remaining clamps.

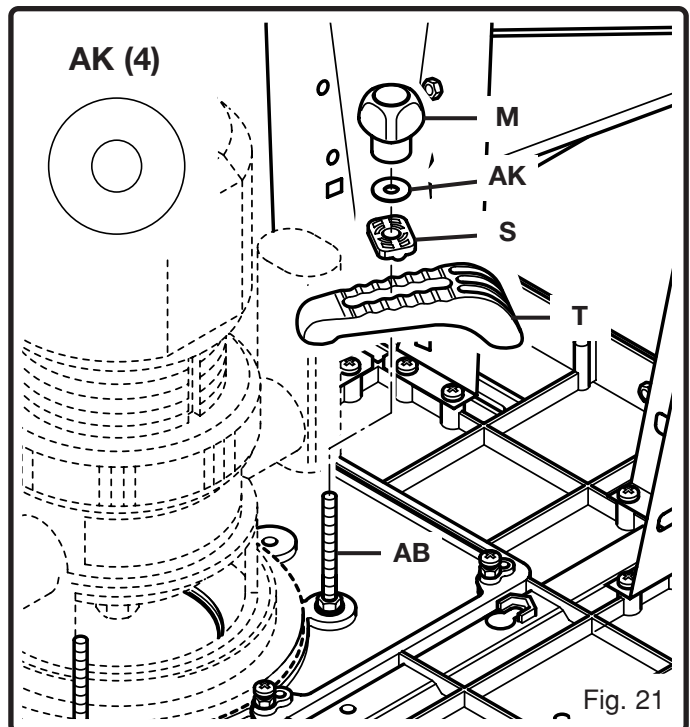

MOUNTING THE ROUTER

See Figure 22


10. Position all 4 clamps on the adapter plate and tighten securely with the 4 knobs.

11. Place the router table on its legs.

NOTE: Use a minimum of 3 clamps to secure the router to the table.

NOTE: Routers larger than 2Hp should be mounted directly to the table top with mounting screws as described on page 16.

NOTE: To remove the router when using the universal clamping system, it may be necessary to disassemble one or more of the clamps that secure the router to the table top.

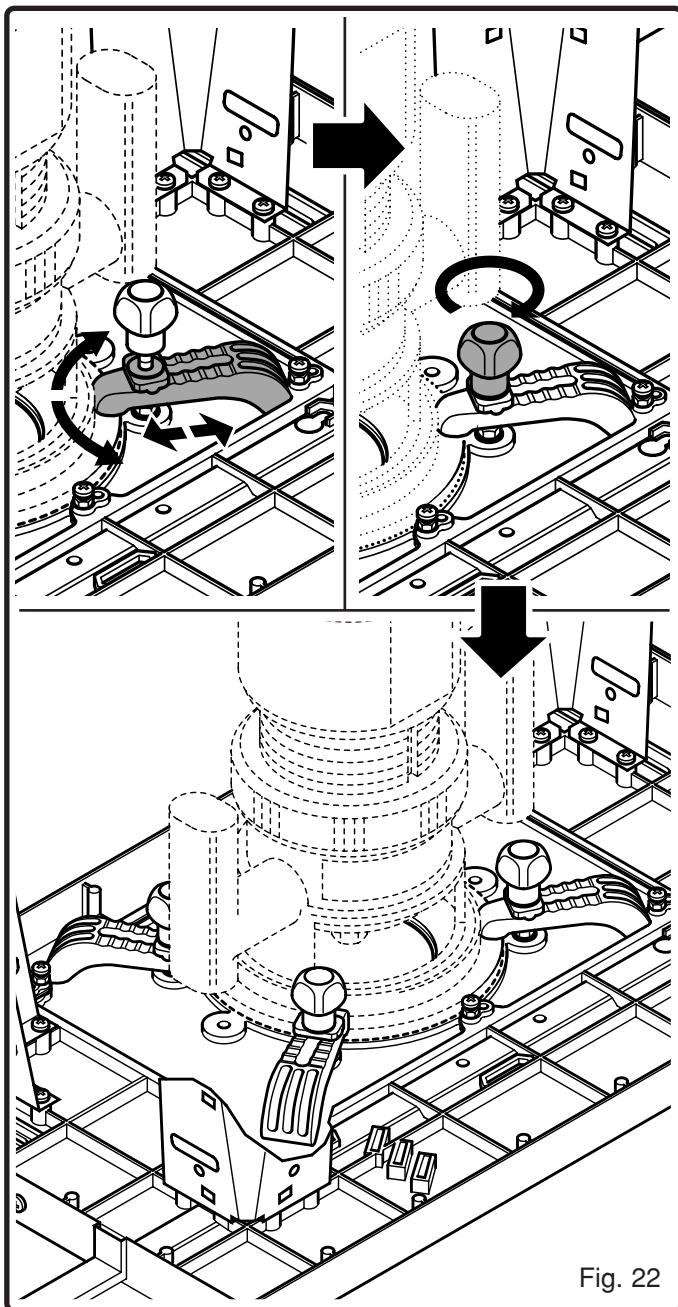


Remove and replace the drop in plate

See Figure 23

Remove and replace the drop in plate in tabletop as follows:

1. Loosen the 6 pan head screws from the top of the drop in plate.
2. Align the drop in plate with the 6 adjustment pan head screws so that it is flush with the upper edge of the tabletop. Next tighten the locking nuts. For this adjustment use an adjustable wrench or a combination wrench (size 10 mm).
3. Replace the 6 pan head screws in the drop in plate and tighten securely. Use a #2 Phillips screwdriver to keep from stripping the screw heads.

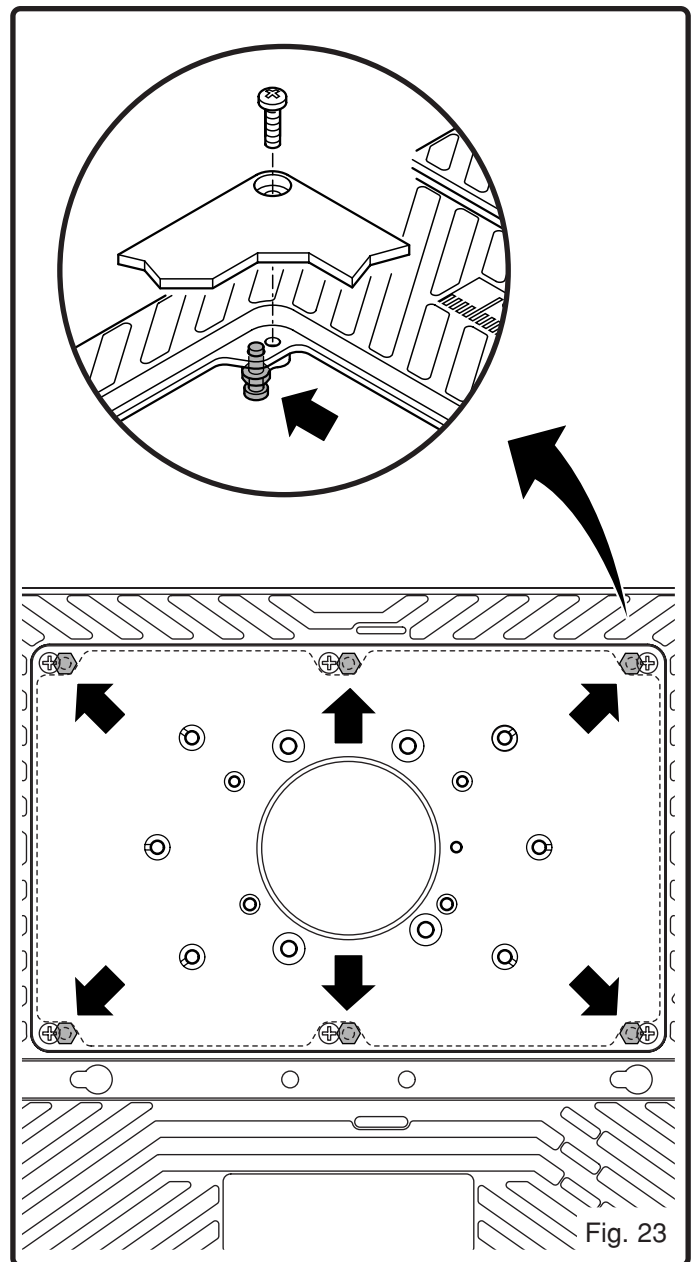

SWITCH BOX

Introduction

See Figure 24

A conveniently located Switch Box allows the operator to:

- turn the router ON and OFF from the front of the table
- simultaneously operate other devices such as a light or a vacuum

It also features a resettable, internal circuit breaker that protects your equipment against overloads.

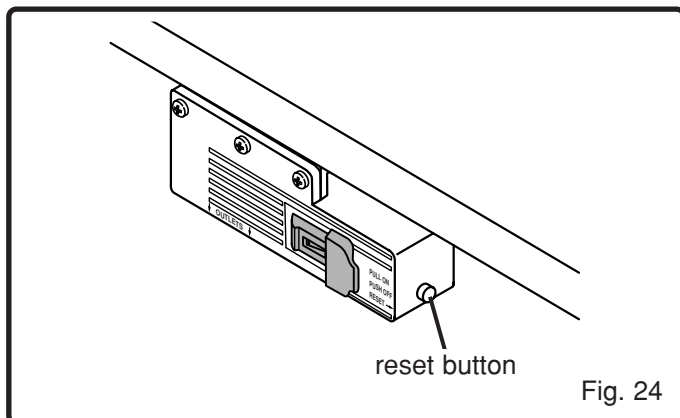


Fig. 24

Electrical Hookup

See Figure 25

Proper grounding diverts potentially dangerous electricity away from the operator. The switch box is intended for use with a three-prong, grounded outlet. The switch box's electrical cord features an equipment-grounding connector and a grounding plug. Insert the plug into an accommodating outlet that conforms to all local electrical codes and the National Electric Code (NEC).

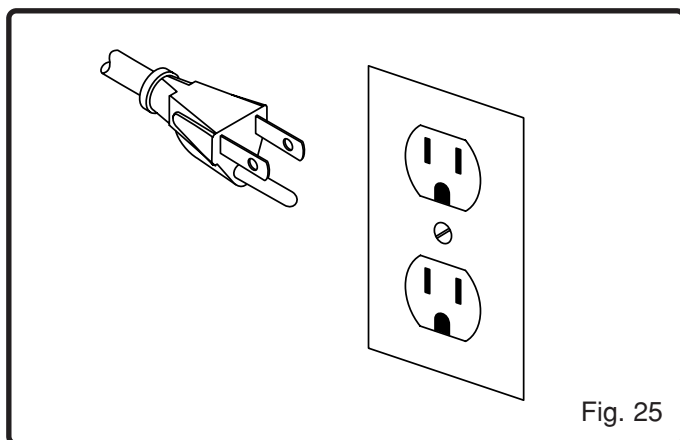


Fig. 25

WARNING:

DO NOT MODIFY THE PLUG

If it does not fit correctly, a qualified electrician must install a compatible outlet.

WARNING:

AVOID THE RISK OF ELECTRICAL SHOCK

NEVER connect the equipment grounding connector (green wire) to a "hot" electrical terminal. When repairing or replacing the electric plug or cord, DO NOT connect the grounding connector to a "hot" electrical terminal.

Consult a qualified electrician if you do not understand the grounding procedures or if you are not sure whether the switch box is correctly grounded.

REPLACE DAMAGED CORDS

Damaged and/or worn cords must be repaired or replaced immediately.

Extension cords must be three-wire, 14 gauge or larger (maximum 25 foot length), with three-prong "male" plugs, and three hole "female" receptacles fabricated to accept the tool's plug. The electrical outlets on the bottom of the switch box accept three-prong grounded plugs and the two-prong plugs of double insulated tools.

If a correctly grounded outlet is unavailable, use a temporary adapter to connect the switch box's three-prong plug to a two-hole receptacle. Make use of the temporary adapter only until a qualified electrician installs a correctly grounded, three-prong outlet. The green rigid lug or grounding wire MUST connect to the ground on the outlet. See Figure 26

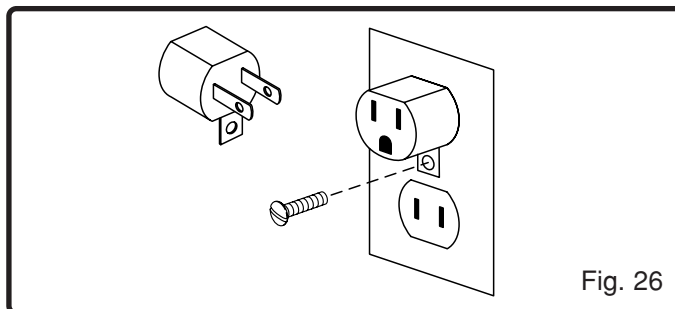


Fig. 26

WARNING:

RISK OF ELECTRIC SHOCK

DO NOT touch prongs when inserting or removing plug from outlet. Improper grounding can produce potentially hazardous electrical discharges that can, in turn, cause serious injury or death - especially in wet conditions, such as a basement, outside, or near plumbing.

DO NOT attach a 3-way plug or any other adapter to outlets on bottom of switch box.

Only use the switch box when it is properly assembled to the router table AND when the router is properly attached to the router table.

SWITCH BOX

Switch Box Familiarization


The purpose of this section is to familiarize the user with the operation of the switch box BEFORE the router is plugged in.

⚠ WARNING:

DO NOT plug the router in at this time. A live switch will start the router and an unprepared user could be seriously injured.

See Figure 27

The switch box also features a safety key that prevents tools plugged into the switch box from being turned ON inadvertently. Removal of the safety key disables the switch box by locking the switch in the OFF position. Strike the switch paddle with your hand to turn the router OFF in an emergency situation. Please note paddle switch positions and reset button at this time.

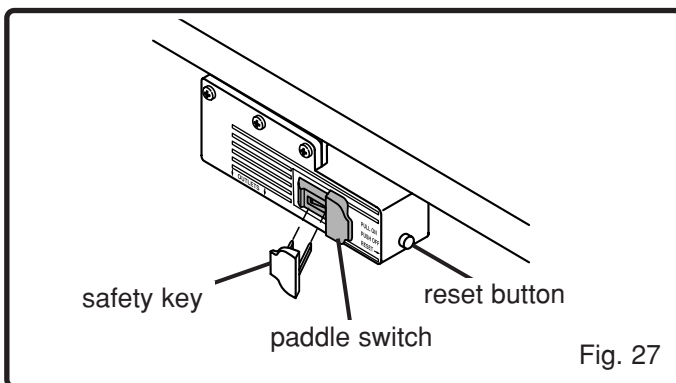

Operation of Switch Box and Router

Make sure router switch is OFF and switch box is OFF BEFORE proceeding.

1. Insert the yellow safety key into the switch box.
2. Position router power switch to ON.

NOTE: If your router requires the use of the switch trigger and "Lock-On" button, refer to your Router Owner's Manual for operating instructions.

3. Insert finger under paddle and pull switch to ON position.
4. To turn router OFF, push paddle down.

⚠ WARNING:

Router bit must come to a complete stop before leaving router table unattended.

5. Lock switch to OFF position by removing key from switch box.

For Routers With "LOCK-ON" Feature

The "LOCK-ON" feature will not permit the router to be turned ON by the switch box, but it can be turned OFF by the switch box. Operate as follows:

1. Place the switch box to ON as pre-viously described. The router should NOT start even though the trigger lock is in the "LOCK-ON" position. Refer to your Router Owner's Manual.
2. To start router, depress trigger and engage "LOCK-ON" button. Router should start.

NOTE: The router will not start if the router switch is already in the "LOCK-ON" position. In this case, unlock the trigger, depress the trigger to start the router, then re-engage the "LOCK-ON" button.

3. To turn router OFF, push switch paddle down.

Circuit Breaker

If an overload occurs, the circuit breaker inside the switch box trips and interrupts power to the router and any accessories. If this happens:

1. Unplug the power cord.
2. Remove the workpiece from the router bit and table.
3. Find the cause of the overload and correct.
4. Push the reset button to reset it.

See Figure 27.

5. Plug in power cord.
6. Follow instructions under Operation of Switch Box and Router to reset router.

⚠ WARNING:

When router table is not in use, always:

1. Place the switch box in OFF position and remove the safety key.
2. Place router power switch in OFF position.
3. Unplug switch box from wall outlet.
4. Remove router bit.
5. Make sure router collet assembly is below router table.
6. Remove and place safety key in a secure location. Remember where you place the safety key.

⚠ WARNING:

If breaker trips, or the router stalls, or if the power fails for any other reason, place the switch box in the OFF position, remove the safety key, and unplug the switch box from the wall outlet.


OPERATION

Assemble and using the Inserts

See Figure 28

Inserts help reduce the amount of wood chips and dust that can accumulate on the router table. They can also add stability to the work piece.

Four inserts come with your router table. Three of the inserts are for use with a specific size bit (refer to the following chart). Insert (W), with the small hole, is only used for mounting the router with the centering pin.

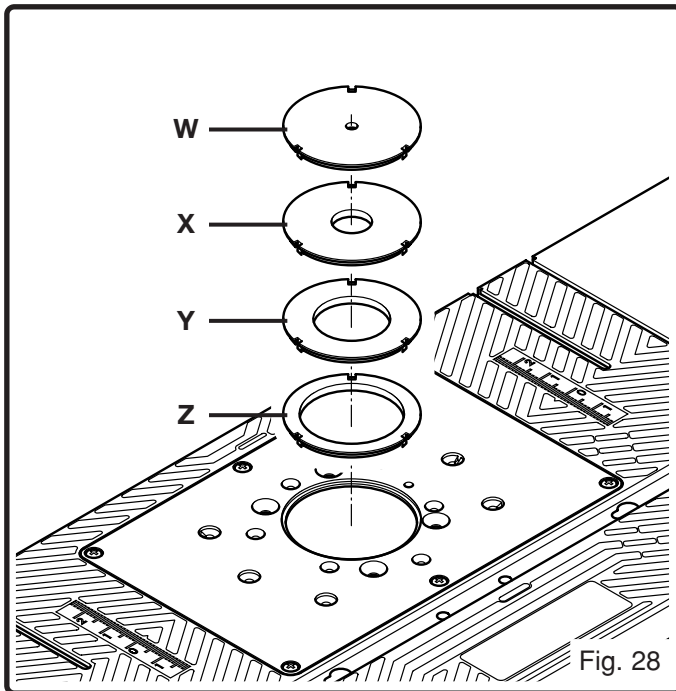

Diameter of insert	Diameter of router bit to be used	Figure 28 Reference
1-1/8"	1"	X
2-1/8"	2"	Y
2-7/8"	2-3/4"	Z

⚠ WARNING:

Do not use a router bit with a diameter greater than 3-1/2". Consult your router manual for the maximum size of router bit allowable.

⚠ WARNING:

Before removing insert, switch box must be in OFF position, router switch must be in OFF position and power cord must be unplugged from outlet.

Insert Use

1. Select correct insert for the router bit and your application.
2. To assemble to router table, press the insert into the hole in the table, applying pressure to all sides equally. This assures that insert snaps into place.
3. Remove an insert by placing your finger into the hole in the center. With light pressure, pull up on the insert.

NOTE: Remove the router bit from the router before attempting to remove an insert.

Using fence


See Figure 29

To position the fence on tabletop:

1. Place the fence on the tabletop.
2. Loosen the 2 knobs (L).
3. Slide the fence into the required position.

NOTE: Fence should always be parallel with the frontside of the table.

4. Tighten the knobs (L) by turning clockwise.

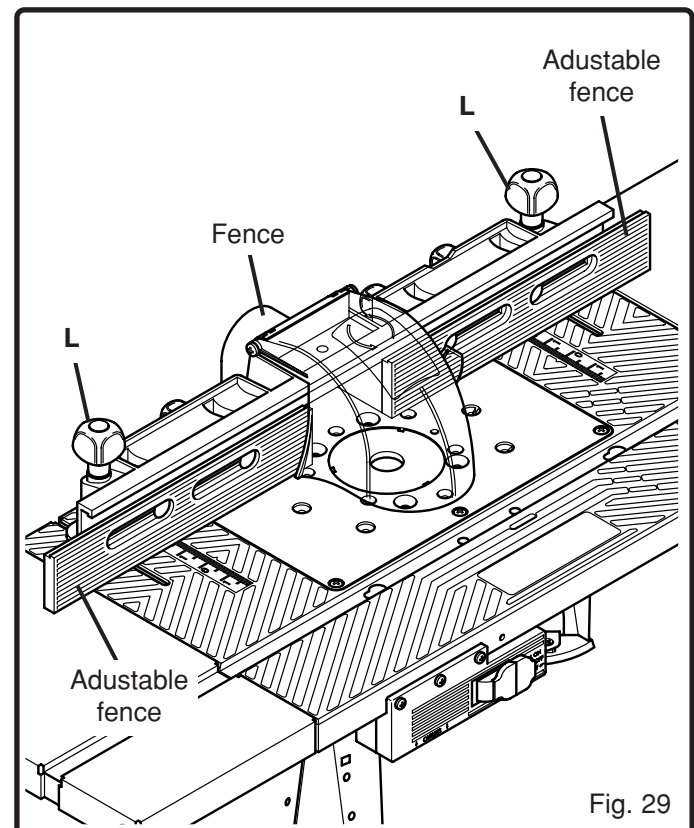

⚠ CAUTION:

Make sure that the 4 knobs (connected to the 2 adjustable fences) are securely tightened.

OPERATION

Using your router/router table

⚠ WARNING:

Before you start work with your new router table, refer to your router owner's manual to see how the height of the cut can be adjusted.

⚠ WARNING:

Make sure router is unplugged before starting depth/height adjustments.

NOTE: Using a scrap board that is smooth and true is recommended for making this adjustment.

See Figure 30

1. At the end of the board, use a soft pencil to mark line #1. This indicates the depth of the cut.
2. Then mark line #2, indicating the height of the cut.
3. Place your board so that it is snug against the fence face. The end with lines #1 and #2 should be near the bit.
4. Loosen fence clamping knobs enough so you can move the fence easily. Move fence and board so that the board contacts the outer edge of the router bit at line #1.
5. Tighten fence clamping knobs.
6. Adjust router height so the cutting edge of the bit contacts line #2.
7. Make sure bit is securely tightened in the collet.


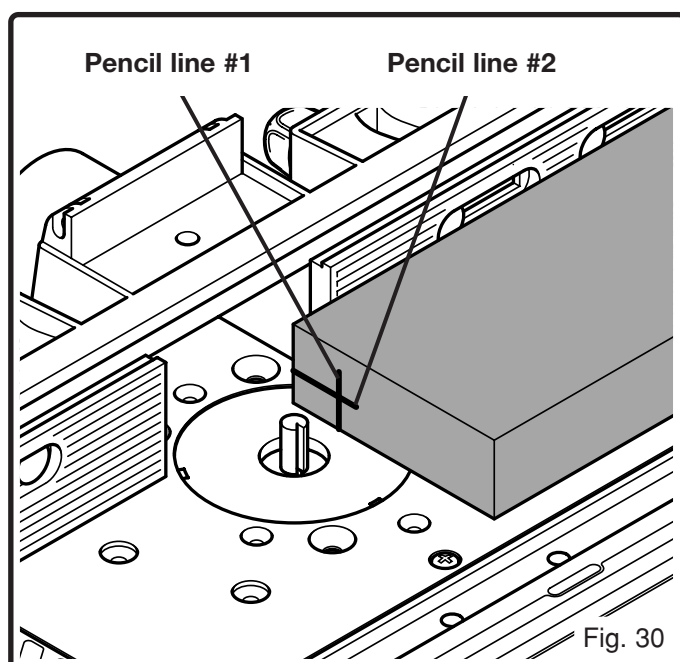


Fig. 30

Using the router for beading and edge cutting

See Figure 31

1. Loosen the knobs that hold the fences in place.
2. Position the fence for the desired cutting depth.

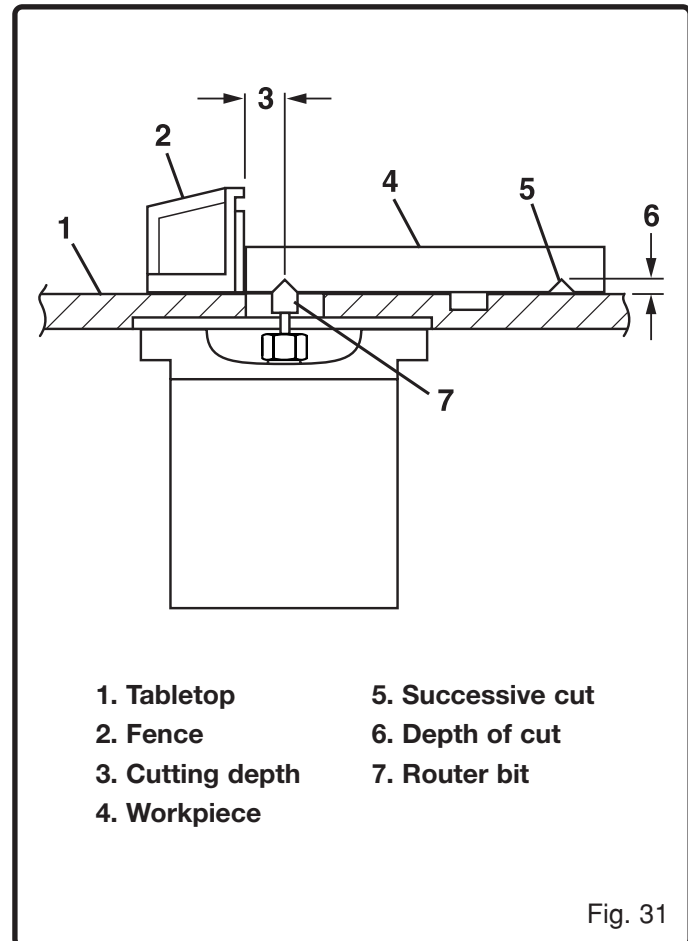

- | | |
|------------------|-------------------|
| 1. Tabletop | 5. Successive cut |
| 2. Fence | 6. Depth of cut |
| 3. Cutting depth | 7. Router bit |
| 4. Workpiece | |

Fig. 31

3. Tighten the knobs securing the fence in place.
4. Swing the safety shield over the router bit.
5. Your router/router table is now ready to use.

⚠ WARNING:

Feed workpiece against the router bit's direction of rotation. Unplug router prior to changing the bit, modifying settings, or making any other adjustments.

Connecting a Vacuum

A port is provided in the fence which will accept standard 1-1/4" and 2-1/2" vacuum hose connections. It works with most shop vacuums. If the vacuum is plugged into the switch box, it will turn ON and OFF simultaneously with the router.

OPERATION

Using ball-bearing-guided bits; veining, fluting and grooving

⚠ WARNING:

To help reduce the chance of injury, make sure the fence is as close as possible to the ball-bearing-guided bit. Move the fence back **ONLY** enough to permit the pilot to control the depth of cut.

See Figure 32

The edge of the workpiece that slides along fence must be straight and true for best results. (Use scrap to test settings.)

1. With the router bit set at the required depth, place the fence behind the bit at a distance determined by the previous cut. Lower safety shield.
2. Secure both clamping knobs.
3. Slide the workpiece against the fence. Adjust fence for subsequent cuts.

NOTE: For deep work, make progressively deeper cuts until you reach the correct depth. To avoid overloading router, remove waste material as you go.

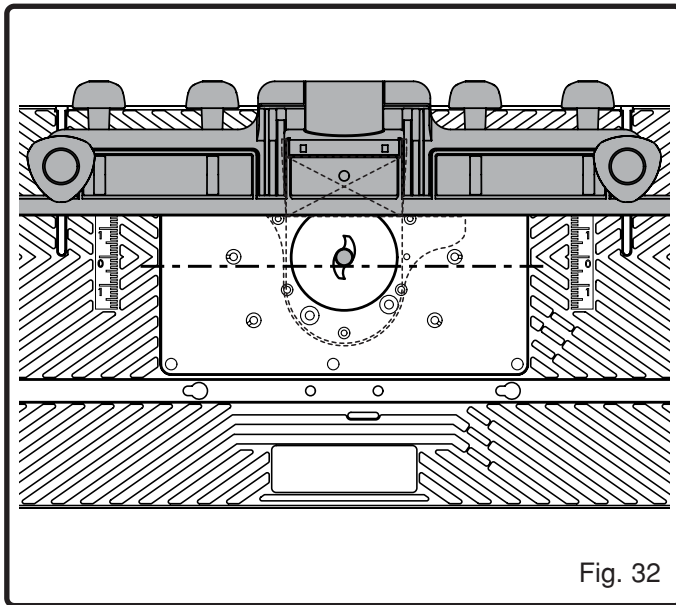


Fig. 32

Using adjustable fences

See Figure 33 and 34

The fence slides can be positioned closer to the router bit to provide better support of the workpiece.

To reposition the fence slides:

1. Loosen the 4 knobs (see Figure 33).
2. Reposition fence slides closer to the router bit. Leave a 3/16" gap (see Figure 34).

3. Tighten the 4 knobs securely (see Figure 33).

NOTE: DO NOT let the fence slides touch the router bit.

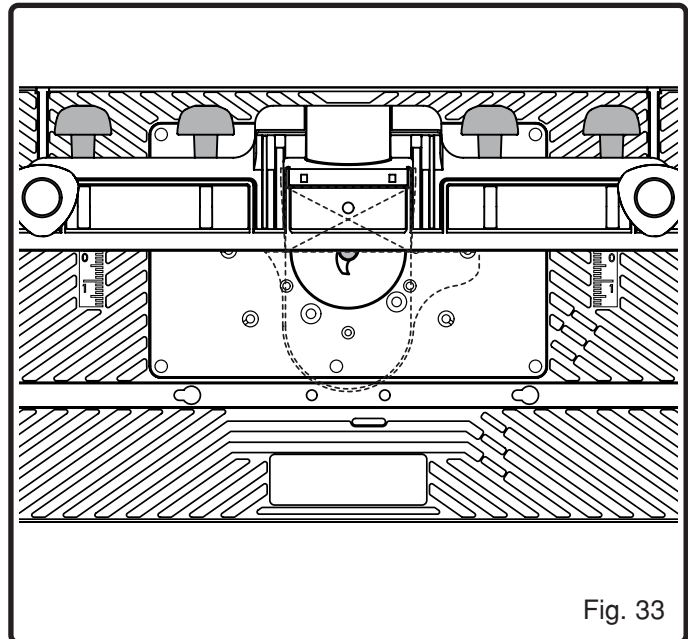


Fig. 33

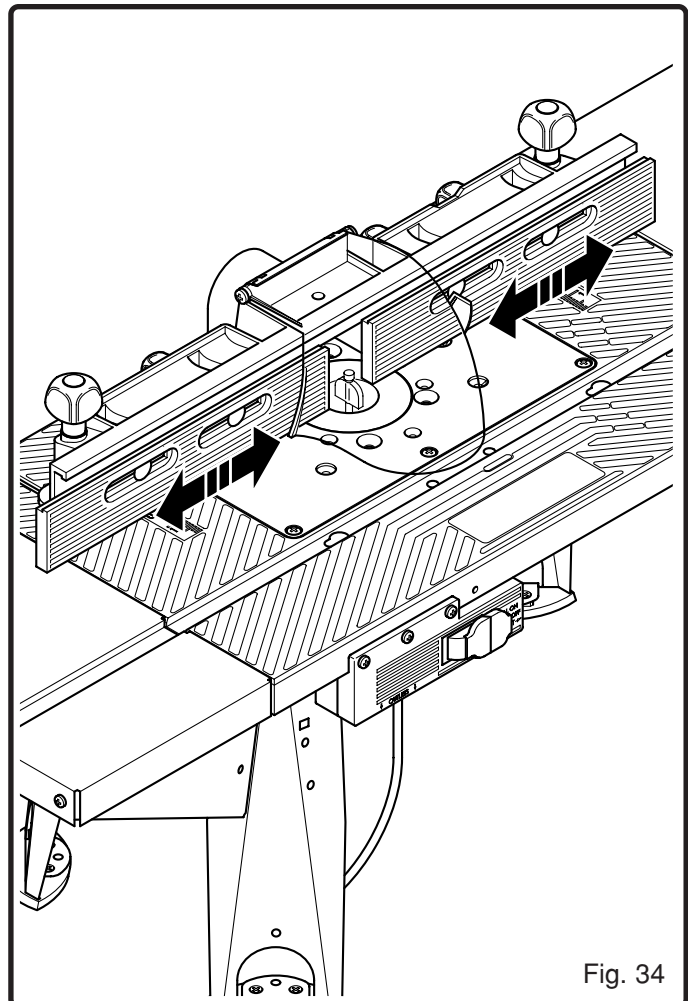


Fig. 34

OPERATION

Routing without safety shield, and/or fence

Some jobs require that you rotate the safety shield out of the way and remove the fence.


⚠ WARNING:

Using the router without the safety shield and fences in place can lead to serious personal injury. Use extreme caution: Operate the router without safety shields and fences ONLY when absolutely necessary, and with ballbearing-guided-type router bits.

Inside routing

See Figure 35


1. Place your workpiece on the tabletop relative to the router bit.
2. Feed your workpiece through the bit in the direction of the arrow. Always feed against the router bit's direction of rotation.

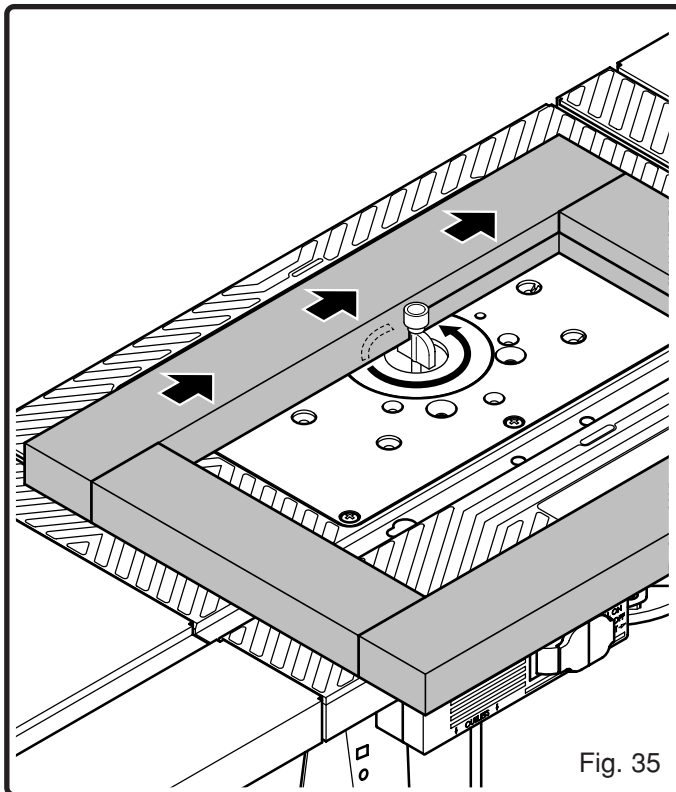

Outside routing

See Figure 36


1. Place your workpiece on the tabletop relative to the router bit.
2. Feed your workpiece through the bit in the direction of the arrow. Always feed against the router bit's direction of rotation.

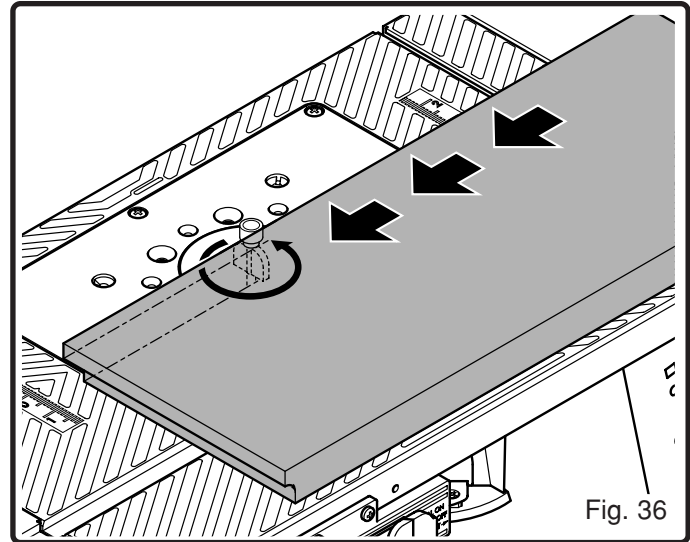

Routing irregular workpieces

See Figure 37 and 38


1. Use the allen screw (AH) and thread into the hole as shown in the detail. Use an allen key (size 5 mm) to tighten the screw.
2. Position the workpiece against the allen screw, but clear of the router bit. Turn on router and slowly advance the workpiece toward the bit until it touches the ball-bearing guide and the bit begins to cut wood. Feed workpiece against the rotation of the bit.

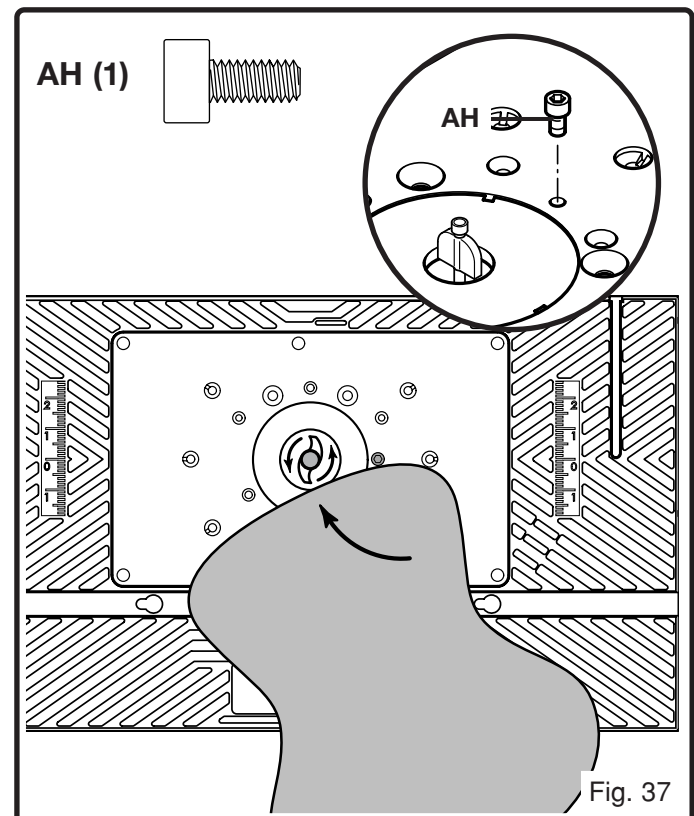

OPERATION

See Figure 38

3. Drawing the workpiece along the allen screw, (from right to left, in front of the router), feed it through the bit, at the same time pressing it against the ball-bearing guide until the cut is complete.
4. When the cut is complete, move the workpiece away from the bit, at the same time keeping it in contact with the allen screw, until it clears the router bit completely.
5. Using the switch box, turn off router.

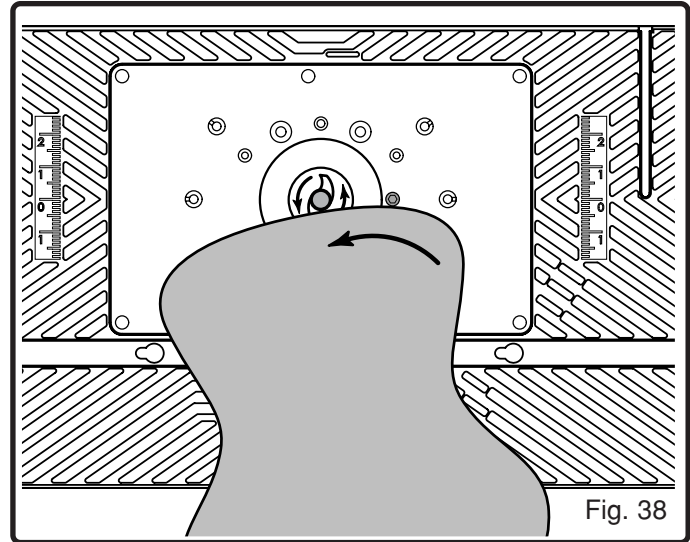

ACCESSORIES

Using miter guide


See Figure 39

The miter guide can serve as extra support for routing small workpieces and for ends of long workpieces.

NOTE: Make sure that the fence and miter bar slot are parallel before cutting.

To cut miters, unclamp knob that secures the protractor head. Turn head up to 60° in either direction. Retighten knob.

When making cuts using the miter guide, hold the workpiece firmly against the fence, the miter guide, and the table.

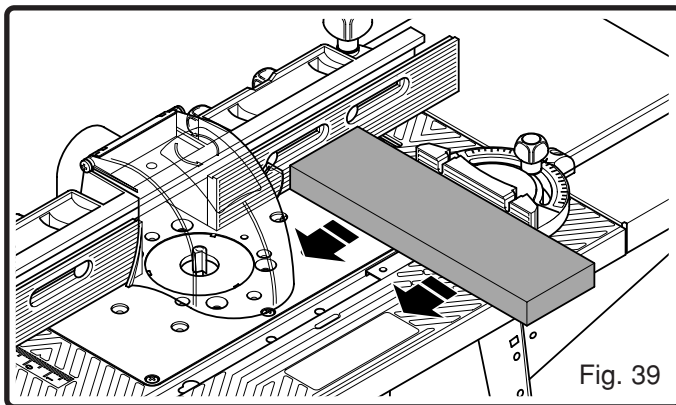

⚠ WARNING:

Do not allow any body part to be in line with the router bit at any time when the miter gauge is in use. Doing so could lead to serious personal injury.


Using featherboards

See Figure 40


The featherboards provide support for the workpiece by holding it securely, which helps minimize chatter and kickback. Refer to page 13 for proper installation.

Insert the 2 featherboards as shown below, with the sliding blocks positioned in the slot of the fence and then securely tighten the knobs.

Insert the third featherboard with the hex head bolt through the key hole slot of miter channel and tighten knob securely.

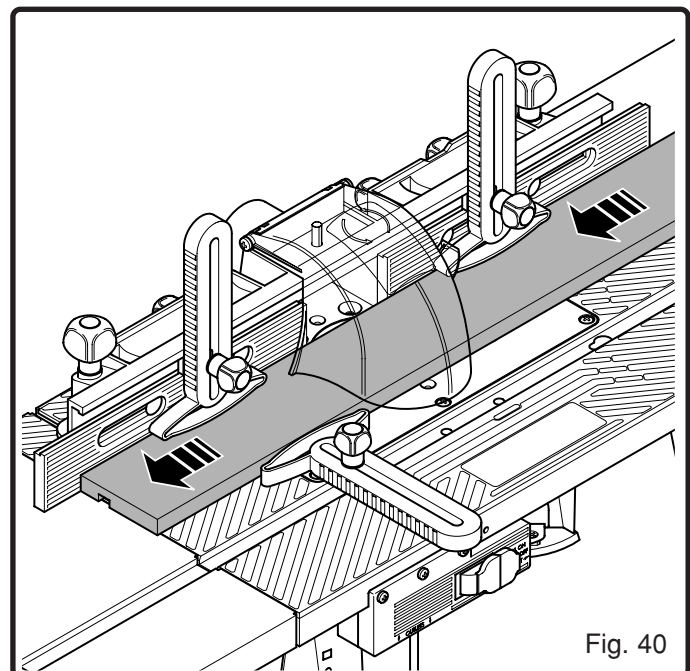

REPAIR PARTS

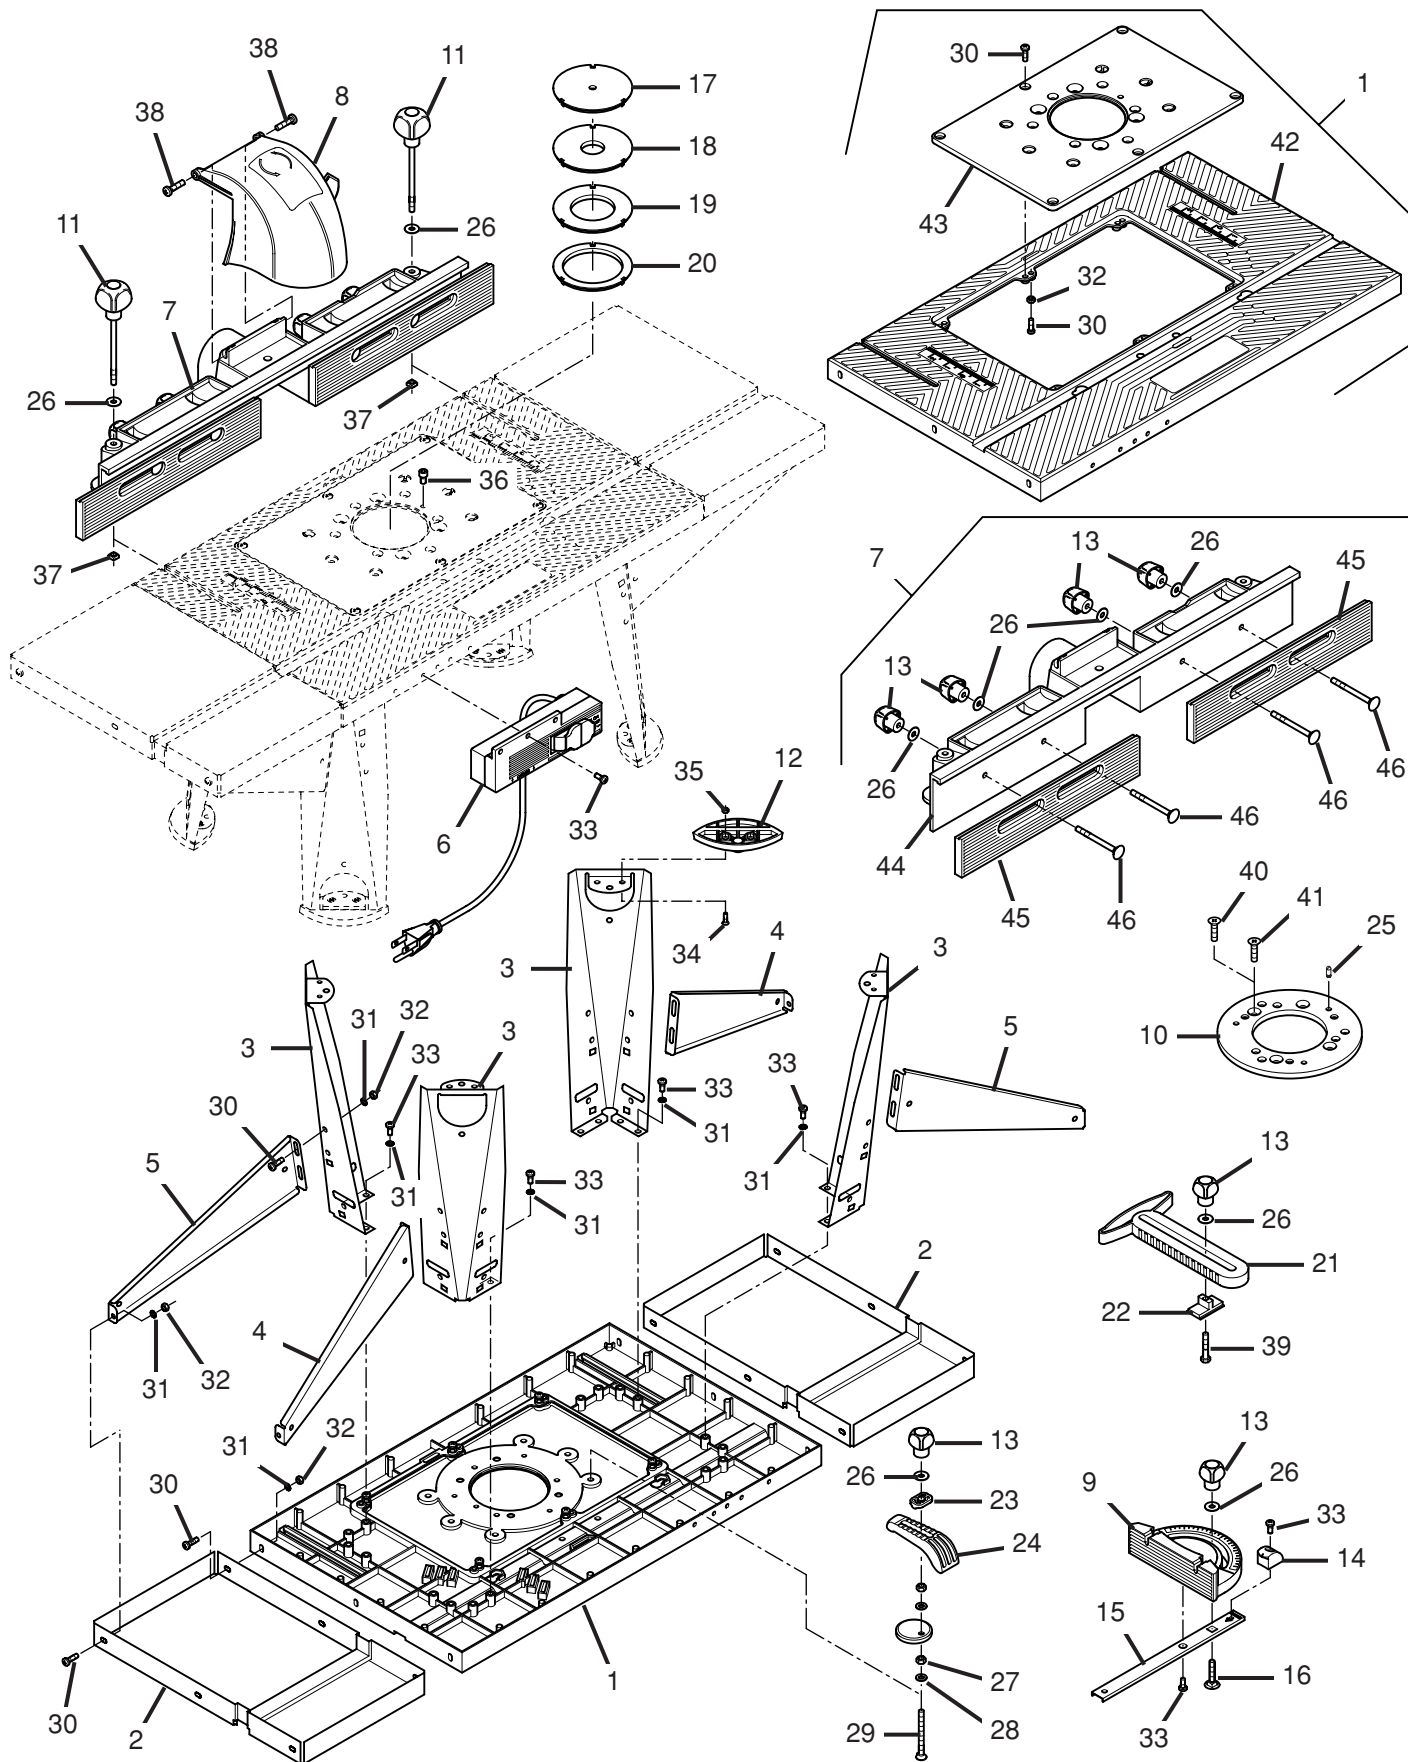

REPAIR PARTS

KEY NO.	ITEM	Part NO.	DESCRIPTION	QTY.
1	C	115980232	Tabletop	1
2	D	117010153	Extension	2
3	G	117020052	Leg	4
4	F	117010061	Leg support, right	2
5	E	117010060	Leg support, left	2
6	H	117920107	Switch box	1
7	B	119900666	Fence	1
8	A	116600681	Safety shield	1
9	J	116310035	Miter guide	1
10	U	119800217	Adapter plate	1
Hardware bag 1		119900173		
11	L	119800162	Knob screw	2
12	P	116600684	Footpad	4
13	M	119800224	Knob	8
14	N	116620424	Miter pointer	1
15	K	117010029	Miter bar	1
16	AA	116700171	Carriage bolt (M6x30)	1
Hardware bag 2		119900175		
17	W	116600710	Insert 1	1
18	X	116600711	Insert 2, small hole	1
19	Y	116610059	Insert 3, medium hole	1
20	Z	116610060	Insert 4, large hole	1
21	Q	116610046	Featherboard	3
22	R	116410139	Sliding block	2
23	S	116610042	Swivel piece	4
24	T	116420119	Clamp	4
Hardware bag 3		119900177		
25	V	116550017	Locating pin	3
26	AK	116700165	Washer (6,4 DIN 9021)	10
27	AQ	116700167	Hex nut (M6)	4
28	AL	116700175	Washer (6,4 DIN 125)	4
29	AB	116700172	Countersink screw with nose (M6x65)	4
30	AD	116700163	Pan head screw (5x16)	18
31	AM	116700183	Toothed washer (5,3 DIN 6797)	34
32	AP	116700164	Hex nut (M5)	18
33	AC	116700176	Self tapping pan head screw (M5x12)	21
34	AJ	116700179	Countersink screw (M4x12)	8
35	AN	116700180	Hex nut (M4)	8
36	AH	116700185	Allen screw (M6x10)	1
37	AR	116700184	Square nut (M6)	2
38	AE	116700177	Pan head screw (M6x25)	2
39	AF	116700178	Hex head bolt (M6x35)	3
40	AS	119900141	Countersink screw (5/16" - 18 x 3/4")	3
41	AT	119900212	Countersink screw (M8x20)	3
Repair parts tabletop (Key No. 1)				
42		116420210	Tabletop	1
43		116420220	Drop in plate	1
30	AD	116700163	Pan head screw (5x16)	12
32	AP	116700164	Hex nut (M5)	6
Repair parts fence (Key No. 7)				
44		116600677	Fence	1
45		116600678	Adjustable fence	2
46		116700166	Carriage bolt (M6x65)	4
13	M	119800224	Knob	4
26	AK	116700165	Washer (6,4 DIN 9021)	4



OPERATOR'S MANUAL

ROUTER TABLE RT601W

- **SERVICE**

Now that you have purchased your tool, should a need ever exist for repair parts or service, simply contact your nearest Ryobi Authorized Service Center. Be sure to provide all pertinent facts when you call or visit. Please call 1-800-525-2579 for your nearest Ryobi Authorized Service Center. You can also check our Web site at www.ryobitools.com for a complete list of Authorized Service Centers.

- **MODEL NO.**

The model number of this product is found on the packaging and the manual.

- **HOW TO ORDER REPAIR PARTS**

WHEN ORDERING REPAIR PARTS,
ALWAYS GIVE THE FOLLOWING INFORMATION:

- MODEL NUMBER RT601W

RYOBI TECHNOLOGIES INC.

1428 Pearman Dairy Road Anderson, SC 29625

Post Office Box 1207 Anderson, SC 29622

www.ryobitools.com

Phone 1-800-525-2579