



If ODU is not connected in the right order, related devices may fail to communicate with each other or the unit may read wrong information. Given this, you need to connect the unit with accurate RF Port and Signal Port in a corresponding number.



For unused RF Ports for ODU expansion, make sure to terminate them using SMA Term.



When you put ODU on the top of BIU, it is recommended to install the unit at least 1U apart from BIU. Heat from BIU climbs up to reach ODU.

5.1.6 Consumption Power of BIU

The table below shows power consumption of BIU:

| Part | Unit | Consumption Power | Remark |
|-------------|------------------------|-------------------|--------|
| Common Part | Shelf | 7.5 W | |
| | MCDU | | |
| | MCPU | | |
| | MPSU | | |
| MDBU | MDBU 800PS | 12W | |
| | MDBU 800PS+900I+Paging | 20W | |
| | MDBU 850C | 12W | |
| | MDBU 850C+700PS | 19W | |
| | MDBU 1900P | 20W | |
| | MDBU AWS-1 | 12W | |

BIU supplies power for ODU. Therefore, when you want to calculate total power consumption of BIU, you need to add power consumption of ODU to the total value.

Power consumption of ODU is given in the later paragraph describing ODU.

5.2 ODU Installation

ODU should be, in any case, put on the top of BIU. This unit gets required power and RF signals from BIU. The following table shows components of ODU:

| No. | Unit | Description | Remark |
|---------------|--------------|----------------------------------|--------------------------|
| Common Part | Shelf | Including Main Board, 19",1U | 1EA |
| | RF Cable | SMA(F) to SMA(F), 400mm | 2EA |
| | Signal Cable | 2Row(15P_F) to 2Row(15P_M),650mm | 1EA |
| Optional Part | DOU | Optical Module with 4 Optic Port | Up to 2EA to be inserted |

5.2.1 ODU Shelf Installation

ODU is a shelf in around 1U size. Its width is 19" and so this unit should be inserted into a 19" Standard Rack. ODU should be, in any case, put on the top of BIU. BIU should be distant around 1U when the unit is installed.

5.2.2 ODU Power Cabling

ODU does not operate independently. The unit should get power from BIU.

When you connect 2-column, 15-pin D-SUB Signal cable from BIU and install DOU, LED on the front panel is lit. Through this LED, you can check state values of LD and PD of DOU.

5.2.3 ODU Optic Cabling

As optical module shelf, ODU makes electronic-optical conversion of TX signals and then makes optical-electronic conversion of RX signals. ODU can be equipped with up to two DOUs. One DOU supports four optical ports and one optical port can be connected with ROU. Optionally, only optical port 4 can be connected with OEU.

As WDM is installed in DOU, the unit can concurrently send and receive two pieces of wavelength (TX:1310nm, RX:1550nm) through one optical core. DOU has SC/APC of optical adaptor type.



Figure 5.4 – Optical cable of SC/APC Type

For optical adaptor, SC/APC type should be used. To prevent the optical access part from being marred with dirt, it should be covered with a cap during move. When devices are connected through optical cables, you need to clear them using alcohol to remove dirt.

5.2.4 Insert DOU to ODU

In an ODU Shelf, up to two DOUs can be installed. DOU module is in Plug in Play type.

When you insert DOU in ODU, insert the unit into the left DOU1 slot first. You can be careful as the number is silk printed at the left.

The following figure shows installation diagram of ODU with one DOU inserted in it.



The following figure shows installation diagram of ODU with two DOUs inserted in it.



When you insert DOU into ODU, insert the unit into the left DOU1 slot first. Into unused slot, you need to insert BLANK UNIT in any case.

5.2.5 Consumption Power of ODU

ODU gets power from BIU. One ODU can be equipped with up to two DOUs. Depending on how many DOUs are installed, power consumption varies. The table below shows power consumption of ODU:

| Part | Unit | Consumption Power | Remark |
|-------|----------|-------------------|--------|
| ODU_4 | DOU 1 EA | 13W | |
| ODU_8 | DOU 2 EA | 26W | |

5.3 ROU Installation

5.3.1 ROU Enclosure installation

ROU is designed to be water- and dirt-proof. The unit has the structure of One-Body enclosure. It satisfies water-proof and quake-proof standards equivalent of NEMA4.

ROU can be mounted into either of a 19" Standard Rack or on a Wall.

Basically, ROU has both of a Wall Mount Bracket and a Rack Mount Bracket.

Depending on the use of the Rack Mount Bracket, the bracket can be removed.

The following shows dimension of the fixing point for the Wall Mount Bracket.



Figure 5.5 – How to install ROU

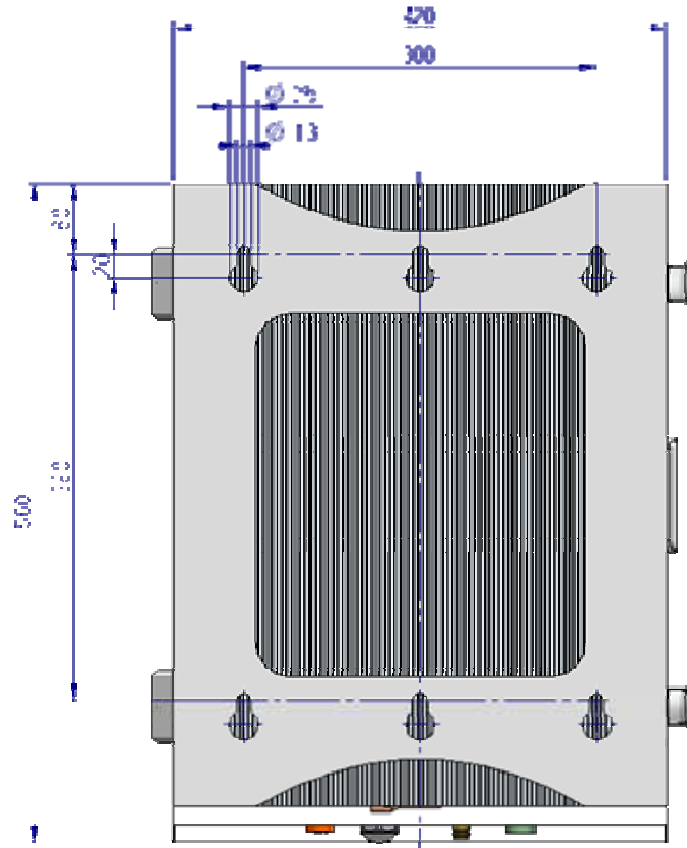



Figure 5.6 – Dimension used to install ROU on the WALL

ROU Wall Mount Installation

Turn M12 Fixing Screws by half on the wall and fully fix the screw with a Wall Mount Bracket on it.

For convenience, the Wall Mount Bracket has fixing holes to let you easily mount an enclosure.

Turn the M5 Wrench Bolt by half at each side of the Heatsink of the enclosure.

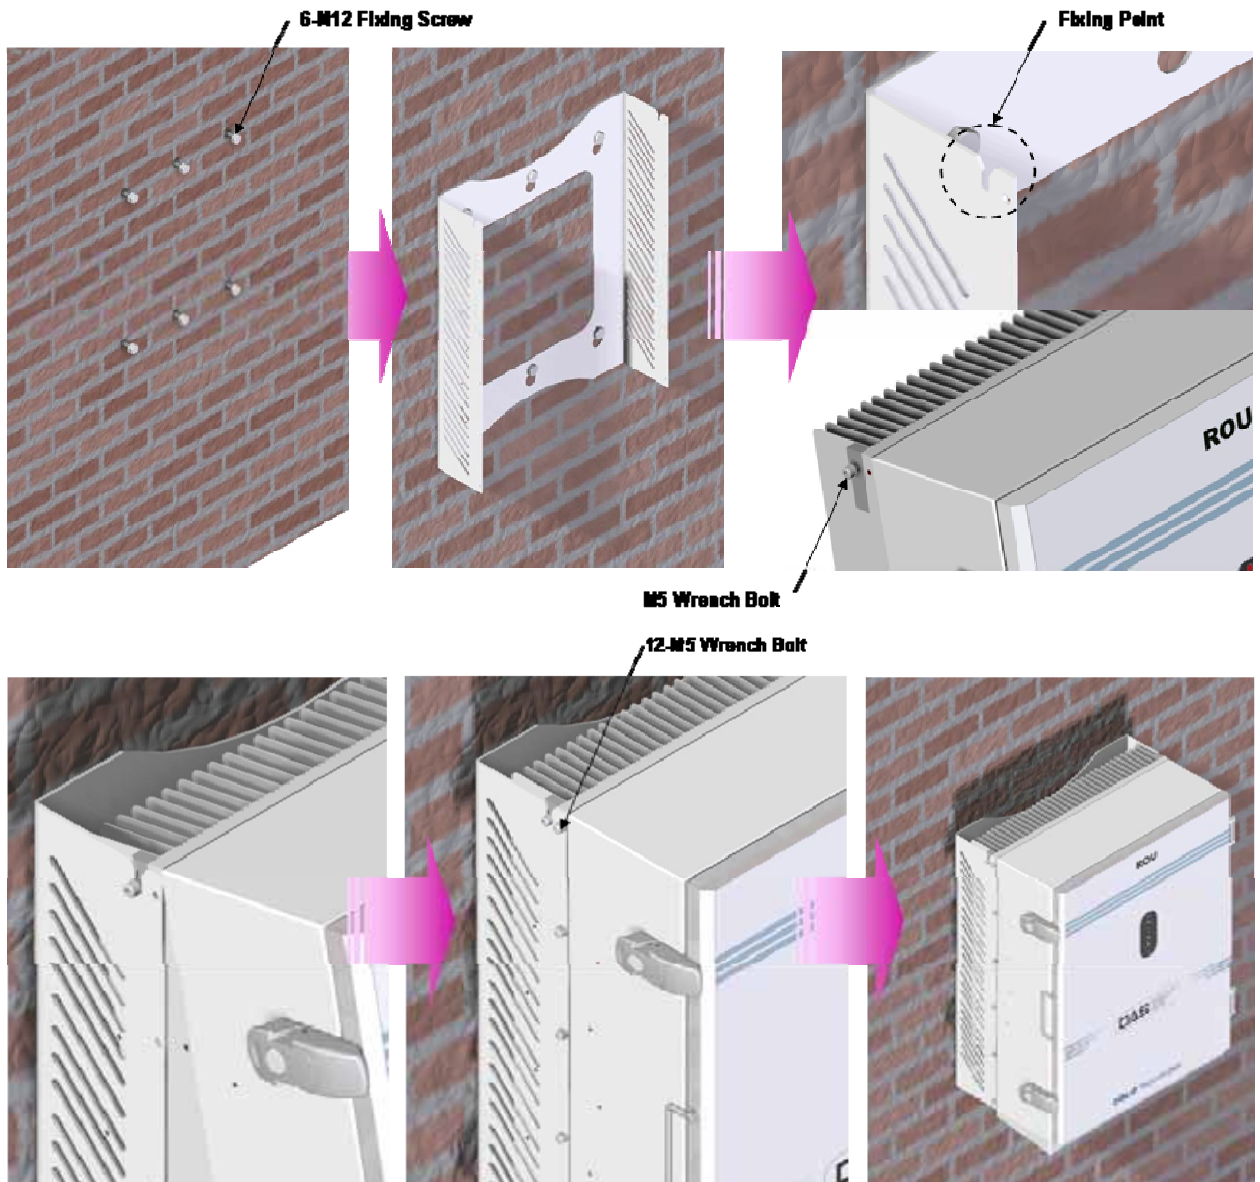


Put the enclosure with the M5 Wrench Bolt fixed on the fixing groove and fix the M5 Wrench Bolts into the remaining fixing holes.

In this case, you will use 12 M5 Wrench Bolts in total except bolts used for the fixing groove.

ROU Rack Mount Installation

Like other units, ROU is designed to be inserted into a rack. The unit occupies around 13U of space except cable connection.

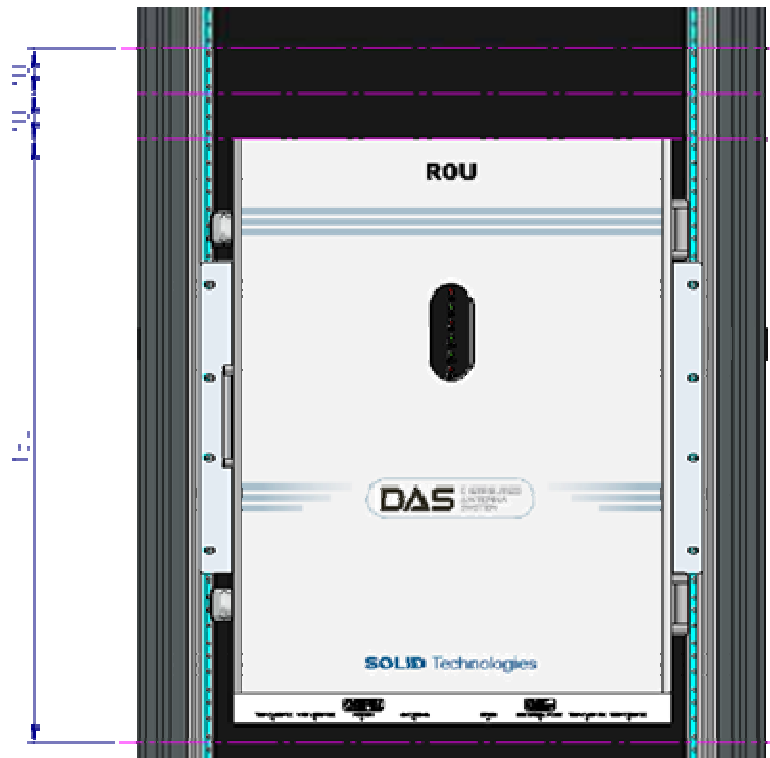

ROU component

ROU has the following components:

| No. | Unit | Description | Remark |
|---------------|--------------|--|--------------------------------|
| Common Part | Enclosure | Including Rack & Wall cradle | 1EA |
| | RCPU | - | 1EA |
| | R_OPTIC | With SC/ACP adaptor | 1EA |
| | RPSU | Alternative DC-48V or AC 120V | 1EA |
| | Multi-Plexer | - | 1EA |
| | Power Cable | - MS Connector with 3 hole to AC 120 plug(AC) - MS Connector with 2 lug termination(DC) | |
| Optional Part | RDU+BPF | 800PS,800PS+900I+Paging,850C,850C+700PS, 1900P+ AWS-1 RDU, VHF+UHF(NO BPF) | Up to 3EA to be inserted |

Basically, the common part of ROU should have an enclosure and it is equipped with RCPU to inquire and control state of each module, R_OPTIC to make both of electronic-optical and optical-electronic conversions, RPSU to supply power for ROU and a Multi-Plexer to help share multiple TX/RX signals through one antenna. It should have Power Cable for external rectifier or to supply required power.

In addition, RDU can be inserted and removed to provide service for desired band (Optional).

5.3.2 ROU Power Cabling


ROU supports both of DC-48V and AC120V of input power. As RPSU for DC-48 and RPSU for AC120V are separated from each other, you need to select one of them in case of purchase order.

RPSU for DC -48V and RSPU for AC 120V have the same configuration and capacity while each of the units uses different input voltage from each other.

The following figure shows configuration of RPSUs for DC -48V and AC 120V.




| MC Connector numbering | Lug Naming | | RPSU Terminal naming | | Remark |
|------------------------|------------|-------|----------------------|--------|--------|
| | AC | DC | AC | DC | |
| A | AC_H | -48V | AC-H | -48V | |
| B | AC_N | GND | AC-N | IN_GND | |
| C | GND | DC NC | FG | FG | |

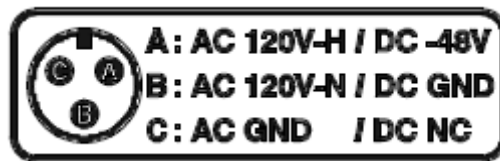

Check if the connection is the same as one seen in the table above and make sure to turn the power ON.

5.3.3 Optical Cabling

ROU makes optical-electronic conversion of TX signals from upper ODU and OEU and makes electronic- optical conversion of RX signals. ROU has one optical module in it. As WDM is installed in the R_OPTIC module, two pieces of wavelength (TX:1310nm, RX:1550nm) can be sent/received with one optical core at the same time. ROU has SC/APC of optical adaptor type. For optical adaptor, SC/APC type can be used. To prevent the optical access part from being marred with dirt, it should be covered with a cap during move. When devices are connected through optical cables, you need to clear them using alcohol to remove dirt.

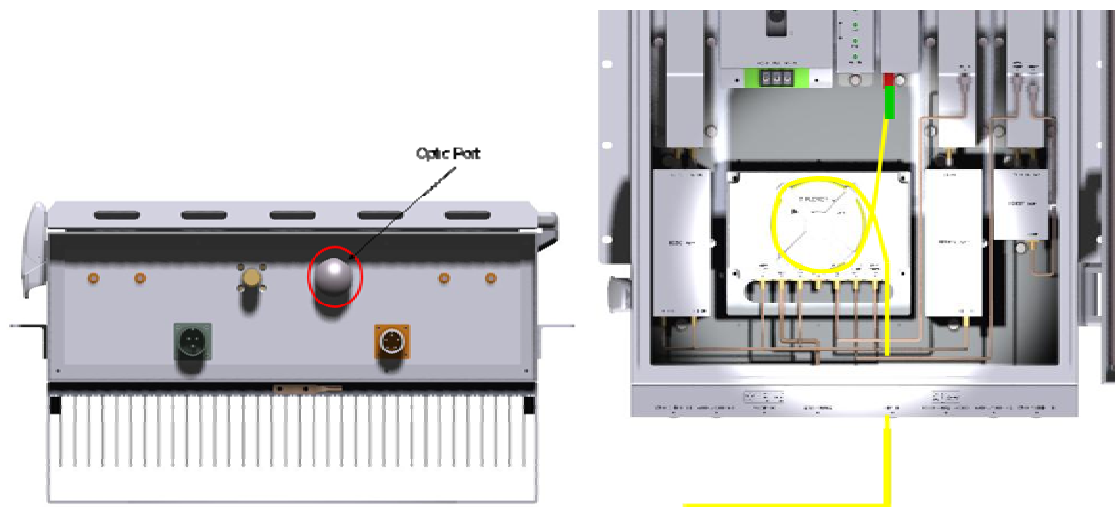

Optical cables should be inserted into Optic Port outside of ROU. Using an optical slack devices in ROU, you need to coil around one or two roll of cables to be connected with the optical adaptor of ROPTIC.

At this time, curvature of the optical cable should be at least 10Ø to prevent insertion loss from being increased.

Through GUI, check if PD value of ROPTIC is in a tolerable range (+4~-1dBm).

5.3.4 Insertion of RDU

ROU has slots to enable up to three RDU modules to be inserted into the unit.

You can insert a RDU into any slot. It is not possible to provide services with a RDU module alone; you need to connect the module with Cavity BPF in any case.

The table below shows types of RDU and CAVITY BPF:

| No | Unit naming | Cavity BPF | RF CABLE | Multiplexer Interface | |
|----|----------------------|----------------------|------------------------------|-----------------------|-----------|
| | | | | TX | RX |
| 1 | RDU 800PS | 800PS BPF | TX CABLE 1EA RX CABLE 1EA | BPF OUT | RDM RX IN |
| 2 | RDU 850C | 850C BPF | TX CABLE 1EA RX CABLE 1EA | BPF TX OUT | BPF RX IN |
| 3 | RDU 1900P+AWS-1 | 1900P DUP | TX/RX CABLE 1EA | RDM AWS+1900P | |
| 5 | RDU 800PS+900I+PA | 800PS+900I+PA BPF | TX CABLE 1EA RX CABLE 1EA | RDM TX OUT | RDM RX IN |
| 6 | RDU 850C+700PS | 850C+700PS BPF | TX CABLE 1EA RX CABLE 1EA | RDM TX OUT | RDM RX IN |
| 7 | RDU VHF+UHF | - | TX CABLE 1EA RX CABLE 1EA | - | - |


The following describes how to install RDU in ROU.

How to install RDU 800PS Ass'y

The following components are required:

| No. | Unit | Description | Remark |
|-----|-------------------|-------------------------|--------|
| 1 | RDU 800PS | RF Module | |
| 2 | 800PS BPF | BPF | |
| 3 | 800PS TX RF CABLE | SMA(M) to SMA(M), 360mm | |

| | | | |
|---|-------------------|-------------------------|--|
| 4 | 800PS RX RF CABLE | SMA(M) to SMA(M), 410mm | |
|---|-------------------|-------------------------|--|

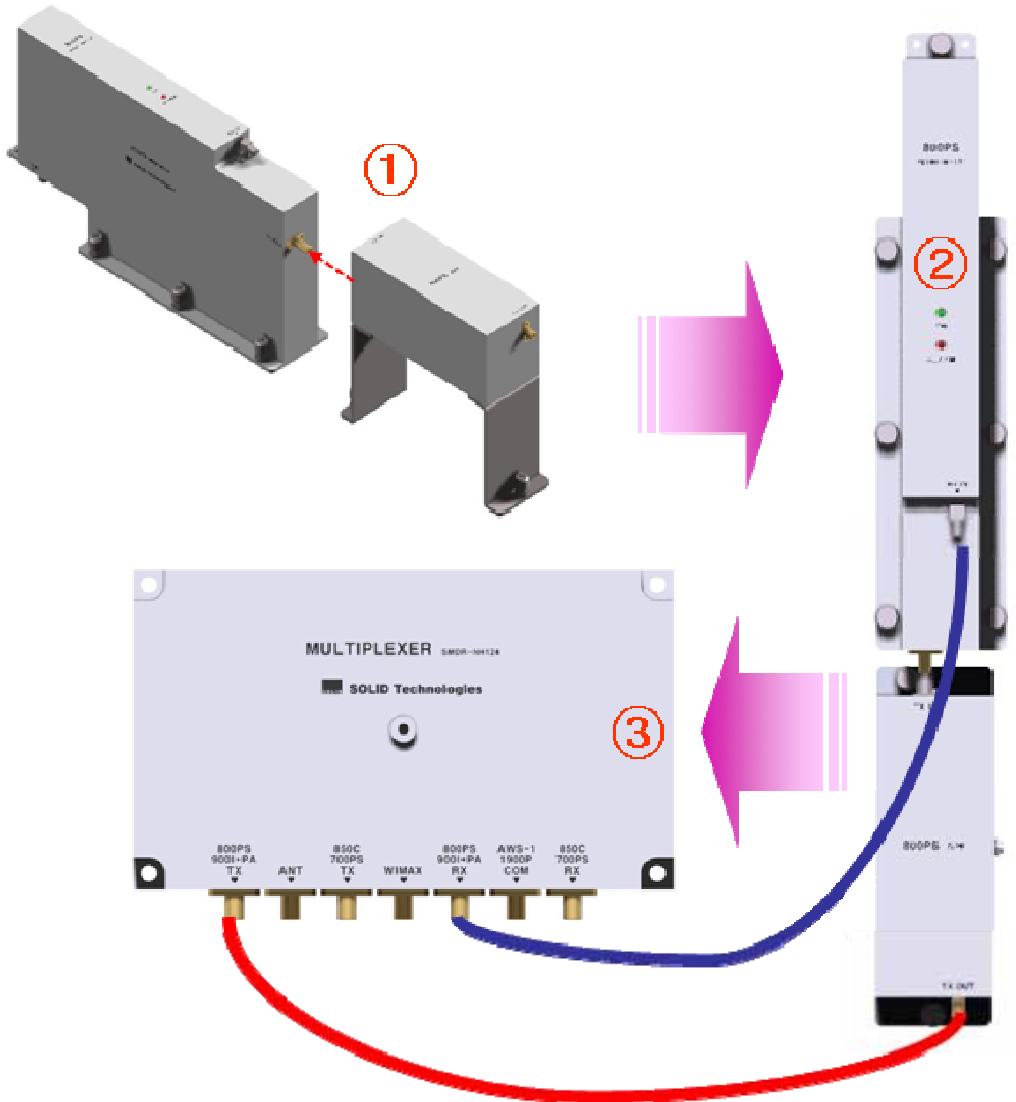

- ① Combine RDU 800PS with 800PS BPF (As it is a plug type, push the unit to combine with BPF.)
- ② Insert the combined 800PS+850C BPF Ass'y into any slot of ROU.
- ③ Combination point of 800PS+800PS BPF Ass'y of the multiplexer


| Multiplexer Port naming | Interface Point | | Remark |
|-------------------------|-----------------|-----------|--------|
| | 800PS RDU | 800PS BPF | |
| 800PS+900I+PA TX | - | TX OUT | |

| | | | |
|------------------|-------|---|--|
| 800PS+900I+PA RX | RX IN | - | |
|------------------|-------|---|--|

How to RDU install 850C Ass'y

The following components are required:

| No. | Unit | Description | Remark |
|-----|------------------|-------------------------|--------|
| 1 | RDU 850C | RF Module | |
| 2 | 850C BPF | BPF | |
| 3 | 850C TX RF CABLE | SMA(M) to SMA(M), 310mm | |
| 4 | 850C RX RF CABLE | SMA(M) to SMA(M), 310mm | |

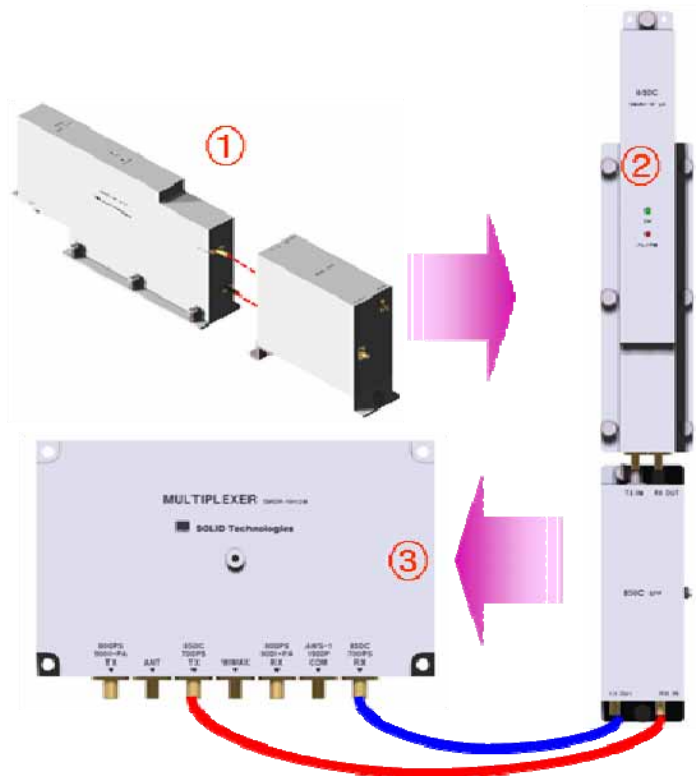

- ① Combine 850C RDU with 850C BPF (As it is a plug type, push the unit to combine with BPF.)
- ② Insert the combined 850C+850C BPF Ass'y into any slot of ROU.
- ③ Combination point of 850C+850C BPF Ass'y of the multiplexer


| Multiplexer Port naming | Interface Point | | Remark |
|-------------------------|-----------------|----------|--------|
| | 850C RDU | 850C BPF | |
| | | | |

| | | | |
|---------|---|--------|--|
| 850C TX | - | TX OUT | |
| 850C RX | - | RX IN | |

How to install RDU 800PS+900I+PA Ass'y

The following components are required:

| No. | Unit | Description | Remark |
|-----|---------------------------|-------------------------|--------|
| 1 | RDU 800PS+900I+PA | RF Module | |
| 2 | 800PS+900I+PA BPF | BPF | |
| 3 | 800PS+900I+PA TX RF CABLE | SMA(M) to SMA(M), 460mm | |
| 4 | 800PS+900I+PA RX RF CABLE | SMA(M) to SMA(M), 380mm | |

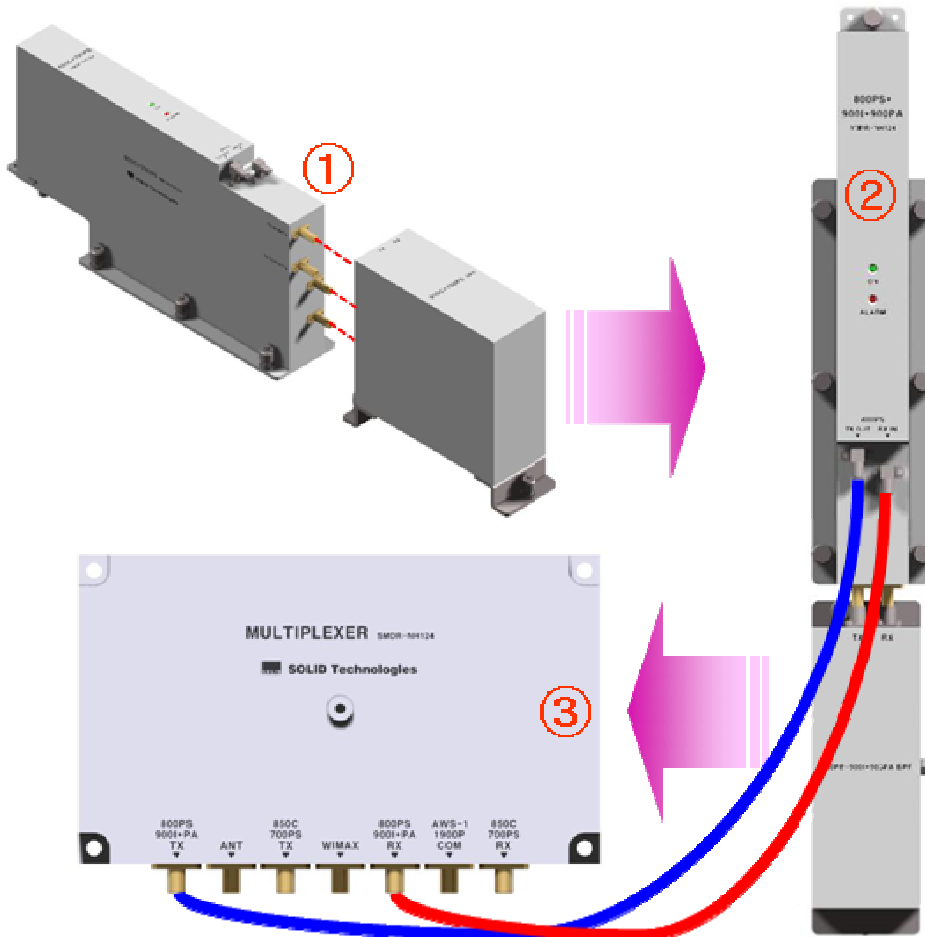


- ① Combine RDU 800PS+900I+PA with 800PS+900I+PA BPF (As it is a plug type, push the unit to combine with BPF.)
- ② Insert the combined 800PS+900I+PA BPF Ass'y into any slot of ROU.
- ③ Combination point of 800PS+900I+PA BPF Ass'y of the multiplexer

| Multiplexer Port naming | Interface Point | | Remark |
|-------------------------|-------------------|-------------------|--------|
| | 800PS+900I+PA RDU | 800PS+900I+PA BPF | |
| 800PS+900I+PA TX | TX OUT | - | |
| 800PS+900I+PA RX | RX IN | - | |

How to install RDU 850C+700PS Ass'y

The following components are required:

| No. | Unit | Description | Remark |
|-----|------------------------|-------------------------|--------|
| 1 | RDU 850C+700PS | RF Module | |
| 2 | 850C+700PS BPF | BPF | |
| 3 | 850C+700PS TX RF CABLE | SMA(M) to SMA(M), 470mm | |
| 4 | 850C+700PS RX RF CABLE | SMA(M) to SMA(M), 400mm | |

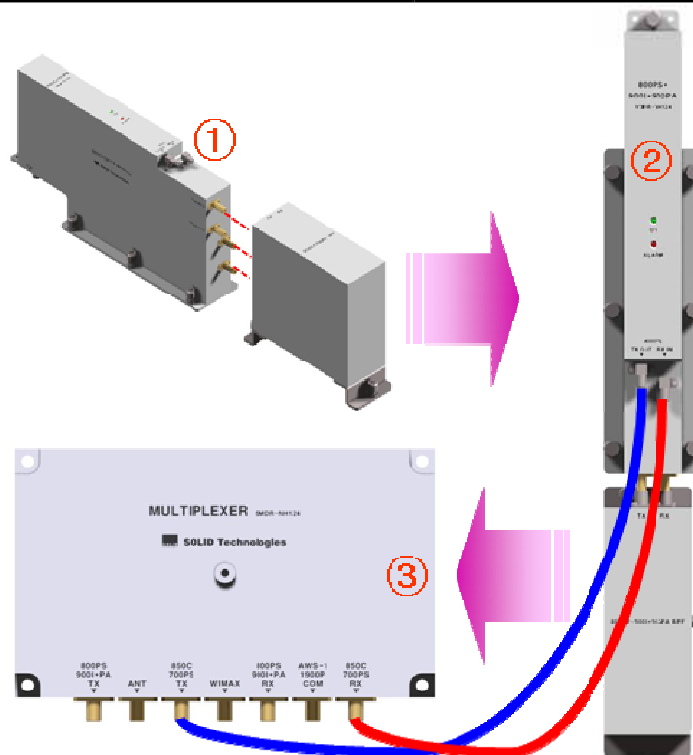


- ① Combine RDU 850C+700PS with 850C+700PS BPF (As it is a plug type, push the unit to combine with BPF.)
- ② Insert the combined 850C+700PS BPF Ass'y into any slot of ROU.
- ③ Combination point of 850C+700PS BPF Ass'y of the multiplexer

| Multiplexer Port naming | Interface Point | | Remark |
|-------------------------|-----------------|----------------|--------|
| | 850C+700PS RDU | 850C+700PS BPF | |
| 850C+700PS TX | TX OUT | - | |
| 850C+700PS RX | RX IN | - | |

How to install RDU 1900P+AWS-1 Ass'y

The following components are required:

| No. | Unit | Description | Remark |
|-----|----------------------|-------------------------|-----------|
| 1 | RDU 1900P+AWS-1 | RF Module | |
| 2 | 1900P+AWS-1 BPF | BPF | |
| 3 | 1900P+AWS-1 RF CABLE | SMA(M) to SMA(M), 390mm | |
| 4 | 1900P+AWS-1 RF-01 | SMA(M) to SMA(M) | Semirigid |

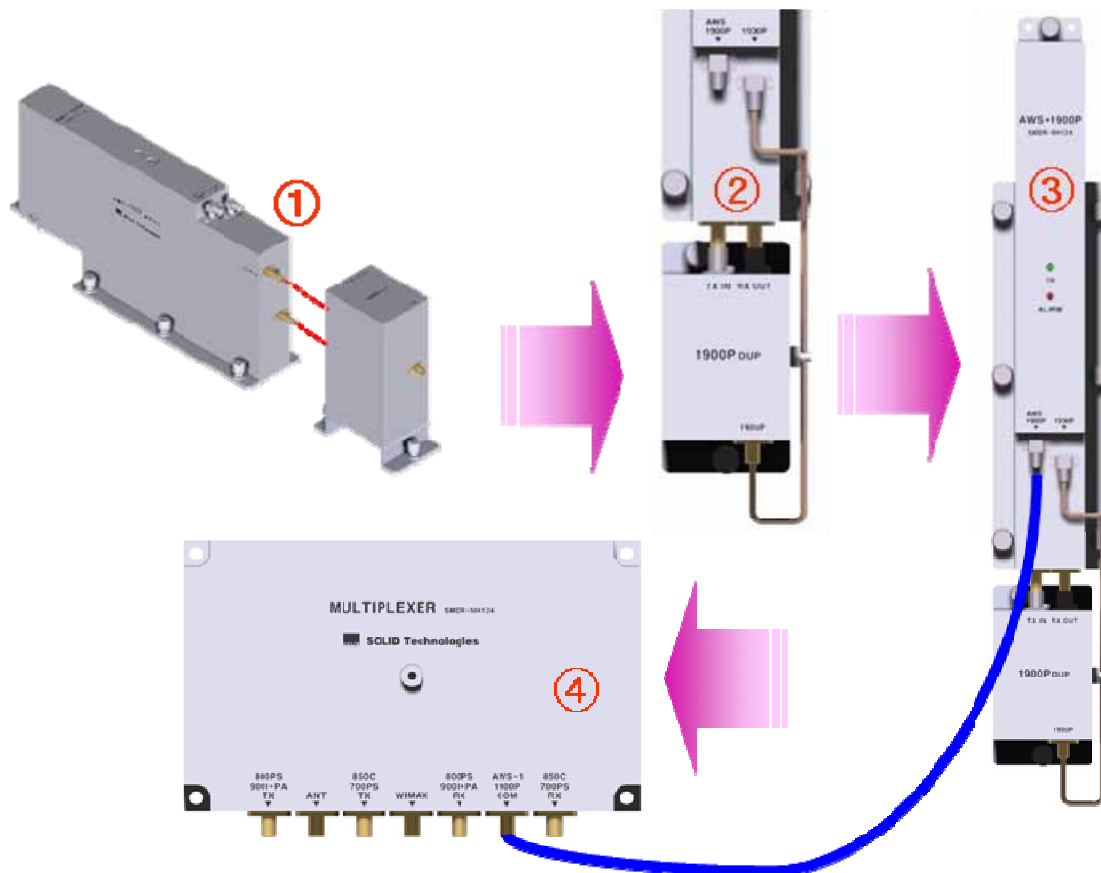

- ① Combine RDU 1900P+AWS-1 with 1900P BPF (As it is a plug type, push the unit to combine with BPF.)