



QUARQ

Power Meter User Manual

Statement of Compliance:

SRAM LLC.

Model#: 0808

FCC ID: C90-MERC1

IC: 10161A-MERC1

Model#: 0815

FCC ID: C90-MTB1

IC: 10161A-MTB1



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference.
- 2 This device must accept any interference received, including interference that may cause undesired operation.

Warning: Any changes or modifications not expressly approved by SRAM could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- 1 Reorient or relocate the receiving antenna.
- 2 Increase the separation between the equipment and receiver.
- 3 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4 Consult the dealer or an experienced radio/TV technician for help.

This product meets the applicable Industry Canada technical specifications.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference that may cause undesired operation of the device.

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Statement of RoHS Compliance SRAM LLC. certifies that this product and its packaging are in compliance with European Union Directive 2002/95/EC on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronics Equipment, commonly known as RoHS.

ANT+™ Product Certification

This product is ANT+ certified and complies with the bicycle power ANT+ Device Profile. For a complete listing of ANT+ Certified Products and their specific interoperability, please visit www.thisisant.com.

SRAM LLC WARRANTY

EXTENT OF LIMITED WARRANTY

Except as otherwise set forth herein, SRAM warrants its products to be free from defects in materials or workmanship for a period of two years after original purchase. This warranty only applies to the original owner and is not transferable. Claims under this warranty must be made through the retailer where the bicycle or the SRAM component was purchased. Original proof of purchase is required. **Except as described herein, SRAM makes no other warranties, guaranties, or representations of any type (express or implied), and all warranties (including any implied warranties of reasonable care, merchantability, or fitness for a particular purpose) are hereby disclaimed.**

LOCAL LAW

This warranty statement gives the customer specific legal rights. The customer may also have other rights which vary from state to state (USA), from province to province (Canada), and from country to country elsewhere in the world.

To the extent that this warranty statement is inconsistent with the local law, this warranty shall be deemed modified to be consistent with such law, under such local law, certain disclaimers and limitations of this warranty statement may apply to the customer. For example, some states in the United States of America, as well as some governments outside of the United States (including provinces in Canada) may:

- a. Preclude the disclaimers and limitations of this warranty statement from limiting the statutory rights of the consumer
(e.g. United Kingdom).
- b. Otherwise restrict the ability of a manufacturer to enforce such disclaimers or limitations.

For Australian customers:

This SRAM limited warranty is provided in Australia by SRAM LLC, 1333 North Kingsbury, 4th floor, Chicago, Illinois, 60642, USA. To make a warranty claim please contact the retailer from whom you purchased this SRAM product. Alternatively, you may make a claim by contacting SRAM Australia, 6 Marco Court, Rowville 3178, Australia. For valid claims SRAM will, at its option, either repair or replace your SRAM product. Any expenses incurred in making the warranty claim are your responsibility. The benefits given by this warranty are additional to other rights and remedies that you may have under laws relating to our products. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

LIMITATIONS OF LIABILITY

To the extent allowed by local law, except for the obligations specifically set forth in this warranty statement, in no event shall SRAM or its third party suppliers be liable for direct, indirect, special, incidental, or consequential damages.

LIMITATIONS OF WARRANTY

This warranty does not apply to products that have been incorrectly installed and/or adjusted according to the respective SRAM user manual. The SRAM user manuals can be found online at sram.com, rockshox.com, avidbike.com, truvativ.com, or zipp.com.

This warranty does not apply to damage to the product caused by a crash, impact, abuse of the product, non-compliance with manufacturers specifications of usage or any other circumstances in which the product has been subjected to forces or loads beyond its design.

This warranty does not apply when the product has been modified, including, but not limited to any attempt to open or repair any electronic and electronic related components, including the motor, controller, battery packs, wiring harnesses, switches, and chargers.

This warranty does not apply when the serial number or production code has been deliberately altered, defaced or removed.

This warranty does not apply to normal wear and tear. Wear and tear parts are subject to damage as a result of normal use, failure to service according to SRAM recommendations and/or riding or installation in conditions or applications other than recommended.

Wear and tear parts are identified as:

- Dust seals
- Bushings
- Air sealing o-rings
- Glide rings
- Rubber moving parts
- Foam rings
- Rear shock mounting hardware and main seals
- Upper tubes (stanchions)
- Stripped threads/bolts (aluminium, titanium, magnesium or steel)
- Brake sleeves
- Brake pads
- Chains
- Sprockets
- Cassettes
- Shifter and brake cables (inner and outer)
- Handlebar grips
- Shifter grips
- Jockey wheels
- Disc brake rotors
- Wheel braking surfaces
- Bottomout pads
- Bearings
- Bearing races
- Pawls
- Transmission gears
- Spokes
- Free hubs
- Aero bar pads
- Corrosion
- Tools
- Motors
- Batteries

Notwithstanding anything else set forth herein, the battery pack and charger warranty does not include damage from power surges, use of improper charger, improper maintenance, or such other misuse.

This warranty shall not cover damages caused by the use of parts of different manufacturers.

This warranty shall not cover damages caused by the use of parts that are not compatible, suitable and/or authorised by SRAM for use with SRAM components.

This warranty shall not cover damages resulting from commercial (rental) use.

TABLE OF CONTENTS


POWER METER ANATOMY	6
INSTALLATION	7
MAGNET INSTALLATION	7
BB CUP MOUNT INSTALLATION	8
CABLE GUIDE MOUNT INSTALLATION.....	9
ADHESIVE PUTTY INSTALLATION.....	10
CRANK INSTALLATION	11
SET UP	11
LED FUNCTIONALITY	11
PAIRING	12
ZEROING	12
CHAINRING INSTALLATION	14
MAINTENANCE AND CARE.....	15
BATTERY INFORMATION.....	15
BATTERY CARE.....	15
CLEANING	15
TROUBLESHOOTING.....	16

POWER METER ANATOMY


Crankarm Spider Serial
Number/ANT+ ID

Battery Compartment

LED

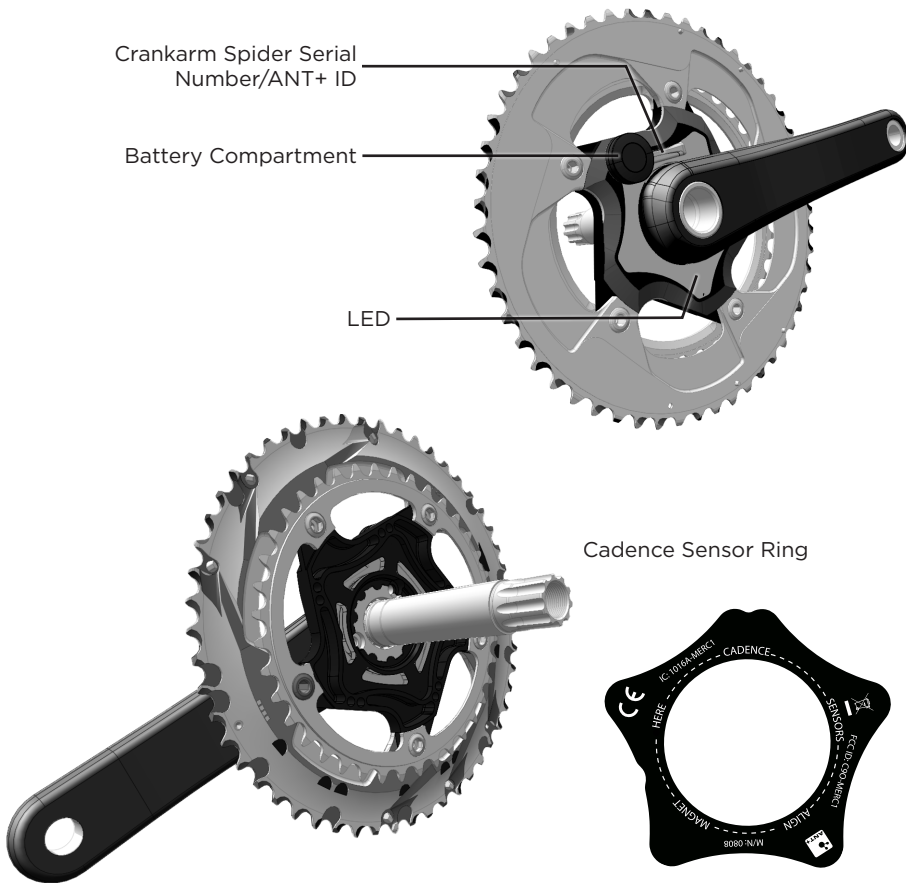

Cadence Sensor Ring

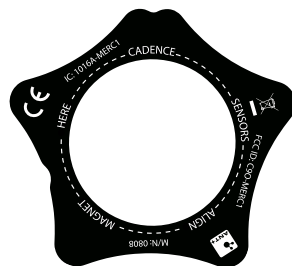

Cadence Sensor Ring Label

INSTALLATION

MAGNET INSTALLATION

Quarq power meters measure cadence using a magnet, or if a magnet is not present, by using an accelerometer that is built into the power meter.

Using a magnet is the best method for measuring cadence; it is accurate to $\pm 1.5\%$ regardless of environmental conditions. When properly installed, the magnet should be in line with the cadence sensors and within 2-8 mm of the sensor ring. If necessary, magnets may be stacked to achieve the proper distance to the sensor.


NOTICE

Do not allow the magnet to contact the power meter.


If the magnet becomes dislodged or is removed, the built in accelerometer is automatically enabled.

Using the accelerometer to measure cadence offers the convenience of not having to install a magnet. The accelerometer was specifically developed for bikes that have limited options for magnet placement. While the magnet provides the most accurate cadence measurement, the accuracy of the accelerometer is excellent up to 160 rpm and in all environmental conditions except those that produce severe vibrations.


It is easier to install the magnet when the cranks are not installed on the frame.

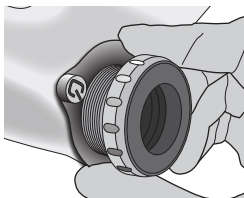

BB Cup Mount

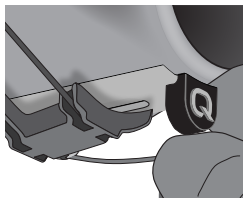

Cable Guide Mount


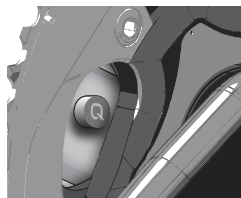


Adhesive Putty

BB CUP MOUNT INSTALLATION

The BB Cup Mount is only compatible with threaded bottom brackets. It does not work with frames that have bearings pressed into the bottom bracket (BB30, PF30, etc.). Frames using threaded bottom bracket adapters (ie. SRAM GXP30 BB Adapter) may use the BB Cup Mount if the mount is installed onto the threaded drive side bottom bracket cup.

1. If necessary, remove the existing cranks and bottom bracket.
2. Slide the BB Cup Mount over the threads of the drive side bearing cup with the magnet facing away from the frame.
3. Hold the magnet at the 9 o'clock position while the bottom bracket is tightened to the manufacturer's recommended torque.
4. Confirm the magnet is within 2-8 mm (1/16"-3/8") of the sensor.

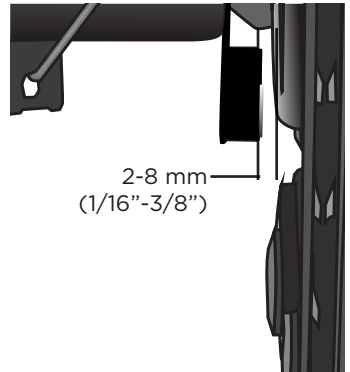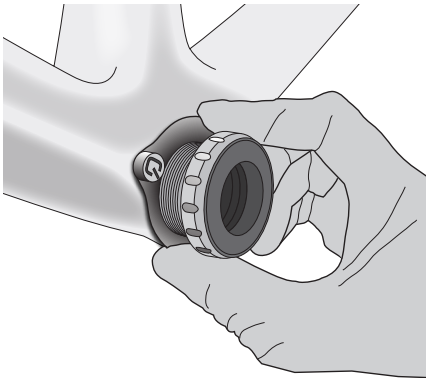




CABLE GUIDE MOUNT INSTALLATION

The Cable Guide Mount should only be used when the cable guide is fastened with a screw. If the cable guide is fastened with a rivet, use the Bottom Bracket Cup Mount or Adhesive Putty instead.

NOTICE

Do not allow the magnet to contact the power meter. When properly installed, the magnet should be in line with the cadence sensors and within 2-8 mm (1/16"-3/8") of the sensors.

1. Remove the existing cranks.
2. Loosen the cable guide screw. It may be helpful to shift the front derailleur to the small chainring position, and the rear derailleur to the smallest cog. This will reduce the cable tension, and make it easier to slide the cable guide mount under the cable guide.
3. Slide the mount under the cable guide. The guide can be installed with the magnet pointed down (as illustrated) or up.
4. Reinstall the cranks.
5. Tighten the cable guide screw.
6. Confirm the magnet is within 2-8 mm (1/16"-3/8") of the sensor.

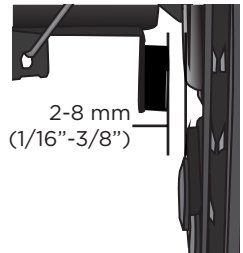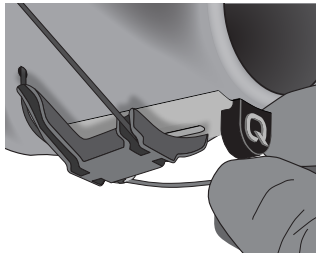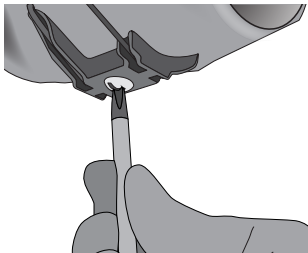



ADHESIVE PUTTY INSTALLATION

The included adhesive putty will permanently attach the magnet to your frame. Other **non-permanent** attachment options include: hot glue, some epoxies, electrical tape, or similar adhesives.

NOTICE

Do not allow the magnet to contact the power meter. When properly installed, the magnet should be in line with the cadence sensors and within 2-8 mm (1/16"-3/8") of the sensors. Depending on your frame, you may need to stack magnets to achieve this distance.

1. Remove the existing cranks.
2. Use the included sandpaper to gently scuff the frame where the magnet will be mounted. The center of the magnet should be positioned between 27.5 mm and 30 mm (1" - 1 1/8") from the center of the bottom bracket.
3. Clean the frame with the included alcohol pad prior to attaching the magnet.
4. Knead both colors of adhesive putty with your fingers until you have one consistent color.
5. Place a 6 mm (1/4") diameter ball of putty on the back of the magnet, and then press the magnet onto the frame.
6. Use a toothpick to carefully remove any excess putty before it dries. The putty will set up in about 10 minutes, and will cure in 1 hour.
7. Reinstall the cranks.
8. Confirm the magnet is within 2-8 mm (1/16"-3/8") of the sensor.

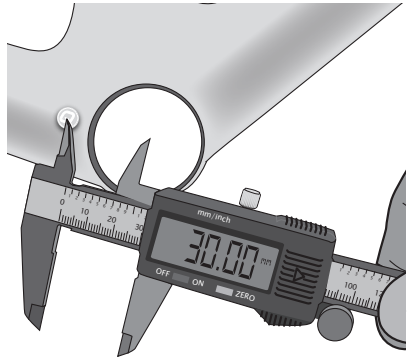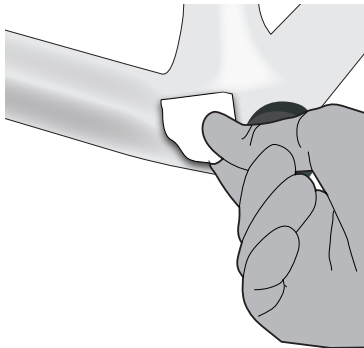

CRANK INSTALLATION

Install the crankset and bottom bracket assembly onto your bike according to the manufacturer's instructions.

Once the crankset has been installed, the power meter must not contact the frame or any other components. Please contact Quarq customer service with any frame compatibility questions. An updated list of compatible frames is available at Quarq.com.

SET UP

LED FUNCTIONALITY

The LED provides useful information about the operating condition of the power meter. See the 'Self-Test' in the Troubleshooting section for more LED information.

The LED will flash:

- twice when battery is inserted
- once when waking
- once when finished zeroing (calibration)
- once when entering the sleep state



PAIRING

Before pairing your power meter to a computer, make sure you are at least 10 meters (30 feet) from any other ANT+™ device. This will keep you from accidentally pairing to another person's ANT+ device.

To pair the power meter with an ANT+ computer, first spin the crank backwards 2-3 times to wake the power meter and begin broadcasting ANT+ messages. *The power meter will shut off after 10 minutes of inactivity.*

Follow the pairing instructions specific to your ANT+ computer.

GARMIN® EDGE® 800

Quick Tap On/Off → tap the Dumbbell icon  → **Search**

“Power Meter Detected” will flash up on your screen when the units are paired.

GARMIN EDGE 500

Menu → **Settings** → **Bike Settings** → **Bike 1** → **ANT+Power** → **Search**

“Power Meter Detected” will flash up on your screen when the units are paired.

GARMIN EDGE 510, 810

Connections  → tap the Dumbbell icon  → **Search**

GARMIN EDGE 1000

Drag Screen Down → **Sensors** → **Add Sensors** → **Power**

“Power Meter Detected” will appear on your screen when the units are paired.

Z E R O I N G

The power meter must be zeroed to compensate for environmental changes. The power meter can be zeroed two ways: **Auto Zero** and **Manual Zero**.

When to perform the Zero procedure

For best results, you should perform the **Manual Zero** procedure before each ride. The **Auto Zero** procedure can be performed instead of a **Manual Zero** or if your computer cannot send a "Calibrate" command; if the temperature changes greatly during your ride; or if you are getting inaccurate data.

Manual Zero

The Manual Zero procedure should be performed before every ride with the rider off the bike and with the drive-side crank arm at 6 o'clock.

The power meter may be zeroed manually by sending the "Calibrate" command from an ANT+™ compatible bike computer. The power meter will return the Zero Offset value (or "Current Calibration" on some computers) to the computer; however, not all ANT+ computers will display the value. The Zero Offset is typically between +/- 1000. Some units will always have a Zero Offset value outside of this range without any impact on performance. What is more important is that the pre- and post-ride Zero Offset values are within 50 points of each other. If the pre- and post-ride Zero Offset values frequently vary by more than 50, or if day-to-day values vary widely, please call Quarq customer service.

When performing the **Manual Zero** procedure, put the drive side crank arm in the 6 o'clock position, keeping the cranks stationary with no force on the pedals. Follow the pairing instructions specific to your ANT+ computer to send the "Calibrate" command. The LED will flash one time when zeroing is complete.

GARMIN® EDGE® 800

Quick Tap On/Off → tap the  → **Calibrate**

GARMIN® EDGE® 500

Menu → **Settings** → **Bike Settings** → **Bike 1** → **Ant+Power** → **Calibrate**

GARMIN® EDGE® 510 & 810

Connections  → tap the  → **Calibrate**

GARMIN EDGE® 1000

Drag Screen Down → **Sensors** → '**SENSOR NAME**' → **Sensor Detail** → **Calibrate**

ZEROING CONTINUED

Auto Zero

Spin the crank backwards for 4-5 complete revolutions. The LED will flash one time when zeroing is complete. The computer will not display the Zero Offset value. The **Auto Zero** procedure may be performed while coasting with the rider on the bike, stopped using one or both feet, or by hand with the rider off of the bike.

Zero Offset Stabilization

With a new power meter or newly installed chainrings, the zero offset takes 2-3 rides to stabilize. During this time you should perform the Manual Zero procedure regularly to ensure accurate power readings. Short, hard efforts in both chainrings on your first ride will speed up stabilization.

CHAINRINGS

CHAINRING INFORMATION

On power meters with OmniCal™ you can swap chainrings without impacting accuracy. They do not need recalibration when you change chainrings or chainring sizes. Power meters with OmniCal™ only require re-calibration when moving from two chainrings to a single chainring, like moving to a Force CX 1 X-Sync chainring.

XX1 power meters do not have OmniCal™. They are factory calibrated for 32T and 34T X-Sync chainrings. XX1 power meters require recalibration if you install a 36T or 38T X-Sync chainring.

Re-calibration can be done using Galvin, Quarq's diagnostics App.

The zero offset will change whenever chainrings are removed and/or reinstalled. The zero offset will take 2-3 rides to stabilize.


Recalibration is never required if you are replacing worn chainring(s) with new chainrings of the same make and mode.

CHAINRING INSTALLATION


When installing chainrings you must align the chainring tabs and derailment pin so they are in line with the crank arm.

Tighten the SRAM steel chainring bolts to 10 N·m (88.5 in·lb). Tighten other chainring bolts according to the manufacturer's instruction.

Hidden bolt crank

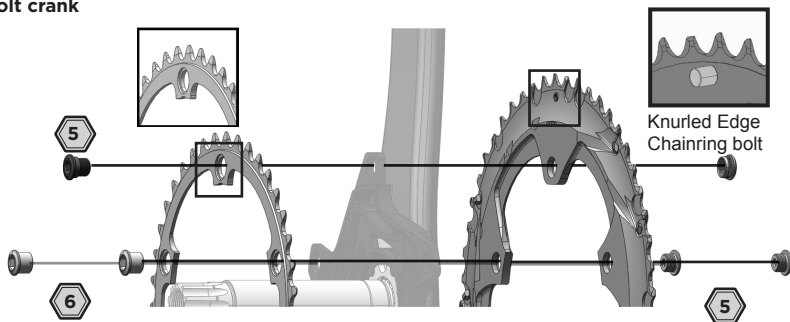


Non-hidden bolt crank

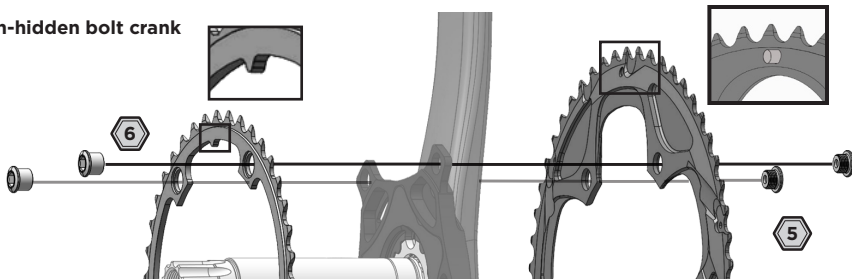

MAINTENANCE AND CARE

BATTERY INFORMATION

- The power meter is powered by a CR2032 coin cell battery.
- **Do not use any tools to remove the battery cap.** Using a tool to remove the cap from the base of the battery compartment can damage or break the entire compartment.
- Use your hand to unthread the lid counter-clockwise. The battery should be installed with the “+” facing out. Reinstall and hand tighten the battery cover after the battery is replaced.
- The power meter automatically switches on when the crankarms are rotated, and shuts off after about 10 minutes of inactivity. Under normal operating conditions the battery will last for about 300 hours of riding.
- The power meter will send a warning when the battery is low. However, not all ANT+™ computers will display the message.
- The power meter retains its sensor ID throughout battery changes and will remain properly paired with your computer.

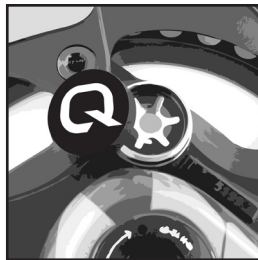

BATTERY CARE

- The battery must be installed correctly (“+” out) and have sufficient charge.
- Periodically check the battery compartment to make sure the battery contact is free of corrosion and moisture.

CAUTION: FIRE HAZARD

Use only the recommended battery in your power meter. Use of any battery other than the recommended may cause the battery to explode and catch on fire. Dispose of used batteries according to local regulations.

CLEANING

The power meter is very durable; however, periodic cleaning is recommended. Use a rag to wipe debris from the power meter, crankarms, magnet, and chainrings. Brush the power meter, crankarms, magnet, and chainrings with clean or soapy water, then rinse with clean water and let air dry. Do not use harsh chemicals and do not use a high-pressure washer.