

MYC5-3

ENGLISH





You have just purchased a SAGEM phone. We congratulate you! In order to use your phone efficiently and safely, we recommend that you read this handbook carefully.

Your phone can be used internationally in the various networks ((GSM 850 MHz and PCS 1900 MHz) or (GSM 900 MHz, DCS 1800 MHz or PCS 1900 MHz)) depending on the roaming arrangements with your operator.

Some services described in this guide may not be available from the network or when roaming, or may require a specific subscription.

Remember to back up your data and programs frequently, and before sending the mobile phone for repair.

This phone, like any other wireless phone, operates using radio signals and networks. Connection in all locations and conditions cannot be guaranteed. Therefore you should never rely solely on any wireless phone for essential communications (for example, medical emergencies).

In some jurisdictions it may be unlawful to take a picture without notice to or the consent of all participants.

#### **WARNING**

Depending on the model, network configuration and associated subscription cards, certain functions may not be available.

Your phone is identified by its IMEI number. Write this number down, and do not keep it with your phone, because you may be asked for it in the event of your phone being stolen, in order to prevent it from being used, even with a different SIM card. In order to display the IMEI on your phone's screen, type: \*#06#.

SAGEM is a trademark of Sagem Communication SAFRAN Group.

AT® is a registered trademark of Hayes Microcomputer Products Inc.

Hayes® is a registered trademark of Hayes Microcomputer Products Inc.

T9 is protected by one or more of the following US patents: 5,818,437, 5,953,541, 5,187,480, 5,945,928, 6,011,554 and other patents are being applied for worldwide.

Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

The WAP navigator and some message softwares (i-mode™) are under licence Openwave.

The WAP navigator and the softwares included are the exclusive property of Openwave. For this reason, you may not modify, translate, disassemble or even decompile all or part of these softwares.

© 2003 GAMELOFT® - All rights reserved - GAMELOFT® is a registered trademark of GAMELOFT S.A. - All rights reserved.

Wellphone™ and SmartCom™ are registered trademarks owned by SmartCom SARL France.

# Contents

---

Menus .....	6	Applications.....	24
Your phone package - Accessories .....	7	Calculator .....	24
Activating your phone .....	8	Converter.....	24
Information on the SIM card .....	8	Audio player.....	25
Installing the SIM card and the battery .....	9	Alarm .....	25
Getting started .....	10	Timer .....	25
PIN number.....	10	ToDo.....	26
Setting time and date.....	11	Sending a vCal.....	26
Network.....	11	Receiving a vCal.....	26
First call .....	12	Exchange of data with a PC .....	27
Receiving a call.....	13	Services.....	27
Switching off .....	13	Messages.....	28
Description .....	14	Compose SMS .....	28
Initial screen .....	16	Compose MMS.....	30
Navigation principles.....	17	Receiving messages .....	31
Using your phone.....	18	Inbox.....	31
Improving antenna performance.....	18	Outbox.....	31
Increase the efficiency of your phone .....	18	Sentbox .....	32
Charging the battery .....	19	Drafts .....	32
Games .....	20	Sending options.....	32
WAP.....	21	Memory.....	33
The WAP Menu .....	21	Local information .....	33
Configuring WAP parameters .....	22	Calling Voice Mail .....	33
WAP Logging on .....	23	Mailing list.....	34
Downloading objects.....	23	Photo - Video .....	35
WAP Logging off.....	23	Take and send a photo.....	35
GPRS.....	23	Take a video.....	37
		Multimedia .....	38
		My Videos.....	38

My Pictures .....	38
My Sounds .....	39
Memory .....	39
<b>Organizer</b> .....	<b>40</b>
Calendar menu .....	40
Sending a vCal.....	41
Receiving a vCal.....	41
<b>Phonebook</b> .....	<b>42</b>
Using the phonebook .....	42
Storing a new contact .....	43
Contacts menu.....	43
Options from a contact saved .....	44
Sending a vCard .....	45
Receiving a vCard.....	45
<b>Settings</b> .....	<b>46</b>
Sounds.....	46
Display .....	47
Camera .....	49
Languages .....	49
Phonebook.....	49
Contacts list .....	49
Calls .....	50
Security .....	52
Networks .....	54
Leds .....	55
Shortcuts .....	55
Date / Time .....	55
Active flip.....	56
WAP settings .....	56
Help.....	56
Connectivity .....	57
<b>Technical features</b> .....	<b>58</b>

<b>Certification and safety information for the United States and countries using FCC standards</b> .....	<b>59</b>
FCC Part 15 statement.....	59
FCC SAR information .....	60
Safety Information .....	61
Distance of operation.....	62
FDA consumer information on wireless phones	62
Driving safety tips .....	65
<b>Certification and safety information for Europe and countries using CE standards</b> .....	<b>66</b>
CE conformance statement .....	66
CE SAR information .....	67
Safety information.....	68
Distance of operation.....	69
CE Environment .....	69
<b>For Customers in the United States</b> .....	<b>70</b>
Limited Warranty .....	71
<b>For customers outside the United States</b> .....	<b>74</b>
Warranty .....	74
<b>End User Licence Agreement (EULA), for the software</b> .....	<b>77</b>
<b>Warranty</b> .....	<b>81</b>
<b>Java™</b> .....	<b>85</b>
<b>Troubleshooting</b> .....	<b>88</b>
<b>Index</b> .....	<b>92</b>

# Menus

---



## Games



## WAP



## Applications

- Calculator
- Converter
- Audio player
- Alarm
- Timer
- ToDo
- Services



## Messages

- Compose
- Inbox
- Outbox
- Sentbox
- Drafts
- Options
- Memory
- Local info.
- Call Voice Mail
- Mailing list



## Camera

- Video
- Photo



## Multimedia

- My Videos
- My Pictures
- My Sounds
- Memory
- Help



## Organizer

- See month
- See week
- See today
- See date
- Calendar menu
- Help



## Phonebook



## Settings


- Sounds
- Display
- Camera
- Languages
- Phonebook
- Contacts list
- Calls
- Security
- Networks
- Leds
- Shortcuts
- Date / Time
- Active flip
- WAP settings
- Help
- Connectivity

# Your phone package - Accessories

---

When you open the box, check that all items are present (some items may vary from the pictures shown below):

- 1 - Phone
- 2 - Charger
- 3 - Battery
- 4 - User guide

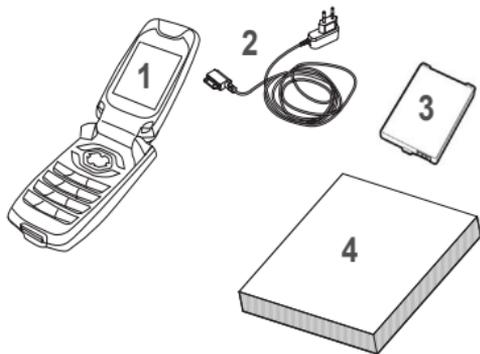

## Accessories

We advise you the use of SAGEM brand accessories for an optimal operating of your phone and of your accessories.

You can also find (as an option) or order the following accessories:


- Pedestrian kit
- Additional battery
- Additional charger
- USB cable (with associated drivers) to connect your phone to a PC

For more information: [www.planetsagem.com](http://www.planetsagem.com) and [www.sagem.com/mobiles](http://www.sagem.com/mobiles).

# Activating your phone

---

## Information on the SIM card

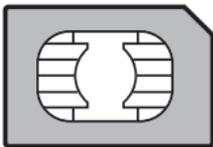


To use your phone, you need a card called SIM card. It contains personal information that you can modify:

- Secret codes (PIN(s): Personal Identification Numbers), these codes allow you to protect access to your SIM card and phone.
- Phonebook,
- Messages,
- How special services work.

### WARNING

This card must be handled and stored with care in order not to be damaged. If you should lose your SIM card, contact your network provider or your SMC (Services Marketing Company) immediately.  
Please keep your SIM card out of reach of young children.

## Installing the SIM card and the battery

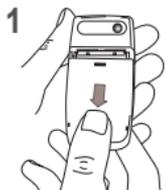


The SIM card is inserted under the phone's battery. Ensure that the phone is switched off and the charger disconnected.

**1** Turn the phone back and remove the back cover by sliding it downwards.

**2** Take out battery if already installed.

**3** Slide the SIM card, with cut corner as shown on the phone, into the card holder with fold face down.

**4** Place the battery by positioning first the top of it, as shown on the battery. Replace the back cover by sliding it then push the lower part into the lock position.

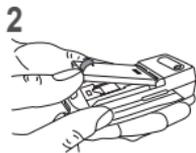

## Getting started

You are now ready to use your phone for the first time.

Switch on the phone by pressing the  key. A short display appears.

When you switch on your phone for the first time, you must configure it with various settings that will remain by default until you choose to modify them (depending on model).

After entering your PIN code and the date and time, make your choice for the following settings: time zone, daylight savings, wallpaper, screensaver, ring tone, volume, vibrate and voicemail number.

If there are contacts saved in your SIM card, you are invited, if you wish, to copy them in the phone contacts memory.

## PIN number

*This is your SIM's secret code.*

If access to the SIM card is protected, the device prompts you to enter the PIN number:

**Enter the code** between 4 and 8 digits given to you when the SIM card was issued. These digits do not appear on the screen for security reasons.

Press the **OK** key or the  key to validate.

If your phone indicates that the SIM is missing, press the  key to switch off your phone and check that the SIM card is correctly installed.

### Warning

If a wrong PIN number is entered three times in succession, your SIM card is blocked. You must then:

- Enter the PUK (Personal Unblocking Key) code provided by your operator, and validate.
- Enter your PIN number and validate.
- Enter your PIN number again and validate.

After 5 or 10 failed attempts (depending on the type of SIM card), the SIM card is definitely locked. You must then contact your operator or your SMC to obtain a new card.

## Setting time and date

*When you use your phone for the first time, you need to set the date and time.*

*In due course, when the battery is completely discharged, or if it has been removed, you will be prompted systematically to confirm date and time.*

### Setting the date:

Set the date by entering it directly in numerical form or by using the ▲ ▼ keys to increase or decrease the default values.

Use the ► key (or ◀ key) to access the next (or last) data input field.

Once the date is correct, press the ✎ key to validate.

### Setting the time:

Same procedure as for setting the date.

## Network

From now on the phone hunts for a network on which it can make calls. If it finds one, it displays the name of the network on the screen. You are then ready to send or receive a call.

If the network icon appears, calls are possible on your operator's network.

If the letter R and a network name are displayed, calls are possible on the network of a different operator.

If the letter E is displayed without any network name, only the emergency services are accessible (ambulance, police, fire brigade).

If the network icon flashes, the phone is in permanent search mode. There is no network available. The signal strength indicator received allows you to display the quality of reception. If it indicates less than three bars, search for better reception in order to call in good conditions.

## First call

Dial the number of your correspondent.

Press the  key.

During the call, the call in progress icon flashes on screen and tones may indicate the establishment of the call.

Once communication has been established, the call icon stops flashing.

You can adjust the sound level (volume) using the   keys.

At the end of the conversation press the  key to hang up.

### International call

Press 0 (hold down) to display « + », then dial the country code without waiting for the dial tone, then the number of the called party.

### Emergency services

Depending on the operators you can obtain the emergency service with or without SIM card or when the keypad is locked. It is enough to be in an area served by a network.

To obtain the international emergency service, dial **112** then press the  key.

## Receiving a call

When you receive a call, the number of your correspondent is displayed when it is presented by the network.

Press the  key or the  key to answer, and speak.

To refuse the call, press the  key or the  key.

To stop the ring tone or the vibrate, without refusing the call, press the **#**  key.

### Hands-free mode

To change to hands-free mode during a call:

- press the  key, then press **[Yes]** to confirm activation of the amplified mode,  
or
- press **[Options]** then select **Amplified mode ON** and confirm pressing **[Yes]**.

**WARNING:** in this mode do not bring the phone up to your ear.

*All the numbers corresponding to incoming and outgoing calls are logged in the list of recent calls.*

When a call is on hand, pressing **[Options]** allows you to have access to different functions: switching to hands-free mode, holding a call, switching to mute mode, ending the call, displaying menus.


Pressing **[Mute ON]** allows you to switch off the sound temporarily when you do not want that your correspondent listens when you want to speak to other people.

## Switching off

Press the  key for one second.

The end message is displayed. The phone switches off.

# Description

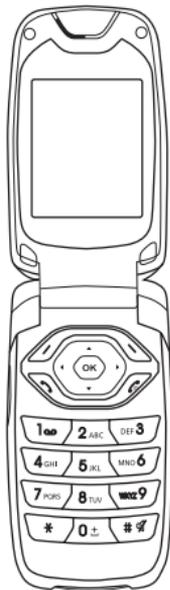

Microphone



**Hold down:** Switch on/off

*In a call context:* Reject a call - hang up

*In menus:* Return to initial screen



**Short press when calling:** activate/deactivate hands-free mode

**(WARNING:** in this mode do not bring the phone up to your ear (at least 3.9 inches (10 cm))

*In call context:* Call - receiving a call

*In idle screen:* Fast access to the list of calls



**Right key:**

*In initial screen:* Access to certain functions (shortcuts)

*In menus:* Access to the selection shown on screen in the tab (\*)



**Left key:**

*In initial screen:* Access to certain functions (shortcuts)

*In menus:* Access to the selection shown on screen in the tab (\*)



Previous choice/increase value/up

*During call:* Increase volume



Next choice/reduce value/down

*During call:* Reduce volume



Previous input field/move left



Next input field/move right



**OK** *In initial screen:* Access to main menu

*In the menus:* Context-sensitive access to different functions

*During a call:* Take a call



**\*** *When composing a message:*

**Short press:** Switches from one input mode to another (T9, ABC, 123)

**Long press:** Upper case/lower case



**Hold down:** *In initial screen:* Silent mode

**Short press:** When composing a message, access to the symbol table

Zoom mode (see **Messages** and **WAP** menus)

*In call reception mode:* Short press stops ring tone


*In ring tone setting mode:* Activate/deactivate ring tone



#### Lateral key

- Short press on up or down used for volume control during a call
- Short press on up or down used for volume control of key beep when idle
- Short press on down key used to go to silent mode on incoming call
- Long press on down key used to reject an incoming call

(\* In this manual, when a function is chosen by pressing on this key, square brackets are used (e.g.: [Save]).

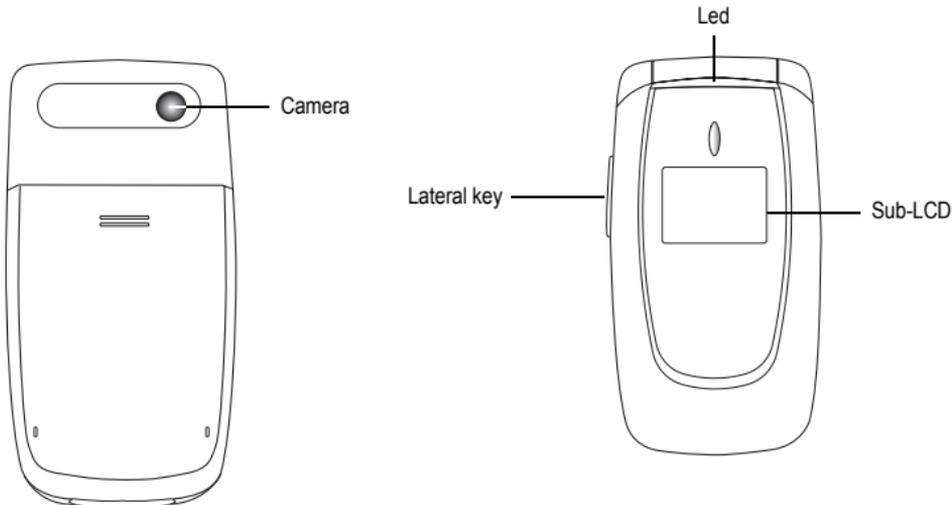

The sub-LCD displays date and time, battery and network icons and incoming calls.

**To ensure optimal screen legibility, check that you have removed the plastic protective film, clean the screen of your phone with a soft dry cloth to remove any finger marks or dust and make sure the background brightness is not too strong.**

# Initial screen

---

The initial screen contains the following information:

## 1 - The title bar icons:

	Battery
	Calls forwarded
	Call (establishing the call)
	Call (hands free)
	Message (reception of a message, message memory full)
	FAX communication
	DATA communication
	Silent mode
	Message in answering machine
	WAP (@) communication
	GPRS
	Home zone
	Roaming
	Protected WAP logon
	Protected WAP logon icon with certificate
	Signal strength level (5 bars).

## 2 - Date and time, in digital or analog mode

## 3 - Network provider

## 4 - Thumbnail centred on bottom line:

The main menu can be accessed by pressing on **OK**

*The following information may also be displayed:*

*« 1 message received »; or « 1 call ».*

*They can be deleted by pressing  key briefly.*

# Navigation principles

---

*These basic principles bring a great intuitiveness to your phone.*

**Validate** by pressing the  key or the **OK** key.

**Cancel** by pressing the  key.

The thumbnails at the bottom of the screen refer to the   keys.

In the menus, a title bar reminds you of the previous level.

The   navigation keys are used to navigate from one menu to another within the same menu structure.

From the home page, pressing the **OK** key displays the icons of the main menus.

The  key is used to go from a menu to a sub-menu.

The  key is used to go from a sub-menu to a menu.


The  key (press briefly) is used to go back to the initial screen (current function is abandoned).

In some menus there is a **Help** menu () which informs you on the various functions of the sub-menus.

# Using your phone

---

## Improving antenna performance

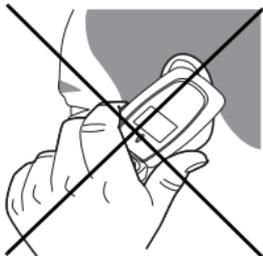

The antenna is integrated in your phone, under the back cover at the top.

Avoid putting your fingers on this area when the phone is switched ON.

If your fingers obstruct the antenna, the phone may have to operate with a higher power level than usual; decreasing its efficiency quickly. It could also affect the quality of your communications.

### Non ionising radiation

To obtain maximum satisfaction from your phone, use it in a vertical position. Your personal safety can only be improved by doing so.



## Increase the efficiency of your phone

- Don't press the keys when not necessary: each keypress activates the backlight, and uses much power.
- Don't obstruct the antenna with your fingers.

## Charging the battery



Your phone is powered by a rechargeable battery. A new battery must be charged for 4 hours at least before being used for the first time. It reaches its optimum capacity after a few cycles of use.

When your battery has been discharged, the phone displays the state (empty battery icon flashes). In this case recharge your battery for at least 15 minutes before making any calls in order not to be cut off in the middle of a call.

### To recharge the battery

Connect the charger to a socket.

Plug the end of the cable into the bottom connector of the phone.

The phone is then charging up. The battery icon is scrolling up and down to indicate that it is charging. When the battery is fully charged, the charging stops on its own. Disconnect the cable.

When charging, the battery may warm up, this phenomenon is normal.

### WARNING

There is danger of explosion if the battery is placed in an incorrectly way or if it is exposed to fire.

Do not short circuit it.

The battery does not have any part that you can change.

Do not try to open the battery casing.

Use only the appropriate chargers and batteries as shown in the phone manufacturer's catalogue.

The use of other types of chargers or batteries may be dangerous or invalidate the warranty.

Used batteries must be disposed of in the appropriate places.

We advise you to take the battery out if you plan not to use the phone for extended periods.

You are strongly advised not to connect your phone to the charger if it doesn't contain a battery.

The charger is a safety step-down transformer, it is forbidden to modify, alter or replace it by another component (power supply plug, etc.).

If the battery has entirely discharged, the phone cannot start. Plug the phone to the charger. The phone will switch on after a few minutes of charge. You can use the phone again when the **Start** option is displayed on the screen.

# Games

---



*The games being designed by Java™, many compatible games can be downloaded in your phone.*

**Delete all** menu: deletes all the games you have downloaded.



# gameLoft



*WAP (Wireless Application Protocol): a protocol that translates the Internet language into WML and HTML languages that can be read by a phone. The WAP function allows you to log onto certain Internet sites. You can log onto sites that allow you to download ringtones, icons, animated screensavers, Java™ applications to your phone.*

## The WAP Menu

The WAP navigator is under licence:



**RSA Data Security**

The WAP navigator and the softwares included are the exclusive property of Openwave. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of these softwares.

You can activate the magnifying glass to increase the size of the characters by holding down the # \* key.

The **Services** menu, a dropdown menu, can be accessed at all times when navigating through WAP pages pressing the  key.

It contains the following sub menus:

**Welcome:** logs onto the home page, (carries the name of your access provider)

**Bookmarks:** is used to save in a phonebook the names and addresses of Internet sites in order to make the access easy.

You can receive bookmarks from messages and add them to this list (see chapter on SMS). You can also send messages by SMS: select a bookmark, press **[Options]**, then select **Send by message**.

**Go to URL:** this menu allows you to input an Internet address directly.

**Inbox:** this menu allows you to check the messages sent by the Internet site.

**Save Objects:** is used to save a WAP site items.

**Snapshots:** takes a snapshot of the currently displayed page.

**Save Page:** saves the currently displayed page.

**History:** backward and forward navigation of the pages displayed are kept in memory.

**Reload:** refreshes the current page.

**Reset cache:** clears the stored information on previous connections.

**Advanced...:** choose one of the following advanced settings

- Settings
- Show URL
- Disconnect
- Circuit prompt (if user wants to confirm each logon)
- Security (is used to access information on making WAP connections secure).
- Delete Cookies
- View title

**About...**: information on the browser.

**Exit**: returns to the phone's home page.

## Configuring WAP parameters

Select the **Advanced...** menu, then the **Settings** menu.

**Profiles** is used to select or modify your access provider's logon parameters or configure the parameters of other access providers.

*The active profile is preceded with a star.*

The **Menu** is used to add a new profile or to display the memory size available.

**Configuration of GSM and GPRS parameters:**

All information to be entered in the parameters are provided by your operator or access provider.

On a profile in the list, press [**Options**], select **Modify**. The different parameters are: Provider title, Home page, Preferred connections (see next page), GSM parameters and GPRS parameters (see next page).

**Preferred connections:**

- **GSM if not GPRS** (by default): the logon to WAP services uses the GPRS as a priority. However, in the event of unavailability of the GPRS network, the GSM network is used to establish the link.
- **GPRS**: the logon to WAP services uses the GPRS network exclusively.
- **GSM**: the logon to WAP services uses the GSM network exclusively.

**GSM parameters:**

- Login
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- Dial-up number
- Mode (digital, analog or automatic)

**GPRS parameters:**

- Login
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- APN: if no APN has been defined, press [**Options**] then the APN menu. Select or add an APN.

Once all the settings have been entered, you can activate the chosen access provider. Select him from the list. Validate your choice.

**Linger timer** is used to choose the time after which the call is automatically disconnected if you have forgotten to log off from a service.

## WAP Logging on

*The connection to a WAP service on the GPRS network is not cut if an incoming call is received. You can answer the call. Using the **Welcome** menu, you can log onto your access provider's WAP site by pressing the  key. If you are logging onto the GSM or GPRS network, the @ symbol flashes, the metering of the cost of the call starts as soon as it stops flashing.*

## Downloading objects

Some WAP sites allow you to download ringtones, icons, animated screensavers, games or JAVA™ applications. Once downloaded, they are stored in your phone's memory. You can then save them in your phone (same operation as used for downloading using messages).

## WAP Logging off

To log off, press the  key. The logoff happens automatically after a few seconds of inactivity if you forget to log off. This period is defined by the linger time setting.

## GPRS

A flashing icon indicates that the phone is logging onto a GPRS network.

A non-flashing icon indicates that the GPRS network is available; if the icon is dark, it indicates that the phone is logged onto the GPRS network: see page 22 for the attachment options.

This icon is not displayed if the GPRS network is not available or if the SIM card inserted in your phone does not include the GPRS service. It may also disappear when accessing WAP services if the connection uses the GSM network instead of the GPRS network.

# Applications



The Java™ function allows you to download applications and utilities in your phone.

Downloading is done through the WAP function.

Please go to the **Applications** menu to use the applications already installed or install others.

## Calculator

This menu allows you to use your phone as a calculator.

On the **Applications** menu, please select the **Calculator** menu and [OK].

You can use the calculator thanks to the following keys:

▲	<b>Up key:</b>	Add
▼	<b>Down key:</b>	Subtract
▶	<b>Right key:</b>	Multiply
◀	<b>Left key:</b>	Divide
/	<b>Left programmable key:</b>	Equals or convert
\	<b>Right programmable key:</b>	Delete
* #	<b>* key or #:</b>	Decimal point.

If no calculations are being run, pressing [Convert] allows you to use the value in the **converter** directly.

## Converter

This menu allows you to convert one currency to another.

On the **Applications** menu, please select the **Converter** menu and [OK].

Enter a value and press the ▲ key to convert from one currency to another, or the ▼ key to convert back.

Pressing [Options] allows you to use the following options:

### Rapid exchange

If the Rapid exchange is activated, the converter will work in the initial screen by entering the desired numbers and pressing the ▲ ▼ keys to convert.

### Exchange rate

Enter the exchange rate corresponding to the chosen currency.

### Currency

Enter the two types of currency to be converted.

### Go to Calculator

This option allows you to use immediately the value converted in the **calculator**.

## Audio player

In the **Multimedia/My Sounds** menu, select the musics you want to insert in Audio player.

Select each music, press **[Options]** and select **Add to playlist**.

Once your selection completed, in the **Applications/Audio player** menu, press **[Options]** and select **Play list**.

Note: to play only one music, select it and press **OK**.

- **Remove from list:** deletes a music from the Audio player list.
- **Clear list:** deletes all the musics from the Audio player list.

Note: both options delete the musics from the Audio player list but do not delete them from **Multimedia/My Sounds**.

## Alarm

*This menu allows you to set and activate the alarm.*

On the **Applications** menu, please select the **Alarm** menu and **[OK]**.

**Activate** or **Deactivate** the alarm and validate.

Set the wake-up time by entering the numbers directly or using the **▲ ▼** keys and validate.

 *The alarm icon appears on the initial screen.*

*The alarm works even when the phone is switched off.*

## Timer

*This menu is used to set and activate the timer.*

On the **Applications** menu, please select the **Timer** menu and **[OK]**.

**Activate** or **Deactivate** the alarm and validate.

Set the duration (hours/minutes) by entering the numbers directly or using the **▲ ▼** keys and validate.

 *The alarm icon appears on the initial screen.*

## ToDo

*This menu allows you to add ToDo's, access category-based Todo management and delete all the ToDo's.*

On the **Applications** menu, please select **ToDo** and press **[Options]**.

Select one of the actions in the list with the ▲ ▼ keys and validate.

- **Add Written/Vocal ToDo:** allows you to add ToDo of the text or voice type. Fill in the different items. Save the ToDo.
- **Categories:** allows you to see the different ToDo categories, assign a specific ring tone to each individual ToDo, know the number of ToDo's in each category and see them.
- **Delete all:** allows you to delete all the ToDo's from your ToDo.
- **Memory:** allows you to view the memory used by the different functions of your ToDo.

## ToDo actions menu

*This menu allows you to do all the actions possible on any ToDo.*

On the **Applications** menu, please select **ToDo**.

To display a ToDo, select it in the list and press the **OK** key.

To display the different options, press **[Options]**.

- **Modify ToDo:** allows you to modify the ToDo properties.
- **Delete:** allows you to delete the ToDo.
- **Send by MMS:** allows you to send the Vcalendar corresponding to the task by MMS.

## Sending a vCal

*You can send a vCal from each Todo task. Yet, this function is available only on certain models of phone.*

You can send vCals to another phone using MMS depending on your phone and the recipient's phone.

On the task list (Todo main menu), please select **a task** and in the Todo task actions menu list select **Send**.

Then select your contact information (phone number or Email address) before confirming.

If you receive a call while you are sending a vCal, the call will have precedence.

## Receiving a vCal

By MMS, you receive a message you have to open to extract the vCal. You cannot add the event to your diary until you have saved it.

You can assign a different beep to each Todo task.

You can also assign a different ring tone to each Todo task category.

## Exchange of data with a PC

Working from a PC, you can save/edit contacts, events and tasks stored in your phone.

To do this, you will need to connect your phone to the PC by means of a suitable data cable (USB).

Working from a PC, you can save/edit photos and ring tones not copyrighted stored in your phone.

To do this, you will need to connect your phone to the PC by means of a suitable data cable (USB).

Next, you will have to install the "My Pictures and Sounds" software (available from [www.planetsagem.com](http://www.planetsagem.com) site).

**Remark:** If a call comes in during an exchange of data with your PC, the link will be interrupted and will have to be manually re-started.

## Services

This item may not be present on your phone's menu, as it depends on your SIM.

# Messages



From this menu, you are able to send SMS and MMS. MMS is a Multimedia Message Service, which allows you to enclose audio files, images and others rich contents to your messages; these messages can even be composed of several slides. MMS are differently invoiced than SMS are. Please contact your network provider to get more information on their cost.

This menu has been compiled in collaboration with magic4™.

magic4

## Compose SMS

On the **Messages** menu, please select the **Compose** menu and validate. Choose the **SMS** option.

*The language used is the one selected on the display of the phone (if the language selected is not compatible with the Easy Message T9™, the English language will be automatically selected).*

When typing a text, a counter showing the number of characters deducted is displayed at the top of the screen (depending on model). This counter is not displayed if an icon or sound is inserted into the SMS.

When the text has been entered, **[Options]** is used to access the functions offered:

- **Send** is used to send the message by entering the correspondent's number or selecting it in the phonebook.
- **ABC Mode, 123 Mode** (see page 29).
- **T9 options** (see page 29).
- **Save** is used to save a draft in memory.
- **Cancel** is used to delete all text entered and quit.
- **Activate/Deactivate Zoom** is used to modify size of characters.
- **Activate/Deactivate Silent** is used to activate or not the keypad beep when typing the text.
- **Formatting** is used to enrich a text.
- **Insert** to insert various objects (symbols, sounds, etc.) into your message (see page 30).

The Easy Message T9™ mode helps you to easily write your short messages.



### Using T9 Mode

Press once the key corresponding to the letter chosen and compose the word by continuing to press the keys corresponding to the various letters without paying attention to the display: the word is highlighted.

If you agree on the word proposed on the screen, press the **0** key to validate it (the **0** key inserts a space), and go on writing the next word.

However, the same sequence of keys pressed can correspond to several words, existing on the dictionary. If the word that appears is not the word you expected, press the **▲ ▼** keys to scroll through the words corresponding to this key sequence. Once you agree on the word proposed on the screen, press the **0** key to validate it (the **0** key inserts a space), and go on writing the next word.

If the word you are expected is not proposed, please add characters until you get the message **Add the word?** Press **[Yes]** and validate if the word displayed suits you or modify this word before adding it in the dictionary.

### Input modes

When composing a message:  
The navigation keys assume the following functions:

- **◀ key:**  
Last word
- **▶ key:**  
Next word
- **▲ key:**  
Previous line
- **▼ key:**  
Next line
- **↖ key:**  
Deletes last letter
- **↗ key:**  
Message options
- **# ↗ key (long press):**  
Zoom mode (changes size of characters)
- **# ↗ key (short press):**  
Access to symbol table

In the input screen, the **↗** key is used to access other input options.

The mode in which you type the text is displayed at the right top of the screen. A short press of the **✖** key switches from one mode to another.

The **ABC Mode** is used to write words that do not exist in the dictionary. To get a particular character, please press the corresponding key several times: the characters will scroll down on your screen.

**123 Mode** is used to add numbers.

**Insert** mode is used to add symbols, animations, call group icons and tunes. Images and sounds can be of two types: pre-defined or customized. Pre-defined images and sounds are smaller, especially suited to exchanging messages.

#### Upper/Down case

A long press of the **✖** key will display the next letter in upper case.

Two long presses on the **✖** key allow you to switch to upper case editing mode for the whole message. Two short presses again, switches back to lower case.

#### Punctuation characters

Punctuation characters are obtained thanks to key **1** (except in **123 Mode**), or with the help of **Insert** mode (fast access by briefly pressing the **# ↗** key).

## Accented characters

Accented characters are generated automatically in T9 mode.

In ABC mode accented characters are available by pressing the key supporting the non-accented character in succession.

## Compose MMS

On the **Messages** menu, please choose the **Compose** menu and validate. Select the **MMS** option.

When the text has been entered, **[Options]** is used to access the functions offered:

- **Insert** to insert various objects (symbols, sounds, etc.) into your message.
- **ABC Mode, 123 Mode** (see page 29).
- **T9 options** (see page 29).
- **Cancel** is used to delete all text entered and quit.
- **Slide...** to compose a slideshow of the multimedia objects.
- **Preview** to see a presentation of the multimedia objects.

### Saving the message

Select **Save**. It is saved in the **Drafts** menu.

### Sending the message

- Once the text entered, press the **OK** key or press **[Options]** and select **Send**.
- Enter the receiver's number (or take it in your phonebook pressing **[Options]/Contacts**) and press the **OK** key.  
You can enter an e-mail address.

**Note:** It is possible that the voice message format (.amr) is not supported by some PC. See your PC provider.

*Warning: some message sendings may fail if the message content is too big.*

Pressing **[Options]** before sending the message gives access to different options:

- **Add Recipient:** this option allows you to add another recipient.
- **Editor:** this option allows you to modify the text before sending the message.
- **Add Subject:** this option allows you to add a subject to the message.
- **Send Options:** can be used to indicate the period of validity, activate/deactivate a request delivery report, a priority, a delivery time, a sender visibility or to defer the sending of the message.

## Receiving messages

When you receive a message, the phone plays the ring tone that you selected, and the message icon  comes on the screen of your phone.

If you do not read the messages, this icon remains displayed on the screen. When it flashes, the memory is full.

Receiving icons, backgrounds or tunes can take several seconds. An icon is blinking when the download of your message is in progress.

Note that you have two different possibilities for receiving MMS: automatically or manually; if « manual mode » is activated, then you will receive only a notification in your Inbox, meaning that a MMS is available on the MMS Server; select Retrieve in the options when you want to retrieve the MMS from the server.

For more details about automatic and retrieval modes, see « Sending options » on page 32.

Please contact your network provider to get more information on icons, backgrounds or tunes downloading.

*Received messages are stored in the SIM card or in the phone until you choose to delete them.*

## Inbox

On the **Messages** menu, please choose the **Inbox** menu and [**Select**].

Each message shows the presence of any attachments, the time and date the message was received and its size.

Messages are listed in chronological order, the latest one being displayed first.

The quantity of Not Read and Not Retrieved messages is shown. Not Retrieved and Not Read messages are shown in bold.

Select a message and press the **OK** key. Choose one of the options given.

Enclosures (pictures or sounds), which you receive, can be extracted in order to be used later on (stored...).

You can consult them in the corresponding menus (WAP bookmarks in **WAP**, ring tones in **Sounds**, wallpapers in **Display**).

## Outbox

On the **Messages** menu, please choose the **Outbox** menu and [**Select**].

This menu displays the messages that have not been sent. You can therefore send them again.

## Sentbox

The **Sentbox** menu is used to store all your sent messages if you activated the option **Store sent msgs** in the **Options** menu (see page 32).

Too many messages saved will quickly fill up the available memory and no further messages will be received.

For each message, its characteristics (shown with an icon) and the time (or date) of sending are displayed on the screen.

Select a message and press the **OK** key.

Choose one of the options given: Read, Modify, Forward, Delete, Delete all.

## Drafts

*When you store a composed message, it is stored among the drafts.*

On the **Messages** menu, please choose the **Drafts** menu and press the **OK** key.

Select a message and press [**Options**]. The options are: Delete, Read, Modify, Details.

If you select a message and press the **OK** key, you can modify it.

If you want to send it, select **Modify** then press [**Options**] and select **Send**.

## Sending options

*Several sending options are offered.*

On the **Messages** menu, please choose **Options** and [**Select**].

Choose one of the options given: SMS or MMS.

The SMS sending options are: store sent message, acknowledgment, period of validity (during that period, the network provider will try to send the message), message format, message centre number.

The MMS options are:

- **Store sent msgs**: it is highly recommended that you keep this function deactivated, in order to avoid a full memory.
- **Retrieval mode**: if you are in a poor coverage area, it may be more convenient to choose the manual retrieval mode which gives you the retrieve later option.
- **Priority**: selection of a priority to send a message.
- **Request delivery report**: request of a delivery report when sending a message.
- **Period of validity**: during that period, the network provider will try to send the message.

### Advanced settings:

- **Send delivery rep.:** sending a delivery report when receiving a message.
- **MMS ignore:** if you want to deactivate the reception of any MMS in your phone.
- **MMS server:** to select another MMS provider, or set the parameters of a new MMS provider.
- **Display Bcc:** if you want to activate/deactivate this display.
- **Sender visibility:** you choose to display or not your phone number on the receiver's phone screen, with that message.
- **Maximal Size:** if you want to activate/deactivate the option of maximum size supported for the MMS.

## Memory

*You may know the memory available for saving messages.*

On the **Messages** menu, please select the **Memory** option and [**Select**].

Choose one of the options given: SMS or MMS.

The SMS screen displays the memory available either on the SIM card or on the phone.

The MMS screen displays how much memory is used in Kbytes.

## Local information

*This menu is used to activate reception of local information broadcast by the network.*

*You can choose whether you want to receive this information or not (please contact your network provider).*

On the **Messages** menu, please select the **Local info.** menu and [**Select**].

## Calling Voice Mail

*This function allows you to call your voicemail.*

On the **Messages** menu, please select the **Call Voice Mail** option and [**Select**].

**Note:** if your voicemail number has not been entered yet, you must enter it in the menu **Settings/Calls/Voicemail**.

## Mailing list

This menu displays the mailing lists created in the phonebook.

To display the different options, press **[Options]**.

- **Add mailing list:** allows you to create a new mailing list.
- **Modify name:** allows you to modify the mailing list name.
- **Add contact:** allows you to add a contact to the mailing list.
- **Properties:** allows you to see the type of mailing list and the number of contacts.
- **Delete:** allows you to delete the mailing list.
- **Delete all:** allows you to delete all the mailing lists.
- **Send message:** allows you to compose and send a message to the contacts of the mailing list.



*This menu allows you to take photos or videos and use them for different purposes. For instance, you can send them to another phone or an Internet address, store them, use them as wallpapers or screen savers...*

## Take and send a photo

You can set the timer, the click sound, the photo quality and the photo format in the **Settings/Camera** menu.

Select the **Camera** menu. Select **Photo** and validate

The camera is now on.

Before taking a picture, there are various adjustment settings:

- To activate one of the two available zoom levels, use the ▲ keys.
- You can set the luminosity using the ◀ key:  
▣▣▣: in case of neon or halogen lighting, ▲ : outdoor, ◊) : low luminosity.

**Other settings** (pressing **[Options]**):

- **Activate timer**: to take a photo with a 5, 10 or 15 second time delay.
- **Timer duration**: to select the timer delay
- **Click sound**: to select the sound you will hear when taking a photo.
- **Photo format**: to select the format in which your photo will be saved
- **Photo quality**: to select the photo quality.

**Taking and/or sending a picture**

- Press **OK**, the photo is taken and stays on the phone display.

*Warning: if you press **[Back]**, you will go back to the previous screen and lose the photo you have just taken.*

- Press **OK** if you want to send the photo immediately.
- Press **[Save]** to save your photo and display the different options (see next page).

If there is not enough memory to save the photo, a warning message appears, prompting you to confirm whether you want to go on.

Once taken, the photo appears on the phone display. The name is made up with a number.

**Note:** using the camera during a call may disturb the call quality.

The options are:

- **Add to contact:** allows you to assign a picture to a contact saved in the phonebook.
- **Send by MMS:** allows you to send the photo by MMS (see the **Message** menu).
- **New...:** allows you to take a new photo.
- **Editor:** various options to modify a photo:
  - *Zoom:* allows you to magnify certain parts of your photo.
  - *Adjustment:* allows you to improve contrast.
  - *Emboss:* allows you to modify a photo with an embossed grey tint.
  - *Negative:* allows you to change a photo into negative.
  - *Grey Scale:* allows you to change color into black and white.
  - *Contrast:* allows you to increase or decrease the contrast of your photo.
  - *Sharpen:* allows you to sharpen a photo.
  - *Blur:* allows you to add blur to a photo.
  - *Sepia:* allows you to change colors into sepia.
  - *Shape:* allows you to shape a photo.
  - *Brightness:* allows you to increase or decrease the brightness of a photo.
  - *Solarize:* allows you to increase or decrease the solarize of a photo.
  - *Saturation:* allows you to increase or decrease the color saturation.
- **Rename:** allows you to modify the name of a photo.

Select one of the options with the ▲ ▼ keys and validate.

## Take a video

Before taking a video, you can set the sound and the video size in the **Settings/Camera** menu

Select the **Camera** menu. Choose the **Video** option and press **OK**.

Select, if you want, a video size limit, maximum size to send the video by MMS.

Press the left key [**Record**] to record then press again the left key [**Stop**] when you want to stop recording.

**Note:** the phone automatically stops recording when the maximum size available is reached.

Press [**Options**]:

- **Play:** you can display the video.
- **Save:** then you can save it. Modify the name if you want and press **OK**.
- **Save and Send:** you can save and send the video by MMS.

**Warning:** A message informs you that the storing and the compression of the video are in progress. It will take a few seconds.

During this time, you have two choices:

- either you select [**Cancel**], the compression is interrupted and when you display the video later, the phone will resume the compression.
- or you select [**Hide**], the compression is not interrupted and you can use your phone but some functions are not available (taking a video or photo, sending a MMS).

See chapter **Multimedia/My Videos** for the options on a video saved.

**Note:** the videos are saved in the phone with a 3gp format.

# Multimedia



*This menu gives you easy access to your favourite photos, videos, pictures and sounds.*

## My Videos

*This menu gives you access to your videos*

From the **Multimedia** menu, please select the **My Videos** menu and the Select label (left key).

The names of the videos stored in memory are displayed on the screen. Please use the ▲ ▼ keys to select one of them.

Once you have selected a video, press **OK**.

The video is now displayed. After a few seconds an **Options** menu button appears at the bottom of the screen . Press the **[Options]** button.

Select one of the options in the list with the ▲ ▼ keys and press **OK**.

- **Send by MMS:** to send the video by MMS (see **Messages** chapter).  
Thanks to My Pictures And Sounds (MPAS) software available from [www.planetsagem.com](http://www.planetsagem.com), you can import videos (3gp format) or export videos (MPAS converts 3gp format into mpeg4 format readable on PC).
- **Rename:** to modify the name of the video.
- **Properties:** properties of the video selected.
- **Delete:** to delete the video.

**Video Menu:**

- **Delete all:** to delete all the videos.
- **New video:** allows you to take a new video

## My Pictures

*This menu gives you access to your pictures.*

On the **Multimedia** menu, please select the **My Pictures** menu and **[Select]**.

The pictures stored are displayed on the screen. Please, use the ▲ ▼ keys to select one of them.

Once you have selected a picture, press **[Options]**.

Select one of the options in the list with the ▲ ▼ keys and validate.

- **Send by MMS:** makes it possible to transmit a picture (NB: you may not send any copyrighted picture).
- **Editor** (see chapter **Photo - Video**).
- **Use as:** allows you to use the picture as a wallpaper or screen saver.

- **Rename:** allows you to rename a picture.
- **Properties:** properties of the picture selected.
- **Delete:** allows you to delete a picture.

#### **Pictures Menu:**

- **New photo:** allows you to take a new photo.
- **Delete all:** allows you to delete all pictures.

You can import or export pictures to or from a computer using My Pictures And Sounds (MPAS), available from [www.planetsagem.com](http://www.planetsagem.com).

## **My Sounds**

*This menu gives you access to your sounds.*

On the **Multimedia** menu, please select the **My Sounds** menu and **[Select]**.

The names of the sounds are displayed on the screen. Please use the ▲ ▼ keys to select one of them.

To display the different options, press **[Options]**.

- **Send by MMS:** allows you to send a sound.  
You can import or export sounds to or from a computer using My Pictures And Sounds (MPAS), available from [www.planetsagem.com](http://www.planetsagem.com).
- **Use as:** allows you to add a sound to the ring tones list.
- **Rename:** allows you to rename a sound.
- **Add to playlist:** allows you to add a sound to the music list of the Audio player function.
- **Properties:** properties of the sound selected.
- **Delete:** allows you to delete a sound.

#### **Audio Menu:**

- **New sound:** allows you to record a new sound.
- **Delete all:** allows you to delete all the sounds.

## **Memory**

*This menu indicates the memory size used by the different features of your phone.*

On the **Multimedia** menu, please select the **Memory** menu and **[Select]**.

Use the ▲ ▼ keys to select the different features using memory. You can see the memory capacity used by each individual feature.



*This menu gives you access to your diary and get to a day, week, month or specific date. It lets you add events, access the global actions for all the events and manage them by event category.*

## Calendar menu

*This menu lets you add events, manage events by category, see the available memory and delete all the events.*

From the **Organizer** menu, select the **Calendar menu**.

- **Add Written Event/Vocal event:** allows you to add events of the text or voice type. Fill in the different items. Save the event.
- **Delete:** allows you to schedule the deletion of events that took place more than one day, week or month ago.
- **Memory:** allows you to view the memory capacity used by the different functions of your diary.
- **Delete all:** allows you to delete all the events from your diary.
- **Categories:** allows you to see the different event categories, assign a specific ring tone to each individual category, know the number of events in each category and see them.

The other menus are:

- **See month:** allows you to access events on a month-by-month basis.
- **See week:** allows you to access events on a week-by-week basis.
- **See today:** allows you to access the events for the current day and the actions possible on any event (see, modify, delete and send).
- **See date:** allows you to access events at a specific date.

## Sending a vCal

*You can send a vCal from each diary event. Yet, this function is available only on certain models of phone.*

You can send vCals to another phone using MMS depending on your phone and the recipient's phone.

On the See today list, please select an event and in the Todo event actions menu list, select Send.

Then you should in addition select your contact information (phone number or Email address) before confirming.

If you receive a call while you are sending a vCal, the call will have precedence.

## Receiving a vCal

By MMS, you receive a message you have to open to extract the vCal. You cannot add the event to your diary until you have saved it.

You can assign a different beep to each diary event.

You can also assign a different ring tone to each diary event category.



*The phonebook allows you to store numbers that you call regularly. These numbers can be stored in the SIM card or in the phone.*

*To store a contact in the phone memory, the following fields can be filled: last name, first name, numbers, email, URL, address, company, comments, ringtone, photo.*

*The fields coloured with red are mandatory.*

*To store a contact in the SIM card, only the last name and number fields must be filled.*

*The storage capacity will depend on the SIM card. Please contact your network provider to get that information.*

## Using the phonebook

Display the **Phonebook** menu.

The list of your contacts appears. By default, the cursor is positioned on the first name in alphabetical order.

If you are using your phone and SIM card for the first time, the phonebook list may be empty, only the Add phone contact function will be available.

If you are using your phone and SIM card for the first time, the phonebook list will be empty (see **Storing a new contact**, on page 43).

Different icons inform you of the location where the contact is stored:



contact stored in the SIM card



contact stored in the phone



if the Fixed dialling option is activated, only those contacts may be called. See **PIN2 number** and **Fixed dialling** in **Security** menu for more details about this activation.

## Storing a new contact

### Adding a contact in the SIM card memory

- From the contact list, select **Contacts menu**, [**Options**].
- Select **Add SIM contact** and press the **OK** key.
- Select **SIM card** or **Fixed directory** and press the **OK** key.
- Enter the last name and press the **OK** key.
- Enter the number and press the **OK** key.
- Press [**Save**] to store it.

### Adding a contact in the phone memory

- From the contact list, select **Contacts menu**, [**Options**].
- Select **Add phone contact** and press the **OK** key.
- Enter the last name and press the **OK** key.
- Enter the number and press the **OK** key.
- Fill in other fields if you want.
- Press [**Save**] to store it.

## Contacts menu

### My numbers

You can create the entries corresponding to your own numbers in order to consult them when necessary. Select **My numbers** and validate. Enter the different details and validate.

### Mailing list

A mailing list allows you to send a same message to several recipients at the same time.

- From the contact list, select [**Options**].
- Select **Mailing list** and press the **OK** key. The phone asks you to confirm the creation of a new list.
- Select the list type (SMS or MMS) and press the **OK** key.
- Enter a name and press the **OK** key.
- Then, on a list press [**Options**]. Select **Add contact** each time you want to add a contact in the list.

## Memory

Select **Memory** and validate. Select SIM or Phone and validate.

Phone: the screen displays the amount of memory used. The memory capacity is shared between the phonebook and various other features. If you lack memory, check if you can free some space from another feature.

SIM: available memory only for contacts.

## Delete all

This allows you to delete all the contacts stored in the phone memory.

## Download SIM card/Backup to SIM

This allows you to copy all the SIM contacts to the phone memory or all the phone contacts to the SIM card.

## List choice

This menu allows you to select the default phonebook (SIM, Phone, SIM and Phone) displayed when the phone switches on.

## Options from a contact saved

### Displaying a contact

Select a contact from the list using the ▲ ▼ keys and press the **OK** key. The name and the number are displayed.

**Note:** By directly pressing one character, the phone will display the first contact saved in the phonebook, starting with it.

To display the different options, select a contact from the list using the ▲ ▼ keys and press [**Options**].

### Calling a contact

Several ways:

- Select a contact. Press the  key to start the call.
- Select a contact, press the **OK** key, his number is displayed, press [**Call**] to start the call.
- Direct call from the initial screen (only for the contacts stored in the SIM card memory): type the number with which the contact was saved then \* (example : 21 \*) or the number then # # , the number is displayed, confirm.

### Modify contact

Modify what you want and validate then select **Save** once the modifications completed.

## Send message

To send a SMS or a MMS to a contact (see chapter **Messages**).

## Send By

To send a contact details by SMS or MMS (see chapter **Messages**).

## Copy to SIM/Copy to phone

This allows you to copy your phonebook entries from one memory to the other. Only the name and the first phone number will be copied.

## Delete

Validate deletion of entry.

## Sending a vCard

*It is possible to send a vCard from each contact stored in the phonebook.*

vCards can be sent to another phone supporting vCard.

On a contact in the phonebook, please select the **Send by** option menu item (SMS or MMS).

If the vCard is sent successfully, an information message is displayed.

vCards can be sent as an attachment to an SMS or MMS message. See **Compose MMS** on page 30.

## Receiving a vCard

When a vCard is received enclosed to an SMS or MMS message, the message « You have received 1 message » is displayed.

Open the MMS from the inbox. Press [**Options**] and select **Extract**; select the vCard among the list of objects attached to this MMS, and add this contact to the phonebook by pressing the **OK** key. A message is displayed to confirm the action.

# Settings

---



*This menu allows you to set your phone.*

## Sounds

*This menu allows you to customize the ring tones on your phone and to activate beep and vibrate modes.*

### Volume and ring tone

*This menu allows you to allocate a ring tone to different functions.*

On the **Sounds** menu, please select the **Ring tones** menu and **[Select]**.

Select the function on which you want to choose a ring tone.

Select the **ring tone** from the proposed list and validate.

Adjust the **volume** using the ▲ ▼ keys and validate.

*You can deactivate the sound by pressing the # \* key.*

### Vibrate

*This menu allows you to activate the vibrate mode for calls.*

On the **Sounds** menu, please select the **Vibrate** menu and **[Select]**.

Select the vibrate mode from the proposed choices and validate.

### Silent mode

*This menu allows you to switch to Silent mode.*

On the **Sounds** menu, please select **Silent mode** and **[Select]**.

**Activate** or **deactivate** Silent mode and validate.

Silent mode can also be accessed via the initial screen by holding down the # \* key.

 *When the phone is in silent mode, the relevant icon appears on the initial screen.*

*In this mode, the ring tone will not function, except for the alarm clock.*

**Note:** if you have activated the silent mode, it does not remain after switching off your phone.

## Beeps

*This menu allows you to activate a beep for the battery, the keypad or the network.*

On the **Sounds** menu, please select the **Beeps** menu and **[Select]**.

Select the type of beep you want to allocate from the proposed choices (Flip beep, Keypad beeps, Network beep, Battery beep) and validate. Activate or deactivate the beep and validate.

If you select key beeps, different options are given.

## Recorder

*These menu allows you to record you own melody.*

On the **Sounds** menu, please select the **Recorder** menu and **[Select]**.

Pressing **[Start]** record your melody or your voice by means of the microphone then save it.

Give it a name and validate. The new tone is saved in the list of ringtones and in **Multimedia/My Sounds**.

If you select the recorder by means of a programmable key, the sound is saved in the **Applications/ToDo** menu.

## Display

### Skins

*This menu allows you to choose the skin of your phone, i.e. define its look (text font, colors, default animation, background image...).*

On the **Display** menu, please select **Skins**.

Select the desired skin and validate.

Skins are not downloadable but you can download screensavers and boot mode animations without changing those included by default with the skin.

### Wallpaper

*This menu allows you to display the background picture you want on your phone.*

On the **Display** menu, please select the **Wallpaper** menu and **[Select]**.

Select the wallpaper and **[View]**. The picture appears in the background of the screen.

Press **[OK]** to validate this choice, or **[Back]** to go back to choice.

**Note:** the **Random** option allows you to display a wallpaper scrolling different pictures in a random way.

## Screensaver

*This menu allows you to display an animation when the phone is in standby mode.*

On the **Display** menu, please select the **Screensaver** menu and [**Select**].

Select one of the screensavers given and [**View**].

The chosen screensaver appears on the screen, validate it.

## Operator logo

*This menu allows you to display your operator's logo on the initial screen.*

On the **Display** menu, please select the **Operator logo** menu and [**Select**].

Select **Activate** or **Deactivate** and press **OK**.

## Contrast

*This menu is used to adjust screen contrast.*

On the **Display** menu, please select the **Contrast** menu and [**Select**].

Adjust the contrast using the ▲ or ▼ keys.

## Energy saving

*This function is used to deactivate the screen and the keypad backlight and consequently increase the battery life of your phone.*

On the **Display** menu, please select the **Energy saving** menu and [**Select**].

Two options are available to choose from for the backlight:

- **Screen only**: only the screen is lit up.
- **Full backlight**: both the screen and the keypad are lit up.

**Note**: in any case, after a certain time of inactivity, the backlight will be automatically turned off to save battery life.

## Camera

*This menu allows you to set the camera features of your phone.*

On the **Settings** menu, please select the **Camera** menu and **[Select]**.

- **Timer**: this menu enables you to take a photo with a 5, 10 or 15 second time delay. During preview of the photo, activate the delayed exposure by pressing **[Timer]**. (NB: if you want to take the photo immediately, then press **OK**).
- **Click sound**: This menu allows you to select the sound you will hear when taking a photo.
- **Photo format**: This menu allows you to choose the format in which your photo will be saved.
- **Photo quality**: This menu allows you to select the photo quality.
- **Video size restr.:** This menu allows you to choose a video size.
- **Video sound**: This menu allows you to select or not the sound when recording a video.

## Languages

*This menu allows you to choose your phone's display language.*

On the **Settings** menu, please select the **Languages** menu and **[Select]**.

Select your language and validate.

If you select **Automatic**, the language used will be the one relative to your SIM card.

## Phonebook

From the **Settings** menu, please select the **Phonebook** menu and **[Select]**.

This menu allows you to select the way to sort contacts in the phonebook (by name or first name).

## Contacts list

From the **Settings** menu, please select the **Contacts list** menu and **[Select]**.

This menu allows you to display the list of your contacts recorder either on the SIM card, or the phone, or on the SIM card and on the phone.

# Calls

The **Calls** menu allows you to manage all the calls functions (call forward, displaying numbers, call waiting, voicemail number, etc.).

## Call forward

Depending on your subscription, this service allows you to forward incoming calls to a different number or to the voice mailbox.

On the **Calls** menu, please select the **Call forward** menu and **[Select]**.

Choose the type of forwarding you want from the options available.

## View last calls

This menu allows you to access the list of last numbers used.

On the **Calls** menu, please select the **View last calls** menu and **[Select]**.

For every phone call are displayed on the screen:

- its characteristics (shown with an icon),
- the time (or date),
- its duration.

Select a call from the list and validate.

Select one of the options given: Call, Store in your phonebook, Send a message, Delete, Delete all.

You can also make the call by pressing the  key.

Fast access to the list of calls from the initial screen: press the  key.

## Counters

This menu allows you to consult the duration of the up calls.

It can also be used to check the volume of data exchanged in GPRS.

On the **Calls** menu, please select the **Counters** menu and **[Select]**.

Select one of the options given.

## Display number

*This menu allows you to modify the status of the display number function.*

On the **Calls** menu, please select the **Display number** menu and **[Select]**.

Select one of the options given: Anonymous mode, My number, Callers' number.

### Anonymous mode

You have the facility to mask your number on the phone of the person you are calling.

- **Presets**: network default mode.
- **Yes**: you choose to active anonymous mode and then not to display your number.
- **No**: you choose not to activate anonymous mode and then to display your number.

## Call waiting

*During a call, you may be informed that a caller is trying to reach you: you hear a special tone. The caller's identity is displayed on the screen (name or number).*

*(Operator-dependent service)*

On the **Calls** menu, please select the **Call waiting** menu and **[Select]**.

You can **activate**, **deactivate**, or consult the **status** of the call waiting service in order to check if it is active or not.

During a call, if a second caller tries to contact you, the screen displays the call warning.

## Automatic redial

*This menu allows you to call back a caller you have not managed to reach.*

On the **Calls** menu, please select the **Auto redial** menu and **[Select]**.

You can set the redial function to inactive, on request or systematic.

If you choose **On request**, your phone will offer to redial your caller automatically if his number is busy.

## Blacklist

*The blacklist is used to limit failures on automatic calls (calls generated by the automatic redial function or by applications: data, fax for example).*

On the **Calls** menu, please select the **Blacklist** menu and **[Select]**.

When several automatic calls failed with a number (number busy or unknown), this number is put in the blacklist and no automatic call will be done with this number any more until you delete it from the blacklist.

**Note**: this function does not apply to the calls performed manually.

## Voicemail

*This function is used to record your answer phone number.*

*This number will be used during a call to the voice mailbox using the programmable keys.*

On the **Calls** menu, please select the **Voicemail** menu and **[Select]**.

Enter your answer phone number and validate.

## ALS

The ALS (Alternate Line Service) function allows you, depending on your subscription, to have two phone lines.

The number of the line selected (1 or 2) for the calls appears on the initial screen.

## Security

*This menu allows you to configure your phone's security settings.*

### PIN number

*This menu allows you to activate and modify your phone's PIN.*

On the **Security** menu, please select the **PIN number** menu and **[Select]**.

To modify the PIN, select **Modify** and **[Select]**.

Enter old PIN and validate.

Enter new PIN twice and validate.

To activate or deactivate the PIN, select the **Check PIN** menu and **[Select]**.

Enter PIN and validate.

Select **Activate** or **Deactivate** and validate.

See page 88 to unblock the SIM card in case of wrong PIN number typed three times in succession.

### PIN2 number

*You have a second PIN number to allow you to access certain functions\*.*

*\* These functions may or may not be available depending on your SIM card.*

Proceed as above in order to activate, deactivate or modify PIN number 2 of your phone.

## Phone code

*The Phone code menu allows you to activate the phone code so that it is requested and checked whenever the phone is switched on if a different SIM card is used. This code is automatically linked to the SIM card installed when the phone is activated, for example to protect the phone if stolen.*

To activate or deactivate the phone code, select the **Phone code** menu and validate.

Enter 0000 (the factory code, by default) and validate.

Select **Activate** or **Deactivate** and validate.

To modify the phone code, select **Modify** and validate.

Enter old phone code and validate.

Enter new phone code and validate.

Enter phone code again to confirm it and validate.

## Confidentiality

*The Confidentiality function is used to delete numbers stored in View last calls and the SMS stored in the memory when a new SIM card is inserted into the phone.*

*This menu allows the activation of automatic deletion, after power off/on, for messages and/or calls stored in the phone.*

On the **Security** menu, please select the **Confidentiality** menu and **[Select]**.

Choose **Organizer**, **Calls** or **Messages**.

Select **Activate** or **Deactivate** and validate.

## Operator

*This menu allows you to modify the call barring.*

On the **Security** menu, please select the **Operator** menu and **[Select]**.

*Access to this service depends on your type of subscription.*

## Call barring

*Call barring can be applied to ALL calls (incoming and outgoing), to all incoming calls when you are away from your home country (if roaming available).*

*This menu allows you to block the sending or reception of certain calls.*

*Before you can use this service, a password will be provided by your operator when you take out your subscription.*

On the **Security** menu, please select the **Call barring** menu and **[Select]**.

Select **Activate** or **Deactivate** and validate.

*Access to this service depends on your subscription type.*

## Fixed dialling

*This menu allows you to restrict the outgoing calls.*

*The availability of this menu depends on your SIM.*

On the **Security** menu, please select the **Fixed dialling** menu and [**Select**].

Enter PIN2 number and validate.

Select **Activate** or **Deactivate** and validate.

Proceed as for any other phonebook.

When activating this function, only the numbers stored in the fixed dialling can be called.

*This phonebook is linked to the SIM card, and its size depends on the card's capacity.*

## Cost

*This menu allows you to control the cost of your calls (\*).*

On the **Security** menu, please select the **Cost** menu and validate.

The **Cost** menu (\*) lets you check the cost of the last call you made and of all the calls you made since you last deleted them.

The **Delete costs** menu (\*) lets you delete the cost of your last call and reset the cost counter after entering your PIN 2 code.

(\*) WARNING

*Depending on how the networks and associated subscription cards are configured, some functions may be unavailable (these are marked out with \*).*

## Networks

*This menu allows you to configure network preferences.*

On the **Settings** menu, please select the **Networks** menu and [**Select**].

Choose **Selection** to activate (automatically or manually) one of the networks accessible in the area in which you are located.

Choose **Preferred** to view all the pre-registered networks.

Choose **GPRS** to select the way you want to be attached on the GPRS network: always, or only when needed (when launching a data connection).

## Leds

This menu allows you to select or not the color of the LED located on the flip.

The color may be selected for different functions.

From the **Settings** menu, please select the **Leds** menu and **OK**.

From the list, select the function where you want to change the color.

Select the color and **OK**.

## Shortcuts

*This menu allows you to allocate functions to the programmable keys.*

*(Function available depending on model)*

*This menu allows you to customize the settings of your phone to make it as convenient as possible for you to use.*

On the **Settings** menu, please select the **Shortcuts** menu and **[Select]**.

Select the key that you wish to modify and validate.

Choose the function that you want to allocate to this key and validate.

## Date / Time

### Set Date/Time

*This menu allows you to set the date and time of your phone.*

On the **Date / Time** menu, please select **Set Date/Time** and **[Select]**.

- **Date:** set the date by entering it directly in digital form or by using the ▲ ▼ keys.  
Use the ► (or ◀) key to access the next (or previous) entry field.  
Once the date is correct, validate it.
- **Time:** same procedure as for setting the date.

### Automatic update

*This menu allows you to choose manual or automatic updating of date and time (after switch off of your phone or when going abroad for instance) (service depending on the operator).*

From the **Date / Time** menu, please select **Automatic upd.** and **[Select]**.

Please select Automatic, Manual or On demand and press **OK**.

## Display

*This menu allows you to select the date and time display type.*

On the **Date / Time** menu, please select **Display** and **[Select]**.

In the list that appears, select the desired display type between:

Analog, Digital, None, by using the ▲ ▼ keys and validate.

## Time zone

*This menu allows you to change time in relation to the GMT time.*

On the **Date / Time** menu, please select **Time zone** and **[Select]**.

Choose the time of the country desired by calculating the time from the GMT time.

## Daylight savings

*This menu allows you to set your phone to the summer/winter time.*

On the **Date / Time** menu, please select **Daylight savings** and **[Select]**. Select 1 h, 2 h **Summer time** or **Winter time** depending on the season, and validate.

## Active flip

From the **Settings** menu, please select **Active flip** and press **[Select]**.

If you select **Activate**, calls are answered by opening the flip.

**Note:** closing the flip always hangs up, whatever the selection made in this menu (**Activate** or **Deactivate**).

## WAP settings

*This menu allows you to set various parameters needed for WAP connection.*

On the **Settings** menu, please select **WAP settings** and **[Select]**.

You can add or modify URL addresses.

## Help

This menu allows you to activate or deactivate the display of the help in the phone.

## Connectivity

*You can also connect it to your computer in order to receive data or fax through GSM or GPRS network (depending on subscription): configure the connection parameters of your computer using the Wellphone CD supplied as an accessory.*

### Serial Speed

On the **Connectivity** menu, please select the **Serial Speed** parameters menu and validate.

The **Speed** menu enables you to select the speed to be used for data exchanges via your phone's serial port. Except for specific requirements, it is advisable to stick to the default setting: **Automatic**.

### Car kit

*This menu allows you to configure your phone with a car kit.*

On the **Connectivity** menu, please select the **Car kit** menu and **[Select]**.

Choose one of the options given: Automatic response, Switch off, Kit volume.

### Headset

*This menu allows you to configure your phone with a car kit.*

From the **Connectivity** menu, please select the **Headset** menu and **OK**.

Choose one of the options given: Auto response, Kit volume.

### SyncML

You can synchronize your phonebook, your organizer or your ToDos with your archives stored in your operator's network depending on the options offered by your operator.

The local synchronisation with your computer is only computer originated, from Wellphone software; you have only to configure your USB connection in your phone.

# Technical features

---

Weight: 78 g

Size: 82.2 x 42.7 x 23 mm

Original battery: Lithium ion 700 mAh

Battery life calls/standby: up to 200 mn/240 h (these values are theoretical ones and given for information only)

Multimedia objects supported:

- Audio formats: iMelody, Midi, wave, amr, MP3, AAC
- Graphic formats: wbmp, bmp, png, gif, animated gif, jpeg
- Video format: 3gp

Functions integrated : Modem/Data/Fax

Size of memory available for messages:

- 100 SMS
- 300 kB for MMS (inbox, outbox and drafts together; MMS depending on option)

Size of memory available for the phonenook and the multimedia objects: 3 MB

Maximum size of each message:

- SMS < 160 characters
- MMS < 100 kB for outgoing, 100 kB for incoming messages (depends on the phone configuration and on the operator reservations)

Using temperature: from - 10°C to + 55°C

# Certification and safety information for the United States and countries using FCC standards

---

## FCC Part 15 statement

This device complies with part 15, part 22 and part 24 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

### WARNING

Changes or modifications made to this equipment not expressly approved by Sagem Communication for compliance could void the user's authority to operate the equipment.

## FCC SAR information

### THIS MODEL PHONE MEETS THE FCC'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radiofrequency (RF) energy set by the United States Federal Communications Commission (FCC). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and Health Canada is 1.6 W/kg (\*). Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the RF limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (i.e., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for these model phones as reported to the FCC when tested for use at the ear and when worn on the body are (measured at a distance of 0.59 inches (1.5 cm)):

SAR at the ear (W/kg)		SAR worn of the body (W/kg)	
GSM 850	PCS 1900	GSM 850	PCS 1900

(\*) *In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.*

While there may be differences between the SAR levels of various phones and at various positions, they all meet the FCC requirement. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID M9HMC06A.

Additional Information can be found on the website of the World Health Organization (<http://www.who.int/emf>).

## Safety Information

**Aircraft:** Switch off your wireless device whenever you are instructed to do so by airport or airline staff. If your device offers a "flight mode" or similar feature, consult airline staff as to its use in flight.

**Driving:** Full attention should be given to driving at all times, and regulations restricting the use of wireless devices while driving must be observed. For further driving safety tips, please refer to **Driving safety tips** at page 65.

**Hospitals:** Mobile phones should be switched off whenever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical instruments.

**Gas stations:** Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

**Interference with personal medical devices:** You should always consult your physician and review the device manufacturer's instructions to determine if operation of your phone may interfere with the operation of your medical device.

As a general rule:

- **For pacemakers:** Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 cm) be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pace maker and do not carry it in a breast pocket.
- **For hearing aids:** Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

The ring tone, info tones, and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (at least 3.9 inches (10 cm)).

Use only batteries and charging devices designed for your phone. Otherwise you risk serious damage to health and property and may void any warranty.

**CAUTION!** Small parts like the SIM card could be swallowed by young children.

Do NOT open the phone. Only the battery and the SIM card may be removed. Do NOT open the battery.

Keep the battery out of children's reach. Do not allow the battery to be put into the mouth.

## Distance of operation

This phone is designed to comply with the FCC radio frequency (RF) exposure guidelines when used as follows:

- **Against the ear:** Place or receive a phone call and hold the phone as you would a wireline telephone.
- **Body worn:** When transmitting, place the phone in a carrying accessory that contains no metal and positions the phone a minimum of 0.59 inches (1.5 cm) from your body. Use of other accessories may not ensure compliance with exposure guidelines. If you do not use a body worn accessory and are not holding the phone at the ear, position the phone a minimum of 0.59 inches (1.5 cm) from your body.
- **Data operation:** When using a data feature, position the phone a minimum of 0.59 inches (1.5 cm) from your body for the whole duration of the data transmission.

## FDA consumer information on wireless phones

The US Food and Drug Administration (FDA) provides consumer information on wireless phones at: <http://www.fda.gov/cellphones/qa.html>.

Following are safety related questions and answers discussed at this web site:

### Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

**What is FDA doing to find out more about the possible health effects of wireless phone RF?**

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

#### **What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?**

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data **do not** demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

#### **What about children using wireless phones?**

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all.

#### **Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?**

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that handsfree kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

### **Do wireless phone accessories that claim to shield the head from RF radiation work?**

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone.

Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption.

## **Driving safety tips**

Wireless phones give people the ability to communicate almost anywhere, anytime. But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility.

Below are safety tips to follow while driving and using a wireless phone that should be easy to remember.

Get to know your wireless phone and its features such as speed dial and redial.

When available, use a hands free device.

Position your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.

Do not take notes or look up phone numbers while driving.

Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip. But if you need to dial while driving, follow this simple tip—dial only a few numbers, check the road and your mirrors, then continue.

Do not engage in stressful or emotional conversations that may be distracting.

Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency.

Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number.

Call roadside assistance or a special wireless non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

# Certification and safety information for Europe and countries using CE standards **CE**

---

## CE conformance statement

### Déclaration CE de Conformité

**Fabricant**  
*Manufacturer*

**Sagem Communication**

**Adresse**  
*Address*

**Le Ponant de Paris**  
27 rue Leblanc - 75512 Paris cedex 15 - FRANCE

*Déclare sous sa responsabilité que le produit  
Declares under our sole responsibility that our product*

**Nom du produit**  
*Product Name*

Dual Band GSM850/PCS1900 MC2006a (myC5-3a)

*est conforme aux exigences des directives européennes suivantes :  
conforms to the requirements of the following EEC directives:*

**EEC Directive 1999/5/CE**

**Sécurité (Safety)**

**EN 60950**


**CEM (EMC)**

**EN 301 489-1  
EN 301 489-7**

**Lieu et date**  
*(Place and date of issue)*

*Cergy St Christophe - February 19<sup>th</sup>, 2007*

**Signature**

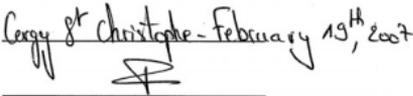

## CE SAR information

### THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0,73 W/kg (\*). As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide (\*\*).

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body. Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>).

#### Advice for limiting exposure to radiofrequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's' RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.

(\*) *The tests are carried out in accordance with international guidelines for testing.*

(\*\*) *Please see the **Distance of operation** section about body worn operation, page 69.*

## Safety information

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited.

Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower than - 10°C and higher than + 55°C.

The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

### Electrical safety

Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

### Aircraft safety

When travelling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs.

Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.

Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

### Explosive materials

Please comply with warning signs at petrol station asking you to switch your phone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

### Electronic equipment

To avoid the risk of demagnetisation, do not let electronic devices close to your phone for a long time.

### Electronic medical equipment

Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

### Hospitals

Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

### Road safety

Do not use your phone when driving. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

## Distance of operation

This phone model has been tested and meets radiofrequency exposure guidelines when used as follows:

- against the ear: place or receive a phone call and hold the phone as you would a wireline telephone,
- body worn: when transmitting, place the phone in a carry accessory that contains no metal and positions the phone a minimum of 1.5 cm from your body. Use of other accessories may not ensure compliance with radiofrequency exposure guidelines. If you do not use a body worn accessory and are not holding the phone at the ear, position the phone a minimum of 1.5 cm from your body,
- data operation: when using a data feature, position the phone a minimum of 1.5 cm from your body for the whole duration of the data transmission.

## CE Environment

### Packaging

To facilitate the recycling of packaging materials, please obey the sorting rules instituted locally for this type of waste.

### Batteries

Spent batteries must be deposited at the designated collection points.

### The product



The crossed-out waste bin mark affixed to the product (including its accessories) means that it belongs to the family of electrical and electronic equipment.

To promote the recycling and recovery of waste electrical and electronic equipment (WEEE) and at the same time safeguard the environment, European regulations require you to obey the sorting rules instituted locally for this type of waste.

# For Customers in the United States

---

## LIMITED WARRANTY

Brightstar US, Inc. (Brightstar) warrants this product including any accessories sold for use with the products against defects in materials or workmanship under normal usage for the periods outlined in the warranty provided with the product, as follows:

### DEAD ON ARRIVAL / OUT OF BOX FAILURE (DOA):

This product is for standard consumer use only and is guaranteed to be in proper working order as is determined upon initial removal from the package and subsequent power up and test call. If this product is determined to be defective, Brightstar will repair or replace the product, at its option, at no charge.

### OUT OF WARRANTY REPAIR

Any unit requiring repair not covered by the warranty requires authorization from your service provider and Brightstar. Contact your service provider to obtain this authorization.

This warranty is valid only in the United States.

## OTHER CONDITIONS

If Brightstar chooses to replace the equipment, Brightstar may replace it with reconditioned equipment. Parts used in repairing or replacing the equipment will be warranted for 90 days from the date the equipment is returned to you. This warranty is not transferable.

## LIMITATIONS AND EXCLUSIONS

TO THE EXTENT PERMITTED BY APPLICABLE LAW, BRIGHTSTAR WILL NOT BE RESPONSIBLE FOR ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BRIGHTSTAR WILL NOT, IN ANY EVENT, BE LIABLE IN CONTRACT OR TORT FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, INCLUDING TRAVEL EXPENSE, TELEPHONE CHARGES, LOSS OF REVENUE, LOSS OF TIME, INCONVENIENCE LOSS OF USE OF EQUIPMENT, LOSS OF INFORMATION OR DATA, OR OTHER DAMAGE OR LOSS CAUSED BY OR IN CONNECTION WITH THE PRODUCTS, ACCESSORIES, SOFTWARE OR EQUIPMENT FAILING TO FUNCTION PROPERLY. THIS WARRANTY SETS FORTH ALL OF BRIGHTSTAR'S RESPONSIBILITIES REGARDING THIS PRODUCT AND ITS ACCESSORIES.

Some states and jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

## Limited Warranty

The mobile phone and software program developed by Sagem Communication (SAGEM) remains the exclusive property of Sagem. YOU ARE STRICTLY PROHIBITED FROM MODIFYING, TRANSLATING, DE-COMPILING OR DISASSEMBLING THIS SOFTWARE PROGRAM OR ANY PART THEREOF.

Brightstar US, Inc. (Brightstar) is the exclusive distributor for Sagem in the United States and is responsible for all warranties for SAGEM phones and accessories sold in the United States. Please DO NOT contact Sagem directly regarding any warranty claims; doing so will only delay the processing of your claim.

**THE LIMITED WARRANTY AND REMEDIES SET FORTH IN THIS WARRANTY CARD ARE THE EXCLUSIVE WARRANTIES AND REMEDIES PROVIDED BY BRIGHTSTAR AND ARE IN LIEU OF ALL OTHER WARRANTIES, TERMS, OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW. BRIGHTSTAR OR SAGEM MAKES NO OTHER WARRANTY, EXPRESS OR IMPLIED, AND EXPRESSLY DISCLAIMS ALL IMPLIED WARRANTIES, INCLUDING ALL WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE REMEDIES SET FORTH HEREIN ARE YOUR EXCLUSIVE REMEDIES FOR BREACH OF WARRANTY.**

### Usage precautions

Your phone allows you to download ring tones, icons and animated screensavers. Some of these items may contain data that may cause malfunction of your phone or data losses (a computer virus, for example). For this reason, Brightstar disclaims all responsibility concerning (1) the reception of downloaded data or losses of such data, (2) such data's impact on the operation of the phone, and (3) damages resulting from receiving any downloaded data or loss of such data. In addition, any failure caused by receiving downloaded data that do not comply with the phone's specifications is excluded from the warranty. The diagnosis and repair of a phone infected by downloaded data will be at the expense of the customer.

### Warranty conditions

Whenever you wish to make a warranty claim, please contact Brightstar at the address given below and present the purchasing paperwork that was given to you.

1. Brightstar warrants that the new phone (excluding consumables but including new accessories bundled with the phone), is free from defects in materials and workmanship under normal usage for a period of twelve (12) months effective from the date you purchased the phone, to be evidenced by presentation of the paperwork stating the purchase date of the phone. Phones that have been repaired or replaced as standard during the warranty period stated above are warranted (parts and labor) until the later of these two dates: Expiry of the original warranty period of twelve (12) months stated above; or three (3) months from the repair or replacement under warranty.

2. All faulty phones under warranty will be replaced or repaired free of charge at Brightstar's option.

3. You are responsible for sending the phone to the repair center. In order to repair or replace a phone under warranty, Brightstar also requires that a legible and unmodified purchase document, stating vendor's name and address, date and place of purchase, type of phone and IMEI (to display the IMEI on your phone's screen, type: \*#06#), be attached to the warranty, and that the information on the phone identification label be legible and that such label or any other seal have not been tampered with. The warranty applies under normal usage for the period outlined above. Prior to sending the phone for repair, it is your responsibility to backup at your expense any customized data stored in the phone (such as phonebook, settings, wallpapers, and previously downloaded data). BRIGHTSTAR IS NOT RESPONSIBLE FOR DAMAGE TO CUSTOMER FILES, PROGRAMS OR DATA. The information or operating elements and the contents of files will not be re-installed in any case in the event of loss. Brightstar may decide, at its option, to repair the phone with new or reconditioned parts, or replace the phone with a new phone or with a phone in good working condition. During its repair work Brightstar may make, where necessary, any technical modifications to the phone where these modifications do not adversely affect functionality. Faulty parts to be replaced during a repair under warranty become the property of Brightstar. The application of the warranty is subject to the full payment of the sums due for the phone when the request for support is made.

4. Breakdowns, damage or malfunctions due to the following are excluded from the limited warranty: (i) non-compliance with the installation and use instructions, (ii) an external cause (such as shock, lightning, fire, vandalism, malice, water damage of any type, contact with various liquids or any harmful agent, unsuitable electric current, extreme humidity or heat, improper storage, etc.), (iii) modifications of the phone made without the written consent of Brightstar, (iv) a servicing fault, as described in the documentation supplied with the phone, (v) lack of supervision or care, (vi) poor environmental conditions of the phone (including temperature and hygrometry, effects of variations in electric voltage, interference from the mains network or earth), (vii) repair, including opening or trying to open the phone or servicing done by personnel not approved by Brightstar, (viii) inadequate packaging and/or poor packing of the phone that is sent back to Brightstar, (ix) the use of products or accessories not sold by Brightstar as compatible with the phone, or (x) the opening or closing of a SIM Lock done without the agreement of the original operator.

5. In addition, the warranty does not cover: (i) normal wear and tear of the phone and accessories, (ii) change of parameters of the cellular network made after the phone was sold, (iii) supply of new software versions, (iv) delivery of consumables and installation or replacement of these consumables, (v) phone or software modified or added without the written consent of Brightstar, (vi) phones returned to Brightstar without having complied with the return procedure specific to the phone covered by this warranty, or (vii) communication problems linked with a poor environment, including problems accessing and/or logging onto the Internet, breakdowns of the access network, the failure of the subscriber's or his correspondent's line, transmission fault (such as poor geographic coverage by radio transmitters, interference, disturbance, failure or poor quality of phone lines, etc.), a fault inherent to the local network (such as cabling, file server, user phone) and/or transmission network fault (such as interference, disturbance, failure or poor quality of the network, etc.).

6. In the event a customer submits a product for repair or replacement and such product is excluded from warranty coverage or the warranty period has expired, Brightstar will draw up an estimate to be given to the customer for acceptance before any repair commences. The repair and freight costs (to and from the repair center) given in an estimate accepted by the customer will be charged to the customer.

7. Any questions or correspondence regarding this limited warranty should be addressed to:

Brightstar US, Inc.

Attn: SAGEM Warranty & Repair Services

1001 Technology Way

Libertyville, IL 60048

These provisions are valid unless Brightstar has made a special written agreement with the customer. If one of the provisions turns out to infringe a requirement under applicable law that consumers could have the benefit of under the national legislation, such provision will not be applied, but all other provisions will remain valid.

# For customers outside the United States

---

## Warranty

You must always use your phone for the purpose for which it was designed, under normal operating conditions. Sagem Communication declines all responsibility for any use outside of the scope of its designed purpose and for any consequences of this use.

The software program developed by SAGEM remains the exclusive property of Sagem Communication. It is therefore highly prohibited to modify, translate, de-compile or disassemble this software program or any part thereof.

### Usage precautions

Your phone allows you to download ring tones, icons and animated screensavers. Some of these items may contain data that may cause malfunctions of your phone or data losses (virus for example).

For this reason, Sagem Communication rejects all responsibility concerning (1) the reception of downloaded data or losses of the said data, (2) the impact on the operation of the phone and (3) damages resulting from receiving the said downloaded data or loss of said data. In addition, Sagem Communication states that a failure caused by receiving downloaded data that do not comply with the specifications set by Sagem Communication is excluded from the warranty. Consequently, the diagnosis and repair of a phone infected by the said downloaded data will be at the expense of the customer.

Any content that you download to your phone may be protected by copyright belonging to third parties and consequently you may not have the right to use this content or its use may be restricted. Consequently it is up to you to ensure that you have permission, such as under the terms of a license agreement, to use any content that you download. Furthermore, Sagem Communication does not guarantee the accuracy nor the quality of any content that you download. You alone are responsible for the content that you download to your mobile phone and how you use it. Sagem Communication cannot be held responsible for this content nor for its use.

It is your responsibility to ensure compliance, at your own expense, with the laws and regulations applicable in the country where you use your phone.

### Warranty conditions

Whenever you wish to make use of the warranty, please contact your vendor and present him with the purchasing paperwork that he gave you.

If a fault occurs, he will advise you.

1. The new phone (excluding consumables), including new accessories bundled with the phone, are guaranteed by Sagem Communication, parts and labour (apart from travel) against any manufacturing fault for a period of twelve (12) months with effect from the sale of the phone to the customer, on presentation of the paperwork stating the purchase date of the phone.

Phones that have been repaired or replaced as standard during the warranty period stated above are guaranteed (parts and labour) until the later of these two dates:

Expiry of the guarantee period of twelve (12) months stated above or three (3) months with effect from the date of support provided by Sagem Communication.

Your legal rights under the terms of applicable national law as well as your rights in relation to your retailer, as set out in the sales contract, remain applicable and are not in any way affected by this guarantee.

In any disputes, the phone is covered by the legal warranty against the consequences of faults or hidden defects in compliance with articles 1641 and subsequent of the French civil code.

2. All faulty phones under warranty will be replaced or repaired free of charge at Sagem Communication's option (with the exclusion of repair of any other damage), once it has been specified that the work required for the application of the warranty will be done in a workshop and that the return costs (transport and insurance) of the phone to the address to be indicated to it by the Sagem Communication after-sales service, whose phone number will appear on the delivery note, will be charged to the customer.

Subject to essential legal provisions, Sagem Communication does not accept any warranty, explicit or implicit, other than the warranty provided expressly in this chapter, nor shall Sagem Communication accept responsibility for any immaterial and/or indirect damages (such as loss of orders, loss of profit or any other financial or commercial damage) under the warranty or not

3. The acceptance of a phone under warranty demands that a purchase document that is legible and without modification, stating vendor's name and address, date and place of purchase, type of phone and IMEI, are attached to the warranty, and that the information on the phone identification label is legible and that this label or any other seal has not been tampered with.

The warranty applies in normal conditions of use.

Prior to sending the phone for repair, it is the customer's responsibility to backup at his expense the customized data stored in the phone (phonebook, settings, wallpapers). A list of backup facilities can be provided by Sagem Communication on request. The responsibility of Sagem Communication cannot be invoked if damage occurs to customer files, programs or data. The information or operating elements and the contents of files will not be re-installed in any case in the event of loss.

Sagem Communication may decide, at its option, to repair the phone with new or reconditioned parts, replace the phone with a new phone or, in any dispute, a phone in good working condition. During its work Sagem Communication reserves the facility to make, where necessary, any technical modifications to the phone where these modifications do not adversely affect its initial purpose.

Faulty parts to be replaced during a repair under warranty will become the property of Sagem Communication.

The phone repair and standstill time during the warranty period may not lead to an extension of the warranty period as stated in article 1 above, provided no other vital provisions have been agreed.

The application of the warranty is subject to the full payment of the sums due for the phone when the request for support is made.

4. The following are excluded from the warranty:

Breakdowns or malfunctions due to non-compliance with the installation and use instructions, to an external cause of the phone (shock, lightning, fire, vandalism, malice, water damage of any type, contact with various liquids or any harmful agent, unsuitable electric current...), to modifications of the phone made without the written consent of Sagem Communication, to a servicing fault, as described in the documentation supplied with the phone, to lack of supervision or care, to poor environmental conditions of the phone (especially temperature and hygrometry, effects of variations in electric voltage, interference from the mains network or earth) or even due to a repair, a call-out (opening or trying to open the phone) or to servicing done by personnel not approved by Sagem Communication.

Damage resulting from inadequate packaging and/or poor packing of the phone sent back to Sagem Communication.

Normal wear and tear of the phone and accessories.

Communication problems linked with a poor environment, especially:

Problems accessing and/or logging onto the Internet, such as breakdowns of the access network, the failure of the subscriber's or his correspondent's line, transmission fault (poor geographic coverage by radio transmitters, interference, disturbance, fai-lure or poor quality of phone lines...), a fault inherent to the local network (cabling, file server, user phone) and/or transmission network fault (interference, disturbance, failure or poor quality of the network...).

Change of parameters of the cellular network made after the phone was sold.

Supply of new software versions.

Current servicing work: delivery of consumables, installation or replacement of these consumables...

Call-outs for phone or software modified or added without the written consent of Sagem Communication.

Faults or disruptions resulting from the use of products or accessories not compatible with the phone.

Phones returned to Sagem Communication without having complied with the return procedure specific to the phone covered by this warranty.

The opening or closing of a SIM operator key and call-outs resulting in the non-operation of the phone resulting from the opening or closing of SIM operator key done without the agreement of the original operator.

5. In the cases of warranty exclusion and of expiry of the warranty period, Sagem Communication shall draw up an estimate to be given to the customer for acceptance before any call-out. The repair and carriage costs (there and back) given in the accepted estimate will be charged to the customer.

These provisions are valid unless a special written agreement has been made with the customer. If one of the provisions turns out to infringe a legally essential rule that consumers could have the benefit of under the national legislation, this provision will not be applied, but all other provisions will remain valid.

6. Any questions or correspondence regarding this limited warranty should be addressed to:  
[www.planetsagem.com](http://www.planetsagem.com).

# End User Licence Agreement (EULA), for the software

---

## CONTEXT AND ACCEPTATION OF THE AGREEMENT

You have acquired a Mobile Phone device ("DEVICE"), manufactured by Sagem Communication (SAGEM), that includes software either developed by SAGEM itself or licensed third party Software suppliers ("SOFTWARE COMPANIES") to SAGEM with the rights to sub-license it to the purchaser of the device. Those installed software products whatever their company of origin, and wherever the name of the company of origin is indicated or not in the DEVICE documentation, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by United States and international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. The owner of the Software expressly reserves all rights.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT SAGEM FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

SOFTWARE includes software already installed on the DEVICE ("DEVICE Software") and Software contained on the CDROM disk ("Companion CD"), if any is supplied with the product.

## GRANT OF SOFTWARE LICENCE

This EULA grants you the following licence:

**DEVICE Software.** You may use the DEVICE Software as installed on the DEVICE. All or certain portions of the DEVICE Software may be inoperable if you do not have and maintain a service account with an appropriate Mobile Operator, or if the Mobile Operator's network facilities are not operating or configured to operate with the DEVICE software.

**COMPANION CD.** If any is supplied, additional software for your personal computer is included with your DEVICE. You may install and use the software component(s) contained in the Companion CD only in accordance with the terms of the printed or online end user license agreement(s) provided with such component(s). In the absence of an end user license agreement for particular component(s) of the Companion CD, you may install and use only one (1) copy of such component(s) on the DEVICE or a single computer with which you use the DEVICE.

**Security Updates.** The SOFTWARE may include digital rights management technology. If SOFTWARE does contain digital rights management technology, content providers are using the digital rights management technology ("DRM") contained in the SOFTWARE to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. Owners of such Secure Content ("Secure Content Owners") may, from time to time, request manufacturers or SOFTWARE SUPPLIERS to provide security related updates to the DRM components of the SOFTWARE ("Security Updates") that may affect your ability to copy, display and/or play Secure Content through the SOFTWARE or third party applications that utilise the DRM.

You therefore agree that, if you elect to download a licence from the Internet that enables your use of Secure Content, Suppliers may, in conjunction with such licence, also download onto your DEVICE such Security Updates that a Secure Content Owner has requested that SOFTWARE SUPPLIERS distribute. SAGEM and SOFTWARE SUPPLIERS will NOT retrieve any personally identifiable information, or any other information, from your DEVICE by downloading such Security Updates.

#### **DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS COPYRIGHT.**

All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and "applets," incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by SAGEM or the SOFTWARE SUPPLIERS. You may NOT copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. THIS EULA GRANTS YOU NO RIGHTS TO USE SUCH CONTENT. All rights not specifically granted under this EULA are reserved by SAGEM and the SOFTWARE SUPPLIERS.

Limitations on Reverse Engineering, Decompilation and Disassembly. You may not reverse engineer, decompile, or disassemble the SOFTWARE.

**Single DEVICE.** The DEVICE Software is licensed with the DEVICE as a single integrated product. The DEVICE Software installed in the memory of the DEVICE may only be used as part of the DEVICE.

**Single EULA.** The package for the DEVICE may contain multiple versions of this EULA, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple versions of the EULA, you are licensed to use only one (1) copy of the DEVICE Software.

**Software Transfer.** You may NOT transfer any of your rights under this EULA with regard to the DEVICE Software or Companion CD, except as permitted by the applicable Mobile Operator. In the event that the Mobile Operator permits such transfer, you may transfer all of your rights under this EULA only as part of a sale or transfer of the DEVICE, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades, this EULA and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the SOFTWARE is an upgrade, any transfer must include all prior versions of the SOFTWARE.

**Software Rental.** You may not rent or lease the SOFTWARE.

**Speech/Handwriting Recognition.** If the SOFTWARE includes speech and/or handwriting recognition component(s), you should understand that speech and handwriting recognition are inherently statistical processes; that recognition errors are inherent in the processes; and that errors can occur in the component's recognition of your handwriting or speech, and the final conversion into text. Neither SAGEM nor its suppliers shall be liable for any damages arising out of errors in the speech and handwriting recognition processes.

**NOTICE REGARDING THE MPEG-4 VISUAL STANDARD.** The SOFTWARE may include MPEG-4 visual decoding technology. MPEG LA, L.L.C. requires the following notice:

USE OF THIS SOFTWARE IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (B) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.

If you have questions regarding this Notice, please contact MPEG LA, L.L.C., 250 Steele Street, Suite 300, Denver, Colorado 80206; Telephone 303 331.1880; FAX 303 331.1879.

**Termination.** Without prejudice to any other rights, SAGEM may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

**Consent to Use of Data.** You agree that SOFTWARE SUPPLIERS may collect and use technical information gathered in any manner as part of product support services related to the SOFTWARE. SOFTWARE SUPPLIERS may use this information solely to improve their products or to provide customised services or technologies to you. SOFTWARE SUPPLIERS may disclose this information to others, but only in a form that does not personally identifies you.

**Internet Gaming/Update Features.** If the SOFTWARE provides, and you choose to utilize, the Internet gaming or update features within the SOFTWARE, it is necessary to use certain computer system, hardware, and software information to implement the features. By using these features, you explicitly authorise SOFTWARE SUPPLIERS to use this information solely to improve their products or to provide customized services or technologies to you. SOFTWARE SUPPLIERS may disclose this information to others, but only in a form that does not personally identifies you.

**Internet-Based Services Components.** The SOFTWARE may contain components that enable and facilitate the use of certain Internet-based services. You acknowledge and agree that SOFTWARE SUPPLIERS may automatically check the version of the SOFTWARE and/or its components that you are utilising and may provide upgrades or supplements to the SOFTWARE that may be automatically downloaded to your Device.

**Links to Third Party Sites.** The SOFTWARE may provide you with the ability to link to third party sites through the use of the SOFTWARE. The third party sites are not under the control of SAGEM. Neither SAGEM nor its affiliates are responsible for (i) the contents of any third party sites, any links contained in third party sites, or any changes or updates to third party sites, or (ii) webcasting or any other form of transmission received from any third party sites. If the SOFTWARE provides links to third party sites, those links are provided to you only as a convenience, and the inclusion of any link does not imply an endorsement of the third party site by SAGEM or its affiliates.

**Additional Software/Services.** The SOFTWARE may permit SAGEM to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").

If SAGEM provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.

SAGEM reserves the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

**EXPORT RESTRICTIONS.** You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments.

#### **UPGRADES AND RECOVERY MEDIA**

- **DEVICE Software.** If the DEVICE Software is provided by SAGEM separate from the DEVICE on media such as a ROM chip, CD ROM disk(s) or via web download or other means, and is labeled "For Upgrade Purposes Only", you may install one copy of such DEVICE Software onto the DEVICE as a replacement copy for the existing DEVICE Software and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade DEVICE Software.
- **COMPANION CD.** If any Companion CD component(s) is provided by SAGEM separate from the DEVICE on CD ROM disk(s) or via web download or other means, and labelled "For Upgrade Purposes Only", you may (i) install and use one copy of such component(s) on the computer(s) you use to exchange data with the DEVICE as a replacement copy for the existing Companion CD component(s).

#### **RESPONSIBILITIES**

**SUPPORT AND INFORMATION** Should you have any questions concerning this EULA, or if you desire to contact SAGEM for any other reason, please refer to the address provided in the documentation for the DEVICE.

**SAGEM SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE.**

FOR APPLICABLE LIMITED WARRANTIES AND SPECIAL PROVISIONS PERTAINING TO YOUR PARTICULAR JURISDICTION, PLEASE REFER TO YOUR WARRANTY BOOKLET INCLUDED WITH THIS PACKAGE OR PROVIDED WITH THE SOFTWARE PRINTED MATERIALS.

# Warranty

---

You must always use your phone for the purpose for which it was designed, under normal operating conditions. Sagem Communication declines all responsibility for any use outside of the scope of its designed purpose and for any consequences of this use.

The software program developed by SAGEM remains the exclusive property of Sagem Communication. It is therefore highly prohibited to modify, translate, de-compile or disassemble this software program or any part thereof.

## Use precautions

Your phone allows you to download ring tones, icons and animated screensavers. Some of these items may contain data that may cause malfunctions of your phone or data losses (virus for example).

For this reason, Sagem Communication rejects all responsibility concerning (1) the reception of downloaded data or losses of the said data, (2) the impact on the operation of the phone and (3) damages resulting from receiving the said downloaded data or loss of said data. In addition, Sagem Communication states that a failure caused by receiving downloaded data that do not comply with the specifications set by Sagem Communication is excluded from the warranty. Consequently, the diagnosis and repair of a phone infected by the said downloaded data will be at the expense of the customer.

Any content that you download to your phone may be protected by copyright belonging to third parties and consequently you may not have the right to use this content or its use may be restricted. Consequently it is up to you to ensure that you have permission, such as under the terms of a license agreement, to use any content that you download. Furthermore, Sagem Communication does not guarantee the accuracy nor the quality of any content that you download. You alone are responsible for the content that you download to your mobile phone and how you use it. Sagem Communication cannot be held responsible for this content nor for its use.

It is your responsibility to ensure compliance, at your own expense, with the laws and regulations applicable in the country where you use your phone.

## Warranty conditions

Whenever you wish to make use of the warranty, please contact your vendor and present him with the purchasing paperwork that he gave you.

If a fault occurs, he will advise you.

1.

The new phone (excluding consumables), including new accessories bundled with the phone, are guaranteed by Sagem Communication, parts and labour (apart from travel) against any manufacturing fault for a period of twelve (12) months with effect from the sale of the phone to the customer, on presentation of the paperwork stating the purchase date of the phone.

Phones that have been repaired or replaced as standard during the warranty period stated above are guaranteed (parts and labour) until the later of these two dates:

Expiry of the guarantee period of twelve (12) months stated above or three (3) months with effect from the date of support provided by Sagem Communication.

Your legal rights under the terms of applicable national law as well as your rights in relation to your retailer, as set out in the sales contract, remain applicable and are not in any way affected by this guarantee.

In any disputes, the phone is covered by the legal warranty against the consequences of faults or hidden defects in compliance with articles 1641 and subsequent of the French civil code.

2.

All faulty phones under warranty will be replaced or repaired free of charge at Sagem Communication's option (with the exclusion of repair of any other damage), once it has been specified that the work required for the application of the warranty will be done in a workshop and that the return costs (transport and insurance) of the phone to the address to be indicated to it by the Sagem Communication after-sales service, whose phone number will appear on the delivery note, will be charged to the customer.

Subject to essential legal provisions, Sagem Communication does not accept any warranty, explicit or implicit, other than the warranty provided expressly in this chapter, nor shall Sagem Communication accept responsibility for any immaterial and/or indirect damages (such as loss of orders, loss of profit or any other financial or commercial damage) under the warranty or not.

3.

The acceptance of a phone under warranty demands that a purchase document that is legible and without modification, stating vendor's name and address, date and place of purchase, type of phone and IMEI, are attached to the warranty, and that the information on the phone identification label is legible and that this label or any other seal has not been tampered with.

The warranty applies in normal conditions of use.

Prior to sending the phone for repair, it is the customer's responsibility to backup at his expense the customized data stored in the phone (phonebook, settings, wallpapers). A list of backup facilities can be provided by Sagem Communication on request. The responsibility of Sagem Communication cannot be invoked if damage occurs to customer files, programs or data. The information or operating elements and the contents of files will not be re-installed in any case in the event of loss.

Sagem Communication may decide, at its option, to repair the phone with new or reconditioned parts, replace the phone with a new phone or, in any dispute, a phone in good working condition. During its work Sagem Communication reserves the facility to make, where necessary, any technical modifications to the phone where these modifications do not adversely affect its initial purpose.

Faulty parts to be replaced during a repair under warranty will become the property of Sagem Communication.

The phone repair and standstill time during the warranty period may not lead to an extension of the warranty period as stated in article 1 above, provided no other vital provisions have been agreed.

The application of the warranty is subject to the full payment of the sums due for the phone when the request for support is made.

#### 4.

The following are excluded from the warranty:

Breakdowns or malfunctions due to non-compliance with the installation and use instructions, to an external cause of the phone (shock, lightning, fire, vandalism, malice, water damage of any type, contact with various liquids or any harmful agent, unsuitable electric current...), to modifications of the phone made without the written consent of Sagem Communication, to a servicing fault, as described in the documentation supplied with the phone, to lack of supervision or care, to poor environmental conditions of the phone (especially temperature and hygrometry, effects of variations in electric voltage, interference from the mains network or earth) or even due to a repair, a call-out (opening or trying to open the phone) or to servicing done by personnel not approved by Sagem Communication.

Damage resulting from inadequate packaging and/or poor packing of the phone sent back to Sagem Communication.

Normal wear and tear of the phone and accessories.

Communication problems linked with a poor environment, especially:

Problems accessing and/or logging onto the Internet, such as breakdowns of the access network, the failure of the subscriber's or his correspondent's line, transmission fault (poor geographic coverage by radio transmitters, interference, disturbance, failure or poor quality of phone lines...), a fault inherent to the local network (cabling, file server, user phone) and/or transmission network fault (interference, disturbance, failure or poor quality of the network...).

Change of parameters of the cellular network made after the phone was sold.

Supply of new software versions.

Current servicing work: delivery of consumables, installation or replacement of these consumables...

Call-outs for phone or software modified or added without the written consent of Sagem Communication.

Faults or disruptions resulting from the use of products or accessories not compatible with the phone.

Phones returned to Sagem Communication without having complied with the return procedure specific to the phone covered by this warranty.

The opening or closing of a SIM operator key and call-outs resulting in the non-operation of the phone resulting from the opening or closing of SIM operator key done without the agreement of the original operator.

5.

In the cases of warranty exclusion and of expiry of the warranty period, Sagem Communication shall draw up an estimate to be given to the customer for acceptance before any call-out. The repair and carriage costs (there and back) given in the accepted estimate will be charged to the customer.

These provisions are valid unless a special written agreement has been made with the customer. If one of the provisions turns out to infringe a legally essential rule that consumers could have the benefit of under the national legislation, this provision will not be applied, but all other provisions will remain valid.

When running a Java™ application, you may be prompted to grant access to protected features. These features are protected because using them could incur you cost, or involve your personal data. In case of doubt, don't hesitate to refuse access by selecting the "No" button!

The security configuration menu is an expert feature! You must know exactly what you are doing before attempting to change security parameters of a MIDlet. Misunderstanding changes may render MIDlet non functional and/or lead to higher risks for your private data or impact your airtime consumption. Any changes in the security configuration are done under your responsibility. In no case shall Sagem Communication and/or your network provider be liable for any damages deriving from or arising out of such changes in the security configuration.

You must be aware that applications downloaded to your phone could cause the phone to perform actions for which you will be billed, like making calls and sending SMS. Depending on your operator's billing policy, you may also be charged to download the application because of airtime consumption.

## Security considerations

Java™ MIDP technology is an efficient way to provide powerful applications in mobile phones.

All these MIDP 2.0 features cannot be simply exposed to any MIDlet installed in the handset: a careful access control system is implemented in the device to protect your private data and airtime consumption.

Access controls are gathered in 9 security groups:

- Network access
- Auto invocation
- Phone call
- Local connectivity
- Messaging receive
- Messaging sending
- Read User data
- Write User data
- Multimedia recording

Each of these security groups has one among 5 possible authorizations levels (listed from the more restrictive to the more permissive):

- Never: The security group completely prevents access to the protected features.
- Per use: Each time MIDlet tries to use protected feature, user is prompted to grant access.
- Per session: First time a MIDlet uses a protected function, user is prompted to grant access like in "Per use" authorization but access is granted until the MIDlet terminates.

- Single confirmation: The first time in the whole MIDlet life a MIDlet uses a protected feature, user is prompted to grant access. It remains valid until the MIDlet is removed from the handset.
- Always: The security group unconditionally grants access to protected features.

A MIDlet has a security status which is either "uncertified", or else "certified".

An "uncertified" status means that the source of the MIDlet could not be verified by the mobile phone at installation time. As far as the phone knows, the MIDlet could have been written by anyone.

A "certified" status means that the MIDlet was digitally signed by a known party, whose name is displayed by the mobile phone.

Security permissions are different for "uncertified" or "certified" MIDlets.

#### Security configuration menu

When a MIDlet is installed in the mobile phone, default security authorizations are applied.

This default security configuration may be altered through the "Settings/Security" menu of an installed MIDlet.

Once in the "Security" menu, the security status of the MIDlet is displayed.

If you do not want to enter the security menu, simply select "Back" button. You can proceed by selecting "OK" button.

The menu displayed allows you to increase or decrease permissions currently applied to the current MIDlet for each of the security groups.

When you set a more permissive authorization to a security group than the current value, mobile phone asks you to confirm your increased risk exposure.

The maximum risk exposure increase is limited by the security status.

#### What is Java™?

Business applications and games are easily downloadable by the end-user on a Java™ featured handset.

Your mobile phone is a MIDP 2.0 compliant Java™ platform which implements WMA (SMS support) and MMAPI (Multimedia support) options, providing an exciting environment to run highly graphical, networked and intuitive MIDP applications.

#### What is a MIDlet?

A Java™ application or a game designed to run in a mobile phone is named a MIDlet (MIDP applet).

A MIDlet is usually made of 2 files:

- The JAD file
- The JAR file

JAD file stands for **J**ava™ **A**pplication **D**escriptor. It is a small file describing the content of a JAR file.

JAR file stands for **J**ava™ **A**rchive. It refers to the application data themselves (program, images, sound). A JAR file may be up to 200 kilo-bytes large.

**Note:** In rare circumstances, MIDlet vendors may provide no JAD file and the MIDlet is the JAR file alone. In such a case it is your only responsibility to evaluate the risk to download the JAR file without possibility of consulting the JAD file.

### Downloading a MIDlet (Java™ game or application)

MIDlets are easily downloaded in the mobile phone through the Games or Applications menu or through the WAP browser. In almost all cases, you will first receive a JAD file which will be displayed on the screen.

When you select a JAD file, your mobile phone downloads it, displays data contained and prompts you to acknowledge the JAR file download.

The popup displays information below:

- Name of the MIDlet, Version, Size, Name, Security status, URL.

If you do not want to download the main data (JAR file), you shall refuse to acknowledge further airtime consumption by selecting "Cancel".

If you agree on the MIDlet installation, just select **OK**. The MIDlet is installed with security levels set to default values associated with its security status.

Before downloading an application, such a message may appear: "Your handset cannot identify the application, please be sure of the source of the application before installing the application".

### Trademarks

Java™ and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

### Disclaimer

Some downloaded items may contain data or may induce actions which may cause malfunctioning of your mobile phone or loss or corruption of data or abnormal increase of your airtime consumption.

You expressly acknowledge that the download of any applications including Java™ applications or games is done under your exclusive responsibility. In no event shall Sagem Communication, your network service provider or their affiliates be liable for any lost profits or costs of procurement of substitute goods or services, loss of profits, interruptions of business, loss of data or for any special, indirect, incidental, economic, or consequential damages arising under contract, tort, negligence, or other theory of liability relating to the download of any application by any means, including Java™ applications or games in SAGEM devices. You expressly acknowledge that any applications including Java™ applications or games are provided strictly «as is». Sagem Communication and/or your network service provider extend no warranty whatsoever thereto. Sagem Communication and/or your network service provider disclaim any express, implied or statutory warranty of merchantability, fitness of any applications including Java™ applications or games for a specific purpose, satisfactory quality, security or otherwise.

# Troubleshooting

---

PROBLEM - SITUATION	ACTIONS
<b>The phone won't start and/or won't take a charge</b>	The battery has completely lost its charge. Connect the phone to the charger for between 5 and 30 minutes. The phone will only switch on after it has been charging for a few minutes. You may use the phone again when the Start option is displayed on the screen. If the phone still won't start after 30 minutes' charging, contact customer service.
<b>Battery status unknown</b>	The phone does not recognize the battery. Please check the position of the battery.
<b>LOW BATTERY</b>	This message is displayed when the battery becomes too weak. The phone switches itself off automatically. Put the phone on charge.
<b>SIM not present</b>	Check if the SIM card is present and properly positioned / inserted. Check the condition of the SIM card. If damaged, please go back to the operator's shop for advice. Contact your after-sales service if the message persists.
<b>Incorrect PIN code</b>	An incorrect PIN code has been entered. Be careful! Three incorrect PIN codes will block the SIM Card.
<b>SIM BLOCKED</b>	If a wrong PIN number is entered three times in succession, your SIM card is blocked. You must then: <ul data-bbox="431 643 1116 733" style="list-style-type: none"><li>- Enter the PUK (Personal Unblocking Key) code provided by your operator, and validate.</li><li>- Enter your PIN number and validate.</li><li>- Enter your PIN number again and validate.</li></ul> After 5 or 10 failed attempts (depending on the type of SIM card), the SIM card is definitely locked. You must then contact your operator or your SMC to obtain a new card.

## PROBLEM - SITUATION

## ACTIONS

### **SIM LOCKED**

On network providers' request, the handset can only be used with some types of SIM cards. This message means that the SIM card you are using does not fit with the phone. Take the SIM card out, and switch it back on. If the message **SIM not present** appears on the screen, you will need to check its compatibility next to the place where you bought it. If not, please contact your after-sales service.

### **No call connection**

Check that the number you have dialled is correct.  
If the letter R is displayed on the top right corner of the screen, without any network name displayed, only emergency services can be called.  
Check the status of your credit.  
Check that the SIM Card you are using offers the service you are requesting ; check if its validity has not expired.  
Check and deactivate the outgoing calls restriction when necessary.  
The network could be saturated. Try later.  
If the problem persists, please contact your Technical Helpdesk.

### **No receiving calls**

Try to make a call in order to check that the phone and the networks are operational.  
Check and deactivate the permanent call forwarding (permanent call forwarding icon displayed on the screen).  
Check and deactivate the incoming calls restriction when necessary.  
If the problem persists, please contact your Technical Helpdesk.

### **Quality reception when calling**

Avoid placing your fingers on the top of the phone, where the aerial is integrated: the phone will have to use full strength to establish a quality transmission.

### **Impossible to send message**

Check that the message centre number is correctly entered.  
To do so, please select the menu **Messages**, select **Options**, select **MSG centre n°** and check the number entered. Please contact your network provider to get this number.

## PROBLEM - SITUATION

No answer phonebox

If answer phone icon flashing

In WAP context:

SERVER NOT ANSWERING message

Logon to home page impossible

Operator name does not appear on screen

How do I switch to silent mode?

How do I activate zoom?

How do I delete the envelop that appears on the screen? 

How do I delete the answer phone that appears on the screen? 

How do I remove the written message at the bottom of the home page (1 call)

How do I download ring tones?

## ACTIONS

Check that the SIM card does offer this service.

Program the call to be forwarded to answer phone using the information provided by the operator.

Check that the SIM card used offers this service. Try to make a call to check that phone and network are operational.

Check if the answer phone number is properly configured. To do so, go to the **Calls** menu, select **Voice mail** and check the number. Otherwise, enter your operator's answer phone centre number.

Call the answer phone and listen to the new messages to make it disappear.

Switch off and then switch phone back on.

In the **WAP** menu, **Clear the cache**.

Go into the **Settings** menu, select **Networks**, then **[Select]**. Wait until the operator appears, select it and validate.

If the Operator logo is present (depending on model), activate the display (**Settings/Display/Operator logo**).

Hold the **#**  key down unless ring tone sounds, when a short touch is enough.

Can be activated only in SMS, MMS and WAP screens; hold down the **#**  key.

If you have received a voice mail, please call your voice mailbox and follow the instructions given.

This answer phone means that you have received a voice mail: please call your voice mailbox and listen to it. Please follow the instructions given.

Press the  key to go back to the initial page without messages.

Logon to one of the following site via your computer: [www.planetsagem.com](http://www.planetsagem.com). These site offer to send ring tones to your phone in the form of an SMS. You can also logon to your operator's site. Once the SMS has been received, all you have to do is save it: validate the option « Save messages », the tune will then be added to your list. In addition, you can logon to some sites by phone.

## PROBLEM - SITUATION

**How do I free up memory to download my objects (sounds, images)**

**How do I free up memory to receive new messages?**

**How do I free up memory to store new contacts in my Phonebook?**

**How can I increase the efficiency of my phone?**

**Poor screen legibility**

## ACTIONS

Go into the **Multimedia** menu, select **My Pictures** or **My Sounds** then delete some objects.

Manage your Outbox carefully. It is recommended not saving them automatically: too many messages saved will quickly fill up the available memory and no further messages will be received. To delete them, please go into the **Messages** menu, select **Outbox** then delete some messages. Manage your **Inbox** carefully also.

It is highly recommended to manage your Phonebook carefully. If you have received pictures enclosed to a Vcard, please save or delete them.

The most efficient actions are as follows:  
Please keep your phone safely in order to avoid pressing the keys unnecessarily: every time a key is pressed the screen lights up. You can deactivate the screensaver or select the activation time to be more than every 300 s (the screensaver uses processing power).  
Make sure that you don't obstruct the antenna with your fingers when using the phone (see page 18).

To ensure optimal screen legibility, follow the recommendations below:

- check that you have removed the plastic protective film,
- clean the screen of your telephone with a soft dry cloth to remove any finger marks or dust,
- make sure the background brightness is not too strong.

# Index

---

<b>A</b>			
Accessories	7	Contact	10, 36, 43
Activating your phone	8	Call	44
Alarm	25	Delete	45
Anonymous mode	51	Display contact	44
Audio player	25	Mailing list	43
Audioplayer	39	Modify	44
		Contacts list	49
		Contrast	48
		Converter	24
		Cost	54
		Currencies	25
<b>B</b>			
Backlight	48		
Battery			
Charging the battery	19	<b>D</b>	
Installing the battery	9	Date / Time	11, 55
Beeps	47	Display	47
<b>C</b>			
Calculator	24	<b>E</b>	
Calendar	40	Energy saving	48
Call barring	53		
Calls (menu)		<b>F</b>	
Automatic redial	51	Fax	57
Call forward	50	Fixed dialling	42, 54
Call waiting	51		
Counters	50	<b>G</b>	
Display number	51	Games	20
View last calls	50	GPRS	22, 23, 54
Camera	35, 49	GSM	22, 23
Car kit	57		
Charger	19		
Confidentiality	53		

<b>H</b>			
Help		17, 56	
<b>I</b>			
Icon		16	
Initial screen		16	
Input modes		29	
IP address		22	
<b>L</b>			
Languages		49	
Leds		55	
Local information		33	
<b>M</b>			
Memory		33, 39	
Menus		6	
Messages			
Compose MMS		30	
Compose SMS		28	
Drafts		32	
Inbox		31	
Outbox		31	
Receiving messages		31	
Sending options		32	
MMS		45	
<b>N</b>			
Navigation principles		17	
Networks		54	
<b>O</b>			
Operator		53	
			Operator logo 48
<b>P</b>			
Phone code			53
Phonebook		44, 49	
Memory			45
New contact			43
Phonebook options			43
Using the phonebook			42
Photo		35, 36, 49	
Picture		38	
PIN number		52	
PIN2 number		52	
Programmable keys		55	
<b>R</b>			
Recorder			47
Ring tones			46, 90
<b>S</b>			
Safety information			66
Screensaver			48
Security			52
Sending options			32
Sentbox			32
Serial Speed			57
Short cut keys			55
Silent mode			46
SIM card		8, 9, 33, 42, 53, 54	
Skins			47
SMS			28, 45
Sounds			31, 46
Index			93

## T

T9	29
Timer	25
ToDo	26
Troubleshooting	88, 89, 90, 91

## V

vCal	26, 41
vCard	45
Vibrate	46
Video	35, 37
Voicemail	52
Volume	46

## W

Wallpaper	47
WAP	21, 22, 23
Configuring WAP parameters	22
Downloading objects	23
Services menu	21
WAP logging off	23
WAP logging on	23
WAP settings	56
Warranty	71, 74, 81

## Y

Your phone package	7
--------------------	---



DATA SUBJECT TO CHANGE WITHOUT NOTICE



**Sagem Communication**

SAFRAN Group

**Mobile Communication Business Group**

[www.sagem.com/mobiles](http://www.sagem.com/mobiles)

Le Ponant de Paris - 27, rue Leblanc - 75512 PARIS CEDEX 15 - FRANCE

Société Anonyme

Capital 300 272 000 € - 480 108 158 RCS PARIS