


CREATIVE

CD-ROM DRIVE CD3621E

Safety Warnings

The following diagrams illustrate the precautions to be taken when using your CD-ROM drive.

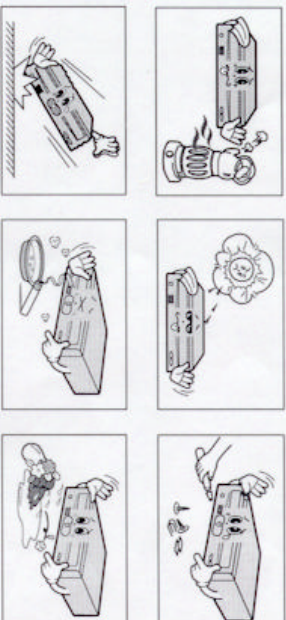

You must not use the drive in any manner other than that specified in this guide.

CAUTION


Do not attempt to repair the CD-ROM drive yourself. Contact your dealer or local SAMSUNG representative for all repairs.

Use of controls or adjustments or performance of procedures other than those specified here in may result in hazardous radiation exposure.

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

WARRANTY Please refer to the Samsung limited warranty statements.


Front View of the CD-ROM Drive

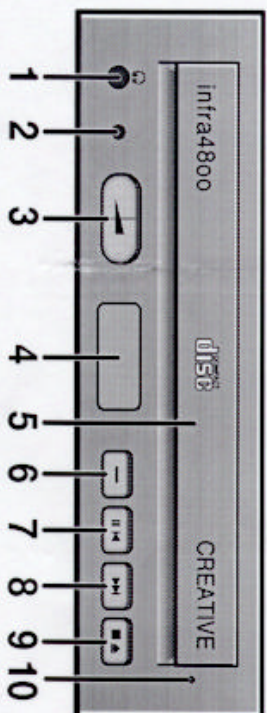

- 1 Headphone Connector**
The audio output connector enables you to plug stereo headphones into the drive. It requires a 3.6 mm stereo mini-jack.
- 2 Remote Sensor**
- 3 Volume Control Button**
This control dial adjusts the volume for your headphones.
- 4 LED**
- 5 Disc Tray**
The Disc Tray opens and closes automatically when you press the Open/Close button.
 - ◆ When you place a disc in the tray, make sure that the label on the disc is facing upwards. If you are not loading or unloading a disc, the disc tray should remain closed.
- 6 Mode**
When CD-ROM disc is inserted. The speed will be down to 16X from 36X if you press Mode button. When Audio-CD is inserted. The auto repeat function will be activated if you press Mode button.
- 7 Play/Skip**
When the Audio-CD is in Stop or Pause mode, the Audio-CD will be played if you press the Play/Skip Button.
When the Audio-CD is in Play mode, the Audio-CD will be skipped forward if you press Play/Skip.
- 8 Pause/Skip Backward**
When the Audio-CD is in Play mode, the Audio-CD will be paused if you press Pause/Skip Backward and it will be skipped backward if you press Pause/Skip Backward twice.
- 9 Stop/OP/CL-Button**
When in play, press the stop key and when in stop, press open/close key.
- 10 Emergency Hole**
If the disc tray does not open when you press the Open/Close button, insert a small, metal rod (an unwound paper clip for example) into this hole to eject the disc.
 > This function should only be performed when the computer is powered OFF.

2

Rear View of the CD-ROM Drive

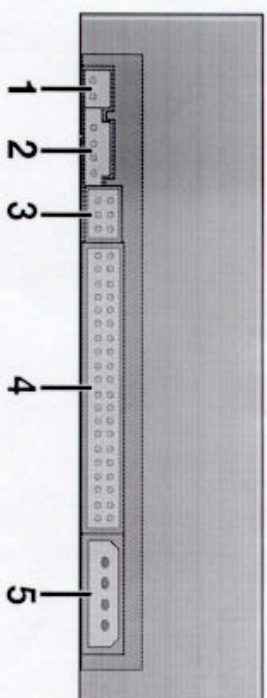

- 1 Digital Audio**
You can connect a sound card or MPEG card which support Digital Audio to your drive using this two-pin connector.
- 2 Audio Output Connector**
You can connect a sound card to your drive using this four-pin connector.
 > This function is not covered in detail in this guide. Refer to the documentation supplied with your sound card.
- 3 Device Configuration Jumper**
Usually, this is a pre-set configuration as illustrated below.

C	S	M
S	L	A
o	o	o
o	o	o
- > Verify that the setting is as illustrated. If it is not, simply remove the jumper and place it in the correct position.
- 4 Host IDE Interface connector**
This input/output interface connector is used to connect the 40-pin flat cable from the IDE interface to the CD-ROM drive.
- 5 Power Connector**
The power connector is a four-conductor male plug.

3

System Requirements

Before you install the CD-ROM drive, we strongly recommend that you make certain that your set-up meets the system requirements listed below.



Item	Description
Type of computer	IBM 486SX 20MHz(or higher) with an IDE interface/or a 100% IBM-compatible computer)
Free expansion unit	5.25 inch
Disk space	100KB minimum
MS-DOS version	5.0(or higher)
Windows Version	3.1(or higher)

Installing the CD-ROM Drive

Install the CD-ROM drive in your computer horizontally, making sure that the Open/Close button is on the right.

To install the drive, proceed as follows.

- 1 Turn OFF your computer. Remember to verify the configuration jumper on the rear of the CD-ROM drive.
- 2 Remove the cover of your PC(main unit of the computer)
- 3 Remove the blank cover panel of the 5.25 inch unit in which the CD-ROM drive is to be installed.
- 4 Connect the CD-ROM drive to the IDE interface and power cables located inside your computer.
> Connectors are keyed so it is impossible to put them in an incorrect position. Do not force the connectors, if they do not seem to fit.
- 5 Install the CD-ROM drive into the unit and secure it with mounting screws (recommended standard M3x6)
♦ Depending on your PC model, you may need to attach guide rails to the drive, so that the drive is held firmly in place.
♦ If you use screws that are longer than the recommended standard, you may damage the drive.
- 6 Put the cover back on your PC.

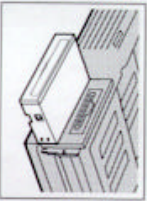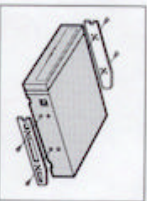

4

Installing the Software

You can install the device driver for DOS or for Windows. Do not install DOS Drive when the program of Windows 95 is going on. (Remark CD-ROM Driver in the state of CONFIG.SYS.)

- 1 Turn on your computer and wait for it to boot.
- 2 Insert the driver disk into a floppy disk drive(usually the A drive)
- 3 If you are a...
DOS user
Then :
♦ Type a: at the DOS prompt.
♦ Press the RETURN key.
♦ Access the File Manager
♦ Click on the A icon.
Windows user
♦ When you are in Windows 95, it is not necessary to install Device Driver. Whereas, when you are in Dos Mode of windows 95, then install as follows.
♦ Click on **MY COMPUTER** icon.
♦ Click on the A icon.
- 4 Run the CDSETUP program:
If you are a...
DOS user
Then :
♦ Type CDSETUP after the a: prompt
♦ Press RETURN
Double-click CDSETUP.EXE from the Windows File Manager.
Windows user
Then enter...
Confirm the installation
Y
Exit without installing
N
Result: If you answer Y(Yes), the installation program automatically
♦ Creates a SAMSUNG directory on your hard disk.
♦ Copies the required softwares (mscdex.exe and ssdrom.sys)
♦ Modifies the CONFIG.SYS and AUTOEXEC.BAT files
- 5 When the **Setup Completed** screen is displayed, remove the installation floppy disk from the drive.
- 6 Reboot your system.
Result: ♦ The computer restarts
♦ Both the device driver and MSCDEX are loaded
- 7

5

Changing the Drive and Driver Settings

Your CD-ROM drive is controlled by:

- ◆ MSCDEX.EXE (a Microsoft CD-ROM extensions program)
- ◆ SSCDROM.SYS (the CD-ROM device driver)

MSCDEX.EXE Parameters

The MSCDEX.EXE parameters are added to your AUTOEXEC.BAT file. Below is the syntax for each parameter. Information indicated within squarebrackets [] is optional.

<Drv>=<path>MSCDEX.EXE [/E:K/S/V] /D:<drive name> [/L:<drive letter>] [M:<buffer>]

Example : The default set-up procedure adds the following default settings to your

AUTOEXEC. BAT file:C:\SAMSUNG\MSCDEX.EXE /D:SSCD000

Details for each parameter are listed below.

Parameter	Details
/D:< drive name >	Specifies the name of the top CD-ROM drive. The < drive name > field must contain the same information as specified by parameter in your CONFIG.SYS file(which loads the corresponding CD-ROM drive)
/E	<p>◆ The MSCDEX command must have at least one /D parameter. if you add another CD-ROM device, you must add and specify a corresponding /D parameter for each new drive.</p> <p>◆ If the EMS memory mode(Expanded Memory Support) is enable, this parameter specifies that the CD-ROM driver can save sector buffers using EMS memory.</p>
/K	Specifies that MS-DOS can recognize a CD-ROM volume written in Kanji(Chinese characters). Must be used for all CD-ROM volumes written in Kanji.
/S	Permits the CD-ROM drive to be shared on the MS-NET or Windows for Work Groups server.
/V:	When MSCDEX.EXE is loaded, this parameter indicates the memory status.
/L:<drive letter>	Specifies the letter of the top CD-ROM drive. If more than one CD-ROM drive is connected, the system automatically assigns arbitrary drive names to the additional drives.
M:<buffer>	Specifies the number of sector buffers.

SSCDROM.SYS Parameter

The SSCDROM.SYS parameters are added to your CONFIG. SYS file. Below is the syntax for each parameter. Information indicated within square brackets [] is optional.

DEVICE=<drv> \<path>SSCDROM.SYS /D:<drive name> [/P:<P>]

Example : The default set-up procedure adds the following default settings to your CONFIG.SYS file:
Device=C:\SAMSUNG\SSCDROM.SYS /D:SSCD000 /P:110,14

Details for each parameter listed below.

Parameter	Details
/P:<X>	<p>Specifies the port for the interface card.</p> <p>Possible values: 1F0H, 170H</p> <p>Default: 1F0H</p>
/D:<drive name>	<p>Changes the name for the CD-ROM drive. Up to eight character can be input.</p> <p>Default: SSCD000</p>

Resolving Technical problems

Please consult the following table BEFORE contacting your dealer or local SAMSUNG representative.

Problem	Meaning/Solution
The software installation failed	<p>◆ Check that your hard disk is not full.</p> <p>◆ The installation floppy disk may be corrupted.</p> <p>Repeat the installation with the backup floppy disk.</p>
I re-booted my PC and it paused during the start-up program.	<p>After installing the device driver, your system start-up program may take more time than expected. If it does not start-up after 60 seconds, verify your AUTOEXEC. BAT file and, if necessary, contact your local computer dealer.</p>
The disc tray does not open.	<p>The drive may not be installed correctly. Verify the physical installation.</p>
In the File Manager, the CD-ROM icon does not display.	<p>If you have installed the CD-ROM drive... then...</p> <p>And the software</p> <p>And have not installed the software</p> <p>Re-boot your PC.</p> <p>Install the software following the instructions on page 5</p>
I installed the software and re-booted my PC. The CD-ROM drive icon/directory still does not appear.	<p>◆ When the program of Windows 95 is broken up, re-install it as the computer can not read the program anymore.</p> <p>◆ Verify the connections between the drive and your PC. Check that the 40-pin flat cable is connected to an IDE interface (some PCs are equipped with an SCSI disk interface)</p> <p>◆ Verify your AUTOEXEC.BAT file. Go to page 6 for the verification procedure.</p> <p>◆ Check the LASTDRIVE=command in the CONFIG. SYS file. The specified letter must take the CD-ROM volume into account. If you do not know which letter is assigned to the CD-ROM, enter Z.</p> <p>◆ Using the documentation provided with your PC, check that the IDE hard disk is set up in MASTER mode.</p>

Technical Specifications

SAMSUNG continually strives to improve its products. Both the design specifications and these user instructions are thus subject to change without notice.

SECTIONS		3621E
DISC	Disc types supported	CD-DA, CD-ROM Mode-1, CD-ROM XA Mode-2 Form-1, Form-2, CD-Plus, CD-Extra, Photo-CD(Single, Multi-session), Video CD ready, Enhanced CD, CD-iFWM, CD-ROM
	Disc diameter	12cm or 8cm
	Rotational speed	7700rpm (Linear Velocity 1.3m/s)
DRIVE PERFORMANCE	Data transfer rate	Max. 5400KB/s
	Access time (1/3 stroke)	PIO Mode - 4, DMA Mode 2(option) 80ms(typical)
	Data buffer capacity	512KB
	Laser	Semiconductor Laser
	Slide mechanism	Gear motor
	Spindle motor	Brushless motor
ERROR RATE	Loading mechanism	Tray, DC motor(Soft Eject)
	Button	Mode-1 : 1 block/10 ³ bits, Mode-2 : 1 block/10 ³ bits Eject, Play/Skip forward/Pause/Skip backward, Mode(Speed down to 16X)
FRONT PANEL	Indicator(LED)	Busy/Mode
	Headphone output	Stereo Mini-jack (23.6mm) 0.60±0.12V(rms) 33Ω
	Volume control	Switch type
REAR PANEL	Required power	+5V DC 1.0A, +12V DC 1.5A (Max)
	Interface connector	ATAPI
	Audio output	Line out 0.70 ± 0.14V(rms), 47KΩ
OPERATING ENVIRONMENT	Jumper block	Device configuration jumper
	Work area	Temperature : 5 ~ 45°C, Humidity : 8 ~ 80%
	Storage area	Temperature : -40 ~ 60°C, Humidity : 5 ~ 90%
GENERAL	Dimensions	149(W) x 41.5(H) x 202.6(D)mm (including bezel)
	Net weight	950g
RELIABILITY	MTBF	100,000 POH(Duty 25%)
	Disc compartment loading	30,000 times

Memo

