




# CD-R/RW DRIVE SW-248B

# SERVICE *Manual*

## CONTENTS

- Specifications
- Cautions at Service
- External Part Name
- Necessary equipments and Specifications in needing Service(P/U replacement)
- Exploded Views & Part List
- Packing Options
- Block Diagram
- Troubleshooting
- Circuit Diagram
- Main Components Block Diagram & Pin Descriptions
- Electrical Parts List

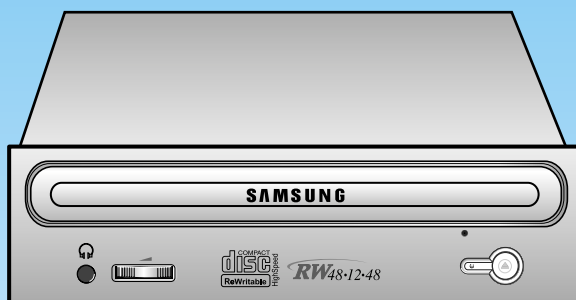

The design and part of this product is subject to change without prior notice for performance improvement.

---

## ● Specifications

### 1. General Specifications

- Drive type : Computer built-in
- Power consumption : DC +5V, 1.5A  
DC +12V, 1.5A
- Dimensions : 146mm (W)X42mm (H)X184mm (L)
- Net Weight : 750g

### 2. Electrical Features

- Interface : ATAPI BUS(IDE)
- Data transfer rate :  
Write(CD-R) : 600KBytes/Sec(4X)  
1,200KBytes/Sec(8X)  
1,800KBytes/Sec(12X)  
2,400KBytes/Sec(16X)  
3,000KBytes/Sec(20X)  
3,600KBytes/Sec(24X)  
4,200KBytes/Sec(28X)  
4,800KBytes/Sec(32X)  
Write(CD-RW) : 600KBytes/Sec(4X)  
Write(High Speed CD-RW) : 600KBytes/Sec(4X)  
1,500KBytes/Sec(10X)

- Resd(MAX) : 2,000~6,000KBytes/Sec(CAV 40X)
- Access time : 110ms (Random. TYPICAL)
- Buffer Capacity : 8Mbyte
- Error ratio : Mode 1: Below  $10^{-12}$   
Mode 2: Below  $10^{-9}$
- Frequency response : 20Hz~20kHz (Lineout)  
100Hz~20kHz (H/P out)
- Signal to noise ratio : 70dB(1kHz, Lineout)
- Distortion factor : 0.15% Less than(1KHz)
- Channel separation : 65dB(1kHz, Lineout)  
55dB(1kHz, H/P out)
- Used laser : Semiconductor laser
- Audio Output : Line out  $0.75 \pm 20\%$ (Vrms),  $47K\Omega$   
H/P out  $0.65 \pm 20\%$ (Vrms),  $33\Omega$

## ● Cautions at Service

### 1. General Items

- 1) Be careful not to have your eyes or a part of body touch with laser diode at repair because this product uses laser diode.
- 2) Do not disassemble Pick-up at repair. If the laser diode is bad, replace the entire Pick-up.
- 3) Keep away from TV or other electrical units at repair to prevent influence from surrounding units.
- 4) If you replace the parts during repair, be sure to unplug the power cable before replacement.
- 5) If you insert a disc into the drive, be sure to load it correctly.
- 6) Because this unit can't be used by itself, surely mount it on PC (586 DMA support) and check the operations in use of private device driver floppy diskette.  
Refer to Instruction manual.
- 7) This unit has many parts with features related to safety and especially, for essential parts, the importance is indicated on circuit diagram and part list.  
Be certain to use the parts with same specifications at replaing these parts.

### 2. Earthing cautions at handling Pick-up

- Because the laser diode in optical Pick-up is subject to get out of order due to the potential difference occurring by electricity load charged in clothes or bodies, observe the following earthing items at handling.
- 1) Body earthing(hand) : Be sure to wear a wrist strip with one side earthed.(Impedance : Below 104).  
It removes the electricity formed in body.
  - 2) Work table earthing : Put the earthed conductive plate (Impedance : Below 104) such as copper plate on work table.
  - 3) Cautions for clothes : Do not have any clothes touch with Pick-up because the electricity formed in clothes is destroyed easily.

---

## ● Electricity sensing device

Some semiconductor units may be damaged easily by electricity.

These elements are called as electricity sensing device(ESD) in general. For example, integrated circuit, field effect transistor, semiconductor chip.

The following methods have to be used to reduce the accident of element damage generated by electricity.

- 1) Emit all electric charges in your body through contact with earthing material at once before handling a semiconductor factor or device including it.  
In other way, make use of commercial wristlet against electricity  
It shall be detached before power impression to the unit on testing because of shock.
- 2) After detaching an electrical device including ESD, it shall be placed on conductive surface such as aluminium to prevent the charge accumulation and unit exposure.
- 3) Utilize only the soldering iron with earthed end for ESD soldering or release

## ● Safety instructions

- 1) Read all safety and operational manuals before operating this product
- 2) Keep the safety and operational manuals for future reference.
- 3) Observe all precautions and operational instructions in or on the surface of this product.
- 4) Follow all operation and maintenance cautions.
- 5) Be sure to plug off the power cable before cleaning.  
Use a dry cloth to clean a dusty cover of cabinet instead of liquid or aerosol cleaner.
- 6) Never use a attachment not to be recommended by this company. It may result in danger and damage.
- 7) Never use this product around water such as bathtub, washbasin, laundry machine, swimming pool or lakeside.
- 8) Never place this product on bed, sofa or around radiator and heater.
- 9) Power : Utilize the only power displayed on label  
If the power type can't be checked, call to dealer or Korea Electricity, Co, Ltd. Refer to operate this product by battery or other power.
- 10) Lightning : Plug off the power cable for product protection during thunder and lightning flashes or this product is unused for a long time.

- 4) Make use of only anti-static soldering release unit.  
A soldering release unit not to be classified as antistatic may generate the enough charge to damage ESD unit.
  - 5) Never use a Freon-propelling chemical product.  
It may generate the enough charge to damage ESD.
  - 6) Until installing ESD unit for replacement, never it from protection package.  
(Most of ESD unit for replacement have lead composed of package shorted electrically by conductive foam, aluminium or similar conductive material.)
  - 7) Contact with chassis including ESD or protection material in circuit parts just before detaching the protection material from lead of ESD unit for replacement
- Note** : Be sure to avoid the power impression to the chassis or circuit and observe the safety instruction.
- 8) Minimize the body action at handling an unpacked ESD unit for replacement.  
(Otherwise, an unconscious action, so to speak, friction between clothes or foot lifting from carpet floor may generate the enough charge to damage ESD unit.)


- 11) Overload : Be careful that the wall outlet and expanded cord is overloaded due to danger of fire and electrical shock.
- 12) Never insert a substance or liquid into this product.  
It may cause fire or shock by contact with voltage point or short.
- 13) Part replacement : The service engineer has to use the parts of same specification at replacement.  
Otherwise, fire, shock or other dangers may be occurred.
- 14) Safety check : Be sure to perform the safety check at service or repair completion

**Importance** : This product includes special important parts on safety.  
These parts are indicated by on schematic diagram.  
At replacement of these parts, use the parts of same specification due to shock, fire or other dangers.  
Never transform the original design without permission of this company.


---

● External Part Name

1. Front

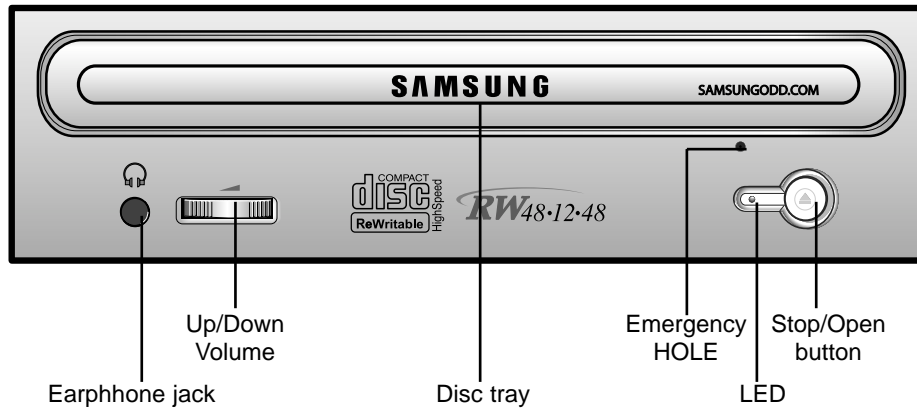


2. Rear

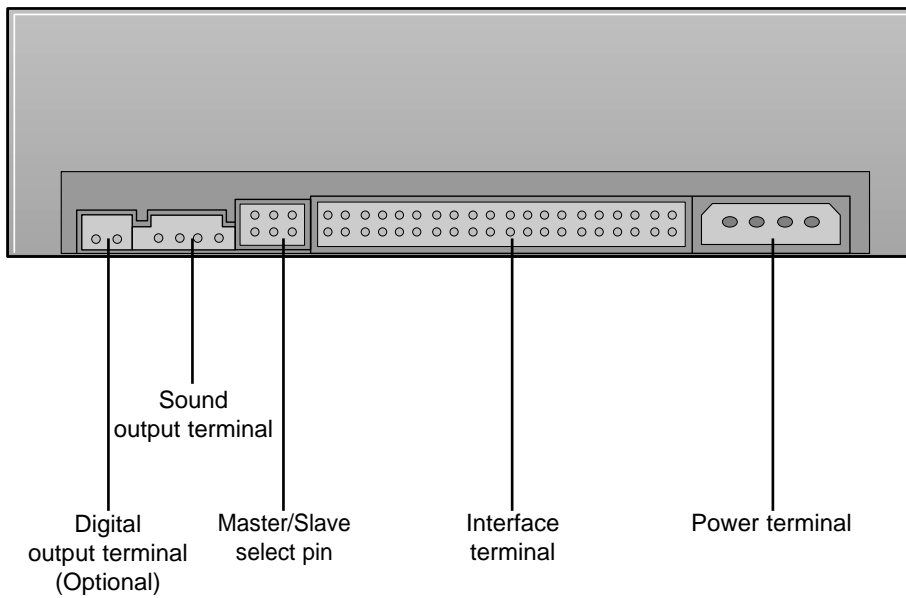

---

## ● Disassembly Diagram

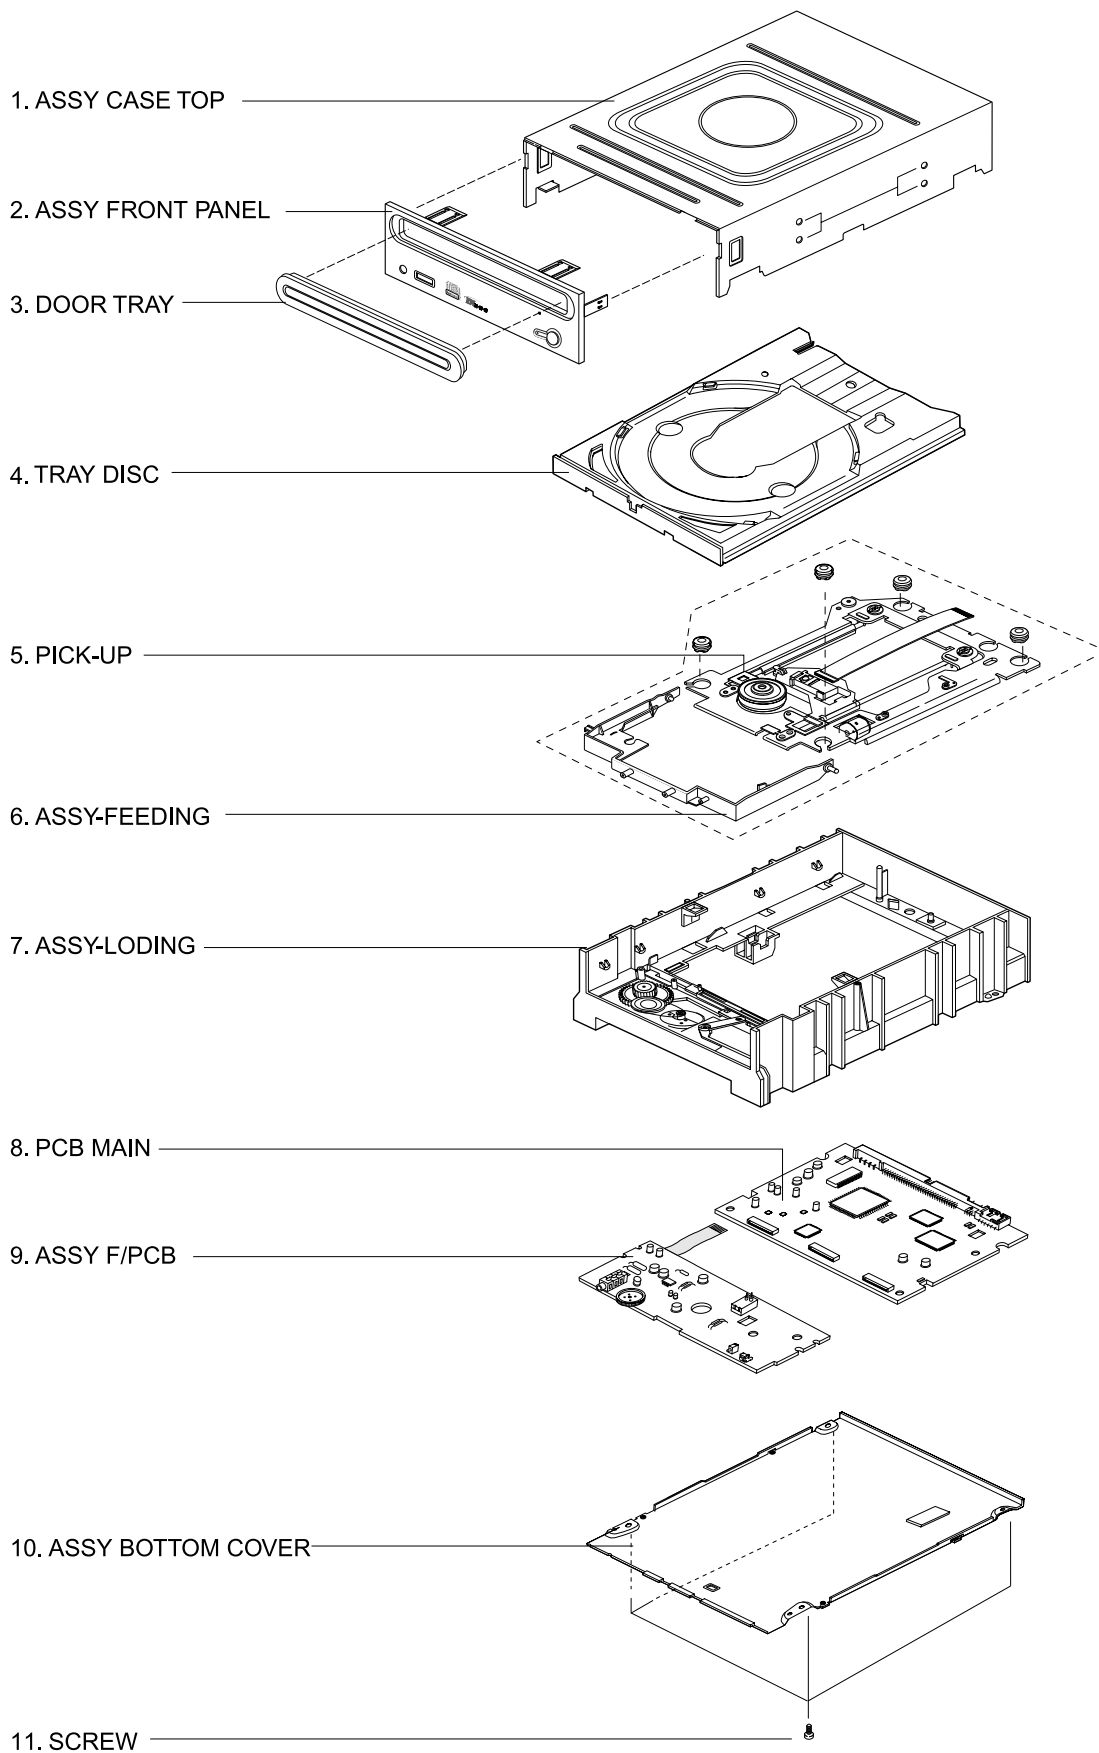

## ● Device Part List

| PART NAME         | CODE No     |                     | SPECIFICATION           |                |
|-------------------|-------------|---------------------|-------------------------|----------------|
| ASSY DECK         | BG97-02248A |                     | -                       |                |
| LOADING           | BG60-00009A | 1.SCREW             | TITE M1.7*5(10)         |                |
|                   | BG97-02250A | 1.ASSY LOADING      | -                       |                |
|                   | BG61-00203A | 1.MAIN FRAME        | HIPS(HG1760S)           |                |
|                   | BG66-00061A | 2.GEAR TRAY         | POM(F20-03)             |                |
|                   | BG66-00032A | 3.GEAR PULLEY       | POM(F20-03)             |                |
|                   | BG66-00044A | 4.BELT PULLEY       | CR-70(BLK 1.3t)         |                |
|                   | BG97-00789A | 5.ASSY LOADING M/T  | -                       |                |
|                   | BG31-00027A | - LOADING MOTOR     | RF-300CH-11440 ㉔        |                |
|                   | BG66-00033A | - PULLEY MOTOR      | POM(F20-03)             |                |
|                   | BG66-00034A | 6.LEVER EJECT       | POM(F20-03)             |                |
|                   | BG66-00062A | 7.SLIDE CAM         | KOCETAL(K700)           |                |
| TRAY DISC FEEDING | BG66-00060A | 1.TRAY DISC         | ABS ( SR-0320D )        |                |
|                   | BG97-02251A | 1.ASSY FEEDING      | -                       |                |
|                   | BG61-00078A | 1.SUB CHASSIS       | ABS(GF20%)              |                |
|                   | BG73-00012A | 2.RUBBER-INSULATOR  | BUTHYL 25Hs             |                |
|                   | BG73-00027A | 3.RUBBER-INSULATOR  | BUTHYL 25Hs             |                |
|                   | BG61-00238A | 4.MAIN BASE M       | SECC+POM                |                |
|                   | BG61-00237A | - MAIN BASE P       | SECC 2.0T               |                |
|                   | BG31-00025A | 5.ASSY STEP M/T     | "SPS-15RF-054K, P4.5mm" |                |
|                   | BG61-00180A | 6.GUIDE PU          | POM(NW-02)              |                |
|                   | BG61-00122A | 7.SHAFT PU R        | "SUS420J2,φ3.0,L85.5mm" |                |
|                   | BG31-00036A | 8.MOTOR SPINDLE     | "RSM-2615A,DMBSPC75A"   |                |
|                   | -           | FFC-SPM             | 15 PIN                  |                |
|                   | BG97-02247A | 9. ASSY TURN TABLE  | -                       |                |
|                   | BG59-00017A | TURN TABLE ABS      | ADC12                   |                |
|                   | BG63-00084A | COVER T/T ABS       | SN PLATE T0.6           |                |
|                   | BG59-00018A | TURN TABLE BALL     | "STEEL φ2.5,11EA"       |                |
|                   | BG73-00026A | RUBBER-T/T ABS      | CR(NEO-B-6150)          |                |
|                   | BG59-00019A | MAGNET              | T1.5                    |                |
|                   | BG61-00018A | BRKT-T/T            | SECC T1.0               |                |
|                   | BG30-00025A | 10.PICK-UP          | SW-232B                 |                |
|                   | BG41-00184A | 11.EFFC PU          | "32 PIN (P0.5),88mm"    |                |
|                   | BG97-01729A | 12.ASSY SLIDER STEP | -                       |                |
|                   | BG66-00052A | - SLIDE STEP        | POM(NW-02)              |                |
|                   | BG61-00225A | - SPRING STEP       | SUS 304-WPB             |                |
|                   | BG61-20031A | 13.HOLDER CAM       | POM(M90-44)             |                |
|                   | AH60-10145A | 14.SCREW            | TITE M1.7*5(5.5)        |                |
|                   | AC60-10074A | 15.SCREW            | TITE M2.6*6             |                |
|                   | 6001-001348 | 16.SCREW            | M1.7*3.5                |                |
|                   | 6003-001260 | 17.SCREW            | TITE M1.7*4.0*3.5       |                |
|                   | BG69-00127A | 18.PAD-DECK         | PORON LE-20 2T          |                |
|                   | BG73-00022A | 19.RUBBER-DVA       | SILICON 25μm            |                |
|                   | BG61-00178A | 20.PLA-VIB/ABSORBER | SECC 2T                 |                |
|                   | ETC         | 3409-001138         | -.SWITCH DETECTOR       |                |
|                   |             | BG63-00052A         | -.SHEET PU              | PVC FILM 0.85T |
| BG41-00182A       |             | -.FFC MAIN          | 13 PIN                  |                |
| -                 |             | -.OIL               | EP-100                  |                |
| -                 | -.GREASE    | KG-110              |                         |                |
| -                 | -.GREASE    | G-754               |                         |                |

---

## ● Disassembly and assembly

### Exterior and PCB disassembly

#### Door-tray

- 1) Supply power to open the tray in direction of arrow "A"
- 2) Lift up the door in direction of arrow "B"
- 3) Close the tray and power off.

**Reference :** If the tray doesn't open, push the clip3 into specified hole shown in detailed figure to open it compulsorily.

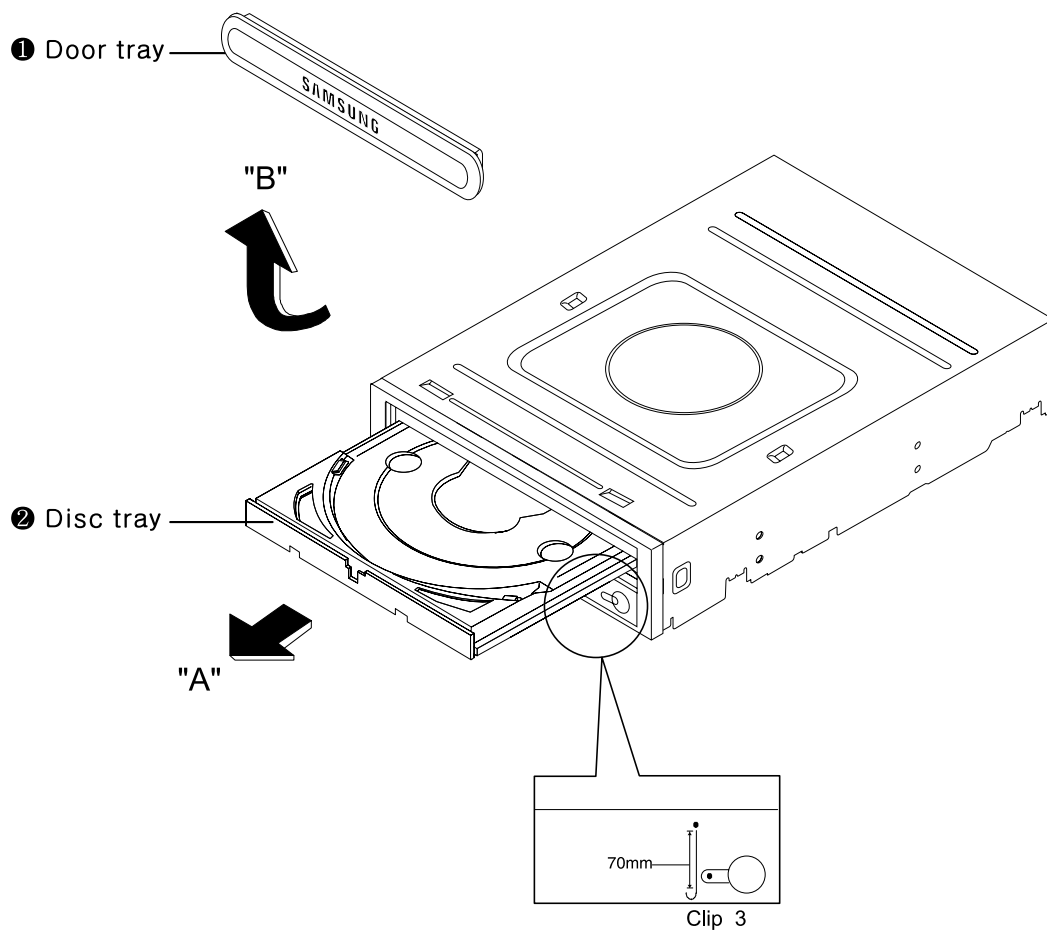


Figure - Door-tray

---

## ● Disassembly and assembly

### Exterior and PCB disassembly

#### Panel-front

- 1) Remove 6 hooks
- 2) Take out the panel-front forward.

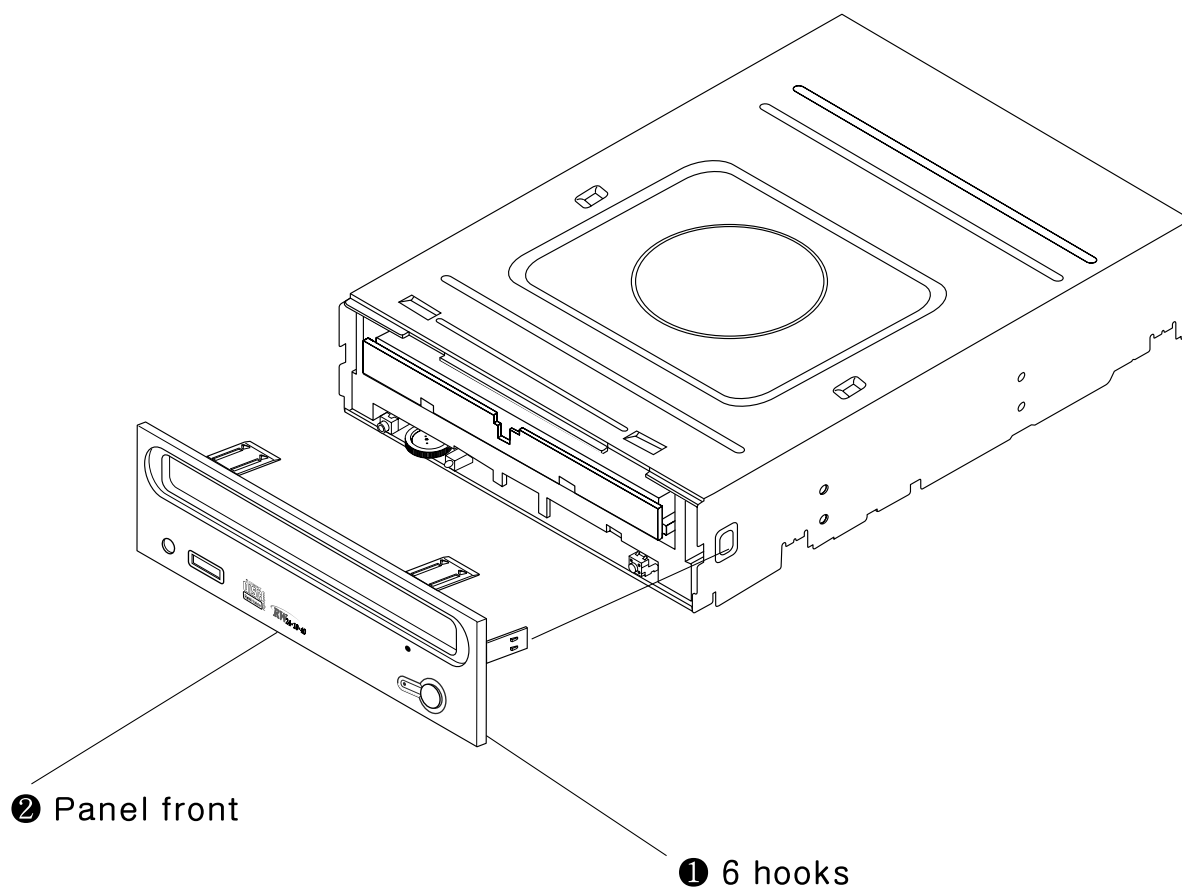


Figure - Panel-front



---

## ● Disassembly and assembly

### Exterior and PCB disassembly

#### Top-cabinet

- 1) Remove 4 screws in the bottom
- 2) Lift up the top-cabinet

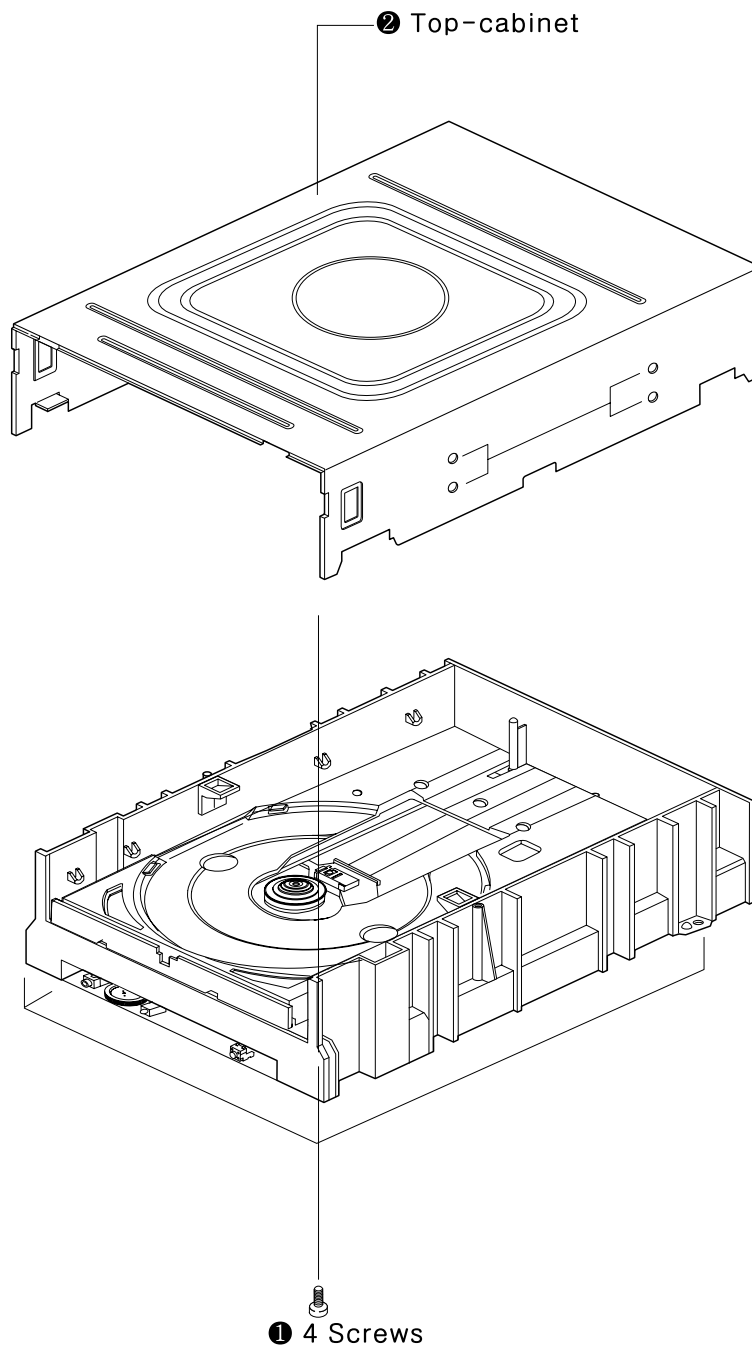


Figure - Top-cabinet

---

## ● Disassembly and assembly

### Exterior and PCB disassembly

#### Ass'y-frame Low

- 1) Lift up the ass'y frame

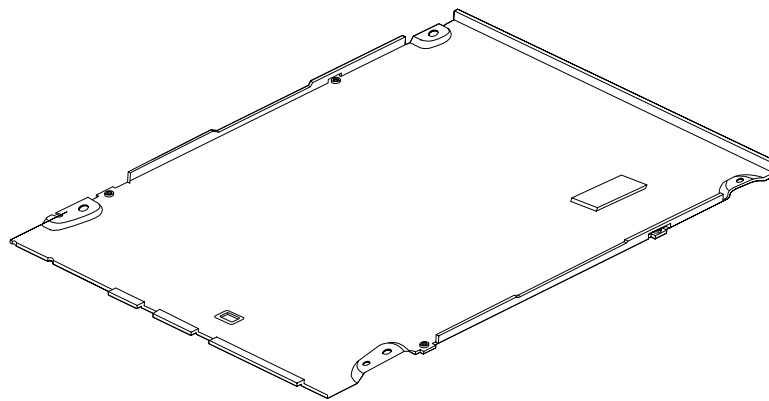
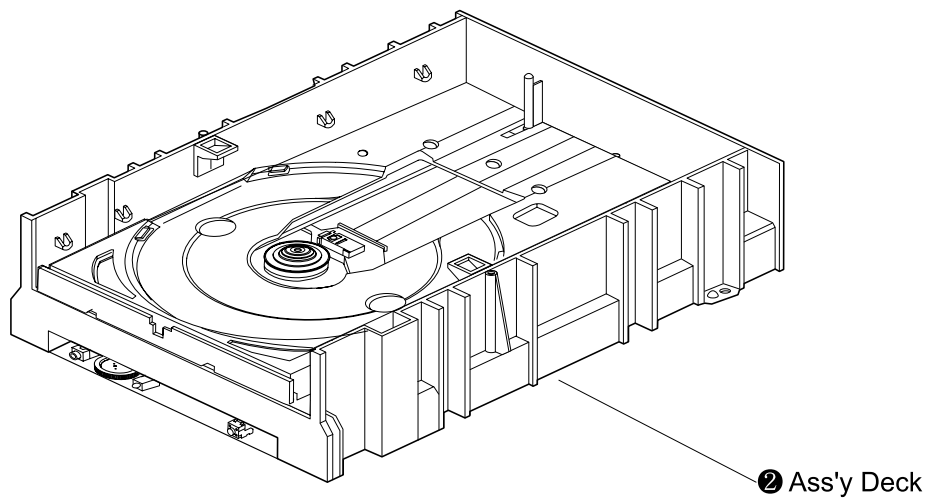


Figure - Ass'y-frame Low

## ● Disassembly and assembly

### Exterior and PCB disassembly

#### MAIN-PCB

- 1) Disassemble the PICK-UP FPC in PCB.
- 2) Disassemble the FFC between Main PCB and Front PCB.
- 3) Disassemble the FFC between Main PCB and Front PCB.
- 4) Push 2 hooks for PCB fixing in deck.
- 5) Disassemble the MAIN-PCB
- 6) Remove soldering at motor connection wire PCB.
- 7) Press 2 hooks for PCB fixing in deck and Disassemble the FRONT-PCB

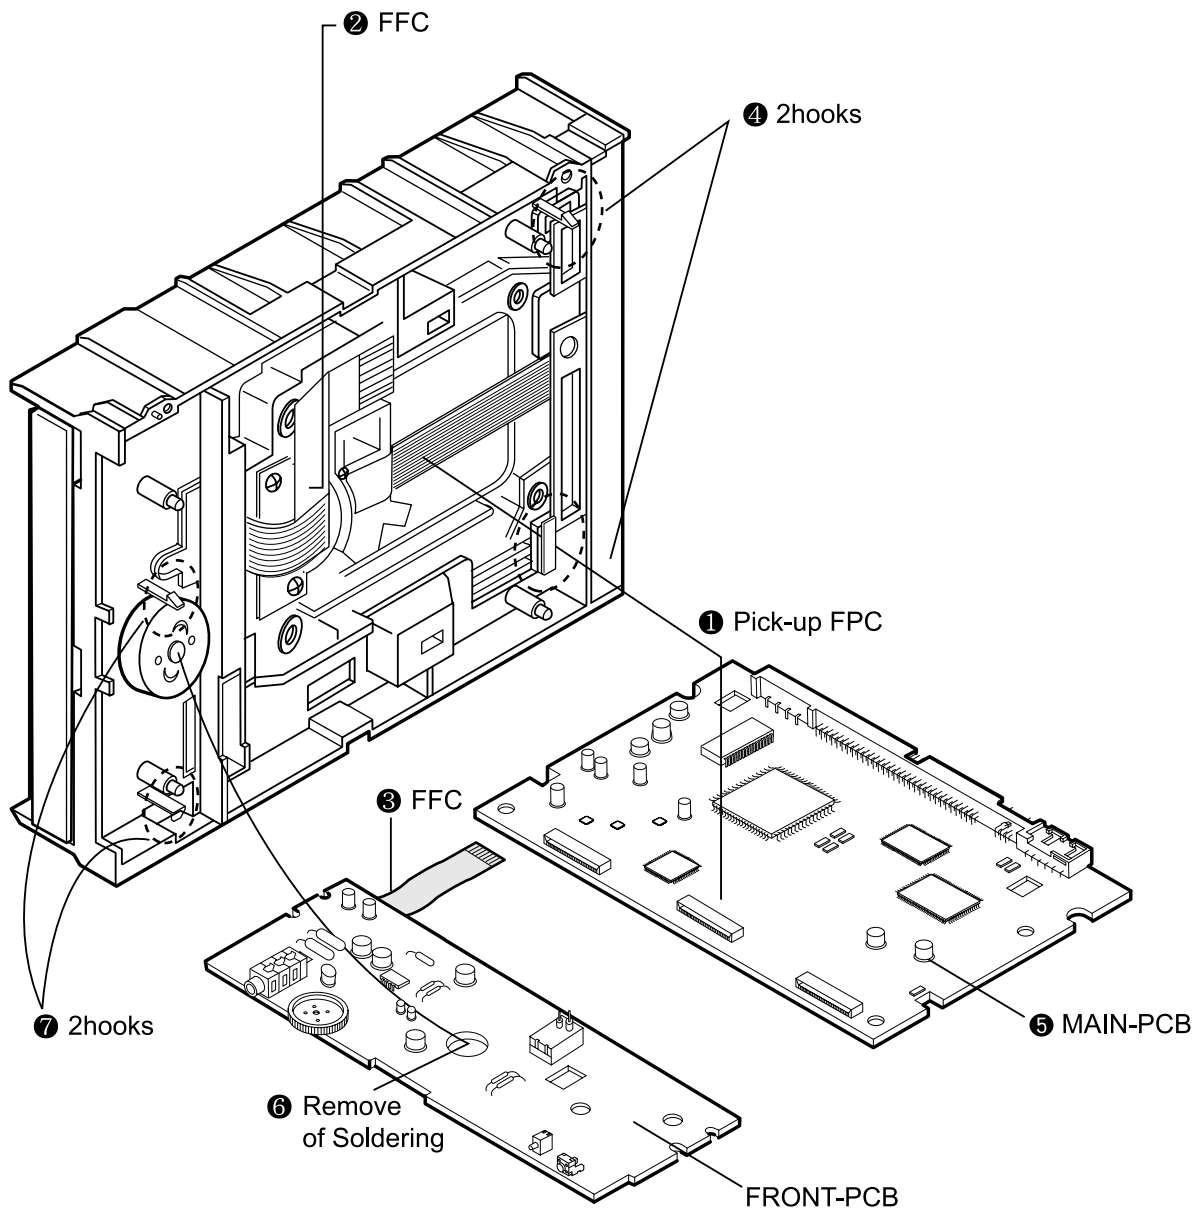


Figure - Disassembly connector

---

## ● Disassembly and assembly

### Deck disassembly

#### Tray

- 1) Push 2 hooks ↘.
- 2) Take out the Tray ↙ in direction of arrow.

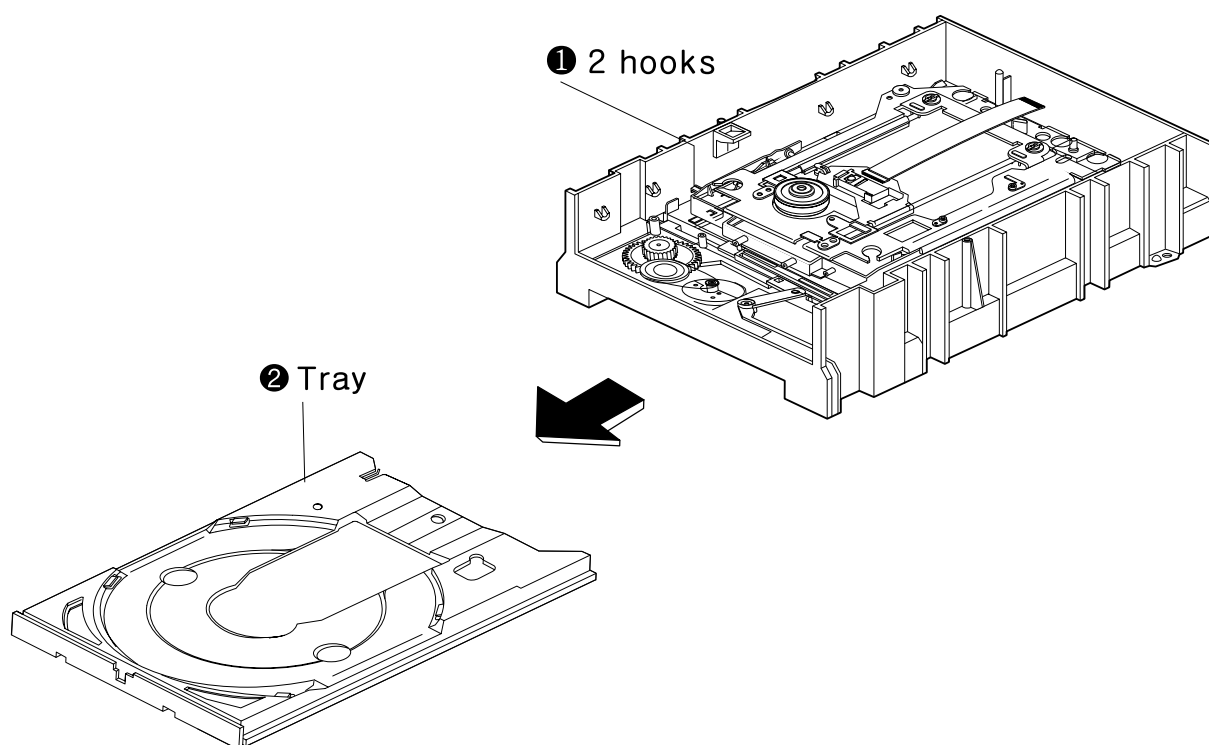


Figure - Tray

---

## ● Disassembly and assembly

### Deck disassembly

#### Ass'y-Deck

- 1) Move the slide cam in left direction.
- 2) Remove screws.
- 3) Disassemble the Ass'y-feeding in arrow "B" direction with pushing the 2 hooks in direction of arrow "A"


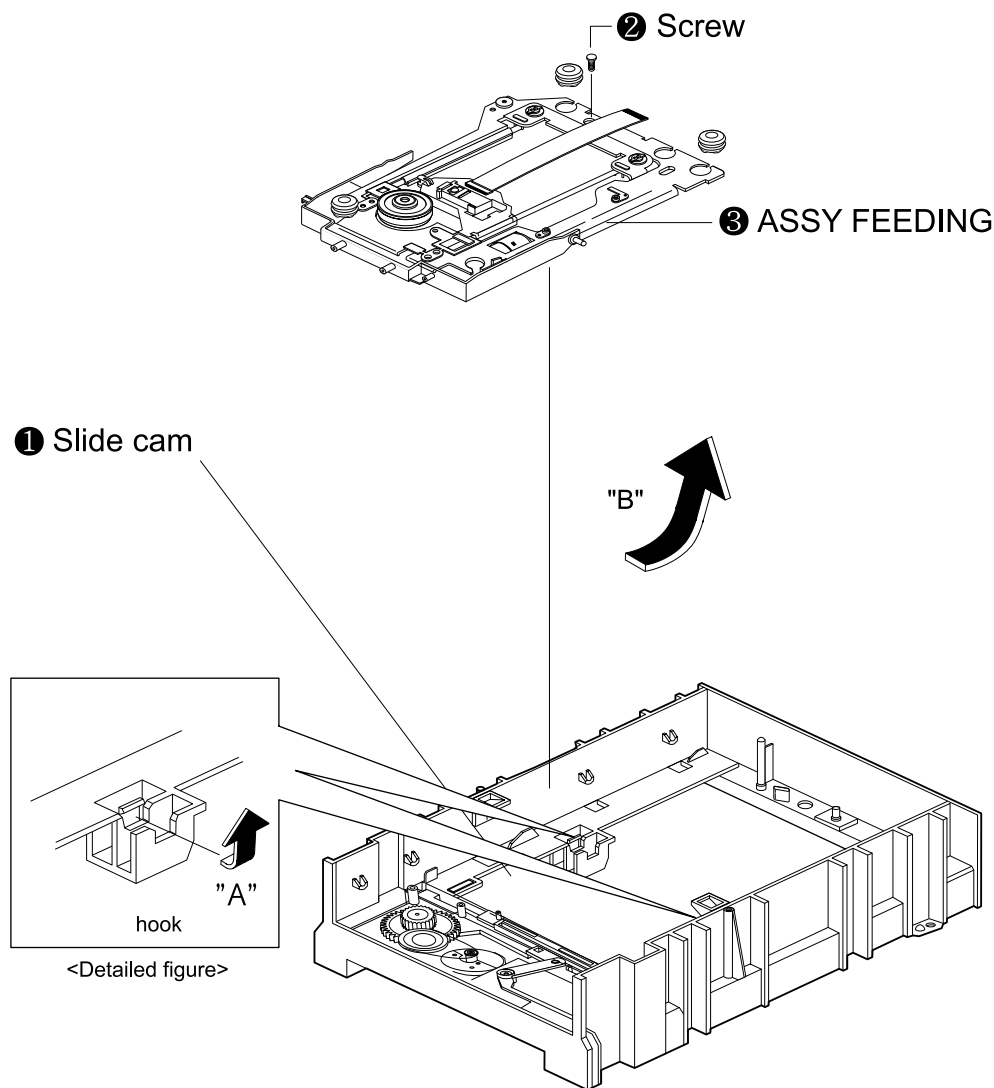


Figure - Ass'y-Deck

## ● Packing Diagram and Part List




| NO |       | CODE-NO     | DESCRIPTION              | SPECIFICATION             | QTY   |
|----|-------|-------------|--------------------------|---------------------------|-------|
| 1  |       | BG69-00146A | MASTER CATON-BOX         | DM 3                      | 1/8EA |
| 2  |       | BG69-00147A | PACKING-CASE SW-224B/DOM | SW-1 MANILA 240g          | 1EA   |
| 3  |       | BG69-00034A | CUSHION-SET              | EPS                       | 2EA   |
| 4  |       | BG69-30305A | BAG-PE                   | T0.05                     | 2EA   |
| 5  |       | BG46-00024A | S-W UTILITY              |                           | 1EA   |
| 6  | ASS'Y | BG68-00352A | MANUAL USERS             |                           | 1EA   |
| 7  |       | BG95-50004A | ASSY-SCREW               |                           | 1EA   |
| 8  |       | BG60-12001H | SCREW-MACHINE            | M3 * 6                    | 1EA   |
| 9  |       | BG39-30002A | BAG-PE                   |                           | 1EA   |
| 10 |       | BG39-00010A | CABLE-IF                 | SR 380MM                  | 1EA   |
| 11 |       | BG39-42001B | CABLE-WIRE HARNESS       | 4P, 3P, N, UL2547/UL 1061 | 4EA   |
| 12 |       | BG69-30307A | BAG-PE                   | T0.05                     | 1EA   |
| 13 |       | 0203-001222 | TAPE-MASKING             | PP-BEING                  | 0.34M |
| 14 |       | BG68-00355A | LABEL-RATING             | SW-224B/DOM, ART PAPER    | 1EA   |
| 15 |       | BG68-50005A | LABEL-QMS                | ART PAPER                 | 1EA   |
| 16 |       | BG68-00296C | LABEL-BAR CODE           | DOM MODEL, ART PAPER      | 1/8EA |
| 17 |       | BG68-00327A | LABEL-BROKEN             | ART PAPER                 | 1EA   |

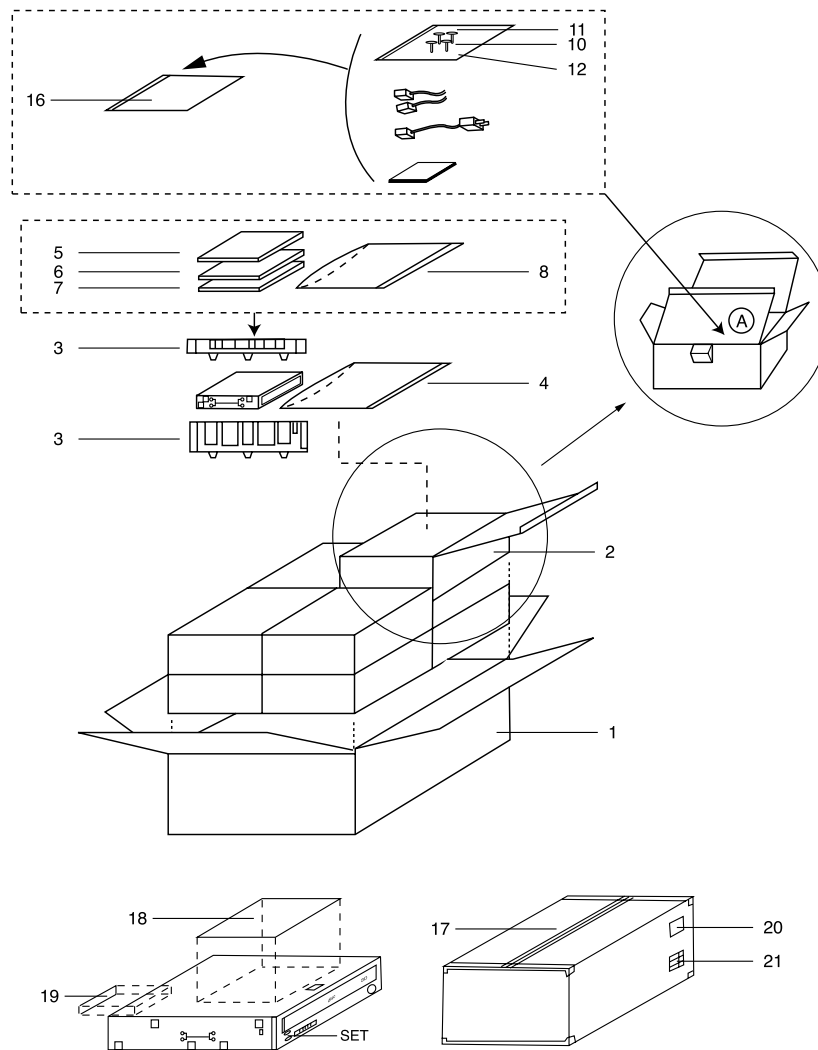


## ● Trouble Shooting

### Check the power source and initial state.

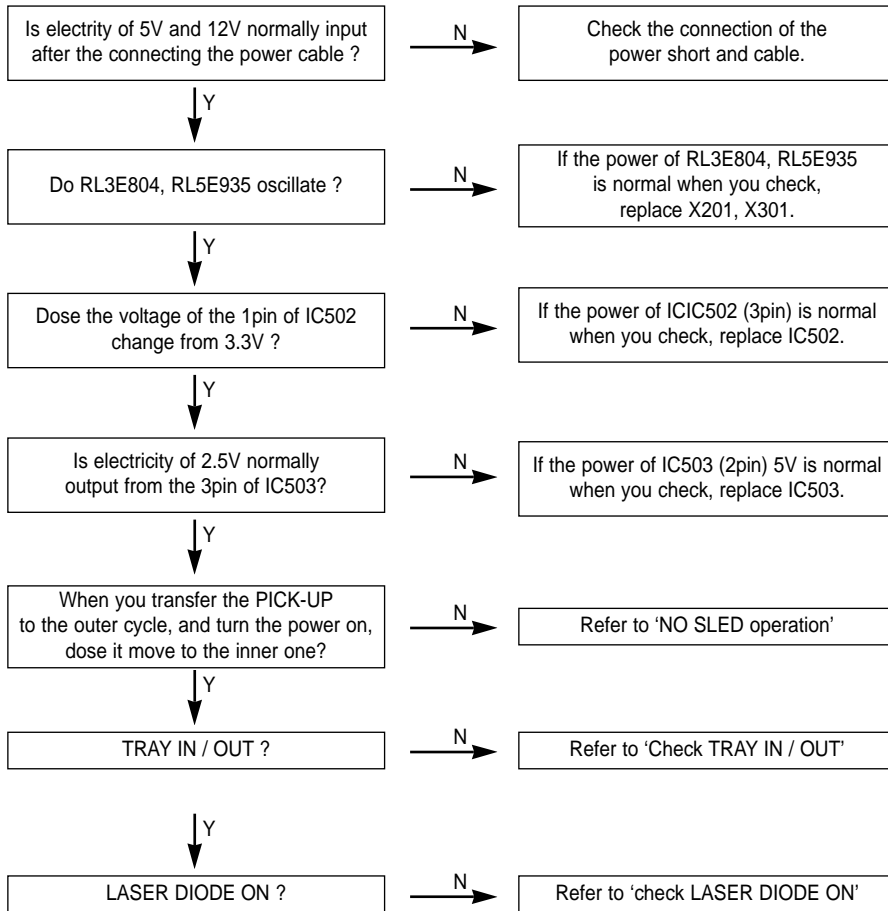



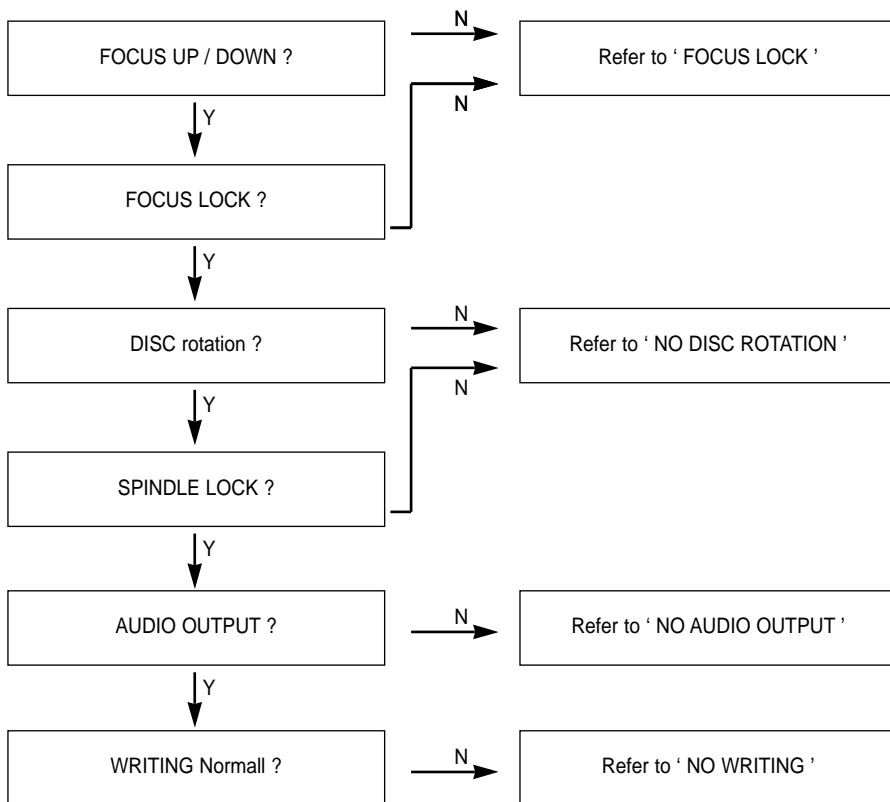

## No SLED OPERATION

When you transfer the pick-up to the outer cycle and turn the power on, dose the pick-up move to the inner one ?

N →

SLED operation of normal.


↓ Y

The below waveform is outputted in IC301 1, 99pin ?

N →

If the constant of IC301 and GND, pattern's when you check, replace.

↓ Y

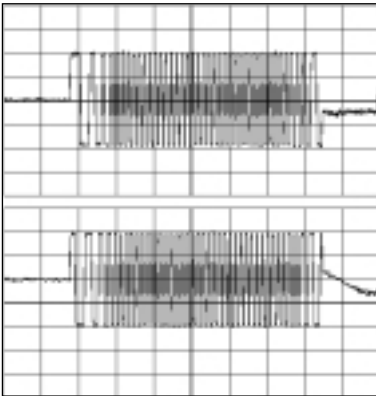


↓ Y

The below waveform is outputted in IC401 35, 37pin ?

N →

If the constant of IC401 and GND, pattern's when you check, replace.


↓ Y

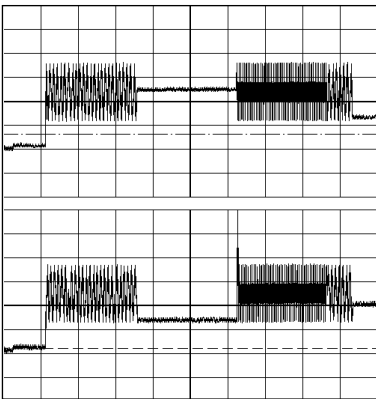

↓ Y


Replace stepping Motor.

**No Tray open / close operation**

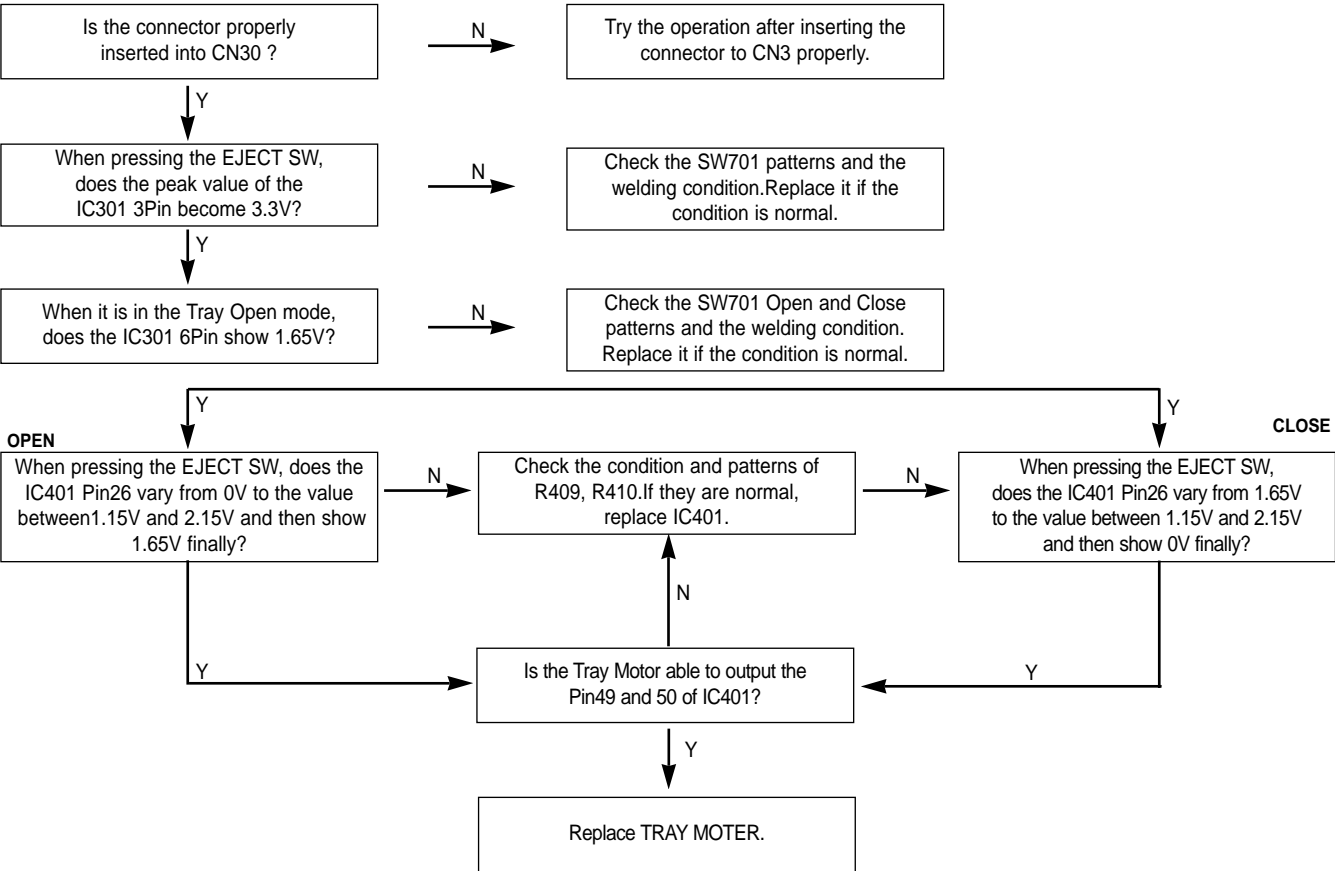


---

**No LASER DIODE ON**

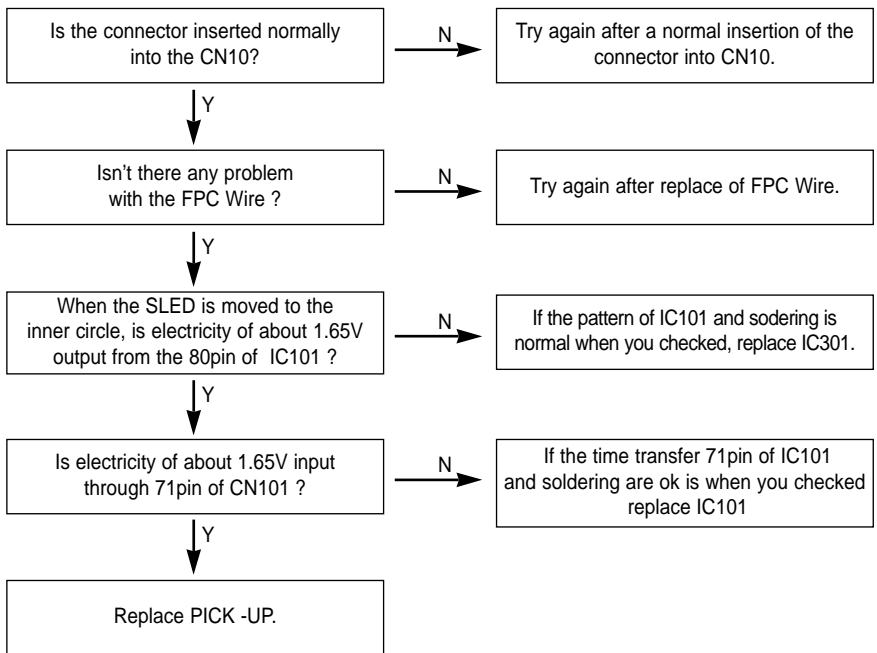


● The value of voltage can be modified slightly, depending on the result of power calibration or the media.

**No FOCUS LOCK**

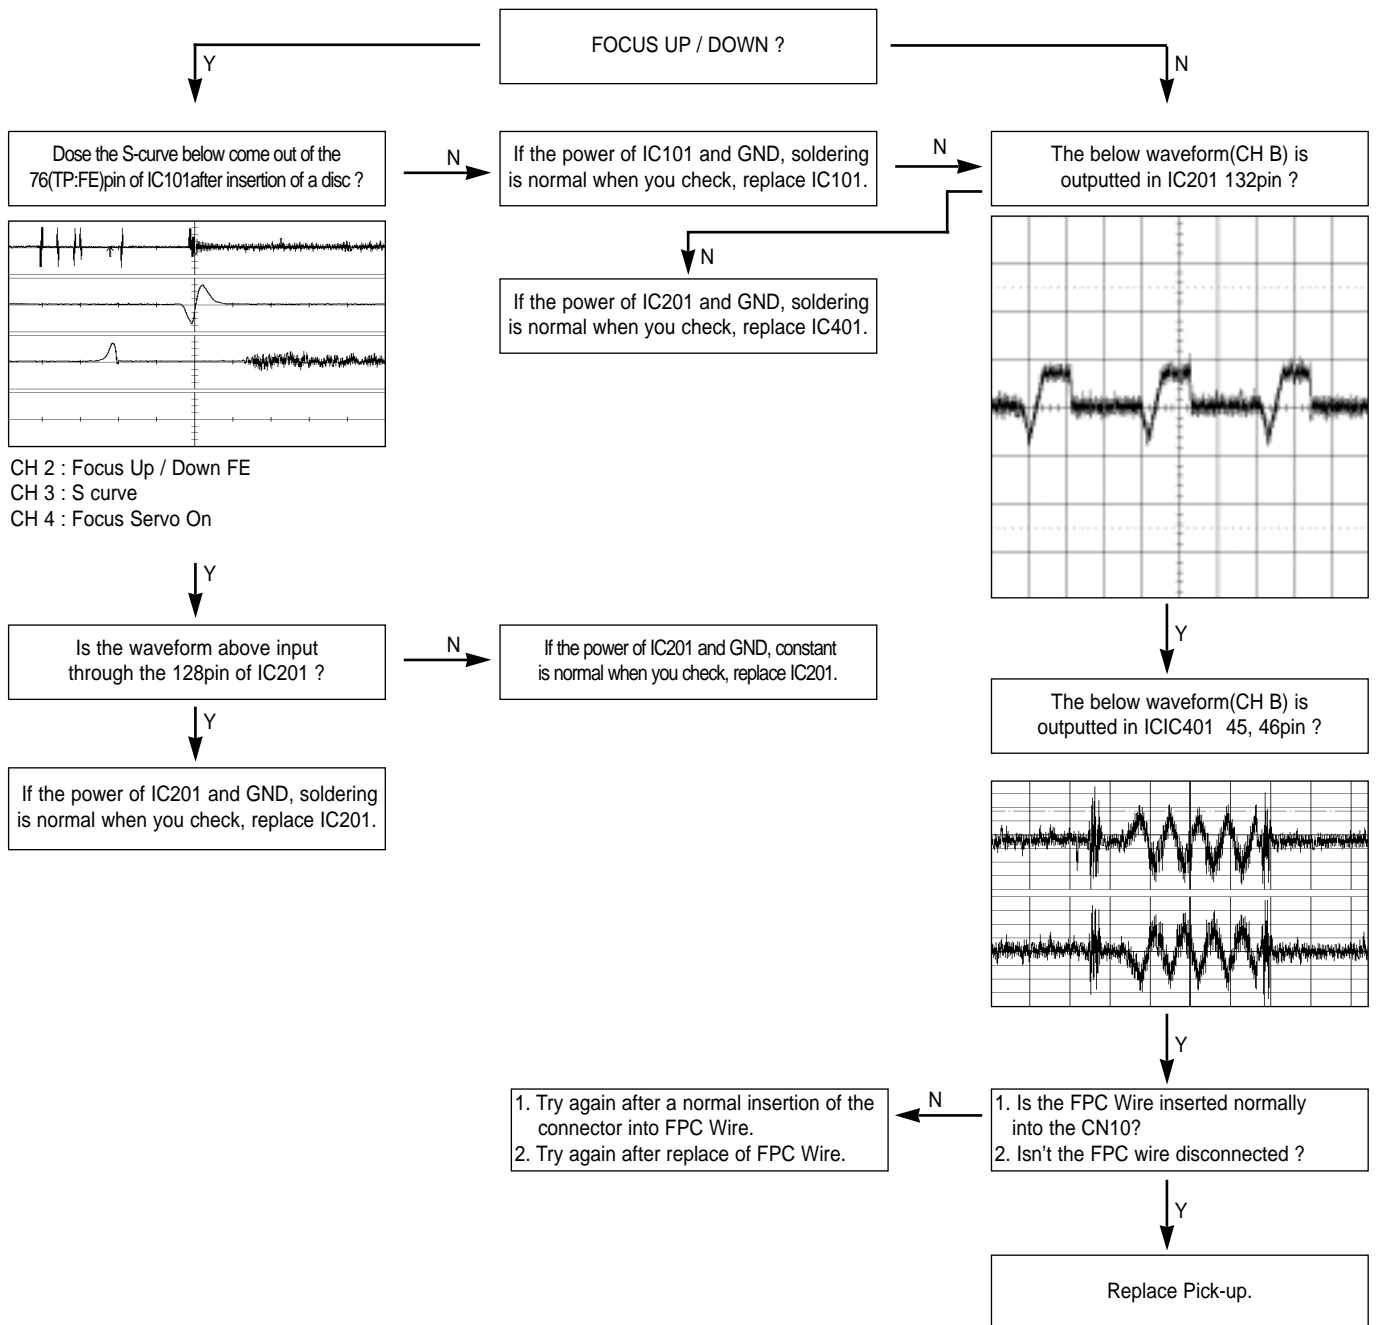


---


**No SPINDLE MOTOR ROTATION**

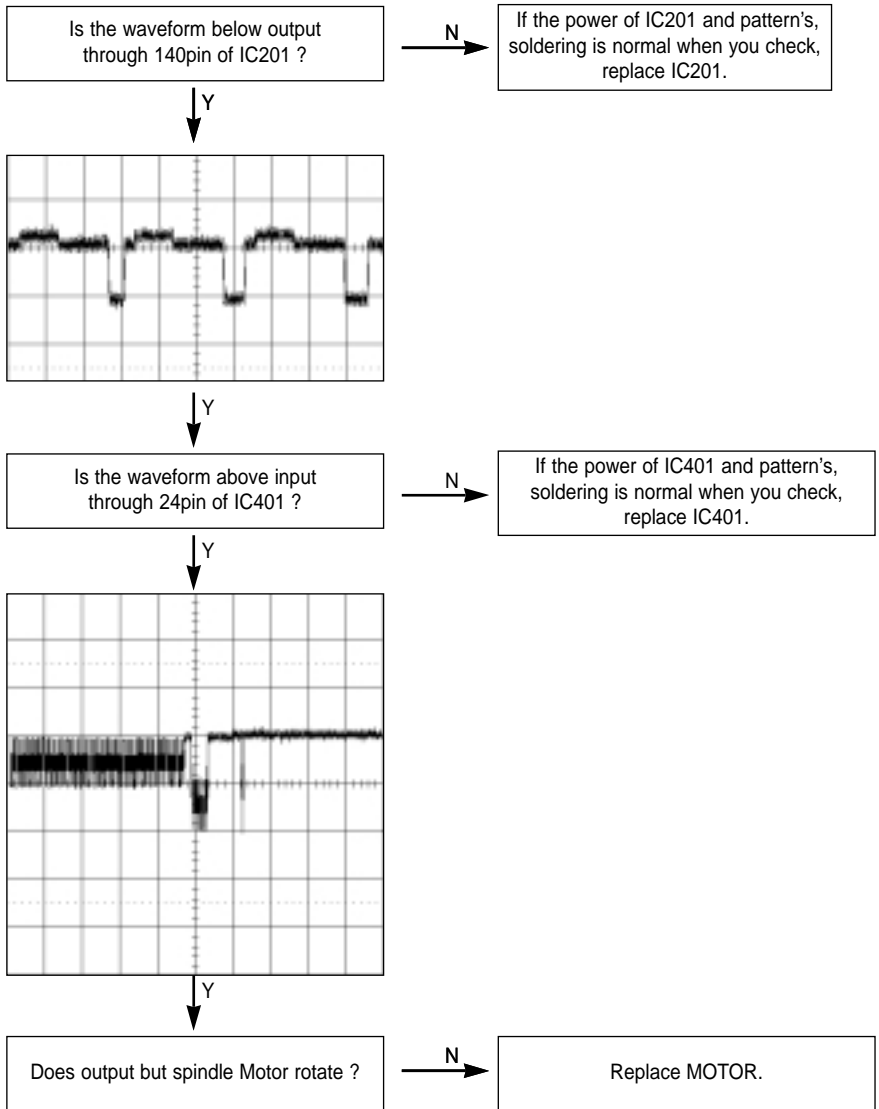

---

## No AUDIO OUTPUT

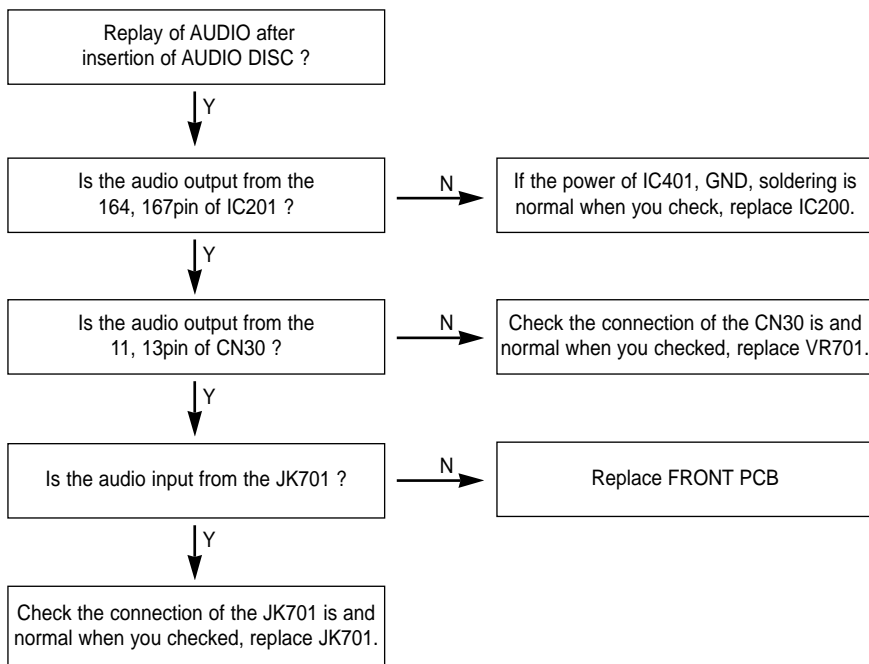


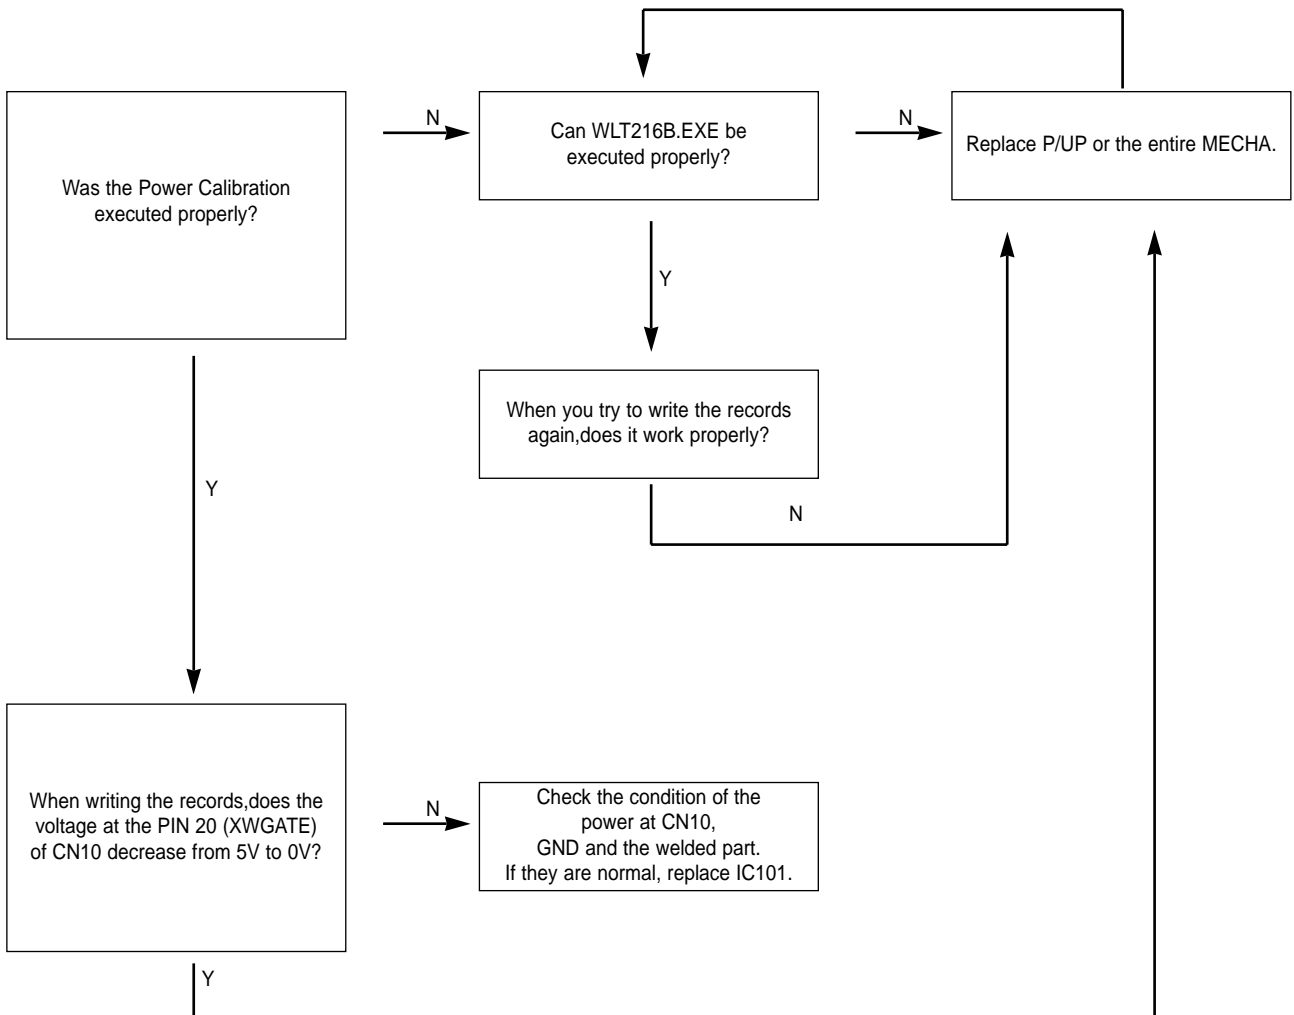



# ● Circuit Diagram

## Main

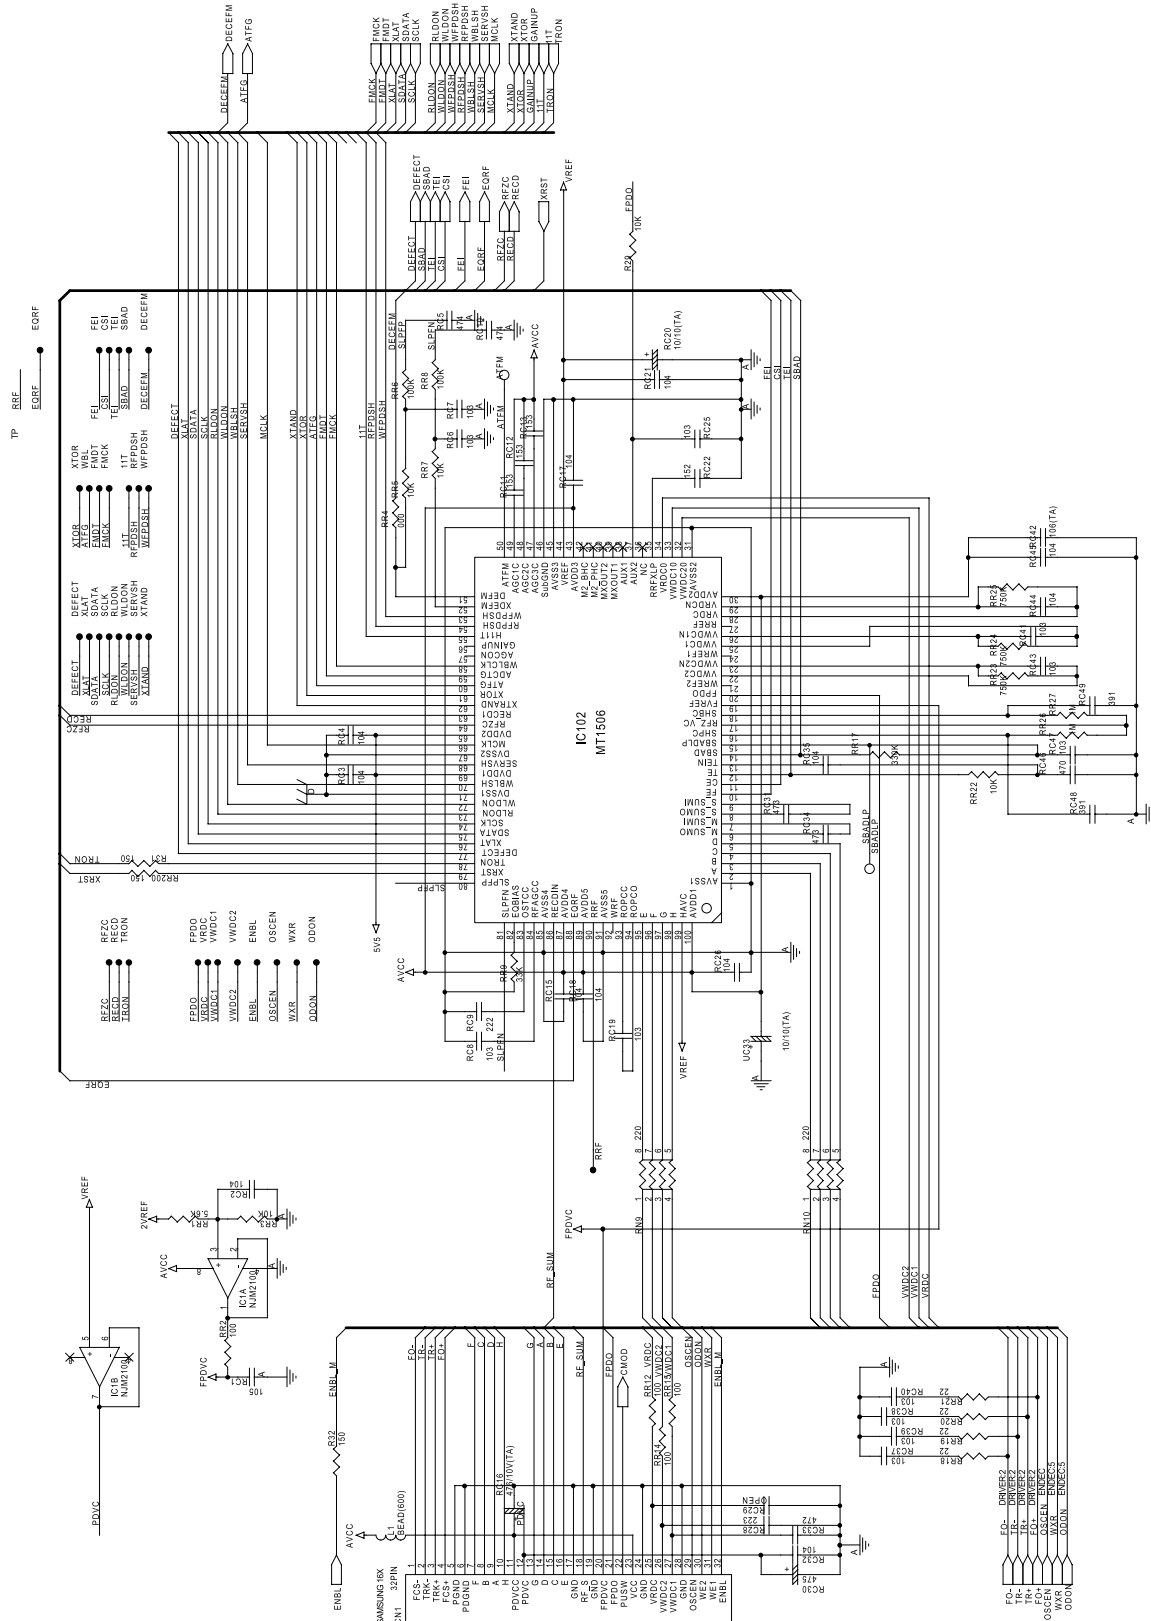

● **Circuit Diagram**  
Front

