



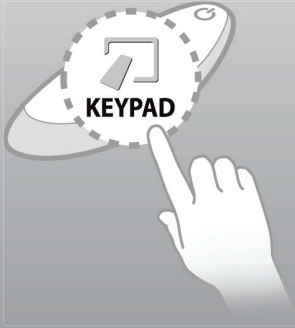

SERIES **9**
9000

Samsung **UHD TV**
Ultra High Definition

user manual

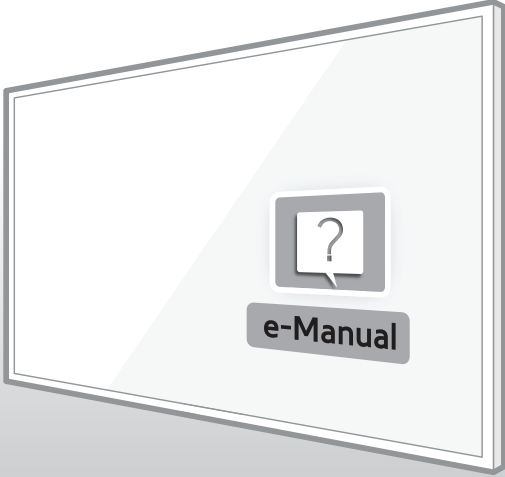

Thank you for purchasing this Samsung product.
To receive more complete service, please register
your product at
www.samsung.com/register

Model _____ Serial No. _____

If you have any questions, please call us at 1-800-SAMSUNG (1-800-726-7864) for assistance.
* This Nanum Gothic Eco font is provided by NAVER.

Warning! Important Safety Instructions

(Please read the Safety Instructions before using your TV.)

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.



This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.



This symbol indicates that important literature concerning operation and maintenance has been included with this product.

- The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of this apparatus, and to protect it from overheating, these slots and openings must never be blocked or covered.
 - Do not place this apparatus in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.
 - Do not place this apparatus near or over a radiator or heat register, or where it is exposed to direct sunlight.
 - Do not place vessels (vases etc.) containing water on this apparatus, as this can result in a fire or electric shock.
- Do not expose this apparatus to rain or place it near water (near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool etc.). If this apparatus accidentally gets wet, unplug it and contact an authorized dealer immediately.
- This apparatus uses batteries. In your community, there might be environmental regulations that require you to dispose of these batteries properly. Please contact your local authorities for disposal or recycling information.
- Do not overload wall outlets, extension cords or adaptors beyond their capacity, since this can result in fire or electric shock.
- Power-supply cords should be placed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at the plug end, at wall outlets, and the point where they exit from the appliance.
- To protect this apparatus from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power line surges.
- Before connecting the AC power cord to the DC adaptor outlet, make sure the voltage designation of the DC adaptor corresponds to the local electrical supply.
- Never insert anything metallic into the open parts of this apparatus. Doing so may create a danger of electric shock.
- To avoid electric shock, never touch the inside of this apparatus. Only a qualified technician should open this apparatus.

- Make sure to plug the power cord in until it is firmly seated. When unplugging the power cord from a wall outlet, always pull on the power cord's plug. Never unplug by pulling on the power cord. Do not touch the power cord with wet hands.
- If this apparatus does not operate normally - in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service center.
- Be sure to pull the power plug out of the outlet if the TV is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).
 - Accumulated dust can cause an electric shock, an electric leakage or a fire by causing the power cord to generate sparks and heat or the insulation to deteriorate.
- Be sure to contact an authorized service center for information if you intend to install your TV in a location with heavy dust, high or low temperatures, high humidity, chemical substances, or where it will operate 24 hours a day such as in an airport, a train station, etc. Failing to do so may lead to serious damage to your TV.
- Use only a properly grounded plug and wall outlet.
 - An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)
- To turn this apparatus off completely, you must disconnect it from the wall outlet. Consequently, the wall outlet and power plug must be readily accessible at all times.
- Do not allow children to hang onto the product.
- Store the accessories (battery, etc.) in a location safely out of the reach of children.
- Do not install the product in an unstable location such as a shaky shelf, a slanted floor, or a location exposed to vibration.
- Do not drop or strike the product. If the product is damaged, disconnect the power cord and contact a service center.
- To clean this apparatus, unplug the power cord from the wall outlet and wipe the product using a soft, dry cloth. Do not use any chemicals such as wax, benzene, alcohol, thinners, insecticide, air fresheners, lubricants, or detergent. These chemicals can damage the appearance of the TV or erase the printing on the product.
- Do not expose this apparatus to dripping or splashing.
- Do not dispose of batteries in a fire.
- Do not short-circuit, disassemble, or overheat the batteries.
- There is danger of an explosion if you replace the batteries used in the remote with the wrong type of battery. Replace only with the same or equivalent type.
- **WARNING - TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.**
- This product contains chemicals known to the State of California to cause cancer and reproductive toxicity.
- Use care when touching the TV after it has been on for some time. Some parts can be warm to the touch.



Internet Security

Samsung takes a number of steps to protect its Internet-compatible Smart TVs against unauthorized incursions and hacking. For example, certain sensitive communications between the TV and the Internet servers are encrypted. In addition, the TV's operating system has adopted controls to prevent the installation of unauthorized applications.

Although we take steps to protect your SmartTV and information, no Internet-connected device or transmission is completely secure. We therefore encourage you to take additional steps to safeguard your TV, secure your Internet connection, and minimize the risk of unauthorized access. These steps are listed below:

- When Samsung releases software updates to improve the security on your TV, you should promptly install these updates. To automatically receive these updates, turn on **"Auto Update"** in the TV's menu (**Support > Software Update > Auto Update**). When an update is available, a popup message appears on the TV screen. Accept the software download and update by selecting YES when prompted. Take steps to secure your wireless router and network. Your router's manual should provide additional details about how to implement the following measures:
 - Secure your wireless router's management settings with a unique password to prevent unauthorized changes to security related settings.
 - Implement standard encryption (e.g., WPA2 encryption) on your wireless router to secure your wireless network signal.
 - Secure access to your wireless network with a hard-to-guess password.
 - Confirm your router's firewall setting is enabled (if so equipped).
 - Make sure all your Internet connected devices are behind your network's firewall.
 - If your router or modem has a standby mode button, use it to disconnect your home network from the Internet when it is not in use.
- Use strong passwords for all your Internet accounts (Netflix, Facebook, Skype, etc.). If your TV has a camera, recess the camera into the TV's bezel when it is not in use. Recessing the camera makes it inoperative.
- If any unexpected messages appear on your TV screen requesting permission to link a device or enable a remote session, do NOT accept.
- Do not visit suspicious web sites and do not install any suspicious programs. We recommend users install only those authorized apps provided by Samsung through Samsung Smart Hub.

Figures and illustrations in this User Manual are provided for reference only and may differ from the actual product appearance. Product design and specifications may change without notice.


Features of your new TV

3D

This new feature lets you view 3D content.

SMART HUB

Your TV features Smart Hub, a multi-purpose entertainment and family center. With Smart Hub, you can surf the web, download applications, and stay in touch with family and friends through social networking services. In addition, you can view or play photo, video, and music files stored on external storage devices.

Press the  button to launch Smart Hub. Choose a service using the icons displayed in the top part of the screen.

Smart Hub services and functionality include:

GAMES: You can view all game apps provided by Smart Hub and download and play games you select.

SAMSUNG APPS: Samsung Apps offers an extensive collection of free and for-pay news, sports, weather, and gaming content you can download directly to and enjoy on your TV.

On TV: View a listing of programs that are currently airing or are scheduled to air. Select a program to watch.

MOVIES & TV SHOWS: Purchase and stream movies and series directly from the Internet.

MULTIMEDIA: Play back photo, video, and music files from an external storage device.

Anynet+ (HDMI-CEC)

Lets you to control all connected Samsung devices that support Anynet+ with your Samsung TV's remote.

e-Manual

Provides a detailed, on-screen user's manual built into your TV (page 27).

SMART Interaction

Access and control menu options and functions using motions.

Device Manager

Use the TV features with a USB or Bluetooth keyboard and mouse.

MHL & Screen Mirroring

Displays mobile device screens on the TV using a wired or wireless connection.

Contents

01. The TV Controller

02. The One Connect

- 8 Connecting the TV to the One Connect
- 9 Upgrading the TV Using a One Connect
- 11 Arrange the cables using the Cable Holder
- 11 Matching Cable Plugs to Cable Ports

03. The Built-in Camera

04. Using the Remote Control

- 13 Using the Remote Control

05. Using the Samsung Smart Control

- 15 Buttons and Functions
- 20 Installing Smart View 2.0 a Near Field Communications (NFC) Device
- 21 Switching Between Video Sources
- 21 Using the Remote Control to Control External Devices
- 21 Connecting the IR Extender Cable
- 22 Setting Up the Universal Remote Control

06. Smart Hub

07. Using the e-Manual

- 27 Launching the e-Manual
- 27 Additional e-Manual Features
- 28 Updating the e-Manual to the Latest Version

08. Troubleshooting and Maintenance


- 29 Troubleshooting
- 31 Network Troubleshooting
- 34 Eco Sensor and Screen Brightness
- 35 Getting Remote Support
- 35 Caring for the TV

09. Specifications, wall mounting, and other information

- 36 Specifications
- 37 Hear the abundant sound
- 37 Licenses
- 38 Mounting the TV on a Wall Using the Wall Mount Kit (Optional)
- 39 Providing Proper Ventilation for Your TV
- 40 Securing the TV to the Wall
- 41 Warranty Information
- 42 SAMSUNG BRAND PRODUCTS

01. The TV Controller

You can turn on the TV using the Samsung Smart Control or the TV's Controller, a small joystick-like button on the back of the TV in its lower-left corner. You can also use the TV's Controller to operate the TV without the Samsung Smart Control.

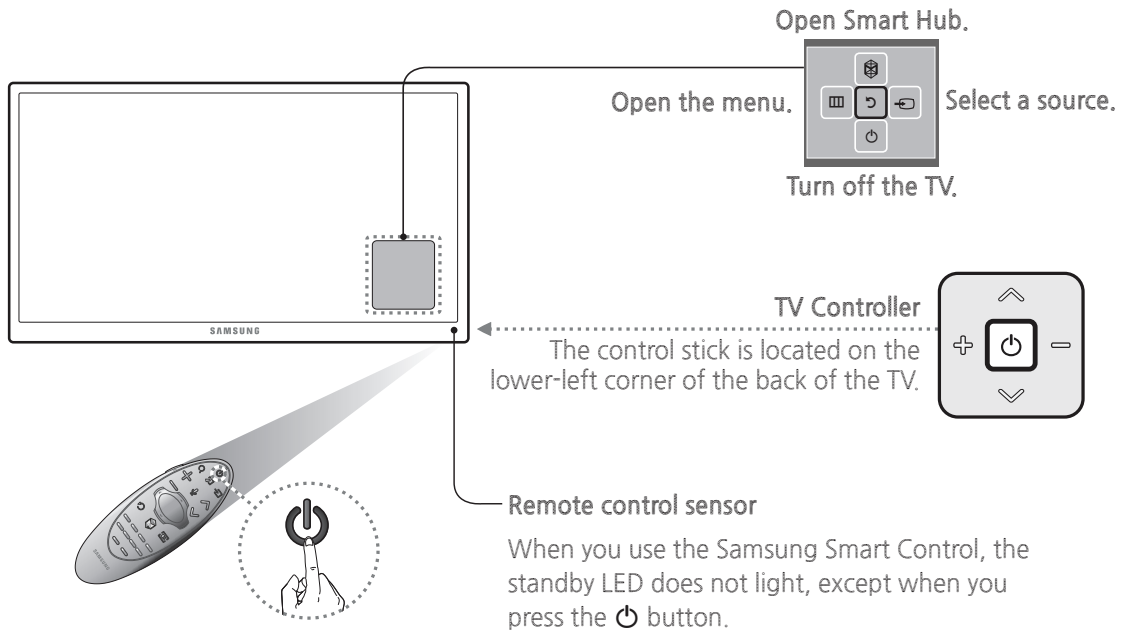



Press the Controller in to turn the TV on. When the TV is on, press the controller left or right to open the TV's menu or open the source list. Press the Controller up to open Smart Hub. Press the controller in to make a selection. Press the Controller down to turn off the TV.

02. The One Connect

The One Connect serves as the connection panel for your TV. You connect nearly all external devices to the One Connect.

Connecting the TV to the One Connect

You must connect the TV to the One Connect via the One Connect cable before connecting any external devices. The One Connect cable has two different ends. Connect the end marked TV to the TV and the other end to the One Connect.

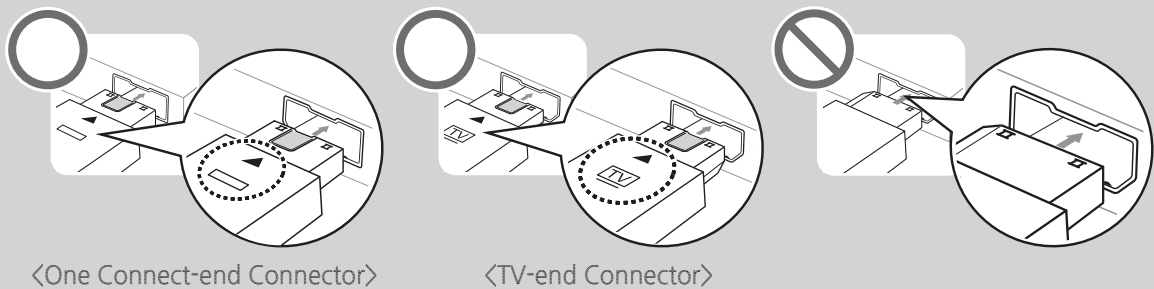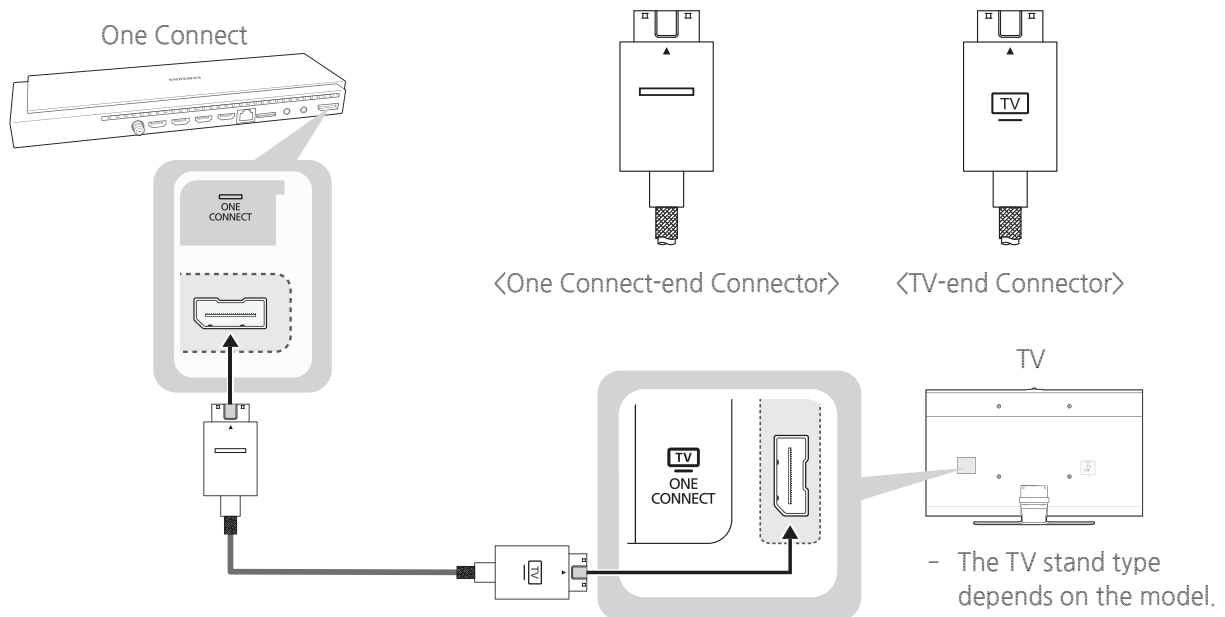


The connectors at each end of the One Connect cable differ from each other in shape. When connecting the One Connect cable to the TV, make sure that the right connector is plugged into the TV. Otherwise, it may cause product a failure.

Upgrading the TV Using a One Connect


No need to buy a new TV. You can upgrade your TV to the latest features and functions by replacing your older One Connect with a One Connect from the latest year (sold separately). Experience the latest features and services offered by Samsung Electronics via One Connect.

One Connect (sold separately)

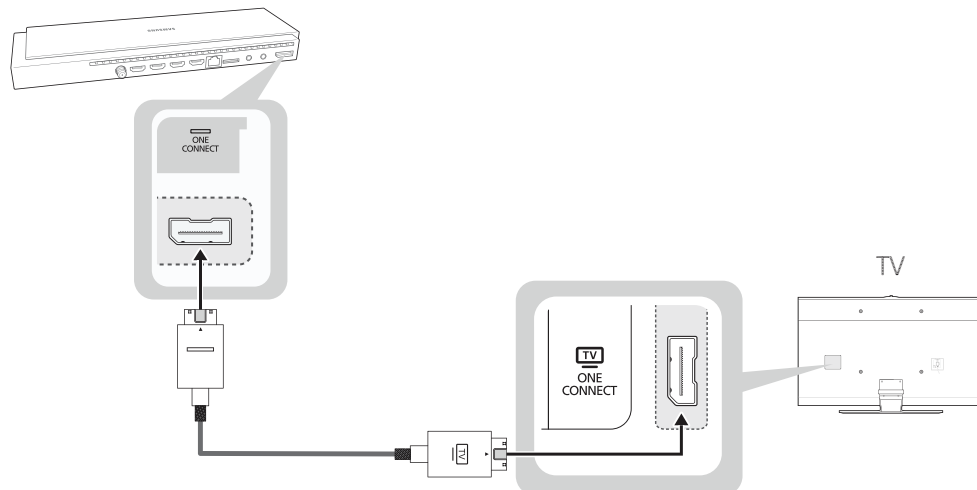


One Connect is sold separately. Purchasing a One Connect allows you to upgrade the One Connect's software to the version from the year in which your One Connect was released. Not supported on all models.

One Connect - Front

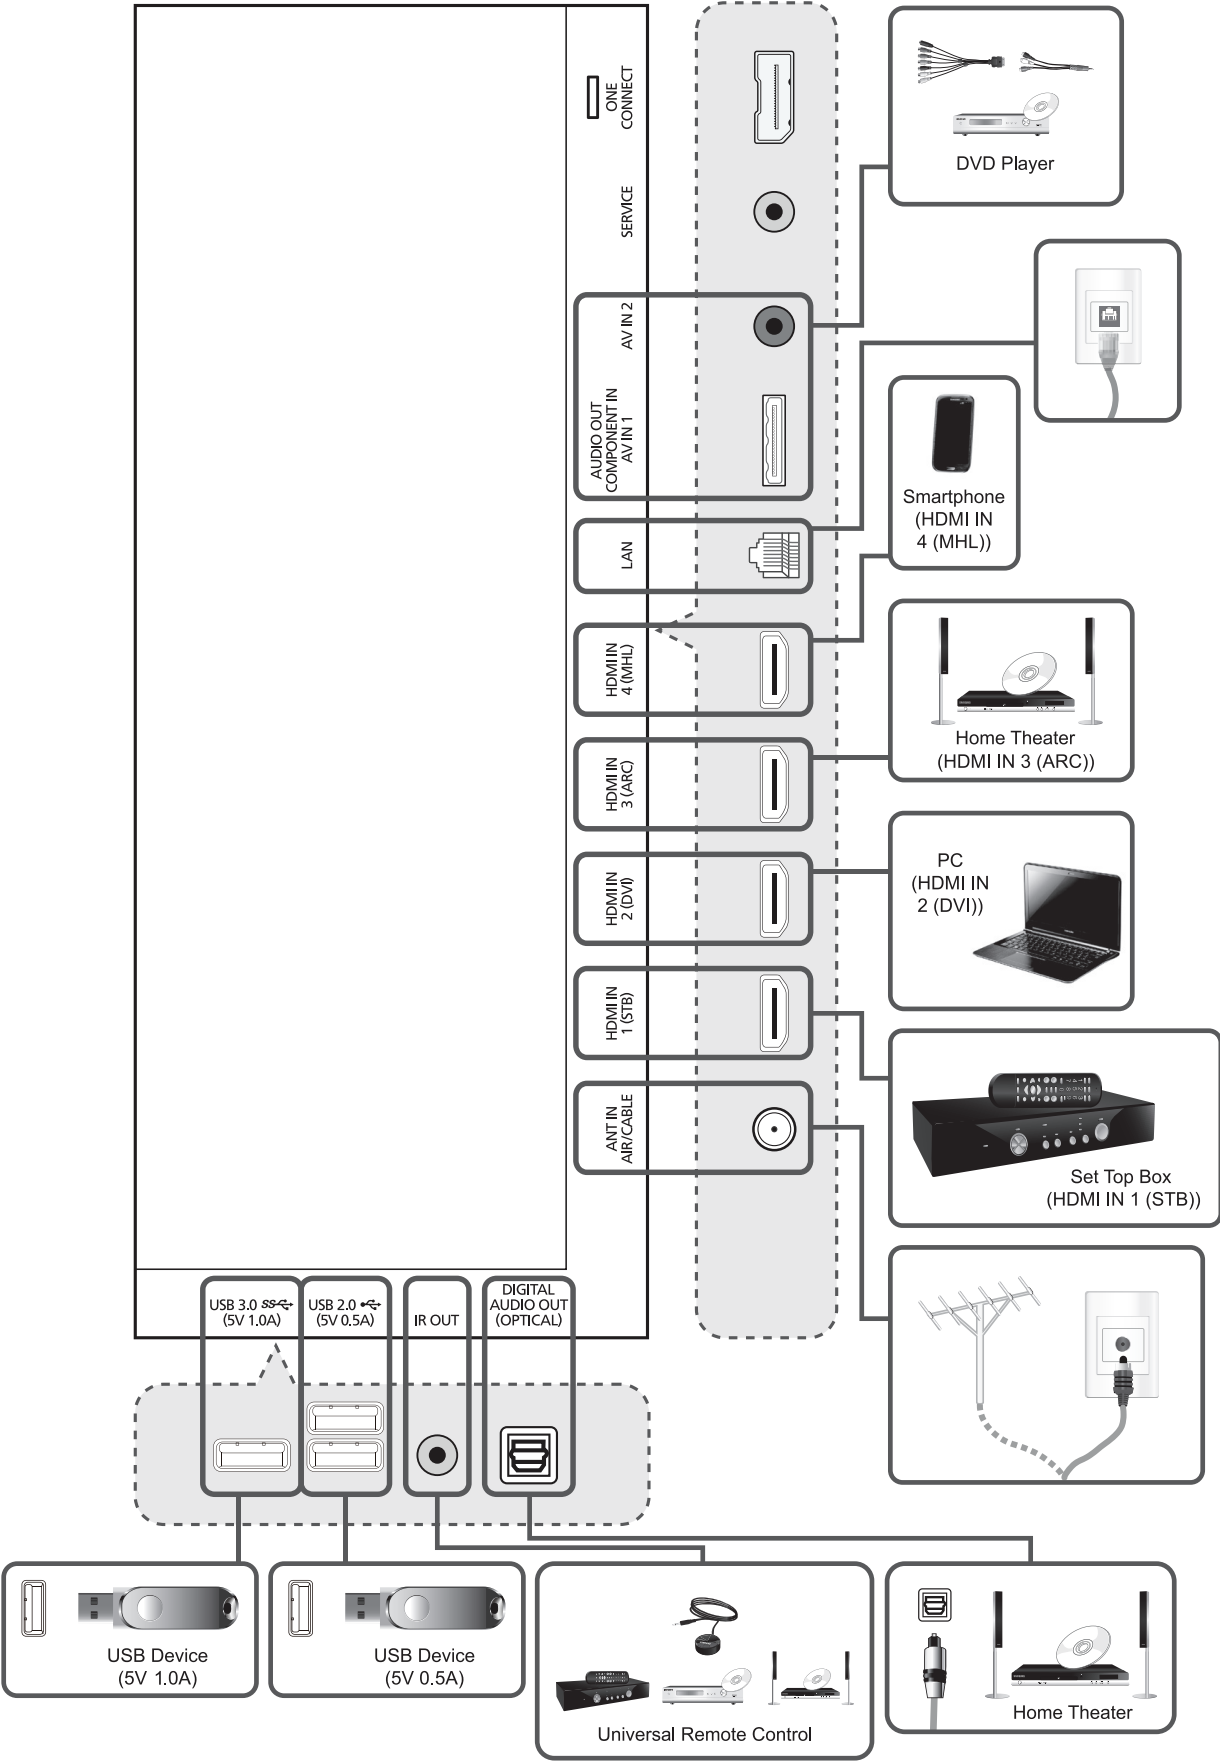

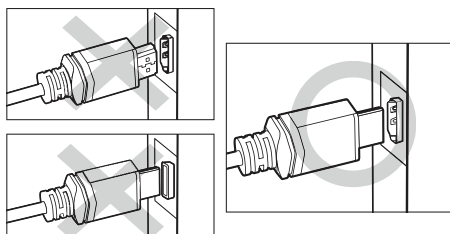







Arrange the cables using the Cable Holder

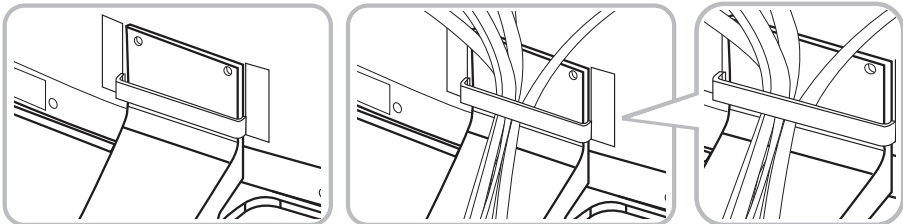

Matching Cable Plugs to Cable Ports


Make sure you have the correct cable before plugging it in. Illustrations of common plugs and ports are shown below.

	Cable Plugs	Ports	
HDMI			 <p> Warning Do not plug cables in upside down. Be sure to check the orientation of the plug before plugging it in.</p>
USB			
Optical			

03. The Built-in Camera


This TV features a built-in TV camera that you can use for the **Motion Control**, and **Face Recognition** features. You can also use the camera's angle adjustment knob to change the camera's viewing angle.

From the Top

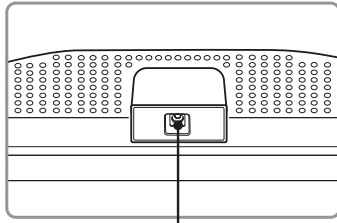

Lens


From Behind

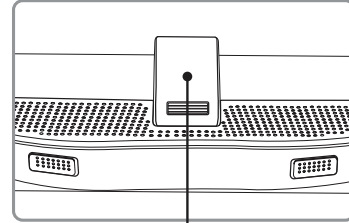

Knob for camera's angle adjustment




Do not touch the lens while operating the TV camera. You can leave fingerprints that may affect the image quality. If the lens gets dirty, clean it using a soft piece of cloth.

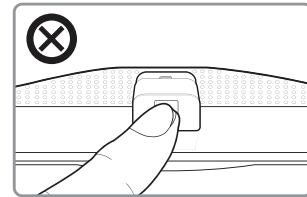

Extending the TV Camera

To use the TV camera, you must first extend it.


Gently push the camera in without touching the lens until you hear a click. The camera pops up.

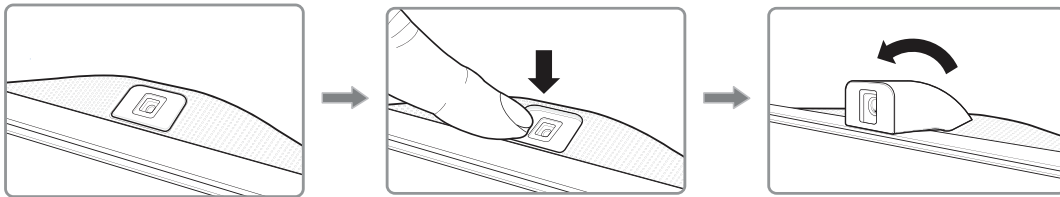

Retracting the Camera

If you are not using the TV camera, keep it retracted inside the TV. The Motion Control and Face Recognition features cannot be used while the TV camera is in the retracted state.


Gently push the camera in without touching the lens until you hear a click.

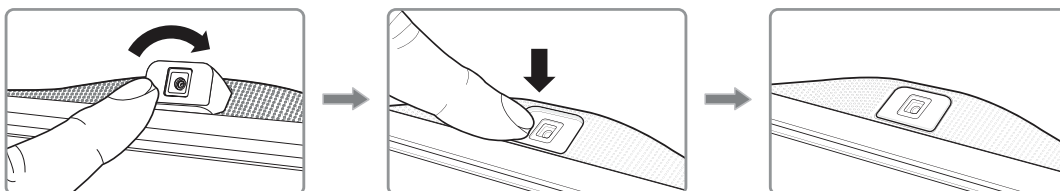

04. Using the Remote Control


Using the Remote Control

- The standard remote control is provided for ease of use.

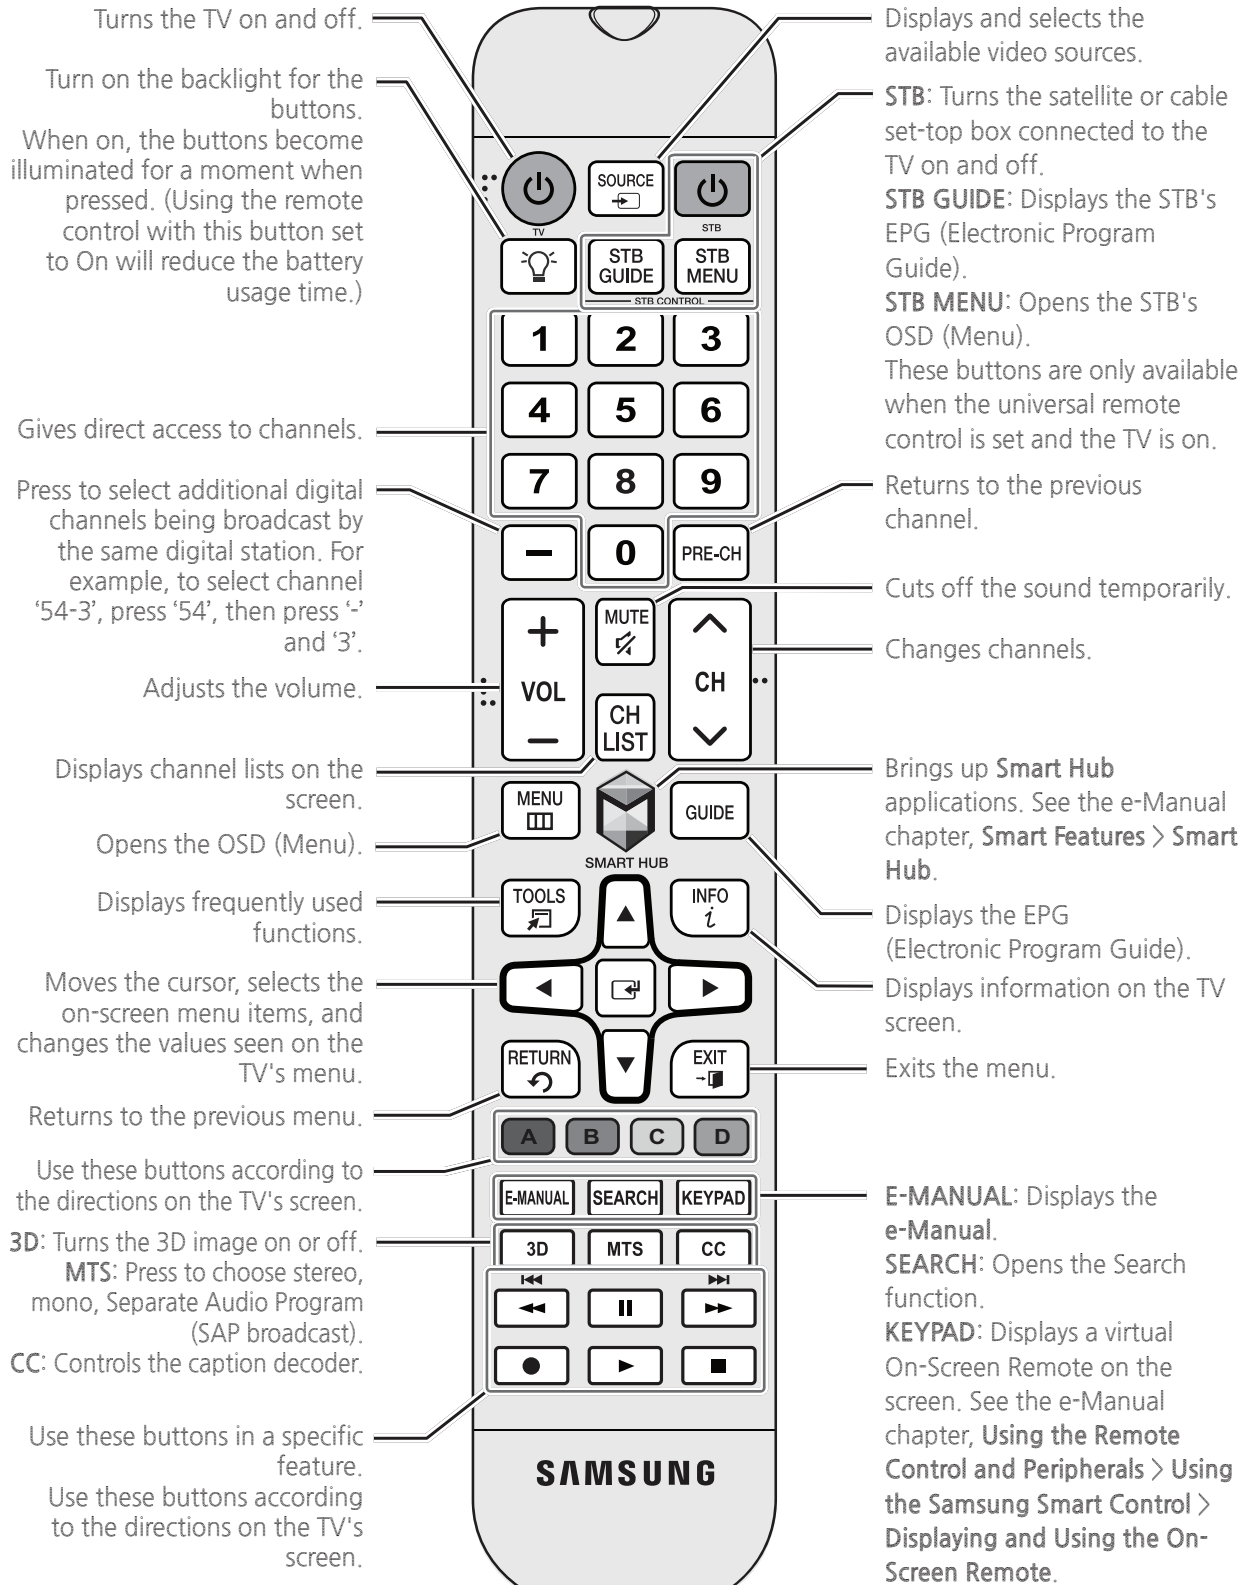

Installing Batteries into the Remote Control

Match the polarity of the batteries to the symbols in the battery compartment.

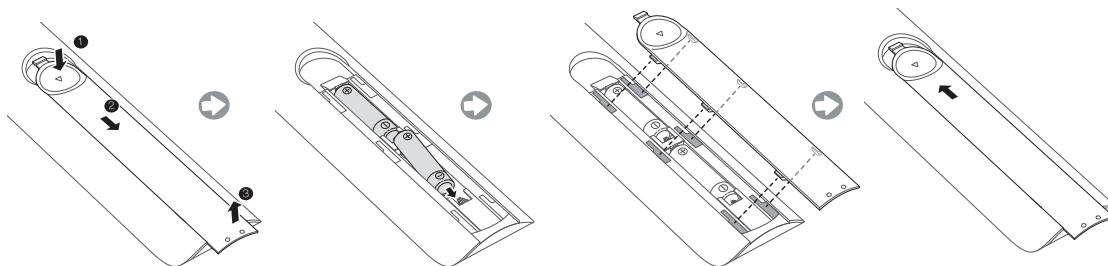


NOTE

- Use the remote control within 23 feet of the TV.
- Bright light may affect the performance of the remote control. Avoid using near bright fluorescent lights or neon signs.
- The color and shape may vary depending on the model.


05. Using the Samsung Smart Control

Buttons and Functions

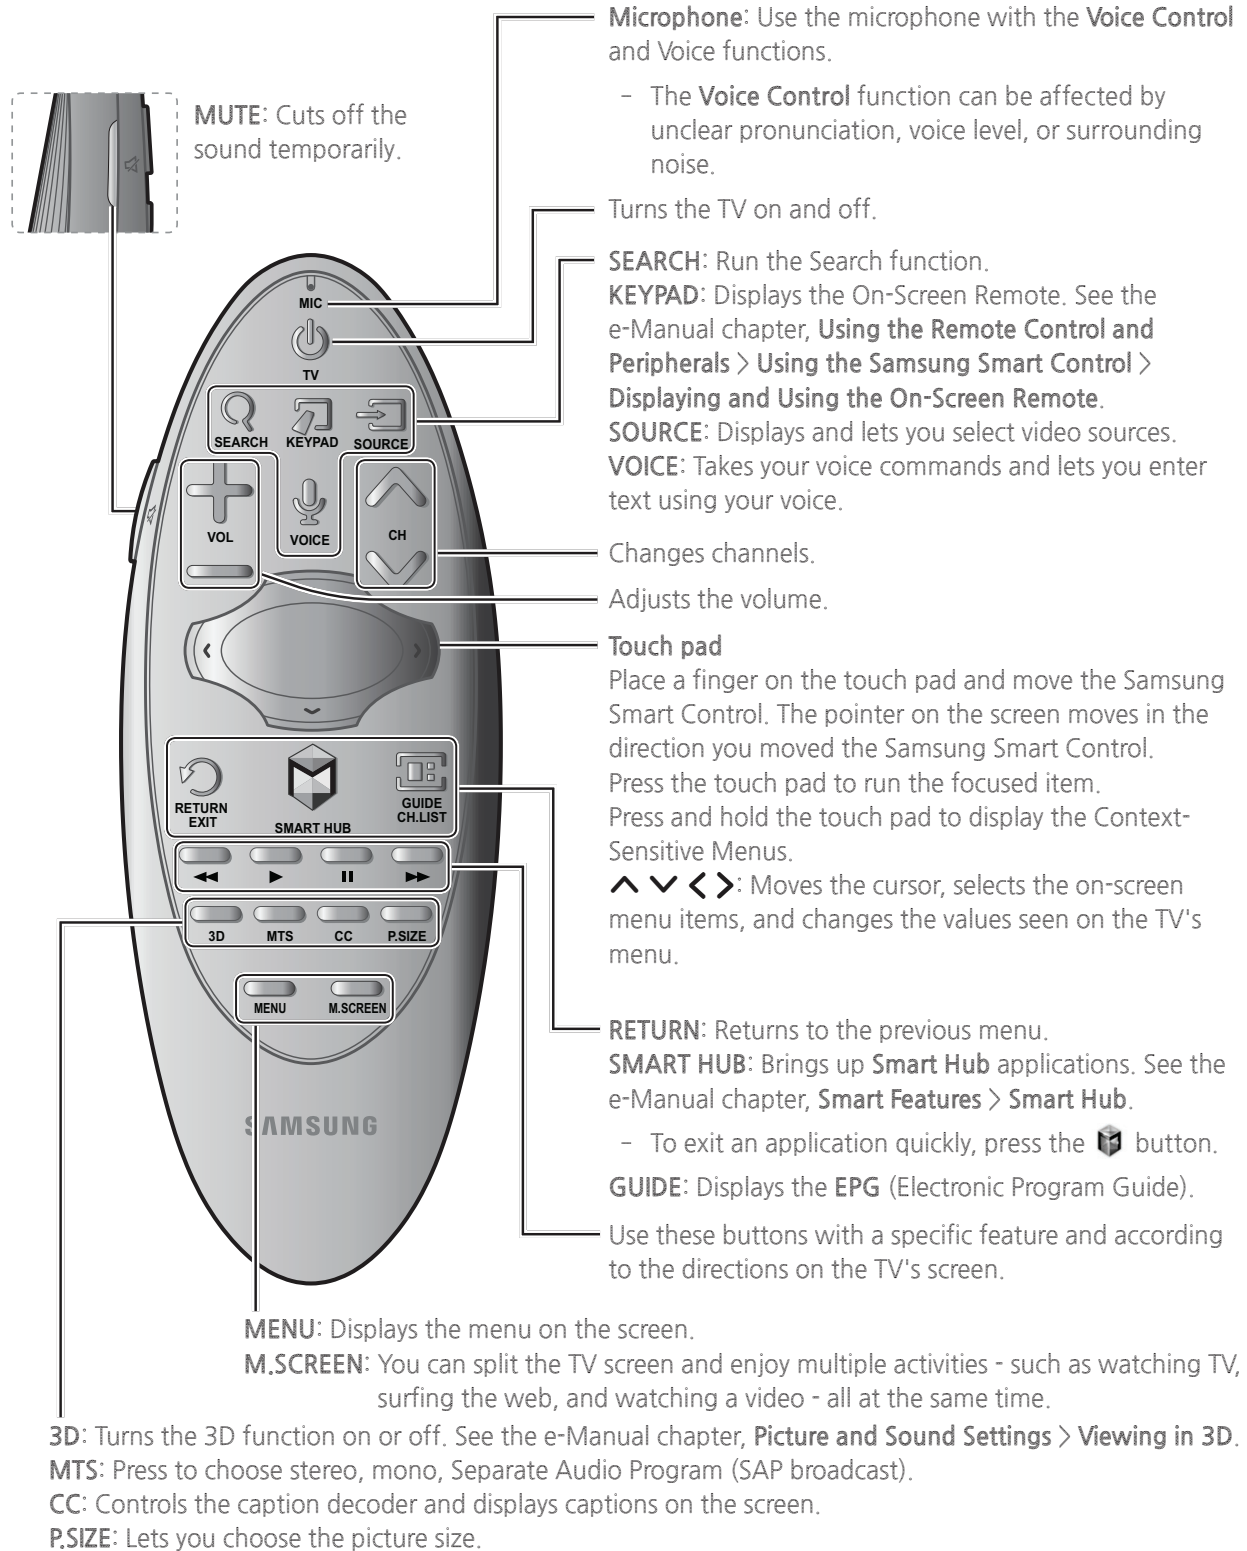

Installing Batteries into the Samsung Smart Control

To use the Samsung Smart Control, insert the batteries into the device referring to the figure below.

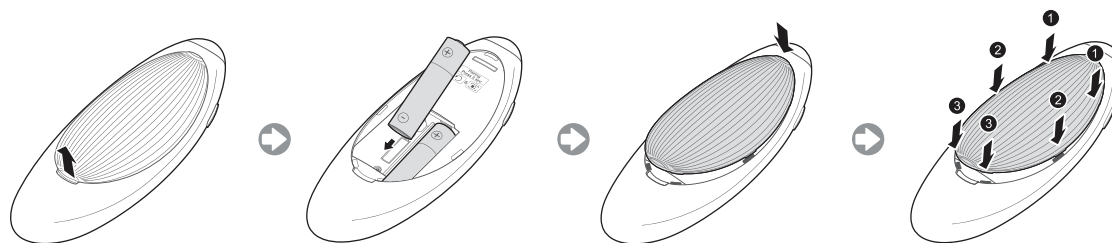

1. Gently pull on the battery cover's notch, and then remove the cover completely once it comes loose.
2. Insert 2 AA alkaline batteries, making sure to align the positive and negative polarities correctly.
3. Place the battery cover on the remote control and insert the top part of the cover into the remote control.
4. Press the catches on both sides of the battery cover in the order shown by the figure so that the cover is completely attached to the remote control.


Using the Samsung Smart Control Motion Function to Operate the TV

The Samsung Smart Control has a motion sensor (gyro sensor) that lets you control the TV easily by moving the Samsung Smart Control and using it much like a cordless mouse.

Place a finger on the Samsung Smart Control's touch pad, and then move the Samsung Smart Control. A pointer appears on the screen. Move the Samsung Smart Control, and the pointer moves on the screen in the direction you moved the Samsung Smart Control and the same distance. Highlight an item on the screen with the pointer, and then press the touch pad to select it.

You can also move the Samsung Smart Control in the same fashion to scroll scrollable screens up and down.


- If you stop using the Motion Function, even momentarily, put your finger on the touch pad again, and then move the Samsung Smart Control to re-start the function.
- If **Voice Guide** is set to **On**, Samsung Smart Control does not work. To use the motion sensitivity sensor, set **Voice Guide** to **Off**.

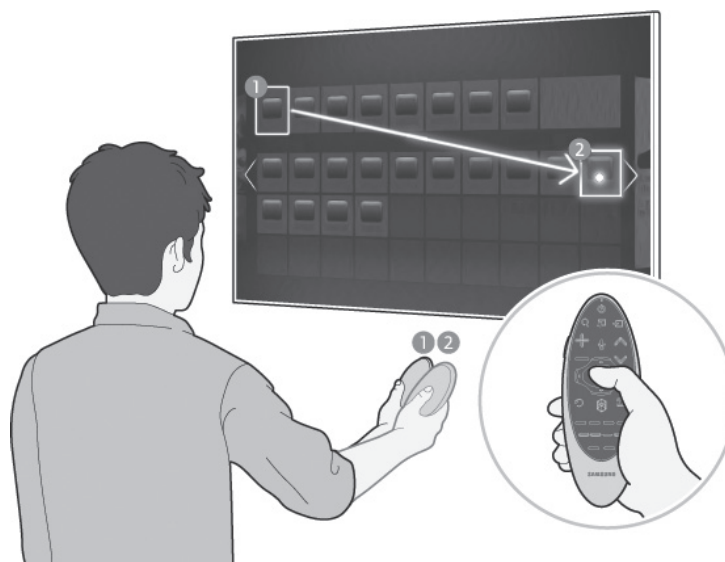

Using the Touch Pad and the Directional Buttons

- In the TV's menu, navigate to **Support > Smart Control Tutorial** to view a tutorial that shows how to use the touch pad.
- If the touch pad's sensitivity is too high or low, navigate to the **System > Smart Control Settings** menu, and then select the **Touch Sensitivity** option to change the touch pad sensitivity.

Moving the Focus or Pointer

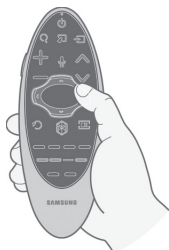

Press the directional buttons (up, down, left, and right) to move the focus, pointer, or cursor in the direction you want.

Entering the Menu / Selecting an Item



To enter a menu or select an item, highlight the item or the menu title, or move the pointer over it, and then press the touch pad.


Displaying Context-sensitive Menus in Smart Hub



In Smart Hub, highlight an item, and then press and hold the touch pad. The context-sensitive menu for the item pops up.

- The context-sensitive menu may vary depending on the item you selected.

Changing the Smart Hub Panel

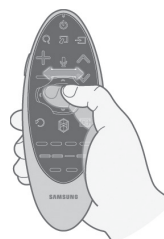

On a Smart Hub panel, drag left or right on the touch pad. The previous or next Smart Hub panel appears.

Scrolling on the Web Browser




When you are using the web browser, drag up or down on the touch pad to scroll the web screen.

Reconnecting the Samsung Smart Control to the TV

If the Samsung Smart Control stops operating or works abnormally, try replacing the batteries. If the problem persists, pair the Samsung Smart Control and TV again.

1. Move to within a foot of the TV, and then aim the Samsung Smart Control at the TV's remote control sensor.

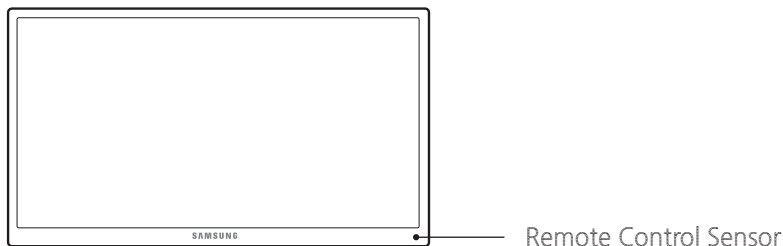


2. Press the **RETURN** button and **GUIDE** button simultaneously for 3 seconds.
3. The connecting icon appears on the screen. A few moments later, the connected icon appears. The Samsung Smart Control is paired to the TV.



The Low Battery Alarm Window

If the Samsung Smart Control's batteries become low, the Low Battery Alarm appears on the screen. When the Alarm appears, replace the batteries. We recommend using alkaline batteries for longer operating life.

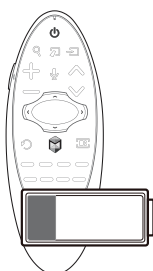




<Low battery Alarm Icon>


Displaying and Using the On-Screen Remote

Press the **KEYPAD** button on the Samsung Smart Control to display the On-Screen Remote on the TV's screen. Use the On-Screen Remote to enter numbers, control content playback, and use the features and functions of the TV, just like a real remote. Use the directional buttons on the Samsung Smart Control to move the cursor on the On-Screen Remote. Press the touch pad on the Samsung Smart Control to select.

- The On-Screen Remote buttons may vary depending on the TV features or functions you are using.

Button	Description
1 2 3 4 5 6 7 8 9 - 0 	Lets you switch channels by entering channel numbers directly. Select Pre-CH to return to the previous channel.
	Controls the playback of video, photo, or music files from all sources, and the playback of media content on external devices (for example, a Blu-ray player).
A, B, C, D	Use these colored buttons to access additional options specific to the feature in use.
TOOLS	Press to display the Tools menu while you are watching TV. The Tools menu gives you easy access to frequently used functions. The functions listed are context-sensitive and vary depending on how you are currently using the TV.
INFO	Shows information about the current digital broadcast program or content.
MENU	Displays the TV's menu on the screen.
Speaker Settings	Lets you select the speakers which will play the TV's audio. You must connect a home theater or amplifier with external speakers to the TV to use this function.
PIP	Lets you display video from an external device or computer on the main screen and a TV broadcast in a picture-in-picture window.
Multi-Link Screen	Lets you split the TV screen and use multiple functions - such as watching TV, surfing the web, and playing a video - at the same time.
CC	Select to turn subtitles on or off.
P.Size	Changes the picture size.
SLEEP	This function automatically shuts off the TV after a preset period of time.
P.Mode	Lets you select the Picture Mode.
Web Browser	Launches the Web Browser.
e-Manual	Opens the e-manual.
Sign In	Select to log in to or out of your Samsung account.
	<p>Move to the right / Move to the left: Moves the Onscreen Remote on the screen.</p> <p>Large size / Normal size: Resizes the Onscreen Remote on the screen.</p> <ul style="list-style-type: none"> - Alternatively, navigate to the System > Smart Control Settings menu and select and set the Onscreen Remote Size option. <p>Touch Sensitivity: Lets you change the touch pad sensitivity.</p> <ul style="list-style-type: none"> - Alternatively, navigate to the System > Smart Control Settings menu and select and set the Touch Sensitivity option. <p>Universal Remote Setup: Displays the Universal Remote Setup screen.</p> <p>Cancel: Select to close a pop up menu.</p>

Installing Smart View 2.0 a Near Field Communications (NFC) Device

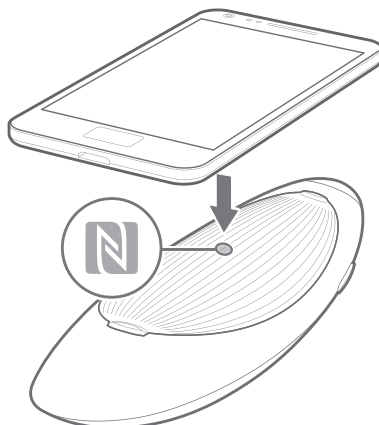

Smart View 2.0 is a cross-platform multi-screen app that enables you to load the TV screen on an NFC compatible device, share multimedia contents between two devices, and control the TV remotely.

To install Smart View 2.0, follow these easy steps:

1. Activate NFC on the mobile device.
 - For more information, refer to the device's manual.
2. Put the mobile device near the NFC logo on the battery cover of the Samsung Smart Control.
 - Make sure that the mobile device's display stays active during the process. If the display turns off, NFC communications will be disconnected.
3. Smart View 2.0 automatically installs and then launches on the mobile device.
 - If your mobile device did not install Smart View 2.0, visit Google Play and install the app.

Important Information

- NFC comes only with Android v4.12 Jellybean or later.
 - NFC is enabled only on Android 4.12 Jellybean or higher mobile devices. The NFC tag is also required. For more information, refer to the mobile device's manual.
 - To enable NFC on mobile devices using operating systems earlier than Android 4.12 Jellybean, download the Samsung NFC Connection app from Google Play and install it on the device. The NFC tag is also required.
- The connection may fail if the mobile device is not properly aligned with the NFC logo. If the "Empty tag" error appears on the mobile device, try again. Bring the mobile device close to the Samsung Smart Control and position it so that its NFC antenna faces the NFC logo on the Samsung Smart Control so that the NFC antenna faces the NFC logo.
- The NFC antenna's position depends on the device model. Locate the NFC antenna before proceeding.
- A thick cellular-phone case may interrupt the connection between the two devices.
- The Certification Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

Switching Between Video Sources

Press the **SOURCE** button to switch between external devices connected to the TV. For example, to switch to a game console connected to the second HDMI connector, press the **SOURCE** button. The Source List appears across the top of the screen. From the **Source** list, select **HDMI2**.

- The connector names may vary depending on the product.

Using the Remote Control to Control External Devices


MENU > System > Universal Remote Setup

The universal remote control feature lets you control cable boxes, Blu-ray players, home theaters, and other third-party external devices connected to the TV using the TV's remote control. For each external device you want to control, you must run the universal remote set up process. The first step in the process is connecting the IR extender cable (included) to the TV and positioning the transmitter end of the cable in front of the device you want to control.

- You can also use the Anynet+ (HDMI-CEC) function to operate external Samsung devices with your TV's remote control without any additional setup.

Connecting the IR Extender Cable

- The color and design of the IR extender cable may vary depending on the model.

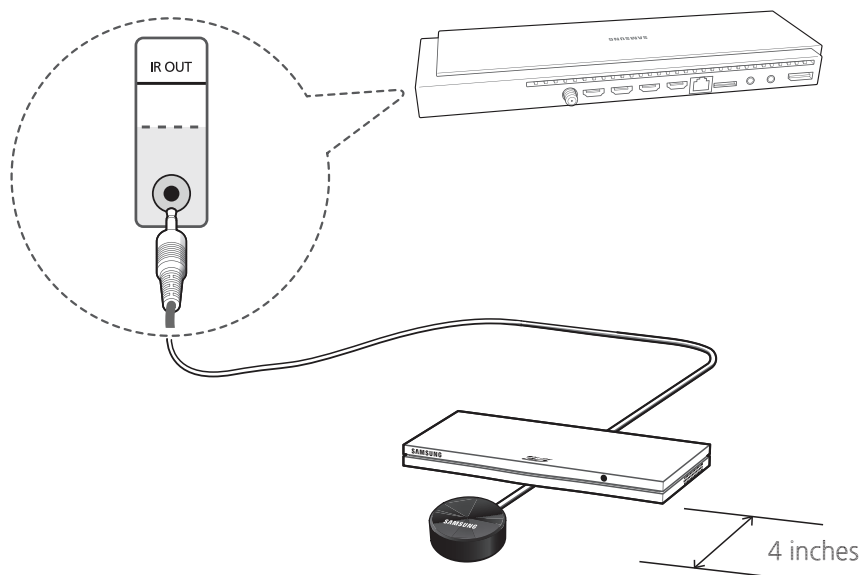

To begin the universal remote set up process, connect the IR extender cable (included) to the TV's IR output connector as shown in the diagram, and then position the transmitter end within 4 inches (10 cm) of the external device's remote control sensor, pointing in the direction of the sensor.

There can be no obstacles between the transmitter end of the IR extender cable and the external device. Any obstacles will interfere with the transmission of the remote control signals.

Setting Up the Universal Remote Control

- If you want to control a set-top-box, you need to have your zip code and your cable provider's name and location on hand before you begin. If you want to control a Blu-ray player or home theater, you need the manufacturer's name and model number.
1. Turn on the external device you want to control with the universal remote function.
 2. Press the **SOURCE** button on your remote to bring up the **Source** screen.
 3. Select the **Universal Remote Setup** icon.
 - You can also start Universal Remote Setup through the TV's menu. Navigate to **System > Universal Remote Setup**.
 4. The TV checks if the IR extender cable is connected. If it confirms the connection, press the touch pad.
 5. Select the type of device you want to control - set-top-box, Blu-ray player, or home theater.
 6. Follow the directions on the screen to complete the set up and register the device. The directions will be different, depending on the device you want to control.
 7. Once set up is complete and you have confirmed that you can use the TV remote to control the device, disconnect the IR extender cable from the TV and set it aside. You can now control the device directly with your remote.

Controlling an External Device with the TV Remote

During the universal remote set up process, the TV registers the connector (source) the external device is connected to. To control a registered external device with your TV's remote, select the external device on the Source List.

1. Press the **SOURCE** button on your remote.
2. Select the source the device is connected to (HDMI1, HDMI2, etc.)
3. Control the device with the remote. For example, if the device is a set-top-box, press the channel buttons on the remote to change the channel.

For information on additional functions, see "Controlling External Devices with the TV Remote - Using the Universal Remote" in the e-Manual.

06. Smart Hub

Smart Hub is the control center of the TV. Through Smart Hub you can view TV program schedules and select shows to watch, download and install apps and games, select and stream movies and TV shows, and playback photo, video, and music files located on Blu-ray players, USB devices, smart phones and tablets, your computer, and the Internet.

Smart Hub has five main panels: **GAMES**, **SAMSUNG APPS**, **On TV**, **MOVIES & TV SHOWS**, and **MULTIMEDIA**.

To move from panel to panel, select one of the icons at the top of the screen. You can also swipe left or right across the touch pad to display the previous or next panel. Each panel gives you access to additional screens. To open the additional screens, select items on the panel or select an icon or hotspot on the screen.

- The TV must be connected to the Internet to access Smart Hub.

GAMES Panel

The **GAMES** panel displays games you can download to and play on your TV. You can also update or delete downloaded games. The **GAMES** panel has two sub-panels: **All Games** and **My Page**. **All Games** displays all the games available through Smart Hub. **My Page** displays the games you have downloaded. Most games listed on the **GAMES** panel are free, while some require a fee. To download a for-pay game, you must have a Samsung Account with a registered credit card.

Basic GAMES Panel Functions

In the **My Page** or **All Games** panel, move the focus to a game, and then press and hold the touch pad. An Options drop down list appears with the following functions.

- **Download/Remove:** Downloads games to the TV or removes games from the TV.
- **View detail:** Displays detailed information about the selected game.

Quickly Downloading and Installing a Game

Select a game, and then press and hold the touch pad. When the Options drop down list appears, select **Download** from the list. If the game is free, the game you selected is installed on the TV. If the game is not free, follow the directions on the screen to pay for and download the game.

SAMSUNG APPS Panel

The **SAMSUNG APPS** panel displays a variety of free and for pay news, sports, weather, and gaming apps.

The Samsung Apps panel has a number of sub-panels including **Most Popular**, **What's new**, and **Categories**. Default apps install automatically when Smart Hub is first launched. The default apps may differ depending on your region. Most apps listed on the **SAMSUNG APPS** panel are free, but some apps require a fee. To download these, you must have a Samsung Account with a registered credit card.

SAMSUNG APPS Panel Functions

Move the focus to an app, and then press and hold the touch pad. An Options drop down list appears with the following functions.

- **Move:** Relocates an app on the screen.
- **Delete:** Removes a selected app from your TV.
- **Multi Delete:** Removes multiple apps from the TV.
- **View Details:** Displays detailed information about a selected app.
- **Change View:** Changes how the apps are sorted on the screen, by Custom view or Most Played.
- **Lock/Unlock:** Locks or unlocks apps. Locked apps cannot be accessed.
- **Update Apps:** Displays a list of apps that have updates available. You can select which apps to update.

The **SAMSUNG APPS** Panel functions are context-sensitive. The functions that appear may differ depending on the app you select.

Downloading and Installing an App

1. On the **SAMSUNG APPS** panel, select **Most Popular**, **What's new**, or **Categories**.
2. Move the focus to an app, and then press and hold the touch pad. When the Options drop down list appears, select **Download** from the list. If the app is free, the app you selected is installed on the TV. If the app is not free, follow the directions on the screen to pay for and download the app.

On TV Panel

On TV displays your current program live in a small window, a list of recommended programs currently on other channels, and a list of recommended programs that will air later. Use these lists to change the channel, view more information about recommended programs running later, including how much time is left until they air. You can also set up a **Schedule Viewing** of a program that hasn't aired yet.

To view a program recommended by **On TV**, select the image.

The **On TV** panel has the following main subpanels:

- **Guide:** Displays the program schedule of each digital channel. You can check the program schedule and set up a **Schedule Viewing**.
- **Timeline View:** Displays program recommendations for different times of the day.
- **Trending:** Displays what is the most trendy or popular content on Twitter, You can set up a **Schedule Viewing** to view.

On TV Panel Functions

Move the focus to a program, and then press and hold the touch pad. An **Options** drop down list appears with the following functions.

- **View details:** Displays detailed information about the selected program.
- **Reserving:** Sets up a **Schedule** for the selected program.

MOVIES & TV SHOWS Panel

Buy or rent movies and TV shows online and stream them to your TV using apps downloaded via Smart Hub. This is called Video on Demand (VOD). The **MOVIES & TV SHOWS** screen displays recommended movies and TV shows and displays multiple VOD content sources so you can browse and watch all more easily.

The **MOVIES & TV SHOWS** panel has the following main subpanels:

- **Favorites:** View the movies and TV programs registered as Favorites.
- **Featured:** View movies or TV programs grouped according to various themes, such as movies with a specific actor or an actor who acted in a TV series, etc.
- **Movies:** View movies by release date, popularity, or genre.
- **TV Shows:** Search TV shows by air date, popularity, or genre.
- **Trailers:** View movie trailers for upcoming movies.
- **Trending:** View movies and TV programs that are the most trendy or popular on Twitter.

Basic MOVIES & TV SHOWS Panel Functions

Move the focus to a movie or TV program, and then press and hold the touch pad. An Options drop down list appears with the following functions.

- **Play Content Now:** Displays the names of one or more content providers. Select a content provider to play the selected movie or TV program immediately. If the app for the content provider you selected is not installed on the TV, a pop-up window appears. In the pop-up window, select either to display the app's information page or to install the app immediately. Note that you can also install the app from the app's information page.
- **Add to/Remove from Favorites:** Add the selected content to or delete it from Favorites.

MULTIMEDIA

The **MULTIMEDIA** Panel lets you play media content saved on USB devices, smartphones, cameras, computers, or in storage services. The **MULTIMEDIA** Panel has three main subpanels: **USB Drive**, **Network Device**, and **Storage Service**. USB Drive displays USB devices connected to the TV. Network Device displays devices connected to your TV through your home network (a computer, a smart phone, etc.). Storage Service displays services such as Dropbox and SkyDrive linked via your Samsung account to the TV.


Allowing Connections with a Computer or Mobile Device

To play multimedia content located on a computer or mobile device on the TV, you need to:


1. Establish the connection to the computer or device.
2. Allow the connection with the computer/mobile device on the TV.

For information about establishing connections, see the “**Connecting to a Computer**” and “**Connecting to a Mobile Device**” sections of the e-Manual.

To allow a connection with a computer or mobile device, follow these steps:

1. Press the  button on the Samsung Smart Control, and then select **Network Device** in the **MULTIMEDIA** panel. The devices connected to the TV are listed.
2. Select **Options > Multimedia Device Settings**. The devices connected to the TV are listed.
 - Alternatively, select **Multimedia Device Settings** from the **Network** menu to see the list of the devices connected to the TV.
3. Allow the connection with the device you want to connect to the TV.

Playing Content

1. If you want to play content located in a Storage Service, navigate to the **Smart Hub > Samsung Account** menu, and then select **Log In** to sign in to your Samsung account. If you want to play content located on a device connected to the TV using Samsung Link, go to Step 2 below.
2. Press the  button, and then select **Network Device** or **Storage Service** in the **MULTIMEDIA** panel. The devices or storage services connected to the TV appear.
3. Select a device or storage service. The folders and files shared by the selected device or storage service appear.
4. Select the media content you want to play from the list.

07. Using the e-Manual

Launching the e-Manual

MENU > Support > e-Manual

The embedded e-manual contains information about your TV's key features.

- Alternatively, you can download a copy of the e-manual from Samsung's website, and read it on your computer or print it out.
- Words in yellow (e.g., **Picture Mode**) indicate a menu item and bold words in white (e.g., **Smart Hub**) indicate remote control buttons.
- Arrows are used to indicate the menu path. (Example: **MENU > Picture > Picture Mode**)

1. On the Samsung Smart Control, press the **KEYPAD** button, and then select **e-Manual** on the On-Screen Remote. You can also select **Support > e-Manual** in the TV's menu.
2. Select a category from the left side of the screen. Once a selection has been made, the contents of the selected category appear on the right side of the screen.
3. Select an item from the list. This opens the e-manual on the corresponding page.

If a description doesn't fit on a single screen...

- Position the focus on the page to display  /  on the screen. Press the  or  buttons to scroll the page up and down.

Additional e-Manual Features

Loading Pages using Keywords

Select **Search** to bring up the search screen. Enter a search term, and then select **Done**. Select an item from the search results to load the corresponding page.


Loading Pages from the Index Page

Select **Index** to bring up the index screen. Select a keyword from the list to navigate to the relevant page.

Using History to Load Previously Read Pages

Select **Opened page**. A list of previously read pages is shown. Select a page. The e-Manual jumps to the selected page.

Accessing the Menu from the e-Manual

Select  (Try Now) from the right side of a feature-description page to access the corresponding menu item and try out the feature right away. If you want to read the e-Manual entry on a specific screen menu feature:


- On the Samsung Smart Control, press the **KEYPAD** button, and then select e-Manual on the On-Screen Remote to load the corresponding e-Manual page.
- The e-Manual cannot be accessed from some menu screens.

Loading Reference Pages

Select  (Link) from the right side of a feature-description page to access the corresponding reference page.

Updating the e-Manual to the Latest Version

You can update the e-Manual in the same way you update apps.

1. Press the  button, and then highlight the **e-Manual** item in the **SAMSUNG APPS** screen.
2. On the Samsung Smart Control, press and hold the touch pad. A pop-up menu appears.
3. Select **Update Apps** from the pop-up menu. A pop-up window appears.
 - **Update Apps** appears on the screen only when an update is available.
4. Select e-Manual in the popup window, and then select **Update**.

Configuring Auto Update

MENU > Smart Hub > Apps Settings

To update the e-manual automatically, navigate to the **Smart Hub > Apps Settings** menu and set the **Auto Update** option to **On**. The e-manual is updated automatically when an update becomes available.

08. Troubleshooting and Maintenance

Troubleshooting

If the TV seems to have a problem, first review this list of possible problems and solutions. Also, review the Troubleshooting Section in the e-Manual. If none of the troubleshooting tips apply, visit www.samsung.com/support or call Samsung Customer Service at 1-800-SAMSUNG (1-800-726-7864).

Issues	Solutions and Explanations
Flickering and Dimming	Try disabling some of the TV's energy efficiency features. Disable Energy Saving (System > Eco Solution > Eco Sensor) and/or Energy Saving (System > Eco Solution > Energy Saving) and check again.
Screen Color is Not Correct	Run a Self Diagnosis Picture Test (Support > Self Diagnosis > Picture Test). If the picture problem is caused by the TV, the problem should be visible in the Picture Test. If the problem is not visible, next confirm that the TV's video input ports are connected to the correct external video device output ports and that none of the connections are loose. Finally, if possible, test your external video devices by connecting them to another TV.
Screen Brightness	Adjust the following settings: Navigate to Picture and adjust Backlight, Contrast, Brightness, Sharpness, Color, Tint (G/R) and other picture quality adjustment settings.
Blurred Images	Turn on Auto Motion Plus (Picture > Picture Options > Auto Motion Plus) .
Unwanted Powering Off	Check if Sleep Timer (System > Time > Sleep Timer) has been enabled. Sleep Timer automatically turns off the TV after an amount of time that you select. If the Sleep Timer has not been enabled, see if No Signal Power Off (System > Eco Solution > No Signal Power Off) or Auto Power Off (System > Eco Solution > Auto Power Off) has been enabled. No Signal Power Off turns off the TV if no signal has been received by the TV for a specified period time. Auto Power Off turns off the TV if there has been no user input in four hours.
Trouble Powering On	Confirm that the power cord is connected and that the remote has live batteries and is functioning correctly. If the power cord is connected properly and the remote control is operating normally, there might be a problem with the antenna cable connection or the cable/satellite box might not be turned on. Check the antenna connection or turn on the cable/satellite box.
Stand Assembly	If you have any trouble assembling the stand, review the stand assembly instruction in the Quick Start Guide.
Cannot Find a Channel	Re-run Setup (Go to MENU > System > Setup) or run Auto Program (Go to MENU > Broadcasting > Auto Program) .

- For detailed troubleshooting information, watch the troubleshooting videos at www.samsung.com/spn.

Issues	Solutions and Explanations
The TV won't turn on.	<p>Make sure the AC power cord is securely plugged in to the wall outlet and the TV.</p> <p>Make sure the wall outlet is working.</p> <p>Try pressing the ⏻ button on the TV to make sure the problem is not the remote. If the TV turns on, refer to "Remote control does not work" below.</p>
There is no picture/video.	<p>Check the cable connections. Remove and reconnect all cables connected to the TV and external devices.</p> <p>Set the video outputs of your external devices (Cable/Sat Box, DVD, Blu-ray etc) to match the TV's input connections. For example, if an external device's output is HDMI, it should be connected to an HDMI input on the TV.</p> <p>Make sure your connected devices are powered on.</p> <p>Be sure to select the correct input source.</p> <p>Reboot the connected device by unplugging it, and then reconnecting the device's power cable.</p>
The remote control does not work.	<p>Replace the remote control batteries. Make sure the batteries are installed with their poles (+/-) in the correct direction.</p> <p>Clean the sensor's transmission window on the remote.</p> <p>Try pointing the remote directly at the TV from 5~6 feet away.</p>
The cable/set top box remote control doesn't turn the TV on or off or adjust the volume.	<p>Program the Cable/Set remote control to operate the TV. Refer to the Cable/Set-Top-Box user manual for the SAMSUNG TV code.</p>

- This TFT LED panel is made up of sub pixels which require sophisticated technology to produce. There may be, however, a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.
- To keep your TV in optimum condition, upgrade to the latest software. Use the Update Now or Auto Update functions on the TV's menu (Screen **MENU** > **Support** > **Software Update** > **Update now** or Screen **MENU** > **Support** > **Software Update** > **Auto Update**).

Network Troubleshooting


How to Improve Your Wireless Signal

Position your wireless router, modem router, or access point in a central location.


The best place for a Wi-Fi router is in the center of your home.

If that is not possible, move it as close to the center of your home as possible. Avoid putting it in a corner.

Single Story

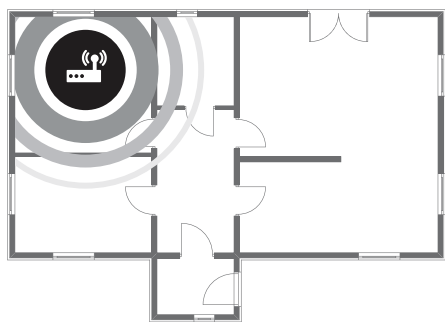


Bad Router Position

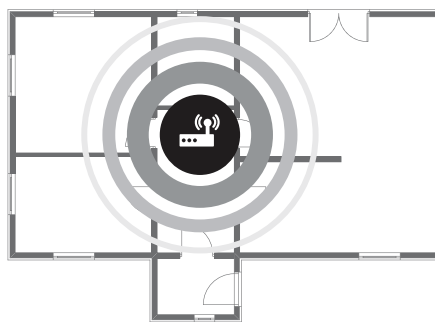


Good Router Position

Multi Story

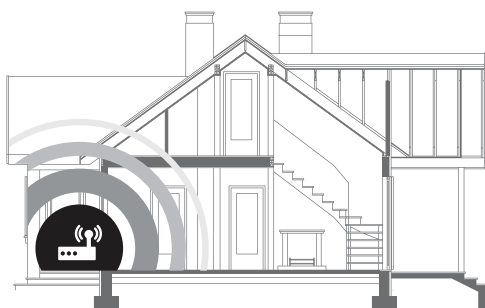


Bad Router Position

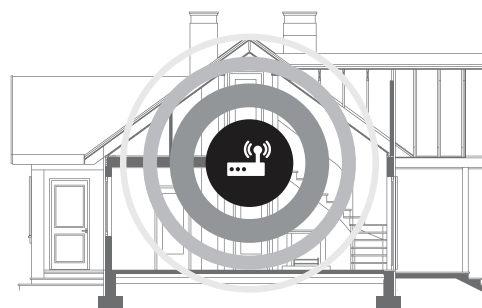

Good Router Position

Adding a wireless repeater

A wireless repeater is a device which extends your wireless network's range without requiring you to add any wiring. All you need to do is place the repeater halfway between your wireless router and your TV, and you will get an instant boost in your wireless signal strength.

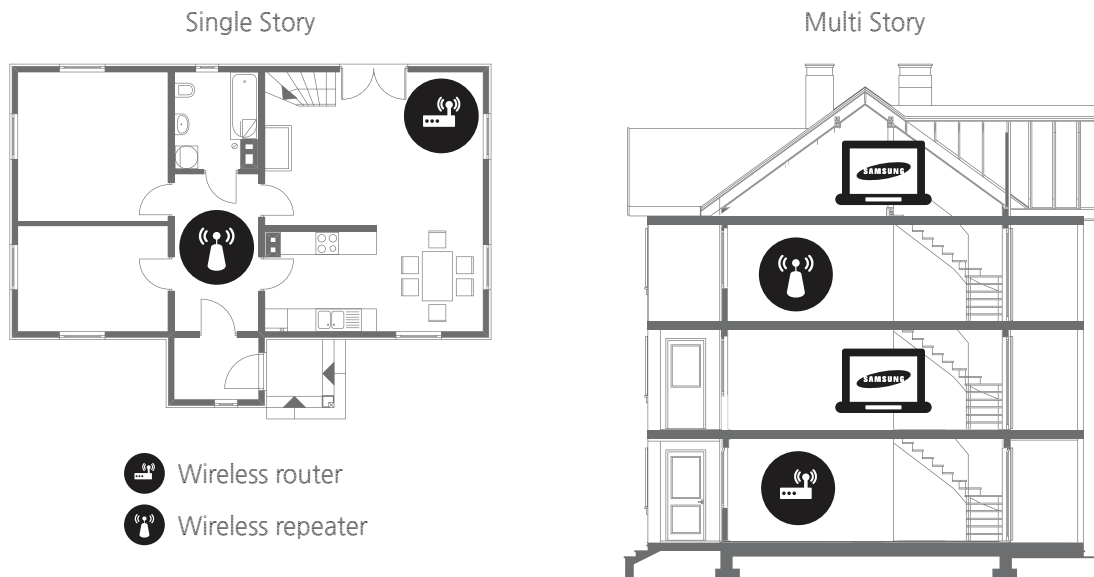

Do not locate the router on the floor and keep it away from walls and metal objects

Avoid placing the router near objects such as metal filing cabinets. Metal objects, walls, and floors will interfere with your router's wireless signal. The closer your router is to these obstructions, the more severe the interference, and the weaker the signal.


Reduce wireless interference

The most common wireless technology, 802.11g (wireless-G), operates at a frequency of 2.4GHz. Many cordless phones, microwave ovens, baby monitors, garage doors, and other wireless devices also use this frequency. Reduce interference by avoiding wireless devices that use the 2.4GHz frequency and use devices that communicate via the 5.0 GHz frequency instead.

Replace your router's antenna

If you must place your router in the corner, consider replacing your standard antenna with a Hi-Gain wireless antenna.

High gain antennas can be attached to most wireless routers. They boost the signal strength and aim the signal in one direction.

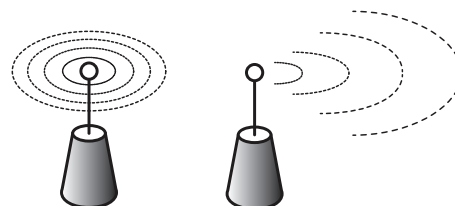

Intermittent Wi-Fi

- Check the distance between the Modem/Router and the TV. The distance should not exceed 50ft (15.2 m).
- Verify that there are no obstacles between your TV and the Modem/Router. (Appliances, cordless phones, stone walls/fireplaces, etc. decrease Wi-Fi strength.)
- Check the cable that connects the Modem to the Router (if you use a separate Modem and Router) to see if it is in good condition. If it is not, replace the cable.
- Connect the TV to your Modem/Router using a CAT 7 cable, and then try to set up a wired network connection. (**MENU > Network > Network Settings**).
- Check **Network Status (MENU > Network > Network Status)** to see if the IP address is invalid, for example, 169.x.x.x. If it is, call your ISP to get a valid IP address, and then ask them to check the connection between your Modem and Router and the connection between the Modem / Router and the Internet.
- If you see a valid Mac address, call your ISP and ask them to reset your network circuit to re-register the Mac addresses of your new Modem/Router and the TV.


Netflix problems

- Verify that your Modem/Router is no more than 50 ft (15.2 m) away from the TV.
- Change the DNS to 8.8.8.8. Select **MENU > Network > Network Status > DNS Server > Select Manually > DNS > enter 8.8.8.8 > OK**
- Verify that the ESN for Netflix is valid. (Go to **MENU > Support > Contact Samsung**)
Reset Netflix by selecting **MENU > Smart Hub > Smart Hub Reset**.


Smart Hub Error Messages

- Verify that the distance between the TV and the Modem/Router does not exceed 50 ft (15.2 m).
- Verify that the TV is connected to the network by checking the **Network Status (MENU > Network > Network Status)**.
- Reset Smart Hub by selecting the **MENU > Smart Hub > Smart Hub Reset**.
- Update the TV's software (**MENU > Support > Software Update**).
- Wait 2 to 3 days for the issue to resolve itself.

Eco Sensor and Screen Brightness

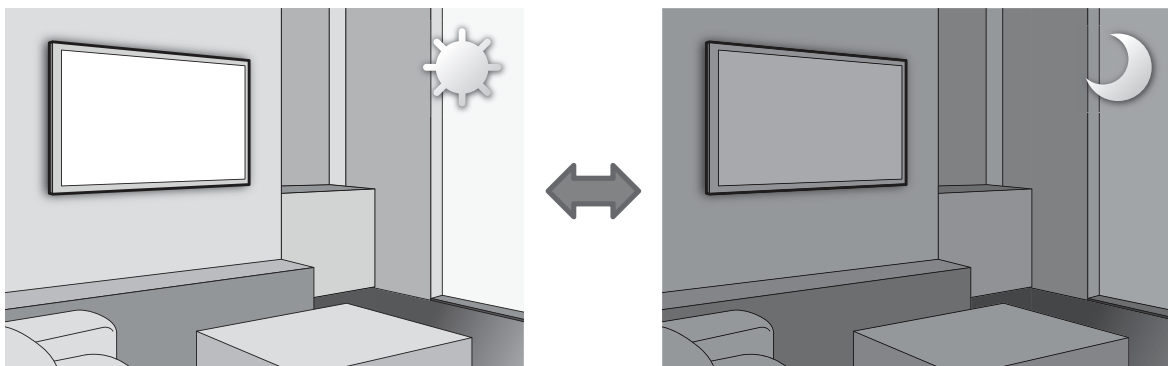

Eco Sensor measures the light in your room and optimizes the brightness of the TV automatically to reduce power consumption. This causes the TV to brighten and dim automatically. If you want to turn this off, go to **MENU > System > Eco Solution > Eco Sensor**.

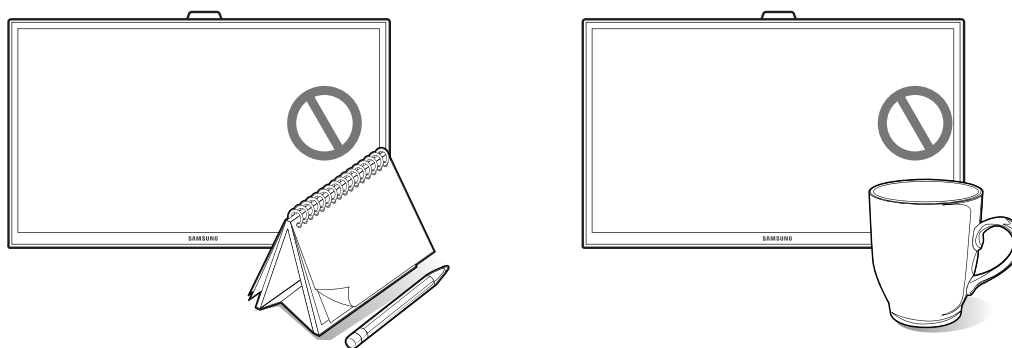

Do not block the sensor with any object. It can decrease picture brightness.

Preventing burn-in.

Avoid keeping a still picture or a picture with static elements (black bars, black borders, logos, etc.) on your TV for more than two hours at a time. If that is unavoidable, change the picture or change to another channel for a minute or two every couple of hours. Reducing the brightness and contrast of the screen when it is displaying static elements will also help.

Getting Remote Support

Samsung Remote Support service offers you one-on-one support with a Samsung Technician who can remotely:

- **Diagnose** your TV
- **Adjust the TV settings** for you
- **Perform a factory reset** on your TV
- Install recommended **firmware updates**

How Does Remote Support Work?

Having a Samsung Tech remotely service your TV is easy.



1. **Call the Samsung Contact Center** and ask for remote support.



2. **Open the menu** on your TV and go to the **Support** section.




3. Select **Remote Management**, and then read and agree to the service agreements. When the PIN screen appears, provide the PIN number to the agent.




4. The agent will then **access your TV**. That's it!

Caring for the TV

- If a sticker was attached to the TV screen, some debris can remain after you remove the sticker. Please clean the debris off before watching TV.
- The exterior and screen of the product can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to prevent scratches.

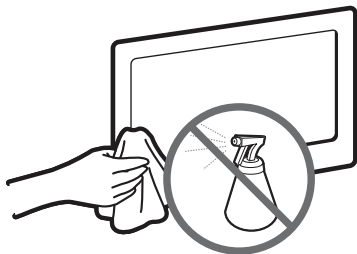

Do not spray water or any liquid directly onto the TV. Any liquid that goes into the product may cause a failure, fire, or electric shock.

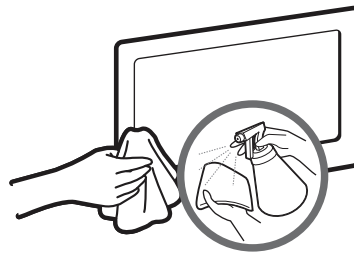

Turn off the TV, and then gently wipe away smudges and fingerprints on the screen with a micro-fiber cloth. Clean the body of the TV with a soft cloth dampened with a small amount of water. Do not use flammable liquids (benzene, thinners, etc.) or a cleaning agent. For stubborn smudges, spray a small amount of screen cleaner on the cloth.

09. Specifications, wall mounting, and other information

Specifications

Display Resolution	3840 x 2160	
Environmental Considerations		
Operating Temperature	50°F to 104°F (10°C to 40°C)	
Operating Humidity	10% to 80%, non-condensing	
Storage Temperature	-4°F to 113°F (-20°C to 45°C)	
Storage Humidity	5% to 95%, non-condensing	
Stand Swivel (Left / Right)	0°	
Model Name	UN55HU9000	UN65HU9000
Screen Size (Diagonal)	55" Class (54.6 measured diagonally)	65" Class (64.5 measured diagonally)
Sound (Output)	60W (Front TW(10W+10W) + Front Mid (10W+10W) + Woofer (10W+10W))	
Dimensions (W x H x D)		
Body	48.5 x 28.4 x 3.6 inches (1232.6 x 723.0 x 92.9 mm)	57.1 x 33.3 x 4.3 inches (1450.7 x 848.2 x 110.5 mm)
With stand	48.5 x 30.2 x 12.1 inches (1232.6 x 767.6 x 307.9 mm)	57.1 x 35.1 x 12.8 inches (1450.7 x 891.6 x 326.8 mm)
Weight		
Without Stand	44.5 lbs (20.2 Kg)	59.0 lbs (26.8 Kg)
With Stand	52.4 lbs (23.8 Kg)	68.3 lbs (31.0 Kg)

- Design and specifications are subject to change without prior notice.
- The actual appearance of the TV may differ from the images in this manual, depending on the model.
- This device is a Class B digital apparatus.
- For information about the power supply, and more information about power consumption, refer to the label attached to the product.
- Typical power consumption is measured according to Energy Star Program requirements for Televisions.

Dispose unwanted electronics through an approved recycler.



To find the nearest recycling location, go to our website:

www.samsung.com/recyclingdirect or call, (877) 278 - 0799

Decreasing Power Consumption

When you shut the TV off, it enters Standby mode. In Standby mode, it continues to draw a small amount of power. To decrease power consumption, unplug the power cord when you don't intend to use the TV for a long time.

Hear the abundant sound

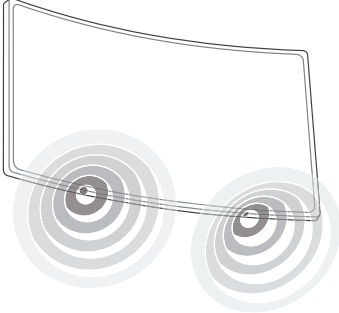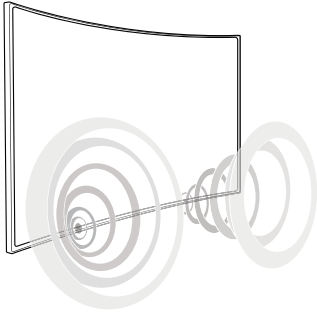WOOFER	MAIN SPEAKER
	
<p>Woofers are located at the bottom of the TV. Low frequency range sound radiates from the bottom of the TV. You can enjoy rich and powerful bass, suitable for any type of program source.</p>	<p>Midrange ~ treble range sound radiates from the front of the TV. You can enjoy clear, precise, and rich sound with any type of content.</p>

Licenses



HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Still image warning

Avoid displaying still images (such as jpeg picture files), still image elements (such as TV channel logos, stock or news crawls at the screen bottom etc.), or programs in panorama or 4:3 image format on the screen. Constantly displaying still pictures can cause image burn-in on the LED screen, which will affect image quality. To reduce risk of this effect, please follow the recommendations below:

- Avoid displaying the same TV channel for long periods.
- Always try to display any image in full screen. Use the TV set's picture format menu for the best possible match.
- Reduce brightness and contrast to avoid the appearance of after-images.
- Use all TV features designed to reduce image retention and screen burn. Refer to the e-Manual for details.

Mounting the TV on a Wall Using the Wall Mount Kit (Optional)



If you mount this product on a wall, it should be mounted only as recommended by the manufacturer. Unless it is correctly mounted, the product may slide or fall, causing serious injury to a child or adult, and serious damage to the product.

Installing the Wall Mount Kit

The wall mount kit (sold separately) lets you mount the TV on the wall.

To assemble the wall mount, use the styrofoam that came with the TV's packaging to protect it. Lay the TV down and attach the screws.


For detailed information about installing the wall mount, see the instructions provided with the wall mount kit. We recommend you contact a technician for assistance when installing the wall mount bracket. We do not advise you to do it yourself. Samsung Electronics is not responsible for any damage to the product or injury to yourself or others if you select to install the wall mount on your own.

To order the wall mount kit, contact Samsung Customer Care at 1-800-SAMSUNG (1-800-726-7864).

Installing a Wall Mount Using the Wall Mount Adapter

Before installing any wall mount kit, install the wall mount adapters provided with the TV.

- Refer to the Installation Manual included with the Samsung wall mount kit.

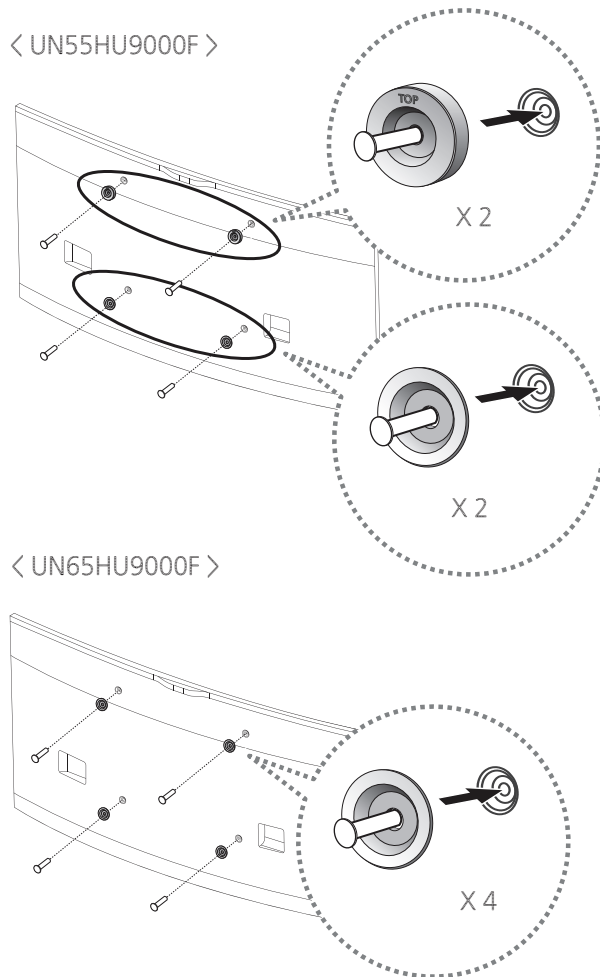

VESA Wall Mount Kit Notes and Specifications

Install your wall mount on a solid wall perpendicular to the floor. Before attaching the wall mount to surfaces other than plaster board, please contact your nearest dealer for additional information. If you install the TV on a ceiling or slanted wall, it may fall and result in severe personal injury.

Product Family	TV size in inches	VESA screw hole specs (A * B) in millimeters	Standard Screw	Quantity	
LED-TV [Curved]	55 - 65	400 X 400	M8	4	
	78	600 X 400			



Do not install your Wall Mount Kit while your TV is turned on. It may result in personal injury from electric shock.

- Standard dimensions for wall mount kits are shown in the table.
- Samsung wall mount kits contain a detailed installation manual, and all parts necessary for assembly are provided.
- Do not use screws that do not comply with VESA standard screw specifications.
- Do not use screws that are longer than the standard length or do not comply with VESA standard screw specifications. Screws that are too long may cause damage to the inside of the TV set.
- For wall mounts that do not comply with the VESA standard screw specifications, the length of the screws may differ depending on the wall mount specifications.
- Do not fasten the screws too firmly. This may damage the product or cause the product to fall, leading to personal injury. Samsung is not liable for these kinds of accidents.
- Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or the consumer fails to follow the product installation instructions.
- Do not mount the TV at more than a 15 degree tilt.
- Always have two people mount the TV on to a wall.

Providing Proper Ventilation for Your TV


When you install your TV, maintain a distance of at least 4 inches between the TV and other objects (walls, cabinet sides, etc.) to ensure proper ventilation. Failing to maintain proper ventilation may result in a fire or a problem with the product caused by an increase in its internal temperature.

If you use parts provided by another manufacturer, it may cause difficulties with the product or result in injury caused by the product falling.

- Whether you install your TV using a stand or a wall-mount, we strongly recommend you use parts provided by Samsung Electronics only.



Securing the TV to the Wall

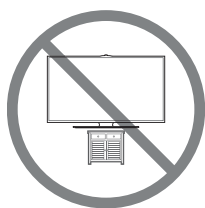

Caution: Pulling, pushing, or climbing on the TV may cause the TV to fall. In particular, ensure your children do not hang on or destabilize the TV. Doing so may cause the TV to tip over, causing serious injuries or death. Follow all safety precautions provided in the Safety Flyer included with your TV. For added stability and safety, you can purchase and install the anti-fall device as described below.

To Prevent the TV from Falling



These are general instructions. The clamps, screws, and string are not supplied by Samsung. They must be purchased separately. We suggest consulting an installation service or professional TV installer for specific hardware and anti-fall hardware installation.

1. Put the screws into the clamps and firmly fasten them onto the wall. Confirm that the screws have been firmly installed onto the wall.
 - You may need additional material such as an anchor depending on the type of wall.
2. Remove the screws from the back center of the TV, put the screws into the clamps, and then fasten the screws onto the TV again.
 - These screws may not be supplied with the TV. If they are not, purchase screws with the following specifications:
 - For a 55 - 78 inches models: M8

3. Connect the clamps fixed onto the TV and the clamps fixed onto the wall with a durable, heavy-duty string and then tie the string tightly.

NOTE

- Install the TV near to the wall so that it does not fall backwards.
 - Connect the string so that the clamps fixed on the wall are at the same height to or lower than the clamps fixed on the TV.
 - Untie the string before moving the TV.
4. Verify all connections are properly secured. Periodically check the connections for any sign of fatigue or failure. If you have any doubt about the security of your connections, contact a professional installer.

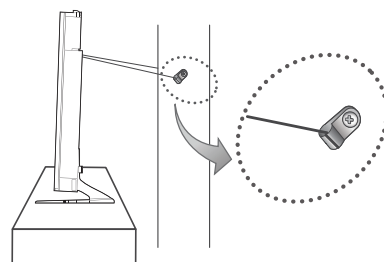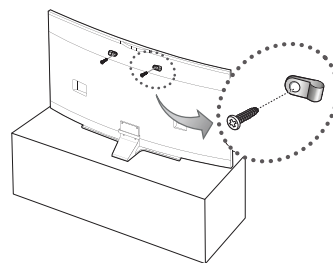

Warranty Information

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

IMPORTANT WARRANTY INFORMATION REGARDING TELEVISION FORMAT VIEWING

- See the warranty card for more information on warranty terms.

Wide screen format LED Displays (with 16:9 aspect ratios, the ratio of the screen width to height) are primarily designed to view wide screen format full-motion video. The images displayed on them should primarily be in the wide screen, 16:9 ratio format, or expanded to fill the screen, if your model offers this feature, with the images constantly in motion. Displaying stationary graphics and images on the screen, such as the dark sidebars on non-expanded standard format television video and programming, should be limited to no more than 5% of the total television viewing time per week.

Additionally, viewing other stationary images and text such as stock market crawls, video game displays, station logos, web sites or computer graphics and patterns, should be limited as described above for all televisions.

Displaying stationary images that exceed the above guidelines can cause uneven aging of LED Displays that leave subtle, but permanent burned-in ghost images in the LED picture. To avoid this, vary the programming and images, and primarily display full screen moving images, not stationary patterns or dark bars. On LED models that offer picture sizing features, use these controls to view different formats as a full screen picture.

Be careful about the television formats you select and the length of time you view them. Uneven LED aging as a result of format selection and use, as well as burned in images, are not covered by your Samsung limited warranty.

- SAMSUNG ELECTRONICS NORTH AMERICAN LIMITED WARRANTY STATEMENT

Subject to the requirements, conditions, exclusions and limitations of the original Limited Warranty supplied with Samsung Electronics (SAMSUNG) products, and the requirements, conditions, exclusions and limitations contained herein, SAMSUNG will additionally provide Warranty Repair Service in the United States on SAMSUNG products purchased in Canada, and in Canada on SAMSUNG products purchased in the United States, for the warranty period originally specified, and to the Original Purchaser only.

The above described warranty repairs must be performed by a SAMSUNG Authorized Service Center. Along with this Statement, the Original Limited Warranty Statement and a dated Bill of Sale as Proof of Purchase must be presented to the Service Center. Transportation to and from the Service Center is the responsibility of the purchaser. Conditions covered are limited only to manufacturing defects in material or workmanship, and only those encountered in normal use of the product.

Excluded, but not limited to, are any originally specified provisions for, in-home or on-site services, minimum or maximum repair times, exchanges or replacements, accessories, options, upgrades, or consumables.

For the location of a SAMSUNG Authorized Service Center, please call toll-free:

- In the United States: 1-800-SAMSUNG (1-800-726-7864)
- In Canada: 1-800-SAMSUNG

SAMSUNG BRAND PRODUCTS

LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by SAMSUNG and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for period of: (90 Days Parts and Labor for Commercial Use)

Categories	Parts	Labor	Size	Service
LCD/LED TV	1 Year	1 Year	39" and Larger	Carry-In or In Home
			37" and Smaller	Carry-In
Plasma Display	1 Year	1 Year	All	Carry-In or In Home
3D Glasses	1 Year	1 Year	-	Carry-In or Pick up

** 180 Days after Purchasing and 600 Hours of Use Lamp on Projector

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures.

Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center.

SAMSUNG will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

Certain products are eligible for In-home service at Samsung's discretion. To receive in-home service, the product must be unobstructed and accessible to service personnel. If during in-home service, repair cannot not be completed, it may be necessary to remove, repair and return the product. If in-home service is unavailable, SAMSUNG may elect, at our option, to provide for transportation of our choice to and from a SAMSUNG authorized service center. Otherwise, and for 37" and smaller LCD/LED TV, transportation to and from the SAMSUNG authorized service center is the responsibility of the purchaser.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product, and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finishes; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by SAMSUNG which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; brightness related to normal aging, or burned-in images. SAMSUNG does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG

SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty service, please contact SAMSUNG at:

Samsung Electronics America, Inc.

85 Challenger Road

Ridgefield Park, NJ 07660-2112

1-800-SAMSUNG 726-7864 - www.samsung.com

1-800-749-0260: Projectors only

The benefits of this Limited Warranty extend only to the original purchaser of Samsung products from an authorized Samsung reseller. THIS LIMITED WARRANTY SHALL NOT APPLY TO ANY SAMSUNG PRODUCTS PURCHASED FROM UNAUTHORIZED RESELLERS OR RETAILERS, EXCEPT IN STATES WHERE SUCH RESTRICTION MAY BE PROHIBITED. For a list of Samsung authorized retailers, please go to: http://www.samsung.com/us/peaceofmind/authorized_resellers.html.



Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Country	Customer Care Center ☎	Web Site	Address
CANADA	1-800-SAMSUNG (726-7864)	www.samsung.com/ca/support (English) www.samsung.com/ca_fr/support (French)	Samsung Electronics Canada Inc. 2050 Derry Road West, Mississauga, Ontario L5N 0B9 Canada
U.S.A	1-800-SAMSUNG (726-7864)	www.samsung.com/us/support	Samsung Electronics America, Inc. 85 Challenger Road Ridgefield Park, NJ 07660



CONSIGNES DE SÉCURITÉ

Pour votre sécurité personnelle et prévenir tout dommage matériel, veuillez lire les consignes de sécurité ci-après. Cela vous permettra d'utiliser adéquatement le produit.

- Veillez à ce que le produit ne soit pas exposé directement à la lumière du soleil, une flamme nue, la chaleur ou l'eau. Ceci pourrait causer une défectuosité du produit ou un incendie.
- Évitez d'exercer une pression sur les lentilles des lunettes 3D. Veillez à ne pas échapper ni plier les lunettes. Éviter d'exercer une pression, de laisser tomber ou de plier le produit car ceci pourrait causer une défectuosité.
- Ne laissez pas les pièces des lunettes 3D à la portée des enfants; veillez à ce que ceux-ci n'avalent aucune pièce. Si votre enfant a avalé une pièce, consultez immédiatement un médecin.
- Lorsque vous nettoyez les lunettes, veillez à ne pas vaporiser de produit nettoyant directement sur la surface. Évitez de vaporiser de l'eau ou un produit nettoyant directement sur les lunettes pour éviter les risques d'incendie ou de choc électrique, de dommages causés à la partie extérieure du produit ou le décolllement des étiquettes d'information qui y sont apposées.
- N'utilisez pas de produits chimiques contenant de l'alcool, des solvants ou des agents tensio-actifs tels que de la cire, du benzène, des diluants, pesticides, désodorisants, lubrifiants ou détergents pour nettoyer les lunettes. Si vous utilisez ces produits chimiques, la partie extérieure des lunettes risque de se décolorer ou se fissurer et les étiquettes contenant les instructions risquent de se détacher. Utilisez seulement un chiffon doux en fibres super fines ou flanelle de coton pour nettoyer les lunettes, étant donné que les lentilles ou la surface des lunettes se rayent facilement. Étant donné que les lunettes se rayent facilement sous l'action de substances étrangères, assurez-vous de secouer le chiffon avant son utilisation.
- Ne portez pas les lunettes 3D pendant que vous dormez. Vous risquez de les endommager si vous les gardez pendant que vous dormez.
- Ne démontez pas les lunettes 3D et n'effectuez aucune réparation ou modification sur ces dernières. Ne les utilisez pas si elles sont endommagées.
- Lorsque vous portez les lunettes 3D, faites preuve de précaution afin d'éviter de vous blesser les yeux avec les bords de la monture.
- Utilisez les deux mains pour mettre et retirer les lunettes 3D.
- Utilisez uniquement les piles approuvées et assurez-vous de les insérer en respectant les polarités. Si les polarités ne sont pas respectées, les piles peuvent imposer ou les produits chimiques qu'elles contiennent peuvent s'écouler, ce qui peut causer un incendie, des blessures corporelles aux utilisateurs ou contaminer (polluer) l'environnement.
- Conservez les piles hors de portée des enfants pour éviter qu'ils ne les avalent. S'ils les avalent, consultez immédiatement un médecin.

Dépannage

Problème	Conseil
Mes lunettes 3D ne fonctionnent pas.	<ul style="list-style-type: none"> ➢ Remplacez la pile. ➢ Les lunettes 3D doivent être à une distance rapprochée du téléviseur. Assurez-vous que la distance entre le téléviseur et les lunettes 3D est inférieure à 19,5 pi (6 m) en ligne droite. ➢ Vérifiez les réglages de la fonction 3D de votre téléviseur.
La DEL continue de clignoter.	<ul style="list-style-type: none"> ➢ The battery is dead. Replace the battery.

Spécifications (Numéro de modèle: SSG-5150GB)

	Obturateurs	Cristaux liquides	Transmittance	36±2%
Optique	Distance de visionnement recommandée	6,5 à 19,5 pi (2 à 6 m)	Field Rate	120 trames /seconde
Poids	Lunettes	21g /0,74 oz. (avec la pile: 22g±0,5g/0,77±0,18oz.)		
Mise sous tension	Lunettes	Une pile 3 V Lithium et dioxyde de manganèse (CR1620)		
	Lunettes	0,85mA (Average)		
Consommation électrique	Pile	Type	70mAh, 3.0V (CR1620)	
		Durée de fonctionnement sous tension	70 heures	
Conditions de fonctionnement	Température de fonctionnement	32 °F ~ 104 °F (0°C ~ 40°C)		
	Température de conservation	-4 °F ~ 113 °F (-20°C ~ 45°C)		

- ☞ Le design et les caractéristiques du produit peuvent être modifiés sans préavis afin d'améliorer les performances.
- ☞ La durée d'utilisation continue peut différer selon l'environnement de communication sans fil et des conditions d'utilisation.

SAMSUNG 3D Active Glasses SSG-5150GB

The TV user guide's description of this product may be not accurate, so always refer to this guide.


User's Guide

Features

Samsung's SSG-5150GB 3D glasses enable you to view 3D images on your 3D TV. The Samsung 3D glasses communicate with Samsung 3D TVs via the 2.4GHz RF band.


- ☞ The Samsung 3D glasses are only compatible with Samsung D, E, and F series 3D TVs that were released in 2011, 2012, and 2013. These 3D glasses cannot be connected to other Bluetooth devices.

Parts

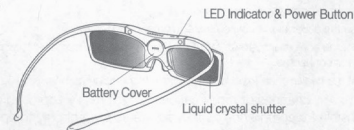

Replacing the Batteries

If the red LED blinks every two seconds continually, replace the battery with a new one.

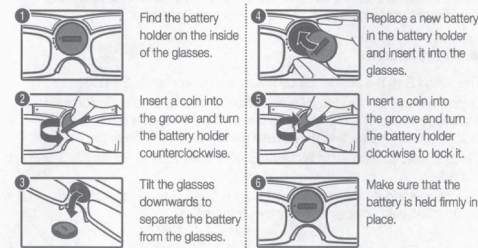

- ☞ Use a coin when changing batteries. Using other tools may damage the groove on the battery holder.
- ☞ Insert the "+" side of the battery into the side marked with "+" in the battery compartment.
- ☞ To check the remaining battery capacity, refer to the pairing section in this manual.

Pairing 3D Active Glasses

- ☞ **What is Pairing?** Pairing is the process of connecting 3D glasses and a 3D TV so that the two devices can exchange data.
- ☞ Ensure your Samsung TV and 3D glasses are no farther than 19.5 in (50 cm) apart from each other while pairing is in progress.

- ◆ **Turning the glasses on**
Press the power button briefly. The green LED turns on for 3 seconds. (Make sure that 3D is activated on the TV before using the 3D glasses.)
- ◆ **Turning the glasses off**
Press the power button briefly. The red LED turns on for 3 seconds.
- ◆ **Performing the pairing process.**
Turn the TV on and let it power up completely. Press and hold the Power button on the glasses. The green and the red LEDs blink alternately for 2 seconds.

◆ **Operating range**

Recommended pairing distance

Recommended viewing distance

Recommended viewing distance	2-6m (6 to 19.5 ft)
Recommended pairing distance	50 cm or less (19.5 in)

- ☞ Once the 3D glasses are paired, the remaining battery capacity is displayed on the TV screen. (This feature only applies to Samsung F series 3D TVs and 3D glasses that have been available since 2013.)
- ☞ If you keep trying to pair the glasses and the TV after pairing has failed, the battery level will decrease significantly. However, the battery level will recover to a certain degree in about a minute.
- ☞ The working distance is affected by the presence of obstacles (a person, metal, walls, etc.) between the glasses and the TV and the strength of the Bluetooth signal.
- ☞ Turn off the 3D glasses when they are not in use. If you leave the 3D glasses on, the battery lifespan decreases.

◆ Pairing steps

1. Turn on the TV, and then move the glasses within 19.5 inches of the TV.
2. Press the power button on the 3D glasses briefly. The 3D glasses will power on and pairing will start.
3. The message "3D glasses are connected to TV." will be displayed on the TV screen when the pairing is successfully completed.
 - If pairing fails, the 3D glasses will power off.
 - If the first attempt to pair fails, power the TV off and on again and perform step 2.
 - **How to pair again:** Press the power button on the 3D glasses for more than 1 second.

<Pairing is needed again in the following situations:>

- If the 3D glasses do not function, even when the power button is pressed, especially if the TV has just been a repaired.
- If you want to play 3D content on another Samsung 3D TV model that belongs to the D, E, or F series released in 2011 through 2013. You must pair the glasses with the other TV.

◆ Viewing guidelines

- In 3D view mode, the screen may flicker under fluorescent lighting (50Hz ~ 60Hz) or three-wave lighting.
 - ☞ In this case, it is advisable to turn off the lighting or adjust it to a low level.
- When switching the picture mode from 3D view, the 3D view mode turns off, and the 3D glasses fail to operate, resulting in the display not operating properly.
 - ☞ Then, the 3D glasses turn off.
- If you lie on your side while watching TV with the 3D glasses, the picture may look darker or may not be visible.
- If the 3D glasses are defective or damaged, they cannot be repaired and should be exchanged for a new pair. The repair service is free of charge within the warranty period, which, however, does not cover damage from the user's fault.
- The actual 3D effect may be experienced differently depending on the viewer. The 3D effect may not be experienced by a person who has a great difference of vision in the left and right eyes.
- In 3D view mode, it is advisable to watch TV within the recommended distance.
 - ☞ The 3D function of the glasses may not work properly if you are out of the recommended distance for about 3 seconds.
 - ☞ If you stay out of the recommended range, the 3D glasses lose the wireless communications with the TV, and then the display turns off in few seconds before the glasses turn off.
- The 3D glasses may not work properly if there are any nearby active 3D devices or electronic or wireless communication devices (for example, a device that uses the 2.4GHz or 5GHz frequency range such as a microwave or AP). In this case, move the devices away from the 3D glasses.
- The 3D Glasses may not work properly near metal objects or in an electromagnetic field. In this case, move the metal objects or the electromagnetic device away from the 3D glasses.
- The vividness of the image may be deteriorated if you watch TV in a location that is exposed to direct sunlight or illumination.

CAUTION!

IMPORTANT HEALTH AND SAFETY INFORMATION FOR 3D IMAGES. READ THE FOLLOWING CAUTIONS BEFORE YOU OR YOUR CHILD USE THE 3D FUNCTION.

- Adults should frequently check on children who are using the 3D function. If there are any complaints of tired eyes, headaches, dizziness or nausea, stop the child from viewing the 3D TV and ensure that they rest.
- Do not use the 3D glasses for any purpose other than the intended purpose, such as general eyeglasses, sunglasses, protective goggles.
- Some viewers may experience discomfort such as dizziness, nausea and headaches while viewing 3D TV. If you experience any of these symptoms, stop watching the 3D content, remove the 3D glasses, and take a rest.
- An extended period of watching TV in 3D view mode may cause eye fatigue. In this case, stop watching the 3D content immediately, take off the 3D glasses and allow your eyes to rest.
- Do not use the 3D function or the 3D glasses while walking or moving around. Wearing the 3D glasses while moving around may result in injury due to running into objects, tripping and/or falling.
- If you sleep with the 3D glasses on, the temples on the glasses may become broken.
- The temples of the 3D glasses are unfolded. Do not attempt to fold the temples with excessive force. Folding the temples with excessive force may damage the 3D glasses.
- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type.



BN68-05527A-00

SAFETY PRECAUTIONS

The following safety instructions are to ensure your personal safety and prevent property damage. Please read them to ensure the proper use of the product.

- Do not place the product in a location exposed to direct sunlight, heat, fire, or water. Exposure may result in a product malfunction or fire.
- Do not apply force to the lenses of the 3D glasses. Do not drop or bend the product. Applying force, dropping, or bending may result in a product malfunction.
- Keep components of the 3D glasses out of reach of children, and especially ensure children do not swallow one of the components. If your child swallowed a component, consult your doctor immediately.
- When cleaning the product, do not spray water or cleaner directly onto the surface of the product. Spraying water or cleaner directly onto the glasses may result in fire or electric shock, damage to the product's surface, or cause the indicator labels on the product's surface to come loose.
- Do not apply chemicals containing alcohol, solvent, or surfactant such as wax, benzene, thinner, pesticide, air freshener, lubricant, or cleaner to the product. These chemicals may cause the product's exterior to be discolored or cracked, or labels or instructions to be removed. Use only a soft cloth such as superline fibers or cotton flannels for cleaning the product as the surface or the lenses easily cracks. Because the product can be easily scratched with foreign substances, make sure to dust off the cloth before using.
- Do not sleep while wearing the 3D glasses. Wearing the 3D glasses while sleeping may damage them.
- Do not disassemble, repair, or modify the 3D glasses by yourself. Do not use a product that is damaged.
- Take care that you do not injure your eyes with the edges of the frame of the 3D glasses when wearing them.
- Put the 3D glasses on and take them off with both hands.
- Use only approved batteries, and make sure to insert the batteries in the correct polarities. If the batteries are replaced in the wrong polarities, the batteries may implode or leak its internal chemicals, which may cause fire, inflict injury on users, or contaminate (damage) its environment.
- Keep the removed batteries out of children's reach to prevent children from swallowing them. If they swallow them, consult with a doctor immediately.

Troubleshooting

If you encounter...	Try this...
My 3D glasses do not work.	<ul style="list-style-type: none"> Replace the battery. The 3D glasses should be close to the TV. Make sure that the distance between the TV and your 3D glasses is less than 19.5 feet (6m) in a straight line. Check the 3D function settings of your TV.
The LED keeps blinking	The battery is dead. Replace the battery.

Specifications (Model Number: SSG-5150GB)

	Shutters	Liquid crystal	Transmittance	36±2%
Optics	Recommended viewing distance	6.5 to 19.5 ft (2 - 6m)	Field Rate	120 fields/s
	Weight	21g/0.74 oz. (including the battery: 22g±0.5g/0.77±0.18oz.)		
Power	Glasses	One 3V lithium/manganese dioxide battery 3V (CR1620)		
	Battery	0.85mA (Average)	Type	70mAh, 3.0V (CR1620)
Power Consumption	Operating time when On	70hours		
	Operating Temperature	32 °F - 104 °F (0°C - 40°C)		
Operating Conditions	Custody Temperature	-4 °F - 113 °F (-20°C - 45°C)		

- Product specifications may be changed without notice in order to enhance product performance.
- The continuous operating time may differ depending on the wireless communication environment and usage conditions.

Regulatory Compliance Statements

FCC COMPLIANCE

Federal Communication Commission Interference Statement

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Statement

This Class B digital apparatus complies with Canadian ICES-003.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

CALIFORNIA USA ONLY

This perchlorate warning applies only to primary CR (Manganese Dioxide) Lithium coin cells in the product sold or distributed ONLY in California USA
 * Perchlorate Material - special handling may apply.
 See www.dtsc.ca.gov/hazardouswaste/perchlorate.*

WARNING

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

[The 3D Glasses Supplied with] This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body seek immediate medical attention.

SAMSUNG Lunettes 3D Active SSG-5150GB

Il se peut que les descriptions relatives à ce produit dans le guide d'utilisation du téléviseur ne soient pas précises; par conséquent, reportez-vous toujours au présent guide.


Guide d'utilisation

Caractéristiques

Les lunettes 3D SSG-5150GB vous permettent de voir des images 3D sur votre téléviseur 3D. Les lunettes 3D Samsung se branchent au téléviseur 3D Samsung par l'intermédiaire de la bande RF de 2,4 GHz.

Ce produit a été conçu pour être apparié avec les modèles de téléviseurs 3D, séries D, E, et F mis sur le marché en 2011 et jusqu'en 2013, ainsi que les téléviseurs 3D ayant l'un des logos ci-dessous. Les autres appareils sans fil ne sont pas compatibles avec ce produit.

Pièces

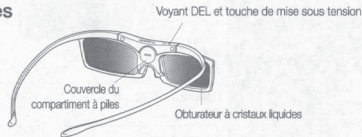

Remplacement de la pile

Lorsque la DEL rouge clignote en continu toutes les deux secondes, remplacez la pile par une neuve.

- Pour remplacer la pile, utilisez une pièce de monnaie. Si vous utilisez tout autre outil ou dispositif, cela peut endommager la fente du porte-pile.
- Avant d'insérer la pile, veillez à respecter la polarité (+, -) indiquée dans le compartiment à piles.
- Pour vérifier la charge restante des lunettes 3D, reportez-vous à la section sur le pairage dans le présent guide.

Pairage des lunettes 3D Active

- En quoi consiste le pairage?** Le processus de pairage consiste à établir la connexion entre les lunettes 3D et le téléviseur 3D et assurer l'échange de données entre les deux.
- Pendant le processus de pairage, assurez-vous que le téléviseur Samsung et les lunettes 3D sont à une distance l'un de l'autre n'excédant pas 50 cm (19,5 po).

Portée

Distance de pairage recommandée

Distance de visionnement recommandée

Distance de visionnement recommandée	6.5 à 19.5 ft (2 à 6m)
Distance de pairage recommandée	19,5 po (50 cm ou moins)

- Une fois le pairage des lunettes 3D terminé, l'écran du téléviseur affiche la charge restante de la pile. (Cette fonction est offerte dans les téléviseurs 3D série F et les lunettes 3D de Samsung mis sur le marché depuis 2013.)
- Si vous faites plusieurs tentatives de pairage, le niveau des piles diminuera considérablement. Cependant, la charge des piles atteindra un certain niveau au bout d'une minute.
- La distance de visionnement varie en fonction des obstacles (une personne, des objets en métal, des murs, etc.) entre les lunettes et le téléviseur et aussi de la puissance des ondes électromagnétiques.
- Mettez les lunettes 3D hors tension lorsque vous ne les utilisez pas. Si vous les laissez sous tension, la durée de vie de la pile diminue.

Étapes du pairage

- Mettez le téléviseur sous tension, puis assurez-vous que le téléviseur Samsung et les lunettes 3D sont à une distance l'un de l'autre n'excédant pas 50 cm (19,5 po).
- Appuyez brièvement sur la touche d'alimentation des lunettes 3D. Ces dernières se mettent sous tension et le processus de pairage se déclenche.
- Lorsque le pairage s'effectue avec succès, le message « **Lunettes 3D connectées à l'écran.** » s'affiche à l'écran du téléviseur.
 - Si le pairage échoue, les lunettes 3D se mettent hors tension.
 - Si la première tentative échoue, mettez l'écran hors tension et remettez-le sous tension, puis exécutez l'étape 2.
 - Comment réparer le pairage:** appuyez sur la touche de mise sous tension des lunettes 3D pendant plus d'une seconde.

<Le pairage est nécessaire à nouveau dans les cas suivants >

- Si les lunettes 3D ne fonctionnent pas après le pairage même si vous appuyez sur la touche de mise sous tension du téléviseur 3D.
- Si vous désirez lire un contenu 3D sur un autre modèle de téléviseur 3D Samsung, série D, E ou F mis sur le marché entre 2011 et 2013.

Directives concernant le visionnement

- En mode de visionnement 3D, l'écran peut scintiller lorsqu'il est exposé à une source d'éclairage fluorescent (50 Hz à 60 Hz) ou à trois longueurs d'ondes.
 - Dans ce cas, il est recommandé d'éteindre l'éclairage ou de diminuer son intensité.
- Si vous êtes en position allongée sur le côté lorsque vous utilisez les lunettes 3D, il se peut que vous ne voyiez pas d'image ou qu'elle soit sombre.
 - Ensuite, les lunettes 3D se désactivent.
- Si vous êtes en position allongée sur le côté lorsque vous utilisez les lunettes 3D, il se peut que vous ne voyiez pas d'image ou qu'elle soit sombre.
- Si les lunettes 3D sont défectueuses ou endommagées, elles ne peuvent pas être réparées et doivent être remplacées par une paire de lunettes neuves. La réparation est gratuite pendant la durée de validité de la garantie qui, cependant, ne couvre pas les dommages résultant de la responsabilité de l'utilisateur.
- La perception des effets 3D peut varier en fonction du téléviseur. Les effets 3D peuvent ne pas être perçus par les personnes qui présentent une trop grande différence de vision entre l'œil droit et l'œil gauche.
- En mode de visionnement 3D, il est conseillé de regarder la télévision en respectant la distance recommandée.
 - La fonction 3D des lunettes peut ne pas fonctionner correctement si vous êtes hors de la distance recommandée pendant environ 3 secondes.
 - Si vous trouvez hors de la distance recommandée, les lunettes 3D ne peuvent plus établir la communication sans fil avec le téléviseur, l'image ne s'affiche plus au bout de quelques secondes et ensuite les lunettes se désactivent.
- Les lunettes 3D peuvent ne pas fonctionner correctement si elles sont à proximité d'un dispositif 3D, de communication électronique ou sans fil (par exemple, un dispositif qui utilise les gammes de fréquence 2,4 GHz ou 5 GHz comme un four à micro-ondes ou un point d'accès). Dans ce cas, éloignez les dispositifs en question.
- Les 3D Glasses peuvent ne pas fonctionner correctement à proximité d'objets métalliques ou d'un champ électromagnétique. Dans ce cas, éloignez les objets métalliques ou l'appareil émettant un champ magnétique par rapport aux lunettes 3D.
- Si vous regardez la télévision dans un endroit exposé directement à la lumière du soleil ou à une source d'éclairage, la clarté de l'image peut sembler se dégrader.

ATTENTION!

CONSIGNES IMPORTANTES SUR LA SANTÉ ET LA SÉCURITÉ RELATIVEMENT AUX IMAGES 3D. LISEZ LES AVERTISSEMENTS SUIVANTS AVANT D'UTILISER OU DE LAISSER VOTRE ENFANT UTILISER LA FONCTION 3D.

- Les enfants qui utilisent la fonction 3D doivent être supervisés fréquemment par un adulte. Si l'enfant se plaint de fatigue oculaire, de maux de tête, d'étourdissements ou de nausée, il doit arrêter de regarder le film 3D et se reposer.
- N'utilisez pas les lunettes 3D à d'autres fins que celles pour lesquelles elles ont été conçues, par exemple comme lunettes de vue, lunettes de soleil ou de protection.
- Certaines personnes peuvent éprouver des étourdissements, des nausées, des maux de têtes, etc. lorsqu'elles regardent un film sur un téléviseur 3D. Si vous éprouvez ce genre de symptômes, arrêtez de visionner du contenu 3D, enlevez les lunettes 3D et reposez-vous pendant quelques minutes.
- Si vous visionnez du contenu en mode 3D pendant une période prolongée, cela peut vous causer de la fatigue oculaire. Dans ce cas, arrêtez immédiatement de visionner du contenu en mode 3D, retirez les lunettes 3D et reposez-vous yeux.
- N'utilisez pas la fonction 3D ou les lunettes 3D lorsque vous marchez ou vous vous déplacez. Si vous portez les lunettes 3D pendant que vous vous déplacez, vous pourriez vous blesser en heurtant des objets, en trébuchant ou en tombant.
- Évitez de dormir avec les lunettes 3D pour ne pas briser les branches.
- Les branches des lunettes 3D sont dépliées. N'essayez pas de plier les branches des lunettes en exerçant une force excessive. Si vous pliez les branches des lunettes en exerçant une force excessive, vous pouvez endommager les lunettes 3D.
- Le remplacement incorrect des piles peut entraîner un danger d'explosion.
- Remplacez les uniquement par des produits similaires ou équivalents.



Samsung Smart TV

Setup Guide



BN68-05947A-00

1 Unpack

Taking the TV Out of the Box



- **Warning:**
Do not touch the TV's screen when you take it out of the box. Hold it by its edges only. If you touch the screen, you can cause the TV panel to crack.



- **Recommendation 1:**
Two people should remove the TV from the box as shown above. When removing the TV, hold it by its edges only. Do not touch the screen.



- **Recommendation 2:**
If only one person is available to remove the TV from the box, remove it as shown in the illustration above. Hold the TV by its edges. Do not touch the screen.

Included in the Box

Remote Control



Samsung Smart Control



Remote Control



Batteries (2 AA, 2 AAA)

One connect and Cables



One connect



One connect cable



RCA Adapter



IR Extender Cable



Power Cord



AUDIO OUT COMPONENT IN AV IN 1 Adapter



Wall Mount Adapter (55 inches models: 2 pieces)



Wall Mount Adapter (55 inches models: 2 pieces, 65 inches models: 4 pieces)

Stand part



Base



Stand Mount



Screws (x8)

Also included


- User manual
- Regulatory guide
- 3D Active Glasses

2


Assemble

Warning


Do not remove the Styrofoam on the front of TV screen.

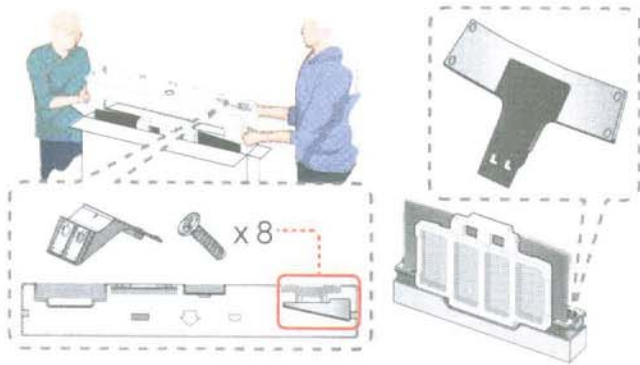


- 1 Locate the Base, Stand Mount, and Screws in the box and set them aside.

 Remove the top portion of the box to locate the stand parts.


- 2 With another person, hold the TV by its edges, and then remove it completely from the box.

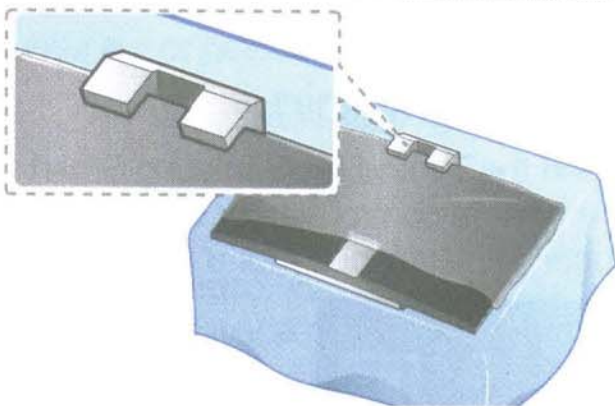


- 3 Lay the TV on a soft surface, screen side down. Use the Styrofoam to protect the screen.

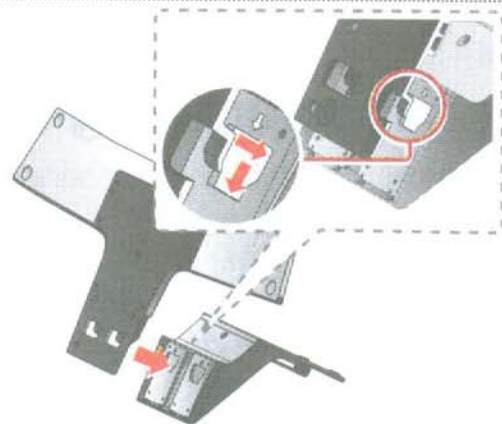


- 4 Fit the Base and Stand Mount together, making sure the notch on the Stand Mount aligns with the Base.

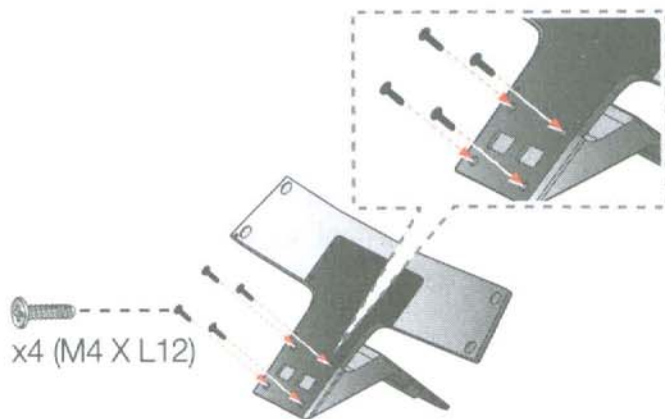


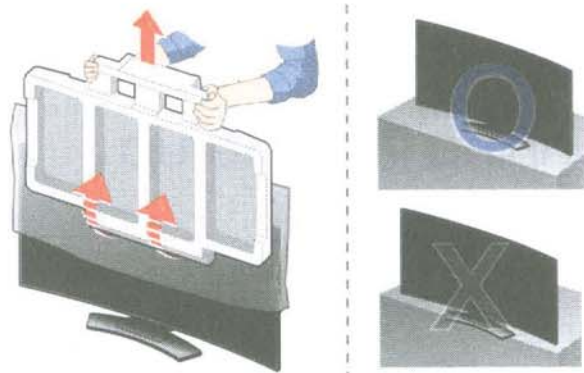
- 5** Insert 4 screws, and then use a screwdriver to secure the Base to the Stand Mount.

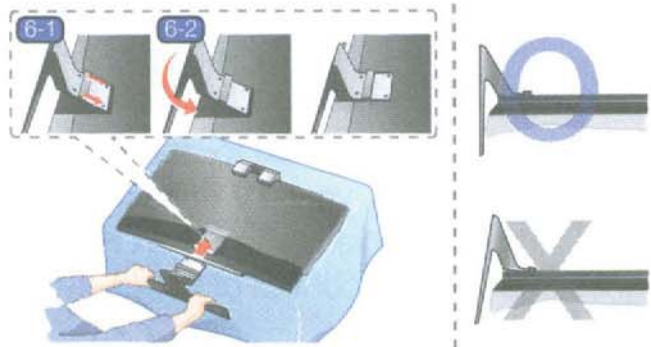

- 6** Holding the stand parallel to the screen, slide the Mount into the notches on the back of the TV.

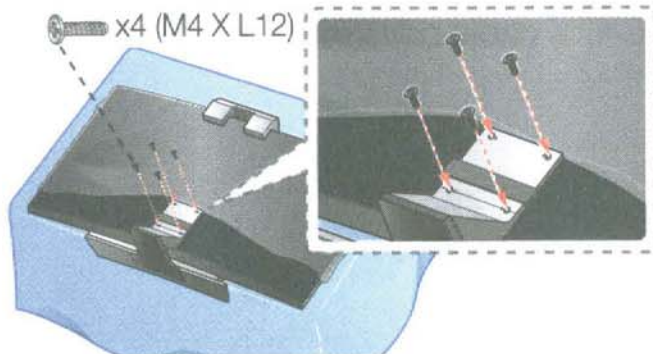

- 7** Insert 4 screws, and then use a screwdriver to secure the stand to the TV.
-  To assemble the wall mount, use the styrofoam that came with the TV's packaging to protect it. Lay the TV down and attach the screws.



- 8** After attaching the stand, set the TV upright, and then remove the Styrofoam from the front of the TV. Do not place the TV at the edge of any piece of furniture (table, entertainment center, etc.). It could fall and break or cause personal injury.

3

One Connect


Connecting the TV to the One Connect

You must connect the One Connect to the TV via the One Connect cable before connecting any external devices. The One Connect cable has two different ends. Connect the end marked TV to the TV and the other end to the One Connect.

One Connect




The One Connect serves as the connection panel for your TV. You connect nearly all external devices to the One Connect.

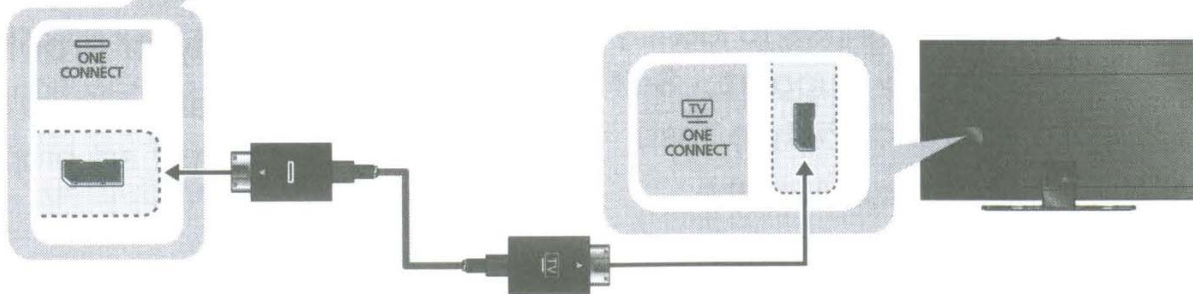

<One Connect-end Connector>


<TV-end Connector>

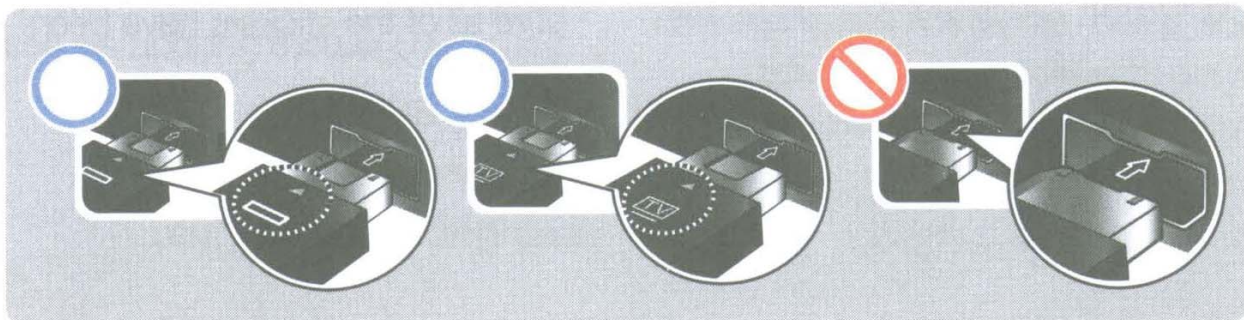

4

Connect

* Recommended Connections

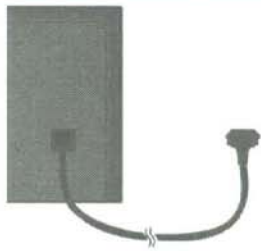


After you have connected all your external devices, plug the TV's power cord into the back of the TV. **DO NOT** plug it into a wall outlet until you have reached Section 7, Initial Setup.



This adapter can be connected to Audio, Component, or AV cables.

One Connect Panel

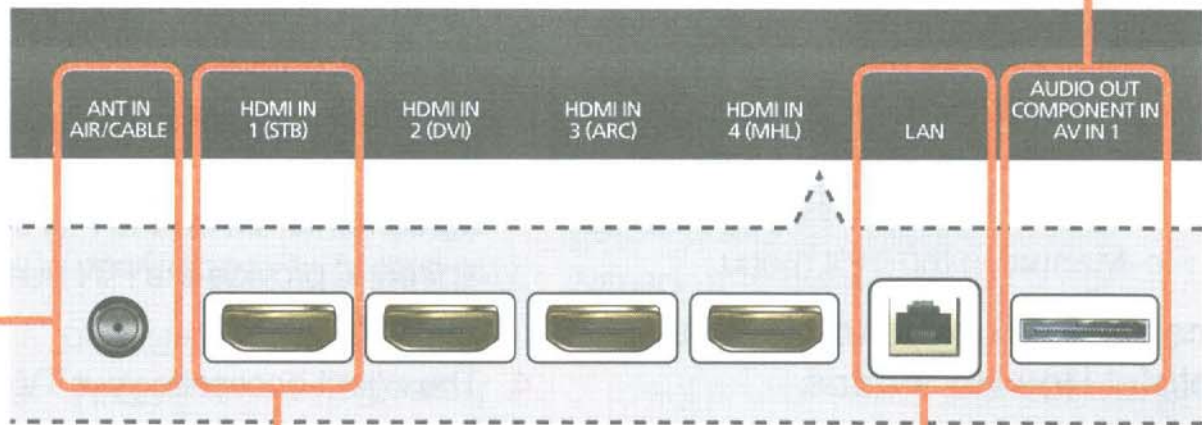

Cable/Satellite/DVR

Connect your set-top box or digital video recorder with an HDMI cable.



Internet

Connect here with an Ethernet cable or wirelessly later during the Initial Setup.



TV signal

Connect your coaxial cable to the Antenna In port.




5

Gear

* Recommended Connections

One Connect Panel

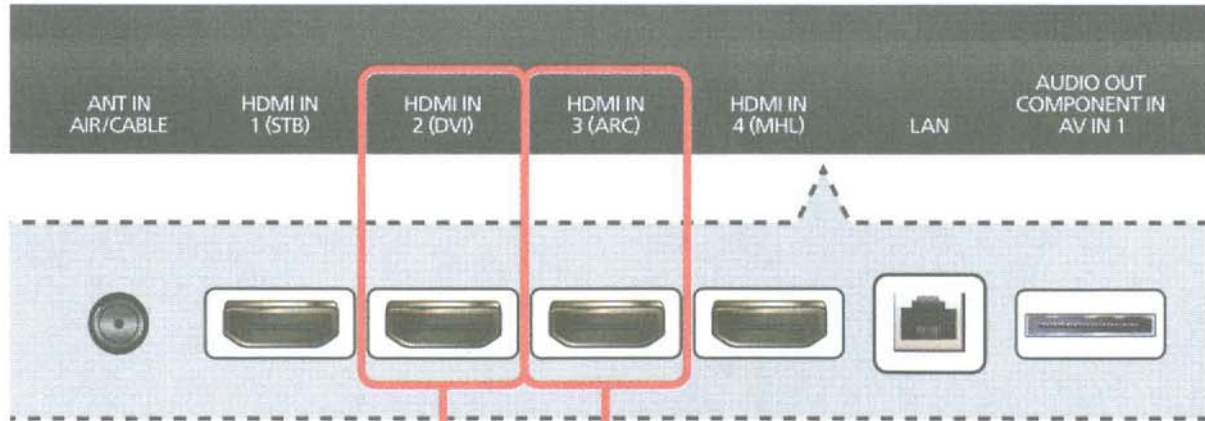

Game console

Connect your game console or PC/DVI using an HDMI cable.



Blu-ray/DVD/Home Theater

Connect your video player using an HDMI cable.



Audio

Connect a receiver/home theater using an optical audio cable.



Place the transmitter end within 4 inches of the set-top-box's remote control sensor.

IR Out

Connect the IR Extender Cable here.

6


Smart Control

Introducing the Samsung Smart Control

Your TV comes with a Samsung Smart Control. Unlike conventional remote controls that have only buttons, the Samsung Smart Control has:

- Buttons for quick access to frequently used functions.
- A motion sensor that lets you move the pointer or focus on the screen by simply moving the Samsung Smart Control.

Inserting the Batteries

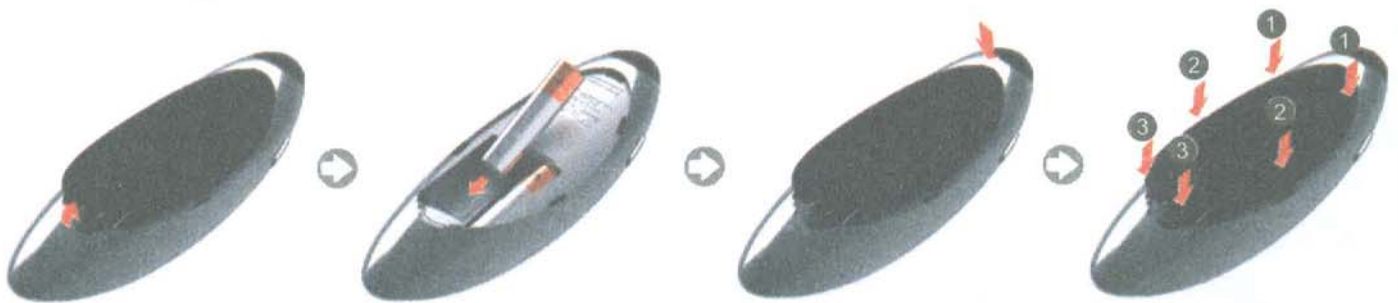


- 1** Gently pull on the notch in the battery cover. When the cover comes loose, remove the cover completely.
- 2** Insert 2 AA alkaline batteries, making sure to align the positive and negative polarities correctly.
- 3** Place the battery cover on the remote control, and then press the top part of the cover into the control.
- 4** Press the catches on both sides of the battery cover in the order shown in the figure above until the cover is completely attached to the remote control.

Using the Samsung Smart Control


When you start the TV for the first time by pressing the TV button on the Samsung Smart Control, the TV and the Samsung Smart Control pair, using the TV's Bluetooth function. Once the TV and Samsung Smart Control have paired, you can use the Samsung Smart Control to operate the TV.

Using Motion Sensor Control

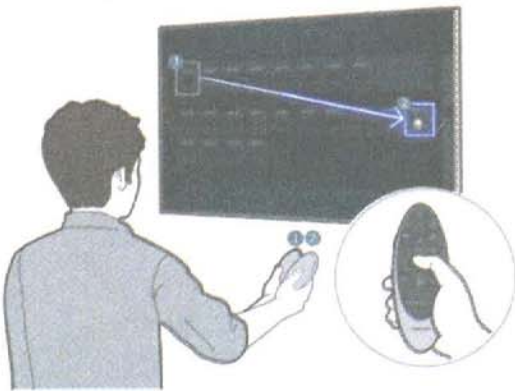

Place a finger on the touch pad, and then move the Samsung Smart Control. A pointer appears on the screen. Move the Samsung Smart Control. The pointer moves in the direction you moved the Samsung Smart Control. If you stop using the Motion Function, even momentarily, put your finger on the touch pad, and then move the Samsung Smart Control again to re-start the function.

Moving the Focus, Pointer, or Cursor Using the Directional Buttons

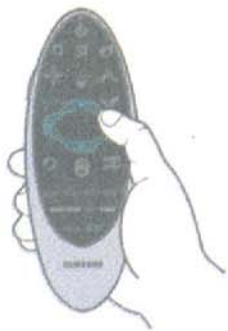

Press the directional buttons (up, down, left, and right) to move the focus, pointer, or cursor in the direction you want.


Selecting an Item/Entering a Menu by Pressing the Touch Pad



To enter a menu or select an item, highlight the item or the menu title, or move the pointer over it, and then press the touch pad.

Pairing the Samsung Smart Control Again

If you need to re-establish the connection between the TV and the Samsung Smart Control, point the Samsung Smart Control at the remote control sensor of the TV, and then press the **RETURN** button and **GUIDE** button simultaneously for 3 seconds.

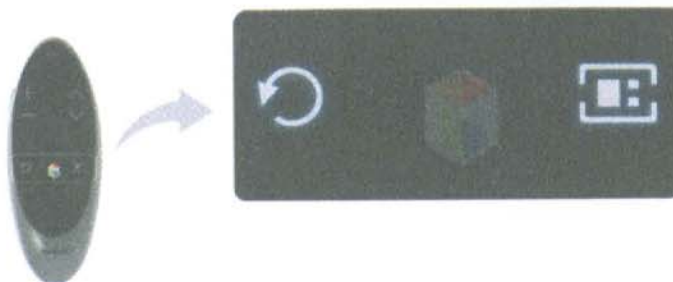

7

Initial Setup

When you turn on your TV for the first time, it immediately starts the Initial Setup. During Initial Setup, your TV pairs with the Samsung Smart Control, connects to your home network, implements Smart Hub agreements, links to the source of your live TV signal, and sets up control of your set-top or satellite box.

Information You Need


Have the following information on hand before you turn on your TV for the first time:

- Your wireless network's password. (Make sure your network is on.)
- Your Postal or Zip code.
- The name and location of your cable or satellite provider (if you use one).


Internet Access

The TV must be connected to the Internet to use the Smart Features. If you have a wireless network, confirm that your network router is working before you start the initial setup. If you have a wired network, connect the TV to the network with an Ethernet cable before you begin (CAT 7 cable preferred).

Running Initial Setup

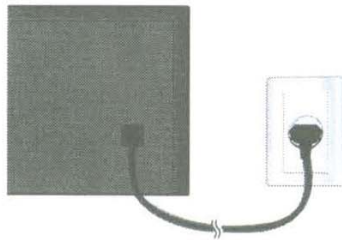

- 1 Plug your TV into a wall outlet.
- 2 Aim the Samsung Smart Control at the TV.

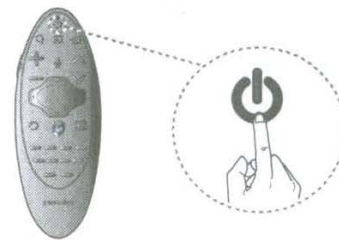

- 3 Press the **TV** button on the Samsung Smart Control to turn on the TV, and then follow the directions on the screen.

Once your Samsung Smart Control pairs, you can use the Samsung Smart Control's motion sensor function to move the pointer on the screen. To use the motion sensor function, rest a finger on the touch pad, and then move the Samsung Smart Control. To select items, press the touch pad.

To learn more about operating your TV and its Smart Features, see your TV's user's manual or launch the TV's built in e-Manual. Congratulations on the purchase of your new Smart TV!

Common issues

Can't Connect to Network or Apps (For Internet supported model only)

- Make sure the TV has a network connection (**MENU > Network > Network status**).
- * Contact your Internet service provider.

No Picture/Sound or Distorted Picture/Sound from an External Device

- Make sure your connection to the device is correct.
- Perform a TV Self Diagnosis to identify the problem (**MENU > Support > Self Diagnosis > Sound or Picture Test**).
- Change the picture size. (Use the "P.Size" button on your remote.)

Poor Picture Quality

- Select High Definition (HD) channels or programs.

Your Settings are Lost after 30 Minutes

- Change to Home Mode (**MENU > Support > Use Mode > Home Use**).

"Weak or No Signal" Displayed in TV Mode/Cannot Find Channel

- Press the **SOURCE** button on your remote.
- * If the TV is not connected to a cable or satellite box, run Auto Program to search for channels (**MENU > Broadcasting > Auto Program**).

Can't See All Apps or Apps Not Working

- * Reset Smart Hub (**MENU > Smart Hub > Smart Hub Reset**).

The stand is wobbly or crooked

- Make sure the indicator arrows on the stand and stand holder are properly aligned.

The TV won't turn on

- Make sure all cables are fully inserted and that the remote has batteries installed.

My remote, gestures, and/or voice does not work

- * The TV ships with protective stickers covering some of the sensors. Make sure all of the stickers have been removed.

More help

REQUIRE ASSISTANCE WITH YOUR PRODUCT?

Purchase any Samsung TV and you'll enjoy the convenience of Samsung Service. If you require any assistance with your TV, first try any of Samsung's helpful support options listed here.

Troubleshooting

For more quick solutions to common issues, see Troubleshooting and Maintenance in the user's manual.

Built-in user manual

On the Samsung Smart Control, press the **KEYPAD** button, and then select **e-Manual** on the On-Screen Remote. You can also select **Support** > **e-Manual** in the TV's menu.

Scan the QR code to view our helpful How-to Videos



Scan this with your smart phone to see helpful videos.

Tech Support and Chat

• www.samsung.com/support

Remote Support


Samsung Remote Support service offers you one-on-one support with a Samsung Technician who can remotely diagnose your TV.

For Remote Support:

- 1 Call the Samsung Contact Center at 1-800-SAMSUNG and ask for remote support.
- 2 Open the menu on your TV and go to the **Support** section.
- 3 Select **Remote Management**, and then read and agree to the service agreements. When the PIN screen appears, provide the PIN number to the agent.
- 4 The agent accesses your TV.

If you experience issues, please do not take the TV back to the store.

In the United States of America, call us at 1-800-SAMSUNG (1-800-726-7864) or visit us at www.samsung.com or www.samsung.com/spsn for support and warranty service.

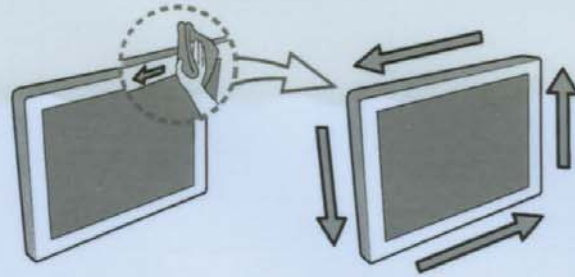

한국어

본 제품의 외관 면은 고풍택 고급 사양으로 긁힘에 약하므로 설치시 주의하세요.
청소 전, 전용 천의 먼지를 충분히 털어 주세요. 전면 캐비닛은 반드시 제공된 전용 천에 분무기를 이용하여 물을 4~6회 분사한 후, 한 방향으로 천천히 닦아 주세요. 닦았을때 물기가 많으면 얼룩이 생길 수 있습니다.
세척제로는 꼭 물만 사용해주세요.



English

This product is high glossy, Please be careful of surface scratch while installation.

Make sure to brush off the dirt on the provided cloth before cleaning the cabinet. For cleaning the front cabinet, make sure you use only the provided cloth on which to spray water 4 to 6 times before wiping it out softly in one direction. After cleaning, wipe the cabinet to remove any moisture.
Only use water as a cleansing solution.



Français

Ce produit est recouvert d'une couche de brillant vulnérable aux rayures ; il convient, par conséquent, de rester vigilant durant l'installation.

Veillez à enlever la saleté à l'aide du chiffon fourni avant de nettoyer le châssis. Pour nettoyer le meuble avant, assurez-vous de n'utiliser que le chiffon fourni. A sprgez-le d'eau 4 à 6 fois puis nettoyez en frottant dans une seule direction. Après le nettoyage, essuyez le châssis pour enlever l'humidité.

N'utilisez que de l'eau comme produit de nettoyage.



Deutsch

Dieses Produkt hat eine hochglänzende Oberfläche, die sehr leicht zerkratzt werden kann, weshalb während der Montage besondere Vorsicht geboten ist.

Vergewissern Sie sich, dass das mitgelieferte Tuch sauber ist, bevor Sie es zum Reinigen des Gehäuses verwenden. Zum Reinigen der Vorderseite verwenden Sie bitte nur das mitgelieferte Tuch, auf das sie 4 bis 6 Spritzer Wasser auftragen. Wischen Sie dann in eine Richtung vorsichtig über die Fläche. Wischen Sie das Gehäuse nach dem Reinigen trocken.
Verwenden Sie nur Wasser als Reinigungsmittel.



Italiano

Il prodotto è molto lucido sulla superficie, che si può graffiare facilmente; occorre fare attenzione durante l'installazione.

Prima di effettuare la pulizia del telaio, assicurarsi che il panno appositamente fornito sia pulito. Per pulire la parte anteriore del cabinet, assicurarsi di utilizzare solo il panno fornito, che dovrà essere spruzzato d'acqua 4 o 6 volte prima di strofinarlo delicatamente in un'unica direzione. Dopo la pulizia, asciugare il telaio per rimuovere ogni traccia di umidità.
Come sostanza pulente, utilizzare solo acqua.



Español

Este producto tiene un revestimiento muy brillante en la superficie vulnerable a arañazos; tenga mucho cuidado durante la instalación.

Elimine la suciedad del paño suministrado antes de limpiar la caja. Para limpiar el la caja frontal, asegúrese de que utiliza únicamente un paño y de que lo rocía entre 4 y 6 veces antes de pasarlo suavemente en una dirección. Después de limpiar la caja, séquela cuidadosamente para eliminar la humedad.
Limpie únicamente con agua.



Português

Este produto possui um acabamento brilhante na superfície particularmente sujeito a riscos; devem ser tomadas as devidas precauções durante a instalação.

Sacuda o pó do pano fornecido antes de limpar a caixa. Para proceder à limpeza da parte frontal, certifique-se de que utiliza apenas o pano fornecido, ligeiramente humedecido, limpando suavemente numa única direcção. Depois da limpeza, passe um pano seco sobre a caixa do aparelho para remover a humidade.

Utilize apenas água como solução de limpeza.



Polski

Ten produkt ma powierzchnię lakierowaną o wysokim połysku, która jest bardzo podatna na zarysowania, dlatego należy uważać podczas montażu.

Przed przystąpieniem do czyszczenia obudowy należy strząść brud z dołączonej szmatki. Do czyszczenia przedniej części należy używać wyłącznie załączonej szmatki, którą należy spryskać 4-6 razy wodą, a następnie przecierać powierzchnię w jednym kierunku. Po zakończeniu czyszczenia wytrzeć obudowę na sucho.

Jedynym odpowiednim środkiem czyszczącym jest woda.



Русский

Поверхность этого устройства с глянцевым покрытием легко поцарапать; соблюдайте осторожность во время установки.

Перед очисткой корпуса, сотрите с него пыль с помощью прилагаемой ткани. При чистке передней стороны корпуса используйте только прилагаемую ткань, предварительно увлажнив ее 4-6 раз распылителем влаги. Затем без лишних усилий вытирайте движениями в одном направлении. После чистки вытрите корпус до полного удаления влаги.

Используйте для чистки только воду.



Türkçe

Ürünün cilalanmış olan yüzeyi çizilmelere karşı hassastır; dolayısıyla kurulum esnasında dikkatli olunmalıdır.

Dolabı temizlemeden önce, ürüne birlikte sağlanan bezin fırça ile temizlendiğinden emin olun. Ön kabini temizlemek için yalnızca birlikte gelen kumaşı kullanın ve kumaşa 4 ila 6 kez su püskürttükten sonra tek yönlü olarak nazikçe silin. Temizledikten sonra, nemden arındırmak için dolabı silin.

Temizleme çözeltisi olarak yalnızca su kullanın.



中文

该产品为高光产品，安装时必须小心以避免划伤表面。
清洁机壳前，请确保掸去随附的布片上的灰尘。
清洁机壳时，请确保您只使用随附的布片，先在布片上喷水4到6次，然后沿着同一方向轻轻擦拭。清洁完成后，请彻底擦掉机壳上的水份。
只能使用水作为清洁溶液。



BN63-02368B-00

IMPORTANT SAFETY PRECAUTIONS

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Placing the television on a platform, stand, cabinet, table or other surface which is:
 - recommended by Samsung or sold with the product;
 - secure and stable;
 - sufficiently wider in the base than the base measurement of the television;
 - strong and large enough to support the size and weight of the television.
- Positioning the television close to the wall to avoid the possibility of the television falling when pushed.
- Ensuring your television is installed by an authorized Samsung installer.
- Following the instructions for wall mounting in the installation manual and using the mounting equipment supplied by Samsung.
- Placing the television toward the back of the furniture or surface on which it is placed.
- Ensuring that the television does not hang over the edge of the furniture or surface on which it is placed.
- Not hanging anything from or on the television.
- Anchoring both the television and the furniture on which it is placed to a suitable support especially in the case of tall furniture, such as cupboards or bookcases which exceed one metre in height. This can be done by using sturdy brackets, safety straps or mounts that are made specifically for flat screen televisions.
- Not placing any material between the television and the furniture on which it is placed.
- If the furniture on which the television is placed has drawers, cabinets or shelves under the television, taking steps to prevent children from climbing, such as installing safety latches so the doors cannot be opened.
- Keeping pets away from the television.
- Educating children about the dangers of climbing on furniture to reach the television or its control.

Failure to take these safety precautions may cause the television to fall from the stand or mounting equipment, causing damage or serious injury.

Regulatory Compliance Statements

Your Samsung product compliance class is marked in the user manual

- Federal Communications Commission (FCC) - USA
- Industry Canada Equipment Standard for Digital Equipment (ICES-003) - Canada
- Voluntary Control Council for Interference (VCCI) - Japan
- Bureau of Standards Metrology and Inspection (BSMI) - Taiwan
- Korea Communications Commission(KCC) - Republic of Korea
- Italian Post Ministry (Homologation) - Italy

FCC Class A Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Class B Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

User Information

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. If necessary, consult with your dealer or an experienced radio/television technician for additional suggestions. You may find the booklet called How to Identify and Resolve Radio/TV Interference Problems helpful. This booklet was prepared by the Federal Communications Commission. It is available from the U.S. Government Printing Office, Washington, DC 20402, Stock Number 004-000-00345-4.

The party responsible for product compliance:

SAMSUNG ELECTRONICS CO., LTD.
America QA Lab of Samsung
3351 Michelson Drive
Suite #290, Irvine, CA92612 USA

Warning

User must use shielded signal interface cables to maintain FCC compliance for the product. Provided with this monitor is a detachable power supply cord with IEC320 style terminations. It may be suitable for connection to any UL Listed personal computer with similar configuration. Before making the connection, make sure the voltage rating of the computer convenience outlet is the same as the monitor and that the ampere rating of the computer convenience outlet is equal or exceeds the monitor voltage rating. For 120 Volt applications, use only UL Listed detachable power cord with NEMA configuration 5-15P type(parallel blades) plug cap. For 240 Volt applications use only UL Listed detachable power supply cord with NEMA configuration 6-15P type (tandem blades) plug cap. This television receiver provides display of television closed captioning in accordance with Section 15.119 of the FCC rules. (TV broadcast receivers with picture screens 13 inches or larger in diameter models only)

ICES-003 Class A Notice - Avis NMB-003, Classe A

This Class A digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

ICES-003 Class B Notice - Avis NMB-003, Classe B

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

VCCI Class A Notice

この装置は、クラスA 情報技術装置です。
この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。
この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI Class B Notice

この装置は、クラスB 情報技術装置です。
この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

CCC Class A notice - China

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。
在这种情况下，可能需要用户对其干扰采取切实可行的措施。

BSMI Class A Notice

The following statement is applicable to products shipped to Taiwan and marked as Class A on the product compliance label.

警告使用者：

這是甲類資訊類產品，在居住環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。



BSMI Class A Notice

Products with the CE marking comply with the EMC Directive(2004/108/EC) and the Low Voltage Directive(2006/95/EC) issued by the Commission of the European Community.
Compliance with these directives implies conformity to the following European Norms:

- EN55022: Radio Frequency Interference
- EN55024: Electromagnetic Immunity of Information Technology Equipment
- EN61000-3-2: Power Line Harmonics
- EN61000-3-3: Voltage Fluctuations
- EN55013: Radio disturbance characteristics of broadcast receivers and associated equipments
- EN55020: Electromagnetic immunity of broadcast receivers and associated equipm

European Class A Warning

(If the user manual declares the product as Class A, following statement applies.)
This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

A급 기기 (업무용 방송통신기자재)

이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

B급 기기 (가정용 방송통신기자재)

이 기기는 가정용(B급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

Mercury Statement (LCD Monitor, LCD TV, DLP Projection TV, Projector for USA only)

Contains Mercury, Dispose According to Local, State or Federal Laws

Wiring the Mains Power Supply Plug(UK Only)

IMPORTANT NOTICE

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and, if it requires replacing, a fuse approved to BSI1362 of the same rating must be used.

Never use the plug with the fuse cover omitted if the cover is detachable. If a replacement fuse cover is required, it must be of the same colour as the pin face of the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance. However, if there is no alternative but to cut off the plug, remove the fuse and then safely dispose of the plug.

Do NOT connect the plug to a mains socket as there is a risk of shock hazard from the bared flexible cord.

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

BLUE - NEUTRAL BROWN - LIVE

As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows :

The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK. The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

WARNING:

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL, WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL , OR COLOURED GREEN OR GREEN AND YELLOW.

Italian Homologation Notice

Questo apparecchio è fabbricato in conformità al D.M.28.08.95 n.548 ed in particolare a quanto specificato nell'Art.2, comma 1.

Questo apparecchio è fabbricato nella U.E. in conformità al D.M.28.08.95 n.548 Art.2, comma 1 ed al D.M.26.03.92 Art.1

- For products produced in countries except European Community
Questo apparecchio è fabbricato in conformità al D.M.28.08.95 n.548 ed in particolare a quanto specificato nell'Art.2, comma 1.
- For products produced in European Community
Questo apparecchio è fabbricato nella U.E. in conformità al D.M.28.08.95 n.548 Art.2, comma 1 ed al D.M.26.03.92 Art.1

[BRAZIL] **Pilhas e baterias**, após seu uso, não devem ser jogadas em lixo comum. Para evitar riscos à saúde humana e ao meio ambiente, realize o descarte ambientalmente adequado, em um Serviço Autorizado Samsung.

Important Safety Instructions (UL Only)



1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

⚠ WARNING: To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.

• Ventilation

Do not place the apparatus in a rack or bookcase. Ensure that there is adequate ventilation and that you've followed that manufacturer's instructions for mounting and installation.

MPR II Compliance (MPR II applied model only)

This monitor complies with SWEDAC(MPR II) recommendations for reduced electric and magnetic fields.

ENERGYSTAR qualified model only

- Your Samsung TV is ENERGYSTAR qualified in its factory default settings. Change to certain features, settings and functionality in this TV can change the power consumption, possibly beyond the limits required for ENERGYSTAR qualification.
- As an ENERGY STAR Partner, Samsung has determined that this product or product models meets the ENERGY STAR guidelines for energy efficiency.



EU Eco-Label (EU Eco-Label applied model only)

Products which have model codes that end in XU are intended for the UK market. Samsung has not applied for Ecolabels for products with this specific model code.



Better for the environment...

- High Energy Efficiency
- Reduced CO₂ emissions
- Designed to facilitate repair and recycling

...better for you.

EU Ecolabel: HU/022/02

SAMSUNG Electronics makes an effort to develop environment-friendly product that minimizing an impact to environment through whole process from getting raw materials, production, transportation, usage and end-of-life disposal by adding 'environment' on function, price, quality, design that were the essence for product development.

These environmental characteristics are endorsed by the award of the European Eco-label (also known as the Euro Flower) issued by the European Commission as approval of the product environmental status for energy saving, facilities for recycling and a host of other features. The full list of criteria and more information on the ecolabel can be found at the web-site address: <http://www.ecolabel.eu>

Recycling Information (Take-back offer)

For recycling information for our products, please contact the company corresponding to your region of residence.

For those who reside in other countries, please contact a nearest local Samsung dealer for recycling information for the products to be treated in environmentally acceptable way.

The information of Regional Takeback Schemes can be found at Samsung's web-site.

http://www.samsung.com/recycling_compliance

CIS Only

	Символ «не для пищевой продукции» применяется в соответствии с техническим регламентом Таможенного союза «О безопасности упаковки» 005/2011 и указывает на то, что упаковка данного продукта не предназначена для повторного использования и подлежит утилизации. Упаковку данного продукта запрещается использовать для хранения пищевой продукции.
	Символ «петля Мебиуса» указывает на возможность утилизации упаковки. Символ может быть дополнен обозначением материала упаковки в виде цифрового и/или буквенного обозначения.
	Символ Кедендік одақтың 005/2011 техникалық регламентіне сәйкес қолданылады және осы өнімнің қаптамасын екінші рет пайдалануға арналмағанын және жоюға жататынын көрсетеді. Осы өнімнің қаптамасын азық-түлік өнімдерін сақтау үшін пайдалануға тыйым салынады.
	Символ қаптаманы жою мүмкіндігін көрсетеді. Символ сандық код және/немесе әріп белгілері түріндегі қаптама материалының белгісімен толықтырылуы мүмкін.



BN68-04972A-03