
Wireless IP Camera



User's Guide

Table of Contents

CHAPTER 1 INTRODUCTION.....	1
Overview	1
Physical Details - Wireless IP Camera.....	4
Package Contents	5
CHAPTER 2 BASIC SETUP	6
System Requirements.....	6
Installation - Wireless IP Camera.....	6
CHAPTER 3 VIEWING LIVE VIDEO	8
Overview	8
Requirements	8
Connecting to a Camera on your LAN	8
Connecting to a Camera via the Internet	10
Viewing Live Video	12
CHAPTER 4 ADVANCED VIEWING SETUP	14
Introduction	14
Adjusting the Video Image	14
Controlling User Access to the Video Stream	16
Making Video available from the Internet.....	17
Viewing Live Video via the Internet	20
Motion Detection Alerts	21
CHAPTER 5 WEB-BASED MANAGEMENT	23
Introduction	23
Connecting to Wireless IP Camera.....	23
Welcome Screen.....	24
Administration Menu.....	25
System Screen	26
Network Screen.....	28
Wireless Screen.....	32
DDNS Screen	35
IP Filter	37
Streamings.....	38
Video & Audio Screen.....	40
Video Access Screen	42
User Database Screen.....	44
Pan/Tilt Screen	45
Motion Detection Screen.....	47
Audio Detection Screen.....	48
E-Mail Screen	49
FTP Screen.....	51
HTTP Screen	52
SMB/CIFS Client Screen	54
Event Trigger Screen	55
Maintenance Screen	57
CHAPTER 7 TROUBLESHOOTING	62
Status Screen.....	62
Overview.....	62
Log Screen.....	62
Problems.....	62

APPENDIX A SPECIFICATIONS.....	64
Wireless IP Camera.....	64
Regulatory Approvals	64
Copyright Notice.....	66

P/N:

Copyright © 2013. All Rights Reserved.

Document Version: 1.0

All trademarks and trade names are the properties of their respective owners.

Introduction

This Chapter provides details of the Wireless IP Camera's features, components and capabilities.

Overview

The Wireless IP Camera has an Integrated Microcomputer and a high quality Mega Pixel Omni Vision CMOS Sensor, enabling it to display high quality live streaming video over your wired LAN, the Internet, and for the Wireless IP Camera, an 802.11N Wireless LAN.

Using enhanced H.264 technologies, the Wireless IP Camera is able to stream high quality video and audio directly to your PC. The high compression capabilities of H.264 reduce network bandwidth requirements to amazingly low levels.

Furthermore, with the built-in infrared LEDs, the Wireless IP camera can provide illumination around 5 meters long under low light conditions in a simple, economical manner.

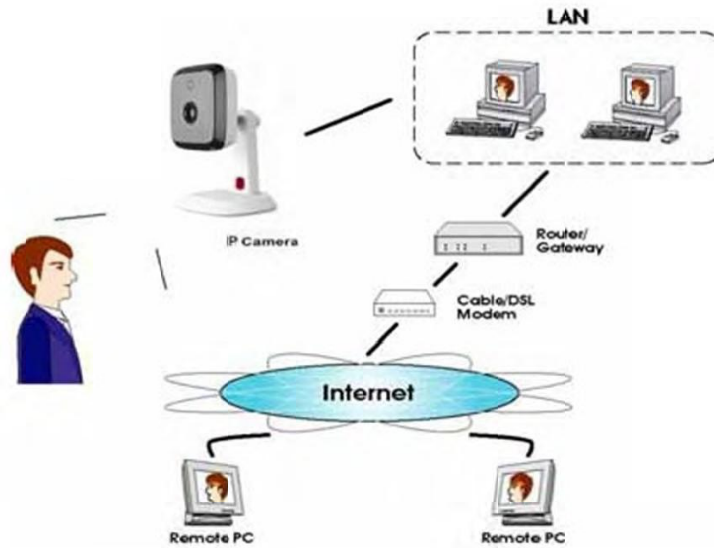


Figure 1: Wireless IP Camera

Features

- **Standalone Design.** The Wireless IP Camera is a standalone system with built-in CPU and Video encoder. It requires only a power source and a connection to your LAN or Wireless LAN.
- **Dual Video Support.** The Wireless IP Camera can support H.264 and MJPEG video for different image compression.

- **Stream Live Video to Multiple Users.** The video encoder and HTTP server built into the camera generate a ready-to-view video stream. Just connect to the camera using your Web browser to view live video.
- **Suitable for Home, Business or Public Facilities.** Whether for Home, Business or Public Facility surveillance, or just for entertainment and fun, the Wireless IP Camera has the features you need.
- **Multi-Protocol Support.** Supporting TCP/IP networking, SMTP (E-mail), HTTP and other Internet related protocols, the Wireless IP Camera can be easily integrated into your existing network.
- **IR LEDs Support.** Each Wireless IP Camera has 6 infrared LEDs . The LEDs can provide illumination around 5 meters long, that can help to output a better video quality while under low-light conditions such as indoors, on cloudy days, or in the morning or evening.
- **Motion Detection.** This feature can detect motion in the field of view. The Wireless IP Camera will compare consecutive frames to detect changes caused by the movement of large objects. This function only works indoors due to the sensitivity of the CMOS sensor. When motion is detected, an E-mail alert can be sent, or some other action may be triggered.
- **Flexible Scheduling.** You can limit access to the video stream to specified times using a flexible scheduling system. The Motion Detection feature can also have its own schedule, so it is active only when required.
- **Syslog Support.** If you have a Syslog Server, the Wireless IP Camera can send its log data to your Syslog Server.
- **Audio Support.** You can listen as well as look! Audio is encoded with the video if desired. With built-in microphone, it is useful for bi-direction voice conversation.
- **Day/Night Switch.** With the day/night switching feature, you are able to view and record better images even in the dark of night.

Internet Features

- **User-definable HTTP/HTTPS port number.** This allows Internet Gateways to use "port mapping" so the Wireless IP Camera and a Web Server can share the same Internet IP address.
- **DDNS Support.** In order to view video over the Internet, users must know the Internet IP address of the gateway used by the Wireless IP Camera. But if the Gateway has a dynamic IP address, DDNS (Dynamic DNS) is required. Since many existing Gateways do not support DDNS, this function is incorporated into the Wireless IP Camera.
- **NTP (Network-Time-Protocol) Support.** NTP allows the Wireless IP Camera to calibrate its internal clock from an Internet Time-Server. This ensures that the time stamp on Video from the Wireless IP Camera will be correct.

Security Features

- **User Authentication.** If desired, access to live video can be restricted to known users. Users will have to enter their username and password before being able to view the video stream.
- **Password-Protected Configuration.** Configuration data can be password protected, so that it only can be changed by the Wireless IP Camera Administrator.

Wireless Features

- **Supports 11n Wireless Stations.** The 802.11n standard provides for backward compatibility with the 802.11b standard, so 802.11n, 802.11b and 802.11g Wireless stations can be used simultaneously.
- **Wired and Wireless Network Support.** The Wireless IP Camera supports either wired or wireless transmission.
- **WEP Support.** Full WEP support (64/128 Bit) on the Wireless interface is provided.
- **WPA/WPA2 Support.** The WPA Personal/WPA2 Personal standard is also supported, allowing advanced encryption of wireless data.
- **WPS Support.** WPS (Wi-Fi Protected Setup) can simplify the process of connecting any device to the wireless network by using the push button configuration (PBC) on the Wireless IP Camera, or entering a PIN code if there's no button.

Physical Details - Wireless IP Camera

Front - Wireless IP Camera

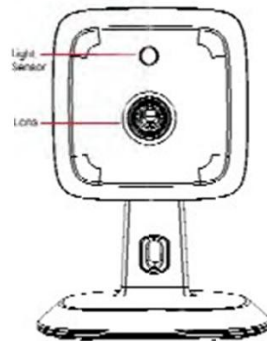


Figure 2: Front Panel

Light Sensor

This is hardware sensor to detect LUX.

Lens

No physical adjustment is required or possible for the lens, but you should ensure that the lens cover remain clean. The image quality is degraded if the lens cover is dirty or smudged.

Rear - Wireless IP Camera

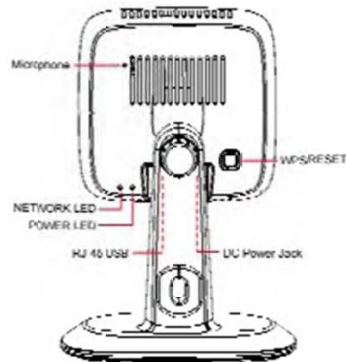


Figure 3: Rear Panel

Microphone

The built-in microphone is useful for bi-direction voice conversation.

Network/WPS LED (Green, Amber)	<p>On (Green) - Network (Wireless or LAN) connection is available.</p> <p>Off - Wireless or LAN is not connected or camera is not sending/receiving data.</p> <p>Blinking (Green) - Data is being transmitted or received via the LAN or Wireless connection.</p> <p>On (Amber) - If the LED is on for 5 seconds and then off, the WPS function is failed.</p> <p>Blinking (Amber) - WPS function is being processed.</p>
Power LED (Green)	<p>On - Power on.</p> <p>Off - No power.</p> <p>Blinking - The Power LED will blink during start up. This will take 55 to 57 seconds.</p>
LAN port	<p>Use the provided RJ-45 USB cable to connect your Wireless IP Camera to a 10/100BaseT hub or switch.</p> <p>Note:</p> <ul style="list-style-type: none"> • Plugging in the LAN cable will disable the Wireless interface. Only 1 interface can be active at any time. • The RJ-45 USB cable should only be connected or disconnected when the camera is powered OFF. Attaching or detaching the RJ-45 USB cable while the camera is powered on does NOT switch the interface between wired and wireless.
DC Power Input	<p>Connect the supplied 12V power adapter here. Do not use other power adapters; doing so may damage the camera.</p>
WPS/Reset Button	<p>Push the WPS button on the device and on your other wireless device to perform WPS function that easily creates an encryption-secured wireless connection automatically.</p> <ul style="list-style-type: none"> • WPS PBC Mode. When pressed and released (less than 3 seconds), the Wireless IP Camera will be in the WPS PBC mode (Auto link mode). • WPS Pin Code Mode. When pressed and held for over 3 seconds, the Wireless IP Camera will be in the WPS Pin Code mode. • Reset to manufacturer default valued and reboot. When pressed and held over 10 seconds, the settings of Wireless IP Camera will be set to their default values.

Package Contents

The following items should be included: If any of these items are damaged or missing, please contact your dealer immediately.

1. Wireless IP Camera x 1
2. Wall-Stand x 1
3. DC Power adapter x 1
4. USB to Ethernet cable x 1

Basic Setup

This Chapter provides details of installing and configuring the Wireless IP Camera.

System Requirements

- To use the wired LAN interface, a standard 10/100BaseT hub or switch and network cable is required.
- To use the Wireless interface on the wireless model, other Wireless devices must be compliant with the IEEE802.11b, IEEE802.11g or IEEE 802.11n specifications. All Wireless stations must use compatible settings.



The default Wireless settings are:

Mode: Infrastructure
SSID: ANY
Wireless Security: Disabled
Domain: USA
Channel No.: Auto

Installation - Wireless IP Camera

1. Assemble the Camera

Attach the Camera Stand to the camera.

2. Connect the RJ-45 USB Cable

Connect the Wireless IP Camera to a 10/100BaseT hub or switch, using the supplied RJ-45 USB cable and a standard LAN cable.



For this Model, it will disable the Wireless Interface. The Wireless and LAN interfaces cannot be used simultaneously. Using the LAN interface is recommended for initial configuration. After the Wireless settings are correct, the Wireless interface can be used.

The first time you connect to the camera, you should connect the RJ-45 USB cable and configure the Wireless IP Camera with appropriate settings. Then you can unplug the LAN cable and power off the camera. The Wireless IP Camera will be in wireless interface when you power on the camera again.

3. Power Up

Connect the supplied 12V power adapter to the Wireless IP Camera and power up. Use only the power adapter provided. Using a different one may cause hardware damage.

4. Check the LEDs

- The Power LED will turn on briefly, then start blinking. It will blink during startup, which takes 55 to 57 seconds. After startup is completed, the Power LED should remain ON.
- The Network LED should be ON.

For more information, refer to Physical Details - Wireless IP Camera in Chapter 1.

Viewing Live Video

This Chapter provides basic information about viewing live video.

Overview

This Chapter has details of viewing live video using Internet Explorer.

But many other powerful features and options are available:

- The camera administrator can also adjust the Video Stream, and restrict access to the video stream to known users by requiring viewers to supply a username and password. See Chapter 4 - Advanced Viewing Setup for details.
- To make Live Video from the camera available via the Internet, your Internet Gateway or Router must be configured correctly. See Making Video available from the Internet in Chapter 4 - Advanced Viewing Setup for details.

Requirements

To view the live video stream generated by the Wireless IP Camera, you need to meet the following requirements:

- Windows XP, 32-bit Windows Vista/Windows 7.
- Internet Explorer 7 or later, Firefox 3.0 or later.

Connecting to a Camera on your LAN

To establish a connection from your PC to the Wireless IP Camera:

1. Start Internet Explorer.
2. In the Address box, enter "HTTP:///" and the IP Address of the Wireless IP Camera.
3. When you connect, the following screen will be displayed.

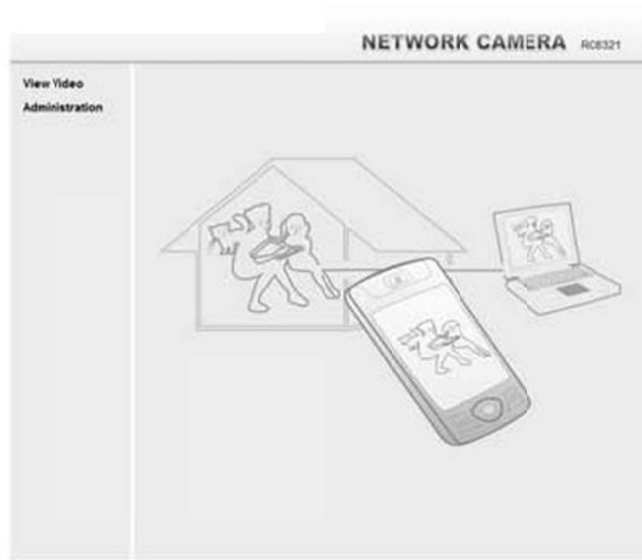


Figure 4: Home Screen

4. Click View Video.
5. If the Administrator has restricted access to known users, you will then be prompted for a username and password.
Enter the name and password assigned to you by the Wireless IP Camera administrator.
6. The first time you connect to the camera, you will be prompted to install decoders.
Choose "I accept the terms of the license agreement" and click "OK".
7. Video will start playing automatically. There may be a delay of a few seconds while the video stream is buffered.

Connecting to a Camera via the Internet

You can NOT connect to a camera via the Internet unless the camera Administrator has configured both the camera and the Internet Gateway/Router used by the camera.

See Making Video available from the Internet in Chapter 4 - Advanced Viewing Setup for details of the required configuration.

Also, you need a broadband Internet connection to view video effectively. Dial-up connections are NOT supported.

To establish a connection from your PC to the Wireless IP Camera via the Internet:

1. Obtain the following information from the Administrator of the camera you wish to connect to:
 - Internet IP Address or Domain Name of the camera.
 - Port number for HTTP connections.
 - Login (username, password) if required.
2. Start Internet Explorer.
3. In the Address box, enter the following:

`HTTP://Internet_Address:port_number`

Where Internet_Address is the Internet IP address or Domain Name of the camera, and port_number is the port number used for HTTP (Web) connections to the camera.

Examples using an IP address:

`HTTP://203.70.212.52:1024`

Where the Internet IP address is 203.70.212.52 and the HTTP port number is 1024.

Example using a Domain Name:

`HTTP://mycamera.dyndns.tv:1024`

Where the Domain name (using DDNS in this example) is mycamera.dyndns.tv and the HTTP port number is 1024.

4. When you connect, the following screen will be displayed.

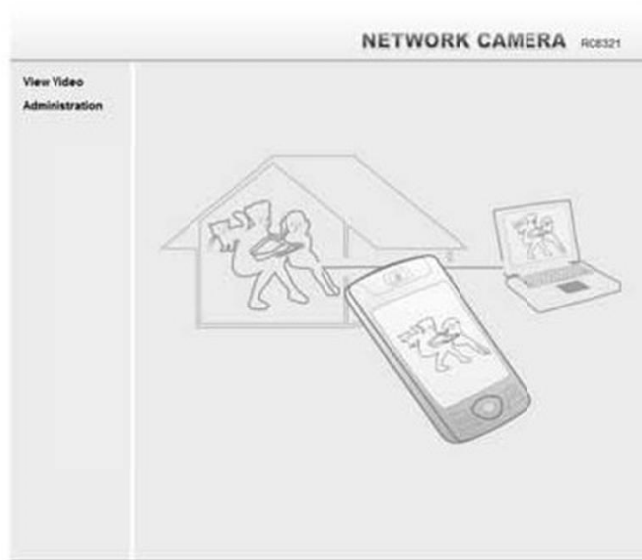


Figure 5: Home Screen

5. Click View Video.
6. If the Administrator has restricted access to known users, you will then be prompted for a username and password.
Enter the name and password assigned to you by the Wireless IP Camera administrator.
7. The first time you connect to the camera, you will be prompted to install decoders.
Choose "I accept the terms of the license agreement" and click "OK".
8. Video will start playing automatically. There may be a delay of a few seconds while the video stream is buffered.

Viewing Live Video

After installing the ActiveX component, you will be able to view the live video stream in its own window, as shown below.

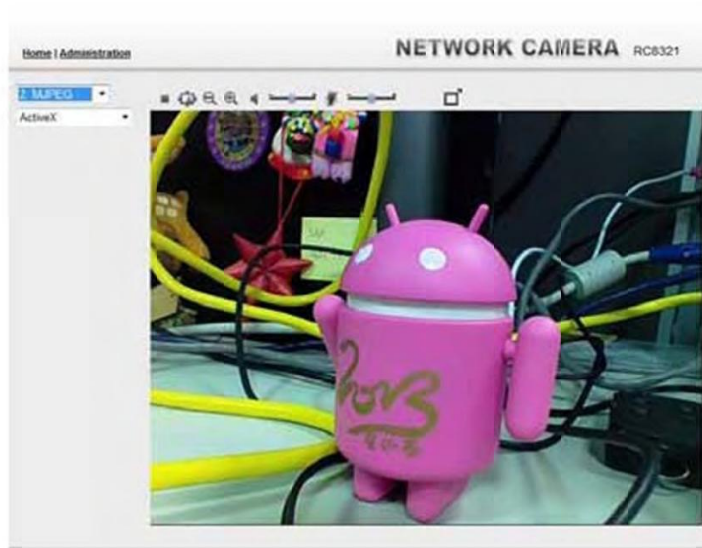


Figure 6: View Video Screen

There are a number of options available on this screen, accessed by select list, button or icon. See the table below for details.

Note: The options can only be configured while using IE browser. Other browsers can just view the video rather than configuration. If the video still cannot be viewed, please install the decoders to solve this problem. You can install it from the following screens:

- View Video Screen (preferred)

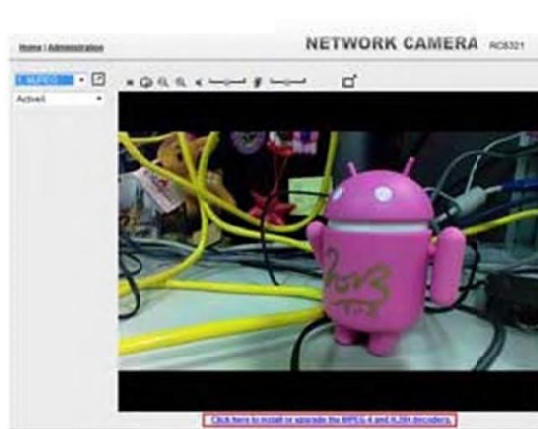













Figure 7: Install Decoders

- Motion Detection Screen

General Options

These options are always available, regardless of the type of camera you are connected to.

	Streaming. Use this drop-down list to select the desired streaming.
	Full Size. When using high-resolution mode (1280*720), click this button to see the full size of the image.
	Select the desired option from the drop-down list.
	Use this icon to start/stop viewing.
	Use this icon to make the image back to original size.
	Zoom Out. A digital zoom out feature is available. To zoom out the window, click this icon.
	Zoom In. A digital zoom in feature is available. To zoom in the window, click this icon.
	Speaker On/Off. Use this button to turn the PC's speaker on or off.
	Audio Upload On/Off. Use this button to toggle the microphone on or off.
	Volume. If Speaker or Microphone is enabled, use this slider to adjust the volume.
	Full Screen Display. Click this button to see the full screen of the image.

Advanced Viewing Setup

This Chapter provides information about the optional settings and features for viewing video via the Wireless IP Camera. This Chapter is for the Camera Administrator only.

Introduction

This chapter describes some additional settings and options for viewing live Video:

- Adjusting the video image
- Controlling user access to the live video stream
- Making video available from the Internet
- Using the Motion Detection feature

Adjusting the Video Image

If necessary, the Wireless IP Camera Administrator can adjust the Video image.

To Adjust the Video Image:

1. Connect to the Web-based interface of the Wireless IP Camera. (See Chapter 5 - Web-based Management for details.)
2. Select Administration, then Streamings. You will see a screen like the example below.



Figure 8: Streamings Screen

3. Make the required adjustments, as explained below, and save your changes.

Default Streaming Channel	Select the default channel for streaming from the drop-down list.
Streaming 1 Settings	
Video Format	Select the desired format from the list.
Resolution	Select the desired video resolution format.
Video Quality Control	<ul style="list-style-type: none"> Constant Bit Rate: Select the desired bit rate. The default is set to 4.0 Mbps. Fixed Quality: Select the desired option. The default fix quality is set to Normal.
GOV Length	Adjust the GOV interval in frame base. "2" means 1 I frame and 1 P Frame. "3" means 1 I frame and 2 P Frames. Enter the desired value between 2 and 150.
Max. Frame Rate	Select the desired Maximum frame rate for the video stream. The default value is 30.
User Defined URI	You may enter the URI up to 32 characters long for accessing the live video from camera through cell phone connection.
Streaming 2/3 Settings	
Enable	Check the box if you want to enable the streaming.
Video Format	Select the desired format from the list.
Resolution	Select the desired video resolution format.
Video Quality Control	<ul style="list-style-type: none"> Constant Bit Rate: Select the desired bit rate. The default is set to 1.0 Mbps. Fixed Quality: Select the desired option. The default fix quality is set to Normal.
GOV Length	Adjust the GOV interval in frame base. "2" means 1 I frame and 1 P Frame. "3" means 1 I frame and 2 P Frames. Enter the desired value between 2 and 150.
Max. Frame Rate	Select the desired Maximum frame rate for the video stream. The default value is 30.
User Defined URI	You may enter the URI up to 32 characters long for accessing the live video from camera through cell phone connection.

Controlling User Access to the Video Stream

By default, anyone can connect to the Wireless IP Camera and view live Video at any time.

If desired, you can limit access to scheduled times, and also restrict access to known users.

To Control User Access to Live Video:

1. Connect to the Web-based interface of the Wireless IP Camera. (See Chapter 5 - Web-based Management for details.)
2. Select Administration, then Video Access.
3. Set the desired options for Access.

Access

Select the desired option as required:

- If the User Access is enabled, users will be prompted for a username and password when they connect to the camera for viewing video.
- When Video Access is enabled, viewing video is only available during the scheduled periods, and unavailable at other times. If this option is selected, you need to define a schedule; otherwise it is always disabled.

However, viewing video is still possible by logging in as the Administrator.




Figure 9: Controlling User Access

See Chapter 5 - Web-based Management for further details about using the Video Access and User Database screens.

Making Video available from the Internet

If your LAN is connected to the Internet, typically by a Broadband Gateway/Router and Broadband modem, you can make the Wireless IP Camera available via the Internet. You will need to configure your Router or Gateway to allow connections from the Internet to the camera.

Router/Gateway Setup

Your Router or Gateway must be configured to pass incoming TCP (HTTP) connections (from Internet Viewers) to the Wireless IP Camera. The Router/Gateway uses the Port Number to determine which incoming connections are intended for the Wireless IP Camera.

This feature is normally called Port Forwarding or Virtual Servers, and is illustrated below. The Port Forwarding/Virtual Server entry tells the Router/Gateway that incoming TCP connections on port 1024 should be passed to the Wireless IP Camera. If necessary, check the user manual for your Router/Gateway for further details.

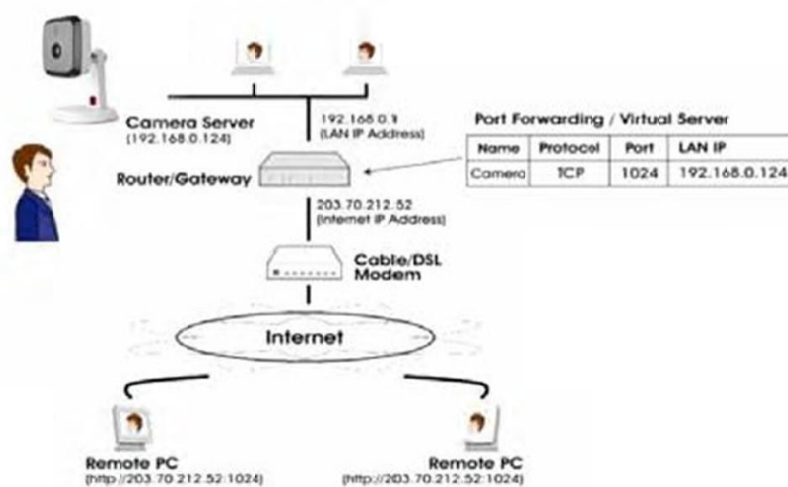


Figure 10: Connecting via the Internet



The "Port" for the Port Forwarding / Virtual Server entry above is the "Secondary Port" number specified on the Network screen of the Wireless IP Camera.

Wireless IP Camera Setup

The Wireless IP Camera configuration does NOT have to be changed, unless:

- You wish to change the port number from the default value.
- You wish to use the DDNS (Dynamic DNS) feature of the Wireless IP Camera.

HTTPS Port Configuration

Normally, HTTP (Web) connections use port 80. Since the Wireless IP Camera uses HTTP, but port 80 is likely to be used by a Web Server, you can use a different port for the Wireless IP Camera. This port is called the Secondary Port.

The default HTTP/HTTPS Secondary Port is 1024/1025. If you prefer to use a different port number, you can specify the port number on the Wireless IP Camera's Network screen, as shown below.



The screenshot shows a configuration window titled "HTTP/HTTPS:". It contains the following elements:

- Administrator:** A dropdown menu currently set to "HTTPS".
- Viewer:** A dropdown menu currently set to "HTTP".
- HTTP Secondary Port:** A checkbox that is unchecked, followed by a text input field containing "1024" and a small note "(1024-65535)".
- HTTPS Secondary Port:** A checkbox that is unchecked, followed by a text input field containing "1025" and a small note "(1024-65535)".

Figure 11: Network Screen

See Chapter 5 - Web-based Management for further details on using the Network screen.



Viewers need to know this port number in order to connect and view live Video, so you must inform viewers of the correct port number.

DDNS (Dynamic DNS)

Many internet connections use a "Dynamic IP address", where the Internet IP address is allocated whenever the Internet connection is established.

This means that other Internet users don't know the IP address, so can't establish a connection. DDNS is designed to solve this problem, by allowing users to connect to your LAN using a domain name, rather than an IP address.

To use DDNS:

1. Register for the DDNS service with a supported DDNS service provider. You can then apply for, and be allocated, a Domain Name.
2. Enter and save the correct DDNS settings on the DDNS screen of the Wireless IP Camera.
3. Both Router and Camera should use the same port number for DDNS service.

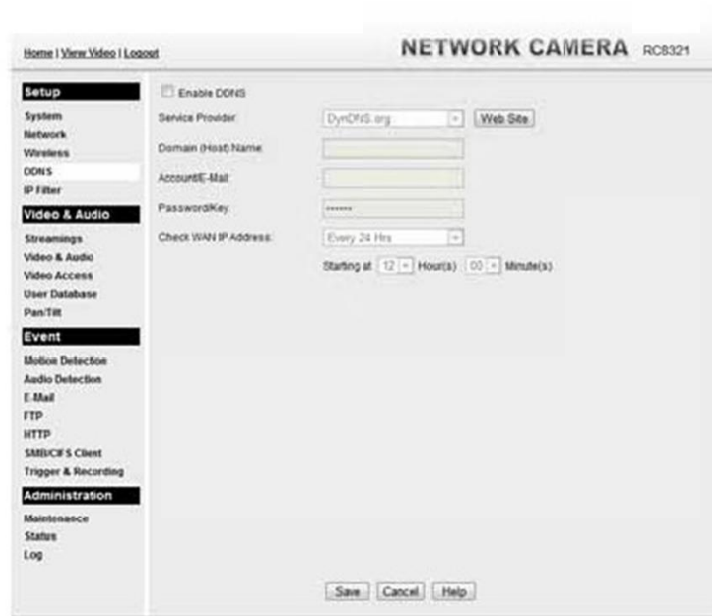


Figure 12: DDNS Screen

4. Operation is then automatic:

- The Wireless IP Camera will automatically contact the DDNS server whenever it detects that the Internet IP address has changed, and inform the DDNS server of the new IP address.
- Internet users can then connect to the camera using the Domain Name allocated by the DDNS service provider.

Example: HTTP://mycamera.dyndns.tv:1024

mycamera.dyndns.tv is domain host name. 1024 is the port number.

Viewing Live Video via the Internet

Clients (viewers) will also need a broadband connection; dial-up connections are NOT recommended.

Viewing Live Video Using your Web Browser

If using your Web browser, you need to know the Internet IP address (or the Domain name) of the camera's Router/Gateway, and the correct port number.

Enter the Internet address of the Router/Gateway, and its port number, in the Address (or Location) field of your Browser.

Example - IP address:

HTTP://203.70.212.52:1024

Where the Router/Gateway's Internet IP address is 203.70.212.52 and the "Secondary Port" number on the Wireless IP Camera is 1024.

Example - Domain Name:

HTTP://mycamera.dyndns.tv:1024

Where the Router/Gateway's Domain name is mycamera.dyndns.tv and the "Secondary Port" number on the Wireless IP Camera is 1024.

Motion Detection Alerts

The Motion Detection feature can generate an Alert when motion is detected.

The Wireless IP Camera will compare consecutive frames to detect changes caused by the movement of large objects.

But the motion detector can also be triggered by:

- Sudden changes in the level of available light
- Movement of the camera itself.

Try to avoid these situations. The motion detection feature works best in locations where there is good steady illumination, and the camera is mounted securely. It cannot be used outdoors due to the sensitivity of the CMOS sensor.

Note: The Motion Detection settings can only be configured while using IE browser.

To Use Motion Detection Alerts

Using the Web-based interface on the Wireless IP Camera, select the Motion Detection screen, then configure this screen as described below.

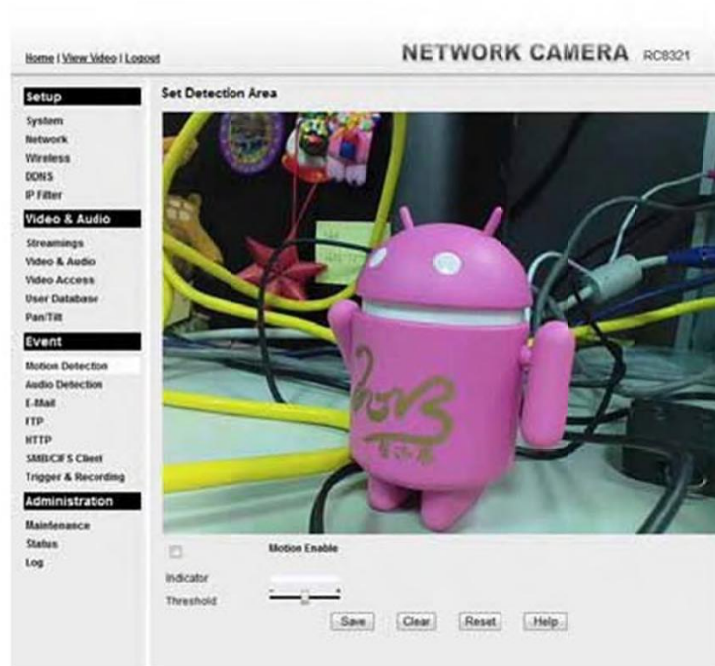


Figure 13: Motion Detection

1. Enable the Motion Detection feature.
2. Set the area or areas of the video image to be examined for movement. You can define up to 4 areas, and set the motion threshold individually for each area.
3. If using a schedule, define the desired schedule in Trigger & Recording screen.
4. Save your changes.



If the Motion Detection feature is enabled, but the related options in the Trigger & Recording screen are not enabled, then the only action when motion is detected is to log this event in the system log.

Web-based Management

This Chapter provides Setup details of the Wireless IP Camera's Web-based Interface. This Chapter is for the Camera Administrator only.

Introduction

The Wireless IP Camera can be configured using your Web Browser. The Wireless IP Camera must have an IP address which is compatible with your PC.

Connecting to Wireless IP Camera

- If using only your Web Browser, use the following procedure to establish a connection from your PC to the Wireless IP Camera:
- Once connected, you can add the Wireless IP Camera to your Browser's Favorites or Bookmarks.

Connecting using your Web Browser

1. Start your WEB browser.
2. In the Address box, enter "HTTP://" and the IP Address of the Wireless IP Camera.
3. You will then be prompted for a username and password.
 - If using the default values, enter administrator for the name, and leave the password blank.
 - Otherwise, enter the Administrator ID and Administrator Password set on the Maintenance screen.

Welcome Screen

When you connect, the following screen will be displayed.



Figure 14: Welcome Screen

The menu options available from this screen are:

- View Video - View live Video using your Web Browser. See Chapter 3 - Viewing Live Video for details.
- Administration - Access the Administration menu.

Administration Menu

Clicking on Administration on the menu provides access to all the settings for the Wireless IP Camera.

The Administration menu contains the following options:

Setup

- System
- Network
- Wireless
- DDNS
- IP Filter

Video & Audio

- Streamings
- Video & Audio
- Video Access
- User Database
- Pan/Tilt

Event

- Motion Detection
- Audio Detection
- E-Mail
- FTP
- HTTP
- SMB/CIFS Client
- Trigger & Recording

Administration

- Maintenance
- Status
- Log

System Screen

After clicking Administration on the main menu, or selecting System on the Administration menu, you will see a screen like the example below.

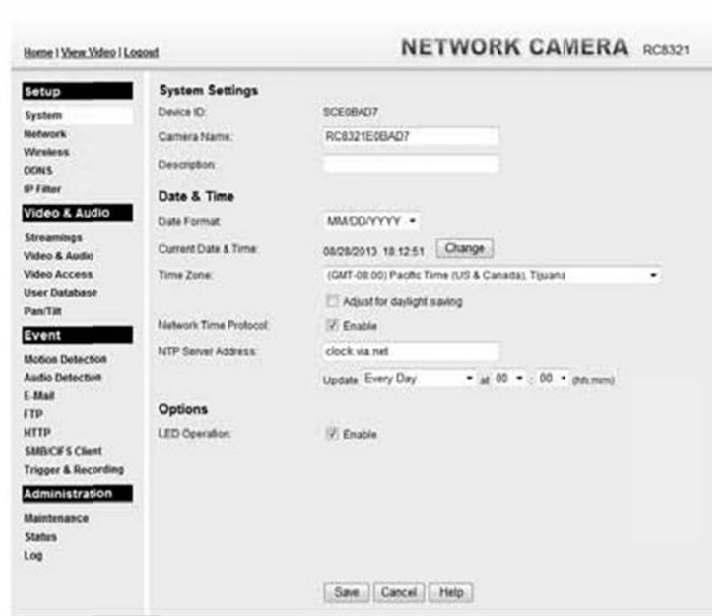


Figure 15: System Screen

Data - System Screen

System Settings	
Device ID	This displays the ID for the Wireless IP Camera.
Camera Name	Enter the desired name for the Wireless IP Camera.
Description	This field is used for entering a description, such as the location of the Wireless IP Camera.
Date & Time	
Date Format	<p>Select the desired date format, it will also be used to display the date and time as an overlay on the video image.</p> <p>The abbreviations used to predefine the date formats are list as follows:</p> <ul style="list-style-type: none"> • YYYY-MM-DD = Year-Month-Day, e.g. 2006-01-31 • MM/DD/YYYY = Month/Day/Year, e.g. 01/31/2006 • DD/MM/YYYY = Day/Month/Year, e.g. 31/01/2006
Current Date & Time	<p>This displays the current date and time on the camera.</p> <p>If it's not correct, click the Change button to modify the date/time settings. This button will open a sub-screen where you have 2 options:</p> <ul style="list-style-type: none"> • Set the camera's date and time to match your PC. • Enter the correct date and time.

Time Zone	<p>Choose the Time Zone for your location from the drop-down list.</p> <p>If your location is currently using Daylight Saving, please enable the Adjust for daylight saving checkbox.</p>
Network Time Protocol	<p>Enable or disable the Time Server feature as required.</p> <p>If Enabled, the Wireless IP Camera will contact a Network Time Server at regular intervals and update its internal timer.</p>
NTP Server Address	<p>Enter the address for the desired NTP server.</p>
Update	<p>The Schedule determines how often the Wireless IP Camera contacts the NTP Server.</p> <p>Select the desired options.</p>
LED Operation	<p>Enable this if you want to use this function.</p>

Network Screen

This screen is displayed when the Network option is clicked.

The screenshot shows the 'NETWORK CAMERA RC8321' configuration interface. On the left is a navigation menu with categories: Setup (System, Network, Wireless, DNS, IP Filter), Video & Audio (Streamings, Video & Audio, Video Access, User Database, Pan/Tilt), Event (Motion Detecton, Audio Detection, E-Mail, FTP, HTTP, SMB/CIFS Client, Trigger & Recording), and Administration (Maintenance, Status, Log). The 'Network' option is selected. The main area is divided into two columns. The left column lists connection types: Internet Connection Type, DNS Server Address, WINS Address, HTTP/HTTPS, RTP/RTSP, Multicast RTP/RTSP, UPnP, Bonjour, and CoS. The right column contains configuration options for each. For Internet Connection Type, 'Obtain Address Automatically (DHCP)' is selected. For WINS Address, 'Obtain WINS address automatically' is selected. For HTTP/HTTPS, 'Administrator' is set to 'HTTP' and 'Views' to 'HTTP'. For RTP/RTSP, 'RTSP Port' is 554, 'RTP Data Port' is 5000, and 'Max RTP Data Packet' is 1400. For Multicast RTP/RTSP, 'Enable Multicast' is checked, and 'Video Address', 'Video Port', 'Audio Address', and 'Audio Port' are all set to 224. For UPnP, 'Enable Discovery' is checked. For Bonjour, 'Enable Bonjour Service' is unchecked. For CoS, 'Enable CoS Mode' is unchecked and 'DSCP' is 10. At the bottom are 'Save', 'Cancel', and 'Help' buttons.

Category	Option	Value	Notes
Internet Connection Type	Obtain Address Automatically (DHCP)	Selected	It takes effect only when network is Ethernet or Wireless.
	Use the following DNS server address	Unselected	
WINS Address	Obtain WINS address automatically	Selected	It takes effect only when the "SMB/CIFS" is enabled.
	Use the following WINS address	Unselected	
HTTP/HTTPS	Administrator	HTTP	
	Views	HTTP	
RTP/RTSP	RTSP Port	554	(554, 1024-65535)
	RTP Data Port	5000	(1024-65494, even values only)
	Max RTP Data Packet	1400	bytes (40-1400)
	Enable Multicast	Checked	
Multicast RTP/RTSP	Video Address	224	(Streaming 1 only)
	Video Port	224	(1024-65534, even values only)
	Audio Address	224	
	Audio Port	224	(1024-65534, even values only)
UPnP	Enable Discovery	Checked	
	Enable Traversal (Port Mapping)	Unselected	
Bonjour	Enable Bonjour Service	Unselected	
CoS	Enable CoS Mode (for Video and Audio)	Unselected	
	DSCP	10	(0-63)

Figure 16: Network Screen

Data - Network Screen

Network	
Internet Connection Type	<p>There are 3 connection types:</p> <ul style="list-style-type: none"> • Obtain Address Automatically (DHCP): If selected, the Wireless IP Camera will obtain its IP address and related information from a DHCP Server. Only select this option if your LAN has a DHCP Server. • Static IP Address: If selected, you must assign the following data to the Wireless IP Camera. <ul style="list-style-type: none"> • IP Address - Enter an unused IP address from the address range used on your LAN. • Subnet Mask - Use the same value as PCs on your LAN. • Default Gateway - Use the same value as PCs on your LAN. • PPPoE (PPP over Ethernet): This is the most common login method, widely used with DSL modems. Normally, your ISP will have provided some software to connect and login. This software is no longer required, and should not be used. <ul style="list-style-type: none"> • Username - The user name (or account name) provided by your ISP. • Password - Enter the password for the login name above.
Obtain DNS server address automatically	<p>If selected, the Wireless IP Camera will use the DNS address or addresses provided by the DHCP server. This option is only available if the IP address setting is Obtain an IP address Automatically.</p>
Use the following DNS server address	<p>Primary DNS server - Use the same value as PCs on your LAN. Normally, your ISP will provide this address.</p> <p>Secondary DNS server - This is optional. If entered, this DNS will be used if the Primary DNS does not respond.</p>
WINS Address	<p>There are 2 options:</p> <ul style="list-style-type: none"> • Obtain WINS address automatically - If selected, the Wireless IP Camera will obtain its IP address from DHCP server. • Use the following WINS address - Enter the IP address of your WINS server.

HTTP/HTTPS	<p>This sets the port number for HTTP/HTTPS connections to the Camera, whether for administration or viewing video.</p> <p>The HTTP (HyperText Transfer Protocol) is used for the standard of transferring files (text, graphic images and other multimedia files) on the World Wide Web. The default HTTP port is 1024.</p> <p>HTTPS (Hypertext Transfer Protocol Secure) can provide more secure communication with the SSL/TLS protocol, which support data encryption to HTTP clients and servers. The default HTTPS port is 1025.</p> <p>The Secondary port can be used for DDNS, other service and when more than 2 cameras are in use.</p> <p>If enabled, you can connect using either port 80 or the Secondary port. You must enter the Secondary port number (between 1024 to 65535) in the field provided.</p> <p>Note that when using a port number which is not 80, you must specify the port number in the URL. For example, if the Camera's IP address was 192.168.1.100 and the Secondary port was 1024, you would specify the URL for the Camera as follows:</p> <p style="text-align: center;">http://192.168.1.100:1024</p>
RTP/RTSP	<p>The RTSP (Real Time Streaming Protocol), a standard for connected client(s) to control streaming data (MPEG-4) over the World Wide Web. Enter the RTSP Port number (between 1024 and 65535) in the field provided. The default RTSP Port is 554.</p> <p>The RTP (Real Time Transport Protocol), an Internet protocol for transmitting real-time data such as audio and video.</p> <p>Max RTP Data Packet field will let users limit the size of the file. Enter the desired value between 400 and 1400.</p> <p>Note: RTSP and RTP settings are for cell phone only.</p>
Multicast RTP/RTSP	
Enable Multicast	Enable the feature as required.
Video Address	Enter the address of video (Streaming 1 only).
Video Port	Enter the desired value (between 1024 to 65534) in the field provided. The number you entered must be even values.
Audio Address	Enter the address of the audio.
Audio Port	Enter the desired value (between 1024 to 65534) in the field provided. The number you entered must be even values.
Time to Live	Enter the desired length of time, if the packets fail to be delivered to their destination within. The Time to Live you entered must be in-between 1 to 255.
UPnP	
Enable Discovery	If enabled, the Wireless IP Camera will broadcast its availability through UPnP. UPnP compatible systems such as Windows XP will then be able to detect the presence of the Wireless IP Camera.

Enable Traversal	If enabled, HTTP connections (from your Web Browser) can use secondary port instead of port 80 (the standard HTTP port) to access the camera.
Bonjour	
Enable Bonjour Service	If enabled, the Wireless IP Camera can be accessed through a "Bonjour" enabled browser, such as Microsoft Internet Explorer (with a Bonjour plug-in) or Safari browser. You can also find other Bonjour-enabled devices on your network.
QoS	
Enable QoS Mode	If enabled, the throughput level (for Video and Audio) is guaranteed through QoS (Quality of Service).
DSCP	Enter the desired value of Differentiated Services Code Point (DSCP). The value must be between 0 and 63.

Wireless Screen

This screen is displayed when the Wireless menu option is clicked.

Figure 17: Wireless Screen

Data - Wireless Screen

Wireless Network	
Site Survey	Click the "Site Survey" button and select from a list of available APs.
WSC PIN Code	It displays the WSC PIN code number for the camera.
SSID	This must match the value used by other devices on your wireless LAN. The Default is ANY. Note! The SSID is case sensitive.
Domain	Select your region from the drop-down list.
Channel No.	<ul style="list-style-type: none"> In Infrastructure mode, this setting is ignored. The Wireless IP Camera will use the Channel set on the Access Point. For Ad-hoc mode, select the Channel you wish to use on your Wireless IP Camera. Other Wireless stations should use the same setting. If you experience interference (shown by lost connections and/or slow data transfers) you may need to experiment with different channels to see which one is the best.

Security	
Security System	<p>Select the desired option, and then enter the settings for the selected method:</p> <ul style="list-style-type: none"> • Disabled - No security is used. Anyone using the correct SSID can connect to your network. This is default. • WEP - The 802.11b standard. Data is encrypted before transmission, but the encryption system is not very strong. • WPA/WPA2 Personal - Like WEP, data is encrypted before transmission. WPA is more secure than WEP, and should be used if possible. WPA Personal is the version of WPA which does NOT require a Radius Server on your LAN. • WPA Personal - Data is encrypted using the WPA-PSK standard. This is a later standard than WEP, and provides much better security than WEP. If all your Wireless stations support WPA-PSK, you should use WPA-PSK rather than WEP. • WPA2 Personal - This is a further development of WPA-PSK, and offers even greater security, using the AES (Advanced Encryption Standard) method of encryption.
WEP	
Authentication Type	<p>Normally this can be left at the default value of "Automatic." If that fails, select the appropriate value - "Open System" or "Shared Key." Check your wireless card's documentation to see what method to use.</p> <p>Note: In Infrastructure mode, either setting will normally work, since most Access Points can use both methods.</p>
WEP Encryption	<p>Select the WEP Encryption level:</p> <ul style="list-style-type: none"> • 64 Bit Keys (10 Hex chars) • 128 Bit Keys (26 Hex chars) • 64 Bit Keys (5 ASCII chars) • 128 Bit Keys (13 ASCII chars)
Passphrase	<p>Enter a word or group of printable characters in the Passphrase box and click the "Generate Key" button to automatically configure the WEP Key(s). If encryption strength is set to 64-bit, then each of the four key fields will be populated with key values. If encryption strength is set to 128-bit, then only the selected WEP key field will be given a key value.</p>
WEP Keys	<ul style="list-style-type: none"> • Use the radio buttons to select the default key. • Enter the key value you wish to use. Other stations must have the same key values. • Keys must be entered in Hex. Hex characters are the digits (0 ~ 9) and the letters A ~ F. • Click Clear Keys to set the Keys to be blank. <p>Click this button to test the wireless connection.</p>
Test Wireless	

WPA/WPA2 Personal	
Shared Key	Enter the key value. Data is encrypted using a key derived from the network key. Other Wireless Stations must use the same network key. The PSK must be from 8 to 63 characters or 64 hex characters in length.
WPA Personal	
Shared Key	Enter the key value. Data is encrypted using a key derived from the network key. Other Wireless Stations must use the same network key. The PSK must be from 8 to 63 characters or 64 hex characters in length.
WPA2 Personal	
Shared Key	Enter the key value. Data is encrypted using a key derived from the network key. Other Wireless Stations must use the same network key. The PSK must be from 8 to 63 characters or 64 hex characters in length.

DDNS Screen

Many Internet connections use a "Dynamic IP address", where the Internet IP address is allocated whenever the Internet connection is established. This means that other Internet users don't know the IP address, so can't establish a connection. DDNS is designed to solve this problem, as follows:

- You must register for the DDNS service with a DDNS service provider. The DDNS Service provider will allocate a Domain Name to you upon request.
- The DDNS settings on the DDNS screen above must be correct.
- The Wireless IP Camera will then contact the DDNS server whenever it detects that the Internet IP address has changed, and inform the DDNS server of the new IP address. (The Check WAN IP Address determines how often the Wireless IP Camera checks if the Internet IP address has changed.)

This system allows other internet users to connect to you using the Domain Name allocated by the DDNS service provider.

This screen is displayed when the DDNS menu option is clicked.

Figure 18: DDNS Screen

Data - DDNS Screen

DDNS	
Enable DDNS	Enable or disable the DDNS function, as required. Only enable this feature if you have registered for the DDNS Service with a DDNS Server provider.
Service Provider	Choose a service provider from the list.
Web Site Button	Click this button to open a new window and connect to the Web site for the selected DDNS service provider.

Domain (Host) Name	Enter the Domain Name (Host Name) allocated to you by the DDNS Server provider.
Account/E-Mail	Enter the login name for the DDNS account.
Password/Key	Enter the password for the DDNS account.
Check WAN IP Address	<p>Set the schedule for checking if the Internet IP address has changed. If the IP address has changed, the DDNS Server will be notified.</p> <p>NOTE: If the DDNS Service provided some software to perform this IP address update or notification, you should NOT use this software. The update is performed by the camera.</p>

IP Filter

The IP Filter feature allows administrator to control Wireless IP Camera access by filtering IP addresses. This screen is displayed when the IP Filter menu option is clicked.

Home | View Video | Logout

NETWORK CAMERA RC6321

Setup

System
Network
Wireless
DDNS
IP Filter
Video & Audio
Streamings
Video & Audio
Video Access
User Database
Pan/Tilt
Event
Motion Detection
Audio Detection
E-Mail
FTP
HTTP
SMB/CIFS Client
Trigger & Recording
Administration
Maintenance
Status
Log

IP Filter: Disable

Single IP Address 1:

Single IP Address 2:

Single IP Address 3:

Single IP Address 4:

Single IP Address 5:

Single IP Address 6:

Single IP Address 7:

Single IP Address 8:

Single IP Address 9:

Single IP Address 10:

Save Cancel Help

Figure 19: IP Filter Screen

Data - IP Filter Screen

IP Filter	
IP Filter	Select the desired method to perform the IP address (or addresses) filtering function.
Single/Range	Select to perform either single IP address or a range of IP addresses that you desired.
IP Address	Enter an IP address or a range of IP addresses you would like to allow or deny.

Streamings

This screen is displayed when the Streamings menu option is clicked.

If you want to view streaming via the cell phone:

1. Cell phone should be supported by 3GPP protocol.
2. Enter 554 for RTSP port number in the Network screen.
3. The H.264 format support cell phone option.
4. Enter the following address in the URI:
RTSP:// Router IP address / User Defined URI
5. Select 15 fps for Max Frame Rate.

Note! Due to the bandwidth limitation for the cell phone usage, please set the resolution, quality and frame rate to lower values.

Home | View Video | Logout

NETWORK CAMERA RC8321

Setup

- System
- Network
- Wireless
- DDNS
- IP Filter

Video & Audio

- Streamings
- Video & Audio
- Video Access
- User Database
- Pan/Tilt

Event

- Motion Detection
- Audio Detection
- E-Mail
- FTP
- HTTP
- SMB/CIFS Client
- Trigger & Recording

Administration

- Maintenance
- Status
- Log

Default Streaming Channel

Streaming Channel: Streaming 1

Streaming 1 Settings

Video Format: H.264

Resolution: 1280x720

Video Quality Control:

Constant Bit Rate: 1.0 Mbps

Fixed Quality: Normal

GOV Length: 10 (2-150)

Max Frame Rate: 30 fps

User Defined URI:

Streaming 2 Settings

Enable

Video Format: MJPEG

Resolution: 640x480

Fix Video Quality: Normal

Max Frame Rate: 30 fps

User Defined URI:

Streaming 3 Settings

Enable

Video Format: H.264

Resolution: 640x480

Video Quality Control:

Constant Bit Rate: 1.0 Mbps

Fixed Quality: Normal

GOV Length: 10 (2-150)

Max Frame Rate: 30 fps

User Defined URI:

Save Cancel Help

Figure 20: Streamings Screen

Data - Streamings Screen

Default Streaming Channel	Select the default channel for streaming from the drop-down list.
Streaming 1 Settings	
Video Format	Select the desired format from the list.
Resolution	Select the desired video resolution format.
Video Quality Control	<ul style="list-style-type: none"> Constant Bit Rate: Select the desired bit rate. The default is set to 4.0 Mbps. Fixed Quality: Select the desired option. The default fix quality is set to Normal.
GOV Length	Adjust the GOV interval in frame base. "2" means 1 I frame and 1 P Frame. "3" means 1 I frame and 2 P Frames. Enter the desired value between 2 and 150.
Max. Frame Rate	Select the desired Maximum frame rate for the video stream. The default value is 30.
User Defined URI	You may enter the URI up to 32 characters long for accessing the live video from camera through cell phone connection.
Streaming 2/3 Settings	
Enable	Check the box if you want to enable the streaming.
Video Format	Select the desired format from the list.
Resolution	Select the desired video resolution format.
Video Quality Control	<ul style="list-style-type: none"> Constant Bit Rate: Select the desired bit rate. The default is set to 1.0 Mbps. Fixed Quality: Select the desired option. The default fix quality is set to Normal.
GOV Length	Adjust the GOV interval in frame base. "2" means 1 I frame and 1 P Frame. "3" means 1 I frame and 2 P Frames. Enter the desired value between 2 and 150.
Max. Frame Rate	Select the desired Maximum frame rate for the video stream. The default value is 30.
User Defined URI	You may enter the URI up to 32 characters long for accessing the live video from camera through cell phone connection.

Video & Audio Screen

This screen is displayed when the Video & Audio menu option is clicked.



Figure 21: Video & Audio Screen

Data - Video & Audio Screen

Basic Video Adjustment	
Power Line Frequency	Select the power line frequency (50Hz or 60Hz) used in your region, to improve the picture quality under florescent lighting.
White Balance	Select the desired option to match the current environment and lighting.
Brightness	If necessary, you can adjust the brightness to obtain a better image. For example, if the camera is facing a bright light, the image may be too dark. In this case, you can increase the brightness.
Sharpness	Select the desired option for the sharpness. You can select a Sharpness value between -3 and 3.
Contrast	Select the desired option for the Contrast. You can select a value between -3 and 3.
Saturation	Select the desired option for the Saturation. You can select a value between -3 and 3.
Day/Night Switch	
Switching Method	The Wireless IP Camera supports Day/Night mode switch for getting better quality of the low light condition. Select the desired method to use this function.

IRLED Luminance	Select the desired lightness for the IR LED.
Options	
Enable Microphone	Enable audio by checking this checkbox. Using Audio will increase the bandwidth requirements slightly.
Audio Type	Select the desired audio type.
Flip	This setting will have the image swapped top-to-bottom.
Mirror	This setting will have the image swapped left-to-right.
Enable Time Stamp	If enabled, the current time will be displayed on the Video image.
Enable Text Display	Enable this setting if you want text to be displayed on the Video image, and enter the desired text - up to 20 characters. This feature is often used to identify each camera when multiple cameras are installed.

Video Access Screen

This screen is displayed when the Video Access option is clicked.

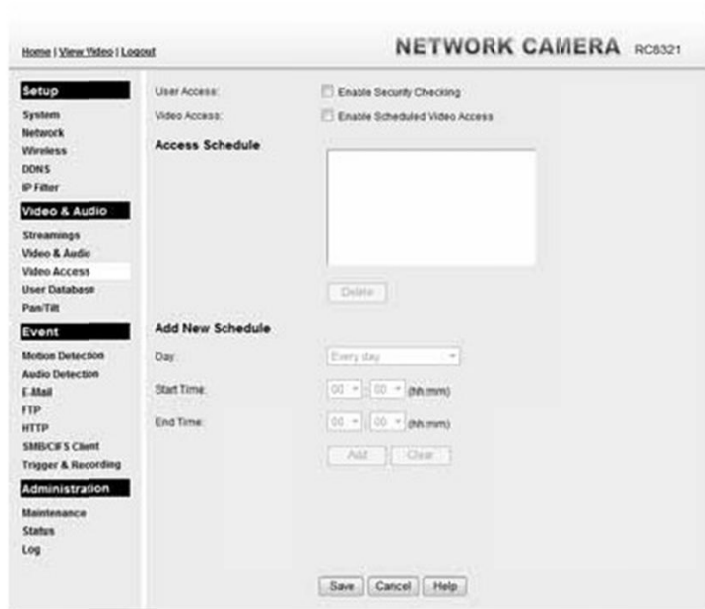


Figure 22: Video Access Screen

Data - Video Access Screen

User Access	
Enable Security Checking	<ul style="list-style-type: none"> If disabled (default) - No login required. Users do not have to provide a username and password when they connect to the camera for viewing video. If enabled - Require login. Users will be prompted for a username and password when they connect to the camera for viewing video. The camera administrator must use the "User Database" menu option to create the desired users.
Video Access	
Enable Scheduled Video Access	<ul style="list-style-type: none"> If enabled - Viewing video is available during the scheduled periods, and unavailable at other times. If this option is selected, you need to define a schedule. If no schedule is defined, this option is always disabled. If disabled - The option will remain disabled until you enable it. <p>Note that regardless of which setting is chosen, the Administrator can ALWAYS access the camera and view live video.</p>
Access Schedule	
Scheduled Periods	This displays all periods you have entered into the database. If you have not entered any periods, this list will be empty.
Delete	Use the Delete button to delete the selected item in the list.

Add New Schedule	
Day	Choose the desired option for the period.
Start Time	Enter the start time using a 24 hr clock.
End Time	Enter the end time using a 24 hr clock.
Add	Click this button to add a new period.
Clear	Use this button to clear the input fields.

User Database Screen

This screen is displayed when the User Database option is clicked.

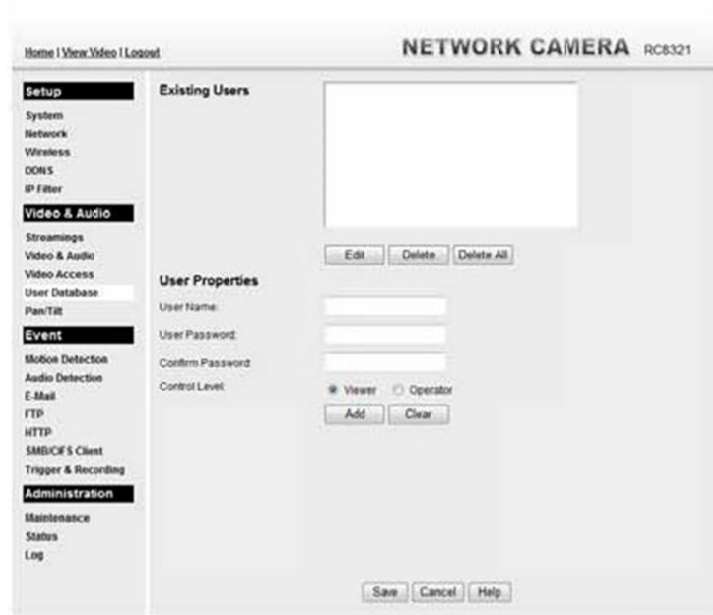


Figure 23: User Database Screen

Data - User Database Screen

Existing Users	
User List	This displays all users you have entered into the User database. If you have not entered any users, this list will be empty. The maximum number of users is 20.
Edit, Delete, Delete All	Use these buttons to manage the user database.
User Properties	
User Name	Enter the name for the user here. <ul style="list-style-type: none"> Spaces, punctuation, and special characters must NOT be used in the name. The name is case insensitive (case is ignored), so you can not have 2 names which differ only by case.
User Password	The password for this user.
Confirm Password	Re-enter the password for the user, to ensure it is correct.
Control Level	Select either Viewer or Operator for the user you plan to add.
Add Button	Click this button to add a new user, using the data shown on screen.
Clear Button	Use this button to clear the input fields, ready to add a new user.

Pan/Tilt Screen

This screen is displayed when the Pan/Tilt option on the Video & Audio menu is clicked.

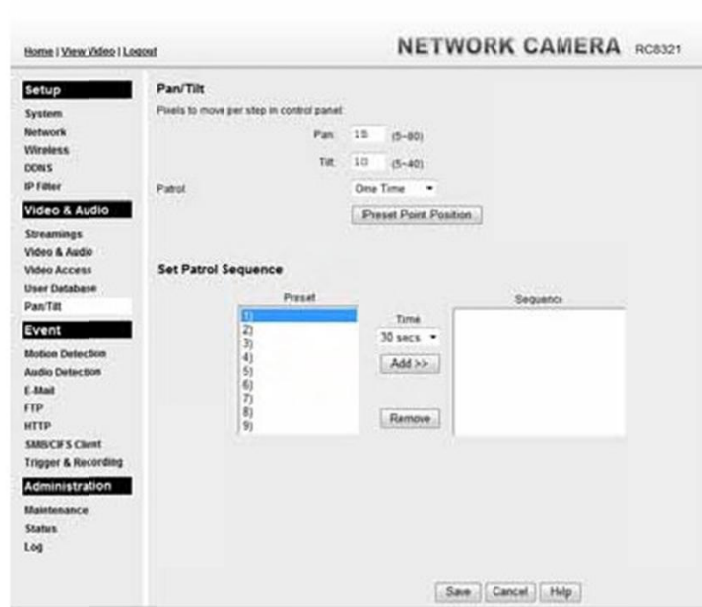


Figure 24: Pan/Tilt Screen

Data - Pan/Tilt Screen

Pan/Tilt	
Degrees to move per step...	Enter the desired values in the Pan and Tilt fields to set the Pan/Tilt degrees.
Patrol	Select either One time or Always for the patrol function.
Preset Point Position	Click this button to define the preset point position.
Set Patrol Sequence	
Set Patrol Sequence	<p>This feature determines how the camera will move when it is set to either "Once" or "Always" rotate. You can set a number of Preset Positions; the camera will go to the first position, then move through the list of present positions until it is finished. The camera will stop at the last position in the list.</p> <p>To create the Preset Sequence, select the desired Preset Position in the left column, and click the "Add >>" button. Repeat until the desired sequence is complete. Note that you can add the same Preset Position more than once; this can be used to make the camera stay longer at one position.</p> <p>To delete a position from the Sequence, select the desired position and click the "Remove" button.</p>
Time	This determines how long the camera will stay at each position

while executing the sequence. Set this to the desired value.

Set Preset Position Screen

This screen is displayed when the Preset Point Position button on the Pan/Tilt screen is clicked.

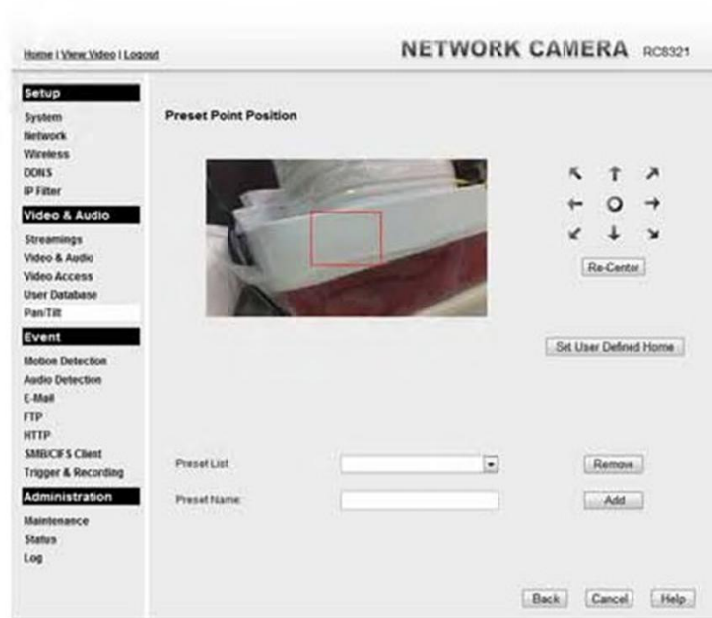


Figure 25: Preset Point Position Screen

Data - Preset Point Position

Re-Center	Click this button to reset the calibration of Pan/Tilt area.
Set User Defined Home	Reset to the default location.
Preset List	Select the desired Preset. The screen will update with the current data for the selected Preset Position.
Preset Name	Enter a suitable name for the Preset Position. If no name is entered, the preset will have a number only.

Motion Detection Screen

This screen is displayed when the Motion Detection option on the Event menu is clicked.

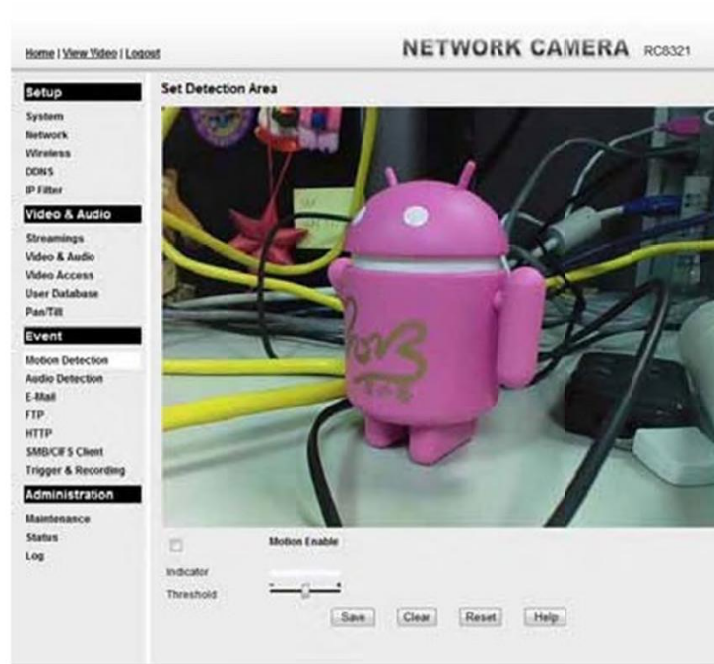


Figure 26: Motion Detection Screen

Data - Motion Detection Screen

Motion Detection	
Motion Enable	Enable this if you want to use motion detection. Note: Motion detection can be triggered by rapid changes in lighting condition, as well as by moving objects. For this reason, it should only be used indoors.
Indicator/ Threshold	Administrator needs to adjust the relation between indicator and threshold for each area.

Audio Detection Screen

This screen is displayed when the Audio Detection option on the Event menu is clicked.

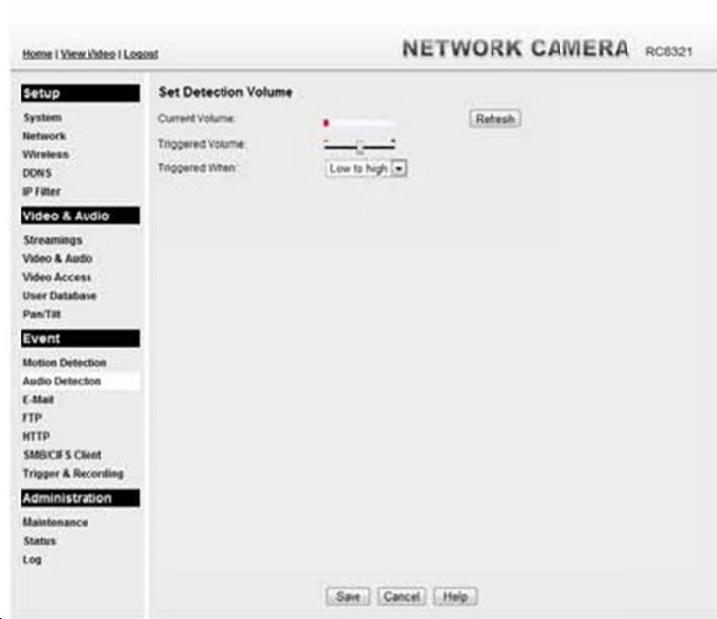


Figure 27: Audio Detection Screen

Data - Audio Detection Screen

Audio Detection	
Current Volume	It displays the current volume of the environment. Click Refresh to update the status.
Triggered Volume	Drag the bar to set the volume for triggering.
Triggered When	Choose the desired situation for triggering the audio detection.

E-Mail Screen

This screen is displayed when the E-Mail option on the Event menu is clicked.

Figure 28: E-Mail Screen

Data - E-Mail Screen

Primary/Secondary SMTP Server	
SMTP Server Address	Enter the address of the SMTP (Simple Mail Transport Protocol) Server to be used to send E-Mail. Enter the port number of the SMTP server.
Authentication	Select the desired Authentication type for the SMTP Server.
SMTP Login name	Enter your login name for the SMTP Server.
SMTP Password	Enter your password for the SMTP Server.
POP server name	Enter the name for the POP Server.
Show "From" as	Enter the E-Mail address to be shown in the "From" field when the E-Mail is received.
Test the Server	Click this button to test the server connection.
Secondary SMTP	Check the box to upload to the Secondary SMTP if the camera can not connect to the primary SMTP.
E-Mail Setup	
E-mail Address	Enter at least one (1) E-Mail address; the 2nd and 3rd addresses are optional. The E-Mail alert will be sent to the E-Mail address or addresses specified here.

With Attachment	Enable the checkbox if you want to attaché files to the E-mail.
Subject	Enter the desired text to be shown as the "Subject" for the E-Mail when it is received. Subject can not exceed 48 alphanumeric characters.

FTP Screen

This screen is displayed when the FTP option on the Event menu is clicked.

The screenshot shows the 'NETWORK CAMERA RC8321' interface. On the left is a navigation menu with categories: Setup, Video & Audio, Event, and Administration. The 'Event' category is selected, and 'FTP' is highlighted. The main content area is divided into 'Primary FTP' and 'Secondary FTP' sections. Each section contains input fields for 'FTP Server', 'Port' (pre-filled with '21'), 'Login Name', 'Password', and 'File Path Name'. There is also an 'Enable Passive Mode' checkbox and a 'Test the Server' button. At the bottom of the main area are 'Save', 'Cancel', and 'Help' buttons.

Figure 29: FTP Screen

Data - FTP Screen

Primary/Secondary FTP	
FTP Server	Enter the address of the FTP Server.
Port	Enter the Port of the FTP Server to be connected.
Login name	Enter your login name for the FTP Server.
Password	Enter your password for the FTP Server.
Enable Passive Mode	Check the box to enable the Passive mode feature of the FTP.
File Path Name	Enter the file path/name of the FTP.
Test the Server	Click this button to test the server connection.
Secondary FTP	Check the box to upload to the Secondary FTP if the camera can not connect to the primary FTP.

HTTP Screen

This screen is displayed when the HTTP option on the Event menu is clicked.

Figure 30: HTTP Screen

Data - HTTP Screen

HTTP Notification	
URL	Enter the URL of your HTTP notification server.
User Name	Enter the user name of your HTTP server.
Password	Enter the password to match the user name above.
Proxy Server Name	Specify the proxy server name in the provided field if the camera needs to pass through a Proxy Server to do the HTTP notification.
Proxy User Name	Enter the user name for the proxy server.
Proxy Password	Enter the password for the proxy server.
Proxy Port Number	Enter the port number for the proxy server.
Method	<p>Select the desired method of form data encoding.</p> <ul style="list-style-type: none"> Get - It should be used if and only if the form processing is independent, which typically means a pure query form. Generally it is advisable to do so. Post - If there are problems related to long URLs and non-ASCII character repertoires, which can make it necessary to use "POST" even for independent processing.

HTTP(s) Post	
Login Name	Enter the user name of your HTTP post server.
Password	Enter the password to match the user name above.
POST URL	Enter the URL of your HTTP post server.

SMB/CIFS Client Screen

This screen is displayed when the SMB/CIFS Client option on the Event menu is clicked.

The screenshot shows a web interface for a network camera. At the top, there is a navigation bar with 'Home | View Video | Logout' on the left and 'NETWORK CAMERA RC8321' on the right. A left-hand menu contains several categories: 'Setup' (with sub-items: System, Network, Wireless, DDNS, IP Filter), 'Video & Audio' (with sub-items: Streamings, Video & Audio, Video Access, User Database, Pan/Tilt), 'Event' (with sub-items: Motion Detection, Audio Detection, E-Mail, FTP, HTTP, SMB/CIFS Client, Trigger & Recording), and 'Administration' (with sub-items: Maintenance, Status, Log). The 'SMB/CIFS Client' option under the 'Event' menu is highlighted. The main content area is titled 'SMB/CIFS Client' and contains the following fields and buttons: 'Browse SMB/CIFS Server:' with a 'Browse' button; 'Server Name:' with a text input field; 'File Path:' with a text input field; 'User Name:' with a text input field; 'Password:' with a masked text input field (displayed as '*****'); and a 'Test the Server' button. At the bottom of the main area are 'Save', 'Cancel', and 'Help' buttons.

Figure 31: SMB/CIFS Client Screen

Data - SMB/CIFS Client Screen

SMB/CIFS Client	
Browse SMB/CIFS Server	Click Browse button to select the desired SMB/CIFS server.
Server Name	Enter the name of your SMB/CIFS server.
File Path	Enter the file path of your SMB/CIFS server.
User Name	Enter the user name for the SMB/CIFS client account.
Password	Enter the password for the SMB/CIFS client account.
Test the Server	Click this button to test the server connection.

Event Trigger Screen

This screen is displayed when the Event Trigger option is clicked.

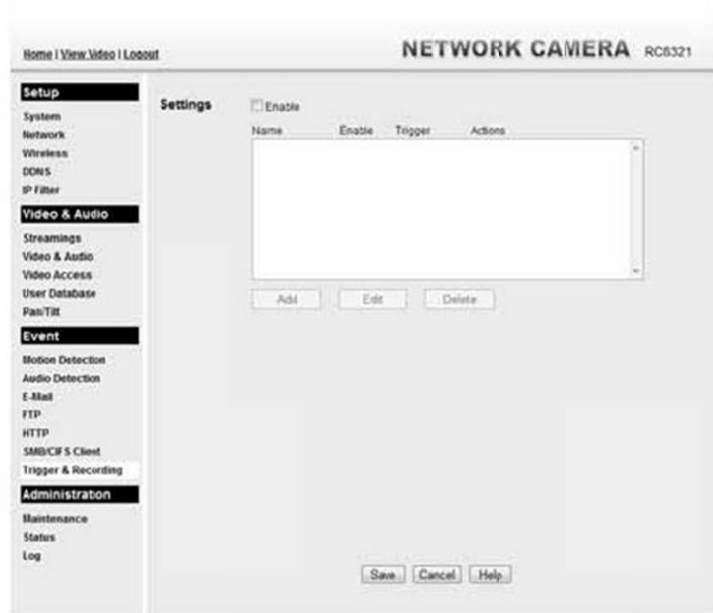


Figure 32: Event Trigger Screen

Data - Event Trigger Screen

Event Schedule	
Schedule List	<p>The Event Schedule shows all of the event types currently configured in the Wireless IP Camera, along with various information about their configuration, as listed below:</p> <ul style="list-style-type: none"> • Name - the descriptive event name set by the user. • Enable - shows the event is enable or disable. • Trigger by - shows what kind trigger activate the event. • Actions - shows what kind of the actions will be issued when the event is triggered.
Add, Delete, Delete All	Use these buttons to manage the schedule list.

Add a new Schedule

The screenshot shows a configuration window titled "Add a new Schedule". It has a "Name:" field at the top. Below it is a "Schedule" section with radio buttons for "Always", "Schedule", and "Never (Disabled)". The "Schedule" option is selected, and it includes a weekly schedule grid (Sun-Sat) and a time range "From 00:00 to 23:59 (hh:mm)". The "Trigger" section has radio buttons for "Motion Detection", "Audio Detection", "HTTP CGI", and "Periodically", with "Motion Detection" selected. An "Interval:" dropdown is set to "2" with the text "Minute(s) before detecting the next event". The "Action" section has checkboxes for "HTTP", "E-Mail", "FTP", and "SMB/CIFS". At the bottom are "Apply", "Cancel", and "Help" buttons.

Name	Enter the name of the schedule.
Schedule	
Schedule	<p>Choose the desired option:</p> <ul style="list-style-type: none"> • Always • Schedule • Never
Trigger Event	
Trigger by	<ul style="list-style-type: none"> • Motion Detection - Movement in a motion detection window can be used to trigger events. • Audio Detection - The sound detection can be used to trigger events. • HTTP - If checked, a HTTP CGI command will be delivered to the HTTP server. • Periodically - If checked, the events will be triggered at regular intervals of time. <p>Interval - Select the desired interval from the list.</p>
Actions	<ul style="list-style-type: none"> • HTTP - If checked, a HTTP CGI command will be delivered to the HTTP server. • E-Mail - If checked, an E-Mail (with "Attachment") will be delivered to the SMTP server. (SMTP Server must be configured on the E-Mail page.) • FTP - If checked, an FTP upload will be activated to the FTP server. (FTP servers must be configured on the FTP page.) • SMB/CIFS - If checked, JPEG image(s) or video files will be uploaded to the SMB server. (SMB must first be enabled and configured on the SMB Client page.)
Attachment Type	<ul style="list-style-type: none"> • Pre/Post Capture - Select the desired length. The size of the file depends on this setting, and also the Video size and degree of compression.

Maintenance Screen

Figure 33: Maintenance Screen

Data - Maintenance Screen

Administrator Login	
Administrator ID	Enter the name for the Administrator here. Spaces, punctuation, and special characters must NOT be used in the name.
Administrator Password	The password for the Administrator.
Verify Password	Re-enter the password for the Administrator, to ensure it is correct.
Firmware Upgrade	
Upgrade File	Click the "Browse" button and browse to the location on your PC where you stored the Firmware file. Select this file.
Start	Click this button to start the Firmware. When the upgrade is finished, the Wireless IP Camera will restart, and this management connection will be unavailable during the restart.
Clear File Name	This does NOT stop the Upgrade process if it has started. It only clears the input for the "Upgrade File" field.

Backup & Restore	
Backup Configuration File	Click Backup button to save the current configuration information to a text file. It is suggested to backup the configuration file, in order to restore the camera easily.
Restore Configuration File	Click Restore button to reinitialize the camera to load the new updated software. Do this after loading the upgrade file.
Clear File Name	This does NOT stop the Restore process if it has started. It only clears the input for the "Restore Configuration File" field.
Restore Factory Defaults	Click Defaults button to reloads all default settings on the camera.
Restart Camera	Click Restart button to restarts the camera.



Figure 34: Status Screen

Data - Status Screen

System	
Device Name	This shows the name of the Wireless IP Camera.
Description	This shows the description of the Wireless IP Camera, such as location.
F/W version	The version of the current firmware installed.
Network	
MAC Address	The current IP address of the Wireless IP Camera.
IP Address	The IP Address of the Wireless IP Camera.
Network Mask	The network mask associated with the IP address above.
Gateway	The IP Address of the remote Gateway associated with the IP Address above.
WINS Address	The IP Address of the WINS server.

Wireless	
WSC PIN Code	It displays the current WSC PIN code.
SSID	This displays the wireless SSID.
Channel	This shows the wireless channel currently used.
Security	The current security setting for Wireless connections.
Signal Strength	This shows the strength of the signal.
Streaming (1~3)	
Video Format	It displays the current format of video.
Resolution	The image size of the video stream.
Video Quality	This displays the image quality of the video stream.
Frame Rate	This displays the frame rate of the video stream.
Buttons	
Refresh	Update the log and any other data on screen.

Log Screen

This screen displays a log of system activity.

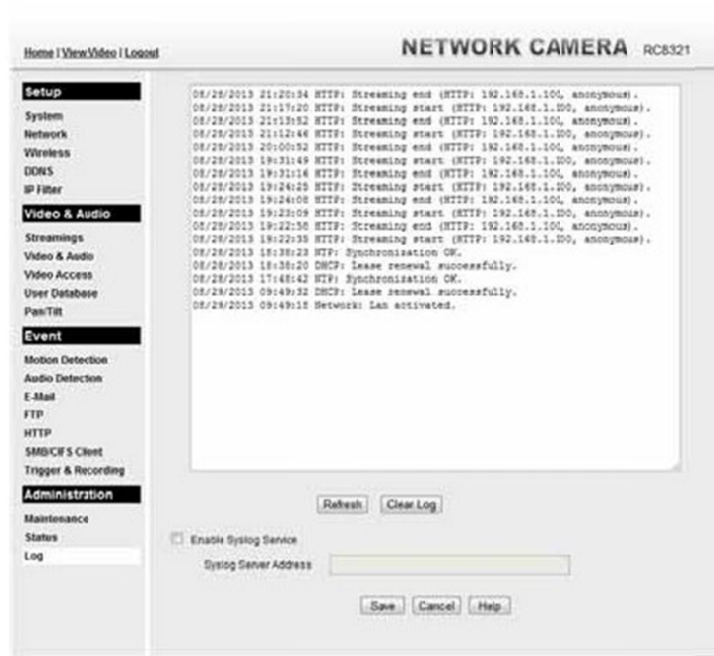


Figure 35: Log Screen

Data - Log Screen

Log	
System Log	This is a log of system activity.
Refresh Button	Click this to update the data shown on screen.
Clear Log	Click this button to restart the log.
Enable Syslog Service	Check the box to enable the System Log Server feature.
Syslog Server Address	Enter the address of the Syslog Server.

This chapter covers the most likely problems and their solutions.

Overview

This chapter covers some common problems that may be encountered while using the Wireless IP Camera and some possible solutions to them. If you follow the suggested steps and the Wireless IP Camera still does not function properly, contact your dealer for further advice.

Problems

- Problem 1: I can't connect to the Wireless IP Camera with my Web Browser to configure it.
- Solution 1: It is possible that your PC's IP address is not compatible with the IP address of the Wireless IP Camera.
-
- Problem 2: When I try to connect to the Wireless IP Camera, I get prompted for a user name and password.
- Solution 2: You SHOULD be prompted for a user name and password if trying to access the Administration menu. Enter the Administrator ID and Administrator Password set on the Maintenance screen.
- If you are just trying to view Video, the User Name/Password prompt indicates that the Administrator has restricted access to specified users. Ask the Administrator for your User Name and Password.
- Problem 3: I can't connect to the Wireless IP Camera using a Wireless connection.
- Solution 3: 1) If a LAN cable is connected to the LAN port, the Wireless interface is disabled. Only one interface can be active.
- 2) Check that your PC and the Wireless IP Camera have compatible Wireless settings.
- Mode (Infrastructure or Ad-hoc) must be correct.
 - ESSID must match.
 - WEP settings must match.
 - In Ad-hoc mode, the Channel should match, although this is often not required.
- Problem 4: Video quality may suddenly deteriorate.

Solution 4	This can happen when an additional viewer connects to the Wireless IP Camera, overloading the camera or the available bandwidth. The image size and quality can be adjusted to cater for the required number of viewers and the available bandwidth.
Problem 5	The motion detection feature doesn't send me any E-mail.
Solution 5	It may be that the SMTP (Simple Mail Transport Protocol) server used by the camera to send the E-Mail will not accept mail. (This is to prevent spam being sent from the server.). Try using a different SMTP server, or contact your ISP to see if SMTP access is being blocked.
Problem 6	Using the motion detection feature, I receive E-Mails which don't show any moving objects.
Solution 6	<p>The motion detection feature doesn't actually detect motion. It compares frames to see if they are different. Major differences between frames are assumed to be caused by moving objects.</p> <p>But the motion detector can also be triggered by:</p> <ul style="list-style-type: none"> • Sudden changes in the level of available light • Movement of the camera itself. <p>Try to avoid these situations. The motion detection feature works best in locations where there is good steady illumination, and the camera is mounted securely. This feature can NOT be used if the camera is outdoors.</p>
Problem 7	The image is blurry.
Solution 7	Try cleaning the lens, or adjusting the Video Quality Control setting on the Streamings screen. Video created by the lower settings will contain less detail; this is the trade-off for using less bandwidth.
Problem 8	When is the best time to press WPS button?
Solution 8	If there is no cable connected, you can press the WPS button after the Power LED starts blinking.
Problem 9	In some older Window XP systems, it may not be able to see H.264 video streaming.
Solution 9	In order to view H.264 video streaming in the older Window XP systems, please install the Microsoft .net framework 2.0 or later version, so the system will be able to deploy the built-in H.264 decoder of the camera.
Problem 10	<p>I use the camera via IE browser in protected mode of Windows Vista/7, there is no local recording/setup feature to be used.</p> <p>Even if I run it with IE browser in non-protected mode of Windows 7, the folder like "Windows" still can not be accessed. (There is no recording files found in this folder as well)</p>
Solution 10	<p>There will be no local recording files and the setup service of associated folder if the IE browser is in protected mode.</p> <p>To use the local recording feature, please operate IE browser in non-protected mode.</p> <p>Note! Some folders (ex. "Windows" folder) with high integrity level can not be accessed via non-protected mode of IE in Window 7.</p>

Appendix A

Specifications



Wireless IP Camera

Model	Wireless IP Camera
Dimensions	65mm (W) x 65mm (H) x 34mm (D)
Operating Temperature	0° C to 40° C
Video compression	H.264 and MJPEG
Image resolution	1280x 720, 640x480, 320x 240 (QVGA)
Storage Temperature	-20° C to 70° C
Network Protocols	TCP/IP, UDP, ICMP, DHCP, NTP, DNS, SMTP, FTP, HTTP, HTTPS, DDNS, RTP, RTSP, RTCP, UPnP
Network Interface	1 RJ-45 LAN connection for Ethernet through Micro USB to Ethernet Cable
Wireless interface	IEEE 802.11n/802.11b/802.11g compatible, WEP 64/128 bit, WPA/WPA2 personal security support
LEDs	2
Power Adapter	12V/1A, 100~240 VAC

Regulatory Approvals

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
This device may not cause harmful interference.
This device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.