

## Declaration of Conformity

# CE 0168

Hereby, Sharp Telecommunications of Europe Limited, declares that this 880SH is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the original declaration of conformity can be found at the following Internet address:

<http://www.sharp-mobile.com>

Sharp Telecommunications of Europe Ltd.

Azure House, Bagshot Road, Bracknell, Berkshire RG12 7QY UK

<http://www.sharp-mobile.com>

# **Introduction**

Congratulations on your new HSDPA 880SH phone.

## **About This User Guide**

This user guide is carefully designed to help you learn about your phone's features and operations quickly and effectively.

## **NOTICE**

- We strongly recommend that you keep separate permanent written records of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore, we assume no responsibility for data lost or otherwise rendered unusable, whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired or any other cause.
- We assume no responsibility, directly or indirectly, for financial losses or claims from third parties resulting from the use of this product and any of its functions, such as stolen credit card numbers, the loss or alteration of stored data, etc.
- All company and/or product names are trademarks and/or registered trademarks of their respective holders.

- Screen layout may differ from that illustrated in this user guide.  
The information described in this user guide is subject to change without notice.
- All the functions described in this user guide may not be supported by all networks.
- We assume no responsibility for downloaded contents, information, etc. from the network.
- Occasionally, a few black or bright pixels may appear on the screen. Please note that this will not have any impact on any of the features or on performance.

## **Intellectual Property Rights**

According to copyright laws, the reproduction, alteration and use of material which is protected by copyright (music, pictures, etc.) is only permitted for personal or private use. If the user is not in possession of more extensive copyright or has not received the explicit permission from the copyright owner to reproduce, alter or use a copy which has been made or modified in this way, this is considered to be a violation of the copyright laws and gives the copyright owner the right to claim for damages. For this reason, avoid the illegal use of material which is protected by copyright. Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

Powered by JBlend™ Copyright  
1997-2005 Aplix Corporation. All rights  
reserved.  
JBlend and all JBlend-based trademarks  
and logos are trademarks or registered  
trademarks of Aplix Corporation in Japan  
and other countries.



Powered by Mascot Capsule®/Micro3D Edition™  
Mascot Capsule® is a registered trademark of HI  
Corporation  
©2002-2007 HI Corporation. All Rights Reserved.

Licensed by Inter Digital Technology Corporation under one  
or more of the following United States Patents and/or their  
domestic or foreign counterparts and other patents  
pending, including U.S. Patents: 4,675,863; 4,779,262;  
4,785,450; 4,811,420; 5,228,056; 5,420,896; 5,799,010;  
5,166,951; 5,179,571 & 5,345,467

T9 Text Input is licensed under one or more of the following:  
U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480,  
5,945,928, and 6,011,554; Australian Pat. No. 727539;  
Canadian Pat. No. 1,331,057; United Kingdom Pat. No.  
2238414B; Hong Kong Standard Pat. No. HK0940329;  
Republic of Singapore Pat. No. 51383; Euro. Pat. No. 0 842  
463 (96927260.8) DE/DK, FI, FR, IT, NL,PT,ES,SE,GB;  
Republic of Korea Pat. Nos. KR201211B1 and  
KR226206B1; and additional patents are pending  
worldwide.

**CP8 PATENT**



microSD™ is a trademark of the SD Card Association.

Bluetooth is a trademark of the Bluetooth SIG, Inc.



The Bluetooth word mark and logos are owned by the  
Bluetooth SIG, Inc. and any use of such marks by Sharp is  
under license. Other trademarks and trade names are  
those of their respective owners.

Licensed by QUALCOMM Incorporated under one or more  
of the following United States Patents and/or their  
counterparts in other nations ;

4,901,307 5,490,165 5,056,109 5,504,773 5,101,501  
5,506,865 5,109,390 5,511,073 5,228,054 5,535,239  
5,267,261 5,544,196 5,267,262 5,568,483 5,337,338  
5,600,754 5,414,796 5,657,420 5,416,797 5,659,569  
5,710,784 5,778,338



**ACCESS™****NetFront™**

This product contains NetFront Browser and NetFront Messaging Client of ACCESS CO.,LTD.

ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries.

NetFront Browser © Copyright 1996-2007 ACCESS CO., LTD.  
NetFront Messaging Client © Copyright 2000-2007 ACCESS CO., LTD.

This software is based in part on the work of the Independent JPEG Group.

This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Video Standard ("MPEG-4 Video") and/or (ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No license is granted or implied for any other use. Additional information may be obtained from MPEG LA.  
See <http://www.mpegla.com>.

This product is licensed under the MPEG-4 Systems Patent Portfolio License for encoding in compliance with the MPEG-4 Systems Standard, except that an additional license and payment of royalties are necessary for encoding in connection with (i) data stored or replicated in physical media which is paid for on a title by title basis and/or (ii) data which is paid for on a title by title basis and is transmitted to an end user for permanent storage and/or use. Such additional license may be obtained from MPEG LA, LLC.  
See <http://www.mpegla.com> for additional details.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

## Useful Functions and Services

Your phone offers you the following features:

- Video calls. You can talk while viewing each other on respective screens.
- 3D and colour Java™ games. You can also download various games and applications from Vodafone live!.
- Thin Film Transistor (TFT) colour LCD display with images that are clearer and easier to view.
- A built-in digital camera with an auto focus function for taking pictures and video clips.
- A message function for reading and creating SMS messages.
- MMS (Multimedia Messaging Services) for sending picture, sound and video messages to brighten someone's day.
- Email for sending up to 300 KB and receiving mail with attachments.
- A colour WAP browser for accessing information on Vodafone live!.
- Your own ringtones and ring video clips. You can use sound or video clip files as a ringtone or ring video clip.
- A music player that can play back MP3, MPEG-4 and 3GPP format sound files (supported codec of MPEG-4 or 3GPP are AMR, AAC, AAC+, and AAC+e).
- Playback of downloaded sound and video clip files.
- A voice recorder function for recording and playing back voice clips.
- A *Bluetooth*® wireless technology interface for establishing contact and transmitting data with certain devices. You can transmit pictures, sounds, and video clips to OBEX-enabled phones.
- A data synchronisation function for updating Contacts List entries on the Internet.
- A schedule alarm for creating and sending schedule entries with alarm settings.
- A microSD™ memory card slot that expands connectivity with a PC using the memory card.

## **SAFETY PRECAUTIONS**

Your phone conforms to international regulations in so far as it is used under normal conditions and in accordance with the following instructions.

Sharp and Vodafone disclaim any liability for damage which may result as a consequence of improper use or use contrary to the instructions contained herein.



Read the safety information sections of this user guide on pages 4 to 15.



Do not use hand-held while driving.



For body-worn operation, maintain a separation of 1.5 cm.



Small parts may cause a choking hazard.



This device may produce a loud sound.



Keep away from pacemakers and other personal medical devices.



Switch off when instructed in hospitals and medical facilities.



Switch off when instructed in aircrafts and airports.



Switch off in explosive environments.



Do not use while re-fuelling.



This device may produce a bright or flashing light.  
(\* The flashing light feature is not available on all products.)



Do not dispose of in a fire.



Avoid contact with magnetic media.



Avoid extreme temperatures.



Avoid contact with liquid, keep dry.



Do not attempt to disassemble.



Do not rely on this device for emergency communications.



Only use approved accessories.

## **RADIOFREQUENCY (RF) EXPOSURE**

### **General Statement on RF Energy**

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

### **Specific Absorption Rate (SAR)**

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was X.XXX W/kg\*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide\*\*. In this case, the highest tested SAR value is X.XXX W/kg.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to communicate with the network.

---

- \* The tests are carried out in accordance with international guidelines for testing.
- \*\* Please see the section below about body worn operation.

### **Body Worn Operation**

Important safety information regarding radiofrequency radiation (RF) exposure:

- To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 1.5 cm separation from the body.
- Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

## **Limiting Exposure to Radiofrequency (RF) Fields**

For individuals concerned about limiting their exposure to RF fields, the World Health Organisation (WHO) provides the following advice:

- Precautionary measures: Present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.
- For further information readers are referred to: <http://www.who.int/>

## **FCC Notice**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## **Exposure to Radio Waves**

**THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.\* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.417 W/kg and when worn on the body, as described in this user guide, is 0.462 W/kg. Body-worn Operation; This device was tested for typical body-worn operations with the back of the phone kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use

accessories that maintain a 1.5 cm separation distance between the user's body and the back of the phone. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID APYHRO00060.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) web-site at <http://www.phonefacts.net>.

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.



## INFORMATION ON PROPER DISPOSAL



Attention: Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

### A. Information on Disposal for Users (private households)

#### 1. In the European Union

Attention: If you want to dispose of this equipment, please do not use the ordinary dust bin!

Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states, private households within the EU states may return

their used electrical and electronic equipment to designated collection facilities free of charge\*. In some countries\* your local retailer may also take back your old product free of charge if you purchase a similar new one.

\*) Please contact your local authority for further details.

If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

#### 2. In other Countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

For Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of [www.swico.ch](http://www.swico.ch) or [www.sens.ch](http://www.sens.ch).

## **B. Information on Disposal for Business Users**

### **1. In the European Union**

If the product is used for business purposes and you want to discard it:

Please contact your SHARP dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities.

For Spain: Please contact the established collection system or your local authority for take-back of your used products.

### **2. In other Countries outside the EU**

If you wish to dispose of this product, please contact your local authorities and ask for the correct method of disposal.

## **DISTRACTIONS**

### **Driving**

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a handsfree kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### **Operating Machinery**

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

## **PRODUCT HANDLING**

### **General Statement on Handling and Use**

You alone are responsible for how you use your phone and any consequences of its use.

- You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.
- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.

- Do not attempt to disassemble your phone or its accessories. Only authorised personnel must do so.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

### **Small Children**

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

### **Demagnetisation**

To avoid the risk of demagnetisation, do not allow electronic devices or magnetic media close to your phone for a long time.

### **Electrostatic Discharge (ESD)**

Do not touch the SIM card's metal connectors.

### **Antenna Care**

Do not cover the built-in antenna (p. 24, No. 22) with your hand when using the phone as this may interfere with the performance.

If you cover it, call quality may deteriorate, and may shorten talk and standby times because the mobile phone has to operate on a higher power level than is necessary.

### **Normal Use Position**

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would a fixed line phone.

### **Air Bags**

- Do not place a phone in the area over an air bag or in the air bag deployment area.
- Store the phone safely before driving your vehicle.

### **Seizures/Blackouts**

If your phone is capable of producing bright flashing lights, please be careful because it may trigger seizures or blackouts.

### **Repetitive Motion Injuries**

To minimise the risk of RSI (Repetitive strain injury), when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Make use of the special features in the handset which minimise the number of buttons which have to be pressed, such as message templates and predictive text.
- Take lots of breaks to stretch and relax.

### **Emergency Calls**

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

### **Loud Noise**

This phone is capable of producing loud noises which may damage your hearing.

### **Bright Light**

If your phone is capable of producing a bright light, do not use it too close to the eyes.

### **Phone Heating**

Your phone may become warm during charging and during normal use.

## **ELECTRICAL SAFETY**

### **Accessories**

- Use your phone only with batteries, chargers and accessories recommended by the manufacturer. The manufacturer disclaims any liability for damage caused by the use of other chargers, batteries or accessories.
- Before connecting the phone with a PC or a peripheral unit, read the operation manual for the other unit carefully.
- Do not touch the battery terminals. Batteries can cause damage, injury or burns if a conductive material touches exposed terminals. When the battery is detached from the phone, use a cover made of non-conductive material for keeping and carrying the battery safely.

### **Connection to a Car**

Seek professional advice when connecting a phone interface to the vehicle electrical system.

### **Faulty and Damaged Products**

- Do not attempt to disassemble the phone or its accessory.
- Only qualified personnel must service or repair the phone or its accessory.
- If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorised service centre.

## **INTERFERENCE**

### **General Statement on Interference**

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

### **Hearing Aids**

- People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.
- Since the level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

### **Medical Devices**

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

### **Hospitals**

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

### **Aircraft**

- Switch off your wireless device whenever you are instructed to do so by airport or airline staff.
- Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a ‘flight mode’, it must be enabled prior to boarding an aircraft.

### **Interference in Cars**

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna is included in the installation.

## **EXPLOSIVE ENVIRONMENTS**

### **Petrol Stations and Explosive Atmospheres**

- In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.
- Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### **Blasting Caps and Areas**

To avoid interfering with blasting operations, turn off your mobile phone or wireless device when in a blasting area or in areas posted “turn off two-way radios or electronic devices”.

## CONDITIONS OF USE

### Battery

- **Network configuration and phone usage will affect talk-time and standby time.**  
Using the games or camera will hasten battery consumption.
- **When the battery charging alert is displayed on the screen, charge the battery as soon as possible.**  
If you continue using your phone ignoring the alert, the phone may cease to function, and all data and settings you have stored may be lost.
- Before removing the battery from the phone, make sure the phone is switched off.
- Replace and charge the new battery as soon as possible after removing the old one.
- Recommended temperature for using and storing batteries is approximately 20°C.
- The batteries' performance is limited in low temperatures, particularly below 0°C and the phone may not work temporarily regardless of the amount of remaining battery power.
- The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

### CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED  
BY AN INCORRECT TYPE,  
DISPOSE OF USED BATTERIES ACCORDING  
TO THE INSTRUCTIONS

See "Battery Disposal" on page 26.

### Memory Card

- Do not remove or insert a memory card while data on the card is being edited. Do not turn off the phone or device containing the memory card while data on the card is being edited as this may damage the data or cause the card to stop functioning correctly.
- Data may be lost under the following circumstances.
  - If the phone is dropped, shaken or force is applied while the memory card is inserted.
  - When the phone is used in areas that are exposed to static electricity or electric noise.
- Back up your important data in case data on the memory cards are lost due to malfunctions.
- Do not touch the metal terminals with your hands or metal objects.
- Do not bend the memory card or subject it to violent impact. Keep it away from water and high temperatures.

- SHARP holds no responsibility for the loss or damage of data contained on a memory card.
- Keep all memory cards out of the reach of small children.
- Be sure to insert the memory card in the correct direction and orientation.

### **Camera Operation**

- Learn picture quality, file formats, etc. beforehand.  
The taken pictures can be saved in JPEG format.

- Be careful not to move your hand while taking pictures.

If the phone moves while taking a picture, the picture can become blurred. When taking a picture, hold the phone firmly to prevent it from moving, or use the delay timer.

- Clean the lens cover before taking a picture.  
Fingerprints, oils, etc. on the lens cover hinder clear focusing. Wipe them off with a soft cloth before taking a picture.

### **Others**

- As with any electronic storage unit, data may be lost or corrupted under various circumstances.
- If the phone's battery has been removed for some time, or the phone has been reset, the unit's clock and calendar may be reinitialised. The date and time should be updated in this case.
- Use only specified handsfree kits (supplied or optional). Some phone's functions may not work when unauthorised handsfree kit is used.



# Contents

<b>Introduction</b> .....	<b>1</b>	Turning Your Phone On and Off .....	30
<b>SAFETY PRECAUTIONS</b> .....	<b>4</b>	Slide Functions and Keypad Lock .....	31
RADIOFREQUENCY (RF) .....		Display Indicators .....	32
EXPOSURE .....	5	<b>Navigating Functions</b> .....	<b>34</b>
INFORMATION ON PROPER		<b>Voice Call/Video Call Functions</b> .....	<b>35</b>
DISPOSAL .....	8	<b>Entering Characters</b> .....	<b>47</b>
DISTRACTIONS .....	9	Changing the Input Language .....	48
PRODUCT HANDLING .....	9	Changing the Input Mode .....	48
ELECTRICAL SAFETY .....	11	My Dictionary .....	49
INTERFERENCE .....	12	Using Templates .....	49
EXPLOSIVE ENVIRONMENTS .....	13	<b>Using the Menu</b> .....	<b>50</b>
<b>CONDITIONS OF USE</b> .....	<b>14</b>	Main Menu .....	50
<b>List of Menu Functions</b> .....	<b>18</b>	Shortcut Keys .....	50
<b>Your Phone</b> .....	<b>21</b>	<b>Contacts Manager</b> .....	<b>51</b>
Optional Accessories .....	21	Sending a Message from the Contacts	
<b>Getting Started</b> .....	<b>22</b>	List .....	54
Inserting/Removing the SIM Card and the		<b>Multimedia</b> .....	<b>63</b>
Battery .....	25	<b>Camera</b> .....	<b>73</b>
Charging the Battery .....	27	Taking Pictures .....	73
Inserting/Removing the Memory Card .....	28	Recording Video Clips .....	74
Connecting the Handsfree Kit .....	29		

Common Functions in the Photo and Video Camera Modes .....	74
Functions in Photo Camera Mode .....	77
Functions in Video Camera Mode .....	80
<b>Messaging .....</b>	<b>81</b>
SMS .....	81
MMS .....	81
Email .....	81
<b>Vodafone live! .....</b>	<b>100</b>
Navigating a WAP Page .....	101
<b>My Items .....</b>	<b>105</b>
<b>Games &amp; Applications .....</b>	<b>114</b>
<b>Organiser &amp; Utilities .....</b>	<b>120</b>
<b>SIM Application .....</b>	<b>132</b>
<b>Settings .....</b>	<b>133</b>
<b>Telephony .....</b>	<b>157</b>
<b>Connecting 880SH to Your PC .....</b>	<b>167</b>
System Requirements .....	167
3G/GSM Modem .....	167
Handset Manager .....	169
Music Manager .....	170
Sync Manager .....	172
<b>Troubleshooting .....</b>	<b>173</b>
<b>Index .....</b>	<b>175</b>

# List of Menu Functions

880SH functions are listed below.

See relevant page for details of each function. The menu's corresponding number is used for shortcuts. For details, see page 50.

<b>1 Mobile TV</b>	▶ p. 69	<b>4 Camera</b>	▶ p. 73	<b>6 My Items</b>		<b>8 Contacts Manager</b>	
<b>2 Vodafone live!</b>		<b>5 Messaging</b>		<b>1 Pictures</b>	p. 105	(Tab 1: Contacts)	
<b>1 Vodafone live!</b>	p. 100	<b>1 Create Message</b>	p. 82	<b>2 Music &amp; Ringtones</b>	p. 106	<b>1 Contacts List</b>	p. 51
<b>2 Enter URL</b>	p. 100	<b>2 Inbox</b>	p. 86	<b>3 Videos</b>	p. 107	<b>2 Add New Contact</b>	p. 51
<b>3 Bookmarks</b>	p. 100	<b>3 Drafts</b>	p. 85	<b>4 Themes</b>	p. 108	<b>3 My Contact Details</b>	p. 52
<b>4 Alert Inbox</b>	p. 100	<b>4 Sent</b>	p. 82	<b>5 Games &amp; Applications</b>	p. 108	(Tab 2: Services)	
<b>5 Saved Page</b>	p. 100	<b>5 Outbox</b>	p. 85	<b>6 Text Templates</b>	p. 109	<b>1 Call Voicemail</b>	–
<b>6 Access History</b>	p. 100	<b>6 Instant Messenger*</b>	p. 90	<b>7 Other Documents</b>	p. 109	<b>2 Speed Dial List</b>	p. 62
<b>7 Browser Settings</b>	p. 102	<b>7 Templates</b>	p. 49	<b>8 Memory Status</b>	p. 113	<b>3 Synchronise</b>	p. 60
<b>8 Music</b>	–	<b>8 Media Album*</b>	–	<b>7 Organiser &amp; Utilities</b>		<b>4 Service Dialling Numbers**</b>	p. 54
<b>9 Games</b>	–	<b>9 Cell Broadcast</b>	p. 94	(Tab 1: Organiser)		<b>5 Fixed Dialling Numbers**</b>	p. 160
<b>10 Ringtones</b>	–	<b>10 Messaging Settings</b>	p. 95	<b>1 Alarms</b>	p. 120	(Tab 3: Settings)	
<b>11 Pictures</b>	–	<b>11 Memory Status</b>	–	<b>2 Calendar</b>	p. 121	<b>1 Manage Groups</b>	p. 55
<b>12 News</b>	–			<b>3 Stopwatch</b>	p. 125	<b>2 Manage Category</b>	p. 61
<b>13 Sport</b>	–			<b>4 Tasks</b>	p. 125	<b>3 Manage Contacts</b>	p. 58
<b>3 Multimedia</b>				<b>5 World Clock</b>	p. 128	<b>4 Contacts Settings</b>	p. 51
<b>1 Music</b>	p. 63			<b>6 Countdown Timer</b>	p. 128		
<b>2 Video</b>	p. 65			(Tab 2: Utilities)		<b>1 Calculator</b>	p. 129
<b>3 FM Radio</b>	p. 68			<b>1 Voice Recorder</b>	p. 130	<b>2 Voice Recorder</b>	p. 130
<b>4 Mobile TV</b>	p. 69			<b>3 Expenses Memo</b>	p. 131	<b>3 Expenses Memo</b>	p. 131
<b>5 Radio DJ</b>	p. 69			<b>4 Phone Help</b>	p. 131	<b>4 Phone Help</b>	p. 131
<b>6 Streaming</b>	p. 72						

\* This menu is not available with some service providers.

## 9 Telephony

### (Tab 1: Call Log)

- 1 All Calls p. 157
- 2 Dialed Numbers p. 157
- 3 Missed Calls p. 157
- 4 Received Calls p. 157
- 5 Call Timers p. 157
- 6 Call Costs\*\* p. 158
- 7 Data Counter p. 159

### (Tab 2: Call)

- 1 Voice –
- 2 Video p. 53
- 3 Contacts List p. 53
- 4 Call Voicemail p. 54
- 5 Service Dialling Numbers\*\* p. 54

### (Tab 3: Call Restrictions)

- 1 Outgoing Calls p. 159
- 2 Incoming Calls p. 159
- 3 Fixed Dialling Numbers\*\* p. 160
- 4 Rejected Numbers p. 161
- 5 Withheld Call p. 161
- 6 Change N/W Password p. 162

### (Tab 4: Call Settings)

- 1 Video Call Settings p. 162
- 2 Voicemail & Diverts p. 164
- 3 Call Waiting p. 166
- 4 Show My Number p. 166
- 5 Time & Cost p. 166
- 6 Minute Minder p. 166
- 7 Auto Redial p. 166

## 10 SIM Application\*\*

▶ p. 132

## 11 Games & Applications

- 1 Games & Applications p. 114
- 2 Java™ Settings p. 117
- 3 Java™ Information p. 119

## 12 Settings

### (Tab 1: Profiles)

- 1 Normal p. 133
- 2 Meeting p. 133
- 3 Activity p. 133
- 4 Car p. 133
- 5 Headset p. 133
- 6 Silent p. 133

### (Tab 2: Phone Settings)

- 1 Display p. 137
- 2 Sounds & Alerts p. 141
- 3 Slider Settings p. 141
- 4 Date & Time p. 142
- 5 Language p. 144
- 6 Earpiece Volume –
- 7 Shortcuts p. 144
- 8 Security p. 144

### (Tab 3: Connectivity)

- 1 Bluetooth p. 147
- 2 Mass Storage p. 151
- 3 USB Charge p. 151
- 4 Memory Card p. 151

### (Tab 4: Other Settings)

- 1 Call Settings p. 162
- 2 Messaging Settings p. 95
- 3 Java™ Settings p. 117
- 4 Browser Settings p. 102
- 5 Network Settings p. 152
- 6 Internet Settings p. 154

\*\* Depends on SIM card contents.

**Note for the menu references for the Postcard, Media Album and other services**

- The menu references for the Postcard, Media Album and other services vary in the United Kingdom and Ireland and South Africa as follows:

Current references in the user guide	References in United Kingdom	References in Ireland	South Africa
"Postcard"	"live! Postcard"	(Not available)	(Not available)
"Additional Information"	"Additional information"	(Not available)	(Not available)
"Street & Number"	"Address"	"Street & Number"	"Street & Number"
"State/Province"	"County"	"State/Province"	"State/Province"
"Postal Code"	"Post Code"	"Postal Code"	"Postal Code"
"Media Album"	"live! Studio"	"Picture Album"	"live! Studio"
"To Media Album"	"To live! Studio"	"To Picture Album"	"To live! Studio"

## **Your Phone**

Please check the following carefully. Your phone should come complete with:

- HSDPA/3G (UMTS)/EDGE/GSM 900/1800/1900 GPRS phone
  - Rechargeable Li-ion Battery
  - AC Charger
  - Stereo Handsfree
  - CD-ROM
  - microSD™ Memory Card\*
  - User Guide
  - Quick Start Guide\*
- \* This item is not provided in some areas.

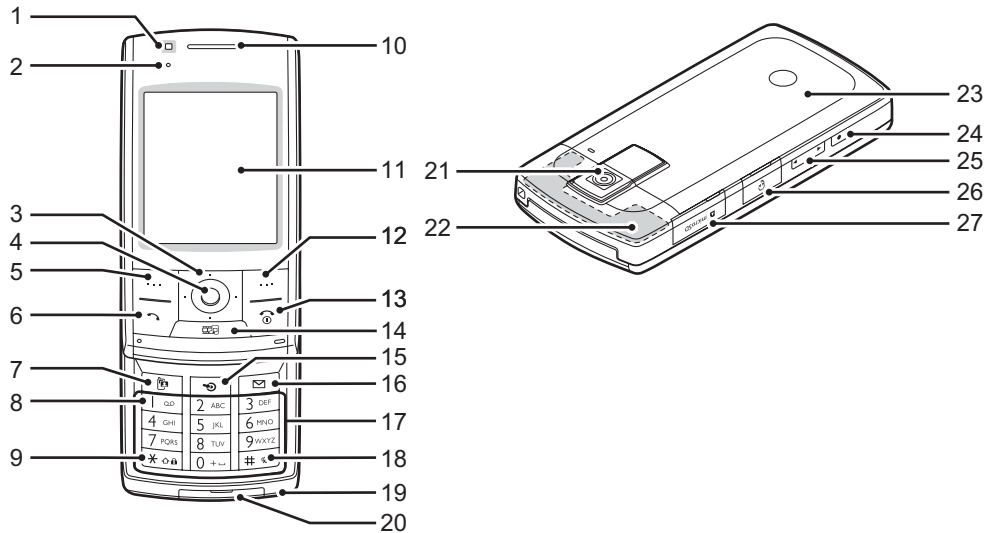
### **Optional Accessories**

- Li-ion Spare Battery (XN-1BT80)
- Cigarette Lighter Charger (XN-1CL30)
- USB Data Cable (XN-1DC30)
- AC Charger (XN-1QC30, XN-1QC31)
- Handsfree Microphone Unit (XN-1HU90)
- Stereo Headset (XN-1HS90)

The above accessories may not be available in all regions.

For details, please contact your dealer.

## Getting Started





**1. Sub Camera** 


**2. Small Light:**


Flashes when an incoming call or a new message is received or missed, if Event Light or Status Light (p. 141) is enabled.

**3. Navigation Keys (Arrow Keys):**    

Moves cursor to highlight a menu item, etc.\*

Up or Down arrow key (, ) displays Contacts List entries in standby.

Left arrow key () displays the Create Message screen in standby.

Right arrow key () displays the monthly or weekly calendar in standby.

**4. Centre Key:** 

Displays Main menu in standby, and executes functions.

Press and hold in standby to initiate keypad lock.

Press and hold when keypad is locked to unlock keypad.

**5. Left Soft Key:** 

Executes the function in the lower left of the screen.

Displays Main menu in standby.\*

**6. Send/Redial Key:** 

Makes voice calls or accepts calls, and displays the call logs in standby.

**7. Video Telephony Key:** 

Makes video calls or accepts calls, and displays the video call screen in standby.

**8. Voicemail Key:** 

Press and hold to connect to the Voicemail centre. (Depending on the SIM card.)

**9. \* /Shift Key:** 

Switches character case between four modes: Abc, ABC, 123 and abc on the text entry screen.

Press to enter P, ?, – or \* in standby.


**10. Earpiece/Speaker**

**11. Display**

**12. Right Soft Key:** 

Executes the function in the lower right of the screen.

Accesses “Vodafone live!” by opening the browser in standby.\*

**13. End/Power Key:** 

Ends a call and turns power on/off.



**14.Multimedia Key:** 

While in standby:

Relaunches the corresponding player if playing music in the background.

Displays Multimedia menu if not playing music.

**15.Shortcut Key:** 

Displays the Shortcuts menu in standby.\*

The Shortcuts menu (p. 144) allows you to change the default standby assignment of the Navigation, Left and Right Soft and Shortcut Keys (2, 4, 11 and 14).

**16.Message Key:** 

Displays Messaging menu.

**17.Keypad****18.#/Silent Key:** 

Displays symbol screen on the text entry screen. Press and hold to switch languages on the text entry screen. Press and hold in standby to switch Profiles settings between the mode most recently activated and Silent mode.

**19.Microphone****20.External Connector:**

Used to connect either the charger or a USB data cable.

**21.Main Camera****22.Built-in Antenna:**

Warning: Do not cover the lower part of the phone with your hand when in use as this may interfere with the performance of the built-in antenna.

**23.Battery Cover****24.Camera Key:** 

Press and hold in standby to activate the camera.

Takes a picture or starts recording video when the camera is active.

Press during an incoming call alert to answer the call.

**25.Side Keys:** 

Press in standby or during a call to increase or decrease the earpiece volume.

Press during incoming call to mute the ringer or disable vibration mode (if active).

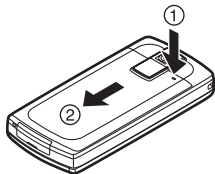
Press while listening to music (or video) to increase or decrease the earpiece volume.

**26.Handsfree Kit/Microphone Connector****27.microSD Card Slot**

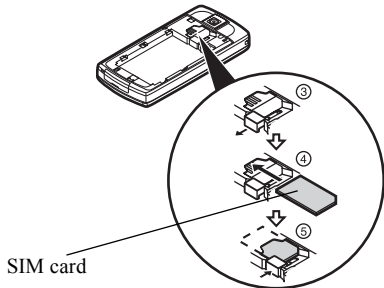
\* Default standby assignment can be changed via the Shortcuts menu. See “Shortcuts” on page 144.

## Inserting/Removing the SIM Card and the Battery

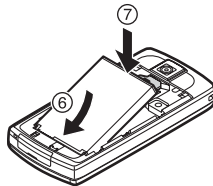
1. Slide off the battery cover (① ②).



2. Unlock the SIM lock ③, slide the SIM card into the SIM holder ④, and lock the SIM lock ⑤.



3. Hold the battery so that the metal contacts of the battery are facing down, slide the guides on the top of the battery into the battery slots ⑥, and then insert it ⑦.



4. Replace the battery cover. ⑦.

### **Note**

- Make sure that only 3V SIM cards are used.
- Make sure that the standard accessory battery is used.

## **Battery Disposal**

The device is battery-powered. In order to protect the environment, please read the following points concerning battery disposal:

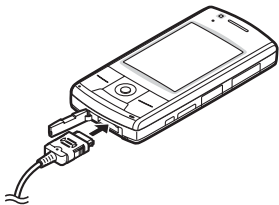
- Take the used battery to your local waste depot, dealer or customer service centre for recycling.
- Do not expose the used battery to a naked flame, immerse in water or dispose with the household waste.

## Charging the Battery


You must charge the battery for at least 150 minutes before using your phone for the first time.

### Using the Charger

1. Open the cover of the external connector, and connect the charger horizontally to the external socket located at the bottom of the phone until it clicks.



2. Connect the charger to an AC outlet.

When the phone is charging, the battery status icon (  ) displays the current status. The Small Light also lights up.

Standard charging time: Approx. 150 minutes

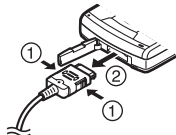
### Note

- Charging time may vary depending on the state of the battery and other conditions. (See “Battery” on page 14.)

### To Disconnect the Charger

When charging is complete, the battery indicator icon displays the full charge status.

1. Unplug the charger from the AC outlet.
2. Push and hold the side buttons of the charger (1), then disconnect the charger from the external socket of the phone (2).



3. Close the cover.

### Note


- Do not use any non-approved chargers as they may damage your phone and invalidate any warranties, see “Battery” on page 14 for details.
- Forcibly disconnecting the charger may cause malfunction.

**To Charge Using the Cigarette Lighter Charger**  
The optional cigarette lighter charger supplies power for charging from the cigarette lighter socket of a car.





### Battery Level Indicator

The current battery level is displayed in the upper right of the screen.

### Low Battery during Use

When the battery is running low, an alarm will sound and “” is displayed on the screen.

If you are using your phone and you hear the low battery alarm, attach your charger as soon as possible. The phone may not be able to continue normal operation if you continue to use it.

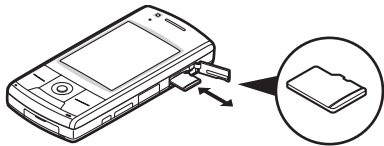
Battery Indicators	Charge Level
	Sufficiently charged
	Charging recommended
	Charging required
	Empty

## Inserting/Removing the Memory Card

### Note

- *Make sure that the phone is turned off before inserting/removing the memory card.*
  - *Be sure to insert the card in the correct direction and orientation.*
  - *Keep all memory cards out of the reach of small children.*
1. Turn off the phone.
  2. Open the microSD card slot cover.





3. Insert the memory card until it clicks. (To remove the memory card, push the memory card until it clicks.)



4. Close the cover.

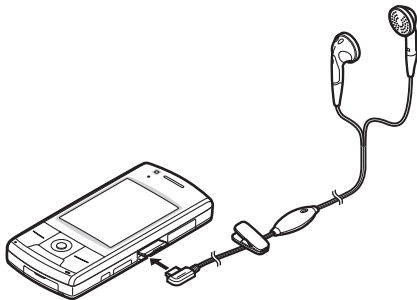
#### **Tip**

- You see the following indicators when the memory card is in use:


-  : Appears when the card is inserted.
-  : Appears when the card is damaged or unusable. Make sure the card is properly inserted.
-  : Appears when the card is being written to or read.
-  : Appears when the card is being formatted.

## **Connecting the Handsfree Kit**

1. Open the connector cover.
2. Connect the handsfree kit.



## Turning Your Phone On and Off

To turn the power on or off, press and hold  for approximately 2 seconds.

### To Enter the PIN Code

If the PIN (Personal Identification Number) code is enabled you are asked to enter the PIN code each time the phone is switched on. For details on setting the PIN code, see “Enabling/Disabling the PIN Code” on page 145.

1. Enter your PIN code.

The PIN code is 4 to 8 digits.

2. Press .

### Note

- *If your PIN code is entered incorrectly three times in a row, the SIM card is locked. See “Enabling/Disabling the PIN Code” on page 145.*
- *If the clock settings have not been entered, the date and time entry screen is displayed (p. 142).*

## To Copy All Contacts List Entries from the SIM Card

When you insert the SIM card into your phone for the first time and start the Contacts List application, you are asked whether you wish to copy Contacts List entries on the SIM card. Follow the on-screen instructions, or you can do it later using the Contacts List menu as follows:

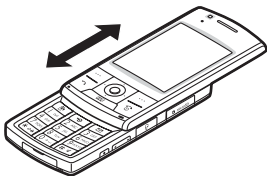
**“Contacts Manager” → “Settings” tab → “Manage Contacts” → “Copy All Entries”**

1. Select “From SIM to Handset”.

## Slide Functions and Keypad Lock

When your phone is on, you can make a call or answer an incoming call by sliding open your phone.

You can terminate the call and lock the keypad to prevent it from being pressed accidentally by sliding close your phone.



You can also operate the following actions by sliding open/close your phone.

### When opened:

- The display and keypad light up.
- The keypad is unlocked.
- Incoming calls can be answered.  
See “Slider Settings” on page 141.

### When closed:

- Most applications are unaffected.
- The handset sends a busy tone to the caller.

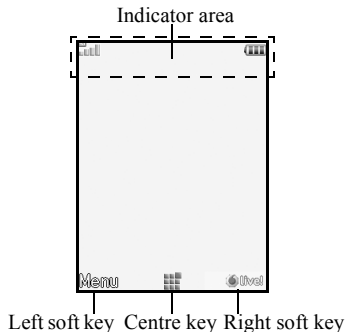
- Calls are terminated.  
See “Slider Settings” on page 141.

### Note

- *You can use the following applications even when your phone is closed:*  
*Browser, Camera/Video Camera, Video Player, Video Streaming player and Audio Streaming player.*
- *Some Java™ applications are not suspended when your phone is closed.*
- *Do not stick items to the back of the display.*
















## Display Indicators









- : Strength of received signal/Service out of range  
 : 3G (UMTS)/GPRS  
 / : GPRS enabled/GPRS disabled  
 : Roaming outside network
- : Flight mode
- : Data exchange with external device



- : Connection to the server [established/communicating]
- : Voice call [incoming/in progress]
- : Video call communication mode enabled [voice/video/voice and video]
- : Alerts [text message and multimedia message/Email/Instant Messenger]
- : Mailbox full [SIM card only/handset only/both SIM card and handset]
- : Logging in the Instant Messenger
- : "Voice Calls" diverts set to "Always"
- : Connection status [USB cable/Bluetooth wireless setting [enabled (in standby)/exchanging information/talking with the Bluetooth headset/Hide my phone]]
- : Java™ application [executed (colour)/suspended (grey)]/Music player/FM Radio
- : Secure WAP page displayed

14. : Silent/vibration setting [silent/increasing volume/vibration enabled/silent and vibration enabled]
15. : Speaker mode [speaker phone/speaker activated/microphone muted]
16. : Memory card inserted
17. : Battery level
18. : Daily alarm enabled
19. : Schedule entry enabled [with/without reminder alarm]
20. : Outbox contains unsent messages [text message/multimedia/Email]
21. : WAP/OTA provisioning alerts [WAP alert/OTA provisioning alert/WAP and OTA provisioning alerts]
22. : Voicemail message alert
23. : “Show Secret Data” set to “On”
24. : Function Lock enabled
25. : Keypad Lock enabled
26. (No display)/ : Current profile [Normal/Meeting/Activity/Car/Headset/Silent]

## Navigating Functions

All applications are accessed from the Main menu. To open the Main menu, press the centre key  in standby.

To launch applications, you will need to highlight menu items, and make selections. To select a menu item (indicated in quotation marks), move the cursor using , ,  and , and press  to select.

In certain procedures, you will need to press one of the soft keys (indicated in square brackets), which are displayed in the lower left and right of the screen. Press the corresponding soft key ( or .





To return to the previous screen, press the right soft key if it displays *Back*. To close the Main menu, press the right soft key if it displays *Exit*.

Each section in this user guide starts with a list of items you will need to select in order (indicated in italics) before performing the procedures shown. Select each item to reveal the next set of items that you have to choose from. Open subsection items after opening those listed in the main section.

Example:

***“Games & Applications”*** → ***“Java™ Settings”*** → ***“Synchronisation”***

The following menus have tabs - Instant Messenger, Organiser & Utilities, Contacts Manager, Telephony and Settings.

You can select the desired tab with the / key, and after that you can select the item you wish to set in the selected tab with the / key.


Example:

***“Telephony”*** → ***“Call Log”*** tab → ***“All Calls”***

## **Voice Call/Video Call Functions**


For details on setting call functions, see “Telephony” on page 157.

### **Making a Voice Call**

1. Enter the area code and the phone number you wish to dial and press  to dial.

If you enter the wrong number, press [Clear] to delete the number to the left of the cursor.

### **Emergency Calls**



1. Enter 112 (international emergency number) using the keypad and press  to dial.

#### ***Note***

- *Emergency calls may not be able to be made on all mobile phone networks when certain network services and/or phone features are in use. Contact your service provider for more information.*

- *This emergency number can normally be used to make an emergency call in any country, with or without a SIM card inserted, if a 3G (UMTS)/GSM network is within range.*


### **International Calls**

1. Press and hold  until a + (international dialling prefix) sign is displayed.
2. Enter the country code, followed by the area code (without the leading zero) and the phone number, and press  to dial.




## Adding an Entered Phone Number to the Contacts List

1. After entering a phone number, press [Options] and select “Save Number”.  
For details on creating a new entry, see “Adding a New Contact” on page 51.



## Showing or Hiding My Phone Number on the Display of the Called Party

1. After entering a phone number, press [Options], select “Show My ID” or “Hide My ID” and press  to dial.

## Speed Dialling






Up to 8 phone numbers from the Contacts List memory (Handset and SIM) can be assigned to speed dials. You can call the numbers using the digit keys ( to ). The phone number of the Voicemail centre is assigned to .

For details on setting the speed dial list, see “Speed Dial List” on page 62.

1. To dial a number using the speed dial, press and hold any of the digit keys ( to ).  
The phone number saved in the speed dial list is dialled.



## Redialling


You can redial numbers in the call log. Select from specific categories or “All Calls”. Specific categories contain up to 30 numbers and the “All Calls” list contains up to 90.

1. Press  in standby.
2. Select the category from “All Calls”, “Dialled Numbers”, “Missed Calls” or “Received Calls”.  
To switch logs, press  or .
3. Highlight the phone number you wish to call.
4. Press  to redial a voice call or  to redial a video call.

## Answering a Voice Call

When an incoming call is detected, the phone rings.

1. Press ,  or press [Options] and select “Answer” to answer the call.


Or press any key except , [Options] or [Busy] when the “Any Key Answer” function is enabled. Set the Any Key Answer function in the profile of each mode (p. 137).

You can answer an incoming call by sliding open your phone if “Calls on Open” is set to “Accept Call” in Slider Settings (p. 141).

### Tip

- *If you have subscribed to the Calling Line Identification (CLI) service and the caller’s network sends the number, the caller’s number is displayed on the screen. If the caller’s name and number are saved in the Contacts List, the caller’s name is displayed on the screen.*
- *If the number is a restricted number, the display shows “Withheld”.*
- *When you receive a call from the person whose picture is registered in the Contacts List, the picture and name are displayed.*

## Rejecting an Incoming Call

1. Press  while the phone is ringing to reject a call you do not wish to answer.

## Letting the Caller Know You are Unavailable










1. Press [Busy] while the phone is ringing to send a busy tone to the caller.

## In Call Menu (Voice Call)

Your phone has additional functions available while a call is in progress.

### Adjusting the Earpiece Volume

You can adjust the earpiece volume (and handsfree kit volume, if connected) to five levels.

1. Press  or  to display the Earpiece Volume screen.
2. Press  (or /) to increase the volume of the call or press  (or /) to decrease the volume.
3. Press  when the volume is set to the desired level.

### Turning the Speaker On and Off


You can talk via the loudspeaker on the phone when it is on.

1. During a call, press [Options] and select “Loudspeaker On”.

### Putting a Call on Hold

This function allows you to manage two calls at the same time. If you wish to make another call while you are talking to someone, you can put the current call on hold to call someone else.

#### To Make Another Call during a Call

1. During a call, press [Options] and select “Hold”.  
The current call is put on hold.
2. Press [Options] and select “Dial New Number”.
3. Enter the phone number you wish to make another call to, then press .

### Tip

- You can also make another call by entering the phone number during a call instead of step 1. The current call is automatically put on hold.

### Accessing SMS/MMS Menu during a Call

1. During a call, press [Options] and select “Messaging”.

The following options are available: “Create Message” to make an SMS and MMS, or “Inbox”, “Sent” or “Drafts” to access these folders. For details on SMS and MMS, see “SMS” and “MMS” on page 81.

## Call Waiting

This service notifies you of another incoming call while you have a call in progress.

1. During a call, press [Options] and select “Hold & Answer” to answer the second call.

The first call is put on hold and you can now talk to the second caller.

### Note

- You need to set “Call Waiting” to “On” if you wish to use the Call Waiting service (p. 166).
- Call Waiting service may not be available on all networks. Contact your service provider for more information.
- If you do not wish to answer the second call, press [Options] and select “Busy” in step 1. If “Reject” is selected, the log of the second call is saved as a missed call.


## Conference Call

Conference call is a call with more than 2 participants. You may include up to 5 participants in a conference call.

### To Make a Conference Call

You must have one active call and one held call.

1. During a call, press [Options] and select “Join All Calls” to join the conference call.


2. Press  to end the conference call.

### Note

- The conference call service may not be available on all networks. Contact your service provider for more information.
- To end the call with all participants, press [Options] and select “End All Calls”.
- To reject adding more participants to the current party, press [Options] and select “Reject”, or you can send the busy tone by selecting “Busy”.
- You have more options for the Conference call after selecting “Join All Calls” in step 1:
  - To put all participants on hold, select “Hold All”.
  - To put all participants except the current call on hold, select “Private Conversation”.



### To Add New Participants to the Conference Call

1. Press [Options] and select “Dial New Number”.
2. Enter the number you wish to include in the conference call and press  to dial.
3. Press [Options] and select “Join All Calls” to join the conference call.

If you wish to add other participants, repeat steps 1 to 3.

### To End the Call with a Conference Call Participant

1. During a conference call, highlight the person that you wish to disconnect from the conference call.
2. Press [Options] and select “End This Call”.

### To Have a Private Conversation with One of the Participants

If you wish to have a private conversation with one of the participants, you may select the participant from the conference list and put the other participants on hold.

1. During a conference call, select the person that you wish to talk to.
2. Press [Options] and select “Private Conversation”.
3. Once you have finished the private conversation, press [Options] and select “Join All Calls” to return to the conference call.

### Muting the Microphone

1. During a call, press [Mute].  
To use the microphone again, press [Unmute].

## Making a Video Call

### Note

- *Video calls can only be made and received if both parties have 3G capable phones and 3G coverage. See “Display Indicators” on page 32.*
- *Make sure that the battery is fully charged and the signal is strong before using this function.*
- *Turn the loudspeaker on or use a handsfree kit so that you can talk while looking at the video call screen on the display.*




## Status Indicators

1. Sub screen for your image
2. Elapsed time
3. Main screen for the other party's screen
4. Other party's name or phone number

## Making a Video Call


### To Make a Video Call by Entering the Phone Number First

1. Enter the area code and the phone number you wish to dial.
2. Press [Options] and select “Video Call” or press  to dial.


If you enter the wrong number, press [Clear] to delete the number to the left of the cursor.


When connected, the image of the called party is displayed in the upper part of the screen and yours in the lower left.

### Tip




- If the called party’s phone is not video call enabled, you can press  and enter the phone number again to make a voice call.

### To Make a Video Call with the Video Telephony Key

1. Press .
- Your image is displayed in the upper part of the screen.
2. Enter the phone number or press [Options] and select “Call Log”, “Contacts” or “Enter Number”.


3. Once the desired number has been selected, press .

### To Make a Video Call Using Speed Dial

1. Press .
- Your image is displayed in the upper part of the screen.
2. Press and hold any of the digit keys ( to ).
- The phone number saved in the speed dial list is dialled. When connected, the image of the called party is displayed in the upper part of the screen and yours in the lower left.

## Answering a Video Call

When an incoming call is detected, the phone rings.


1. Press  to answer the call with video or press [Options] and select “Hide Picture” to answer with voice only.

If the slider is closed, you can answer the call (with video) by sliding open the phone when the “Calls on Open” function is enabled.

### Tip

- *If you have subscribed to the Calling Line Identification (CLI) service and the caller’s network sends the number, the caller’s number is displayed on the screen. If the caller’s name and number are saved in the Contacts List, the caller’s name is displayed on the screen.*

## Rejecting an Incoming Call

1. Press  while the phone is ringing to reject a call you do not wish to answer.

You can reject an incoming call by sliding close your phone if “Calls on Close” is set to “End Call” in Slider Settings (p. 141).

## Letting the Caller Know You are Unavailable

1. Press [Busy] while the phone is ringing to send a busy tone to the caller of an incoming call letting them know that you cannot answer the call.

## In Call Menu (Video Call)

### Muting the Microphone

1. During a video call, press [Mute].  
To use the microphone again, press [Unmute].

### Swapping Images

You can swap images between the main and sub screens.

1. During a video call, press [Options] and select “Switch Images”.

## Changing the Image of Yourself

1. During a video call, press [Options] and select “Camera Picture”.
2. Select “Internal Camera”, “External Camera” or “Alternative Image”.
  - “Internal Camera”: The image through the sub camera is displayed and sent to the receiver.
  - “External Camera”: The image through the camera is displayed and sent to the receiver.
  - “Alternative Image”: The camera is turned off and the image selected in “Alternative Image” of “Video Call Settings” is used.

## Turning the Speaker On and Off

You can talk via the loudspeaker on the phone when it is on.

1. During a video call, press [Options] and select “Loudspeaker On”.

### Note

- *In a high-noise environment, you may not be able to continue a call, or make a clear call. We recommend that you use the handsfree kit.*

- *With this option, there may be interruption if you increase the earpiece volume. We recommend that you decrease the earpiece volume or use the handsfree kit.*

## Video Call Settings

### To Adjust the Quality of the Incoming or Outgoing Image

You can adjust the quality of the called party's or caller's image.

1. During a video call, press [Options] and select "Video Call Settings".
2. Select "Incoming Picture Quality" or "Outgoing Picture Quality".
3. Select "Normal", "Quality Priority" or "Frame Rate Priority".  
"Normal": The standard quality is used.  
"Quality Priority": The quality of the picture takes precedence over the frame rate.  
"Frame Rate Priority": The frame rate takes precedence over the quality.

### To Turn the Backlight On or Off

You can turn on the backlight of your screen.



1. During a video call, press [Options] and select "Video Call Settings".
2. Select "Backlight".

3. Select "Always On", "Always Off" or "As Normal Setting".

When "Always On" is selected, the backlight will always be on during a video call.

When "As Normal Setting" is selected, the backlight will time out depending on the Backlight setting (p. 140).

### To Adjust the Video Exposure

1. During a video call, press [Options] and select "Video Call Settings".
2. Select "Exposure".
3. Press  (Light) or  (Dark).

## Mirror Image

During a video call, you can reverse your image on the sub screen.

1. During a video call, press [Options] and select “Video Call Settings”.
2. Select “Mirror Image”.
3. Select “On” or “Off”.


## To Change the Sub Camera Image to the Alternative Image

During a video call, you can switch the image shown to the caller between the sub camera image and an alternative image or display an image while putting a call on hold from the saved picture files.





1. During a video call, press [Options] and select “Video Call Settings”.
2. Select “Camera Picture” and then select “Default Image” or “Alternative Image”.
3. Select the desired option.  
If “Default Image” is selected, select “Internal Camera”, “External Camera” or “Alternative Image”.  
If “Alternative Image” is selected, select “Preset Picture” or “My Pictures”.

## Entering Characters





When entering characters to create Contacts List entries, text messages or multimedia messages, etc., press the corresponding keys.

In multi-tap input method, press each key until the desired character is displayed. For example, press  once for the letter A or twice for the letter B.

Press the following keys to:

- : Enter:  
.(full-stop) ,(comma) -(hyphen) ? !  
' (apostrophe) @ :|
- : Enter:  
(space)+ = < > € £ \$ ¥ % & 0
- : Switch character case among four modes:  
Abc, ABC, 123 and abc.
- : Enter other characters.

Press and hold the following keys to:

-  - : Enter 0 - 9 numbers.
- : Shift between multi-tap and T9 mode.
- : Display the language options screen.




## Changing the Input Language




1. On the text entry screen, press [Options] and select “Input Language”.
2. Select the desired language.




## Changing the Input Mode

### T9 Text Input

T9 text input method is a shortcut to enter text easily and quickly.

1. On the text entry screen, press and hold  to enter T9 mode.
2. Press [Options] and select “Input Mode”.
3. Select the input mode (Abc, ABC, 123, abc).
4. Press each key once for any letter you require on that key.


To enter the word “How”, press   .

5. If the word shown is not the one you want, press  or  until you highlight the correct one.
6. Press  to select the word.

### Note

- If the correct word is not shown in step 5, enter the correct word again after switching to the multi-tap input method.

### Tip

- If you press  instead of step 6, a space is inserted next to the selected word.

### Symbols and Punctuation

1. On the text entry screen, press [Options] and select “Add Symbol”.
2. Select the desired symbol.

## My Dictionary

You can create your own word list for T9 text input.

1. On the text entry screen in T9 mode, press [Options] and select “My Dictionary”.
2. Select “Add New Word” and enter a new word.

### Editing a Word in the List

1. On the text entry screen in T9 mode, press [Options] and select “My Dictionary”.
2. Highlight the desired word.
3. Press [Options] and select “Edit”.
4. Modify the word.



## Using Templates

You can use the phrases registered in Text Templates when entering characters.

For details on creating the text template, see “Adding Phrases to Text Templates” on page 109.

1. On the text entry screen, move the cursor to the point you wish to insert the template.
2. Press [Options] and select “Advanced”.
3. Select “Insert Template”.
4. Select the desired text template.

## Copying, Cutting and Pasting Text

1. On the text entry screen, press [Options] and select “Advanced”.
2. Select “Copy” or “Cut”.
3. Move the cursor to the first letter to be copied or to be cut, then press .
4. Move the cursor to the last letter to highlight the area, then press .
5. Move the cursor to the point you wish to paste the letters.
6. Press [Options] and select “Advanced”.
7. Select “Paste”.

# Using the Menu

## Main Menu



1. Press  $\odot$  in standby.  
The Main menu is displayed.
2. Press  $\blacktriangle$ ,  $\blacktriangledown$ ,  $\blacktriangleleft$  or  $\blacktriangleright$  to highlight the desired menu, then press  $\odot$  to access the function.  
For details on the menu options, see “List of Menu Functions” on page 18.

## Shortcut Keys

You can access menus by pressing  $\odot$  and digit keys for the corresponding number on the Main menu. For numbers 10 to 12, press  $\odot$  and  $\boxed{*09}$  (10),  $\boxed{0-}$  (11) or  $\boxed{\#*}$  (12). For menus with tabs, press  $\blacktriangleright$  (or  $\blacktriangleleft$  when necessary) to select the desired tab before pressing the digit keys. See “List of Menu Functions” on page 18. Shortcuts are listed in the headings of this user guide.

Example (p. 53): To Access “Name Order” Sub Menu

### Changing the Name Order (M 8- $\blacktriangleright$ - $\blacktriangleright$ -4-1)

“Contacts Manager”  $\rightarrow$  “Settings” tab  $\rightarrow$  “Contacts Settings”  $\rightarrow$  “Name Order”

Press  $\odot$   $\boxed{8-}$  and  $\blacktriangleright$  twice for the “Settings” tab, then press  $\boxed{4-}$   $\boxed{1-}$ .

Example (p. 125): To Access “Tasks” Sub Menu

### Tasks (M 7-4)

Press  $\odot$   $\boxed{7-}$   $\boxed{4-}$ .

#### Note

- The shortcut keys work for the first three menu levels only.

## **Contacts Manager (M 8)**

You can store the phone numbers and Email addresses of your friends, family and colleagues in the Contacts List.

Your phone can store up to 500 entries. For each entry, you can enter information including up to 3 phone numbers and 3 Email addresses. There is a limit to the number of characters that can be entered for each item. The character limit differs for the handset memory and SIM card memory.

### **Adding a New Contact**

The amount of phone numbers that you can store to the SIM card is dependent on its capacity. Contact your service provider for details.

#### **Selecting the Storage Memory (M 8---4-3)**

You can choose either the phone or SIM card memory locations to store the new entry.

***“Contacts Manager” → “Settings” tab → “Contacts Settings” → “Save New Contact to”***

1. Select from “Handset”, “SIM” or “Choose before Saving”.

If the selected location is different from the list displayed, a confirmation message is displayed.

#### ***Tip***

- *“Choose before Saving” prompts you to choose the memory every time you save a new entry.*

### **Registering a New Entry (M 8-2)**

***“Contacts Manager” → “Contacts” tab → “Add New Contact”***

If you select the “Choose before Saving” option for the memory to be used, the selection is between “To Handset” and “To SIM”.

1. Select the field you wish to fill in, and enter the relevant information.
2. Press [Save], when finished.

#### ***Tip***

- *To create an entry, at least one field must be filled (“First Name”, “Last Name”, “Phone Number” or “Email Address” for the handset memory; “Name” or “Phone Number” for the SIM memory).*

## Saving an Unregistered Number

(M 8-▶-▶-4-5)

After the call ends, you can have the confirmation screen asking you if you wish to register the number to the Contacts List.

*“Contacts Manager” → “Settings” tab → “Contacts Settings” → “Save Unregistered”*

1. Select “Incoming Call” or “Outgoing Call”.
2. Select “On” or “Off”.

## Registering My Contact Details (M 8-3)

You can register and edit your own contact as with other Contacts List entries.

*“Contacts Manager” → “Contacts” tab → “My Contact Details”*

## Searching for an Entry

You can search for the desired entry by entering the first few letters of the name or by sorting the entries.

## Changing the List Displayed

(M 8-▶-▶-4-2)

*“Contacts Manager” → “Settings” tab → “Contacts Settings” → “Contacts Location”*

1. Select from “Handset”, “SIM” or “Both”.

If the selected location is different from the contact storage memory, a confirmation message is displayed.

## Finding a Name

*“Contacts Manager” → “Contacts” tab → “Contacts List”*

1. Enter the first few letters of the name.

The first name corresponding to the entered letters is highlighted.

### Tip

- You can select the Contacts location from “Handset”, “SIM” or “Both” before searching.

## Changing the Name Order

(M 8---4-1)

**“Contacts Manager”** → **“Settings” tab** → **“Contacts Settings”** → **“Name Order”**

1. Select “First-Last Name” or “Last-First Name”.

## Sorting the Contacts List Entries

(M 8---4-4)

You can change the listing order of the Contacts List entries to alphabetical order or by different categories.

**“Contacts Manager”** → **“Settings” tab** → **“Contacts Settings”** → **“Sort Contacts”**

1. Select “By Alphabet” or “By Category”.



## Dialling from the Contacts List

**“Contacts Manager”** → **“Contacts” tab** → **“Contacts List”**





### Tip

- You can also display the Contacts List in the following procedure:

**“Telephony”** → **“Call” tab** → **“Contacts List”**

1. Highlight the desired entry and press  (voice call) or  (video call).

### Tip

- If more than one phone number is registered for the entry, highlight the desired phone number after step 1 and press  (voice call) or  (video call).
- You can also dial from the details screen of the Contacts List. On the details screen, select the desired phone number and press  (voice call) or  (video call).


## Dialling a Service Phone Number (M 8-4)

Certain SIM cards contain service phone numbers that can be dialled. Contact your SIM card vendor for more information. On the Contacts screen, “Service Dialling No.” is displayed at the bottom of the list.

**“Contacts Manager” → “Services” tab → “Service Dialling Numbers”**

1. Select the desired service phone number.

### **Tip**

- You can also display service phone numbers in the following procedure:  
“Telephony” → “Call” tab → “Service Dialling Numbers”
- If the SIM card contains only one service phone number, you can dial it in step 1 by pressing .
- If no service phone number is stored in the SIM card, this menu is not displayed.

## Sending a Message from the Contacts List

**“Contacts Manager” → “Contacts” tab → “Contacts List”**

### **Tip**

- You can also display the Contacts List in the following procedure:  
“Telephony” → “Call” tab → “Contacts List”
1. Select the desired entry including the phone number or Email address you wish to use.
  2. Highlight the desired phone number or Email address.
  3. Press [Options] and select “Create Message”.
  4. Select the desired type of messaging.

For further procedures, see “Creating a New Message” on page 82.

## **Sending a Voice Clip Message or Video Clip Message Using an Address from the Contacts List**

*“Contacts Manager” → “Contacts” tab → “Contacts List”*

1. Select the desired entry including the phone number or Email address you wish to use.
2. Highlight the desired phone number or Email address.
3. Press [Options] and select “Create Message”.
4. Select “Voice Message” or “Video Message”.

For further procedures, see “Creating a New Message” on page 82.

## **Using Mailing Lists (M 8-▶-▶-1)**

You can create a mailing list to send the same message to a group of recipients at once. Up to 5 groups can be registered.

### **To Create a New Mailing List**

*“Contacts Manager” → “Settings” tab → “Manage Groups” → “Add New Group”*

1. Enter the group name.

The new group name is displayed following the last group on the Group List screen.

### **To Add Recipients to a Group**

Up to 20 recipients can be registered in each list.

*“Contacts Manager” → “Settings” tab → “Manage Groups”*

1. Highlight the desired group name.
2. Press [Options] and select “View”.
3. Select “Assign New Entry”.
4. Select the desired entry.  
The detailed screen is displayed.
5. Select the desired phone number or Email address.



### **Tip**

- *If you modify the entry assigned in the group, you need to re-assign it to the group. Highlight the entry, press [Options], then select “Re-assign Entry” in step 3.*
- *To remove an entry from the group, highlight the entry, press [Options], then select “Remove Entry” in step 3.*
- *To remove a group, highlight a group name and press [Options] and then select “Delete” in step 2.*

### To Send a Message Using a Mailing List

#### **“Contacts Manager” → “Settings” tab → “Manage Groups”**

1. Highlight the desired group name.
2. Press [Options] and select “Create Message”.
3. Select the desired type of messaging.

For further procedures, see “Creating a New Message” on page 82.

### **Editing Contacts List Entries**

#### **“Contacts Manager” → “Contacts” tab → “Contacts List”**

1. Highlight the entry you wish to edit.
2. Press [Options] and select “Edit”.
3. Modify the information.
4. Press [Save] when finished.

## Adding a Thumbnail to Entries

Only Contacts saved to the handset can have Thumbnails attached to them.

***“Contacts Manager” → “Contacts” tab → “Contacts List”***

1. Highlight the desired entry.
2. Press [Options] and select “Edit”.
3. Select “Picture”.
4. Select “Assign Picture”.
5. Select the desired picture.
6. Press [Save] when finished.

### ***Note***

- *If you delete a picture in the handset memory, the corresponding thumbnail is also deleted.*
- *To store a picture right after it was taken, select “Take Picture” in step 4.*

## Assigning a Ringtone or a Ring Video Clip to Each Entry

***“Contacts Manager” → “Contacts” tab → “Contacts List”***




1. Highlight the desired entry.
2. Press [Options] and select “Edit”.
3. Select “Assign Tone/Video”.

4. Select “For Voice Call”, “For Video Call” or “For New Message”.
5. Select “Assign Tone” or “Assign Video”.  
When selecting “Assign Video”, go to step 7.
6. Select “Preset Sounds” or “My Sounds”.
7. Select the desired tone or video clip.  
For details on selecting a ringtone or a ring video clip, see “Assigning a Ringtone for an Incoming Call” on page 134 or “Assigning a Ring Video Clip for an Incoming Call” on page 135.
8. Press [Save] when finished.

## Registering Birthday Item to Calendar

A birthday entered in a contacts list entry can be registered to the calendar.

**“Contacts Manager”** → **“Contacts” tab** → **“Contacts List”**

1. Highlight the desired entry.
2. Press [Options] and select “View”.
3. Press  to display the second tab.
4. Press  to highlight the birthday entry.
5. Press [Options] and select “Set Reminder”.
6. Press .

### Tip

- After registration, the data in Calendar can be customised. For details on customising a schedule entry, see “To Change the Settings” and etc. on page 121.
- If the Calendar memory is full, “Set Reminder” is not displayed in step 5.

## Deleting Contacts List Entries

### Deleting All Contact Entries (M 8---3-3)

**“Contacts Manager”** → **“Settings” tab** → **“Manage Contacts”** → **“Delete All Entries”**

1. Select from “Handset Entries”, “SIM Entries” or “Both Entries”.
2. Enter your handset code.  
For details on the handset code, see “Changing the Handset Code” on page 146.

### Deleting a Contact Entry

**“Contacts Manager”** → **“Contacts” tab** → **“Contacts List”**

1. Highlight the desired entry.
2. Press [Options] and select “Delete”.

## Managing Contacts List

### Copying Contacts List Entries between SIM Card and Handset (M 8-3-1)

“Contacts Manager” → “Settings” tab → “Manage Contacts” → “Copy All Entries”

1. Select “From SIM to Handset” or “From Handset to SIM”.

#### *Note*

- *When you insert the SIM card into your phone for the first time and start the Contacts List application, the confirmation screen is displayed automatically, asking you if you wish to copy or not. The number of Contacts List entries to be copied varies depending on the SIM capacity.*
- *If the memory space is not enough to save all entries, you cannot complete copying.*

### Sending a Contacts List Entry

“Contacts Manager” → “Contacts” tab → “Contacts List”

1. Highlight the desired entry.
2. Press [Options] and select “Send Contact”.
3. Select “As Message” or “Via Bluetooth”.

For “As Message”

For details, see “MMS” on page 81.

For “Via Bluetooth”

For details, see “Using the Bluetooth Function” on page 147.

### Receiving a Contacts List Entry

When the phone receives a Contacts List entry, a confirmation message is displayed in standby.

1. Press [Yes].  
The received entry is saved in the Contacts List.  
Press [No] to reject.

#### *Tip*

- *For details on entering Bluetooth wireless settings, see “Connectivity” on page 147.*

## Synchronising Contacts List Entries with those on the Internet (M 8-3-3)

The data synchronisation functions are a network service which allow you to manage your Contacts List from the phone and also via the Internet. The data in the SIM card will not be synchronised. Subscribe to a synchronisation service by contacting your network service centre.

**“Contacts Manager”** → **“Services” tab** → **“Synchronise”**

There are three available synchronisation modes.

### *Note*

- *If there are no active synchronisation settings (M 8-3-5), these modes will not be available.*

## Synchronising the Contacts List (M 8-3-1)

1. Select “Sync Now!” to synchronise the Contacts List on the phone with those on the Internet server. Full details of the rules for this method of synchronisation can be obtained from your network service centre or via the Internet server web page.

## Backing up the Contacts List (M 8-3-2)

1. Select “Backup” to save your Contacts List to the Internet server.  
This will overwrite any contacts data stored on the server.

## Restoring the Contacts List (M 8-3-3)

1. Select “Restore” to retrieve the Contacts List on the Internet server.  
This will overwrite all contacts data currently stored in the phone (SIM contacts are not affected). You will be asked to verify the handset code before the Restore action is performed. If an incorrect code is entered, Restore will be terminated.

## Viewing the Log (M 8-3-4)

1. Select “View Log” to see the details of the last synchronisation session.

## Synchronisation Settings (M 8-3-5)

“Contacts Manager” → “Services” tab → “Synchronise” → “Sync Settings”

1. Select the desired account or “Create New” to enter the following settings.

“Profile Name”:	Synchronisation profile name (Unique name)
“Server Name”:	Server address
“User ID”:	User ID for authentication
“Password”:	Password for authentication
“Proxy”:	Selects Proxy setting for synchronisation.
“Contacts DB Name”:	Contacts List database name on the server

### Note

- *Synchronisation settings may have already been entered in your phone depending on your service provider. You may have restrictions on viewing, deleting, copying or modifying the settings. Contact your service provider for details.*

## Manage Category (M 8-2)

Different ringtones can be set for each category. If you do not change a category ringtone, the ringtone assigned in the Profiles menu is used.

“Contacts Manager” → “Settings” tab → “Manage Category”

1. Highlight the desired category.
2. Press [Options] and select “Assign Tone/Video”.
3. Select “For Voice Call”, “For Video Call” or “For New Message”.
4. Select “Assign Tone” or “Assign Video”.  
When selecting “Assign Video”, go to step 6.
5. Select “Preset Sounds” or “My Sounds”.
6. Select the desired tone or video clip.

For details on selecting a ringtone or a ring video clip, see “Assigning a Ringtone for an Incoming Call” on page 134 or “Assigning a Ring Video Clip for an Incoming Call” on page 135.

## Editing the Category Name

You can edit category names to be assigned to the Contacts List entries.

*“Contacts Manager” → “Settings” tab → “Manage Category”*

1. Highlight the desired category name.
2. Press [Options] and select “Edit Name”.
3. Modify the name.

## Speed Dial List

You can set a maximum of 8 phone numbers in the Speed Dial list (p. 36).

### Setting Contacts List Entries in the Speed Dial List (M 8--2)

*“Contacts Manager” → “Services” tab → “Speed Dial List”*

1. Select the desired entry.
2. Highlight the desired phone number.
3. Press [Options] and select “Assign”.
4. Select the desired location.

#### Tip

- The nine digit keys ( - ) correspond to Speed Dial list numbers.
- When the list is empty, select “Assign” in step 1.

To Edit the Speed Dial List (M 8--2)

*“Contacts Manager” → “Services” tab → “Speed Dial List”*

1. Highlight the entry you wish to edit.
2. Press [Options] and select “Re-Assign” (or “Assign”).

## Memory Status (M 8---3-2)

This function helps you to check the memory used in the Contacts List.

*“Contacts Manager” → “Settings” tab → “Manage Contacts” → “Memory Status”*


## Multimedia (M 3)

### Music Player (M 3-1)

Music Player supports MP3, MPEG-4 and 3GPP format sound files. You can access other menus while listening to sound files.

#### Creating a New Playlist

You can create your own playlist, storing and managing your favourite tracks and the order of tracks.


 → “**Music**” → “**My Music**” → “**Playlists**”

1. Press [Options] and select “Add New Playlist”.
2. Enter the desired playlist name.

#### Note


- To delete the playlist, highlight the playlist and press [Options]. Then select “Delete Playlist”.
- You can create up to 99 playlists.

#### Playing Back Sound Files

 → “**Music**” → “**My Music**”

1. Select the item you wish to play back.
  - “All Music”:  
All sound files are displayed.

- “Artists”:  
The names of all artists are displayed.  
When an artist is selected, all of his or her albums are displayed.  
When an album is selected, all of the sound files in the selected album are displayed.
- “Albums”:  
The names of all albums are displayed.  
When an album is selected, all of the sound files in the selected album are displayed.
- “Playlists”:  
All playlists are displayed.  
When any playlist is selected, all of the sound files in the selected playlist are displayed.

2. Select the desired sound file.  
To pause playback, press .



## Note

- Select “My Music” to update the list of available music tracks.
- You are asked whether or not to play sounds when the Silent mode is activated.
- To play the last played file, select “Last Played Music”. “Currently Playing” is displayed when a file is being played back.
- When you receive a call, playback of the current file is paused, and you can receive the call. After the call ends, the paused playback resumes automatically in the background.

## Tip

- You can return to the Main menu screen while playing back the file in the background.
- You can create your playlist by listing only the desired files (p. 63).
- Sound files in both the handset and the memory card are displayed in a single view.
- You can select the playback pattern in step 2. Press [Options] and select “Playback Pattern”.
  - “Normal”: Plays back all files in the selected folder once and stops playback.
  - “Repeat”: Continues playback of selected file in the selected folder.
  - “Repeat All”: Plays back all files in the selected folder.

“Random”: Plays back files in the selected folder at random.

- While in the Music Player, the player can be controlled by using the following keys:

▲/▼ : Increases or decreases the volume.

⏏ (press and hold): Mutes.

▶ : Jumps to the next file.

⏮ : Returns to the start of the current file.

⏩ (press and hold): Fast-forwards.

⏪ (press and hold): Rewinds.

⏮ : Plays back the file in the background.

The side keys are always available to change the volume level.


## Sorting Files

☰ → “Music” → “My Music” → “All Music”

1. Press [Options] and select “Sort”.
2. Select “By Title”, “By Artist”, “By Album” or “By Genre”.  
Sort results are displayed.

## Adding a File to the Playlist

You can add files to a playlist by doing the following.

 → “**Music**” → “**My Music**” → “**All Music**”

1. Highlight the file you wish to add to the playlist.

2. Press [Options] and select “Add to Playlist”.

The playlists are displayed. For details on adding a playlist, see “Creating a New Playlist” on page 63.

3. Select the desired folder.


The file highlighted in step 1 is saved.

To delete files from the playlist, highlight the file in the playlist and press [Options]. Then select “Delete from Playlist”.

### Note

- You can store up to 99 files in one playlist. However, the total number of files stored on your phone cannot exceed 350 files.

## Downloading Music Files (M 3-1-3)

 → “**Music**” → “**Music Store**”

The music file download site is displayed.

### Note


- This service is not available with some service providers. Please contact your service provider for more information.

## My Wishlist (M 3-1-4)

You can purchase music. Tracks purchased on either your mobile phone or PC will be available for download on both devices. Selecting “My Wishlist” will launch the browser, access the Wishlist page and display the tracks you have added to the Wishlist. You can purchase desired tracks from the list.

## Video Player (M 3-2)

### Playing Back Video Clip Files (M 3-2-2)

 → “**Video**” → “**My Videos**”

1. Select “All Videos” or the desired playlist.


2. Select the desired file.


To pause playback, press .


To stop playback, press [Back].


### Tip


- You can control the Video Player by using the following keys:


: Increases or decreases the volume.

 (press and hold): Mutes.

: Jumps to the next file.


: Returns to the start of the current file.

 (press and hold): Fast-forwards.

 (press and hold): Rewinds.

The side keys are always available to change the volume level.

## Searching a File to Be Played Back


 → “Video” → “My Videos”

1. Select “All Videos” or the desired playlist.
2. Press [Options] and select “Search”.
3. Enter a few letters of the title.

Search results are displayed in alphabetical order and the matching file is highlighted. The search will match the entered text with any part of the title.

## Adding a File to the Playlist

You can add files to a playlist by doing the following.

 → “Video” → “My Videos”


1. Select “All Videos” or the desired playlist.
2. Highlight the file you wish to add to the playlist.
3. Press [Options] and select “Add to Playlist”.
4. Select the desired playlist.


The playlists are displayed. For details on creating a playlist, see “Adding a New Playlist” on page 66.

The file highlighted in step 3 is saved.  
To delete files from the playlist, highlight the file in the playlist and press [Options]. Then select “Delete from Playlist”.

## Adding a New Playlist

You can create a playlist and register desired files in it.

 → “Video” → “My Videos”


1. Press [Options] and select “Add New Playlist”.
2. Enter the desired playlist name.
3. Press .

### Note

- To delete the playlist, highlight the playlist and press [Options]. Then select “Delete Playlist”.

## Settings

You can select a play mode for “Playback Pattern”, “Backlight” and “Display Size” when playing back video clip files.

 → “Video” → “Settings”


1. Select from “Playback Pattern”, “Backlight” or “Display Size”.

2. Select from the following:

- “Playback Pattern”
  - “Normal”: Plays back all files in the selected folder once and stops playback.
  - “Repeat”: Continues playback of selected file in the selected folder.
  - “Repeat All”: Plays back all files in the selected folder.
  - “Random”: Plays back files in the selected folder at random.
- “Backlight”
  - “Always On”: Lit while the file is played back.
  - “Always Off”: Unlit while the file is played back even if a key is pressed.
  - “Normal Settings”: Works with the main backlight setting (p. 140).

- “Display Size”
  - “Original Size”: Displays the file in its original size.
  - “Enlarge”: Displays the file in an enlarged size.
  - “Full Screen”: Displays the file on the full screen.


## Downloading Video Clip Files (M 3-2-3)

 → “Video” → “Get Video”

The video clip file download site is displayed.

## Playing Back the Video Clip Files


To Play Back the Last File (M 3-2-1)


 → “Video” → “Last Played Video”

## FM Radio (M 3-3)

You can connect to the FM Radio service.

### Selecting a Radio Station


 → “FM Radio”

1. Press [Options] and select “Select Station”.
2. Highlight the desired radio station and press .

#### Tip

- You can play back the program in the background. Press [Options] and select “Play in Background” while the program is played back.
- A headset radio antenna is necessary to use this service.

### Saving a Radio Station

 → “FM Radio”

1. Press [Options] and select “Save Station”.
2. Press [Options] and select “Assign”.

## Searching for Stations

 → “FM Radio”

1. Press [Options] and select “Search”.
2. Select “Auto Search”.
3. Select “Search Upwards” or “Search Downwards”.

#### Tip

- You can scan and save the stations automatically by selecting “Auto Scan & Save” in step 2.
- You can also select the desired station by entering the frequency directly. Select “Enter Frequency” in step 2.

### Setting FM Radio Playback

 → “FM Radio”

To Switch the Output

1. Press [Options] and select “Settings”.
2. Select “Sound Output”.
3. Select “Headset”, “Loudspeaker” or “Bluetooth”.

To Activate the Auto Switch Off

1. Press [Options] and select “Settings”.
2. Select “Auto switch off”.
3. Select the desired option.

To Switch between Stereo and Monaural

1. Press [Options] and select “Settings”.
2. Select “Switch to Stereo”.

To Switch the Station List

1. Press [Options] and select “Settings”.
2. Select “Switch List to”.
3. Select the desired list.

## Mobile TV (M 1/M 3-4)

You can connect to the Mobile TV service.

### *Note*

- *This service is not available with some service providers. Please contact your service provider for more information.*
- *To use Mobile TV on your phone, you need to be in an area of 3G coverage.*
- *To use Mobile TV on your phone, you need to purchase a subscription package from your operator.*

## Radio DJ (M 3-5)

Radio DJ is an interactive, personalised music service available on your mobile phone subject to your service provider. Listen to your favourite music, discover new music and create personal channels. You can also personalise what you hear by rating tracks based on your musical tastes. When you hear a track you want to keep, you can purchase and download it. Tracks can be downloaded and played on your mobile phone.


### *Note*

- *This service is not available with some service providers. Please contact your service provider for more information.*
- *To use Radio DJ on your mobile phone, you need to be in an area with 3G coverage.*
- *To use Radio DJ on your mobile phone, you need to purchase stream time from your service provider.*

## Playing Pre-defined Channels

You can play the pre-defined channels.

When trying to access Radio DJ for the first time, you need to purchase stream time.

 → “Radio DJ” → “Radio DJ Channels”

1. Select the desired channel.

The playlist will be downloaded from the mobile network.


2. Select the desired track you wish to play.


To stop, press [Options] and select “Stop”.


To pause, press [Options] and select “Pause”.

## Tip


- The current track will always be in position 2 of the list followed by the next track and the track after in positions 3 and 4. The previous track will always be in position 1 of the track listing.
- You can control the Radio DJ by using the following keys:

 : Jumps to the next track

 : Jumps to the previous track

 : Plays the track in the background


The side keys are always available to change the volume level.

You can return to the Main menu screen while playing the track in the background. To access the play screen again, press .

- You can train your mobile phone to your own personal tastes for radio channels. While you are listening to a track, press [Options] and select “Like Track” or “Dislike Track”. Selecting “Dislike Track” skips to the next track and all tracks with similar properties will be removed from the playlist. Selecting “Like Track” adds more tracks with similar properties to the playlist.
- You can add a track to your Wishlist (p. 65) for later download/purchase. Press [Options] and select “Add to Wish List”.

## Creating a New Channel

You can create your own personal tastes channels.

 → **“Radio DJ”** → **“My Radio DJ Channels”** → **“Create New Channel”**

1. Select “Choose a genre”, “Choose a mood” or “Choose a decade”.

2. Select the desired genre, mood or decade.

Selecting ALL will generate a playlist with all the available genres, moods and decades.

Repeat steps 1 and 2 as necessary.

3. Press [Create].

4. Enter the channel name.

The channel name you enter is displayed in the “My Radio DJ Channels” menu. You can play the music in the same way as pre-defined channels (p. 70) by selecting the channel you have created.

## Tip

- You can also train your mobile phone to your own personal tastes for personal radio channels in the same way as pre-defined channels (p. 70).
- You can also add a track to your Wishlist for later download/purchase in the same way as pre-defined channels (p. 70).

## Radio DJ Compilations

Subject to your service provider, Radio DJ presents programmed collections of tracks to the customer on mobile phone or PC. These collections will be created by local music experts around a theme (e.g. Christmas Hits, or the Best New Hip-Hop), be updated regularly, and will comprise about 15 tracks (varied by country).

 → **“Radio DJ”** → **“Radio DJ Compilations”**

1. Select the desired compilation from the list.

2. Select the track you wish to play.

## Tip

- You cannot train your mobile phone for Compilation channels.
- You can also add a track to your Wishlist for later download/purchase in the same way as pre-defined channels (p. 70).



## Account

 → **“Radio DJ”** → **“Account”**

Selecting “Account” will launch the browser and navigate you to the Radio DJ subscription page.

## My Wishlist (M 3-5-2)

For details, see “My Wishlist” on page 65.

## Streaming (M 3-6)

You can play back video clip files while downloading them from the mobile network.

You can also register the address of the Web site as a bookmark.

 → **“Streaming”**

1. Select “Last Played Streaming”, “Enter URL”, “Favourites” or “History Log”.

“Last Played Streaming”:

Shows the last streaming file.

“Enter URL”:

Enter the desired address of the Web site. The browser opens, starts downloading and plays back.

“Favourites”:

The address of the Web site is registered.

“History Log”:

Shows a log of the Web sites you have accessed.

“Settings”:


The backlight and display size settings.

## **Camera (M 4)**

Your phone has a built-in digital camera that allows you to take pictures and record video clips wherever you are. This section starts with basic functions and operational procedures to take, save and send pictures and video clips, followed by common and unique functions to camera and video modes.

### **Taking Pictures**

#### *“Camera”*


1. Press  to take the picture.

The shutter sounds and the still image of the taken picture is displayed.


2. Press [Save].

The taken picture is saved in My Items.





To cancel, press [Cancel].

To send the taken picture, press  in step 2 and select “As Message”, “As Postcard” or “To Media Album” from the send option. (The Postcard and Media Album service is not available with some service providers. Contact your service provider for more information.)

#### *Note*

- When the video camera is launched, press [Options] and select “Go to Photo Camera”, or press .
- When you try to send a picture that has too large a file size, the picture size is resized for the message. The original sized picture is saved in My Items.

#### *Tip*


- You can activate the camera by pressing and holding  in standby. Simply press  to take pictures, and start and stop recording.
- You can lock the focus by pressing  or pressing  halfway before taking a picture or recording a video clip.



## Recording Video Clips

You can record a video clip with your phone.

### “Camera”

The preview is displayed on the screen.

When in photo camera mode, press  to switch to video camera mode.

1. Press .
2. To stop recording, press .
3. Select “Save”.

The video clip is saved in My Items.

To view the preview before saving, select “Preview”.

To send the video clip, select “Save and Send”. Then select “As Message” or “To Media Album”. (The Media Album service is not available with some service providers. Contact your service provider for more information.)

For further procedures, see “Creating a New Message” on page 82.



### Note

- You can only send video clips when “For Message” is selected for the recording time. For details, see “Selecting the Recording Time and Picture Size” on page 80.

## Common Functions in the Photo and Video Camera Modes

### Using the Digital Zoom Function



To Adjust the Zooming Ratio


1. Press  or .

Once the phone has returned to standby, the zoom settings return to default.

### Adjusting the Exposure

“Camera” → [Options] → “Exposure”

1. Press  (Bright) or  (Dark).

 : (Bright → Normal → Dark)

Once the phone has returned to standby, the brightness settings return to default.


## Selecting the Picture or Video Quality

Select the appropriate option.

“Camera” → [Options] → “Picture Quality”

“Camera” → [Options] → “Video Quality”

1. Select the desired picture or video quality.

 : Super Fine

 : Fine

 : Normal

### Note


- The better quality you select, the larger the file size becomes.

## Using the Self-Timer

Select the appropriate option.

“Camera” → [Options] → “Modes” → “Self-timer”

1. Select “2 sec”, “5 sec” or “10 sec”.

“” is displayed on the screen when you select one of these options.


Select “Off” to cancel the self-timer.

## Switching the Focus Mode

“Camera” → [Options] → “Modes” → “Focus”

1. Select the desired option.

 : Auto Focus

 : Manual Focus

 : Macro

## Switching the Display Direction

You can switch the display direction between portrait and landscape.

“Camera” → [Options] → “Settings” → “Portrait / Landscape”

## Selecting the Storage Memory

Select the appropriate option.

**“Camera”** → [Options] → **“Settings”** → **“Save New Pictures”**

**“Camera”** → [Options] → **“Settings”** → **“Save New Videos”**

1. Select the desired location from “To Handset Memory”, “To Memory Card” or “Choose bef. Saving”.

### Note

- If you select “Choose bef. Saving”, select the desired location every time you save.

## Auto Save

You can set the phone to save pictures and video clips automatically.

**“Camera”** → [Options] → **“Settings”** → **“Auto Save”**

1. Select “On” or “Off”.

## Selecting the Anti-flicker Mode



**“Camera”** → [Options] → **“Settings”** → **“Anti-flicker”**

1. Select “Mode 1: 50Hz” or “Mode 2: 60Hz”.

### Note

- Vertical stripes may occur on the picture due to the light source. Change the anti-flicker mode to rectify.

## Switching between the Photo and Video Camera Modes

You can switch between the photo and video camera modes by pressing  or .

Select the appropriate option.

**“Camera”** → [Options] → **“Go to Video Camera”**













**“Camera”** → [Options] → **“Go to Photo Camera”**

## Using the Help Function

**“Camera”** → [Options] → **“Help”**

## Common Shortcut Keys

If multiple options exist, they switch each time you press each following key.

	Photo Camera	Video Camera
	Focus Lock	
	Zoom Max/Min	
	Exposure	
	Focus	
	Save New Pictures	Save New Videos
	Picture Size	Picture Size
		
	Picture Quality	Video Quality
	Self-timer	
		
	Switches Viewfinder between with and without indicators	Switches the display modes in the Preview screen
	Switches between internal and external cameras	

### Note

- The “Switches the display modes” option is available in “Preview” before you save a video clip. See “Recording Video Clips” on page 74.

## Functions in Photo Camera Mode

### Selecting the Picture Size

You can select the size of pictures. All taken pictures are saved in the JPEG format.

“Camera” → [Options] → “Picture Size”

1. Select the desired size.




(External Camera) 1200 × 1600 dots/  
960 × 1280 dots/  
768 × 1024 dots/480 × 640 dots/  
240 × 320 dots/120 × 160 dots  
(Internal Camera) 240 × 320 dots/120 × 160 dots

## Continuous Shoot


There are various modes for taking continuous shots.  
“Camera” → [Options] → “Modes” → “Continuous Shoot”



### 1. Select the desired mode.

The following continuous shoot modes are available:

- “Off”: The continuous shoots are cancelled.
- “4 Pictures”/“9 Pictures” (  /  ): Takes 4 or 9 pictures continuously. After selecting this mode, select from “Fast”, “Normal”, “Slow” or “Manual”.
- “Overlapped” (  ): Overlaps continuous pictures into one picture and makes an afterimage. After selecting this mode, select “Fast” or “Normal”.

### Note


- When you select “Manual” to take continuous pictures, press  manually at the desired speed.

- When the Timer and Continuous Shoot functions are simultaneously set, “” and “” (for “4 Pictures”, for example) are alternately displayed.
- You cannot use the Continuous Shoot function for picture sizes larger than 480 × 640 dots. “9 Pictures” and “Overlapped” are not available for picture sizes larger than 240 × 320 dots.

## Selecting a Frame

You can select the frame from preset patterns or My Pictures.

**“Camera”** → [Options] → **“Modes”** → **“Add Frame”**

1. Select “Preset Frames” or “My Pictures”.
2. Select the desired frame.  
The selected frame is confirmed on the display.
3. Press .

### Note

- Images larger than 240 dots [W] × 320 dots [H] cannot be used.

## Using the Full Screen

You can display the preview on the full screen without the soft key area and indicator area.

**“Camera”** → [Options] → **“Settings”**

1. Select “Full Viewfinder”.  
To return to the normal viewfinder, select “Normal Viewfinder”.

## Selecting the Shutter Sound

**“Camera”** → [Options] → **“Settings”** → **“Shutter Sound”**

1. Select the desired shutter sound from 3 preset patterns.  
To play back the shutter sound, press [Play] in step 1.

### Note

- *Continuous Shoot* uses the specialised shutter sound that cannot be changed using the above settings.
- The shutter sound remains active even when “General Volume” (p. 133) is set to “Silent” to prevent unauthorised use.





## Functions in Video Camera Mode

### Selecting the Recording Time and Picture Size

“Camera” → [Options] → “Record Time/Size”

1. Select “For Message” or “Extended Video”.

For Message (  ): Limits the size to send a message depending on service providers.

Extended Video (  ): Less than 30 minutes (depending on the memory).

2. Select the desired picture size.

If “For Message” is selected, select “Large (QCIF)” or “Small (SubQCIF)”.

If “Extended Video” is selected, select “Large (QCIF)” or “Small (SubQCIF)”. When using the external camera, “QVGA (3gp)” is also available.

#### Note

- If you select “For Message” for the recording time, the file size is limited depending on the service provider. Therefore, the quality is also limited for the setting.
- “Save and Send” is not displayed after recording in the Extended Video mode.

### Recording Video Clips with Sound

To record a video clip with sound, the microphone needs to be activated.

“Camera” → [Options] → “Settings” → “Microphone”

1. Select “On” or “Off”.

#### Note

- The microphone is already turned on in the default setting. Select “Off” to record a video clip without the sound.
- The file size of a video clip can be reduced if the sound is not recorded.

### Video Encoding

“Camera” → [Options] → “Settings” → “Video Encode”

1. Select the appropriate format.

## Messaging (M 5)

Your phone allows you to send and receive text, multimedia and Email. It is compatible with most POP3 Email providers.

### **SMS**

SMS allows you to send text messages up to 765 characters long. If you send a message of more than 160 characters, it is split into several segments.

### **MMS**

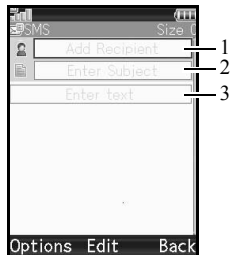
With MMS, you can send images, sound or video to brighten someone's day. Messages of up to 300 KB with images, sound, or video clips can be sent and received.

### **Email**

Email allows you to send messages of up to 300 KB.

#### *Note*

- *Some MMS functions may not always be available depending on your network. Contact your service provider for more information.*
- *Maximum message size varies depending on the restrictions set by the service provider.*



1. Recipient field
2. Subject field
3. Message field

## Creating a New Message (M 5-1)

(SMS/MMS)

“Messaging” → “Create Message” → “Message”

(Email)

“Messaging” → “Create Message” → “Email”

1. Select the recipient field.
2. Select the desired method to enter the recipient’s details.
3. For MMS, enter or select the Email address or phone number from the Contacts List. For SMS, enter or select a phone number. For Email, enter or select an Email address.
  - To add multiple Email addresses or phone numbers, highlight the recipient field, press [Options], select “Edit Recipient”, and then select “Add Contact”. Enter or select the Email address or phone number from the existing Contacts List.
  - To change the recipient types, press [Options], select “Edit Recipients” and highlight the desired recipient. Press [Options] and select “Change to To”, “Change to Cc” or “Change to Bcc”.

- To add a subject, highlight the subject field and press Ⓞ. Then enter the subject in the subject entry screen and press Ⓞ.

4. Place the cursor in the message field.
5. Press Ⓞ to display the message entry screen. Enter the message and press Ⓞ.
6. Press [Options] and select “Send”.  
“Send” is not available when no recipients are set. After the message is sent, the message is moved to the Sent box.


### Note

- When you create an SMS/MMS message, the mode is automatically switched to MMS in the following cases:
  - When “Enter Email Address” in [Options] is selected for recipient fields.
  - When a subject is entered.
  - When the size of entered text has exceeded the SMS size limit.

### Tip

- To send the same message to a group of recipients, select “Select Group” in step 2, then select the desired group name. For details on creating a mailing list, see “To Create a New Mailing List” on page 55.

## To Add a Slide Show

1. Perform steps 1 to 5 in “Creating a New Message” on page 82.
2. Press  to highlight your message or other inserted item such as a picture or sound file.
3. Press [Options] and select “Add Slide”.
4. Select “Add Slide After” or “Add Slide Before”.
5. Enter another message.

If you wish to set the duration of each slide, highlight the space between the slides. Press [Options] and select “Slide Duration”, then select the desired duration. Repeat steps 2 to 4 to add more slides.

### **Tip**

- *You can create messages up to 300 KB. Each slide can contain one picture and/or one sound file or video clip.*

## To Attach Data

1. In step 6 in “Creating a New Message” on page 82, press [Options] and select “Insert Item”.

2. Select “Picture”, “Sound”, “Video”, “Attach Contact”, “Attach Appointment” or “Others”. When selecting “Attach Contact” or “Attach Appointment”, go to step 4.
3. Select the desired option and then select the desired file.

If you wish to attach pictures, sounds or video clips that are saved, select “Saved Picture”, “Saved Sound” or “Saved Video”.

If you wish to take new pictures, record sounds or video clips, select “Take Picture”, “Record Voice” or “Record Video”.

#### 4. Select the desired data.

If you wish to select your own Contacts List entry, select “My Contact Details”.

When attaching an appointment, select the desired day including a schedule entry you wish to add and select the desired schedule entry.

#### *Note*


- *When attaching JPEG files, select the appropriate resize option, as the maximum message size for sending varies depending on the service provider.*


#### To Remove or Replace Attachments

1. In step 6 in “Creating a New Message” on page 82, press [Options] and select the corresponding remove option for each attachment.


#### Using the Sending Options

You can use the message sending options for each type of message.

1. Highlight “Send” in the lower left of the screen, then press  and select “Messaging Settings”.
  - “Read Report” (“On”, “Off”) (MMS): Confirms whether or not a report is sent notifying the sender that the message has been read.
  - “Delivery Report” (“On”, “Off”) (SMS/MMS): Enables or disables Delivery Report when the message is successfully sent to the recipient.
  - “Expiry Time” (“Maximum”, “30 minutes”, “1 hour”, “6 hours”, “1 day”, “1 week”) (SMS/MMS): Sets Expiry Time for a message to be saved in the server.
  - “Priority” (“High”, “Normal”, “Low”): Prioritises composed messages.
  - “Delivery Time” (“No delay”, “30 minutes”, “1 hour”, “6 hours”, “1 day”, “1 week”) (SMS/MMS): Sets the time the message is delivered after the Send key is pressed.

2. Highlight “Send” in the lower left of the screen. Press  and select “Send Message”.  
After the message is sent, the message is moved to the Sent box.

#### **Note**

- *The current message size displayed while you are creating the message is an approximation.*
- *If a message cannot be sent for some reason, the message stays in the Outbox and the “” is displayed in standby.*

#### **Tip**

- *To save the message without sending, press [Options] and select “Save to Drafts” in step 4 in “Creating a New Message” on page 82.*
- *You can send the following items attached to multimedia messages. Details are given in the following sections.*
  - *My Items data*
  - *Contacts List entry*
  - *Schedule entry created by Calendar, etc.*
- *You can use the template option to help you compose messages. For details on using this option, see “Using Templates” on page 49.*

### **Sending a Message in the Drafts Box (M 5-3)** **“Messaging” → “Drafts”**

1. Select the desired tab, SMS/MMS or Email.
2. Press [Options] and select “Edit & Send”.
3. Modify the message, if necessary.
4. Press [Options] and select “Send”.  
“Send” is not available when no recipients are set.



## Sending a Voice Clip Message or Video Clip Message

You can record a new voice or video clip when creating a new message.

Select the appropriate option.

**“Messaging”** → **“Create Message”** → **“Voice Message”**

**“Messaging”** → **“Create Message”** → **“Video Message”**

1. Press  to start recording.
2. Press  to stop recording.
3. Select “Accept” to attach to the new message.
4. Select “To Handset Memory” or “To Memory Card” as the destination to save.

For further procedures, see “Creating a New Message” on page 82.

### Tip

- You can play back voice or video clips from My Items.

## Reading a Message

Messages you receive are saved in the Inbox.

**“Messaging”** → **“Inbox”**

1. Select the desired tab, SMS/MMS or Email.
2. Select the message you wish to view.

## Storing the Phone Number of a Sender in the Contacts List

**“Messaging”** → **“Inbox”**

1. Select the desired tab, SMS/MMS or Email.
2. Highlight the message from which you wish to store the phone number or Email address.
3. Press [Options] and select “Save Address”.

The new Contacts List entry screen including the phone number is displayed. For details on creating a new Contacts List entry, see “Adding a New Contact” on page 51.


## Calling the Phone Number of a Sender Embedded in the Message

**“Messaging”** → **“Inbox”**

1. Select the desired tab, SMS/MMS or Email.
2. Highlight the message containing the phone number you wish to dial.
3. Press [Options] and select “Call”.

## Downloading a Single MMS

*“Messaging”* → *“Inbox”*

1. Select the SMS/MMS tab.
2. Highlight the message alert (  ) you wish to download.
3. Press [Options] and select “Download”.

### *Tip*

- You can download multiple messages at the same time. See “Downloading Multiple MMS”.

## Downloading Multiple MMS

*“Messaging”* → *“Inbox”*

1. Press [Options] and select “Advanced”.
  2. Select “Multiple Select”.
  3. Select the desired message alerts, press [Options] and select “Select” or “Select All”.
  4. Press [Options] and select “Download”.
- The selected messages are downloaded at the same time.

## Replying to a Message or to All Addresses

*“Messaging”* → *“Inbox”*

1. Select the desired tab, SMS/MMS or Email.
  2. Highlight the message the sender of which you wish to reply to.
  3. Press [Options] and select “Reply” (to sender only) or “Reply All” (to all other recipients listed in the original To or Cc lists).
  4. Select “Reply” or “Reply with History”.
  5. Enter the message.
  6. Press [Options] and select “Send”.
- “Send” is not available when no recipients are set.

## Forwarding a Message

*“Messaging”* → *“Inbox”*

1. Select the desired tab, SMS/MMS or Email.
2. Highlight the message you wish to forward.
3. Press [Options] and select “Forward”.
4. Perform steps 1 to 5 in “Creating a New Message” on page 82.



## Sorting the Messages in the List

“*Messaging*” → “*Inbox*”

1. Select the desired tab, SMS/MMS or Email.
2. Press [Options] and select “View Settings”.
3. Select “Sort”.
4. Select the desired sort option.

## Locking or Unlocking the Messages

“*Messaging*” → “*Inbox*”

1. Select the desired tab, SMS/MMS or Email.
2. Highlight the message you wish to lock or unlock.
3. Press [Options] and select “Lock/Unlock”.

## Sending a Picture File with Postcard (M 5-1-4)

Your phone allows you to send multimedia messages to a Vodafone specific Postcard service centre that prints the picture and mails it to the recipient’s home address specified in the MMS message. (Your phone is provided with the address of a Vodafone specific Postcard service centre, and its address cannot be changed.)

### *Note*

- *This service is not available with some service providers. Please contact your service provider for more information.*

## To Create a New Postcard

See the note on page 20 for menu indications.

“*Messaging*” → “*Create Message*” → “*Postcard*” → “*Saved Pictures*”

1. Select a picture you wish to send.  
If you wish to take new pictures, select “Take Pictures”.  
If the file size of selected JPEG format pictures or taken pictures is too large to send, select the appropriate resize option.
2. Enter your message.  
You can enter messages of up to 200 bytes.

3. Enter or select the recipient.

See the note below for details.

- “Name” (mandatory):  
Name of the recipient for a postcard up to 50 bytes
- “Additional Information” (optional):  
Additional information of the recipient up to 50 bytes
- “Street & Number” (mandatory):  
Street and number up to 50 bytes
- “City” (mandatory):  
City up to 50 bytes
- “Postal Code” (optional):  
Postal code up to 20 bytes
- “State/Province” (optional):  
State, province, and region up to 50 bytes
- “Country” (optional):  
Country up to 20 bytes

4. Press [Options] and select “Send Postcard”.

**Note**

- *The items “Name”, “Street & Number” and “City” are necessary to complete sending Postcards.*
- *The items displayed differ according to the service. Please contact your service provider for more information. The item “Country” may not be displayed, in which case you cannot send Postcards overseas from your phone.*
- *Asterisks entered in the address become invalid when the message is sent, and spaces cannot be entered in the Postal Code.*
- *Only files in JPEG format can be used for the Postcard service.*
- *The picture quality of Postcards varies depending on the picture size.*

## Instant Messenger (M 5-6)



With Vodafone Messenger you can stay in touch and have fun with friends through instant messaging. You will know when your friends are available to chat and that they immediately receive your instant messages. When you first start using Vodafone Messenger, all you need to know is your friend's mobile number or messenger ID to build your Vodafone Messenger contact list.

### Note

- *The name for this service varies depending on the region. Also, the service is split into two types, an Instant Messenger version and a Web version. The Instant Messenger version is described here. If your phone does not access the Instant Messenger version as described here, you will connect to the Web version. To find out which service you are using, please contact your service provider.*

## 1st Sign in

**“Messaging”** → **“Instant Messenger”**

1. Enter your screen name and press .  
Your phone is connected to Instant Messenger server.
2. Select one of the following methods to add members to your contact list.  
“Enter Phone Number”:  
Enters the contact's phone number.  
“Enter Messenger ID”:  
Enters the contact's messenger ID.  
Enter from your Contacts List:  
Selects members from your Contacts List.
3. Enter the display name and press .

### Tip


- *You can change the screen name and display name at any time.*
- *If the necessary settings for Instant Messenger are not entered, the settings screen is displayed (p. 99).*

## Starting a Conversation

**“Messaging”** → **“Instant Messenger”** → **“Online Contacts” tab** or **“Group Conversations” tab**

1. Select the display name or the group name you wish to send the message to.






The conversation dialogue opens.

2. Enter the message in the lower window and press .  
When the message is sent, the message moves to the upper window.
3. When you receive a message, it is displayed in the upper window.
4. To continue the conversation, repeat steps 2 and 3.

### Note

- You can enter up to 160 characters in each message that is sent.
- You can send messages even if the recipient is not connected.

### Tip

- You can move the cursor by /.  
When the cursor is at the top of the lower window,  moves control to the upper window then / scrolls the text in the upper window. To return to the lower window, press [Back].

- The number of lines in the upper and lower windows changes to suit the circumstances.




## Adding a New Contact

**“Messaging”** → **“Instant Messenger”** → **“Registered Contacts” tab** or **“Online Contacts” tab**

1. Press [Options] and select “Add New Contact”.
2. Enter the new Contacts List member by steps 2 and 3 in “1st Sign in” on page 90.

## Adding a Group of Contacts

**“Messaging”** → **“Instant Messenger”** → **“Group Conversations” tab**

1. Press [Options] and select “Add New Group”.
2. Enter the group name and press .  
The Online Contacts list opens.
3. Highlight each member you wish to add to the group and press  to check.  
To uncheck, press  once.
4. Press [Save].

## Adding Members to a Group of Contacts

**“Messaging”** → **“Instant Messenger”** → **“Group Conversations”** tab

1. Highlight the group you wish to add the members to.
2. Press [Options] and select “Invite Contacts”.  
The Online Contacts list opens.
3. Select the members by steps 3 and 4 in “Adding a Group of Contacts” on page 91.

## Reading a Message

**“Messaging”** → **“Instant Messenger”** → **“Conversations”** tab

1. Select the desired message you wish to read.

### Tip

- *You can continue a conversation after you have received a message by entering a message in the lower window.*

## Saving a Conversation

**“Messaging”** → **“Instant Messenger”** → **“Conversations”** tab

1. Highlight the conversation you wish to save.
2. Press [Options] and select “Save Conversation”.

### Note

- *You can save up to 3900 bytes (approx. 100 lines) in a conversation. When this limit is exceeded, messages are automatically deleted starting from the oldest message.*
- *You can save up to ten conversations. When this limit is exceeded, you will be asked to delete old conversations starting from the oldest message.*
- *You can view saved conversations as follows:*

## Reading a Saved Conversation

**“Messaging”** → **“Instant Messenger”** → **“Conversations”** tab

1. Press [Options] and select “Saved Conversations”.
2. Select the conversation you wish to read.

## Watchers List

The watchers list allows you to see who is viewing your status.

### To Add Contacts from the Watchers List

You can add the watchers to the Contacts List using any tab.

#### **“Messaging” → “Instant Messenger”**

1. Press [Options] and select “Settings”.
2. Select “Watchers List”.  
The Watchers List opens.
3. Press [Options] and select “Add to Contacts”.

#### **Tip**

- *To block a member from viewing your status, highlight the member you wish to block, press [Options] and select “Block User”.*

## Client Settings

You can set these options using any tab.

#### **“Messaging” → “Instant Messenger”**

1. Press [Options] and select “Settings”.
2. Select one of the following items.

“My Status”:	Changes your connection status to “Online” or “Busy”.
“Screen Name”:	Changes your screen name.
“Automatic Sign In”:	Sets whether or not to sign in when you turn your phone on.
“Block List”:	Views and removes contacts from the Block List.

## Sign Out

You can log out using any tab.

1. Press [Options] and select “Sign Out”.

#### **Note**

- *Be sure to disconnect when signing out. Otherwise, you will be charged for data.*

## Cell Broadcasts (M 12----5-4)

You can receive cell broadcast messages or general messages such as weather forecasts and traffic reports. This information is broadcast to subscribers in certain network areas.

This function may not be available on all mobile phone networks. Contact your service provider for more information.

### Enabling/Disabling Cell Broadcasts

*“Settings” → “Other Settings” tab → “Network Settings” → “Cell Broadcasts” → “Switch On/Off”*

1. Select “On” or “Off”.

### Reading Cell Broadcast Messages


*“Settings” → “Other Settings” tab → “Network Settings” → “Cell Broadcasts” → “Read Messages”*

1. Select the desired subject.
2. Scroll the screen to read the message.
3. Press [Back].

### Setting Languages for Cell Broadcast Messages

*“Settings” → “Other Settings” tab → “Network Settings” → “Cell Broadcasts” → “Settings” → “Language”*

The current language is displayed.

1. Press  to check.
2. Press [Save].

### Subscribing to Cell Broadcasts

Select the page of the cell broadcast message that you want.

*“Settings” → “Other Settings” tab → “Network Settings” → “Cell Broadcasts” → “Settings” → “Set Info Subjects”*

1. Press [Options] and select “Add/Remove”.
2. Select the desired subject.
3. Press [Save].

#### *Tip*

- *If the desired subject is not in the list that appears in step 2, select “Create Subject” in step 1, then enter the subject code to add a page. For details on the subject code, contact your service provider.*

## Messaging Settings (M 5-10)

### Tip

- You can also display the Messaging Settings menu in the following procedure:  
“Settings” → “Other Settings” tab → “Message Settings”

### General Settings (M 5-10-1)

“Messaging” → “Messaging Settings” → “General Settings”


1. Select the item you wish to set up.
  - “Auto Delete”:  
Deletes the oldest message automatically, when the Inbox, Sent or Both (Inbox and Sent) is full.
  - “Message List View”:  
Switches the mailbox listing (“Two-line”, “One-line”).
  - “Signature”:  
Enables or disables “Auto Insert”. Select “Edit” to edit current signature.
  - “Message Type”:  
Sets the type of message to send by default when a message is composed. When set to “Free”, the message is sent automatically either as an SMS or MMS as appropriate.

### SMS Settings (M 5-10-2)

“Messaging” → “Messaging Settings” → “SMS Settings”

1. Select the item you wish to set up.
  - “Delivery Report”:  
Enables or disables Delivery Report request.
  - “Signature”:  
Enables or disables “Auto Insert”. Select “Edit” to edit current signature.
  - “Auto Resend”:  
Tries to resend the failed SMS/MMS message up to two times (“On” or “Off” selection).
  - “Expiry Time”:  
This indicates the number of days and hours for which a message you send may remain undelivered to the message recipient. During this period, the message service centre will continually try to deliver the message to the recipient.



- “Message Centre”:  
Enter the message centre number. Up to 3 numbers can be registered.  
If you wish to enter a country code for a message to an international number, press and hold  until a + sign is displayed.
- “Message Format”:  
Sets the message format to be used when creating a new message.
- “Reply Path”:  
Enables or disables adding a reply path to the message.
- “Optimisation”:  
When set “On” (default), double-byte characters such as European characters with an accent are converted into single-byte characters and sent.  
When “Off”, double-byte characters are sent as displayed.  
Please note that you may be charged double for double-byte characters sent in an SMS when Optimisation is set “Off”.
- “Connection Type”:  
Sets the preferred connection type (“GPRS Preferred”, “CSD Preferred”).

### MMS Settings (M 5-10-3)

“Messaging” → “Messaging Settings” → “MMS Settings”

1. Select the item you wish to set up.
  - “MMS Accounts”:  
Select the desired account or select “Create New” to enter the following settings.
    - “Profile Name”: MMS profile name (Unique name)
    - “Proxy”: Proxy setting for MMS
    - “Relay Server URL”: MMS relay server
  - “Home Download”:  
Controls the message download timing inside your network area.
  - “Always Download”:  
Downloads messages immediately from the server.
  - “Always Defer”:  
Defers message download.

- “Roam Download”:  
Controls the message download timing when roaming outside of your network.
- “Always Download”:  
Downloads messages immediately from the server.
- “Always Defer”:  
Defers message download.
- “Delivery Report”:  
Enables or disables Delivery Report request.
- “Signature”:  
Enables or disables “Auto Insert”. Select “Edit” to edit current signature.
- “Auto Resend”:  
Tries to resend the failed SMS/MMS message up to two times (“On” or “Off” selection).
- “Delivery Report Allow”:  
Confirms whether or not a report is sent notifying the sender when you receive a message.
- “Read Report”:  
Enables or disables Read Report request.
- “Read Report Allow”:  
Enables or disables Read Report Allow when the recipient is required to inform the sender that the message has been read.
- “Expiry Time”:  
This indicates the number of days and hours for which a message you send may remain undelivered to the message recipient. During this period, the message service centre will continually try to deliver the message to the recipient.
- “Slide Duration”:  
Sets the duration of the slide.
- “Slide Auto Play”:  
Enables or disables Slide Auto Play.
- “Send file Settings”:  
Sets whether or not to send and save the file settings.

- “Max Message Size”:  
Sets the maximum message size for sending and disables sending MMS messages exceeding that size.
- “Creation Mode”:  
When set to “Free”, you can attach files of any format to the mail. When set to “Restricted”, only certain formats and message sizes can be attached. The “Restricted” setting has priority over “Max Message Size”.
- “Emoticons”:  
Enables or disables the Emoticons when entering text.
- “Hide Number”:  
Sets whether to show or hide the sender’s address.
- “Delivery Time” (“Immediate”, “1 hour”, “12 hours”, “1 day”, “1 week”): Sets the time the message is delivered after the Send key is pressed.
- “Automatic Rejection”:  
Enables or disables the Automatic Rejection of messages from anonymous senders.

## Email Settings (M 5-10-4)

“*Messaging*” → “*Messaging Settings*” → “*Email Settings*”

### To Set an Email Account

1. Select “Email Accounts” and highlight the preset Email account.  
You can also create a new account.
2. Press [Options] and select “Edit”.
3. Select the item you wish to set up.
 

“Account Name”:	Email account name (Unique name)
“Incoming Server”:	Server name, user ID, password, port number, APOP authentication and encryption for the incoming server

“Outgoing Server”: Server name, user ID, password, port number, SMTP authentication and encryption for the outgoing server

“Access Point”: Access point for Email

“Email Address”: Email address

“Advanced Settings”: Your name, signature, download interval, download configuration, maximum download limit, saved sent messages

“Password”: Password for Messenger

**Note**

- *In normal operations, you do not need to change the settings.*
- *Messenger settings have already been entered in your phone depending on your service provider. You may have restrictions on viewing, deleting, copying or modifying the settings. Contact your service provider for details.*

**Messenger Settings (M 5-10-5)**

*With service providers not offering the Instant Messenger function, the “Messenger Settings” menu is not displayed.*

**“Messaging” → “Messaging Settings” → “Messenger Settings”**

1. Select “Create New” to enter the following settings.

“Profile Name”: Messenger profile name (Unique name)

“Proxy”: Proxy setting for Messenger

“URL”: Messenger relay server

“Messenger ID”: Your ID for Messenger

## **Vodafone live! (M 2)**

Your phone is already configured to access Vodafone live! and the mobile internet\*.



**vodafone**

Vodafone live! is a whole world of information and entertainment on your phone.

Vodafone live! with 3G takes mobile media to a completely new level. It brings your mobile to life – you can download and listen to full music tracks, play 3D games plus loads more, so you are always up to date with what matters to you or have the latest ways to entertain yourself when you're out and about! All this at a faster speed and in crystal-clear digital quality.

\* If you have problems getting connected, please phone Vodafone Customer Support.

### **Main Menu**

***“Vodafone live!” → “Vodafone live!”***

The Vodafone live! service page is displayed.

***“Vodafone live!” → “Enter URL”***

The URL entry screen is displayed. You can type in the URL of a site directly.

***“Vodafone live!” → “Bookmarks”***

See page 101.

***“Vodafone live!” → “Alert Inbox”***

WAP Push alerts are displayed.

***“Vodafone live!” → “Saved Page”***

You can view all the screenshots that have been saved onto the handset memory.

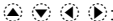




***“Vodafone live!” → “Access History”***

The history of pages you have recently browsed is displayed.

***“Vodafone live!” → “Browser Settings”***

See page 102.

## Navigating a WAP Page

- : Moves the highlight around in the screen.
- : Launches the option menu if it has not been launched.  
Used to select an option from the option menu.
- : Executes the highlighted item in the screen.
- : Launches “Vodafone live!” by opening the browser when in standby.  
Moves to previous page when the browser is active.
-  (short press): Exits the browser.  
(press and hold): Turns off the phone.

## Editing Bookmarks (M 2-3)

“Vodafone live!” → “Bookmarks”

1. Select the desired URL, and press [Options].  
You can edit the list of Bookmarks by the following options:  
(When a bookmark is focused)  
“Open”: Selects a bookmark.  
“Edit”: Edits URL address of the bookmark.  
“Add New Bookmark”:  
Creates new bookmarks.  
“Create Folder”:  
Creates new folders.  
“Send via MMS”:  
Sends the URL address to recipients.  
“Move”:  
Moves bookmarks to another location.  
“Details”:  
Displays detailed information of the WAP page.  
“Delete”:  
Deletes bookmarks.  
“Delete All”:  
Deletes all bookmarks.

(When a folder is focused)

- “Select”: Selects the folder.
- “Add New Bookmark”:  
Creates new bookmarks.
- “Create Folder”:  
Creates new folders.
- “Move”:  
Moves folder and  
bookmarks in the folder to  
another location.
- “Rename Folder”:  
Renames the folder.
- “Delete Folder”:  
Deletes the folder and  
bookmarks in the folder.
- “Delete All”:  
Deletes all folders and  
bookmarks.

(When there are no bookmarks)

- “Add New Bookmark”:  
Creates new bookmarks.
- “Create New Folder”:  
Creates new folders.


## Browser Settings (M 2-7)

“Vodafone live!” → “Browser Settings”

- “Font Size”:  
Sets the size of the browsing  
font.
- “Scroll Step”:  
Sets the speed of scrolling.
- “Character Encode”:  
Sets the character encoding  
scheme.
- “Send Referrer”:  
Enables or disables the  
notification of the referrer.
- “Cookies”:  
Adjusts the setting of  
cookies.
- “Downloads”:  
Sets whether or not to show  
images when accessing the  
WAP/web page.
- “Security”:  
Adjusts the security prompt  
level.
- “WAP Push”:  
Sets whether you need  
confirmation for push  
message.
- “Download to”:  
Sets the download location.

## The Browser Options

You can use the various options of the browser.

 → **[Options]**

- “Select”:  
“Open This Frame”:
  - “Home”:  
“Forward”:
  - “Reload Page”:
  - “Bookmarks”:  
“Save This Page”:
  - “Save Items”:
  - “Enter URL”:
- Selects a WAP page.  
Opens the selected frame.  
(This option is displayed only when a frame page is displayed.)  
Goes to the homepage.  
Goes to the next page of the pages displayed.  
Reloads the WAP page again to get new information.  
See page 101.  
Allows you to save the currently viewed browser screenshots to the handset memory.  
Saves items from the browser pages.  
Allows you to type in the URL of a site directly.  
Handset browser will go to the web/WAP page that you entered.

“Access History”:  
“Complete Page Display”:

Shows the history where you have browsed.  
Allows the browser to display in complete page mode or Virtual Screen mode.

“Advanced”:  
“Help”:  
“Exit”:

Displays the advanced option menu of the browser.  
Displays the browser help.  
Exits the browser.

### **Tip**

- *You can also display browser options in the following procedure:  
“Settings” → “Other Settings” tab → “Browser Settings”*



## The Advanced Options

☰ → [Options] → “Advanced”

- “Zoom In/Out”: Zooms in on or out from the WAP page. This option is available only when “Complete Page Display” is set to “ON”.
- “Send This Page via MMS”: Sends the WAP/web page via MMS.
- “Details”: Shows detailed information of the WAP/web page.
- “Delete Browser Data”:  
Deletes the browser data. You can clear the cache/cookies/history/authentication information.
- “Search This Page”: Searches for specific words in the WAP/web page.
- “Jump to Top”:  
Jumps to the top of the WAP/web page.
- “Jump to Bottom”:  
Jumps to the bottom of the WAP/web page.
- “Copy Text”:  
Copies the text on the WAP/web page.
- “Browser Settings”:  
Displays the settings menus (p. 102).

## **My Items (M 6)**

My Items contains all your pictures, music and videos. Also included in My Items are Text Templates and recently viewed WAP page addresses. You can also transmit pictures, sounds and video clips via *Bluetooth* wireless technology to other Bluetooth-enabled devices.

### **Pictures (M 6-1)**

Pictures that are taken by your phone's camera or images that are downloaded from mobile Internet sites can be viewed, edited and organised.

#### **Viewing Pictures**

**“My Items” → “Pictures”**



1. Select the file you wish to view.

The selected picture is displayed.

#### **Note**

- *To switch between viewing handset or memory card content, select the first item in the options menu.*

#### **Tip**

- *You can scroll through your pictures with  and .*

- *To change the default view of pictures (list or grid), press [Options], select “Manage Items” and then select “Change List View”.*

#### **Using Images as Wallpaper**

**“My Items” → “Pictures”**

1. Highlight the file you wish to use as wallpaper.
2. Press [Options] and select “Set as Wallpaper”.

#### **Editing Pictures**

**“My Items” → “Pictures”**

1. Highlight the file you wish to edit.
2. Press [Options] and select “Edit”.
3. Select “Picture Editor” or “Composite”.
4. Select the desired option.

#### **Note**

- *“Picture Editor” may not be available depending on the original picture and copyright issued.*

## Saving an Image to Contacts List Entries

You can use this option only for pictures saved in the handset memory.

**“My Items”** → **“Pictures”**

1. Highlight the file you wish to add to Contacts List.
2. Press [Options] and select “Add to Contacts”.  
To overwrite, select the data you wish to save.  
To save as a new entry, select “As New Contact”.  
For details on entering a name, see “Adding a New Contact” on page 51.

## Downloading Picture Files

**“My Items”** → **“Pictures”** → **“More Pictures”**

The picture file download site is displayed.

## Music & Ringtones (M 6-2)

The downloaded sound files and the AMR data recorded by Voice Recorder are managed in Music & Ringtones. The default ringtones are not contained within Music & Ringtones. Only the sound files that can be played back on the phone are stored in Music & Ringtones.

## Playing Back Sound Files

**“My Items”** → **“Music & Ringtones”**

1. Select the file you wish to play back.  
To stop playback, press [Back].

### Note

- Playback may not be available for some sound files.
- To switch between viewing handset or memory card content, select the first item in the options menu.

## Using the Sound Files as a Ringtone

**“My Items”** → **“Music & Ringtones”**

1. Highlight the file you wish to use as a ringtone.
2. Press [Options] and select “Set as Ringtone”.

### Tip

- For other option menus, see “Common Option Menus” on page 110.

## Downloading Sound Files

**“My Items”** → **“Music & Ringtones”** → **“More Ringtones”**

The sound file download site is displayed.

## Videos (M 6-3)

Video clips that are recorded by your phone’s video camera or video clips that are downloaded from mobile Internet sites can be viewed and organised.

### Playing Back Video Clip Files

**“My Items”** → **“Videos”**

1. Select the file you wish to play back.
  - To pause playback, press ⏸.
  - To resume, press ⏸ again.
  - To stop playback, press [Back].

#### *Note*

- *To switch between viewing handset or memory card content, select the first item in the options menu.*

## Using a Video Clip as a Ring Video Clip

You can set your video clip to play back when the phone rings.

**“My Items”** → **“Videos”**

1. Highlight the desired video clip.
2. Press [Options] and select “Set as Ring Video”.

#### *Tip*

- *For other option menus, see “Common Option Menus” on page 110.*

### Downloading Video Clip Files

**“My Items”** → **“Videos”** → **“More Videos”**


The video clip file download site is displayed.

## Themes (M 6-4)

You can easily customise the display by using the theme files.

### Viewing Previews

“My Items” → “Themes”

1. Highlight the theme file you wish to preview.
2. Press .

The selected theme file is displayed.

#### Note

- To switch between viewing handset or memory card content, select the first item in the options menu.

### Setting Theme

“My Items” → “Themes”

1. Select the desired theme file.  
The selected theme file is set as the default theme.

#### Tip

- Even after a theme is set, you can set a wallpaper regardless of the set theme. In this case, the other items follow the set theme.
- For other option menus, see “Common Option Menus” on page 110.

## Downloading Theme Files

“My Items” → “Themes” → “More Themes”

The theme file download site is displayed.

## Games & Applications (M 6-5)


For details on Vodafone specific applications, see “Games & Applications” on page 114.

## Text Templates (M 6-6)

You can register up to 50 text templates for use in text messages and multimedia messages. A maximum of 256 characters can be used for a single text template.


### Adding Phrases to Text Templates

*“My Items”* → *“Text Templates”* → *“Add New Template”*

1. Enter the text and press .

### Editing Text Templates

*“My Items”* → *“Text Templates”*

1. Highlight the text template you wish to edit.
2. Press [Options] and select “Edit”.  
To view the text template, press [Options] and select “View”.  
To delete the text template, press [Options] and select “Delete”.
3. Modify the text and press .

### Sending Text Templates

*“My Items”* → *“Text Templates”*

1. Highlight the text template you wish to send.
2. Press [Options] and select “Send Template”.

## Other Documents (M 6-7)

Some types of files are stored in the Other Documents folder of the phone. You can edit and use these files as My Items data.

### Opening a Document File

*“My Items”* → *“Other Documents”*

1. Select the desired file.

#### *Note*

- To switch between viewing handset or memory card content, select the first item in the options menu.

#### *Tip*

- For other option menus, see “Common Option Menus” on page 110.

## Common Option Menus

For using the desired file type, first select the appropriate folder in the My Items menu. My Items contains the following folders.

“My Items” → “Pictures”

“My Items” → “Music & Ringtones”

“My Items” → “Videos”


“My Items” → “Themes”

“My Items” → “Games & Applications”

“My Items” → “Text Templates”

“My Items” → “Other Documents”

### Activating Files with Copyright Protection (DRM)

Some pictures, sound files, video clips and theme files have a digital copy protection program, which is called DRM (Digital Rights Management). You need to activate the digital licence permission to open the files. Files protected with DRM are displayed with .

1. Select the appropriate folder for the desired file type.
2. Highlight the file you wish to activate.
3. Press [Options] and select “Activate”.

### Note

- Some pictures with DRM may not open even when an attempt is made to activate it.

### Sending My Items Data

For details on *Bluetooth* wireless technology, see “Connectivity” on page 147.

1. Select the appropriate folder for the desired file type.
2. Highlight the desired file.
3. Press [Options] and select “Send”.
4. Select “As Message” or “Via Bluetooth”.

### Tip

- For details on creating a message, see “Creating a New Message” on page 82.
- For details on Bluetooth settings, see “Using the Bluetooth Function” on page 147.

### **Note**

- *Pictures/Sounds/Video clips protected by copyright cannot be sent attached to a message, with the exception of Separate Delivery files.*
- *Theme files can only be sent via Bluetooth. Select “Bluetooth” in step 4.*
- *When pairing, you need to enter your passcode when establishing contact with a Bluetooth wireless technology enabled device for the first time.*
- *When you send a picture file, select “As Postcard” in step 4. The Postcard service is not available with some providers. Contact your service provider for more information.*

### **Receiving My Items Data**

When the phone receives My Items data, a confirmation message is displayed in standby.

1. Press [Yes].

The received data is saved in the corresponding My Items folder.

### **Tip**

- *For details on Bluetooth wireless settings, see “Connectivity” on page 147.*

### **Using My Items Data**

You can copy, move, sort, rename, and delete the saved My Items data.

1. Select the appropriate folder for the desired file type (page 110).
2. Highlight the desired file.
3. Press [Options] and select “Manage Items”.
4. Select the desired option.

“Sort”:  
Sorts files. Select the desired files to sort.

“Rename”:  
Renames the file or folder. Select the desired file or folder to rename.

“Create Folder”:  
Creates a new folder.

“Change List View”:  
Changes the list view.

“Delete All”:  
Deletes files. Select the desired files to delete.



**Note**

- “Manage Items” is not available for “Games & Applications” and “Text Templates”.

**To Delete the File**

1. Select the appropriate folder for the desired file type (page 110).
2. Highlight the desired file.
3. Press [Options] and select “Delete”.

**To See the My Items Details**

1. Select the appropriate folder for the desired file type (page 110).
2. Highlight the file you wish to view the details of.
3. Press [Options] and select “Details”.

**Uploading My Items Data**

You can upload your picture, sound or video clip files to the Media Album.

1. Select the appropriate folder for the desired file type (page 110).
2. Highlight the file you wish to upload.
3. Press [Options] and select “Send”.
4. Select “To Media Album”.

**Note**

- This service is not available with some service providers. Please contact your service provider for more information.
- Picture, sound and video clip files protected with a copyright cannot be uploaded.

## Selecting Multiple Files

You can select more than one item from My Items for moving, copying, managing and deleting.

### Note

- *The following procedure applies when entries other than “More Pictures”/“More Ringtones”/“More Videos”/“More Themes” are highlighted.*
1. Select the appropriate folder for the desired file type (p. 110).
  2. Highlight the file you wish to select.
  3. Press [Options] and select “Check”.
  4. Repeat steps 2 and 3 until you select all the desired files.

### Tip

- *To remove the check, highlight the file again and select “Uncheck” in step 3.*
- *If you wish to unselect all, select “Manage Items” in step 3 and select “Uncheck All”.*

## Memory Status (M 6-8)

This function helps you to check the memory status of the handset memory or memory card. Memory status covers the following.

Phone Memory: Applications, Pictures, Videos, Sounds, Themes, Others, Total and Free

Memory Card: Pictures, Videos, Sounds, Themes, Others, Total and Free

### “My Items” → “Memory Status”

1. Select “Phone Memory” or “Memory Card”.

## Games & Applications (M 11)

### Games & Applications (M 11-1)

#### Using Applications

Various kinds of Vodafone specific applications can be used on this phone. To use applications, download the applications via the mobile Internet. Some applications offer the ability to connect to a network either within a game or a network-based application.

#### Note



- *Applications may be both localised (no connectivity) and network-based (using the mobile Internet to update information/play games). The network may charge you more for using network-based applications. Please contact your service provider for more information.*

#### Downloading Applications

*“Games & Applications” → “Games & Applications” → “More Applications”*

1. Select the desired application.

Before downloading the application you are asked to confirm what you are about to receive. After checking the information on the confirmation screen, the application can be downloaded.

2. Press  to start downloading.
3. Press  when finished.

#### Note


- *User authentication may be required before downloading the application on some information screens.*

## Executing Applications

*“Games & Applications”* → *“Games & Applications”*

1. Select the title of the application you wish to execute.

The selected application is executed. When using network connection type applications, connection to the network can be selected.

2. To end the application, press  and select “End”.

## Setting as a Screensaver for the Display

*“Games & Applications”* → *“Games & Applications”*

1. Highlight the file you wish to use as a screensaver.
2. Press [Options] and select “Set as Screensaver”.

## Setting Permission

You can set permission for selected Java™ applications.

*“Games & Applications”* → *“Games & Applications”*

1. Highlight the desired Java™ application.
2. Press [Options] and select “Permission”.

3. Select one of the following options:

“Phone Call”:	Sets permission to make voice calls.
“Network Access”:	Sets permission to access the network.
“Messaging”:	Sets permission to perform MMS and SMS messaging.
“Autorun”:	Sets permission to perform the Autorun function.
“Local Connection”:	Sets permission to connect to local devices.
“Read User Data”:	Sets permission to read user data, such as Contacts List entries, mailbox (Inbox) and My Items data.
“Write User Data”:	Sets permission to write entries in your phone, such as Contacts List entries, mailbox (Inbox) and My Items data.
“Use Multimedia”:	Sets permission to use the multimedia recording.

4. Select one of the following options:

- “Session”:  
The confirmation message is not displayed until you exit the application, while execution of the API of the specified function group is authorised.
- “Ask Once”:  
The confirmation message is displayed every time the API of the specified function group is executed.
- “Blanket”:  
The confirmation message is not displayed until the application is deleted or you change the settings, while execution of the API of the specified function group is authorised.
- “No”:  
Execution of the API of the specified function group is not authorised.

**Note**

- To clear all the permission settings, select “Reset” in step 3.
- Some permissions are not available for some Java™ applications.

## Viewing Application Information

You can check the information of Java™ applications.

**“Games & Applications”** → **“Games & Applications”**

1. Highlight the desired Java™ application.
2. Press [Options] and select “Information”.

## Moving or Deleting an Application

You can move an application between Games folders and Application folders, and also delete applications in folders.

**“Games & Applications”** → **“Games & Applications”**






1. Highlight the desired Java™ application.
2. Press [Options] and select “Move” or “Delete”.

## Java™ Settings (M 11-2)

### Application Volume

You can set the volume of the application such as the sound effect to one of the five levels or silent. When the profile is set to “Silent”, the “General Volume” setting (p. 133) has priority.

**“Games & Applications”** → **“Java™ Settings”** → **“Application Volume”**

1. Press  (or ) to increase the volume or press  (or ) to decrease the volume and then press .

### Backlight

**“Games & Applications”** → **“Java™ Settings”** → **“Backlight”** → **“Switch On/Off”**

1. Select from “Always On”, “Always Off” or “Normal Settings”.
  - “Always On”: Lit while the application is operated.
  - “Always Off”: Unlit while the application is operated even if a key is pressed.
  - “Normal Settings”: Works with the main backlight setting (p. 140).

### To Set the Blinking Operation

This setting enables the backlight to be controlled by the application. If set to “Off”, the backlight cannot be turned on from the application.

**“Games & Applications”** → **“Java™ Settings”** → **“Backlight”** → **“Blink”**

1. Select “On” or “Off”.

### Vibration

When the vibrator is set in the application, you can choose whether the operation is enabled or disabled.

**“Games & Applications”** → **“Java™ Settings”** → **“Vibration”**

1. Select “On” or “Off”.




### Tip

- You can also display browser options in the following procedure:  
“Settings” → “Other Settings” tab → “Java™ Settings”

## Calls & Alarms

You can set the priority of incoming calls and alarms while an application is operating.

*“Games & Applications”* → *“Java™ Settings”* → *“Calls & Alarms”*

1. Select “Voice Call”, “Video Call”, “Incoming Message” or “Alarm”.
2. Select the desired method.
  - “Call Priority”, “Message Priority” or “Alarm Priority”:  
The application is suspended automatically, and you can receive a call or a message, or the alarm will sound. After finishing the call or sending the message, or when the alarm ends, the suspend indicator (  ) is displayed letting you know there is a suspended application.
  - “Call Notice”, “Message Notice” or “Alarm Notice”:  
The marquee (character scrolls) is displayed on the first line of the screen while the application continues. If you press , the application is suspended, and you can receive a call. After finishing the call or sending the message, the suspend indicator (  ) is displayed letting you know there is a suspended application.

## Screensavers

You can download screensaver applications for the standby screen and set the time period for the screensaver to activate.

*“Games & Applications”* → *“Java™ Settings”* → *“Screensaver”* → *“Switch On/Off”*

1. Select “On” or “Off”.

To Set the Activation Time

*“Games & Applications”* → *“Java™ Settings”* → *“Screensaver”* → *“Activation Time”*

1. Enter the activation time in two digits using the keypad.

To Set the Suspend Time

*“Games & Applications”* → *“Java™ Settings”* → *“Screensaver”* → *“Suspend Time”*

1. Set the desired time period from “after 15 min.” to “after 6 hours”.

## Default Settings

*“Games & Applications”* → *“Java™ Settings”* → *“Set to Default”*

1. Enter your handset code.

For details on the handset code, see “Changing the Handset Code” on page 146.

## Clearing All Memory

*“Games & Applications”* → *“Java™ Settings”* → *“Memory All Clear”*

1. Enter your handset code.

For details on the handset code, see “Changing the Handset Code” on page 146.

## Java™ Information (M 11-3)

*“Games & Applications”* → *“Java™ Information”*

The information about the licences belonging to Java™ is displayed.



## Organiser & Utilities (M 7)

### Alarms (M 7-1)

#### Setting the Alarms

The alarm function allows you to be alerted at a specified time.

Note that you need to set the current date and time before setting the alarm function if it has not been done already.

*“Organiser & Utilities”* → *“Organiser” tab* → *“Alarms”*

1. Select the blank line (--:--) you wish to set an alarm to.
2. Enter the desired time.
3. Press [Save].

#### To Change the Settings

1. Select the item you wish to change in the Set Alarm screen.
  - “Repeat”:  
Sets the number of times the alarm sounds.
  - “Assign Tone/Video”:  
Assigns a tone or video clip file to the alarm.
  - “Snooze”:  
Sets the snooze option.

- “Alarm Volume”:  
Sets the desired volume.  
The alarm will not sound when “Alarm Volume” is set to “Silent”. When the profile is set to “Silent”, the “General Volume” setting (p. 133) has priority.
- “Vibration”:  
Sets the vibration pattern of the alarm.  
For details on selecting a vibration, see “Vibration” on page 137.
- “Duration”:  
Sets the duration of the alarm.

#### Resetting an Alarm

*“Organiser & Utilities”* → *“Organiser” tab* → *“Alarms”*

1. Highlight the alarm you wish to reset.
2. Press [Options] and select “Reset Alarm”.

#### Resetting All Alarms

*“Organiser & Utilities”* → *“Organiser” tab* → *“Alarms”*

1. Select “Clear All”.

## Calendar (M 7-2)

The calendar allows you to easily schedule appointments.

These entries can also be sent via *Bluetooth* wireless technology to a PC to share the same schedules. When you exchange entries with other devices, the date and time displayed may be different to that of the original data depending on the data format of the receiving device.

### Creating a New Entry

**“Organiser & Utilities”** → **“Organiser” tab** → **“Calendar”**

1. Select the desired day to which you want to add an event.
2. Select “Add New Entry”.
3. Enter the subject.
4. Select the desired category.
5. Enter the start date and time.
6. Select the duration.

When selecting “Other”, enter the desired end date and time.

7. Select the reminder time.

When selecting “Other”, enter the desired reminder date and time.

8. Press [Save].

### Note

- *If the date and time settings have not been entered, the date and time entry screen is displayed (p. 142).*
- *The reminder will not sound when “General Volume” (p. 133) is set to “Silent”.*

### To Change the Settings

1. Select the item you wish to change in the New Entry screen.
  - “Reminder”: Sets options including “Reminder Time”, “Assign Tone/Video” and “Duration” for the reminder.
  - “Repeat”: Sets the number of times the reminder sounds.
  - “Location”: Sets the location for the schedule entry.
  - “Description”: Enables entering a memo for the schedule entry.

- “Secret”: Sets to show or hide the schedule entry. Set to “On” to make the data secret or select “Off” to leave it as it is.

## Viewing a Schedule Entry

“Organiser & Utilities” → “Organiser” tab → “Calendar”

1. Select the day you wish to view.
2. Select the desired entry.









### To Search by Date

1. In any view, press [Options] and select “Go to”.
2. Select “Today” to display today or “Enter Date” to enter the desired date.









## Tip

- In the monthly or weekly view, you can control the view by using the following:

### Monthly view

- : Displays the previous month.
- : Displays the next month.
- : Displays the weekly view.
- : Moves the cursor to today.
- / : Moves the cursor to left (the previous day) or to right (the next day).
- / : Moves the cursor upward (last week) or downward (next week).

### Weekly view

- : Displays the previous week.
- : Displays the next week.
- : Displays the monthly view.
- : Moves the cursor to today.
- / : Moves the cursor to left (the previous day) or to right (the next day).
- / : Moves the weekly view up or down (the previous hour or next hour).

## Setting a Holiday

In the weekly or monthly view, you can highlight a date or days of the week with seven colour options.

“Organiser & Utilities” → “Organiser” tab → “Calendar”

### For Date Colour

1. Highlight the day you wish to set.
2. Press [Options] and select “Set Holiday”.
3. Select “By Date” and then select the desired colour.

### For Days of the Week Colour

1. Press [Options] and select “Set Holiday”.
2. Select “By Week” and then select days of the week you wish to colour.
3. Select the desired colour.

### *Tip*

- *The selected date/days are also highlighted on the calendar on the standby screen.*

### *Note*

- *If the same date is set with both a date colour and a day of the week colour, the date is highlighted in the date colour.*
- *Up to 100 days can be set for the highlights.*

### **Finding a Schedule Entry**

**“Organiser & Utilities”** → **“Organiser” tab** → **“Calendar”**

1. In any view, press [Options] and select “Find”.
2. Enter a few letters of the subject.  
Search results are displayed in time order.

### **Editing a Schedule Entry**

**“Organiser & Utilities”** → **“Organiser” tab** → **“Calendar”**

1. Select the day you wish to edit.
2. Highlight the entry you wish to edit, press [Options], then select “Edit”.
3. Select the desired item and modify the entry.
4. Press [Save].

## Deleting Schedule Entries

1. In any view, press [Options] and select “Delete”.

2. Select the desired option.

“All This Week” (weekly view):

Deletes all entries for the selected week.

“All This Month” (monthly view):

Deletes all entries for the selected month.

“Up to Last Month” (monthly view):

Deletes all entries before the selected month.

“All Appointments” (weekly, monthly and 2-month view):

Deletes all entries in this application.

## Sending a Schedule Entry

“*Organiser & Utilities*” → “*Organiser*” tab → “*Calendar*”

1. Select the day including schedule entries you wish to send.

2. Highlight the entry you wish to send, press [Options], then select “Send”.

3. Select “As Message” or “Via Bluetooth”.

For “Via Bluetooth”

For details, see “Using the Bluetooth Function” on page 147.

### Note

- *When pairing, you need to enter your passcode when establishing contact with a Bluetooth wireless technology enabled device for the first time.*

## Receiving a Schedule Entry

When the phone receives a schedule entry, a confirmation message is displayed in standby.

1. Press [Yes].

The received entry is saved in the Calendar.

Press [No] to reject.

### Tip

- *For details on entering Bluetooth wireless settings, see “Connectivity” on page 147.*

## Viewing the Memory Status

1. In any view, press [Options] and select “Memory Status”.

## Stopwatch (M 7-3)

You can store 4 lap times when using the stopwatch function.

**“Organiser & Utilities”** → **“Organiser” tab** → **“Stopwatch”**

1. Press **⊙** to start.

Press [LAP] to view the lap time before the stopwatch stops. Last 4 lap times are saved.

2. Press **⊙** to stop.

### Tip

- *You can save a record of lap times and the stop time by pressing [Options] and selecting “Save to Templates”.*

## Resetting Time

1. After stopping the stopwatch, press [Options] and select “Reset”.

## Tasks (M 7-4)

You can register your schedule as task entries for a given date or time.

### Creating a New Entry

**“Organiser & Utilities”** → **“Organiser” tab** → **“Tasks”**

1. Select “Add New Entry”.
2. Enter the subject.
3. Enter the due date and time.
4. Press [Save].

### Note

- *If the date and time settings have not been entered, the date and time entry screen is displayed (p. 142).*

### To Select the Reminder Time

1. On the New Entry screen, select “Reminder”.
2. Select “Reminder Time”.
3. Select the reminder time.  
When selecting “Other”, enter the desired reminder date and time.

### To Change the Type of Alarm Tone or Video Clip File

1. On the New Entry screen, select “Reminder”.
2. Select “Assign Tone/Video”.
3. Select “Assign Tone” and then select “Preset Sounds” or “My Sounds”, or select “Assign Video”.
4. Select the desired tone or video clip file.  
For details on selecting a tone, see “Assigning a Ringtone for an Incoming Call” on page 134.

### To Change the Duration of Alarm Tone or Video

1. On the New Entry screen, select “Reminder”.
2. Select “Duration”.
3. Select the desired duration.


### To Change the Description

1. On the New Entry screen, select “Description”.
2. Enter a memo for the task entry.

### To Make the Entry Secret

1. On the New Entry screen, select “Secret”.
2. Select “On” to make the data secret or select “Off” to leave it as it is.


### **Making the Entry Completed or Incomplete** **“Organiser & Utilities” → “Organiser” tab → “Tasks”**

1. Highlight the desired entry.
2. Press .
3. On the view screen, press [Options] and select “Check”.

To make the entry incomplete, select “Uncheck”.

## Finding a Task Entry

**“Organiser & Utilities”** → **“Organiser” tab** → **“Tasks”**

1. Press [Options] and select “Find”.
2. Enter a few letters of the subject and press .  
Search results are displayed in time order.

## Sending a Task Entry

**“Organiser & Utilities”** → **“Organiser” tab** → **“Tasks”**

1. Highlight the task entry you wish to send.
2. Press [Options] and select “Send”.
3. Select “As Message” or “Via Bluetooth”.

For “Via Bluetooth”

For details, see “Using the Bluetooth Function” on page 147.

### **Note**

- *When pairing, you need to enter your passcode when establishing contact with a Bluetooth wireless technology enabled device for the first time.*

## Viewing the Memory Status

**“Organiser & Utilities”** → **“Organiser” tab** → **“Tasks”**

1. Press [Options] and select “Memory Status”.

## Deleting Entries

**“Organiser & Utilities”** → **“Organiser” tab** → **“Tasks”** → [Options] → **“Delete”**

1. Select the desired option.
  - “This Task”: Deletes the selected entry.
  - “All Completed Tasks”: Deletes all checked entries.
  - “All Tasks”: Deletes all entries.



## World Clock (M 7-5)

### Setting the Time Zone

*“Organiser & Utilities”* → *“Organiser” tab* → *“World Clock”*

1. Press [Edit] and select “Set Time Zone”.  
The current time zone is indicated by red line on the world map.
2. Press ⌂ or 🌐 to change the time zone.
3. Press ⏪.

### To Set the Custom Time Zone

*“Organiser & Utilities”* → *“Organiser” tab* → *“World Clock”*

1. Press [Edit] and select “Set Time Zone”.
2. Press [Options] and select “Set Custom Zone”.
3. Enter the desired city name and time.

### Setting Daylight Saving

*“Organiser & Utilities”* → *“Organiser” tab* → *“World Clock”*

1. Press [Edit] and select “Daylight Saving”.
2. Select “On” or “Off”.

## Countdown Timer (M 7-6)

*“Organiser & Utilities”* → *“Organiser” tab* → *“Countdown Timer”*

1. Enter the time to count.  
You can set the time from 1 second to 60 minutes.
2. Press ⏪ to start counting.
3. Press ⏪ to pause.  
Press ⏪ again to continue counting.
4. If the countdown has finished, press [Cancel] and then press ⏪ to start the countdown again.

### Editing the Countdown Time

1. In the countdown start screen, press [Options] and select “Edit”.
2. Modify the desired time.

## Calculator (M 7-1)

The calculator function performs the 4 arithmetic calculations using up to 12 digits.

*“Organiser & Utilities”* → *“Utilities” tab* → *“Calculator”*



Key operations for calculation are as follows:

To enter a decimal point, press  $\frac{\square}{\square}$ .

To clear the entered number or function, press [Clear].

To do the calculations, press  $\odot$ .

To start a new calculation, press [Clear].

## Rate Conversion

You can also use the calculator as a currency calculator to convert from/to a home currency using a conversion rate that you enter.

To Set a Currency Conversion Rate

*“Organiser & Utilities”* → *“Utilities” tab* → *“Calculator”* → [Options] → *“Currency Converter”* → *“Exchange Rate”*

1. Select “Domestic” or “Foreign”.
2. Enter the currency conversion rate.

To Convert a Value

*“Organiser & Utilities”* → *“Utilities” tab* → *“Calculator”*


1. Enter the value to be converted.
2. Press [Options] and select “Currency Converter”.
3. Select “Convert to Domestic” or “Convert to Foreign”.


## Voice Recorder (M 7-▶-2)

This allows you to record a voice clip, which can be used to remind you of schedule entries or be sent within a multimedia message. The recorded voice clip is saved in My Items (Music & Ringtones). Voice clips are saved in .amr format.

### Recording a Voice Clip





*“Organiser & Utilities” → “Utilities” tab → “Voice Recorder”*

1. Press  to start recording.

To stop recording before the recording time is over, press .


2. Select “Save” to save the voice clip.


### Note

- Press  (or ) or  (or ) to adjust the sound volume when playing back the recorded file.

### Sending Voice Clips

*“Organiser & Utilities” → “Utilities” tab → “Voice Recorder”*

1. Press  to start recording.

To stop recording before the recording time is over, press .

2. Select “Save and Send”.

3. Select “As Message” or “To Media Album”.

For details on creating a message, see “Creating a New Message” on page 82.

(The Media Album service is not available with some service providers. Please contact your service provider for more information.)

### Selecting the Record Time

*“Organiser & Utilities” → “Utilities” tab → “Voice Recorder” → [Options] → “Record Time”*

1. Select “For Message” or “Extended Voice”.

When selecting “Extended Voice”, voice clips are automatically saved to a memory card.

### Selecting Storage Memory

*“Organiser & Utilities” → “Utilities” tab → “Voice Recorder” → [Options] → “Save New Sounds”*

1. Select the desired location.

When selecting “Choose bef. Saving”, you can select the location when saving a voice clip.

## Expenses Memo (M 7-3)

You can record an expenses memo with pre-defined or edited categories.

### Recording in the Expenses Memo (M 7-3-1)

*“Organiser & Utilities”* → *“Utilities” tab* → *“Expenses Memo”* → *“Add New Expense”*

1. Enter the expenses using the digit keys.
2. Select the desired category.

Expenses memo is registered.

### Viewing Totals (M 7-3-2)

*“Organiser & Utilities”* → *“Utilities” tab* → *“Expenses Memo”* → *“Totals”*

Recorded expenses are displayed on the screen.

#### To Change Category

1. In the total view, highlight the desired item.
2. Press [Options] and select “Change Category”.
3. Select the desired category.

#### To Change Amount

1. In the total view, highlight the desired item.
2. Press [Options] and select “Change Amount”.
3. Enter the desired amount using the digit keys.

#### To Delete a Recorded Item or All Items

1. In the total view, highlight the desired item.
2. Press [Options] and select “Delete Item” or “Delete All”.

### Editing the Category Name (M 7-3-3)

*“Organiser & Utilities”* → *“Utilities” tab* → *“Expenses Memo”* → *“Edit Category”*

1. Select the desired category name.
2. Modify the name.

## Phone Help (M 7-4)

You can view the help list and use it to guide you in the phone’s functions.

*“Organiser & Utilities”* → *“Utilities” tab* → *“Phone Help”*

1. Press ▲ or ▼.

## **SIM Application (M 10)**

You can refer to the information on the SIM. Contact your service provider for further details.

## **Settings (M 12)**

### **Profiles**

The ringtone, sound, vibration and light settings can be customised for each profile according to your environment.

There are 6 profiles: “Normal”, “Meeting”, “Activity”, “Car”, “Headset” and “Silent”.

### **Activating a Profile**


**“Settings” → “Profiles” tab**

1. Select the desired profile.

#### **Note**

- *When a profile is set, the corresponding indicator described on page 33 is displayed in standby.*

#### **Tip**

- *In standby, press and hold  to switch Profiles between Silent mode and the profile most recently activated.*

### **Resetting Profile Settings**

**“Settings” → “Profiles” tab**

1. Highlight the profile you wish to reset.
2. Press [Options] and select “Set to Default”.
3. Enter your handset code.

For details on the handset code, see “Changing the Handset Code” on page 146.

### **Volume**

You can adjust the volume for incoming voice calls, SMS/MMS/Email messages and other sounds (“General Volume”) to one of six levels, or set an increasing volume for all of these except “General Volume”.

**“Settings” → “Profiles” tab**

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Volume”.
4. Select “For Incoming Call”, “For New Message” or “General Volume”.

5. Press ▲ (or ►) to increase the ringer volume or press ▼ (or ◀) to decrease the ringer volume and then press ○.

To select “Increasing Volume”, press ▲ (or ►) at level 5.

To select “Silent”, press ▼ (or ◀) at level 1.

### **Tip**

- You can select from two levels or an increasing volume, when selecting the “Silent” profile.

### **Assigning a Ringtone for an Incoming Call**

You can set a ringtone for incoming voice and video calls. You can select from different tones including patterns, sound effects and melodies or set a sound in Saved Sounds as the default ringtone.

#### **“Settings” → “Profiles” tab**

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Ringtone/Ringvideos”.
4. Select “For Voice Call” or “For Video Call”.
5. Select “Assign Tone”.
6. Select “Preset Sounds” or “My Sounds”.

7. Highlight the ringtone you wish to use.  
To hear the demo play, press [Options] and select “Play”.
8. Press [Options] and select “Assign” for “Preset Sounds” or “Select” for “My Sounds”.

### **Note**

- Even if you delete a sound that is being used as a ringtone, the setting remains the same and the default ringtone sounds.
- Melodies can be selected from “My Sounds” and “Preset Sounds”.

## Assigning a Ring Video Clip for an Incoming Call

You can set a ring video clip for incoming voice and video calls. You can set a video clip in Saved Videos as the default ring video clip.

**“Settings”** → **“Profiles” tab**

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Ringtone/Ringvideos”.
4. Select “For Voice Call” or “For Video Call”.
5. Select “Assign Video”.
6. Highlight the ring video clip file you wish to use.  
To preview the file, press [Options] and select “Play”.
7. Press [Options] and select “Select”.

## Message Notification

When receiving messages, your phone will notify you of their arrival with the ringtone or ring video clip you specify.

**“Settings”** → **“Profiles” tab**

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Ringtone/Ringvideos”.

4. Select “For New Message”.
5. Select “Assign Tone” or “Assign Video”.  
If “Assign Tone” is selected, select “Preset Sounds” or “My Sounds”.
6. Highlight the desired ringtone or ring video clip.  
For details on selecting a ringtone or a ring video clip, see “Assigning a Ringtone for an Incoming Call” on page 134 or “Assigning a Ring Video Clip for an Incoming Call”.
7. Press [Options] and select “Assign” for “Preset Sounds” or “Select”.
8. Select “For New Message” and select “Duration”.
9. Enter the desired duration of message notification in 2 digits using the digit keys.



## Keypad Tones

When the keypad tone is set on, you will hear a confirmation tone each time you press any key.

*“Settings” → “Profiles” tab*

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “System Sounds”.
4. Select “Keypad Tones”.
5. Highlight the desired tone pattern.
6. Press [Options] and select “Assign”.

## Warning Tone

Your phone can be set to emit a warning tone when an error occurs.

*“Settings” → “Profiles” tab*

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “System Sounds”.
4. Select “Warning Tone”.
5. Select “Tone” or “Duration”.

For “Tone”, select “Off”, “Preset Sounds” or “My Sounds”.

For “Duration”, select the desired time between 0.5 and 2 seconds.

## Power On/Off Sound

Your phone can be set to emit a sound when it is switched on or off.

*“Settings” → “Profiles” tab*

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “System Sounds”.
4. Select “Power On Sound” or “Power Off Sound”.
5. Select “Sound” or “Duration”.

For “Sound”, select “Off”, “Preset Sounds” or “My Sounds”.

For “Duration”, enter the desired duration of sound in 2 digits using the digit keys.


## Vibration

### “Settings” → “Profiles” tab


1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Vibration”.
4. Select “For Incoming Call” or “For New Message”.
5. Select “Switch On/Off” and then select “On” to activate.

If you wish to change the vibration pattern, select “Vibration Pattern” and then select the desired option.

### Tip

- When you select “On” in step 5, “” is displayed in standby.

## Any Key Answer

You can answer a call by pressing any key except  or [Busy]. For details, see page 37.

### “Settings” → “Profiles” tab

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Any Key Answer”.
4. Select “On” or “Off”.

## Phone Settings


### Setting the Display (M 12--1)

You can change the display settings.

## Setting the Wallpaper (M 12-1-1)

Your phone includes preset pictures to be used as wallpaper in standby. Pictures taken with the phone's digital camera or images downloaded from a WAP site can also be used as wallpaper.

**“Settings”** → **“Phone Settings” tab** → **“Display”** → **“Wallpaper”**

1. Select the folder in which the picture you wish to set is contained.  
Pictures can be selected from “My Pictures”, “Preset Pictures” or “Other Documents”.
2. Select the desired picture.
3. After displaying the picture, press .

### Note

- Some pictures cannot be used because of their picture and data types.
- If the picture in My Pictures is already set, it is displayed in step 1. Press [Change] and select the desired picture.
- Wallpaper can be linked to a theme. Select “Link to Theme” in step 1.

## Themes (M 12-1-2)

You can easily customise the display by using the theme files.

The theme files downloaded from a WAP site can be used.

**“Settings”** → **“Phone Settings” tab** → **“Display”** → **“Themes”**

1. Select “Preset Themes” or “My Themes”.
2. Select the desired theme file.

### Tip

- Even after a theme is set, you can set a wallpaper regardless of the set theme. In this case, the other items follow the set theme.

### System Graphics (M 12-1-3)

Pictures can be displayed when turning the power on or off, when receiving an incoming call, or when operating the alarm.

Pictures taken with the phone's digital camera or images downloaded from a WAP site can be used.

#### To Use Preset Animation/Pattern

**“Settings”** → **“Phone Settings” tab** → **“Display”** → **“System Graphics”**

1. Select the desired function to set the picture to.
2. Select “Preset Animation” when you select “Power On” or select “Power Off” in step 1.  
Select “Pattern 1”, “Pattern 2” or “Pattern 3” when you select “Incoming Call” or “Incoming Video Call” in step 1.

#### To Set My Pictures

**“Settings”** → **“Phone Settings” tab** → **“Display”** → **“System Graphics”**

1. Select the desired function to set the picture to.
2. Select “My Pictures”.
3. Select the desired picture.
4. After displaying the picture, press Ⓞ.

5. Specify the area you wish to display using the navigation keys, then press Ⓞ.

#### Note

- *Some pictures cannot be used because of their picture and data types.*
- *If the picture in My Pictures is already set, it is displayed in step 2. Press [Change] and select the desired picture.*

### Setting the Standby Display (M 12-1-4)

You can set the standby screen display.

**“Settings”** → **“Phone Settings” tab** → **“Display”** → **“Standby Display”**

1. Select “Clock/Calendar” or “Show Indicators”.

### Setting the Greeting Message (M 12-1-5)

You can set the message which is displayed when the phone is turned on.

**“Settings”** → **“Phone Settings” tab** → **“Display”** → **“Greeting Message”**

1. Select “Switch On/Off” and then select “On” or “Off”.

#### Tip

- *If you wish to edit the message, select “Edit Message” in step 1 and enter a message (up to 10 characters).*

### Backlight (M 12-1-6)

The backlight will shut off if you do not press the keypad for a certain length of time. You can specify a desired time to elapse before the backlight shuts off, which will help conserve battery life.

#### Tip

- *When you purchase this phone, Backlight is set to 15 seconds.*

To Select the Backlight Time Out

**“Settings”** → **“Phone Settings” tab** → **“Display”** → **“Backlight”** → **“Time Out”**

1. Select the desired time.  
Select “Off” to shut it off.

To Adjust the Brightness of the Backlight

**“Settings”** → **“Phone Settings” tab** → **“Display”** → **“Backlight”** → **“Brightness”**

1. Press ▲ (Light) and ▼ (Dark) to switch between 4 levels of clarity.
2. Press ○.

### Setting the Display Saving (M 12-1-7)

The screen of this phone will automatically turn off after a given amount of time. You can change the length of time before the Display Saving goes into effect, which will help conserve battery life.

**“Settings”** → **“Phone Settings” tab** → **“Display”** → **“Display Saving”**

1. Select the desired time.

When you purchase this phone, Display Saving is set to 2 minutes.

### Note

- *Display Saving does not work while you are making a call, using WAP, or using an application.*
- *To cancel the Display Saving: The display saving continues until either a key is pressed or there is an incoming alert. The first key press only cancels this function. You must press another key in order to enter any numerical or text value.*

### Sounds & Alerts (M 12-2-2)

You can use this menu to check or edit the current profile settings (except “Any Key Answer”).

### Event Light (M 12-2-5)

You can set the Small Light to flash when receiving an incoming call or a new message.

“Settings” → “Phone Settings” tab → “Sounds & Alerts” → “Event Light”

1. Select the desired option.

“For Voice Call”:	Flashes when an incoming voice call is received.
“For Video Call”:	Flashes when an incoming video call is received.
“For New Message”:	Flashes when a new message is received.

### Status Light (M 12-2-6)

You can set the Small Light to flash when you miss any incoming calls or new messages.

“Settings” → “Phone Settings” tab → “Sounds & Alerts” → “Status Light”

1. Select the desired option.

“For Missed Call”:	Flashes when an incoming voice call is missed.
“For New Message”:	Flashes when a new message is missed.

### Slider Settings (M 12-2-3)

You can set the action when sliding open or sliding close your phone.

“Settings” → “Phone Settings” tab → “Slider Settings”

### To Set the Open Action for Calling

1. Select “Calls on Open” and select the desired option.

“Accept Call”:	Enables answering an incoming call by sliding open the phone.
“No Action”:	Disables answering an incoming call by sliding open the phone.

### To Set the Close Action for Calling

1. Select “Calls on Close” and select the desired option.

“End Call”:	Enables terminating a call by sliding close the phone.
“No Action”:	Disables terminating a call by sliding close the phone.

### To Set the Close Action for Locking

1. Select “Lock on Close”.
2. Select the desired time to elapse before the phone locks after sliding it close.

If you select “No Action”, sliding close the phone will not lock it.



### Date & Time (M 12-4)

You need to set the correct time and date in order for your phone’s various time-based functions to work correctly.

“Settings” → “Phone Settings” tab → “Date & Time” → “Set Date/Time”

1. Enter the day, month, year and time using the digit keys.

#### Tip

- When you enter the time in the 12-hour format, press  or  to switch between am and pm. The order in which the date and time is displayed is based on the format setting.




To Set Daylight Saving (M 12-4-2)

**“Settings” → “Phone Settings” tab → “Date & Time” → “Daylight Saving”**

1. Select “On” or “Off”.




To Set the Time Zone (M 12-4-3)

**“Settings” → “Phone Settings” tab → “Date & Time” → “Set Time Zone”**

1. Press  or  to select the home city to set.
2. Press .

To Customise the Time Zone

**“Settings” → “Phone Settings” tab → “Date & Time” → “Set Time Zone” → [Options] → “Set Custom Zone”**

1. Enter the city name.
2. Enter the time-zone differences using the digit keys.  
Press  or  to switch between – and +.
3. Press .

World Clock (M 12-4-4)

For details, see page 128.

To Select the Time Format (M 12-4-5)

**“Settings” → “Phone Settings” tab → “Date & Time” → “Time Format”**

1. Select “24 Hour” or “12 Hour”.

To Select the Date Format (M 12-4-6)

**“Settings” → “Phone Settings” tab → “Date & Time” → “Date Format”**

1. Select from “D.M.Y”, “M-D-Y” or “Y/M/D”.

To Select the Calendar Format (M 12-4-7)

**“Settings” → “Phone Settings” tab → “Date & Time” → “Calendar Format”**

1. Select “Sunday-Saturday” or “Monday-Sunday”.



## Language Setting (M 12-5)

You can change the language displayed on the phone.

“Settings” → “Phone Settings” tab → “Language”

1. Select the desired language.








### Tip

- You can also change the input language on the text entry screen (p. 48).

### Note





- If you select “Automatic” in step 1, the language preset on the SIM card is selected.
- If the language preset on the SIM card is not supported, then the default language of the phone is selected.

## Shortcuts (M 12-7)

You can change the default shortcut action/assignment of the , , , ,  and  soft keys and the  key itself with the Shortcuts menu.

The menu shows the current assignment of each of the above keys.

“Settings” → “Phone Settings” tab → “Shortcuts”

1. Highlight the key you wish to change.
2. Press [Assign].
3. Press  and  to scroll by item.  
Press  and  to scroll by group.

4. Press [Select] to update the key for the highlighted item.

### Note

- If you are outside of your network area, the network-related items are not available.

### Tip

- You can clear the settings by selecting “Set to Default” in step 1.

## Locks (M 12-8-1)

You can set various locks on your phone such as PIN Entry and Handset Lock.

“Settings” → “Phone Settings” tab → “Security” → “Locks”

### **Enabling/Disabling the PIN Code**

If the PIN code is enabled, you are asked to enter the PIN code each time the phone is switched on. Your PIN code is registered on the SIM card and you should have been made aware of the code when you purchased the SIM card. Contact your service provider for further details.

Select “On” for “PIN Entry” and enter your PIN code if you wish to activate the PIN lock.

#### **Note**

- *If you enter the wrong PIN code three times, the SIM card will lock. To remove the lock, contact your service provider/SIM card vendor.*

### **To Change the PIN Code**

This allows you to change the PIN code registered on the SIM card. Before you change the PIN code, select “On” for “PIN Entry”.

Enter the existing PIN code for “Change PIN2” after selecting “PIN Entry”, and enter a new PIN code twice.

### **To Change the PIN2 Code**

PIN2 is a second PIN code used to unlock certain features of a SIM card, such as Fixed Dialling and Call Cost metering. Not all SIM cards use the PIN2 code. This menu may not be displayed depending on the type of your SIM card.

Enter the existing PIN code for “Change PIN2” after selecting “PIN Entry”, and enter a new PIN2 code twice.

### **Handset Lock**

The Handset Lock prevents unauthorised use of the phone or certain features on the phone when the power is turned on. By setting this option on, your phone or certain features on your phone are locked until the correct handset code is entered.

Select “On” for “Handset Lock” if you wish to activate the Handset Lock.

## Function Lock

By setting this option on, all the functions of your phone will be locked until the correct handset code is entered.

Enter your handset code for “Function Lock” if you wish to activate the Function Lock.

### To Turn Off the Function Lock

Enter your handset code in standby to turn the Function Lock off.

## Contacts Lock

The Contacts Lock function prevents unauthorised use of your Contacts List.

Select “On” to lock or “Off” to unlock for “Contacts Lock” and enter your handset code.

For details on the handset code, see “Changing the Handset Code”.

## Showing Secret Data

By setting this option on, the hidden data can be displayed.

Select “On” to display or “Off” to hide for “Show Secret Data”. Enter your handset code when you select “On”.

For details on the handset code, see “Changing the Handset Code”.

## Changing the Handset Code

The default handset code is “9999”.

Select “Change Handset Code” and enter the old handset code, then enter a new handset code twice.

### Master Reset (M 12-8-2)

### Resetting Settings from M1 to M12

“Settings” → “Phone Settings” tab → “Security” → “Master Reset” → “Reset Settings”

1. Enter your handset code.

For details on the handset code, see “Changing the Handset Code”.

### Note

- *Some settings are not deleted by this function. Data stored in Contacts List, etc. is not deleted.*

## Resetting All Settings from M1 to M12 and All Created Data

“Settings” → “Phone Settings” tab → “Security” → “Master Reset” → “Reset All”

1. Enter your handset code.

For details on the handset code, see “Changing the Handset Code” on page 146.

## Connectivity

### Using the Bluetooth Function (M 12---1)


By configuring the settings in this menu, you can connect to *Bluetooth* wireless technology enabled phones, as well as PCs (USB connection is possible using Data Cable accessory).

For using the *Bluetooth* wireless function, you need to search for other *Bluetooth* wireless technology enabled devices to establish contact with your phone. Keep your phone within a distance of 10 metres from the devices before searching.

To Turn On or Off the Bluetooth Wireless Function (M 12---1-1)

“Settings” → “Connectivity” tab → “Bluetooth” → “Switch On/Off”

1. Select “On” or “Off”.

When “On” is selected, the *Bluetooth* wireless setting is activated, and “” is displayed.



To Show or Hide Your Phone (M 12---1-2)

“Settings” → “Connectivity” tab → “Bluetooth” → “Visibility”

1. Select the desired visibility settings.

“Show My Phone”: Allows other devices to recognise your phone.

“Hide My Phone”: Hides your phone from other devices.

To Search for Devices to be Paired (M 12---1-3)

A maximum of 16 devices can be searched for.

“Settings” → “Connectivity” tab → “Bluetooth” → “Search for Devices”



1. Select the desired device for pairing.
2. Enter the device passcode.

### Note


- You can search for devices even when the Bluetooth wireless function is off. Once pairing is started, the phone turns the Bluetooth wireless function on automatically.
- You can only select one device for pairing. To change the paired device, see “To Activate the Paired Device”.
- Pairing means authentication has been established between the two devices.
- In order to pair two devices with Bluetooth wireless technology, the users should agree on the same passcode for both devices.
- The passcode is used only once, so there is no need to remember it. The passcode can be different each time the devices are connected.
- Devices that do not have a user interface (i.e., headsets and car kits) have a factory-set passcode. See the user guide for the device.

### Tip

- You can save battery power by turning the Bluetooth wireless function off while it is not in use. Turn the Bluetooth wireless function off in “To Turn On or Off the Bluetooth Wireless Function” on page 147 or in “To Turn Off Automatically” on page 150.
- During a call, you can divert voice calls to the paired handsfree device. Press [Options], select “Transfer Audio” and then “To Handset” or “To Bluetooth”.


To Activate the Paired Device (M 12---1-4)  
Paired devices are listed by tabs for all devices and for handsfree devices.

“Settings” → “Connectivity” tab → “Bluetooth” → “Paired Devices”

1. Press  to switch to the list for handsfree devices.
2. Select the desired device you wish to activate.




To Check and Uncheck the Paired Handsfree Devices

“Settings” → “Connectivity” tab → “Bluetooth” → “Paired Devices”

1. Press  to switch to the list for handsfree devices.
2. Highlight the desired handsfree device.
3. Press [Options] and select “Check” or “Uncheck”.

## To Rename or Delete the Paired Devices

**“Settings”** → **“Connectivity” tab** → **“Bluetooth”** → **“Paired Devices”**

1. Press  or  to switch between all paired devices and handsfree devices.
2. Highlight the desired device.
3. Press [Options].
4. Select “Change Name” or “Delete”.  
You can rename or delete by pressing  after selecting desired device.

## To Send All Data to Other Devices

(M 12---1-5)

You can send all the data for applications such as Contacts List, Calendar, Tasks to selected devices.

**“Settings”** → **“Connectivity” tab** → **“Bluetooth”** → **“Send All”**

1. Select the desired device.  
If a device is not specified, searching starts automatically.
2. Enter your handset code.  
For details on the handset code, see “Changing the Handset Code” on page 146.
3. Select the desired data to send.
4. Enter the device passcode for unpaired devices.

### **Note**

- *If the handsfree device is connected, the confirmation screen to deactivate the handsfree function is displayed. Press [Yes] to deactivate.*

## **Bluetooth Wireless Settings (M 12---1-6)**

With this setting you can rename your phone, prevent other devices from recognising your phone and turn the *Bluetooth* wireless function off automatically to save battery power, etc.

## To Rename Your Phone

You can rename your phone. The name is shown on other devices when your phone is detected.

**“Settings”** → **“Connectivity” tab** → **“Bluetooth”** → **“Bluetooth Settings”** → **“Device Name”**

1. Enter the new device name.

## To Turn Off Automatically

**“Settings”** → **“Connectivity” tab** → **“Bluetooth”** → **“Bluetooth Settings”** → **“Bluetooth Timeout”**

1. Select the desired time.

Your phone turns the function off automatically after the specified time.

## To Switch the Handsfree Settings

You can switch modes of the handsfree kit between two modes; talking with the handsfree kit or talking with the phone.

**“Settings”** → **“Connectivity” tab** → **“Bluetooth”** → **“Bluetooth Settings”** → **“Handsfree Setting”**

1. Select “Private mode” or “Handsfree mode”.

“Private mode”: For talking with the phone

“Handsfree mode”: For talking with the handsfree kit

## To Turn the Authentication Request On or Off

You can request the sender or receiver of the data to authenticate the passcode (exchanging the passcode) before pairing devices.

**“Settings”** → **“Connectivity” tab** → **“Bluetooth”** → **“Bluetooth Settings”** → **“Authentication”**

1. Select “On” or “Off”.

### *Note*

- *No authentication is required for the paired devices.*
- *Even if you select “Off”, you may authenticate the passcode when the sender requests it.*

To See Your Phone Details

**“Settings”** → **“Connectivity” tab** → **“Bluetooth”** → **“Bluetooth Settings”** → **“My Phone Details”**

### **Mass Storage (M 12---2)**

You can set the phone to connect to a PC via Mass Storage mode.

**“Settings”** → **“Connectivity” tab** → **“Mass Storage”**

1. Press [Yes].

#### *Note*

- *Activating Mass Storage mode also activates offline mode.*
- *Mass Storage is not available when the battery is low, a Java™ application is paused, or Music Player is active.*

### **USB Charge (M 12---3)**

You can set the phone to charge via USB, connected to a PC.

**“Settings”** → **“Connectivity” tab** → **“USB Charge”**

1. Select “On” or “Off”.

### **Making and Restoring a Backup File to the Memory Card (M 12---4-1)**

With a memory card inserted in your phone, you can make backup files of Bookmarks, Text, Contacts, Calendar and Tasks in the handset memory to the memory card. You can also restore the backup data from the memory card.

To Make a Backup File

**“Settings”** → **“Connectivity” tab** → **“Memory Card”** → **“Backup/Restore”** → **“Backup”**

1. Enter your handset code.

For details on the handset code, see “Changing the Handset Code” on page 146.

2. Select the desired item to back up or “Select All” to back up all files.

To Restore a Backup File

**“Settings”** → **“Connectivity” tab** → **“Memory Card”** → **“Backup/Restore”** → **“Restore”**

1. Enter your handset code.

For details on the handset code, see “Changing the Handset Code” on page 146.

2. Select the desired item to restore or “Select All” to restore all files.



3. Select the desired file to restore.

A confirmation message indicating deletion from the handset memory is displayed.

4. Press [Yes] to start restoring.

#### **Note**

- To delete a backup file, highlight the desired item, press [Options] and select “Delete” after performing steps 1 to 3.

### **Formatting Memory Card (M 12---4-3)**

“Settings” → “Connectivity” tab → “Memory Card” → “Format Card”

1. Enter your handset code.

For details on the handset code, see “Changing the Handset Code” on page 146.

2. Press [Yes] to start formatting.

## **Other Settings**

### **Network Settings (M 12----5)**

To Select a Service Automatically

(M 12----5-1)

Each time the power is turned on, your phone selects a service automatically.

“Settings” → “Other Settings” tab → “Network Settings” → “Select Service”

1. Select “Auto”.

To Select a Service Manually

“Settings” → “Other Settings” tab → “Network Settings” → “Select Service”

1. Select “GSM”.

#### **Note**

- If the handset is set to GSM, it will not be able to use any 3G only services (e.g. video calls or high speed data access).

### To Select a Network Automatically

Each time the power is turned on, your phone always tries to connect to the preferred network.

If your phone is not connected to the network, you can perform the following immediately to establish the preferred network connection.

**“Settings” → “Other Settings” tab → “Network Settings” → “Select Network” → “Automatic”**


### To Select the Network Manually


**“Settings” → “Other Settings” tab → “Network Settings” → “Select Network” → “Manual”**

1. Select the desired network.

### To Add a New Network

**“Settings” → “Other Settings” tab → “Network Settings” → “Select Network” → “Add New Network”**

If there are no entries, press  and go to step 2.

If there is an entry, press  and perform the following steps.

1. Select “Add”.
2. Enter the country code (up to 3 digits).
3. Enter the network code (up to 3 digits).
4. Enter a new network name (up to 25 characters).
5. Enter either 2G (GSM) or 3G for the network type.

### To Edit the Preferred List

**“Settings” → “Other Settings” tab → “Network Settings” → “Select Network” → “Set Preferred”**

1. Select the name of the network you wish to edit.
2. Select “Insert” to insert over the selected position, “Add to end” to insert at the end or “Delete” to delete.

### To Set Flight Mode (M 12----5-3)

When the Flight Mode is set to “On”, the phone cuts off the network connections and stops searching for available networks to connect. With this mode, you can play games or music even when you fly.

**“Settings” → “Other Settings” tab → “Network Settings” → “Flight Mode”**

1. Select “On” or “Off”.

### Area Info (M 12----5-5)

The Area Info is the message information that operators send to subscribers in certain areas.

When you receive Area Info, the message (area code) is displayed in standby.

To Enable/Disable Area Info

“Settings” → “Other Settings” tab → “Network Settings” → “Area Info”

1. Select “On” or “Off”.

#### Note

- This function may not be available on all mobile phone networks. Contact your service provider for more information.
- If Area Info is set to “On”, the standby time will decrease.

### Showing the Network Information

(M 12----5-6)

“Settings” → “Other Settings” tab → “Network Settings” → “Network Information”

Information about the operator name, package and services are displayed.

### Internet Settings (M 12----6)

#### Note

- In normal operations, you do not need to change the settings.
- Internet settings have already been entered in your phone depending on your service provider. You may have restrictions on viewing, deleting, copying or modifying the settings. Contact your service provider for details.

### Browser Settings (M 12----6-1)

“Settings” → “Other Settings” tab → “Internet Settings” → “Browser Settings” → “Create New”

- |                 |  |
|-----------------|--|
| “Profile Name”: | WAP profile name (Unique name)                 |
| “Proxy”:        | Proxy setting for WAP (When “Use Proxy” is On) |
| “Access Point”: | Access point for WAP (When “Use Proxy” is Off) |
| “Use Proxy”:    | Setting to connect by Proxy or not             |
| “Home”:         | Home page URL (When “Use Proxy” is Off)        |

### Streaming Settings (M 12----6-2)

**“Settings”** → **“Other Settings” tab** → **“Internet Settings”** → **“Streaming Settings”** → **“Create New”**

- “Profile Name”: Profile name for streaming (Unique name)
- “Proxy Address”: Proxy address
- “Proxy Port Number”: Port number (1-65535)
- “Access Point”: Access point

### Proxy Settings (M 12----6-3)



**“Settings”** → **“Other Settings” tab** → **“Internet Settings”** → **“Proxy Settings”** → **“Create New”**

- “Proxy Name”: Proxy name (Unique name)
- “Proxy Address”: IP address
- “Access Point”: Access point
- “Home”: Home page URL
- “Port Number”: Port number (1-65535)
- “Authentication Type”: Authentication Type (“HTTP-BASIC” or “HTTP-DIGEST”)
- “User Name”: User name for authentication
- “Password”: Password for authentication




### Access Point Settings (M 12----6-4)

**“Settings”** → **“Other Settings” tab** → **“Internet Settings”** → **“Access Point Settings”** → **“Create New”**




- “Access Point Name”: Access point name (Unique name)
- “APN”: APN setting
- “Authentication Type”: Authentication type (“NONE”, “PAP” or “CHAP”)
- “User Name”: User name for access point
- “Password”: Password for access point
- “DNS”: DNS (Domain Name System)
- “Linger Time”: Linger Time (1-99999 sec.)

Re-provisioning Settings (M 12----6-5)

“Settings” → “Other Settings” tab → “Internet Settings” → “Re-provisioning Settings” → “Execute Pending”

Clearing DNS Cache (M 12----6-6)

“Settings” → “Other Settings” tab → “Internet Settings” → “Clear DNS Cache”

White List (M 12----6-7)

“Settings” → “Other Settings” tab → “Internet Settings” → “White List” → “Create New”

“SMSC Address”: SMSC address

“SM Orig. Address”: SM originating address

To Activate the Browser/Streaming Profile

“Settings” → “Other Settings” tab → “Internet Settings”

1. Select “Browser Settings” or “Streaming Settings”.
2. Select the desired profile you wish to activate.

To Edit/Copy/Delete the Browser/Proxy/Streaming/Access Point Profile

“Settings” → “Other Settings” tab → “Internet Settings”

1. Select “Browser Settings”, “Streaming Settings”, “Proxy Settings” or “Access Point Settings”.
2. Highlight the desired profile.
3. Press [Options] and select the desired option.  
“Edit”: Modify the desired item  
“Copy”: Enter the new file name  
“Delete”: Press [Yes] to delete





## Telephony (M 9)

### Call Log


The phone will record the last 30 missed calls, received calls and dialled numbers.

#### Viewing Call Log

**“Telephony”** → **“Call Log” tab**

1. Select from “All Calls”, “Dialled Numbers”, “Missed Calls” or “Received Calls”.  
The selected call log list is displayed.  
To switch logs, press  or .
2. Select the phone number you wish to view.  
If you wish to dial the number, press  to make a voice call or  to make a video call.

#### Tip

- You can also confirm call logs by pressing  in standby.

#### Sending Messages

1. In the call log list, highlight the phone number or name you wish to send a message to.
2. Press [Options] and select “Create Message”.  
For details on creating a message, see “Creating a New Message” on page 82.

#### Deleting a Call Log

1. In the call log list, press [Options] and select “Delete” or “Delete All”.

### Call Timers (M 9-5)

This function lets you check the duration of your calls.

#### Checking the Duration of the Last Call and All Calls

**“Telephony”** → **“Call Log” tab** → **“Call Timers”**

1. Select “Dialled Calls” or “Received Calls”.

### Resetting Call Timers (M 9-5-3)

“Telephony” → “Call Log” tab → “Call Timers” → “Clear Timers”

1. Enter your handset code.

For details on the handset code, see “Changing the Handset Code” on page 146.

### Call Costs (M 9-6)

This function lets you check the charges for your calls. Some networks do not support Charging Advice. Please check with your service provider for availability.

#### Checking the Cost of the Last Call (M 9-6-1)

“Telephony” → “Call Log” tab → “Call Costs” → “Last Call”

#### Checking the Total Call Cost (M 9-6-2)

“Telephony” → “Call Log” tab → “Call Costs” → “All Calls”


#### Setting the Charge Rate (M 9-6-5)

Set the charge rate to calculate the call cost and set the maximum limit for call cost.

“Telephony” → “Call Log” tab → “Call Costs” → “Cost Units” → “Set Units”

1. Enter your PIN2 code.
2. Enter a currency unit (up to 3 characters).

3. Enter a cost per unit.

To enter a decimal point, press .

#### Setting the Charge Limit (M 9-6-6)

This function is useful if you wish to make sure you do not exceed a certain charge limit.

“Telephony” → “Call Log” tab → “Call Costs” → “Max Cost” → “Set Limit”

1. Enter your PIN2 code.
2. Enter a value.

#### Checking the Residual Credit (M 9-6-3)

“Telephony” → “Call Log” tab → “Call Costs” → “Residual Credit”

### **Resetting All Call Costs (M 9-6-4)**

***“Telephony” → “Call Log” tab → “Call Costs” → “Clear Costs”***

1. Enter your PIN2 code.

### **Data Counter (M 9-7)**

You can confirm the number of bytes used in the 3G (UMTS) and GSM transmission.

***“Telephony” → “Call Log” tab → “Data Counter”***

1. Select from “Last Data” or “All Data”.

### **Resetting All Data Counter (M 9-7-3)**

***“Telephony” → “Call Log” tab → “Data Counter” → “Clear Counter”***

### **Call Restrictions**

This function lets you place restrictions on incoming and outgoing calls. To activate this option you will need the specified password, which is available from your service provider.

***“Telephony” → “Call Restrictions” tab***

1. Select “Outgoing Calls” or “Incoming Calls”.
  - “Outgoing Calls”: Restricts outgoing calls.
  - “Incoming Calls”: Restricts incoming calls.

2. Select one of the following options:

(For “Outgoing Calls”)

“Bar All Outgoing Calls”:

Restricts all outgoing calls except emergency calls.

“Bar International Calls”:

Restricts all outgoing international calls.

“Only Local & Home”:

Restricts all outgoing international calls except to your home country.

(For “Incoming Calls”)

“Bar All Incoming Calls”:

Restricts all incoming calls.

“Bar if Abroad”:

Restricts all incoming calls when you are outside of the coverage from your registered service provider.



3. Select one of the following options:

- “All Services”: Restricts all services.
- “Voice Calls”: Restricts all voice calls.
- “Video Calls”: Restricts all video calls.
- “Data”: Restricts all data calls.
- “Fax”: Restricts all fax calls.
- “Messages”: Restricts all messages.

4. Select “On”, “Off” or “Status”.

5. Enter the network password.

#### To Cancel Settings

**“Telephony” → “Call Restrictions” tab**

1. Select “Outgoing Calls” or “Incoming Calls”.
2. Select “Cancel All”.
3. Enter the network password.

#### Fixed Dialling Numbers

This option is available on most SIM cards for mobile phones. It allows you to configure a SIM card so that it can only be used to make calls to numbers on a predefined list.

**Note**

- *This service depends on the SIM card.*

#### To Enable Fixed Dialling Numbers

**“Telephony” → “Call Restrictions” tab → “Fixed Dialling Numbers”**

1. Enter your PIN2 code.
2. Select “Switch On/Off”.
3. Select “On” to enable this function.

## To Add a New Name

*“Telephony” → “Call Restrictions” tab → “Fixed Dialling Numbers”*

1. Enter your PIN2 code.
2. Select “Edit Dial List”.
3. Highlight a blank entry, press [Options], then select “Add New Dial”.
4. Add a name and a phone number.  
For details on adding a name and phone number, see “Adding a New Contact” on page 51.
5. Press [Save].

## Rejecting an Incoming Call

You can register phone numbers you do not wish to answer.

### To Reject the Registered Number

*“Telephony” → “Call Restrictions” tab → “Rejected Numbers” → “Switch On/Off”*

1. Select “On” or “Off”.

### To Register the Rejected Number

*“Telephony” → “Call Restrictions” tab → “Rejected Numbers” → “Set Rejecting Number”*

1. Select a blank field.
2. Enter the desired number.

## Rejecting a Call when the Caller’s Number is Withheld

*“Telephony” → “Call Restrictions” tab → “Withheld Call”*

1. Select “On” or “Off”.

## Changing the Network Password

**“Telephony”** → **“Call Restrictions” tab** → **“Change N/W Password”**

1. Enter the old network password.
2. Enter a new network password.
3. Enter the new network password again.

If you enter the incorrect password, you are asked to enter the password again.

4. Press .

## Call Settings

### Tip

- You can also display Call Settings menu in the following procedure:

**“Settings”** → **“Other Settings” tab** → **“Call Settings”**

### Video Call Settings (M 9----1)

Set various types of functions and services for video calls.

## To Select an Image for the Alternative Image

You can select an image shown to the other party between the sub camera image and an alternative image from the saved picture files.

**“Telephony”** → **“Call Settings” tab** → **“Video Call Settings”** → **“Camera Picture”**

1. Select “Default Image” or “Alternative Image”.  
For “Default Image”, select “Internal Camera”, “External Camera” or “Alternative Image”.  
For “Alternative Image”, select “Preset Picture” or “My Pictures”.

### To Turn On or Off the Speaker

***“Telephony” → “Call Settings” tab → “Video Call Settings” → “Loudspeaker”***

1. Select “On” to turn on the loudspeaker or select “Off” to turn it off.

### To Select the Picture Quality

Select the desired data format for your environment.

***“Telephony” → “Call Settings” tab → “Video Call Settings” → “Incoming Picture Quality”***

***“Telephony” → “Call Settings” tab → “Video Call Settings” → “Outgoing Picture Quality”***

1. Select “Normal”, “Quality Priority” or “Frame Rate Priority”.  
Select “Frame Rate Priority” to perform faster communication.

### To Set the Backlight

With this setting on, the phone’s backlight is on when making a video call.

***“Telephony” → “Call Settings” tab → “Video Call Settings” → “Backlight”***

1. Select “Always On”, “Always Off” or “As Normal Setting”.  
The “As Normal Setting” option depends on the backlight setting of the display (p. 140).

### To Mute the Microphone

You can mute the microphone while making a video call.

***“Telephony” → “Call Settings” tab → “Video Call Settings” → “Mute Microphone”***

1. Select “On” to mute or “Off” to cancel mute.

### To Assign Hold Guidance Picture

You can display an image saved in the phone on your display while you are putting a call on hold.

**“Telephony”** → **“Call Settings” tab** → **“Video Call Settings”** → **“Hold Guidance Picture”**

1. Select “Preset Picture” or “My Pictures”.
2. Select the desired picture.

### **Voicemail & Diverts (M 9-▶-▶-▶-2)**

This service can be used to divert incoming calls that you cannot answer. Calls can be diverted to another phone number or to your Voicemail system.

#### **Note**

- *This service may not be available on all mobile phone networks. Contact your service provider for more information.*

### To Set the Voicemail Numbers

You can divert calls to the network Voicemail service centre. Depending on whether you are inside or outside your network area, you can set two Voicemail numbers, a number for your home network area or for a roaming network area.

#### **Note**

- *This service depends on the SIM card. Contact your SIM card vendor for more information.*

**“Telephony”** → **“Call Settings” tab** → **“Voicemail & Diverts”** → **“Voicemail”** → **“Settings”** → **“Voicemail Numbers”**

1. Select “Home Mailbox No.” or “Roam Mailbox No.”.
2. Enter the desired phone number.

### To Access the Voicemail Centre

1. Press and hold  in standby.

## To Activate the Voicemail Service

***“Telephony” → “Call Settings” tab → “Voicemail & Diverts” → “Voicemail” → “Activate”***

1. Select one of the following options:

- “Always”: Diverts all calls without ringing.
- “When Busy”: Diverts incoming calls while you are talking on the phone.
- “No Answer”: Diverts incoming calls if you do not answer a call within a certain period of time.
- “Not Reachable”: Diverts incoming calls when your phone has no network service or is switched off.

If you select “No Answer”, select the period of time from 6 levels (05 to 30 seconds).

2. Press .

## To Activate the Diverts Service

Select the appropriate option.

***“Telephony” → “Call Settings” tab → “Voicemail & Diverts” → “Diverts”***

1. Select “Activate” or “By Service”.

If you select “By Service”, you can select further divert options.


2. Select from “Always”, “When Busy”, “No Answer” or “Not Reachable”.

If you select “No Answer”, select the period of time from 6 levels (05 to 30 seconds).

3. Enter a phone number to which you wish to divert calls or search for it in the Contacts List (p. 52).

4. Press .

### ***Note***

- *When “Voice Calls” diverts are set to “Always”, “” is displayed in standby.*

## To Check the Diverts Status

***“Telephony” → “Call Settings” tab → “Voicemail & Diverts” → “Status”***

1. Select the diverts option you wish to check.

To Cancel the Diverts and Voicemail Service  
Once you have changed the diverts settings, you can cancel them all with this service.

**“Telephony”** → **“Call Settings” tab** → **“Voicemail & Diverts”** → **“Cancel All”**

### **Call Waiting (M 9----3)**

#### **Note**

- *This service may not be available on all mobile phone networks. Contact your service provider for more information.*

If you wish to be able to receive another incoming call while you have a call in progress, you must activate the Call Waiting service.

**“Telephony”** → **“Call Settings” tab** → **“Call Waiting”**

1. Select “On”, “Off” or “Status”.

### **Showing My Phone Number (M 9----4)**

This lets you control whether to show your phone number when calling another party or not.

**“Telephony”** → **“Call Settings” tab** → **“Show My Number”**

1. Select “On”, “Off” or “Status”.

#### **Note**

- *Some networks do not support this service. Please check with your service provider for availability.*

### **Time & Cost (M 9----5)**

To Display Call Costs

**“Telephony”** → **“Call Settings” tab** → **“Time & Cost”** → **“Display Call Cost”**

1. Select “On” or “Off”.

To Display the Call Time Counter

**“Telephony”** → **“Call Settings” tab** → **“Time & Cost”** → **“Call Time Counter”**

1. Select “On” or “Off”.

### **Minute Minder (M 9----6)**

Minute Minder function informs you of your talk time by sounding a tone after every minute.

**“Telephony”** → **“Call Settings” tab** → **“Minute Minder”**

1. Select “On” or “Off”.

### **Auto Redial (M 9----7)**

**“Telephony”** → **“Call Settings” tab** → **“Auto Redial”**

1. Select “On” or “Off”.

## **Connecting 880SH to Your PC**

You can use the following functions by connecting the 880SH to your PC using a USB port or *Bluetooth* wireless technology port:

- 3G/GSM modem
- Handset Manager for 880SH
- Music Manager for 880SH
- Sync Manager for 880SH

## **System Requirements**

Operating System:

Windows<sup>®</sup> 2000\*, Windows<sup>®</sup> XP\*\*,  
Windows<sup>®</sup> Vista

- \* Service Pack 4 or later
- \*\* Service Pack 2 or later

Supported Software:

Microsoft<sup>®</sup> Outlook/Outlook Express

Interface:

USB port or *Bluetooth* wireless port

CD-ROM drive

To use Music Manager, DirectX9 and Windows Media Player 9 or later are required.

## **3G/GSM Modem**

You can use 880SH as a 3G/GSM modem to access the Internet from your PC. Connect your phone to your PC via *Bluetooth* wireless technology or USB interface. Software installation on your PC is required.

### **Modem via the USB Data Cable**

1. Insert the supplied CD-ROM into your PC's CD-ROM drive.

The 880SH CD-ROM screen is displayed.

If the 880SH CD-ROM screen is not displayed, double-click [Launcher.exe] in your CD-ROM.

2. Select the USB driver from the on-screen instructions of your CD-ROM, and start installation of USB driver software following the on-screen instructions of your CD-ROM.

- You can also download USB driver software from our web-site, <http://www.sharp-mobile.com>.
- During installation, the on-screen instructions ask you to connect your phone to your PC. Power on your phone and attach the phone to the USB port of your PC using the USB data cable (optional accessory).



3. Follow the on-screen instructions to complete installation.
4. Select the modem driver from the on-screen instructions of your CD-ROM, and install modem driver software following the on-screen instructions of your CD-ROM.
  - You can also download modem driver software from our web-site, <http://www.sharp-mobile.com>.
5. Follow the on-screen instructions to use your phone as a modem driver.
  - When the on-screen instructions ask modem driver type, select the cable as a modem driver.

### Modem via Bluetooth Connection

1. Turn on the *Bluetooth* wireless function of your phone.  
For details, see “To Turn On or Off the Bluetooth Wireless Function” on page 147.
2. Pair your PC with your phone.  
For details on pairing your PC with your phone, see “To Search for Devices to be Paired” on page 147.

3. Insert the supplied CD-ROM into your PC’s CD-ROM drive.

The 880SH CD-ROM screen is displayed.  
If the 880SH CD-ROM screen is not displayed, double-click [Launcher.exe] in your CD-ROM.

4. Select the modem driver from the on-screen instructions of your CD-ROM, and install modem driver software following the on-screen instructions of your CD-ROM.
5. Follow the on-screen instructions to use your phone as a modem driver.
  - When the on-screen instructions ask modem driver type, select *Bluetooth* as a modem driver.

### Note

- *Modem communication is not possible while communicating with the Handset Manager via Bluetooth wireless technology or USB interface.*
- *It is not recommended that you make or answer calls when you are using 880SH as a GSM/GPRS modem. The operation may be interrupted.*
- *Your phone exhausts the battery when connected to a PC, even when not communicating.*

## Handset Manager

You can transmit the following items between your phone and your PC, and can use Contacts List entries on your PC:

- My Items files (Pictures/Music & Ringtones/Videos/ Other Documents data)
- Contacts List entries
- Short messages
- Schedule entries

### Via USB Data Cable

1. Insert the supplied CD-ROM into your PC's CD-ROM drive.

The 880SH CD-ROM screen is displayed.

If the 880SH CD-ROM screen is not displayed, double-click [Launcher.exe] in your CD-ROM.

2. Select Handset Manager from the on-screen instructions of your CD-ROM, and start installation of Handset Manager software following the on-screen instructions of your CD-ROM.
  - You can also download Handset Manager software from our web-site, <http://www.sharp-mobile.com>.
  - If you have not installed the USB driver, follow steps 2 and 3 on page 167.

3. Follow the on-screen instructions to complete installation.
  - During installation, the on-screen instructions ask you to select an interface. Select the USB data cable as an interface.
4. Connect your phone to your PC. Power on your phone and attach the phone to the USB port of your PC using the USB data cable (optional accessory).
5. Select [Yes] for Mass Storage mode.  
For details on activating this mode, see “Mass Storage” on page 151.
6. Launch Handset Manager from the relevant folder.
7. Follow the on-screen instructions of Handset Manager.

For details, see the User Guide Software which was installed with Handset Manager.

## Via Bluetooth

1. Insert the supplied CD-ROM into your PC's CD-ROM drive.  
The 880SH CD-ROM screen is displayed.  
If the 880SH CD-ROM screen is not displayed, double-click [Launcher.exe] in your CD-ROM.
2. Select Handset Manager from the on-screen instructions of your CD-ROM, and start installation of Handset Manager software following the on-screen instructions of your CD-ROM.
  - You can also download Handset Manager software from our web-site, <http://www.sharp-mobile.com>.
3. Follow the on-screen instructions to complete installation.
  - During installation, the on-screen instructions ask you to select an interface. Select *Bluetooth* as an interface.
4. Select [Yes] for Mass Storage mode.  
For details on activating this mode, see “Mass Storage” on page 151.

5. Launch Handset Manager from the relevant folder.
6. Follow the on-screen instructions of Handset Manager.

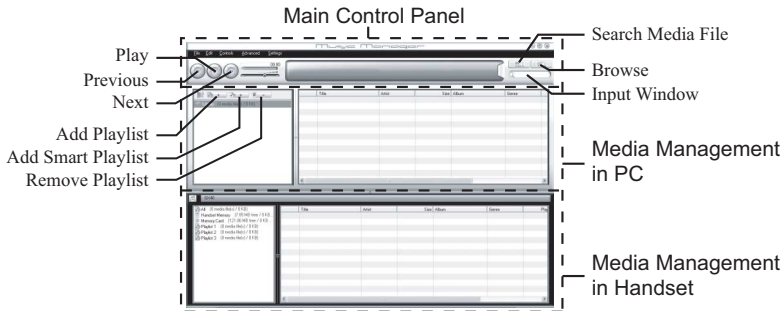
For details, see the User Guide Software which was installed with Handset Manager.

### **Note**

- *Some large files may not be able to be transmitted from the PC to the phone.*
- *Applications (Camera, My Items, etc.) do not run when the phone is connected to the PC via Bluetooth wireless technology interface or USB data cable.*
- *If you have already installed Sharp Handset Manager, you need to uninstall the previous one.*
- *If you have trouble with installation, uninstall Handset Manager, restart your PC, reinstall Handset Manager and restart.*

## Music Manager

You can exchange the playlist and the sound files between your phone and your PC, and can manage them on your PC. Available files are the sound files in the following formats: MP3, AAC, 3GPP.



### Main Control Panel

Control all the main actions from here.

- Play: Playing back a file.
- Previous: Returns to the top portion of the current file.
- Next: Jumps to the next file.
- Search Media File: Search media file.
- Browse: Browse all the media files sorted in Genre/Artist/Album.
- Input Window: Quickly find the media files in Library or the playlist with keyword entry.

### Media Management in PC

Media files in PC can be easily explored in 2 main columns.

- Add Playlist: Creating new playlist.
- Add Smart Playlist: Creating new smart playlist.
- Remove Playlist: Removing playlist.

### Media Management in Handset

Media files in Handset can be easily explored in 2 main columns.

- With the drag and drop operation, you can upload the sound files and the playlists from your PC, and also download them to your PC.
- With the drag and drop operation, you can change the order of tracks in the playlist of your PC.
- You can create a new playlist and delete an existing playlist.
- With the drag and drop operation, you can add a sound file to a playlist, and delete them from the playlist.
- You can edit the name of a playlist of your PC.
- You can edit the title, artist name, and album name of sound files of your PC. (only available in MP3 format)

### **Tip**

- *To add tracks from your PC into the Music Manager library, go to “Advanced” then search music tracks.*
- *Once you have created your list, drag the list to the 880SH area on Music Manager, and the files will be uploaded to the 880SH. If one or more of the files is already stored on the handset, Music Manager will not upload them again; the playlist will play the track already uploaded.*

- *Music Manager also allows you to import existing playlists (M3U file type) that you may have created using other media programs.*
- *Use Smart Playlist to automatically add tracks to a playlist based on criteria you can select.*

## **Sync Manager**

You can synchronise the following data with the data of Microsoft® Outlook or Outlook Express on your PC.

- Contacts List entries.
- Schedule entries.

### **Tip**

- *You can set up Sync Manager to start up and synchronise automatically after you connect your phone to your PC via the USB data cable.*

## Troubleshooting

Problem	Solution
The phone does not turn on.	<ul style="list-style-type: none"><li>• Make sure the battery is properly inserted and charged.</li></ul>
PIN code or PIN2 code is rejected.	<ul style="list-style-type: none"><li>• Make sure you have entered the correct code (4 to 8 digits).</li><li>• Your SIM card/protected functions will become locked after three unsuccessful attempts.</li><li>• Contact your SIM provider if you do not have the correct PIN code.</li></ul>
The SIM card becomes locked.	<ul style="list-style-type: none"><li>• Enter the PUK code (8 digits) provided by your service provider (if supported).</li><li>• If the attempt is successful, enter the new PIN code and confirm your phone is operational again. Otherwise contact your dealer.</li></ul>

Problem	Solution
The display is difficult to read.	<ul style="list-style-type: none"><li>• Adjust the backlight brightness for the display.</li></ul>
Phone functions do not work after the phone is turned on.	<ul style="list-style-type: none"><li>• Check the radio signal strength indicator as you may be outside the service area.</li><li>• Check to see if any error message is displayed when you turn your phone on. If so, contact your dealer.</li><li>• Make sure the SIM card is correctly inserted.</li></ul>
Call quality is poor.	<ul style="list-style-type: none"><li>• Your current location may not provide good call quality (i.e., in a car or train). Move to a location where radio signal strength is greater.</li></ul>
Cannot send or receive text message.	<ul style="list-style-type: none"><li>• Make sure you are correctly subscribed for the Short Message Service, that the network supports this service, and that the centre number is set up correctly. If not, contact your network service provider.</li></ul>

Problem	Solution
Calls cannot be made or received.	<ul style="list-style-type: none"> <li>• If the message "Insert SIM card" is displayed when the phone is switched on, you cannot use your SIM card or the SIM card is damaged. Contact your dealer or network service provider.</li> <li>• Check your call barring, fixed dialling setting, remaining battery and call forwarding settings.</li> <li>• Check if your phone is currently performing data communication using <i>Bluetooth</i> wireless technology interface or a USB data cable.</li> <li>• Check the remaining balance if you are using a pre-paid SIM card.</li> </ul>
Cannot access network service.	<ul style="list-style-type: none"> <li>• Check where your account has been registered and where the service is available.</li> </ul>

Problem	Solution
Limited memory available.	<ul style="list-style-type: none"> <li>• Delete any unnecessary data.</li> </ul>
Cannot connect to Multimedia Messaging Service provider.	<ul style="list-style-type: none"> <li>• MMS settings and configuration may be missing or incorrect or the network does not support it. Check your service provider's access point number. Contact your service provider to confirm the correct settings.</li> </ul>
Call is terminated unexpectedly.	<ul style="list-style-type: none"> <li>• Magnetised objects such as health necklaces placed near the phone may terminate the call. Keep your phone away from such objects.</li> </ul>
No entries are displayed in the Contacts List.	<ul style="list-style-type: none"> <li>• Confirm that the Contacts Location setting (Handset or SIM) is correct.</li> </ul>
Cannot receive OBEX data.	<ul style="list-style-type: none"> <li>• The OBEX data can only be received in standby.</li> </ul>

<http://www.sharp-mobile.com>

# Index

- A**
  - Alarms 120
  - Area Info 153
- B**
  - Battery 14, 25
  - Bluetooth 147
- C**
  - Calculator 129
  - Calendar 121
  - Call Functions 35, 157
    - Auto Redial 166
    - Call Costs 158, 166
    - Call Log 157
    - Call Restrictions 159
    - Call Timers 157, 166
    - Call Waiting 39, 166
    - Conference Call 39
    - Data Counter 159
    - Earpiece Volume 38
    - Emergency Calls 35
    - International Calls 35
    - Make Another Call 38
    - Minute Minder 166
  - Muting the
    - Microphone 40, 43, 163
  - My Phone
    - Number 166
  - Redialling 36
  - Rejecting a Call 37, 43, 161
  - Sending a Busy Tone 37, 43
  - Speaker 38, 44, 163
  - Speed Dialling 36, 62
  - Video Call 43, 162
  - Voice Call 35, 37
  - Voicemail & Diverts 164
- Camera 73
  - Continuous Shoot 78
  - Digital Zoom 74
  - Display Direction 75
  - Exposure 74
  - Focus Mode 75
  - Picture Quality 75
  - Picture Size 77, 80
  - Recording Time 80
- Recording Video
  - Clips 74, 80
  - Settings 74
  - Shortcut Keys 77
  - Switching Modes 76
  - Taking Pictures 73
  - Video Encoding 80
  - Video Quality 75
- Cell Broadcasts 94
- Characters
  - Cutting, Copying, Pasting Text 49
  - Entering Characters 47
  - Input Language 48
  - Input Mode 48
  - My Dictionary 49
  - Text Templates 49, 109
- Contacts List
  - Adding New Contact 51
  - Category 61
  - Dialling from an Entry 53
  - Editing Entries 56
  - Group 55
  - Saving a Number 52
  - Saving an Address 86
  - Saving an Image 106
  - Searching the List 52
  - Sending a Message 55, 56
  - Storage Memory 51
  - Synchronising
    - Entries 60
    - Thumbnail 57
  - Contacts Lock 146
  - Countdown Timer 128
- D**
  - Display Indicators 32
- E**
  - Expenses Memo 131
- F**
  - Flight Mode 153
  - FM Radio 68
- G**
  - Games & Applications 114
    - Java™ Settings 117



**H**

Handset Code 146  
Help 131

**I**

Instant Messenger 90  
Settings 99

**K**

Keypad Lock 31

**M**

Main Menu 50  
Mass Storage 151  
Master Reset 146  
Memory Card 14, 28, 151  
Memory Status 62, 113,  
124, 127

Messaging 81

Attaching/Removing  
Data 84  
Creating a Message 82  
Drafts Box 85  
Email 81, 98  
Forwarding a  
Message 87  
Lock 88  
Mailing List 55  
MMS 81, 87, 96  
Postcard 88

Reading a Message 86

Replying to a  
Message 87

Sending Options 84

Settings 95

SMS 81, 95

Video Clip

Message 86

Voice Clip

Message 86

Mobile TV 69

Multimedia 63

Music & Ringtones 106

Music Player 63

Adding a File 65

Adding a New  
Playlist 63

Downloading  
Music 65

Playing Back  
Music 63

Sorting 64

My Items 105

Other Documents 109

**N**

Navigating Functions 34

**O**

Organiser & Utilities 120

**P**

PC Connection 167

Pictures 105

PIN/PIN2 Code 145

Power On and Off 30

**R**

Radio DJ 69

**S**

Safety Precautions 4

Screensavers 118

Settings 133

Connectivity 147

Date & Time 142

Display 137

Internet 154

Language 144

Locks 144

Network 152

Profiles 133

Shortcuts 144

Slider 141

Small Light 141

Sounds & Alerts 141

SIM Application 132

SIM Card 25

Stopwatch 125

Streaming 72

**T**

Tasks 125

Telephony 157

Themes 108

Troubleshooting 173

**U**

USB Charge 151

**V**

Video 65, 107

Adding a File 66

Adding a New  
Playlist 66

Downloading  
Video 68

Playing Back Video 65

Searching a File 66

Settings 67

Vodafone live! 100

Browser Settings 102

Navigating a WAP  
Page 101

Voice Recorder 130

**W**

World Clock 128

<http://www.sharp-mobile.com>