

RF / DBR Series**OPERATION & INSTALLATION MANUAL**

**DB5R (Dual Band)
850 Cellular & 1900 PCS For Outdoor Applications**

October 2007

Proprietary Information

The information contained herein is proprietary to **Shyam Telecom Limited**. Unauthorized access, copy and replication are prohibited. This document must not be copied in whole or part by any means or it shall not be disclosed or divulged to any third Party without the prior written consent of **Shyam Telecom Limited**.

Contents

1. Document History	4
2. Disclaimer	5
3. Safety Instructions and Warnings	5
3.1. Personnel Safety.....	5
3.2. Equipment Safety.....	5
3.3. Electrostatic Sensitivity	6
4. Introduction	7
4.1. Purpose	7
4.2. Scope.....	7
4.3. Definitions	7
4.4. References	8
4.5. General	8
5. Functional Description Of DB5R Dual Band Repeater.....	9
5.1. General Description	9
6. To Get started-Basic Software Control Of the Repeater.....	13
6.1. General	13
6.2. Terminal Set-up	13
6.3. Modules In DB5R-Description.....	20
7. DB5R Repeater Specifications.....	24
7.1. Electrical Specifications-RF	24
7.2. Electrical Specification Power Requirement	24
7.3. External Electrical Interface	24
7.4. Mechanical Specification	24
7.5. Environmental Specification.....	25
7.6 Contents of Delivery.....	25
8. Installation	26
8.1. Preparation Sheet- Pre Installation	26
8.2. Engineering Consideration.....	27
8.3. Installation Tools	29
8.4. Installation Procedure	29
8.5. Repeater Gain Settings.....	30
8.6. Commissioning	31
8.7. Dos & Don't Dos	31
8.7.Checklist – Post Installation	33
9. System Maintenance.....	34

9.1. General	34
9.2. Preventative Maintenance	34

1. Document History

Document Number	Document Name	Document date	Author	Edited by	Approved by	Revision
	DB5R Dual Band Repeater	October 2007				

Revision

Revised Section

Date/Sign

Intentionally Left Blank

2. Disclaimer

Every attempt has been made to make this material complete, accurate, and up-to-date. Users are cautioned, however, that **Shyam Telecom Limited** reserves the right to make changes without notice and shall not be responsible for any damages including consequential, caused by reliance of the contents presented, including, but not limited to, typographical, arithmetical, or listing errors.

Product name(s) referenced in this document may be trademarks or registered trademarks of their respective companies, and are hereby acknowledged.

In areas with unstable power grids (mains) all repeaters must be installed with a voltage regulator ensuring a constant voltage level at the repeater power input. A maximum voltage deviation should remain within the input range to the repeaters for warranty purposes.

All antennas must be installed with lightning protection. Damage to internal modules, as a result of lightning is not covered in the warranty.

3. Safety Instructions and Warnings

3.1. Personnel Safety

Before installing or replacing any equipment, the entire manual should be read and understood. The user needs to supply the appropriate AC power to the Repeater. Incorrect AC power settings can damage the repeater and may cause injury to the user.

Throughout this manual, there are "**Caution**" warnings, "**Caution**" calls attention to a procedure or practice, which, if ignored, may result in injury or damage to the system or system component or even the user. Do not perform any procedure preceded by a "Caution" until the described conditions are fully understood and met.

3.2. Equipment Safety

When installing, replacing or using this product, observe all safety precautions during handling and operation. Failure to comply with the following general safety precautions and with specific precautions described elsewhere in this manual violates the safety standards of the design, manufacture, and intended use of this product. **Shyam Telecom Limited** assumes no liability for the customer's failure to comply with these precautions. This entire manual should be read and understood before operating or maintaining the repeater system.

CAUTION

Calls attention to a procedure or practice which, if not followed, may result in personal injury, damage to the system or damage to individual components. Do not perform any procedure preceded by a **CAUTION** until described conditions are fully understood and met.

WARNING! This equipment complies with FCC & IC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The unit with server antenna must be installed to provide minimum 110 cm separation distance between the server antenna and the body of user or near by person. The donor antenna used for this transmitter must be fixed-mounted on outdoor permanent structures with a separation distance of at least 1.5 meters from all persons during normal operation.

The RF electric performance of the repeater conforms to FCC requirement of the inter modulation and spurious emission. It avoids interference problems.

3.3. Electrostatic Sensitivity

CAUTION**ESD = ELECTROSTATIC DISCHARGE SENSITIVE DEVICE**

Observe electrostatic precautionary procedures.

Semiconductor transmitters and receivers provide highly reliable performance when operated in conformity with the intentions of their design. However, a semiconductor may be damaged by an electrostatic charge inadvertently imposed by careless handling.

Static electricity can be conducted to the semiconductor chip from the centre pin of the RF input connector, and through the AC connector pins. When unpacking and otherwise handling the Repeater, follow **ESD** precautionary procedures including the use of grounded wrist straps, grounded workbench surfaces, and grounded floor mats.

4. Introduction

4.1. Purpose

The purpose of this document is to describe the electrical and mechanical specifications, operation and maintenance of the **DB5R Dual Band Repeater**.

4.2. Scope

This document is the product description of the Shyam **DB5R Dual Band Repeater** for outdoor application.

4.3. Definitions

AGC	Automatic Gain Control
ALC	Automatic Level Control
APC	Automatic Power Control
BCCH	Broadcast Control Channel
BTS	Base Transceiver Station
BSEL	Band Selective
CDMA	Coded Division Multiple Access
CMC	Configuration & Monitoring Console software
CMB	Combiner Unit
CSEL	Channel Selective
DCS	Digital Communication System
DL	Downlink signal (from base station via repeater to mobile station)
EGSM	Extended Global System for Mobile Communication
ETSI	European Telecommunications Standard Institute
GSM	Global System for Mobile communication
LAC	Location Area Code of the BTS site
LED	Light Emitting Diode
LNA	Low Noise Amplifier
LO	Local Oscillator
MS	Mobile Station
MSC	Mobile Switching Center
NMS	Network Management System
PCN	Personal Communication Network
PCS	Personal Communication System
PSU	Power Supply Unit
RF	Radio Frequency
RMS	Remote Management System
RSSI	Received Signal Strength Indication
RTC	Real Time Clock
TACS	Total Access Communication System
TDMA	Time Division Multiple Access
UL (Uplink)	Uplink signal direction (from mobile station via repeater to base station)

4.4. References

[1] ETS 300 086.

Radio Equipment and Systems Land mobile service Technical characteristics and test conditions for radio equipment with an internal or external RF connector intended primarily for analogue speech.

[2] ETS 300 609-4.

Digital cellular telecommunications system (phase 2): Base Station Systems (BSS) equipment specification: Part 4: Repeaters.

[3] ETS 300 342-3

Radio Equipment and Systems (RES); Electro-Magnetic Compatibility (EMC) for European Digital Cellular Telecommunications systems. Base Station Radio and ancillary equipment and Repeaters meeting phase 2 GSM requirements.

4.5. General

Mobile Communications Systems are planned as cellular systems and each cell of the base station is required to provide RF coverage over a certain geographical area as per defined RF power levels. Due to the RF propagation properties, even using high radiated RF powers or complicated antenna systems, there are zones within the coverage area where the RF signal strength from base station remains inadequate for establishing the desired connectivity to mobile users.

Repeaters traditionally are deployed in the Mobile Communication network to fill in the “Dead Zones” caused by blocking of signals by geographic topologies such as mountains, valleys, dense foliage, high rising urban landscapes and other man-made structures. The distance from the base station also adversely affects the RF signal strength. The user views repeaters as a means to extend base station coverage so as to reduce the number of base stations and thereby accelerate network availability.

Repeater systems are installed after meticulous planning between BTSs and the mobile users to provide RF coverage in the shadowed regions. Repeater systems are available for different applications and **ultimate choice** shall depend on some of the factors mentioned below:

- Area to be provided with coverage.
- Indoor/outdoor coverage.
- Availability of BTSs in the vicinity.
- Antenna isolation to be achieved.

5. Functional Description Of DB5R Dual Band Repeater

5.1. General Description

The **DB5R Dual Band** Repeater System is designed to provide outdoor coverage and can handle signals in up to five sub bands with 3+2 configuration (maximum) in two of the service bands, used around the World by various service operators. It provides highly selective amplification in the pre-set frequency bands. The details of operating service frequency bands are given below:

S.NO.	Service Band	DL Frequency (MHz)	UL Frequency (MHz)
1.	SMR 800	851-866	806-821
2.	Cellular	869-894	824-849
3.	SMR 900	935-941	896-902
4.	EGSM	925-960	880-915
5.	GSM 900	935-960	890-915
6.	DCS	1805-1880	1710-1785
7.	PCS	1930-1990	1850-1910
8.	UMTS	2110-2170	1920-1980

The Customer is requested to refer to the packing list giving the details of frequency band set & the bandwidths of different sub bands equipped in the repeater (FCC & IC applications only apply for Cellular & PCS band operations).

- The DB5R repeater is designed to provide optimal coverage, the area covered shall primarily depend on RF power radiated, manmade structures in the area (high rise buildings), the geographical topologies and availability of reflecting surfaces.
- The ultimate performance & coverage shall depend on the obstructions blocking/absorbing of the RF signals by various objects between the Server antenna of RF repeater and the mobile users.
- The repeater is specifically designed for the Operators who are allocated frequency spectrum in different service bands and non-contiguous sub bands are specified.
- The repeater adopts duplex mode and bi-directional amplification for U/L & D/L signals between the base station and mobile users.
- It receives signals from the BTS through a **DONOR antenna** (highly directional outdoor antenna) and distributes the signals to mobile users after amplification through a set of **SERVER antennas** (omni/patch directional) system in the D/L.

- In the U/L, the signals from the mobile users are picked up by SERVER antenna and retransmitted to the BTS after amplification.
- The repeater finds applications in tunnels, highways, large size airports, and open market areas etc. where traffic requirement is high.
- The system can be incorporated with optional **Remote Management System (RMS)** which can be used for configuration and monitoring the status of the link. It helps not only speedy maintenance but remote configuration also through wireless modem.

The repeater consists of the following modules/units:

- LNA
- Converter modules
- Power amplifiers
- Power supply module
- Duplexer filters for transmit/receive directions
- Supervisory module
- Diplexer Unit for segregating bands
- A metallic case houses the repeater. Arrangement is made for heat dissipation especially for amplifiers, which generate more heat. The choice of suitable metal as the case material gives a lightweight design with good heat conduction and waterproof protection. The housing conforms to IP65 (NEMA 5) standards.

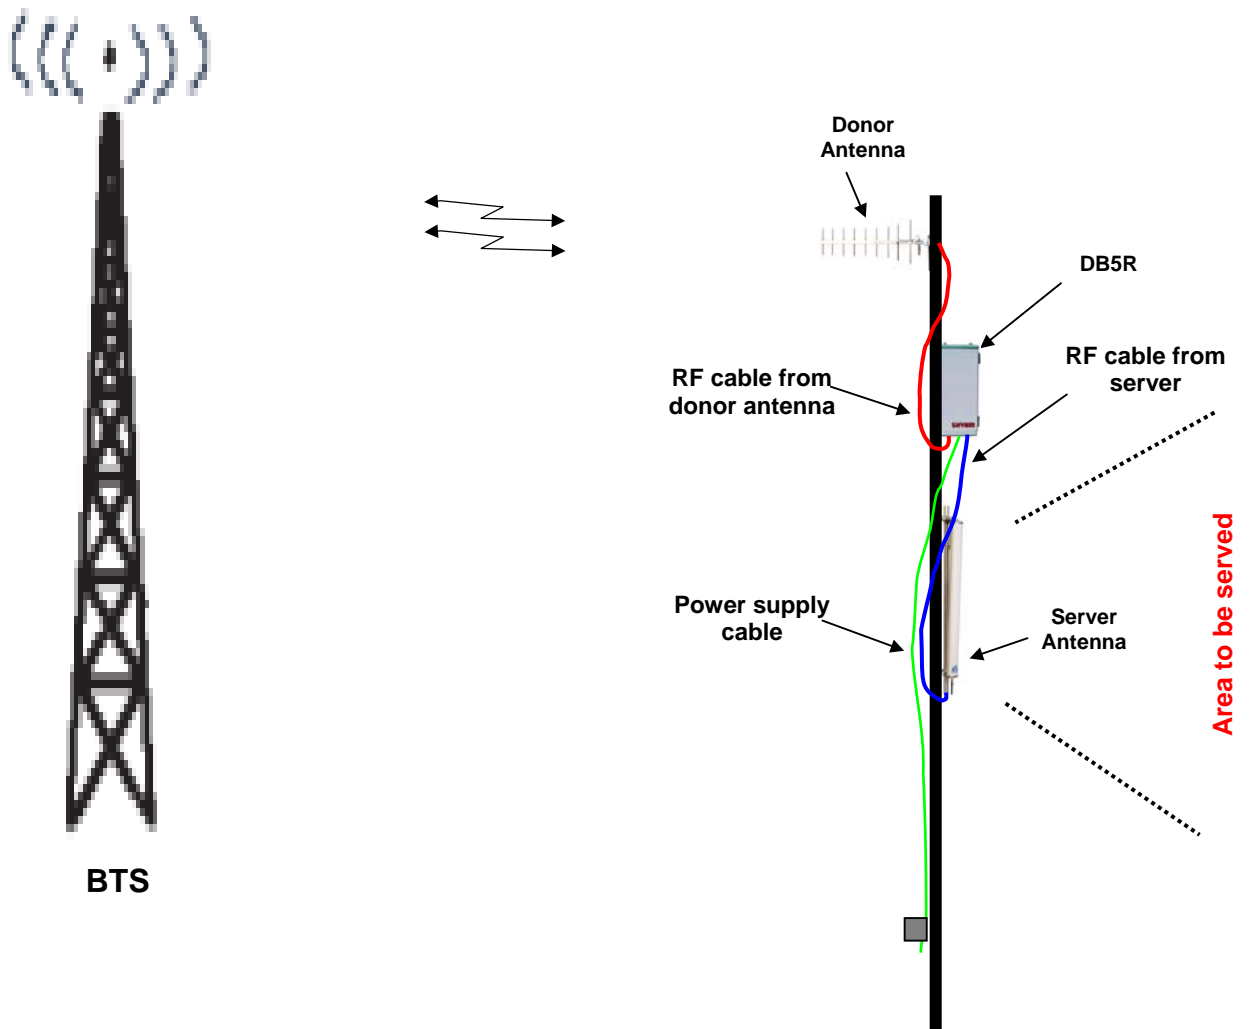


Figure 1: DB5R Repeater-Different Constituents



Figure 2: DB5R Repeater - Application in a Urban Area

6. To Get started-Basic Software Control Of the Repeater

6.1. General

The repeater is equipped with a supervisory module that allows the monitoring and control of various parameters such as RF power, attenuation, temperature, status of door and alarm conditions etc.

The communication interface between the local terminal and the control module can be set up using the Configuration & Monitoring Console software (CMC), which is an easy to use GUI for simple control and monitoring. This way, the parameters can be easily observed and adjusted from the display terminal.

This can be performed either via a terminal (PC/laptop) locally, or via remote login through the wireless modem (Optional) located in the repeater. USB port is provisioned in the equipment for connecting PC/laptop.

6.2. Terminal Set-up

The system is delivered with software loaded in order to perform configuration as per requirement. It also enables monitoring the status. Configuration of parameters can be carried out locally with the help of laptop / PC connected to the repeater by means of local USB serial interface or remotely via wireless modem (Optional) mounted inside the repeater. The laptop/PC should be loaded with the CMC software available on the supplied CD along with the USB driver.

I) LOGIN-Repeater (Figure 3)

After running the repeater *Configuration & Monitoring Console* (CMC), user needs to login the repeater, sequence as under, may be followed:

- Click the “**LOGIN**” on the command bar.
- Select the user type (ADMINISTRATOR or SUPERVISOR).
- Enter the password.
- Finally click the “**OK**”.

A message “**Logged in successfully**” will appear on the screen after successful login. There are two types of users viz. **ADMINISTRATOR** and **SUPERVISOR**. If user logged in as an **ADMINISTRATOR**, all the functions can be performed through the CMC. By default, the password for both users is “**SHYAM**”.

SUPERVISOR is allowed to perform monitoring of the status & alarms but no change in configuration is permitted. However, the **SUPERVISOR** can change password if so desired.

II) CONFIGURATION

Configuring repeater means setting the repeater parameters for operation as per the requirement at site.

Click on the command bar to display the configuration window, which allows access to all the configurable repeater parameters. User can login for configuration of repeater parameters.

- **SET** is for updating the repeater parameters.
- **READ** is for confirming the parameters set during the configuration.

Information as detailed below, can be configured after the “**Configuration**” window is activated:

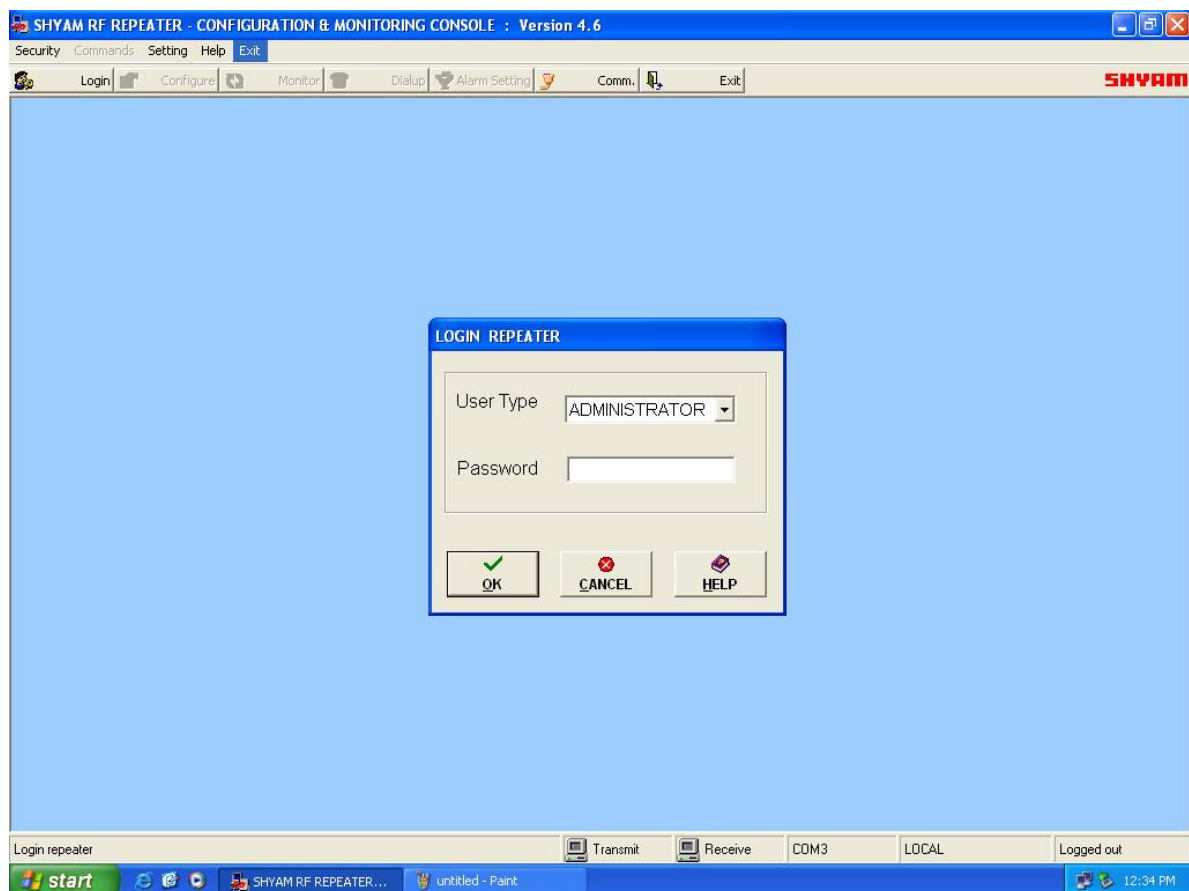


Figure 3: Login Repeater

- Repeater ID:** User can assign a unique repeater ID to each repeater installed. Up to 10 characters are allowed in this field. **(Figure 4)**
- Repeater Location:** User can assign the address of location where repeater is installed. Up to 30 characters are allowed in this field. **(Figure 4)**
- Sub Bands (UL/DL Frequency Bands) Settings:** The frequency bandwidths of all the five sub bands or loaded sub bands in UL & DL are defined. **(Refer Figure 4)**

- d. **Thresholds Output Power:** Maximum Output Power limit in UL & DL for both the bands are set. A “**PA Power high**” alarm will be generated when PA power exceeds the upper limit. (Refer Figure 4)
- e. **Thresholds RSSI Limits:** Lower and Upper RSSI Limits in DL & UL paths for both the bands are set. A RSSI High alarm will be generated when RSSI exceeds the set upper limit, and a RSSI Low alarm will be generated when RSSI goes below the set lower limit set. Upper range that can be set varies from -35 to -55dBm. Lower range that can be set varies from -75 to -95dBm. (Refer Figure 4)

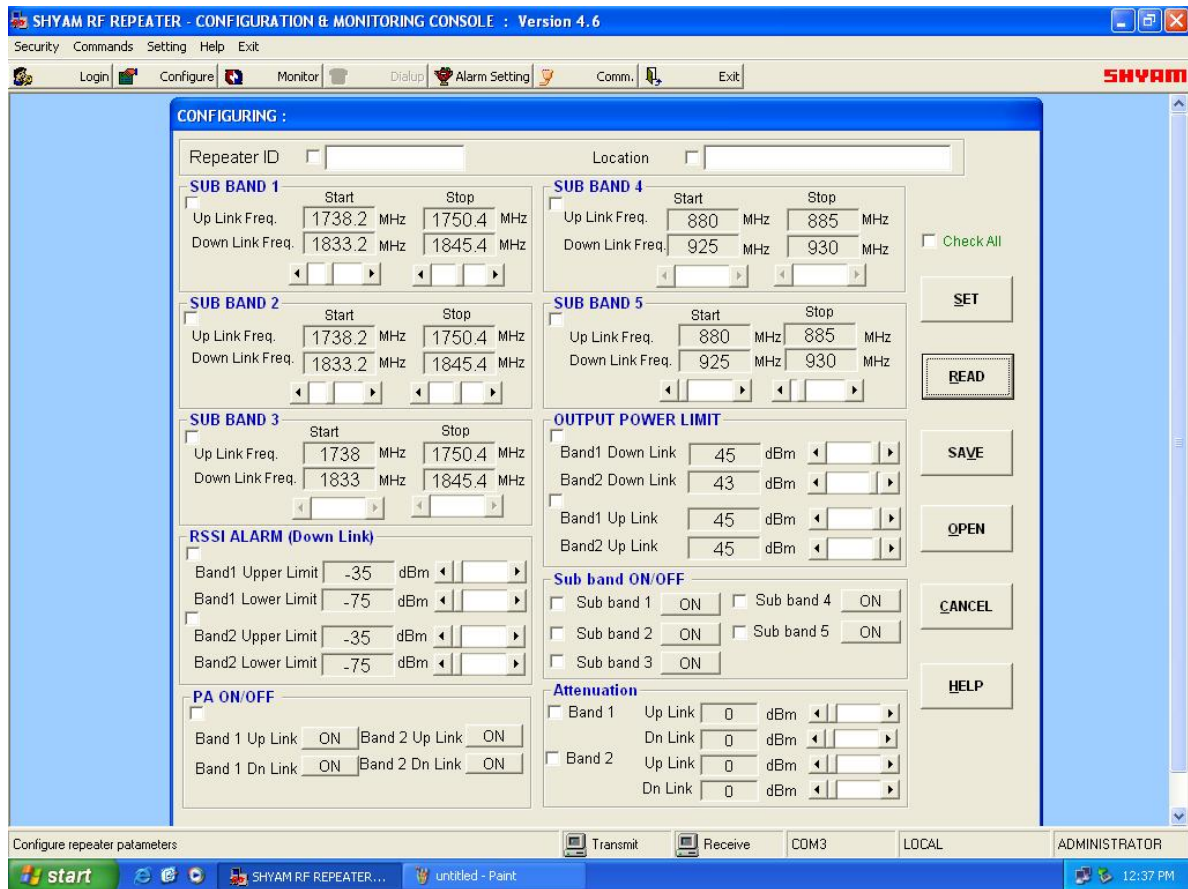


Figure 4: Configuration window

- f. **Sub band ON/OFF:** The equipped sub bands are brought in the ON mode and others are put in OFF condition.
- g. **PA ON/OFF:** User can set uplink and/or downlink PA as ON or OFF independently for testing/maintenance purpose at the time of installation for both the bands. (Please refer to Figure 4)
After completing the installation it must be in ON condition only.
- h. **Attenuation:** The information regarding attenuation inserted in UL & DL for both the bands is displayed.

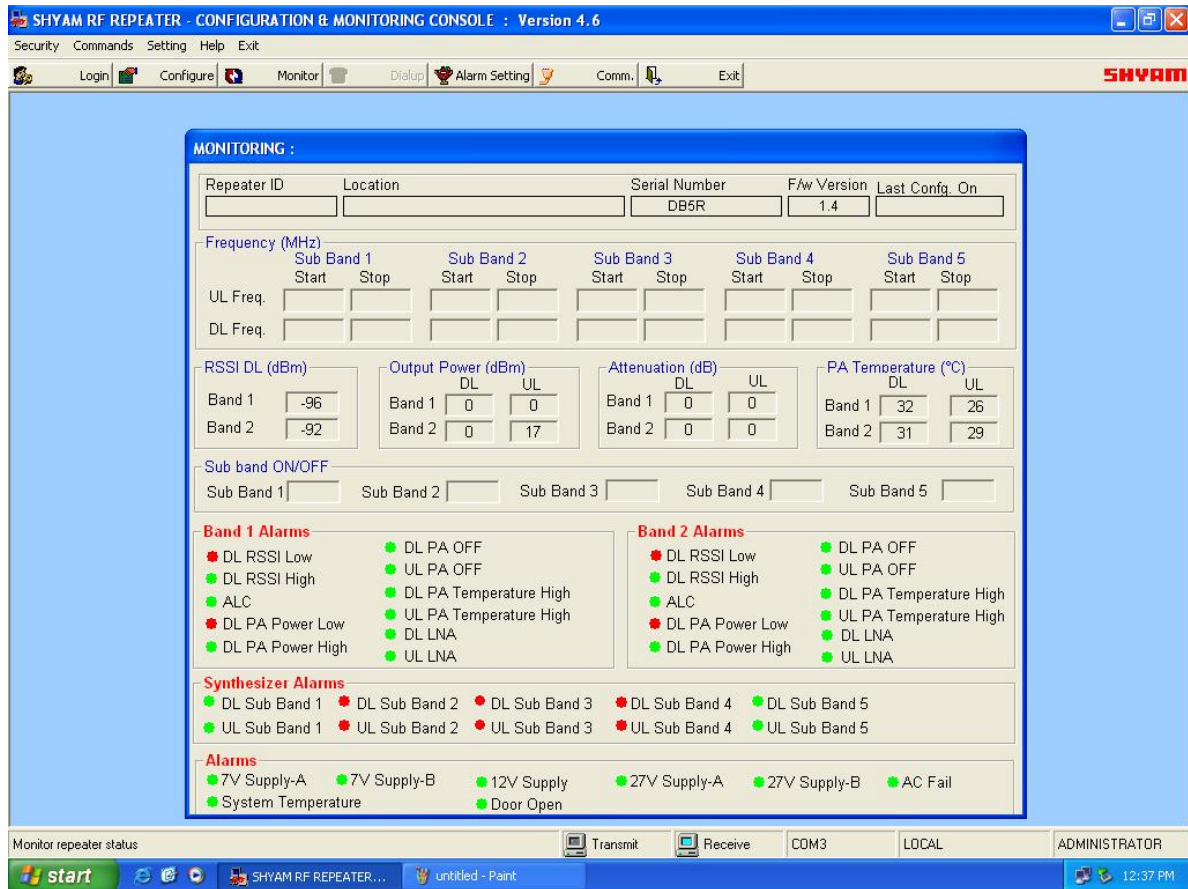


Figure 5: Monitoring & Alarm window

III) Monitoring (Figure 5)

In this window, the status of the system is monitored for the following parameters/conditions:

S.NO.	Parameters/Conditions	Remarks
1.	Frequency Bandwidth for sub bands	It displays the bandwidth in DL & UL of each sub band equipped.
2.	RSSI (DL) Band 1	Real time value of DL signal level for Band 1 is indicated.
3.	RSSI (DL) Band 2	Real time value of DL signal level for Band 2 is indicated.
4.	Attenuation Band 1 (DL)	Indicates attenuation inserted in the system for the band in DL.
5.	Attenuation Band 2 (DL)	Indicates attenuation inserted in the system for the band in DL.
6.	Attenuation Band 1 (UL)	Indicates attenuation inserted in the system for the band in UL.
7.	Attenuation Band 2 (UL)	Indicates attenuation inserted in the system for the band in UL.
8.	Output Power Band 1(DL)	Real time PA output power in dBm.
9.	Output Power Band 2(DL)	Real time PA output power in dBm.

10.	Output Power Band 1(UL)	Real time PA output power in dBm.
11.	Output Power Band 2(UL)	Real time PA output power in dBm.
12.	Sub band ON/OFF	Displays the information about the sub band equipped.
13.	PA (DL) temperature for band 1.	Indicates the temperature of PA.
14.	PA (DL) temperature for band 2.	Indicates the temperature of PA.
15.	PA (UL) temperature for band 1.	Indicates the temperature of PA.
16.	PA (UL) temperature for band 2.	Indicates the temperature of PA.

IV) Alarms (Figure 5)

Details of alarms displayed are detailed below:

S.NO.	Alarm Indication	Remarks
1.	DL RSSI Low (Band 1 & Band 2)	When the low RSSI is detected in any of the two or both bands, limits as set by the user.
2.	DL RSSI High (Band 1 & Band 2)	When RSSI in DL path exceeds the upper limit in any of the two or both bands, as set by the user.
3.	DL PA Power High (Band 1 & Band 2)	When PA Power in DL path exceeds the upper limit in any of the two or both bands, set by user.
4.	DL PA Power Low (Band 1 & Band 2)	When PA Power in DL path exceeds the lower limit in any of the two or both bands, set by user.
5.	DL Auto PA OFF (Band 1 & Band 2)	When PA Auto OFF is detected in any of the two or both bands in DL path.
6.	DL Manual PA OFF (Band 1 & Band 2)	When PA Manual OFF is detected in any of the two or both bands in DL path.
5.	DL PA Temperature High	When PA Temperature in DL path exceeds the upper limit in any of the two or both bands set by user.
6.	UL PA Temperature High	When PA Temperature in UL path exceeds the upper limit in any of the two or both bands set by user.
7.	Synthesizer failure (For equipped sub bands in DL & UL)	When the synthesizer in any of the equipped sub bands fails, relevant alarm is displayed.
8.	LNA failure for Band 1 & 2 in DL	When LNA failure is detected in any of the bands in DL.
9.	LNA failure for Band 1 & 2 in UL	When LNA failure is detected in any of the bands in UL.
10.	ALC band 1`	It indicates that ALC limit is exceeded.
11.	ALC band 2	It indicates that ALC limit is exceeded.
12.	AC fail	Failure of AC mains to the system is indicated by this alarm.
13.	7 V DC (A & B) failure	Indicates the failure of 7 V DC supply.
14.	12 V DC failure	Indicates the failure of 12 V DC supply.
15.	27 V DC (A & B) failure	Indicates the failure of 27 V DC supply.
16.	System Temperature	Indicates the temperature of the system.
17.	Door Open	Indicates that the door has been opened.

Monitoring interval is 3 seconds i.e. after every 3 seconds data on the monitoring window is refreshed.



 *A red indication is for Alarm present.*

 *A green indication is for No alarm.*

V) Communication Window (Figure 6)

In COMMUNICATION window, user can select serial communication port of the computer and type of connection between repeater and computer. There are two types of connections viz. Local and Remote

Local Connection: In this type of connection, User computer COM Port and repeater's USB Port are connected directly using cable. Sequence is given below:

- Click the "COMM." on the command bar to display the COMMUNICATION window.
- Select the Connection Type as "LOCAL"
- Select the computer's Comm. Port where the repeater is connected.
- Click "OK".

Remote Connection: This connection is established through Wireless Modem.

In this type of connection, User communicates from/to remote location with the repeater using wireless Modem / Cell phone.

To connect:

- Click the "**COMM.**" on the command bar to display the COMMUNICATION window.
- Select the Connection Type as "**REMOTE**".
- Select the computer's Comm. Port where the wireless Modem is connected.
- Click "**OK**".
- Now click the **DIALUP** on the command bar to display the **DIALUP** window.
- Enter / Select the repeater phone number.
- Click the "**DIAL**" and wait (maximum 60 seconds) for connection.

A message "**CONNECTED**" will appear on the screen after the GSM Connection is established.



Click the "**DISCONNECT**" on the DIALUP window to disconnect remote communication with the repeater.

Wireless Modem (Optional) is equipped inside the housing of the repeater and it can be easily located through a sticker provided on the same. It has a groove with SIM cardholder in which the SIM card can be inserted for remote communication.

CAUTION

When the communication between repeater & PC/Laptop is in progress through USB:

1. Do not remove cable from the USB port.
2. Do not switch off the repeater.

In case the communication is not required any more, click at **EXIT** before removing cable from USB port to avoid *hanging* of the PC/Laptop. In case the PC/Laptop goes in to *hanging* mode, it has to be restarted after closing/switching OFF & ON the repeater.

VI) Security Settings (Figure 7)

The system has two levels of permitting Log in to the repeater to avoid unauthorized operation. The levels are: **ADMINISTRATOR & SUPERVISOR.**

Each level has a specific password. The password for each level can be changed at intervals. **ADMINISTRATOR** has rights to perform all functions Viz. Configuration, Monitoring etc. Whereas the **SUPERVISOR** is allowed to perform limited functions like monitoring of alarms, establishing communication etc.

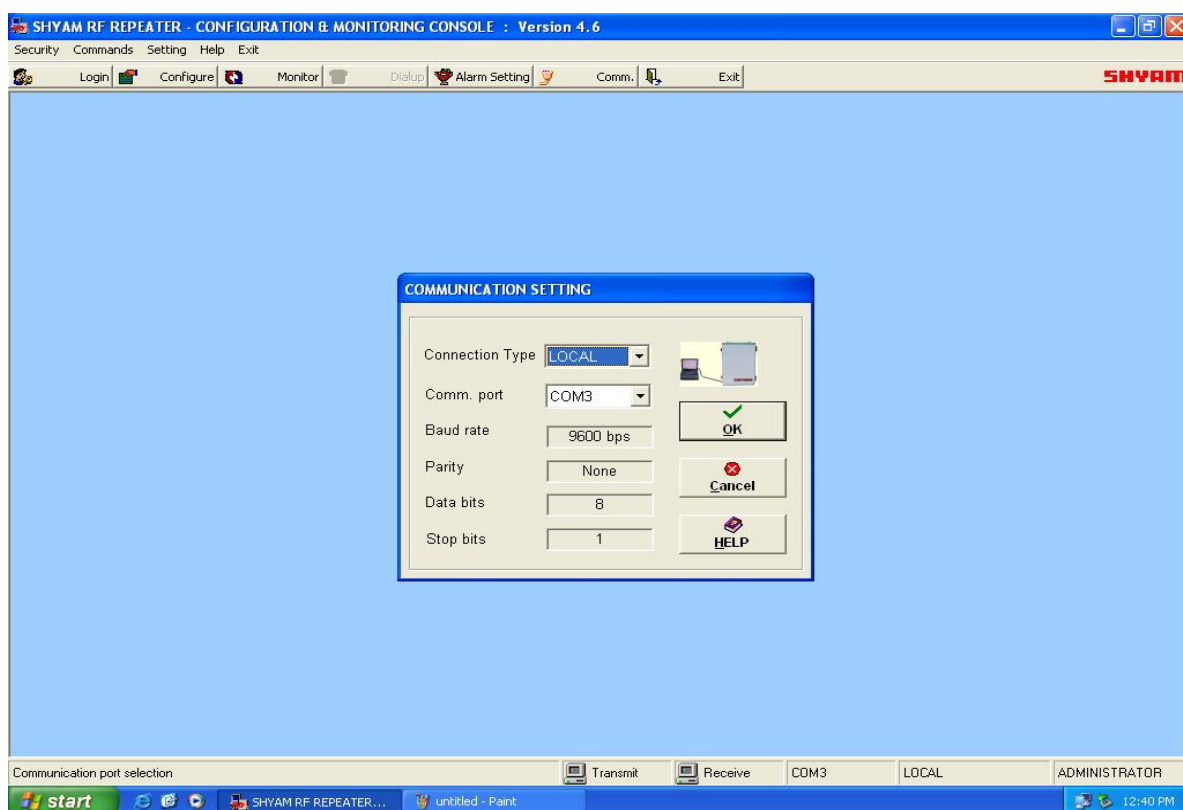


Figure 6: Communication Window

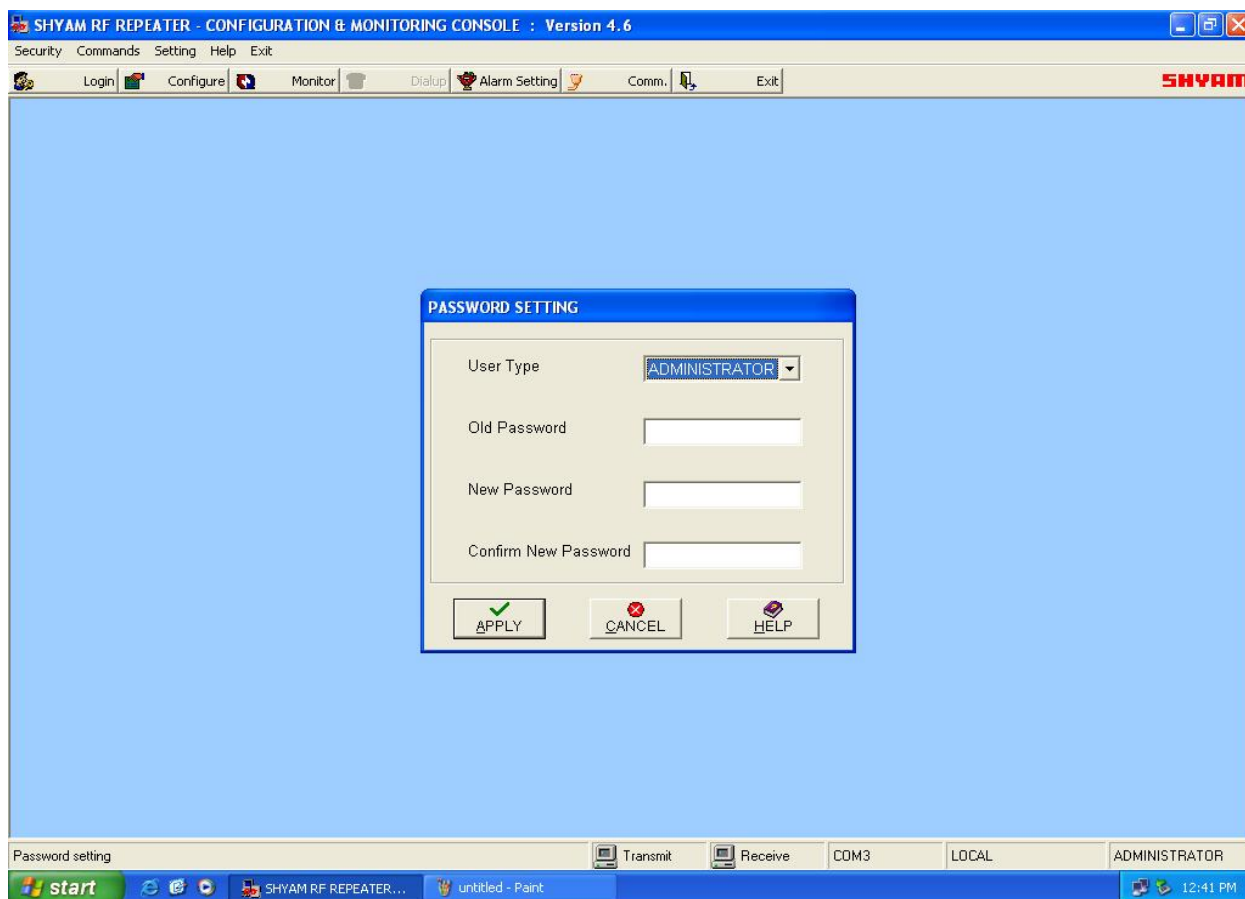


Figure 7: Password Settings

6.3. Modules In DB5R-Description

The signals intercepted through the Donor antenna in the DL pass through different modules/units for further signal processing; the detail explanation is about different modules/units is given below:

a. DONOR Antenna

Donor antenna of appropriate bandwidth & gain interfaces the BTS on one side and repeater system on other side through RF cable. It is used to intercept signals from the base station and switch electromagnetic waves into RF signals in the DL and vice versa in the UL.



Figure 8: Donor Antenna

The Donor antenna with 16 dB gain transfers the intercepted signals to the repeater and transmits uplink signals amplified by the repeater.

b. Diplexer

The signals received in the DL, through the antenna are split for individual band processing. The dual band outputs are fed to two different duplexers. One Diplexer is also provided before the server antenna in order to distribute combined signals to mobile users.

In the UL, signals received from server antenna are split and fed to two duplexers for processing. The amplified signals from both the duplexers are combined for further transmission through Donor antenna to BTS.

c. Diplexer

The main function of **duplexer** is to isolate the uplink frequency from the downlink frequency, i.e. isolate transmit path from receive path. Four duplexer units are provided in the repeater, two in the Donor antenna side and two in the server antenna side. Each duplexer transfers/receives signals from respective diplexer for further connectivity to low noise amplifier. The bandwidth of the duplex filter **depends on the operator's frequency band** (25MHz, 15MHz, 10MHz, 9MHz, or full Band etc.).

d. Low Noise Amplifier (LNA)

This module is provided after duplexer before the converter. The **LNA** provides compensation for the losses suffered by the stream of weak signals as it passes through splitter/combiner & duplexer (passive devices). Four LNAs are provided, two each for individual bands in the UL & DL directions.

e. Converter Module

The basic block of **converter** module comprises of L.O., frequency mixer, filter and intermediate amplifier. The low noise amplified signals are converted to IF in frequency mixer with frequency fed from LO. The signals are passed through sharply tuned filters. Number of converters equipped shall depend on the number of sub bands configured in the system. Two converters (one for DL & one for UL) for each sub band are provided.

f. Power Amplifier

It is the core module of repeater. It includes driver stage and final stage. It is installed directly on the heat sink of the repeater. Driver stage and final stage of power amplifier are in the same unit. Four power amplifiers with specific frequency bandwidths & gain are provided, two each for individual bands in the UL & DL directions.

g. Supervisory

The man-machine communication between the cellular operator and the repeater is established through this module. One of the two options as given below can be used for achieving this objective:

- USB interface
- Wireless modem (Optional)

Remote controlling function of repeater can be achieved by equipping Wireless modem. This arrangement also enables status of repeaters at different locations to be monitored.

h. POWER SUPPLY

The power supply unit incorporated in the repeater is of high efficiency and reliability. Different DC voltages required for the operation of electronic circuitries are derived in this unit. The standard input voltage is 100 to 240 V AC, 47 Hz to 63 Hz. When the power supply varies in this range and the frequency in 47 to 60Hz, its output DC derived voltages remain constant within 1% of nominal value.

i. SERVER Antenna

Server antenna transmits signals from the repeater station to mobile users and transport received uplink signals from the mobile users to the base station. Based on the coverage area, a set of select panel antennas with suitable gains & N type connectors is installed at pre-planned spots.



Figure 9: Server Antenna

7. DB5R Repeater Specifications

7.1. Electrical Specifications-RF

S.NO.	Parameter	Specified limits/Remarks
1.	Number of Bands	Two,
2.	Frequency band in DL path.	The bands are customized as per requirement.
3.	Frequency band in UL path.	The bands are customized as per requirement.
4.	Number of RF Sub bands	5 maximum in 3+2 configuration. Set as per requirement of the customer.
5.	RF composite power options DL	+33 dBm
6.	Spurious Emission	≤ 36dBm from 9 KHz to 1 GHz ≤ -30dBm from 1 GHz to 12.75 GHz
7.	Automatic Power Control	25 dB
8.	Repeater Gain	85 dB (+-5dB)
9.	Attenuation range for gain adjustment in DL & UL	31 dB in 1 dB step (Software control)
10.	Gain flatness over band	±2 dB
11.	Gain variation with temperature	± 1.5 dB
12.	Total delay in the signal path/direction	5.5 microseconds.
13.	Noise figure	5 dB Max.
14.	Impedance	50 Ohms
15.	Return loss	16 dB
16.	Power supply	100 to 240 V AC, 47/63 Hz
17.	RMS interface	Wireless modem (optional), USB port for local connection.

7.2. Electrical Specification Power Requirement

Parameters	Specified/Limits
Input AC Voltage Range	100-240 V, 47/63 Hz
Power Consumption approx.	175 watts (Varies as per number of sub bands equipped)

7.3. External Electrical Interface

Parameters	Specification
RF port UL	N-type (F)
RF port DL	N-type (F)

7.4. Mechanical Specification

Dimensions (w x h x d)	560x445x200 mm (22x17x8 inches)
Weight	30 Kg. (72 lbs.)
Housing	Metal for Outdoor application
Grounding Connection	Bolt

Housing Color	Grey
Cooling	Convection

7.5. Environmental Specification

Conditions	Specification
Operating Temperature	-35°C to +55°C (-31°F to +131°F)
Storage Temperature	-30°C to +75°C (-22°F to +167°F)
Enclosure	IP-65 (NEMA 5)

7.6 Contents of Delivery

ITEMS	QUANTITY
Repeater DB5R unit	1
PC interface cable for USB port	1
Power cable 3 pin	1
Operation & Installation manual	1
CD containing the application software	1
Wireless Modem (Optional)	1
Repeater Door Key	1 set
Screws, Nuts & Bolts for mounting	1 set

8. Installation

8.1. Preparation Sheet- Pre Installation

Before the installation commences, a preparation sheet to examine the various requirements is to be compiled as per detail given below:

1. General

Application: Outdoor
 Service Band 1: Frequency Band DL- Frequency Band UL-
 Service Band 2: Frequency Band DL- Frequency Band UL-

Number Of Sub Bands: six
 Sub Band 1: Frequency Band DL- UL-
 Sub Band 2: Frequency Band DL- UL-
 Sub Band 3: Frequency Band DL- UL-
 Sub Band 4: Frequency Band DL- UL-
 Sub Band 5: Frequency Band DL- UL-

2. Technical requirements

S.NO.	Requirement	Remarks
1.	Estimated received signal strength available at site where donor antenna is to be installed	
2.	Estimated cable loss from donor antenna to the repeater unit	
3.	Estimated DL RF power to the input to the repeater	
4.	Desired RF Power in DL	
5.	Proposed gain settings in DL path	
6.	Attenuator to be inserted in DL path	
7.	Estimated cable loss from repeater unit to server antenna port	
8.	ERP at server antenna	
9.	Desired RF Power in UL	
10.	Proposed gain settings in UL path	
11.	Attenuator to be inserted in UL path	

3. Proposed site Address:-----

4. User's Address & other particulars:-----

Date:

Prepared by:-----

8.2. Engineering Consideration

a. Site Selection

Site selection is one of the most critical decisions affecting the overall performance of the system. A repeater must be located where it can receive the maximum signal from the donor site in order to maximize the repeater's output and performance, a signal strength greater than or equal to -75dBm is desired.

Examples of repeater (and accompanying antenna) locations include (but are not limited to): the roof of a building adjacent to the affected area, with the antennas mounted at the highest point in the building; the top of the hill that is obstructing the donor site's coverage, with the antennas mounted on poles at ground level or as the situation permits.

Distance from both the donor site as well as from the new area to be covered must be taken into consideration. The repeater unit should be located close to the donor site to receive maximum signal strength and at the same time is located in the vicinity of area where coverage is desired. In addition, the donor antenna associated should have line of sight with BTS site to reduce the effects of fading.

Another important issue when choosing a repeater location is the availability of commercial power. Sites where repeater unit is installed should be easily accessible for the maintenance team.

b. Antenna Selection and Placement

Proper selection of the repeater's donor and server antennas is crucial in designing the repeater system. Good antenna characteristics help to provide proper isolation between the server (coverage) and donor antennas, which helps to prevent feedback. An isolation of at least 15dB more than the gain setting of the repeater is required. If the isolation is less than the repeater gain, oscillation will occur.

Specific ways to achieve proper isolation include: using high gain, directional antennas with good Front to Back ratios (25dB or better); physical separation of the repeater's donor and server antennas; and external shielding between antennas. A high gain antenna will help minimize overall path loss to achieve the desired output power. Donor antenna gains are typically 16 dB, while server antennas with proper gains are installed.

- The antennas should have proper frequency band of operation.
- Adequate separation is to be ensured from the power lines to avoid damage to the equipment and humans.
- Antenna with proper characteristics to maintain adequate isolation to avoid oscillations. Normally, isolation should be 15 dB more than the gain set for the repeater. It should have good front to back ratio.

- The beam width for the DONOR antenna should be as small as possible.
- The beam width for SERVER antenna is 60 degree to 120 degree.
- There should be adequate vertical & horizontal separation between the DONOR & SERVER antennas to avoid interference and noise. Separation can be determined by the mathematical formulas:

Vertical Separation:

$$\text{Isolation (dB)} = 28 + 40 \log (D/\lambda \text{ in m})$$

Horizontal Separation:

$$\text{Isolation (dB)} = 22 + 20 \log (D/\lambda \text{ in m}) - (\text{Gain of donor antenna} + \text{gain of server antenna})$$

D-Distance between donor & server antennas in m

λ - wavelength in m

The following table is an approximate guide to antenna separation.

The use of highly directional antennas with good front to back ratios can help to reduce isolation requirements.

VERTICAL ANTENNA SEPARATION		HORIZONTAL ANTENNA SEPARATION	
Separation (m.)	Isolation (dB)	Separation (m.)	Isolation (dB)
5	75.0	5	45.5
10	87.1	10	51.7
20	99.1	50	65.5
30	106.2	100	71.5
40	111.2	150	75.1
50	115.0	250	77.6

Vertical and Horizontal Antenna Separation @ 900 MHz

The antenna separation table demonstrates that vertical separation yields better results than horizontal separation. However, when desired isolation cannot be met due to insufficient separation, external shielding can help; for example, mounting the antennas on either side of a rooftop penthouse or using some type of grounded metal screen or wire mesh (so called chicken wire) between antennas.

The following example illustrates the various signal levels and antenna gains needed to form a properly functioning repeater system.

Received Signal Level	-72	dBm
Donor Antenna gain	16	dBi
Cable loss (100 ft. of 7/8 inch)	2	dB
Input to Repeater	-62	dBm
Gain of Repeater set	85	dB
Output of Repeater	+33	dBm

Cable loss (100 ft. of 7/8 inch)	2	dB
Server Antenna Gain	9	dBi
Repeater ERP	+41	dBm

c) Overlapping Coverage

Ideally, the repeater system will be engineered with minimal overlapping coverage between the donor base station and the repeater. However, the mobile users will occasionally receive signals from both the donor and the repeater at similar levels. This situation is comparable to a mobile receiving multiple signals at varying times due to multi-path propagation.

This repeater contributes a maximum signal delay of 5.5 microseconds in one direction.

d) Call Processing

The mobile communication system perceives calls handled by the repeater as actually being handled by the donor site (BTS); the repeater is just an extension of the base station's coverage. Therefore, the donor handles call initiation, power control messages, hand-over requests, etc., for mobiles in the repeater area. When the base station assigns a channel to the mobile, that channel is sent through the repeater and then reradiated under the same frequency. Since the repeater is technically part of the base station, no hand-over takes place when a mobile moves from the repeater's coverage area to that of the base station. When the mobile moves from the repeater's area to a neighboring site, the base station handles the hand-off in the same way as for a mobile in the base station area.

8.3. Installation Tools

You will need the following basic tools for installation:

- Standard wrenches/screwdrivers/cable stripper/cable cutter/pliers set for installing the **DB5R** Unit and antennas. (Refer to the manufacturer's recommendations for installing the antennas).
- RF coaxial cable connection tools for installing connectors.
- Multi-meter.
- Mobile handset loaded (e.g. Nokia) with Net engineering software to be used for signal level measurement.
- Magnetic compass for measuring the azimuth of the BTS and repeater site.

8.4. Installation Procedure

The **DB5R** repeater has been designed for outdoor applications. The repeater unit shall be mounted vertically to a mast, which means the RF connectors will be at the bottom side.

In case of wall mounting, minimum physical separation between the repeater housing & the wall should be 50 mm.

Furthermore, the repeater shall be mounted in a way so that there is free access to the individual units, while the door of the repeater is open.

The repeater is mounted at the pre-selected site firmly placed with clamps and other mechanical accessories. Connections as detailed are carried out:

- RF cable routed from DONOR antenna is connected at the BTS port as indicated.
- RF cable routed to SERVER antenna is connected at TX/RX port for signal distribution.
- For energizing the system, the cable from AC mains is connected at AC mains port, range 100-240 V.
- USB port is provided for carrying out configuration and monitoring.

Important: Grounding of the unit has to be ensured before extending the power to the repeater system.

Following points need considerations for laying of RF cable:

1. RF coaxial cable installation must comply with local or National Electrical Codes. The cable shall have nominal 50-Ohm impedance. Routing of the RF coaxial cables is to be as per the site installation plan.
2. Fix the supplied connectors to the RF coaxial cable and verify the following:
 - The center conductor to outer shield of RF coaxial cable indicates an "Open Circuit" condition.
 - Check for any short circuit between center conductor and outer shield.
 - Place short between the center conductor and outer shield using a piece of wire temporarily and check the other end of conductor for any break in the RF cable.

8.5. Repeater Gain Settings

The **repeater gain setting** is one of the vital parameters since it also decides the area to be provided with RF coverage. The noise contribution has to be minimum while setting the gain hence it should be set with utmost care. The variation in gain up to 31 dB in steps 1 dB is possible to be achieved with the help of software control attenuator, provided in the system. The gain setting for Uplink and Downlink path is independent of each other.

For example, if repeater has a maximum gain of 85 dB and the required repeater gain is 60 dB, the attenuation of 30 dB is required to be incorporated by inserting attenuator of this value.

Note: Repeater gain should be at least 15 dB less than the antenna isolation.

Signals intercepted by DONOR antenna from BTS and transmitted to the repeater are termed as **Downlink/Forward** signals and the signals originated by mobile users and intercepted by SERVER antenna for application to repeater are termed as **Uplink/Reverse** signals.

a. Forward Gain Setting

The process of setting the forward gain is very simple. Forward signal level strength can be measured using NET engineering software in any NOKIA handset e.g. NOKIA 6210 or any other engineering mobile handset.

Alternatively, RF output power of repeater can be measured using the visual indication shown on the display panel of the repeater.

Once the RF output power has been determined, the attenuation will have to be modified to reach the desired output signal level.

The gain of repeater can be set using any of the following methods:

- a. Local manual mode (using built in key pad and display)
- b. Local USB serial interface mode (GUI based)
- c. Through (optional) wireless modem.

b. Reverse Gain Setting

For reverse gain setting, a 31 dB variable attenuator is provided; the required value can be inserted for the desired gain. The gain is set to such a value so as to cause minimum interference at the base station but high enough to ensure a strong signal.

Generally, reverse gain is set 5db less than the forward signal.

8.6. Commissioning

Note:-Repeater should not be connected to Power without termination of the antenna connection. The termination can be performed either by the antenna connection as well as a dummy load or the 50 Ω terminated connection of a measuring instrument (Power Meter, Spectrum analyzer with appropriate PAD)

After setting the gain, verify the parameters:

1. DL RF power radiated in the set frequency band.
2. Received RF power in the DL.
3. UL RF power radiated in the set frequency band.
4. Received RF power in the UL.
5. Record the value of attenuation introduced for setting the gain.

8.7. Dos & Don't Dos

The site should be accessible for the maintenance team.

1. Arrangement is to be made to avoid unauthorized access to the repeater.
2. Proper grounding of the repeater is required to be done to avoid damage to the system.
3. For outdoor applications, the housing must be waterproof.
4. Stable power supply for repeater unit should be ensured.
5. The route of Cables to/from antennas should be short to limit the cable losses and should be free from sharp bends & kinks.
6. Local standard of cabling should be followed.
7. The donor antenna should have proper line of sight with the BTS from where the signals are to be intercepted for maximum signal strength and to reduce the effect of fading.
8. There should be adequate separation between the cables (antenna system) and the power lines to avoid damage to the equipment & injury to humans.
10. The selection of BTS should be made taking other BTSs in the same vicinity in to consideration to avoid interference.

11. Gain of the repeater should be set after taking antenna isolation in to consideration.
12. The estimation of coverage area should be confirmed.
13. The system should be made over for normal traffic after actual measurement of:
 - a) RF power in the DL
 - b) RF power in the UL
 - c) Antenna Isolation
 - d) Gain settings in DL & UL
14. Feedback regarding performance of the system must be obtained from the user.

8.7. Checklist – Post Installation

After the installation of the system is accomplished, points as indicated in the checklist are verified.

Service Bands Particulars:

Frequency Band for Band 1 DL	
Frequency Band for Band 1 UL	
Frequency Band for Band 2 DL	
Frequency Band for Band 2 UL	

A. Repeater Installation

S.NO.	Point(s) To be Verified	Remarks
1.	Ensure isolation between server and donor antennas, it has to be 15 dB + Gain set of the repeater.	
2.	Actual isolation measured	
3.	Ensure proper grounding of the unit	
4.	Cable from donor antenna connected to donor antenna port	
5.	Cable from server antenna connected to the relevant port in the unit	
6.	Mains cable connected to the repeater unit	
7.	Cable protection ensured and outdoor connections are waterproof	

B. Repeater Set Up

S.NO.	Point(s) To be Verified	Remarks
1.	Number of sub bands equipped	
2.	Number of Sub band(s) in Band 1 with frequency bandwidth of each.	
3.	Number of Sub band(s) in Band 2 with frequency bandwidth of each.	
4.	Repeater switched ON	
5.	Any error (alarms) observed	
6.	Gain set	
7.	Power level in DL	
8.	Attenuation in DL	
9.	Power level in UL	
10.	Attenuation in UL	
11.	Observation on CMC software & GUI	
12.	Repeater secured & locked	

Any Other Remark/Comment:

Date Of Installation:-----

Repeater ID & Site Address:-----

Name of the Installer:-----

9. System Maintenance

9.1. General

The system normally operates without any operator intervention or maintenance. If, in the unlikely event of a unit failure, the field replaceable units (antenna unit, cables) should be checked for faults and the system restored. The faulty unit can be removed and replaced with a spare while the rest of the system is still operating. Soldering or local repair of the modules should be avoided for better maintenance point of view. Faulty module/unit should be replaced with genuine spares from Shyam Telecom Limited only.

However, the power supply of the failed repeater should be isolated from AC mains and DC power before any module is replaced. In the event of a system malfunction, the status of the antenna systems should be checked as well as the continuity of the cabling before replacing any modules within the repeater.

9.2. Preventative Maintenance

The **DB5R** repeater does not require any preventative maintenance.

For Technical Support, please contact at any of the following addresses:

For Americas

Shyam Telecom Inc.

6, KILMER ROAD, SUIT D,
EDISON, New Jersey-08817 (USA)

For Europe

Shyam Telecom GmbH.

Frohsinnstrasse 16, 63739 Aschaffenburg, Germany
Tel: + 49-6021-45901-0 Fax: + 49-6021-45901-29

For ASEAN & Others

Shyam Telecom Ltd.

246, Phase IV, UDYOG VIHAR,
GURGAON – 122015 (INDIA)
Tel: +91-124-4311600 FAX: +91-124-4018117

Email: contact@shyamtelecom.com