

# Gigaset

C590 - C595



Issued by  
Gigaset Communications GmbH  
Schlavenhorst 66, D-46395 Bocholt  
Gigaset Communications GmbH is a licensee of the Siemens trademark

© Gigaset Communications GmbH 2009  
All rights reserved. Subject to availability.  
Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)

**SIEMENS**

# The handset at a glance



- 1 Display in idle status
- 2 Battery charge status (→ page 16)
- 3 Display keys (→ page 20)



- 4 **Message key** (→ page 36)  
Access to calls and message lists;  
Flashes: new message or new call
- 5 **End call key, On/Off key**  
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**  
Keypad lock on/off (press and hold in idle status);  
toggles between upper/lower case and digits
- 7 **Mute key** (→ page 29)  
Mute the microphone
- 8 **Microphone**
- 9 **Recall key**  
- Consultation call (flash)  
- Insert a dialling pause (press and hold)
- 10 **Star key**  
Ringtone on/off (press and hold);  
with an open connection: switch between dial pulsing/tone dialling (press briefly);  
Text input: Open table of special characters
- 11 **Connection socket for headset** (→ page 17)
- 12 **Key 1**  
Dial answering machine (C595 only)/  
network mailbox (press and hold)
- 13 **Talk key**  
Flashes: incoming call;  
Accept a call; open redial list (press briefly);  
start dialling (press and hold);  
When writing an SMS: send SMS
- 14 **Speaker key**  
Switch between earpiece and speaker mode
- 15 **Control key** (→ page 19)
- 16 **Signal strength** (→ page 16)  
**Green:** Eco Mode activated (→ page 54)
- 17 **Answering machine icon** (C595 only)  
Answering machine switched on;  
Flashes: Answering machine is recording a message or is being operated by another internal party

## Gigaset service contact numbers:

For personal advice on our range of products and for repairs or guarantee/warranty claims call:

Service Centre UK: 08453 6708 12  
(local call cost charge)

Please have your proof of purchase ready when calling.

# Display symbols

The following symbols are displayed dependent on the settings and the operating status of your telephone:

Signal strength ( → page 54)  
 or Eco Mode+ ( → page 54)  
 Answering machine activated (C595 only)  
 Ringtone switched off ( → page 63)  
 Battery charging ( → page 16)  
 Battery charge status ( → page 16)

Alarm switched on and wake-up time ( → page 55)  
 Current time ( → page 16)  
 Current day and month ( → page 16)  
 Name of the handset ( → page 58)

Number of new messages:  
 ♦ on the network mailbox ( → page 36)  
 ♦ in the list of missed calls ( → page 36)  
 ♦ in the SMS list ( → page 40)  
 ♦ in the list of missed appointments ( → page 37)

## Signalling

External call ( → page 28)



Alarm clock ( → page 55)



Internal call ( → page 56)



Anniversary ( → page 35)



Answering machine is recording ( → page 47)



## The base at a glance

You can use the keys on the base to register handsets to the base, search for handsets (paging) → page 56 and operate the integrated answering machine (Gigaset C595 only).

### Gigaset C595 base



- 1 **Registration/paging key**  
Press **briefly**: Search for handsets (paging) → page 56.  
Press and **hold**: Register handsets and DECT devices → page 55.
- 2 **On/Off key**  
Activating/deactivating the answering machine.
- 3 **Display icon**  
**Lights up**: answering machine is activated. The number of saved messages is displayed.  
**00 flashes**: The answering machine is recording a new message.  
**Flashes slowly**: There are new messages. The number of **new** messages is displayed.  
**99 flashes quickly**: The answering machine is full.

### During message playback:

- 4 **Play/stop key**  
Play back new messages from answering machine or cancel playback (press **briefly**).  
Play back new and old messages (press and **hold**).
- 5 Skip to next message (press once) or next message but one (press twice).
- 6 Skip back five seconds (press **briefly** once), to skip back to the beginning of the message (press and **hold**) or skip back to the previous message (press twice).
- 7 Delete current message.
- 8 **Adjust volume during message playback**:  
[ - ] = quieter; [ + ] = louder.  
While an external call is being signalled: adjust ringtone volume.

### Please note:

If the answering machine is being operated from a handset or if it is recording a message (00 flashes), it cannot be operated from the base.

### Gigaset C590 base



#### Registration/paging key

- Press **briefly**: Search for handsets (paging) → page 56.
- Press and **hold**: Register handsets and DECT devices → page 55.

# Contents

---

<b>The handset at a glance</b>	<b>1</b>
<b>The base at a glance</b>	<b>3</b>
<b>Safety precautions</b>	<b>7</b>
<b>Gigaset C590/C595 – more than just a telephone</b>	<b>8</b>
<b>First steps</b>	<b>9</b>
Checking the pack contents	9
Setting up the base and charging cradle (if included)	10
Connecting the base	10
Connecting the charging cradle (if included)	11
Setting up the handset for use	12
Setting the date and time	15
Connecting the headset	17
What would you like to do next?	18
<b>Using the phone</b>	<b>19</b>
Control key	19
Display keys	20
Keys on the keypad	20
Correcting incorrect entries	20
Menu guidance	21
Activating/deactivating the handset	22
Activating/deactivating the keypad lock	22
Illustration of operating steps in the user guide	23
<b>Menu overview</b>	<b>25</b>
<b>Making calls</b>	<b>28</b>
Making an external call	28
Ending a call	28
Accepting a call	28
Calling Line Identification	28
Speaker mode	29
Switching to mute	29
<b>Making calls using network services</b>	<b>30</b>
Calling Line Identification	30
Ringback	30
Call waiting during an external call	30
Call divert (CD)	31
Consultation call, call swap	31

<b>Using the directory and lists</b> . . . . .	<b>32</b>
Directory . . . . .	32
Redial list . . . . .	35
Incoming SMS message list . . . . .	35
Answering machine list (Gigaset C595 only) . . . . .	36
Call lists . . . . .	36
Opening lists with the message key . . . . .	36
List of missed appointments . . . . .	37
<b>Making cost-effective calls</b> . . . . .	<b>38</b>
Automatic network provider code (preselection) . . . . .	38
<b>SMS (text messages)</b> . . . . .	<b>39</b>
Writing/sending an SMS . . . . .	39
Receiving an SMS . . . . .	40
SMS with vCard . . . . .	42
Notification by SMS . . . . .	43
SMS mailboxes . . . . .	43
Setting SMS centres . . . . .	44
SMS on a PABX . . . . .	45
Activating/deactivating first ringtone muting . . . . .	45
Activating/deactivating SMS function . . . . .	45
SMS troubleshooting . . . . .	46
<b>Operating the answering machine of the Gigaset C595 base</b> . .	<b>47</b>
Operation via the handset . . . . .	47
Activating/deactivating call screening . . . . .	50
Setting the recording parameters . . . . .	50
Resetting fast access for the answering machine using key 1 . . . . .	51
Operating when on the move (remote operation) . . . . .	51
<b>Using the network mailbox</b> . . . . .	<b>53</b>
Configuring fast access for the network mailbox . . . . .	53
Viewing the network mailbox message . . . . .	53
<b>ECO DECT</b> . . . . .	<b>54</b>
<b>Setting the alarm clock</b> . . . . .	<b>55</b>
<b>Using several handsets</b> . . . . .	<b>55</b>
Registering handsets . . . . .	55
De-registering handsets . . . . .	56
Locating a handset ("Paging") . . . . .	56
Changing the base . . . . .	56
Making internal calls . . . . .	56
Listening in to an external call . . . . .	58
Changing the name of a handset . . . . .	58
Changing a handset's internal number . . . . .	58

<b>Using a handset as a room monitor</b> .....	<b>59</b>
<b>Handset settings</b> .....	<b>60</b>
Quick access to numbers and functions .....	60
Changing the display language .....	61
Setting the display .....	61
Activating/deactivating auto answer .....	62
Changing the speaker/earpiece volume .....	62
Changing ringtones .....	63
Activating/deactivating advisory tones .....	64
Setting your own area code .....	64
Restoring the handset default settings .....	64
<b>Base settings</b> .....	<b>65</b>
Changing the base ringtones .....	65
Activating/deactivating music on hold .....	65
Repeater support .....	65
Protecting against unauthorised access .....	66
Restoring the base to the factory settings .....	66
<b>Connecting the base to the PABX</b> .....	<b>67</b>
Dialling modes and recall .....	67
Saving an access code (outside line code) .....	67
Setting pauses .....	68
Temporarily switching to tone dialling (DTMF) .....	68
<b>Service (Customer Care)</b> .....	<b>69</b>
Questions and answers .....	69
Authorisation .....	70
Guarantee Certificate	
United Kingdom .....	71
<b>Environment</b> .....	<b>72</b>
<b>Appendix</b> .....	<b>73</b>
Care .....	73
Contact with liquid .....	73
Specifications .....	73
Writing and editing text .....	74
<b>Mounting the base on the wall</b> .....	<b>78</b>
<b>Mounting the charging cradle on the wall</b> .....	<b>78</b>
<b>Index</b> .....	<b>79</b>

# Safety precautions

## Warning

Read the safety precautions and the user guide before use.

Explain their content and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the base.



Only use the **recommended, rechargeable batteries** (→ page 73) as this could otherwise result in significant health risks and personal injury.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.

The handset may cause an unpleasant humming or whistling noise in hearing aids or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Do not install the base or charging cradle in bathrooms or shower rooms. The base and charging cradle are not splashproof (→ page 73).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please remove faulty bases from use or have them repaired by our Service department, as they could interfere with other wireless services.

## Please note

Not all of the functions described in this user guide are available in all countries.



## Gigaset C590/C595 – more than just a telephone

---

Your telephone sets new standards for the way you communicate at home. The large TFT display, user-friendly keypad and clearly laid out menu are very simple to use.

It can do a whole lot more:

- ◆ Store anniversaries such as birthdays in your phone and it will remind you of them in advance.
- ◆ Allocate important people to one of six VIP groups so you can identify important calls from the ringtone and the colour of the allocated VIP group.
- ◆ If you only want to accept calls when you can see the number, you can set your phone to only ring when the phone number is transferred.
- ◆ You can assign important numbers to the number keys on your handset. The number is then dialled by simply pressing the key.
- ◆ Set the display to show in large print to increase readability during certain important situations (e.g. in the directory and in lists).
- ◆ Set the menu display to suit your individual requirements so that only the most important functions (standard mode) or all functions are displayed (expert mode).
- ◆ Gigaset Green Home – be environmentally aware when using your phone. For more information, see [www.gigaset.com/customer-care](http://www.gigaset.com/customer-care).

You can find additional information about your telephone at [www.gigaset.com/qigasetc590](http://www.gigaset.com/qigasetc590).

**Have fun using your new phone!**

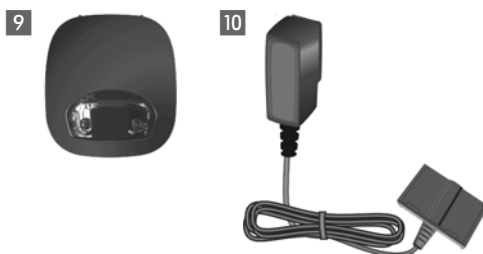
# First steps

## Checking the pack contents



- 1 one Gigaset C590/C595 base
- 2 one mains adapter
- 3 one Gigaset C59H handset
- 4 one phone cord
- 5 two batteries
- 6 one battery cover
- 7 one belt clip
- 8 one user guide

If you have purchased a **model with multiple handsets** the package should contain two batteries, a battery cover, a belt clip and a charging cradle **9** with mains adapter **10** for each additional handset.



## Setting up the base and charging cradle (if included)

The base and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5°C to +45°C.

- ▶ Install the base on a level, non-slip surface in a central location in your house or flat or mount the base or charging cradle on the wall → page 78.

### Please note

Pay attention to the range of the base.

This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode (→ page 54) is activated.

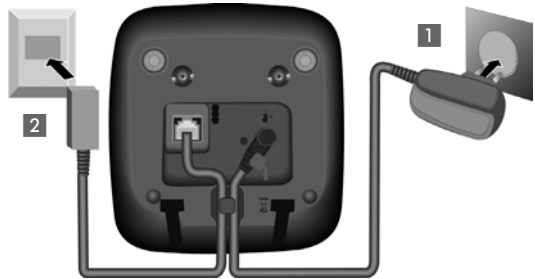
The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

### Please note:

- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

## Connecting the base

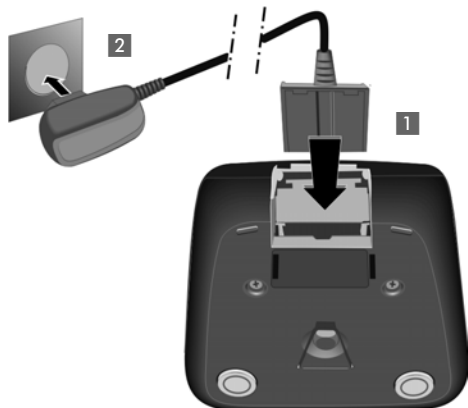
- ▶ **First** connect the mains adapter **1**.
- ▶ **Then** connect the telephone jack **2** and insert the cables into the cable ducts.



### Please note:

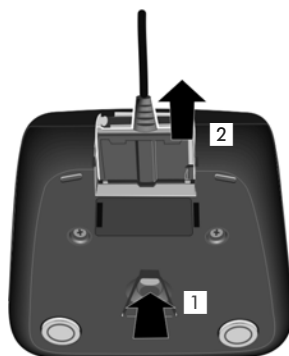
- ◆ The mains adapter must **always be connected**, as the phone will not operate without a mains connection.
- ◆ Only use the mains adapter and phone cord **supplied**. Pin connections on telephone cables can vary (pin connections → page 74).

## Connecting the charging cradle (if included)



- ▶ Connect the flat plug from the mains adapter **1**.
- ▶ Plug the mains adapter into the plug socket **2**.

If you need to disconnect the plug from the charging cradle, press the release button **1** and disconnect the plug **2**.



## Setting up the handset for use

The display is protected by a plastic film.  
**Please remove the protective film!**

### Inserting the batteries and closing the battery cover

#### Warning

Only use the rechargeable batteries ( → page 73) recommended by Gigaset Communications GmbH \*, i.e. never use conventional (non-rechargeable) batteries, as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

\* Gigaset Communications GmbH is a licensee of the Siemens trademark.

- ▶ Insert the batteries the right way round. The polarity is indicated in/on the battery compartment.



- ▶ First insert the battery cover at the top **a**.
- ▶ Then press the cover **b** until it clicks into place.

If you need to open the battery cover, for instance to replace the batteries, place your fingertip in the cavity on the casing and pull the battery cover upwards.



## Attaching the belt clip

The handset has notches on each side to attach the belt clip.

- ▶ **To attach** – press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.
- ▶ **To remove** – using your right thumb apply pressure to the centre of the belt clip, push the fingernail of your left index finger between the clip and the casing and lift the clip upwards.



## Placing the handset in the base/charging cradle

- ▶ Place the handset in the base/charging cradle with its **display facing forward**.

Each handset is registered with the base at the factory. You do not need to complete a registration. If you wish to use your handset with a different base or use further handsets with your base, you will have to register the handset manually → page 55.

To charge the batteries, leave the handset in the base/charging cradle.

### Please note

Only place the handset in the base/charging cradle that is intended for it.

## Initial charging and discharging of the batteries

The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.



▶ Place the handset in the base/charging cradle for **10** hours.



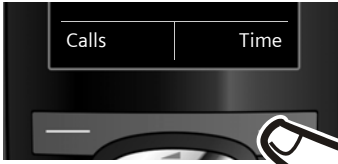
▶ Then remove the handset from the base/charging cradle and do not replace it until the batteries are fully discharged.

### Please note

- ◆ After the first battery charge **and** discharge you may replace your handset in the base/charging cradle after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while, the charge capacity of the batteries will decrease for technical reasons.

## Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.



- ▶ Press the key below **Time** on the screen display to open the input field.

(If you have already set the time and date, open the input field via the menu → page 27.)



The *Date/Time* submenu is shown on the display.

- ▶ The active input position flashes.

Enter day, month and year as an 8-digit number via the keypad, e.g. **1 0 0 4 GHI 1 0 0 0 +**

**2 ABC 0 + 0 + WXYZ 9** for 14/10/2009.



Press the **right** or **left** control key to change the input position and correct an entry.



- ▶ Press **down** on the control key to switch to the time input field.

- ▶ Enter the hours and minutes as four digit numbers via the keypad, e.g. **0 + 7 PQRS 1 0 0 5 JKL** for 07:15 am. Change the input position with the control key if necessary.








► Press the key below **Save** on the display screen to confirm your entry.






The display shows **Saved**. You will hear a confirmation tone and the handset will automatically return to idle status.

### Display in idle status

Once the phone is registered and the time set, the idle display is shown as in this example. If the answering machine is activated, the answering machine icon  will be displayed in the header.









### Displays

◆ Reception signal between the base and handset:

- good to poor:   
- no reception:  flashes


**Green:** Eco Mode activated ( → page 54)

◆ Battery charge status:

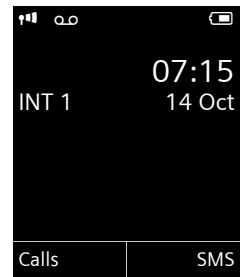
-     (empty to full)
-  flashes **red**: batteries almost empty
-    (charging)

◆ INT 1

Internal name of the handset ( → page 58)

If **Eco Mode+** ( → page 54) is activated, the  icon is displayed in the top left. Your answering machine is set with a pre-recorded announcement.

Your phone is now ready for use!



## Connecting the headset



You can connect a headset with a 2.5 mm jack connector, including HAMA and Plantronics M40, MX100 und MX150 headset types.

A compatibility list of tested headsets can be found on the Internet at:  
[www.plantronics.com/productfinder](http://www.plantronics.com/productfinder).

## What would you like to do next?

Now you have successfully started your Gigaset, you will probably want to adapt it to your personal requirements. Use the following guide to quickly locate the most important subjects.

If you are unfamiliar with menu-driven devices such as other Gigaset telephones you should first read the section entitled "Using the phone"



→ page 19.

Information on ...	... is located here.
Setting the ringtone and volume	▶ page 63
Setting the earpiece volume	▶ page 62
Recording a personal announcement for the answering machine	▶ page 48
Setting Eco Mode / Eco Mode+	▶ page 54
Preparing the telephone for SMS reception	▶ page 39
Operating the telephone on a PABX	▶ page 67
Registering existing Gigaset handsets to a base	▶ page 55
Transferring directory entries from existing Gigaset handsets to new handset(s)	▶ page 34

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 69) or contact our Customer Care team (→ page 69).

# Using the phone





## Control key

Below, the side of the control key that you must press in the respective operating situation is marked in black (top, bottom, right, left, centre), e.g.  for "press right on the control key" or  for "press the centre of the control key".







The control key has a number of different functions:



### When the handset is in idle status

-  Open the directory.
-  Open the main menu.
-  Open the list of handsets.
-  Call up the menu to set the call volume (→ page 62) of the handset.







### In the main menu

- , ,  or 
- Navigate to the required function.




### In submenus and lists

-  /  Scroll up/down line by line.

### In input fields

Use the control key to move the cursor up , down , right  or left . Press and **hold**  or  to move the cursor **word by word**.

### During an external call

-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and speaker mode.

### Functions when pressing the middle of the control key

Depending on the operating situation, the key has different functions.

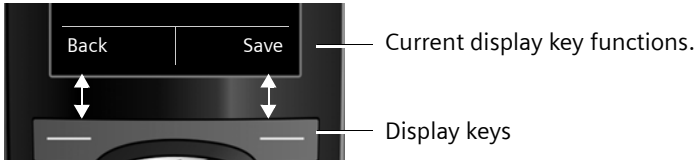
- ◆ **In idle status** the key opens the main menu.
- ◆ **In submenus, selection and input fields** the key takes on the function of the display keys **OK**, **Yes**, **Save**, **Select** or **Change**.

#### Please note

In these instructions, opening the main menu is represented by pressing right on the control key and functions are confirmed by pressing the corresponding display key. However, if you prefer, you can use the control key as described above.

## Display keys





The functions of the display keys change depending on the particular operating situation. Example:



Some important display keys:


Options	Open a context-dependent menu.
OK	Confirm selection.
< C	Delete key: delete one character/word at a time from right to left.
Back	Go back one menu level or cancel operation.
Save	Store entry.
→→	Open the redial list.
→ 00	Forward a call to the answering machine.

## Keys on the keypad

-  /  /  etc.  
Press the matching key on the handset.
-   
Enter digits or letters.

## Correcting incorrect entries


You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Delete the **character** by briefly pressing  or press and **hold** to delete the **word** to the left of the cursor.
- ◆ Insert characters next to the cursor.
- ◆ Overwrite the highlighted (flashing) character, e.g. when entering time and date.

## Menu guidance


Your telephone's functions are accessed using a menu that has a number of levels.

The menu display can be extended (**Expert mode**) or reduced (**Standard mode**). Standard mode is activated by default.

Settings or functions that are only available in expert mode are marked in these instructions with the  icon.


Switching between standard/expert mode and the menu overview → page 25.


### Main menu (first menu level)

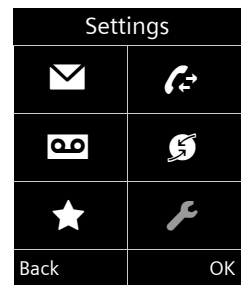
- ▶ When the handset is in idle status press the **right**  control key to open the main menu.

The main menu functions are shown in the display with icons. The icon for the selected function is marked in orange and the name of the associated function appears in the display's header.

To access a function, i.e. to open the corresponding submenu (next menu level):

- ▶ Use the control key  to select the required function and press the display key **OK**.


**Briefly** press the display key **Back** or the end call key  to revert back to idle status.




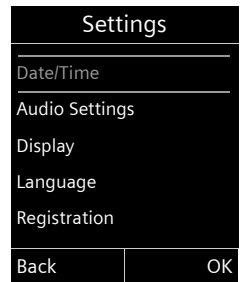
### Submenus

The functions in the submenus are displayed as lists (example on the right).

To access a function:

- ▶ Scroll to the function with the control key  and press **OK**.

**Briefly** press the display key **Back** or the end call key  to return to the previous menu level/cancel the operation.



### Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the display key **OK**, **Yes**, **Save** or **Change** will be lost

An example of the display in idle status is shown on page 16.

## Activating/deactivating the handset



With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.  
Press and **hold** the end call key again to switch the handset on.

### Please note

When the handset is switched on, an animation of the **Gigaset** logo will be displayed for several seconds.

## Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



Press and **hold** the hash key in idle status to activate or deactivate the keypad lock. You will hear the confirmation tone.

If the keypad lock is activated a warning will be shown when you press a key.

The keypad lock deactivates automatically when you receive a call. It is reactivated when the call is ended.

### Please note



When the keypad lock is active, you cannot call emergency numbers.

## Illustration of operating steps in the user guide

The operating steps are shown in abbreviated form.


Example:

The illustration:


 →  → Eco Mode → Eco Mode+ (☑ = on)

means:




- ▶ Press **right** on the control key  to open the main menu.



- ▶ Use the right, left, down and up control key  to navigate to the Settings submenu.

- ▶ Press the display key **OK** to confirm your selection.




- ▶ Press down on the control key  until the Eco Mode menu appears on the display.

- ▶ Press the display key **OK** to confirm your selection.






- ▶ Press down on the control key  until the **Eco Mode+** menu appears on the display.

- ▶ Press the display key **Change** to activate/deactivate the function.



Changes are effective immediately and do not have to be confirmed.




- ▶ Press the key below **Back** on the display to jump back to the previous menu level.  
**or**  
Press and **hold** the end call key  to return to idle status.

# Menu overview


## Setting standard or expert mode

The menu display can be extended (**Expert mode**) or reduced (**Standard mode**).

The settings are carried out as follows:

Select  →  → Menu View → Simplified (standard mode) or Complete (expert mode) → **Select** (the active mode is marked with .

Menu options that are only available in expert mode are marked with the  icon.


Open the main menu: When the telephone is in idle status press .

## SMS

### You have activated an SMS mailbox (general or private) without a PIN

New SMS	→ page 39
Incoming	→ page 41
Outgoing	→ page 40








### You have activated an SMS mailbox with a PIN or 2-3 mailboxes

Mailbox	New SMS	→ page 39
	Incoming	→ page 41
	Outgoing	→ page 40
Mailbox 1 Mailbox 2 Mailbox 3	New SMS	→ page 39
	Incoming	→ page 41
	Outgoing	→ page 40
 Settings	Service Centres	→ page 44
	SMS Mailboxes	→ page 43
	Notification	→ page 43

## Call Lists


All Calls	→ page 36
Outgoing Calls	→ page 36
Accepted Calls	→ page 36
Missed Calls	→ page 36

 **Voice Mail**

Play Messages	→	Network Mailbox	→ page 53
		Answering Machine *	→ page 47
Activation *	→		page 47
Announcements *	→	Rec. Announcement *	→ page 48
	→	Play Announcement *	→ page 48
	→	Del. Announcement *	→ page 48
	→	 Rec. Advisory Msg. *	→ page 48
	→	 Play Advisory Msg. *	→ page 48
	→	 Del. Advisory Msg. *	→ page 48
 Recordings *	→		page 50
 Call Screening *	→		page 50
 Network Mailbox **	→		page 53
 Set Key 1 *	→	Network Mailbox	→ page 53
	→	Answering Machine	→ page 53

\* Only base with answering machine

\*\* Only base without answering machine






 **Select Services**

Withhold Number	→		page 30
All Calls	→	Call Divert	→ page 31
	→	Call Waiting	→ page 30
Ringback Off	→		page 30

 **Additional Features**

Alarm Clock	→	page 55
Room Monitor	→	page 59

 Settings

Date/Time	→ page 15
Audio Settings	Handset Volume → page 62
	 Advisory Tones → page 64
	Ringtones(Handset) → page 63
	Ringtones (Base) → page 65
	 Music on hold → page 65
Display	Screensaver → page 61
	Large Font → page 62
	Colour Schemes → page 62
	 Backlight → page 62
Language	→ page 61
Registration	Register Handset → page 55
	De-reg. Handset → page 56
	Select Base → page 56
 Telephony	Auto Answer → page 62
	Area Codes → page 64
	Listening In → page 58
	Preselection → page 38
	Access Code → page 67
	Dialling Mode → page 67
	Recall → page 67
 System	Handset Reset → page 64
	Base Reset → page 66
	Repeater Mode → page 65
	System PIN → page 66
Menu View	Simplified → page 25
	Complete → page 25
Eco Mode	Eco Mode → page 54
	Eco Mode+ → page 54

## Making calls

---

### Making an external call

---


External calls are calls using the public telephone network.




Enter the number and press the talk key.

Or:



Press and **hold** the talk key  and then enter the number.

You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.

#### Please note

Dialling with the directory (→ page 32), calls list (→ page 36) and redial list (→ page 35) saves you from repeatedly keying in phone numbers.

### Ending a call


---






Press the end call key.

## Accepting a call

---

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the speaker key .
- ▶ Gigaset C590: Press the display key **Accept**.
- ▶ Gigaset C595: Press the display key  to divert the call to the answering machine (→ page 50).

If the handset is in the base/charging cradle and the **Auto Answer** function is activated (→ page 62), the handset automatically answers the call when you remove it from the charging cradle.

To deactivate the ringtone, press the **Silence** display key. You can accept the call as long as it is displayed on the screen.

## Calling Line Identification

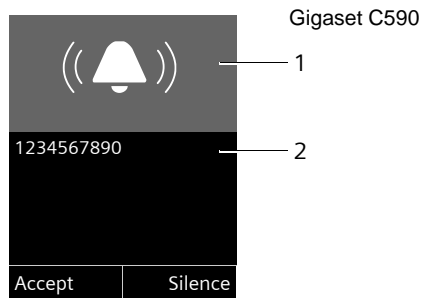
---

When you receive a call, the caller's number is displayed on the screen if the following conditions are met:

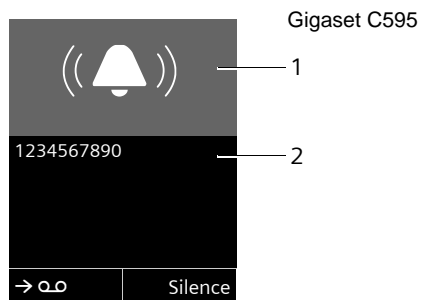
- ◆ Your network provider supports CLIP, CLI.
  - CLI (Calling Line Identification): the caller's number is transmitted.
  - CLIP (Calling Line Identification Presentation): the caller's number is displayed.
- ◆ You have requested CLIP from your network provider.
- ◆ The caller has requested CLI from the network provider.

## Call display with CLIP/CLI

If the caller's number is saved in your directory, the caller's name will be displayed.



or



- 1 Ringtone icon
- 2 Number or name of caller

The following is displayed in place of the number:

- ◆ External, if no number is transmitted.
- ◆ Withheld, if the caller has withheld Calling Line Identification (→ page 30).
- ◆ Unavailable, if the caller has not requested Calling Line Identification.

## Speaker mode

In speaker mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

### Activating/deactivating speaker mode

#### Activating while dialling



Enter the number and press the speaker key.

- ▶ You should inform your caller before you use the speaker function so that they know someone else is listening.


#### Switching between earpiece and speaker mode



Press the speaker key.

During a call and when listening to the answering machine (Gigaset C595 only), activate or deactivate speaker mode.

If you wish to place the handset in the base/charging cradle during a call:

- ▶ Press and hold the speaker key  while placing the handset in the base.

For instructions on how to adjust the loud-speaker volume, → page 62.



### Switching to mute

You can deactivate the microphone in your handset during an external call.



Press key to mute the handset. The display shows *Microphone is off*. Press the key again to reactivate the microphone.

#### Please note

If the telephone is muted, all keys except the mute key  and the end-call key  will not work.

## Making calls using network services

---

Network services are functions that your network provider makes available to you. You have to request these services from your network provider.

- ▶ **If you require assistance, please contact your network provider.**

## Calling Line Identification


---


**Withhold Calling Line Identification once (CLIR):**

If you make a call, your number is shown in the display of the call recipient if that person has activated CLIP (→ page 29).

If in certain instances you do not wish to have your number displayed, you can withhold your number for the next call (CLIR).

 →  → **Withhold Number**

 Enter phone number.

 Press the talk key.

## Ringback


---

### Initiating ringback

If the number you have called is engaged, you can initiate ringback. As soon as the line of the person you called is free, your handset will ring.



You hear the busy tone.

**Options** → **Ringback**

 Press the end call key.

### Cancelling ringback

You can cancel a ringback that has already started.

 →  → **Ringback Off**

## Call waiting during an external call

---

If the function is activated during an **external** call you will hear a call waiting tone to signal that another external caller is trying to get through. If you have CLIP (→ page 29) the number of the waiting caller or the corresponding directory entry is shown in the display.

## Activating/deactivating call waiting

---

 →  → **All Calls** → **Call Waiting**

**Status**      Activate/deactivate.

**Dial**        Press the display key.

## Accepting a waiting call

---

You are making an external call and hear the call waiting tone.

You have the following options:

**Options** → **Accept Waiting call**

**or**

(only if CLIP is activated → page 28)

**Accept**      Press the display key.

Once you have accepted the waiting call you can switch between the two callers ("call swap" → page 31).

## Call divert (CD)

---

When diverting a call, the call is forwarded to another connection.

The following options are available:

- ◆ **All Calls:** Calls are diverted immediately. No more calls are signalled on your phone.
- ◆ **No Answer:** Calls are diverted if no one accepts the call within several rings.
- ◆ **When Busy:** Calls are diverted when your line is busy. Call is diverted without a call waiting tone.

 →  → All Calls → Call Divert

▶ Change multiple line input:

When:

Select All Calls / When Busy / No Answer.


Phone Number:

Enter the number to which the call is to be diverted.

Status:

Activate/deactivate call divert.

**Dial** Press the display key.

 After the announcement, press the end call key.

## Consultation call, call swap

---

These functions enable you to

- ◆ Call a second external caller (consultation call)
- ◆ Switch between two calls (call swap)


### Consultation call

---

You can call a second external caller. The first call is placed on hold.

**During** an external call:

**Ext.Call** Press the display key.  
The previous call is placed on hold. The other participant hears an announcement.

 Enter the second participant's telephone number.

The phone number is dialled. You are connected to the second participant.

If the caller does not answer, select the display key **End** to return to the first participant.

#### Please note

You can also select the second participant's phone number from the directory (→ page 34) or the calls list (→ page 36).

### Ending a consultation call

**Options** → End Active Call

You are reconnected to the first caller.


You can also end the consultation call by selecting the end call key. The connection is briefly interrupted and you will be called back. Once you have pressed the talk key you are reconnected to the first caller.

### Call swapping

---

You can speak to both callers one at a time (call swap).

**Precondition:** You are conducting an external call and have called a second participant (consultation call) or have accepted a waiting call.

- ▶ Use  to swap between the participants.

The caller you are currently speaking to is marked with the  icon.

### End the current call

**Options** → End Active Call

You are re-connected to the waiting caller.



## Using the directory and lists

The options are:

- ◆ Directory
- ◆ Redial list
- ◆ Incoming SMS message list
- ◆ Call lists
- ◆ List of missed appointments
- ◆ Answering machine list  
(Gigaset C595 only)

You can create a personalised directory for your own individual handset. You can also send lists/entries to other handsets (→ page 34).

### Directory

You can save up to 150 entries in the directory.


#### Please note

For quick access to a number from the directory (shortcut), you can assign the number to a key (→ page 60).

### Directory

In the **directory**, you can save

- ◆ Up to three numbers and associated first names and surnames
- ◆ E-mail address
- ◆ Anniversaries with reminder
- ◆ VIP ringtones with VIP symbol.

You open the directory in idle status using the  key.

#### Length of the entries

3 numbers:

each max. 32 digits

First name and surname:

each max. 16 characters

E-mail address:

max. 64 characters

### Saving a number in the directory

 → <New Entry>

▶ Change multiple line input:

First Name: / Surname:

Enter first names and/or surnames.

If a name is not entered in any of the fields, the telephone number is saved and displayed as the surname.




(For instructions on how to enter text and special characters, please see

→ page 74.)

Phone (Home): / Phone (Office): /

Phone (Mobile):

Enter a number in at least one of the fields.

When scrolling through the directory, the entries are highlighted by a pre-fixed symbol:  /  / .

E-mail:

Enter the e-mail address.

Anniversary:

Select On or Off.


When set to On:

Enter **Annivers. (Date)** and **Anniversary (time)** and select reminder type:

**Anniversary (tone)** → page 34.

VIP Group:

Mark directory entry as **VIP** (Very Important Person).

Each entry can be allocated to one of 6 VIP groups, which are defined by the colour of the  symbol, the name of the VIP group and the corresponding ringtone.

VIP calls are recognised by the ringtone. The background colour of the ringtone animation changes to the colour of the VIP group.

**Precondition:** Calling Line Identification (→ page 28).

 **Save**

Press the display key.

## Order of directory entries

---

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.


The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters



To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.

## Selecting a directory entry

---

 Open the directory.



You have the following options:



- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first letters of the name; if necessary scroll to the entry with the  key.

The directory searches for the surname. If a surname has not been entered, the directory searches for the first name.

## Dialling with the directory

---



 →  (Select entry).

 Press the talk key.  
(If several numbers have been entered, select the required number and press talk key  again).  
The number is dialled.

## Managing directory entries


---

### Viewing entries


 →  (Select entry).

**View** Press the display key.  
The entry is displayed.

**Options** Press the display key.

The following functions can be selected with :

#### Display Number

To edit or add to a saved number, or to save it as a new entry, press  after the number is displayed.

#### Delete Entry



Delete selected entry.

#### Copy Entry

to Internal: Send a single entry to a handset (→ page 34).

vCard via SMS: Send a single entry in vCard format via SMS.



### Editing entries

 →  (Select entry).


**View** **Edit** Press the display keys one after the other.

- ▶ Carry out changes and save.



### Using other functions

 →  (Select entry)

→ **Options** (Open menu)

The following functions can be selected with :

#### Display Number

Edit or add to a saved number and then dial with  or save as a new entry; to do this, press  after the number appears on the display.

#### Edit Entry

Edit selected entry.

#### Delete Entry

Delete selected entry.

#### Copy Entry

to Internal: Send a single entry to a handset (→ page 34).

## Using the directory and lists

vCard via SMS: Send a single entry in vCard format via SMS.

### VIP Groups

Change the name and ringtone of VIP groups; to do this:

Select the VIP group → **Edit**  
→ Change entry → **Save**.

### Delete All

Delete **all** entries in the directory.

### Copy All

to Internal: Send the complete list to a handset (→ page 34).

vCard via Bluetooth: Send the complete list in vCard format via Bluetooth.

### Available Memory

Display the number of entries that are still available in the directory (→ page 32).

## Using shortcut keys

---



- ▶ Press and **hold** the required shortcut key (→ page 60).


## Sending the directory to another handset

---

### Preconditions:

- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

 →  (Select entry) → **Options**  
(Open menu) → Copy Entry / Copy All  
→ to Internal

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding to the **Entry copied - Copy next entry?** prompt with **Yes**.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

### Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.
- ◆ Pictures and sounds allocated to entries are not transferred.

## Copying the displayed number to the directory

---

You can copy numbers displayed in a list, e.g. the calls list or the redial list, or in an SMS to the directory.

A number is displayed:

**Options** → Copy to Directory



- ▶ Complete the entry → page 32.


Gigaset C595: Message playback is interrupted during the number transfer from the answering machine list.

## Copying a number or e-mail address from the directory

---

In some operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.



- ▶ Depending on the operating situation, open the directory with  or .

 Select entry (→ page 33).


## Saving an anniversary in the directory


---

For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (default setting: Anniversary: Off).

 →  (Select entry)

**View** **Edit** Press the display keys one after the other.

 Scroll to the Anniversary line.

 Select On.

- Change multiple line input:

#### Annivers. (Date)

Enter day/month/year in 8-digit format.

#### Anniversary (time)

Enter the hour/minute for the reminder call in 4-digit format.

#### Anniversary (tone)



Select the type of signal for the reminder.

**Save** Press the display key.


#### Please note


A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

### Deactivating anniversaries

 →  (Select entry)

**View** **Edit** Press the display keys one after the other.

 Scroll to the Anniversary line.

 Select Off.

**Save** Press the display key.

### Reminder call on an anniversary

**In idle status**, a reminder call is shown in the handset display and indicated by the selected ringtone.



You can:

**SMS** Write an SMS.

**Off** Press the display key to acknowledge and end the reminder call.


**When you are on the phone** a reminder call is indicated on the handset with a **single** advisory tone.


Anniversaries that are indicated during a call and that are elapsed are entered in the **Missed Alarms** list (→ page 37).


## Redial list

The redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If one of the numbers is in the directory, the corresponding name will be displayed.

### Manual redial


 Press the key **briefly**.


 Select entry.

 Press the talk key again. The number is dialled.


When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

### Managing entries in the redial list

 Press the key **briefly**.

 Select entry.

**Options** Open menu.

The following functions can be selected with :

#### Copy to Directory

Copy an entry to the directory (page 32).

Display Number (as in the directory, page 33)

Delete Entry (as in the directory, page 33)

Delete All (as in the directory, page 34)

## Incoming SMS message list

All received SMS messages are saved in the incoming message list → page 41.

## Answering machine list (Gigaset C595 only)

You can use the **answering machine list** to listen to the messages that are on the answering machine.

### Call lists


**Precondition:** Calling Line Identification (CLIP, page 28)

Your telephone stores various types of calls:

- ◆ Accepted calls
- ◆ Outgoing calls
- ◆ Missed calls
- ◆ Calls recorded by the answering machine (Gigaset C595 only)

You can view each type of call separately or gain an overview of all calls. Each call record contains the last 20 numbers in its category.

When in idle status, open the call lists by selecting the **Calls** display key or via the menu:



### List entry

New messages are displayed at the top.

Example of list entries:

All Calls	
Frank	
14.10.09, 15:40	
089563795	
14.10.09, 15:32	
...0123727859362922	
14.10.09, 15:07	
View	Options

- ◆ List type (in header)
- ◆ Status of entry  
**Bold:** New entry

- ◆ Number or name of caller
- ◆ Date and time of call (if set, page 15)
- ◆ Type of entry:
  - Accepted calls ( )
  - Missed calls ( )
  - Outgoing calls ( )
  - Calls recorded by the answering machine ( , Gigaset C595 only)

Press the talk key to return the calls selected.

Select the **View** display key to access additional information, including for example the number linked to the name

Select the **Options** display key to select the following options:

#### Copy to Directory

Copying a displayed number to the directory.

#### Delete Entry

Delete selected entry.

#### Delete All


Delete all entries.





When you quit the call lists, all entries are set to the status "old", i.e. the next time you open the call the list they will no longer be shown in bold.

## Opening lists with the message key


You can use the message key to open the following list selection:

- ◆ Answering machine list (Gigaset C595 only) or network mailbox, if your network provider supports this function and a shortcut is set for the network mailbox ( → page 53).
- ◆ Incoming message list ( → page 41)  
If **several** mailboxes are set up ( → page 43), several lists are displayed.
- ◆ List of missed calls
- ◆ List of missed appointments ( → page 37)

An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:


Icon	New message...
	... in the answering machine list (Gigaset C595 only) or on the network mailbox
	... in list of <b>missed calls</b>
	... in the SMS list
	... in the <b>Missed Alarms</b> list:

The number of **new** entries is displayed under the corresponding icon.




#### Please note

If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (see your network provider user guide).

After pressing the message key  you will see all the lists that contain messages and the network mailbox list.


Lists containing new messages are at the top of the list and are marked in a bold font.

Messages & Calls	
<b>Calls:</b>	<b>(3)</b>
Missed Alarms	(1)
SMS:	(2)
Back	OK

Select a list with . To open, press **OK**.

## List of missed appointments

Missed anniversaries (→ page 34) are saved in the **Missed Alarms** list if:

- ◆ You do not accept an anniversary.
- ◆ The anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the anniversary.
- ◆ Open the list by pressing the **messages key**  (→ page 36).

Each entry is shown with

- ◆ Number or name
- ◆ Date and time

The most recent entry is at the head of the list.

Press the display key **Delete** to delete the selected entry.

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

## Making cost-effective calls

---

Make phone calls through a network provider who offers particularly low-cost call rates (call-by-call).

### Automatic network provider code (preselection)

---

You can store a call-by-call number (preselection number), which is **automatically** placed in front of numbers when you dial them.

In the **"With Preselection"** list, specify the dialling codes or the first digits of the dialling codes with which you wish the preselection number to be used.

In the **"No Preselection"** list enter the exception to the "With Preselection" list.

#### Example:



Preselection No.	0999
With Preselection	08
No Preselection	081 084


All numbers that start with 08 except for 081 and 084, are dialled with the preselection number 0999.

Phone number	Dialled number
07112345678	→ 07112345678
<b>08912345678</b>	→ <b>0999</b> 08912345678
<b>08412345678</b>	→ 08412345678

### Saving preselection numbers

---

 →  → Telephony → Preselection  
→ Preselection No.

 Enter or change the preselection number (call-by-call number).

**Save** Press the display key.


### Save or change entries in the preselection lists


---

Each of the two lists can contain 20 entries, each with 6 digits.

Numbers may be prefixed according to the country in the **"with preselection"** list. This means, for example, that all national calls or calls to the mobile network are **automatically** linked to the preselection number you have saved previously.

 →  → Telephony → Preselection  
→ With Preselection / No Preselection


 Select entry.

 Enter or edit first digits of number.

**Save** Press the display key.



### Temporarily cancelling preselection

---

 (press and hold) → **Options**  
→ Preselection off →  (Select number)

### Permanently deactivating preselection

---

 →  → Telephony → Preselection  
→ Preselection No.

**<C** Press and hold the display key until the preselection number is deleted.

**Save** Press the display key.

## SMS (text messages)

Your device is delivered ready to send SMS messages.

### Preconditions:

- ◆ Calling Line Identification is enabled for your phone line.
- ◆ Your network provider supports SMS on the fixed line network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive SMS.
- ◆ To receive SMS messages you must be registered with your service provider. This is completed automatically when you send your first SMS.

### Please note

If your phone is connected to a PABX, please read → page 45.

## Writing/sending an SMS

### Writing an SMS



Mailbox 2 Select mailbox if necessary and press **OK**.



Enter mailbox PIN if necessary and press **OK**.

New SMS Select and press **OK**.



Write an SMS.

### Please note

- ◆ For instructions on how to enter text and special characters, please see page 74.
- ◆ An SMS can be up to 612 characters. If there are more than 160 characters, the SMS is sent as a **linked SMS** (up to 4 SMS messages with 153 characters each). The number of characters remaining and which part of a linked SMS has already been written is shown in the top right of the display.

### Sending an SMS



Press the talk key

Or:



Press the display key.

Send

Select and press **OK**.

SMS

Select and press **OK**.



Select number with area code (even if you are in that area) from the directory or enter directly. For sending SMS to an SMS mailbox: add the mailbox ID to the **end** of the number.



Press the display key. The SMS is sent.

### Please note

- ◆ If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft SMS list.
- ◆ If the memory is full, or if the SMS function on the base is being used by another handset, the operation is cancelled. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later.



## Draft SMS list

---

You can save an SMS in the draft SMS list, and edit and send it later.




### Saving an SMS in the draft SMS list

► You are writing an SMS (→ page 39).

**Options** Press the display key.

Save Entry Select and press **OK**.

### Opening the draft SMS list

 →  → if necessary  (Mailbox, mailbox PIN) → **Outgoing**


The first list entry is displayed, e.g.




The number will be displayed in the first line, if the entry has been saved with the phone number, i.e. when the SMS was saved from the incoming message list.

### Reading or deleting SMS messages

► Open the draft SMS list and then:

 Select SMS.

**Read** Press the display key.  
The entry will be displayed.  
Scroll line by line using .

Or delete the SMS with

**Options** → **Delete Entry** → **OK**.

### Writing/changing an SMS

► You are reading an SMS in the draft SMS list.

**Options** Open menu.

You have the following options:

#### Copy

Send stored SMS.

#### Edit

Edit the text of the saved SMS and then send it (→ page 39).

#### Character Set

Display text in the selected character set.

### Deleting draft SMS list

► Open the draft SMS list and then:

**Options** Open menu.

Delete All Select, press **OK** and confirm with **Yes**. The list is cleared.

## Receiving an SMS

---

All received SMS messages are saved in the incoming SMS list. Linked SMS messages are displayed as **one** message. If this is too long or is not transferred completely, it is split into individual messages. Since an SMS remains in the list even after it has been read, you should **regularly delete SMS messages from the list**.

The display tells you if the SMS memory is full.



#### Please note

Each incoming SMS is signalled by a single ring (ringtone as for external calls). If you accept such a "call", the SMS will be lost. To prevent this ring, suppress the first ringtone for all external calls (→ page 45).

## Incoming SMS list

The incoming SMS list contains:

- ◆ All received SMS messages, starting with the most recent.
- ◆ SMS messages that could not be sent due to an error.

New SMS messages are signalled on all Gigaset C59H handsets by the  icon in the display, the flashing message key  and an advisory tone.

### Opening the incoming SMS list with the key

 Press.

The incoming message list is indicated by the mailbox name and the number of entries (example):

**SMS:** (2)

**bold:** new entries



**normal font:** read entries

If necessary select a mailbox and open list by selecting **OK** (if necessary enter mailbox PIN and confirm by pressing **OK**).

The number and date of receipt are displayed in the entry list.

0123727859362922  
14.10.09 09:07

### Opening the incoming message box via the SMS menu

 →  → if necessary select mailbox, enter mailbox PIN) → Incoming

### Deleting the incoming SMS list

All **new and old** SMS messages in the list are deleted.

► Open the incoming message box.

**Options** Open menu.

Delete All Select, press **OK** and confirm with **Yes**. The list is cleared.

## Reading or deleting SMS messages

► Open the incoming message list, then:



Select SMS.

**Read**

Press the display key.

The entry will be displayed.

Scroll line by line using .

Or delete the SMS with

**Options** → Delete Entry → **OK**.

After you have read a new SMS, it is given the status "Old" (is no longer shown in bold).

### Changing the character set

► Reading an SMS

**Options** Press the display key.

Character Set

Text is shown in the selected character set.

## Replying to or forwarding text messages

► Reading an SMS

**Options** Press the display key.

You have the following options:

Reply

Write and send a new SMS in reply to the sender ( → page 39).

Edit

Edit the text in the SMS and return it to the sender ( → page 39).

Forward

Forward the SMS to another number ( → page 39).

## Copying the number to the directory

### Copying the sender's number

- ▶ Open the incoming message list and select entry (→ page 41).

**Options** → Copy to Directory

- ▶ Complete the entry → page 34.


#### Please note

An attached mailbox identifier is added to the directory.

### Copying/dialling numbers from an SMS text


- ▶ Read the SMS and scroll to the telephone number.

The digits are highlighted.

 Press the display key.

Complete the entry → page 34.


**Or:**

 Press the talk key to dial the number.

If you wish to use the number to send an SMS:

- ▶ Save the number with the local area code (dialling code) in the directory.

## SMS with vCard

The vCard is an electronic business card. It is displayed by the  symbol in the body of the SMS.

A vCard can include:

- ◆ Name
- ◆ Private number
- ◆ Business number
- ◆ Mobile phone number
- ◆ Birthday

Entries in a vCard can individually be saved to the directory one after the other.

### Opening the vCard

- ▶ Read the SMS containing the vCard.

**View** Press the display key.  
To return to the body of the SMS, press **Back**.

 Select number.

**Save** Press the display key.

When you save a number, the directory is opened automatically. The number and name are copied. If a birthday is entered on the vCard, the date is copied to the directory as an anniversary.

- ▶ If necessary, edit the entry in the directory and save it. You will return to the vCard automatically.

## Notification by SMS

You can be notified about missed calls or new answering machine messages (Gigaset C595 only) via SMS.

**Precondition:** For missed calls, the caller's number (CLI) must have been transmitted.

Notification is sent to your mobile phone or another device with SMS functionality.

You only need to save the telephone number to which you wish the message to be sent.

 →  → Settings → Notification

▶ Change multiple line input:

To:

Enter the number to which the SMS should be sent.

On missed call

Select On if you require SMS notification.

On message on answering machine (Gigaset C595 only).

Select On if you require SMS notification.

**Save** Press the display key.

### Warning

Do **not** enter your own fixed line network number for the notification of missed calls. This can lead to chargeable endless looping.

## SMS mailboxes

The **general mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can additionally set up three **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "mailbox ID" (a kind of extension number).

Please note:

- ◆ If you operate a number of devices (bases) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case you must also change the preset ID of the general mailbox ("0").
- ◆ You can only use personal mailboxes if your service provider supports this function. You can tell whether this is the case by the addition of a star (\*) to the number of a (preset) SMS centre.
- ◆ If you have forgotten your mailbox PIN, you can reset it by restoring default settings of the base. This will **delete all SMS messages from all mailboxes**.

## Setting up and changing a personal mailbox

### Setting up a personal mailbox

 →  → Settings → SMS Mailboxes

 Select mailbox, e.g. Mailbox 2 and press **Edit**.

▶ Change multiple line input:

Activation:

Activate or deactivate mailbox.

Name:

Enter name.

Box ID:

Select mailbox ID (0–9). You can only select the available numbers.

Protection:


Activate/deactivate PIN protection.

SMS PIN:

If necessary, enter 4-digit PIN.

## SMS (text messages)

**Save** Press the display key.

Active mailboxes are marked with ✓ in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key .

### Deactivating a mailbox

▶ Set **Activation** to **Off**. Confirm message with **Yes** if necessary.

All SMS messages saved in this mailbox will be deleted.

### Deactivating PIN protection

▶ Set **Protection** to **Off**.

The mailbox PIN is reset to "0000".

### Changing the name of a mailbox




 →  → **Settings** → **SMS Mailboxes**  
→  (Select mailbox)

**Edit** Press the display key.

 Enter new name.

**Save** Press the display key.

### Changing a mailbox's PIN and ID

 →  → **Settings** → **SMS Mailboxes**  
→  (Select mailbox)

 Enter mailbox PIN if necessary and press **OK**.

▶ Set **Box ID**, **Protection** and **SMS PIN** (→ page 43).

## Sending an SMS to a personal mailbox

To send an SMS to a personal mailbox, the sender must know your ID and enter it after your number.

▶ You can send your SMS contact an SMS via your personal mailbox.

Your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.

## Setting SMS centres

SMS messages are exchanged between SMS centres operated by service providers. You must enter the SMS centre through which you wish to send and receive SMS messages into your phone. You can receive SMS messages from **every** SMS centre that is entered, provided you have registered with your service provider.


Your SMS messages are sent through the SMS centre that is entered as the active send service centre (→ page 44). Only one SMS centre can be the active send service centre at any one time.

If no SMS service centre is entered, the SMS menu only contains the entry **Settings**. Enter an **SMS Service Centre** (→ page 44).

### Entering/changing SMS centres

▶ You should find out about the services and special functions offered by your service provider **before you make a new application** and/or before you delete pre-configured call numbers.

 →  → **Settings** → **Service Centres**

 Select SMS centre (e.g. **Service Centr. 1**) and press **Edit**.

▶ Change multiple line input:

**Active Send:**

Select **Yes** if SMS messages are to be sent via the SMS centre.

**SMS Service Centre no.:**

Enter the number of the SMS service and insert a star if your service provider supports personal mailboxes.

**Save** Press the display key.

#### Please note

Ask your service provider for details on how to enter service numbers if you wish to use personal mailboxes (pre-condition: your service provider supports this function).

## Sending an SMS via another SMS centre

---

- ▶ Activate the SMS centre (2 to 4) as the active send service centre.
- ▶ Send the SMS.

## SMS on a PABX


---

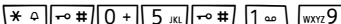
- ◆ You can only receive an SMS when the **Calling Line Identification** is **forwarded** to the extension of the PABX (**CLIP**). The CLIP evaluation of the SMS centre number is completed in your **Gigaset**.
- ◆ Depending on your PABX, you may have to add the access code (external line prefix) before the number of the SMS centre.  
If in doubt, test your PABX, e.g. by sending an SMS to your own number: once with and once without the access code.
- ◆ When you send SMS messages, your sender number may be sent without your extension number. In this case the recipient cannot reply to you directly.


Sending and receiving SMS messages **on ISDN PABXs** is only possible via the MSN number assigned to your base.

## Activating/deactivating first ringtone muting

---

 Open the main menu.

 Press keys.

 Make the first ring audible.

Or:


  Mute the first ring.

## Activating/deactivating SMS function


---

If you deactivate the SMS function, you cannot send or receive any SMS messages with your phone.



The settings you have selected for sending and receiving SMS messages (e.g. the numbers of the SMS centres) and the entries in the incoming and draft SMS lists are saved even after you turn off your phone.

 Open the main menu.

 Enter the digits.

 Deactivate the SMS function.

Or:

  Activate the SMS function (default setting).

## SMS troubleshooting

### Error codes when sending

EO	Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
FE	Error occurred during SMS transmission.
FD	Connection to SMS centre failed; see self-help.

### Self-help with errors

The following table lists error situations, possible causes and provides notes on troubleshooting.

<p>You cannot send messages.</p> <ol style="list-style-type: none"> <li>1. You have not requested the CLIP service (Calling Line Identification Presentation). <ul style="list-style-type: none"> <li>▶ Ask your service provider to enable this service.</li> </ul> </li> <li>2. SMS transmission has been interrupted (e.g. by a call). <ul style="list-style-type: none"> <li>▶ Re-send the SMS.</li> </ul> </li> <li>3. The network provider does not support this feature.</li> <li>4. No number or an invalid number is entered for the SMS centre set as the active send service centre. <ul style="list-style-type: none"> <li>▶ Enter the number ( → page 44).</li> </ul> </li> </ol>
<p>You receive an incomplete SMS.</p> <ol style="list-style-type: none"> <li>1. Your phone's memory is full. <ul style="list-style-type: none"> <li>▶ Delete old SMS messages ( → page 40).</li> </ul> </li> <li>2. The service provider has not yet sent the rest of the SMS.</li> </ol>
<p>You have stopped receiving SMS messages.</p> <ol style="list-style-type: none"> <li>1. You have changed the ID of your mailbox. <ul style="list-style-type: none"> <li>▶ Give your SMS contacts your new ID or undo the change ( → page 44).</li> </ul> </li> <li>2. You have not activated your mailbox. <ul style="list-style-type: none"> <li>▶ Activate your mailbox ( → page 44).</li> </ul> </li> <li>3. Call divert (redirecting) is activated with When: All Calls or for the network mailbox by selecting All Calls. <ul style="list-style-type: none"> <li>▶ Change the call divert ( → page 31).</li> </ul> </li> </ol>

The SMS is played back.

1. The "display call number" feature is not activated.
  - ▶ Ask your service provider to activate this function (chargeable).
2. Your mobile phone operator and your fixed line network SMS service provider have no agreement to work together.
  - ▶ Obtain information from your fixed line network SMS service provider.
3. Your terminal has been recorded by your SMS provider as having no fixed line network SMS functionality, i.e. you are not registered with the provider.
  - ▶ Send any SMS to automatically register your telephone to receive SMS.

Messages are only received during the day.

- The terminal is recorded in your SMS provider's database as having no fixed line network SMS functionality, i.e. you are not registered with the provider.
- ▶ Obtain information from your fixed line network SMS service provider.
  - ▶ Send any SMS to automatically register your telephone to receive SMS.

## Operating the answering machine of the Gigaset C595 base

---

The answering machine is operated via the handset, the keys on the base (→ page 3) or by remote operation (from another telephone/mobile phone). You can record your own announcement message or advisory message via the handset.


### Answering machine mode

You can use the answering machine in two different modes.

- ◆ In *Answer & record* mode, the caller hears the announcement and can then leave a message.
- ◆ In *Answer only* mode, the caller hears your announcement but cannot leave a message.

### Operation via the handset

---


The handset loudspeaker activates **automatically** if you receive an acoustic prompt or message while operating the answering machine. You can switch it off with the speaker key .

### Activating/deactivating and setting the answering machine mode

---

You can choose between *Answer & record*, *Answer only* and *Alternating*. By using the *Alternating* setting you can activate the answer and record mode for a set period, outside this period the caller will hear the advisory message.

 →  → Activation (✓ = on)

 Press the display key.

- ▶ Change multiple line input:

Activation:

Select *On* or *Off* to activate/deactivate the answering machine.

 Mode:

*Answer & record*, *Answer only* or select *Alternating*.


If the *Alternating* mode is selected:


Record from:

Enter hours/minutes for the start of the period in 4-digit format.  
(The time **must** be set on the phone beforehand.)

Record until:

Enter hours/minutes for the end of the period in 4-digit format.

 Press the display key.

When you switch the answering machine on, the remaining memory time is announced. If the time has not yet been set an appropriate announcement is made (Set time → page 15). The  icon appears in the display. The LED display lights up on the base (→ page 3).


The phone is supplied with pre-recorded announcements for answer and record mode and for advisory only mode. If a personal announcement has not been recorded, the relevant pre-recorded announcement is used.

If the messages memory is full and *Activation: On* has been selected, saving is interrupted and you will receive an instruction to delete old messages.



## Recording a personal announcement/ advisory message

---


 →  → Announcements  
→ Rec. Announcement / Rec. Advisory Msg.

**OK** Press the display key to start the recording.

You hear the ready tone (short tone).

▶ Now speak your announcement (at least 3 seconds).

**End** Press the display key to end the recording.

Cancel recording with  or **Back**.  
Restart the recording with **OK**.


After recording, the announcement is played back for you to check. You can re-record the announcement with **New**.

Please note:

- ◆ Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.
- ◆ If you cancel the recording, the pre-recorded announcement will be used again.
- ◆ If the answering machine's memory is full, it will switch to *Answer only* mode.
  - ▶ Delete old messages and the answering machine will automatically switch back to *Answer & record* mode. Repeat recording if required.

## Playing back announcements/ advisory messages

---

 →  → Announcements  
→ Play Announcement / Play Advisory Msg.

If you have not recorded a personal announcement, the relevant pre-recorded announcement is played.

Record a new announcement while playing back the announcement:

**New** Press the display key.

If the answering machine's memory is full, it will switch to *Answer only* mode.

- ▶ Delete old messages and the answering machine will automatically switch back to *Answer & record* mode. Repeat recording if required.

## Deleting announcements/ advisory messages

---

 →  → Announcements  
→ Del. Announcement / Del. Advisory Msg.

**Yes** Press the display key to confirm the prompt.

Once you have deleted your announcement, the relevant pre-recorded announcement will be used again.

## Playing back messages


---


The date and time of each message is logged (provided this has been set, → page 15) and displayed during the playback. If Calling Line Identification is activated, the caller's number is displayed. If the caller's number is saved in the directory, their name is displayed.

### Playing back new messages

New messages that have not yet been heard are indicated in the display with a symbol and number:



The  key on the handset and the display on the base will flash. The number of new messages is shown on the base.

 Press the message key.

Answer. Mach.:

Select and press **OK**.

If there are new messages, playback then begins with the first new message. After the last new message you will hear the end tone and an announcement about how much recording time remains.

If the message has been saved with the date and time, you will hear an appropriate announcement before playback begins.



### Playing back old messages

You can listen to old messages if there are no more new messages. Begin playback as described under "Playing back new messages".

After the entry time and date have been played back (after approx. 3 seconds) a new message assumes the status "old".

### Stopping and controlling playback



During message playback:

 Pause playback. Press  again to resume.

or



**Options** Open menu.

Pause Select and press **OK**.  
To continue select Continue and press **OK**.

 or 

Go to the start of the current message.

**Press twice** to go back to the previous message.

 or 

Skip to next message.

**Press twice** to skip to the next but one message.

If playback is interrupted for over a minute, the answering machine returns to idle status.

### Marking a message as "new"

A previously played back "old" message is displayed as a "new" message again.

#### During message playback:

 Press the star key.

Or:


**Options** Open menu.

Mark as New

Select and press **OK**.

An announcement informs you of the message's new status.

Playback of the current message is cancelled. Playback of next message starts, if applicable.

The  key on the handset flashes.

### Copying the phone number of a message to the directory

During playback or pause:

**Options** → Copy to Directory

▶ Complete the entry → page 34.

### Deleting messages

---

You can either delete all old messages together or individually.

#### Deleting all old messages

During playback or pause:

**Options** → Delete Old List

**OK** Press the display key to confirm the prompt.

**Yes** Press the display key to confirm the prompt.

#### Deleting individual old messages

During playback or pause:

**Delete** Press the display key.

### Picking up a call from the answering machine

---


You can pick up a call while the answering machine is recording or is being operated via remote operation:

 / **Accept**

Press the talk or display key.

Recording stops and you can speak to the caller.

If 2 seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message.

The  key on the handset flashes.

You can answer the call even if it is not signalled on the handset.

## Diverting an external call to the answering machine

---

You can divert an incoming external call to the answering machine even if it is deactivated.

**Precondition:** Sufficient memory space is available on the answering machine.

An external call is signalled on the handset:

→  Select display key.

The answering machine immediately starts in recording mode and records the call. The set time for ring delay (→ page 50) is ignored.

## Activating/deactivating two-way record

---

You can record an **external** call with the answering machine.

▶ Inform the caller that the call is being recorded.

**Options** Open menu.

Two-way Record

Select and press **OK**.

Two-way record is indicated on the display by an advisory text and is added to the answering machine list as a new message.

**End** Press the display key to stop two-way record.



The maximum recording time is dependent on the memory available on the answering machine. If the memory is full you will hear an end tone, the recording is aborted, and the call recorded up to that point is listed in the answering machine list as a new message.

## Activating/deactivating call screening

---

While a message is recording, you can screen calls via the loudspeaker of the base and registered handsets.

### Permanently activating/deactivating call screening

 →  → Call Screening  
→ Handset / Base (☑ = on)

**Change** Select display key to activate/deactivate the function.

Call screening can be simultaneously activated on the base and handset.

### Deactivating call screening for the current recording

You can deactivate the function on the handset during the recording.

**Silence** Press the display key.

## Setting the recording parameters

---

The answering machine has already been preset at the factory. Individual settings can be adjusted using the handset.

 →  → Recordings

▶ Change multiple line input:

Length:

Maximum recording time 1 min.,  
Select 2 min., 3 min. or Maximum.

Quality:

Select recording quality Long Play or High. If the quality is higher, the maximum recording time is reduced.

Ring Delay:

Select when the answering machine should accept a call: Immediately, after 10 sec., 18 sec., 30 sec. or Automatic.

**Save** Press the display key.

## Information about call acceptance

In **Automatic** mode, the following applies for ring delay:


- ◆ If there are no new messages, the answering machine accepts a call after 18 seconds.
- ◆ If new messages are present, the answering machine accepts a call after 10 seconds.



When operating remotely (→ page 51) you can tell after approx. 15 seconds that there are no new messages (otherwise the answering machine would already have accepted your call). There will be no call charges if you hang up now.

### Please note:


You can configure your telephone so that the **first** ring is **suppressed** on all calls (→ page 45). This means that the time selected for call acceptance predetermines how long the caller must wait before the answering machine answers the call.


## Resetting fast access for the answering machine using key 1

By default, key  has been assigned for fast access to the integrated answering machine. However, if you have set the network mailbox for fast access (→ page 53), you can reset this setting.

 →  → Set Key 1

### Answering Machine

Select and press .

Once you have selected the answering machine, press and **hold** key . You will be connected directly.

The setting for fast access applies to all registered handsets.

## Operating when on the move (remote operation)

You can check and activate your answering machine from any other telephone (hotel, pay phone etc.), or initiate ring-back from the answering machine with an SMS.


### Preconditions:

- ◆ You have set a system PIN other than 0000 (→ page 66).
- ◆ The phone you are using for remote operation has tone dialling (DTMF), i.e. you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from a retailer).

## Calling the answering machine and playing back messages



Dial your own number.

When you hear your announcement, press  and enter the system PIN.

You will be informed whether any new messages have been recorded. The messages are now played back. You can now operate the answering machine with the keypad.

The following keys are used for operation:



To return to the start of the current message.

Press twice to go back to the previous message.



Stop playback. Press again to resume.



Go to the next message.



Delete current message.

## Activating the answering machine

---

- ▶ Phone home and let the phone ring until you hear: "Please enter PIN".



Enter system PIN.

Your answering machine is activated. It tells you how much memory time is left.

The messages are now played back.

The answering machine cannot be deactivated remotely.

## Initiating ringback from the answering machine with SMS and listening to messages

---

**Precondition:** You must have stored a notification number ( → page 43).

You can use the telephone (mobile phone or any other device with SMS functionality) for which you have stored the notification number in your phone to send an SMS to your answering machine when you are away from home. It will then call you back. Message playback begins when you accept the call and press any digit key.

The SMS must contain the following:

\*<System PIN>\*<Ringback number>\*

The ringback number is optional.

Examples:

\*4711\* or \*4711\*089123456\*

If a ringback number is entered, it is dialled; otherwise the notification number is dialled.

You can now operate the answering machine via the keypad, as described in the previous sections.

## Using the network mailbox

---

The network mailbox is your network provider's answering machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

### Configuring fast access for the network mailbox

---

With fast access, you can dial the network mailbox or the integrated answering machine (Gigaset C595 only) directly.

Gigaset C590: Fast access is preset for the network mailbox. You only need to enter the number of the network mailbox.

Gigaset C595: The integrated answering machine is preset for fast access. You can configure the network mailbox instead. Ask your network provider about this.

### Configuring fast access for the network mailbox and entering the network mailbox number

Gigaset C590:

 →  → Set Key 1

Network Mailbox

Select and press **Select**  
(● = selected).

Gigaset C595:

 →  → Network Mailbox

Continue with:



Enter the number for the network mailbox.

**Save**

Press the display key.


The setting for fast access applies to all Gigaset C59H handsets.

### Calling the network mailbox



Press and **hold**. You are connected directly to the network mailbox.



Press speaker key  if required. You will hear the network mailbox announcement.

### Viewing the network mailbox message

---

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number will be displayed. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number will be saved in the missed call list and the message key flashes (→ page 36).

# ECO DECT

You are helping to protect the environment with your Gigaset CS590/CS595.

## Reduced energy consumption

Your telephone has a power-saving adapter plug and uses less power.

## Reducing radiation

The radiation from your telephone is reduced **automatically**:

- ◆ The handset's transmission power is reduced depending on the distance to the base.
- ◆ The transmission power on the base is reduced to virtually zero when only one handset is registered and the handset is in the base.


You can reduce the radiation from the handset and base even more by using **Eco Mode** or **Eco Mode+**:

- ◆ **Eco Mode**  
80% transmission power reduction of the base in standby and talk mode.
- ◆ **Eco Mode+**  
100% transmission power deactivation of the base and handset when a call is not being made or received.






**Eco Mode / Eco Mode+** can be activated and deactivated independently of each other and also work on multiple handsets. The handset does not have to be in the base.

## Activating/deactivating the Eco Mode / Eco Mode+


 →  → Eco Mode  
→ Eco Mode / Eco Mode+

**Change** Press the display key  
( = on).

## Status displays

Display icon	
 (flashes)	Signal strength: – good to poor – no signal
 <b>white</b>	<b>Eco Mode</b> deactivated
 <b>green</b>	<b>Eco Mode</b> enabled
 <b>white</b>	<b>Eco Mode+</b> enabled (displayed instead of the reception strength icon when in idle status)
 <b>green</b>	<b>Eco Mode and Eco Mode+</b> activated

### Please note

- ◆ With **Eco Mode+** enabled, press and **hold** the talk key  to check that the base can be reached. You will hear the ringtone if the base can be reached.
- ◆ When **Eco Mode+** is enabled:
  - call setup will be delayed by approx. 2 seconds.
  - handset standby time will be reduced by approx. 50%.
- ◆ Registering handsets that do not support **Eco Mode+** will cause the mode to be deactivated on the base and all other handsets.
- ◆ Activating **Eco Mode** reduces the range of the base.
- ◆ **Eco Mode / Eco Mode+** and repeater support ( → page 65) cancel each other out, i.e. if you use a repeater you cannot use **Eco Mode** and **Eco Mode+**.

## Setting the alarm clock

**Precondition:** The date and time have already been set (→ page 15).

### Activating/deactivating the alarm clock and setting the wake-up time

 →  → Alarm Clock

▶ Change multiple line input:

Activation:

Select On or Off.

Time:

Enter the wake-up time in 4-digit format.

Volume:


Set the volume (1–6).

Melody:

Select melody.

**Save**

Press the display key.

In idle status, the  icon and wake-up time are displayed.

A wake-up call is signalled on the display and with the selected ringtone (→ page 2). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is only signalled by a short tone.

### Deactivating the wake-up call/ repeating after a pause (snooze mode)

**Precondition:** A wake-up call is sounding.

**OFF**

Press the display key. The wake-up call is deactivated.

or

**Snooze**

Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

## Using several handsets

### Registering handsets

You can register up to six handsets to your base.

A Gigaset C59H handset can be registered on up to four bases.

### Manual registration of the Gigaset C59H on Gigaset C590/C595

You must activate manual registration of the handset on both the handset and the base.

When the registration process has completed successfully, the handset returns to idle status. The handset's internal number is shown in the display e.g. INT 1. If not, repeat the procedure.

#### On the handset

The handset must not be registered to a base.

**Register**

Press the display key.

The handset is already registered to a base:

 →  → Registration  
→ Register Handset

If the handset is already registered on four bases:



Select base, e.g. Base 3 and press **OK**.



If required, enter the system PIN for the base and press **OK**.

A message displays that a search for a base that is ready for registration is being carried out.

#### On the base

Within 60 seconds press and **hold** the registration/paging key on the base (→ page 3) (approx. 3 seconds).



## Registering other handsets

---

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

### On the handset

- ▶ Start to register the handset as described in its user guide.

### On the base


Press and **hold** the registration/paging key on the base (→ page 3) (approx. 3 sec.).

## De-registering handsets

---

You can de-register any other registered handset from any registered Gigaset C59H handset.

 →  → Registration  
→ De-reg. Handset

 Select the internal subscriber you wish to deregister and press **OK**.  
(The handset you are currently using is highlighted with <).

 Enter the current system PIN and press **Save**.

**Yes** Press the display key.


## Locating a handset ("Paging")

---

You can locate your handset using the base.

- ▶ **Briefly** press the registration/paging key on the base (→ page 3).
- ▶ All handsets will ring simultaneously ("paging"), even if the ringtones are deactivated.




### Ending paging

- ▶ **Briefly** press the registration/paging key on the base or press the talk key  on the handset.

## Changing the base

---

If your handset is registered to more than one base, you can set it to a particular base or to the base that has the best reception (**Best Base**).



 →  → Registration → Select Base  
 Select one of the registered bases or Best Base and press **Select**.

## Making internal calls




---

Internal calls to other handsets registered on the same base are free.



### Calling a specific handset

 Initiate internal call.  
 Enter the number of the handset.

Or:

 Initiate internal call.  
 Select handset.  
 Press the talk key.

### Calling all handsets ("group call")

 Initiate internal call.  
 Press the star key.


or

Call All Select menu option and

 Press the talk key.



All handsets are called.

### Ending a call

 Press the end call key.


## Transferring a call to another handset

You can transfer an external call to another handset (connect).

-  Open the list of handsets. The external participant hears hold music if activated (→ page 65).
-  Select a handset or Call All and press **OK**.


When the internal participant answers:

- ▶ If necessary, announce the external call.

-  Press the end call key.

The external call is transferred to the other handset.

If the internal participant does **not** answer or the line is busy, press the display key **End** to return to the external call.



When transferring a call you can also press the end call key  before the internal participant answers.

Then, if the internal participant does not answer or the line is busy, the call will automatically return to you.

## Internal consultation/conference calls

When you are conducting an **external** call, you can call an **internal** participant at the same time for consultation or hold a conference call between all 3 participants.

You are conducting an **external** call:

-  Open the list of handsets. The external participant hears hold music if activated (→ page 65).
-  Select handset and press **OK**. You are connected to the internal participant.


either:


- End** Press the display key. You are reconnected with the external participant.

Or:

- Conference** Press the display key. All 3 participants are connected with each other.

## Ending a conference call

-  Press the end call key.

If an **internal** participant presses the end call key , the other handset remains connected to the external participant.

## Accepting/rejecting call waiting

If you receive an **external** call during an **internal** call, you will hear the call waiting tone (short tone). The caller's number will appear in the display if Calling Line Identification is enabled.

### Ending an internal call, accepting an external call

- Accept** Press the display key.

The internal call is **ended**. You are connected to the external caller.

### Rejecting the external call

- Reject** Press the display key.

The call waiting tone is turned off. You remain connected with the internal participant. The ringtone can still be heard on other registered handsets.

## Listening in to an external call

---


**Precondition:** The Listening In function must be activated.

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation. All participants are made aware of the "listening in" by a signal tone.

### Activating/deactivating listening in

---


 →  → Telephony → Listening In

Press **Change** to activate/deactivate the function ( = on).

### Internal listening in


---

The line is engaged with an external call. Your screen will display information to that effect. You want to listen in to the external call.


 Press and **hold** the talk key.

You can listen in to the call. All participants hear a signal tone. During this time, this handset displays the **Conference** message and it is not possible to dial another number from this handset.

### Ending listening in

 Press the end call key.



All participants hear a signal tone.

If the **first** internal participant presses the end call key , the handset that has "listened in" remains connected to the external participant.

## Changing the name of a handset

---


The names "INT 1", "INT 2" etc. are assigned automatically on registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset list.

 Open the list of handsets. Your own handset is indicated by .

 Select handset.

**Options** Open menu.

Rename



 Enter name.

**Save** Press the display key.

## Changing a handset's internal number

---


A handset is **automatically** assigned the lowest free number when it is registered. If all slots are occupied, number 6 is overwritten if this handset is in idle status. You can change the internal number of all registered handsets (1–6).

 Open the list of handsets. Your own handset is indicated by .

**Options** Open menu.

Assign Handset No.

Select and press **OK**.

 Select number. Only numbers that have not been assigned are displayed.

**Save** Press the display key to save the input.

## Using a handset as a room monitor

---

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number. All of the handset keys are deactivated, with the exception of the display keys.

The room monitor call to an external number is terminated after approximately 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base). When the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringtone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor is suspended for the duration of the call, but the function **remains** activated.



If you deactivate then reactivate the handset, the room monitor remains activated.

### Warning!

- ◆ You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an external number.
- ◆ When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the base/charging cradle. This ensures that the battery does not run down.
- ◆ Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- ◆ The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

## Activating the room monitor and entering the destination number

---

 →  → Room Monitor


- ▶ Change multiple line input:



Activation:

Select On to activate.


Alarm to:

Select Internal or External.

**External number:** Select the number from the directory (press display key ) or enter it directly.

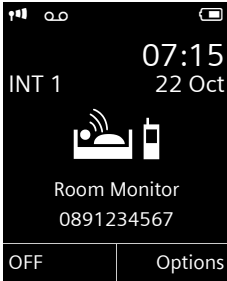
**Internal number:** Select display key  → Select handset or Call All if you want to call all registered handsets → .

In idle status, the destination number or the internal destination number is displayed.

- ▶ Press  to save the settings.

## Handset settings

When the room monitor function is activated, the idle display looks as shown below:



### Changing the set destination number

→ → Room Monitor

- ▶ Enter and save number as described in "Activating the room monitor and entering the destination number" (→ page 59).

### Cancel/deactivate room monitor

Press the end call key to cancel the call when the **room monitor is activated**.

**In the idle status** press the display key **OFF** to deactivate the room monitor mode.

### Deactivating the room monitor remotely

**Preconditions:** The phone must support tone dialling and the room monitor should be set for an external destination number.

- ▶ Accept the call from the room monitor and press keys .

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. no ringtone) on the handset will remain activated until you press the display key **OFF** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save with **Save** (→ page 59).

## Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

### Quick access to numbers and functions

You can assign a **number from the directory** to each of the **digit keys** and to .

The left and right **display keys** have a **function** pre-selected by default. You can change the assignment (→ page 61).

The number is then dialled or the function started by simply pressing a key.

### Assigning digit keys

**Precondition:** You have not yet assigned a number to the digit key.

- ▶ Press and **hold** the digit key.  
**or**  
Press the digit key **briefly** and press the **QuickDial** display key.

The directory is opened.

- ▶ Select an entry and press **OK**.

The entry is saved on the appropriate digit key.

#### Please note

If you delete or edit the entry in the directory at a later date, this will not affect the assignment to the number key.

## Dialling a number/changing assignment

---

**Precondition:** The digit key already has a number assigned to it.

When the handset is in idle status

- ▶ Press and **hold** the digit key.  
The number is dialled immediately.

or

- ▶ **Briefly** press the digit key:  
Press the display key with number/ name (abbreviated if necessary) to dial the number **or**  
Press the **Change** display key to change the digit key assignment or to delete the assignment.

## Changing display key assignments

---

- ▶ Press and **hold** the left or right display key.

The list of possible key assignments is opened. The following can be selected:

### Room Monitor

Assign menu for setting and activating the room monitor to a key (→ page 59).

### Alarm Clock

Assign menu for setting and activating the alarm clock to a key (→ page 55).

### Redial

Display the redial list.

### More Functions...

More features are available:

#### Call Lists

Display call lists (→ page 36).

#### INT

Internal calls (→ page 56).

#### SMS

Assign menu for SMS functions to a key (→ page 39).

#### Withhold Number



Suppress Calling Line Identification for the next call (→ page 30).


- ▶ Select an entry and press **OK**.

## Changing the display language

---

You can view the display texts in different languages.

 →  → Language


The current language is indicated by a .

 Select language and press **Select**.

If you accidentally choose a language you do not understand:

 →  →  →  → 

Press keys in sequence and confirm by selecting **OK**.

 Select the correct language and press the **right display key**.

## Setting the display


---

### Setting the screensaver

---

You can set a picture or the time to be displayed as a screensaver when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screensaver is not displayed in certain situations, e.g. during a call or if the handset is deregistered.

If a screensaver is activated, the Screensaver menu option is marked with .

 →  → Display → Screensaver

The current setting is displayed.

- ▶ Change multiple line input:


Activation:

Select On (screensaver is displayed) or Off (no screensaver).

Selection :


Select screensaver **or**

**View** Press the display key.  
The active screensaver is displayed.

 Select screensaver and press **OK**.

## Handset settings

**Save** Press the display key.

When the screensaver conceals the display, **briefly** press  to show the idle display.

### Setting large font


You can increase the front size of print and symbols in selection fields, lists and in the directory to improve readability. After doing this, only one entry instead of multiple entries can be shown at the same time on each display and names are shortened where necessary.

 →  → Display → Large Font

**Change** Press display key (☑ = on).

### Setting the colour scheme

You can set the display to have a dark or light background.

 →  → Display → Colour Schemes

Select Colour Scheme 1 or Colour Scheme 2 and press **OK**.

### Setting the display backlight

Depending on whether or not the handset is in the base/charging cradle, you can activate or deactivate the lighting. If it is activated, the display is permanently dimmed.

 →  → Display → Backlight

The current setting is displayed.

► Change multiple line input:

In Charger

Select On or Off.

Out of Charger


Select On or Off.

#### Please note

With the On setting, the standby time of the handset can be significantly reduced.

**Save** Press the display key.

## Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the base/charging cradle without having to press the talk key .


 →  → Telephony → Auto Answer


**Change** Press display key (☑ = on).


### Changing the speaker/earpiece volume


You can set the loudspeaker volume for handsfree talking and the earpiece volume to five different levels.

In idle status:

 Call up the Handset Volume menu.


 Set the earpiece volume.

 Scroll to the Speaker: line.

 Set the speaker volume.


**Save** Press the display key if necessary to save the setting permanently.

Setting the volume during a call:

 Press the control key.

 Select volume.

The setting will automatically be saved after approximately 3 seconds, if not then press the display key **Save**.

If  is assigned to another function, e.g. call swap (→ page 31):

**Options** Open menu.

**Volume** Select and press **OK**.



Configure setting (see above).

#### Please note

You can also set the call volume using the menu (→ page 27).

## Changing ringtones

---

- ◆ **Volume:**  
You can choose between five volumes (1–5; e.g. volume 3 = ) and the "crescendo" ringtone (6; volume increases with each ring = .
- ◆ **Ringtones:**  
You can select a ringtone from a list of pre-loaded ringtones.



You can set different ringtones for the following functions:




- ◆ Int. Calls
- ◆ Extern. Calls

## Setting volume/melody

---

In idle status:

 →  → Audio Settings  
→ Ringtones(Handset)  
→ Volume / Melodies



-  Set volume/melody for internal calls and anniversaries.
  -  Scroll to the next line.
  -  Set volume/melody for external calls.
- Save** Press the display key to save the setting.

## Switching on/off the ringtone for anonymous calls

---

You can set your telephone not to ring if a caller withholds their number. The call will only be signalled in the display.

In idle status:

 →  → Audio Settings  
→ Ringtones(Handset)  
→ Anon. Calls Silent



Press **Change** to activate/deactivate the function ( = on).

## Activating/deactivating the ringtone


---

You can deactivate the ringtone on your handset before you answer a call or when the handset is in idle status; the ringtone can be deactivated permanently or just for the current call. The ringtone cannot be re-activated while an external call is in progress.

### Deactivating the ringtone permanently

 Press and **hold** the star key. The  icon appears in the display.

### Reactivating the ringtone

 Press and **hold** the star key.


### Deactivating the ringtone for the current call


**Silence** Press the display key.

## Activating/deactivating the alert tone

---

In place of the ringtone you can activate an alert tone. When you receive a call, you will hear a **short tone** ("Beep") instead of the ringtone.

 Press and **hold** the star key and **within 3 seconds:**

**Beep** Press the display key. A call will now be signalled by **one** short alert tone. The  icon appears in the display.





## Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:

- ◆ **Key click:** every key press is confirmed.
- ◆ **Acknowledge tones:**
  - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when an SMS or a new entry arrives in the answering machine list or call list
  - **Error tone** (descending tone sequence): when you make an incorrect entry
  - **Menu end tone:** when scrolling to the end of a menu
- ◆ **Battery low beep:** the battery requires charging.

In idle status:

 →  → Audio Settings  
→ Advisory Tones

▶ Change multiple line input:

Key Tones:


Select On or Off.

Confirmation:

Select On or Off.

Battery:

Select On or Off.

 Press the display key.

### Please note

You can also set the call volume, the ringtones and the advisory tones via the menu (→ page 27).

## Setting your own area code

In order to transfer phone numbers (e.g. in vCards), it is essential that your area code (international and local area code) is saved on the phone.


Some of these numbers are already pre-set.


 →  → Telephony → Area Codes


Check that the (pre)set area code is correct.


▶ Change multiple line input:

 Select/change input field.


 Navigate in the input field.

 If necessary, delete number: press the display key.

 Enter number.

 Press the display key.

Example:

Area Codes	
International code:	00 - 44
Local area code:	0 - 1
	Save


## Restoring the handset default settings

You can reset individual settings and changes that you have made.

The following settings are **not** affected by a reset

- ◆ Registration to the base
- ◆ Date and time
- ◆ Directory entries, the call lists, the SMS lists

 →  → System → Handset Reset

 Press the display key.

## Base settings



---

The base settings are carried out using a registered Gigaset C59H handset.

### Changing the base ringtones

---



◆ Volume:

You can choose between five volumes (1–5; e.g. volume 3 = ) and the "crescendo" ringtone (6; volume increases with each ring = .


◆ Ringtones:


You can select a ringtone from a list of pre-loaded ringtones.

In idle status:


 →  → Audio Settings  
→ Ringtones (Base)

▶ Change multiple line input:

 Set volume.


 Scroll to the next line.

 Set melody.

 Save Press the display key to save the setting.

### Activating/deactivating music on hold

---

 →  → Audio Settings  
→ Music on hold

Press **Change** to activate or deactivate the music on hold ( = on).

### Repeater support

---

With a repeater you can increase the range and signal strength of your base. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

**Precondition:** A repeater is registered.

 →  → System → Repeater Mode

Press **Change** to deactivate repeater mode ( = on).

#### — Please note —

**Eco Mode / Eco Mode+** (→ page 54) and repeater support cancel each other out, i.e. if you use a repeater you cannot use **Eco Mode** and **Eco Mode+**.

## Protecting against unauthorised access

---

Protect the system settings of the base with a PIN known only to yourself. The system PIN must be entered when, for example, registering/deregistering a handset to/from the base or when restoring the default settings.



### Changing the system PIN



---

You can change the 4-digit system PIN set on the base (default setting: **0000**) to a 4-digit PIN known only by you.

Gigaset C595: Setting a system PIN facilitates remote operation of the answering machine → page 51.

 →  → System → System PIN

  Enter the current system PIN and press **OK**.

  Enter your new system PIN and press **OK**.

### Resetting the system PIN

---

If you have forgotten your system PIN you can reset the base to the original code **0000**:

Disconnect the power cord from the base. Hold down the registration/paging key on the base while reconnecting the power cable to the base. Press and hold the key for at least five seconds.

The base has now been reset and the system PIN **0000** set.

#### Please note

All handsets are deregistered and must be re-registered. All settings are restored to the factory settings.



## Restoring the base to the factory settings

---

When the settings are restored

- ◆ date and time will be retained
- ◆ handsets are still registered
- ◆ **Eco Mode** is switched on and **Eco Mode+** is switched off
- ◆ the system PIN is not reset

 →  → System → Base Reset

  Enter the system PIN and press **OK**.


**Yes** Press the display key.

## Connecting the base to the PABX

The following settings are only necessary if your PABX requires them; see the PABX user guide.

You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.



### Dialling modes and recall



The current setting is indicated by .

#### Changing the dialling mode

The following dialling modes can be selected:



- ◆ Tone dialling (DTMF)
- ◆ Dial pulsing (DP)



 →  → Telephony → Dialling Mode

 Select dialling mode and press **Select** ( = selected).

#### Setting recall

Your phone is preset at the factory for operation on the main connection. For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX.


 →  → Telephony → Recall

 Select recall and press **Select** ( = set value).  
Possible values are:  
80 ms, 100 ms, 120 ms,  
180 ms, 250 ms, 300 ms,  
400 ms, 600 ms, 800 ms.

### Saving an access code (outside line code)

**Precondition:** You may have to enter an access code for external calls in your PABX, e.g. "0".

 →  → Telephony → Access Code

 Enter or change access code, max. 3 digits.

**Save** Press the display key.


If an access code has been saved:


- ◆ The access code is prefixed automatically when you select from the following lists: numbers of the SMS centres, calls list or answering machine list.
- ◆ The access code must be entered when dialling manually and when manually entering directory, emergency/shortcut numbers and SMS centre numbers.
- ◆ If you copy the recipient's number from the directory when sending an SMS, you have to delete the access code.
- ◆ An existing access code is deleted using **<C**.










## Setting pauses

---


### Changing the pause after line seizure

You can change the length of the pause that is inserted between pressing the talk key  and sending the number.

 Open the main menu.

   0     1  


Press keys.










 Enter digit for the pause length (1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec.) and press **OK**.

### Change pause after recall key


---

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).

 Open the main menu.

   0     1  


Press keys.










 Enter a digit for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press **OK**.

### Changing a dialling pause (pause after access code)


---


**Precondition:** You have saved an access code (→ page 67).

 Open the main menu.

   0     1  

Press keys.

 Enter number for the length of the pause (1 = 1 sec.; 2 = 2 sec.; 3 = 3 sec.; 4 = 6 sec.) and press **OK**.

**To insert a dialling pause:** press and hold  for 2 seconds. A P appears in the display.

## Temporarily switching to tone dialling (DTMF)

---

If your PABX still operates with dial pulsing (DP), but you need tone dialling for a connection (e.g. to listen to the network mailbox) you must switch to tone dialling for the call.

**Precondition:** You are conducting a call or have already dialled an external number.

 Press the star key.

After the call is ended, dial pulsing is automatically activated again.

## Service (Customer Care)

We offer you support that is fast and tailored to your specific needs!

Our Online Support on the Internet can be reached any time from anywhere.

[www.gigaset.com/customercare](http://www.gigaset.com/customercare)

It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download.

You will also find frequently asked questions and answers in the appendix of this user guide.

For personal advice on our range of products and assistance with repairs or guarantee/warranty claims you can contact us on:

UK helpdesk: 0 84 53 67 08 12.

Please have your proof of purchase ready when calling with regard to guarantee/warranty claims.


Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

## Questions and answers

If you have any questions about the use of your phone, you can contact us 24/7 at [www.gigaset.com/customercare](http://www.gigaset.com/customercare).

The table below contains a list of common problems and possible solutions.

### The display is blank.

1. The handset is not switched on.
  - ▶ Press and **hold** the end call key .
2. The battery is flat.
  - ▶ Charge the battery or replace it (→ page 12).

### Not all menu options are displayed.

The menu display is reduced (**Standard mode**).

- ▶ Activate extended menu display (**Expert mode**) (→ page 25).

### No Base flashes on the display.

1. The handset is outside the range of the base.
  - ▶ Move the handset closer to the base.
2. The range of the base is reduced because eco mode is activated.
  - ▶ Deactivate eco mode (→ page 54) or reduce the distance between the handset and the base.
3. The base is not switched on.
  - ▶ Check the mains adapter of the base (→ page 10).

### Please register handset flashes on the display.

Handset has not been registered with the base or has been deregistered.

- ▶ Register the handset (→ page 55).

### Handset does not ring.

1. The ringtone is deactivated.
  - ▶ Activate the ringtone (→ page 63).
2. Call divert set for "All Calls".
  - ▶ Deactivate call divert (→ page 31).
3. The telephone only rings when the phone number is transferred.
  - ▶ Activate the ringtone for anonymous calls (→ page 63).

**You cannot hear a ringtone/dialling tone from the fixed line network.**

The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.

- ▶ Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer (→ page 10).

**Error tone sounds after system PIN prompt.**


You have entered the wrong system PIN.

- ▶ Reset the system PIN to 0000 (→ page 66).

**Forgotten the system PIN.**

- ▶ Reset the system PIN to 0000 (→ page 66).

**The other party cannot hear you.**

You have pressed the mute key . The handset is "muted".

- ▶ Activate the microphone again (→ page 29).

**The number of the caller is not displayed despite CLIP.**

Calling Line Identification is not enabled.

- ▶ **The caller** should ask the network provider to enable Calling Line Identification (CLI).

**You hear an error tone when keying an input (a descending tone sequence).**

Action has failed/invalid input.

- ▶ Repeat the operation.  
Watch the display and refer to the user guide if necessary.

**You cannot listen to messages on the network mailbox.**

Your PABX is set for dial pulsing.

- ▶ Set your PABX to tone dialling.

**Gigaset C595 only:**

**No time is specified for a message in the call list.**

Date and time have not been set.

- ▶ Set the date/time (→ page 15).

**The answering machine announces "PIN is incorrect" during remote operation.**

1. You have entered the wrong system PIN.
  - ▶ Enter the system PIN again.
2. The system PIN is still set to 0000.
  - ▶ Change the system PIN (→ page 66).

**The answering machine is not recording any messages/has switched to announce only.**

Its memory is full.

- ▶ Delete old messages.
- ▶ Play back new messages and delete.

**Exclusion of liability**

Some displays may contain pixels (picture elements), which remain activated or deactivated. As a pixel is made up of three sub-pixels (red, green, blue), it is possible that pixel colours may vary.

This is completely normal and does not indicate an error.

**Authorisation**


This device is intended for analogue phone lines in the UK.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs).



## Guarantee Certificate

### United Kingdom

---

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United King-

dom the Guarantee is issued by: Gigaset Communications UK Limited, Faraday House, Sir William Siemens Square, Frimley, Camberley, Surrey, GU16 8QD.

- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.



## Environment

---

### Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at [www.gigaset.com](http://www.gigaset.com).

### Environmental management system

---



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001.

**ISO 14001 (Environment):** certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

### Ecological energy consumption

---

The use of ECO DECT (→ page 54) saves energy and makes an active contribution towards protecting the environment.

### Disposal

---

Battery packs should not be disposed of in general household waste. Observe the local waste disposal regulations, which you can find out about by contacting your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

## Appendix

---

### Care

---

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never** use a dry cloth. This can cause static.

### Contact with liquid

---

If the handset has come into contact with liquid:

1. **Switch off the handset and remove the battery pack immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

### Specifications

---

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1,2 V

Capacity: 550 - 1000 mAh

We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life:

- ◆ Yuasa AAA 800 mAh

The device is supplied with two approved batteries.

### Handset operating times/charging times

---

The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times and apply when the display backlight is switched off).

	Capacity (mAh) approx.			
	550	700	800	1000
Standby time (hours)	160	185	210	260
Talktime (hours)	10	12	13	17
Operating time for 1.5 hrs of calls per day (hours)	85	100	115	140
Charging time in base (hours)	7,5	8,5	10	12
Charging time in charging cradle (hours)	6,5	7,5	8,5	10,5

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated: [www.gigaset.com/customer-care](http://www.gigaset.com/customer-care)

### Base power consumption

---

In standby mode:

Gigaset C590: approx. 1,1 watt

Gigaset C595: approx. 1,2 watt

During the call:

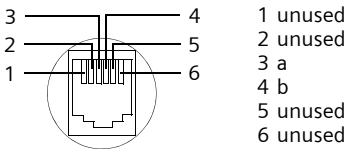
Gigaset C590: approx. 1,0 watt

Gigaset C595: approx. 1,1 watt

## General specifications

DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Base power supply	230 V ~/50 Hz
Environmental conditions in operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/ DP (dial pulsing)

## Pin connections on the telephone jack



## Writing and editing text

The following rules apply when writing text:

- ◆ Each key between **[0+]** and **[WXYZ9]** is assigned several letters and characters.
- ◆ Control the cursor with **[←]**, **[→]**, **[↶]**  
**[↷]** Press and **hold** **[↶]** or **[↷]** to move the cursor **word by word**.
- ◆ Characters are inserted at the cursor position.
- ◆ Press the star key **[\* a]** to display the table of special characters.

Select the required character and press the display key **[Insert]** to insert the character at the cursor position.

- ◆ Press and **hold** **[0+]** to **[WXYZ9]** to insert digits.
- ◆ Press **[<C]** display key to delete the **characters** to the left of the cursor. Press and **hold** to delete the **word** to the left of the cursor.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

## Writing an SMS/names

Press the relevant key several times to enter letters/characters.

If you press and **hold** a key, the corresponding digit is inserted.

## Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
<b>[1 AD]</b>	<b>[ ]</b> 1)	<b>[ ]</b> 2)	1							
<b>[2 ABC]</b>	a	b	c	2	ä	á	à	â	ã	ç
<b>[DEF 3]</b>	d	e	f	3	ë	é	è	ê		
<b>[4 GHI]</b>	g	h	i	4	ï	í	ì	î		
<b>[5 JKL]</b>	j	k	l	5						
<b>[MNO 6]</b>	m	n	o	6	ö	ñ	ó	ò	ô	õ
<b>[7 PQRS]</b>	p	q	r	s	7	ß				
<b>[8 TUV]</b>	t	u	v	8	ü	ú	ù	û		
<b>[WXYZ 9]</b>	w	x	y	z	9	ÿ	ý	æ	ø	å
<b>[0+]</b>	.	,	?	!	0					

- 1) Space
- 2) Line break

## Setting upper/lower case or digits

Press the hash key **[↵ #]** **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key **[↵ #]** **before** entering the letter.

You can see in the display whether upper case, lower case or digits is selected.

## Accessories

---

### Gigaset handsets

Upgrade your Gigaset to a cordless PABX:

#### Gigaset C59H handset

- ◆ Illuminated graphic colour display (65k colours)
- ◆ Illuminated keypad
- ◆ Speaker mode
- ◆ Polyphonic ringtones
- ◆ Directory for around 150 entries
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Room monitor

[www.gigaset.com/gigasetc59h](http://www.gigaset.com/gigasetc59h)



#### Gigaset SL78H handset

- ◆ Illuminated graphic colour display (256k colours)
- ◆ Illuminated keypad
- ◆ Speaker mode
- ◆ Polyphonic ringtones
- ◆ Directory for around 500 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ PC interface e.g. for managing directory entries, ringtones and screensavers
- ◆ Bluetooth
- ◆ Room monitor

[www.gigaset.com/gigaset-sl78h](http://www.gigaset.com/gigaset-sl78h)



## Accessories

### Gigaset S67H/S68H handset

- ◆ Illuminated graphic colour display (65k colours)
- ◆ Illuminated keypad
- ◆ Speaker mode
- ◆ Polyphonic ringtones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Bluetooth (Gigaset S68H only)
- ◆ Room monitor

[www.gigaset.com/gigasetS67H](http://www.gigaset.com/gigasetS67H)



### Gigaset SL37H handset

- ◆ Illuminated graphic colour display (65k colours)
- ◆ Illuminated keypad
- ◆ Speaker mode
- ◆ Polyphonic ringtones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ PC interface e.g. for managing directory entries, ringtones and screensavers
- ◆ Headset socket
- ◆ Bluetooth
- ◆ Room monitor
- ◆ Walky-talky function

[www.gigaset.com/gigasetSL37H](http://www.gigaset.com/gigasetSL37H)



### Gigaset repeater

The Gigaset repeater can be used to increase the reception range of your Gigaset handset to the base.

[www.gigaset.com/gigasetrepeater](http://www.gigaset.com/gigasetrepeater)



### Gigaset HC450 – door intercom for cordless phones

- ◆ Use the intercom from your cordless phone – no need for a fixed home phone
- ◆ Intuitive user functions using the display keys (open door, switch on entry light)
- ◆ Simple to configure using the handset menu
- ◆ Forward to outside phone numbers (intercom feature)
- ◆ Simple to install and register with the Gigaset system
- ◆ Replaces existing doorbell key – no further cable is needed
- ◆ Supports the existing doorbell and standard door opener
- ◆ Configuration options for the second doorbell key (separate intercom call, activating entrance lighting, or function like first doorbell key)

[www.gigaset.com/GigasetHC450](http://www.gigaset.com/GigasetHC450)



All accessories and batteries are available from your phone retailer.

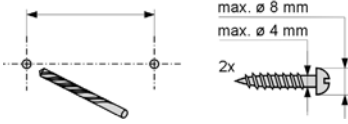


Only use original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.

## Mounting the base on the wall

---

C595: 64 mm  
C590: 43 mm



approx.  
2.5 mm



## Mounting the charging cradle on the wall

---

21 mm



approx. 2.5



# Index

---

## A

- Access code . . . . . 67
  - for a PABX . . . . . 67
- Access protection . . . . . 66
- Accessories . . . . . 75
- Acknowledge tones . . . . . 64
- Activating
  - advisory tones . . . . . 64
  - answering machine . . . . . 47
  - answering machine (remote operation) . . . . . 52
  - handset . . . . . 22
  - keypad lock . . . . . 22
  - listening in . . . . . 58
  - muting ringtone . . . . . 45
  - ring delay . . . . . 62
  - room monitor . . . . . 59
  - two-way record . . . . . 50
- Advisory tones . . . . . 64
- Alarm clock . . . . . 55
- Alert tone . . . . . 63
- Anniversary . . . . . 34
  - deactivating . . . . . 35
  - missed . . . . . 37
  - saving in directory . . . . . 34
- Announcement (answering machine) . . . . . 48
- Announcement mode (answering machine) . . . . . 47
- Anonymous calling . . . . . 30
- Answering machine . . . . . 47
  - activating/deactivating . . . . . 47
  - deleting messages . . . . . 49
  - list . . . . . 36
  - playing back messages . . . . . 48
  - recording announcement/announce only . . . . . 48
  - remote operation . . . . . 51
  - scrolling back . . . . . 49
  - scrolling forward . . . . . 49

- Answering machine, see also Network mailbox
- Area code
  - setting own area code . . . . . 64
- Assigning a number key . . . . . 60
- Authorisation . . . . . 70
- Auto answer . . . . . 28, 62
- Automatic network provider
  - preselection . . . . . 38

## B

- Base
  - changing . . . . . 56
  - connecting . . . . . 10
  - connecting to PABX . . . . . 67
  - restoring to factory settings . . . . . 66
  - set ringtone . . . . . 65
  - setting up . . . . . 10
  - settings . . . . . 65
  - system PIN . . . . . 66
- Battery
  - charging . . . . . 1, 2, 14
  - display . . . . . 1, 2
  - icon . . . . . 1, 2
  - inserting . . . . . 12
  - tone . . . . . 64
- Best base . . . . . 56
- Birthday, see Anniversary

## C

- Call
  - accepting . . . . . 28
  - connect participant . . . . . 58
  - diverting (connecting) . . . . . 57
  - ending . . . . . 28
  - external . . . . . 28
  - internal . . . . . 56
  - make anonymous call . . . . . 30
  - picking up from answering machine . . . . . 49
  - transferring (connecting) . . . . . 58
  - two-way record . . . . . 50
- Call duration . . . . . 28
- Call forwarding . . . . . 31
- Call lists . . . . . 36



## Index

Call screening during recording . . . . .	50
Call swapping . . . . .	31
Call waiting	
accepting/rejecting . . . . .	30
activating/deactivating . . . . .	30
external call . . . . .	30
internal call . . . . .	57
Call-by-call . . . . .	38
Calling	
anonymously . . . . .	30
external . . . . .	28
internal . . . . .	56
Calling Line Identification . . . . .	28
cancel once . . . . .	30
Cancelling preselection . . . . .	38
Care of the telephone . . . . .	73
CD, see Call divert	
Changing	
dialling mode . . . . .	67
display language . . . . .	61
earpiece volume . . . . .	62
internal number of a handset . . . . .	58
name of a handset . . . . .	58
pauses . . . . .	68
ringtone . . . . .	63, 65
speaker volume . . . . .	62
system PIN . . . . .	66
Character set . . . . .	40, 41, 74
Charge status display . . . . .	1, 2
CLI, CLIP . . . . .	28
CLIR . . . . .	30
Colour scheme . . . . .	62
Conference (internal) . . . . .	57
Confirmation tone . . . . .	64
Connecting the headset . . . . .	17
Connecting, base to PABX . . . . .	67
Consultation call . . . . .	31
Consultation call (internal) . . . . .	57
Control key . . . . .	1, 19
Correcting incorrect entries . . . . .	20
Customer Care . . . . .	69

## D

Deactivate anonymous calls . . . . .	63
Deactivating	
advisory tones . . . . .	64
answering machine . . . . .	47
handset . . . . .	22
keypad lock . . . . .	22
listening in . . . . .	58
muting ringtone . . . . .	45
ring delay . . . . .	62
room monitor . . . . .	60
two-way record . . . . .	50
Delete key . . . . .	20
Deleting	
announcement for answering machine . . . . .	48
characters . . . . .	20
message . . . . .	49
Deregistering (handset) . . . . .	56
Destination number (room monitor) . . . . .	59
Dial pulsing . . . . .	67
Dialling	
directory . . . . .	33
mode . . . . .	67
pause . . . . .	68
using quick dial . . . . .	34, 60
Directory . . . . .	32
copying number from text . . . . .	34
managing entries . . . . .	33
opening . . . . .	19
order of entries . . . . .	33
saving anniversary . . . . .	34
saving entry . . . . .	32
saving the sender's number (SMS) . . . . .	42
sending entry/list to handset . . . . .	34
using to enter numbers . . . . .	34
Display	
changing display language . . . . .	61
colour scheme . . . . .	62
in idle status . . . . .	16, 21
lighting . . . . .	62
memory directory . . . . .	34
missed anniversaries . . . . .	37
network mailbox message . . . . .	53
number (CLI/CLIP) . . . . .	28

screensaver . . . . .	61
setting . . . . .	61
symbols . . . . .	2
Display keys . . . . .	1, 20
assigning . . . . .	60
Disposal . . . . .	72
DP (dial pulsing) . . . . .	67
Draft message list (SMS) . . . . .	40

## E

Earpiece volume . . . . .	62
ECO DECT . . . . .	54
Eco mode . . . . .	54
Eco mode+ . . . . .	54
Editing	
destination number	
(room monitor) . . . . .	60
E-mail address	
copying from the directory . . . . .	34
End call key . . . . .	1, 28
Ending, call . . . . .	28
Entry	
saving, changing (preselection) . . . . .	38
selecting from directory . . . . .	33
Environment . . . . .	72
Error tone . . . . .	64
Expert mode . . . . .	25, 69
External call	
call waiting . . . . .	30
diverting to ans. mach. . . . .	50

## F

Fast access	
answering machine . . . . .	51
network mailbox . . . . .	53

## G

General troubleshooting . . . . .	69
Group call . . . . .	56
Guarantee Certificate . . . . .	71

## H

Handset	
activating/deactivating . . . . .	22
advisory tones . . . . .	64
changing internal number . . . . .	58
changing name . . . . .	58
changing the number . . . . .	58
changing to a different base . . . . .	56
changing to best reception . . . . .	56
colour scheme . . . . .	62
contact with liquid . . . . .	73
de-registering . . . . .	55, 56
display language . . . . .	61
display lighting . . . . .	62
diverting a call . . . . .	57
earpiece volume . . . . .	62
idle status . . . . .	21
large font . . . . .	62
list . . . . .	19
locating . . . . .	56
muting . . . . .	29
paging . . . . .	56
registering . . . . .	55
registering to a different base . . . . .	56
restoring to factory settings . . . . .	64
screensaver . . . . .	61
set up for use . . . . .	12
setting . . . . .	60
speaker volume . . . . .	62
using room monitor . . . . .	59
using several . . . . .	55
Handset mode . . . . .	29
Handset operating time	
in room monitor mode . . . . .	59
Hash key . . . . .	1, 22
Headset socket . . . . .	17
Hearing aids . . . . .	7
Help . . . . .	69

- I**
- Icon
    - alarm clock . . . . . 55
    - answering machine . . . . . 47, 50
    - for new messages . . . . . 37
    - keypad lock . . . . . 22
    - new message . . . . . 48
    - new SMS . . . . . 41
    - ringtone . . . . . 63
  - Icons
    - display . . . . . 2
  - Idle status (display) . . . . . 16, 21
  - Idle status, returning to . . . . . 21
  - Incoming message list (SMS) . . . . . 40, 41
  - Incorrect input (correction) . . . . . 20
  - Installing, base . . . . . 10
  - Internal
    - conference . . . . . 57
    - consulting . . . . . 57
    - listening in . . . . . 58
    - making calls . . . . . 56
  - Internal call . . . . . 56
    - call waiting . . . . . 57
- K**
- Key
    - assign function or number . . . . . 60
  - Key 1 (fast access) . . . . . 1, 51
  - Keypad lock . . . . . 22
  - Keys
    - control key . . . . . 1, 19
    - delete key . . . . . 20
    - display keys . . . . . 1, 20
    - end call key . . . . . 1, 28
    - fast access . . . . . 1, 51
    - hash key . . . . . 1, 22
    - message key . . . . . 1
    - mute key . . . . . 1
    - On/Off key . . . . . 1
    - quick dial . . . . . 34
    - recall key . . . . . 1
    - speaker key . . . . . 1
    - star key . . . . . 1
    - talk key . . . . . 1, 28
- L**
- Language, display . . . . . 61
  - Large font . . . . . 62
  - Linking, see SMS
  - Liquid . . . . . 73
  - List
    - answering machine . . . . . 36
    - call lists . . . . . 36
    - handsets . . . . . 19
    - missed calls . . . . . 36
    - network mailbox . . . . . 36
    - SMS draft message list . . . . . 40
    - SMS incoming message list . . . . . 41
    - SMS list . . . . . 36
  - Listening in to a call . . . . . 58
  - Locating, handset . . . . . 56
  - Lock
    - activating/deactivating keypad lock . 22
- M**
- Mailbox ID, see SMS
  - Mailboxes, see SMS
  - Mains adapter . . . . . 7
  - Making calls
    - accepting a call . . . . . 28
    - cost-effective calls . . . . . 38
    - external . . . . . 28
    - internal . . . . . 56
  - Manual redial . . . . . 35
  - Medical appliances . . . . . 7
  - Memory, directory . . . . . 34
  - Menu
    - end tone . . . . . 64
    - opening . . . . . 19
    - overview . . . . . 25
    - prompting . . . . . 21
  - Menu display
    - Expert mode . . . . . 25, 69
    - Standard mode . . . . . 25, 69
  - Message key
    - open list . . . . . 41
    - opening lists . . . . . 36
  - Messages . . . . . 47
    - copy the number to the
      - directory . . . . . 49
    - deleting . . . . . 49
    - key . . . . . 1
    - marking as "new" . . . . . 49

new message icon . . . . .	48
playing back . . . . .	48
Microphone . . . . .	1
Missed calls . . . . .	36
Music on hold . . . . .	65
Mute key . . . . .	1
Muting	
first ring . . . . .	45
handset . . . . .	29

**N**

Name	
of a handset . . . . .	58
Network mailbox . . . . .	53
Network provider preselection,	
automatic . . . . .	38
Network services . . . . .	30
Notification by SMS . . . . .	43
Number	
as destination for room monitor . . . . .	59
copying from an SMS text . . . . .	42
copying from directory . . . . .	34
copying to directory . . . . .	34
displaying caller's number (CLIP) . . . . .	28
entering with directory . . . . .	34
saving in the directory. . . . .	32

**O**

On/Off key . . . . .	1
Order in directory. . . . .	33

**P**

PABX	
connecting base . . . . .	67
pauses . . . . .	68
saving access code . . . . .	67
setting dialling mode . . . . .	67
setting recall. . . . .	67
SMS . . . . .	45
switching to tone dialling . . . . .	68
Pack contents . . . . .	9
Paging. . . . .	56
Pause	
after access code . . . . .	68
after line seizure. . . . .	68
after recall key . . . . .	68
PIN change	
system PIN . . . . .	66
Pin connections . . . . .	74

Playing back	
announcement (answering	
machine) . . . . .	48
message (answering machine) . . . . .	48
Power consumption . . . . .	73
Preselection . . . . .	38
cancelling . . . . .	38
Protecting the phone against access. . . . .	66

**Q**

Questions and answers . . . . .	69
---------------------------------	----

**R**

Range. . . . .	10
Recall . . . . .	67
Recall key . . . . .	1, 68
Reception booster, see Repeater	
Recording	
quality. . . . .	50
time . . . . .	50
two-way record . . . . .	50
Redial. . . . .	35
Redirect, see Call divert	
Registering (handset) . . . . .	55
Reminder call . . . . .	35
Remote operation . . . . .	51
Repeater . . . . .	65
Ring delay. . . . .	50, 62
Ringback. . . . .	30
Ringtone	
changing. . . . .	63, 65
muting . . . . .	45
setting volume . . . . .	63, 65
Room monitor. . . . .	59

**S**

Saving (access code) . . . . .	67
Screensaver . . . . .	61
Searching in directory . . . . .	33
Sending	
directory entry to handset . . . . .	34
Service . . . . .	69
Setting	
date . . . . .	15, 27
time . . . . .	15, 27
Setting up	
handset. . . . .	12
Signal tone, see Advisory tones	
SMS . . . . .	39

## Index

- active send service centre . . . . . 44
- changing mailbox . . . . . 44
- deleting . . . . . 40, 41
- diverting . . . . . 41
- draft message list . . . . . 40
- incoming message list. . . . . 41
- linked. . . . . 39
- list . . . . . 36
- mailbox ID . . . . . 43
- mailboxes. . . . . 43
- notification by SMS. . . . . 43
- PIN protection. . . . . 43
- reading . . . . . 40, 41
- receiving . . . . . 40
- replying to or diverting . . . . . 41
- saving number . . . . . 42
- self help with error messages . . . . 46
- sending to a personal mailbox. . . . 44
- SMS to PABXs . . . . . 45
- troubleshooting . . . . . 46
- vCard . . . . . 42
- writing . . . . . 39, 74
- SMS centre
  - changing number . . . . . 44
  - setting . . . . . 44
- Snooze mode. . . . . 55
- Sound, see Ringtone
- Speaker key . . . . . 1
- Speaker mode . . . . . 29
- Special functions . . . . . 67
- Specifications . . . . . 73
- Speed dial . . . . . 32, 60
- Standard mode . . . . . 25, 69
- Star key . . . . . 1
- System settings . . . . . 66

## T

- Talk key . . . . . 1, 28
- Telephone jack, pin connections . . . . 74
- Text message, see SMS
- Tone dialling . . . . . 67, 68
- Troubleshooting (SMS) . . . . . 46

## U

- Unknown . . . . . 29
- Unknown caller . . . . . 29

## V

- vCard (SMS) . . . . . 42
- Viewing the network mailbox
  - message. . . . . 53
- VIP group (Directory entry) . . . . . 32, 34
- Volume
  - earpiece . . . . . 62
  - handset speaker volume. . . . . 62
  - loudspeaker. . . . . 62
  - ringtone . . . . . 63, 65

## W

- Warning tone, see Advisory tones
- Writing (SMS) . . . . . 39
- Writing and editing text. . . . . 74









