

Firmness Control™ system 9000



Congratulations on the successful assembly of your SLEEP NUMBER® bed. Now you are ready to find your comfort level.

before you begin

Unlike innerspring mattresses, a Sleep Number® bed can be personalized at any time to the changing condition of your body. Some reasons to alter the firmness of your bed include:

- strained muscles
- back pain
- weight change
- pregnancy
- bad sunburn

In addition to personalizing your bed for a great night's sleep, you can also alter the mattress firmness when you wake in the morning in order to:

- facilitate getting out of bed, if needed
- achieve a "fuller" bed appearance

Dual Adjustability

If you purchased a dual chamber model, you have the ability to personalize each side of your Sleep Number® bed. Since no two body types are the same, each sleep partner should find their own comfort level.

If your model came with one remote for a dual chamber bed, pressing the "L" button on the remote enables you to make changes to the left side of the bed (left is determined when laying on your back on the bed).

Class B Device Statement: (Section 15.105 (b) of the FCC Rules)

*Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Fill Feature

This feature will allow you to inflate one or both chambers to a Sleep Number® of 100.

Wireless Remote

To Fill Both Chambers

- Press and hold the FILL button for at least 2 seconds.

The right chamber will fill to 100 then the left chamber will fill to 100.

To Fill One Chamber

- Press any button to "wake up" the remote.
- Press "L" or "R" to determine side to fill.
- Press and hold the FILL button for at least 2 seconds.

To stop the fill feature at any time, press any button on the remote.

Wired Remote

- On one remote, press and hold the FILL button for at least 2 seconds. This chamber will begin filling immediately.

- To fill the second chamber, on the other remote, press and hold the FILL button for at least 2 seconds. This chamber will fill to 100 when the first chamber is full.

Memory Feature ▶ more

This feature allows you to set your favorite Sleep Number® into memory and recall it at any time.

Wireless Remote

Setting the Memory

- Press the "L" or "R" to choose a side and "wake up" the remote.
- Adjust the bed to the Sleep Number® you'd like as your memory setting.
- Once at the desired Sleep Number®, press and hold the MEM button for 3 seconds.
- "Memory Set" will appear above the Sleep Number® when it's set.

Follow these steps to change the memory setting at any time.

Wired Remote

Setting the Memory

- Press the up or down arrow to "wake up" the remote.
- Adjust the bed to the Sleep Number® you'd like as your memory setting.
- Once at the desired Sleep Number®, press and hold the MEM button for 3 seconds.
- "Memory Set" will appear above the Sleep Number® when it's set.

Wireless Remote

Recalling the Memory


- Press the "L" or "R" for the side you'd like to recall.
- Press the MEM button 2 times within 5 seconds. The first time you press MEM it will show you the Sleep Number® currently in the memory setting, the second time it will begin changing the Sleep Number® to that memory setting.

As the adjustment is taking place, the number displayed and tick marks will indicate the change.


© 2004 Select Comfort

Finding Your Comfort Level

Firmness Control™ system 9000

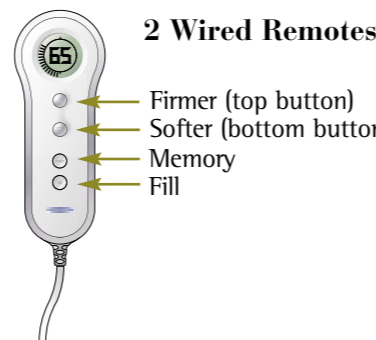

2 Wired Remotes

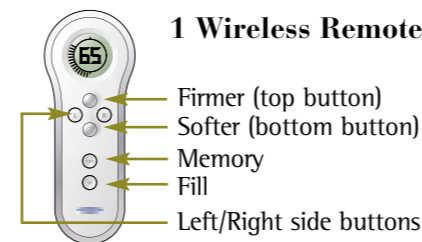

1 Wireless Remote

NOTE: A 9-volt battery is included and should last about six months under normal use. Replace the battery when the low battery indicator is displayed.

Setting Your Sleep Number®

STEP 1. Lie on The Sleep Number Bed by Select Comfort™ in your normal sleep position, holding your remote.

STEP 2. Press any button on the remote to "wake" it up. (If using the wireless remote with the L and R buttons, press L or R to choose a side.) It will display the current Sleep Number® setting. If you have an idea of what your Sleep Number® is, enter it on the remote by pressing the firmer or softer buttons until the number you desire is displayed. The display will go back to your current Sleep Number® and then the adjustment will begin. The Sleep Number® and number of reference bars displayed will change as the firmness changes. Remain still until the change is complete. When the adjustment is complete, the Sleep Number® will stay lit for 5 seconds and then the display will turn off.



If you decide to change your Sleep Number® before the firmness adjustment is complete, just press any button and the Firmness Control™ system will stop. Then, go to the Sleep Number® you want.

It sometimes takes several nights of sleeping at different settings to discover your ideal Sleep Number®. If you would like to experiment further with your Sleep Number® setting, refer to the inside of page 13 in the Owner's Manual. Follow the step-by-step instructions for the Deluxe Sleep Number® Firmness Control System™.

Sleep Number® 9000 Model



Sleep Number® 9000 Model owners: After completing the foundation assembly instructions in the Owner's Manual, refer to these mattress assembly and Firmness Control™ system instructions instead of those in the Owner's Manual.

Congratulations on the successful assembly of your foundation. Now you are ready to assemble your SLEEP NUMBER® mattress. It can be quickly and easily completed without tools.

before you begin

Carefully Check the Contents of Your Mattress Boxes

If you are missing any items listed on the following page, please e-mail Customer Service at customerservice@selectcomfort.com or call 1-800-472-7185.

Orientation

These instructions refer to "left" and "right" as if you are standing at the head of the bed looking toward the foot of the bed.

Prepare Your Foam Pads

Carefully open the Foam Comfort Pads and Foam Base Pad and set aside.

NOTE: At least 20 minutes of expansion time is needed.

It is wonderful! After only one night, we both commented that we had the best night's sleep in years!

*Lowell S.
Flagstaff, AZ*



106926
01/04

select comfort
CREATOR OF THE SLEEP NUMBER® BED


Mattress Assembly

contents

Carefully check the contents of your mattress boxes and compare with the list below.

Mattress Cover

- 2 parts
- Top section (Duvet)
- Bottom section

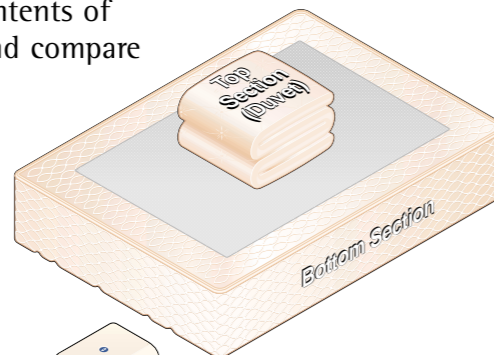

Comfort Control System™

Remote(s)

Varies by model.


Sleep Number® Firmness Control™ system (2 wired or 1 wireless)



All single chamber models include 1 remote only. Wired remotes will be attached to the Firmness Control™ system.


Foam Border Walls

2 long, 2 short

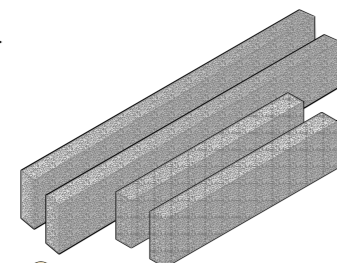


Air Chamber(s)

2 for dual chamber models
1 for single chamber models

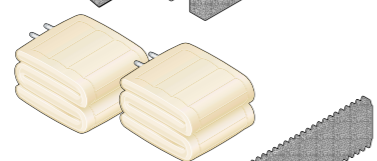


Center Foam Wall

Dual chamber models only

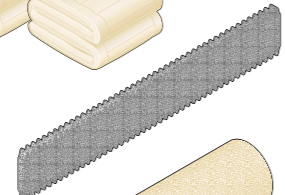

Foam Comfort Pads

1 of each for Twin size.
2 of each for Queen and King sizes.
• Memory Foam
• Intralux™ Foam

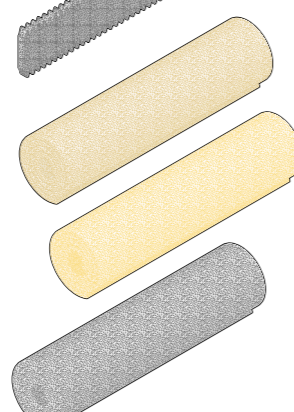

Foam Base Pad

Caps for Air Chambers

2 Packages (Packaged inside the Firmness Control™ system box.)

Corner Lock™


Package of 4



If you are missing any items, please e-mail Customer Service at customerservice@selectcomfort.com or call 1-800-472-7185.


1 Position Mattress Cover

- Place BOTTOM SECTION of mattress cover (zipper side up) on top of the foundation or bed platform.
- Unzip the top portion and set it aside.
- Holes in the bottom of the cover should be at the head of the mattress and the SLEEP NUMBER® bed label will be at the foot of the mattress.
- Place a Corner Lock™ in each corner of the mattress cover.

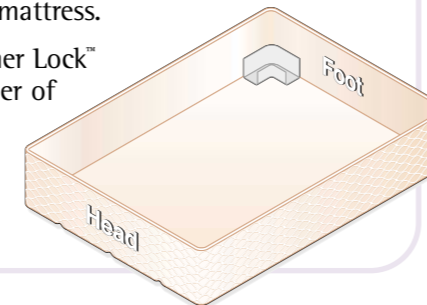


2 Install Foam Border Walls

- Place the two long FOAM BORDER WALLS along the left and right sides of the Mattress Cover.
The ends of the Foam Border Walls should fit snugly inside the Corner Lock™.
- Place the shorter Foam Border Walls at the head and foot of the bed.
- Make sure the border walls are connected securely and squarely.

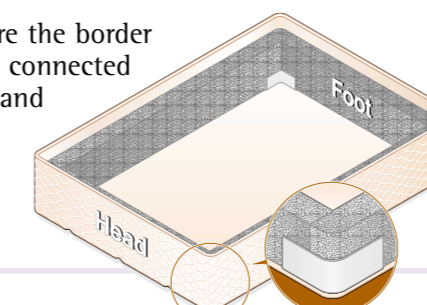


Install Foam Base Pad

- Carefully shake out the pad prior to placing in position.
- Place the FOAM BASE PAD inside the mattress cover with the clipped ends at the head of the bed.
The pad should nestle inside the Foam Border Walls.

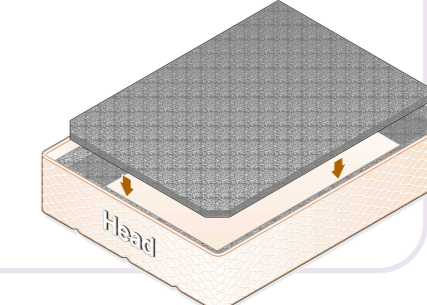

3 Install Air Chamber(s)


- Lay the AIR CHAMBER(s) in the mattress cover so the Hose Connector(s) are on the bottom and face the head of the bed.
- Connectors will align with the small openings at the base of the mattress cover.

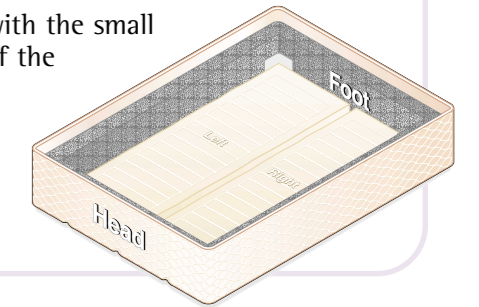

Dual chamber model shown.


4 Connect Firmness Control™ system

- Place the Firmness Control™ system on the floor at the head of the bed. Plug the power cord into the Firmness Control™ system and then into an electrical outlet. (You will hear several clicks indicating there is power.)
- There are two hoses for each air chamber (one large and one small). Pass the end of each hose through the small opening at the base of the Mattress Cover and under the Foam Border Wall to the corresponding chamber.
Connect the hose marked with "L" and the adjacent smaller hose to the left chamber. Connect the other two hoses to the right chamber.
- Press hose connections together until they "click."

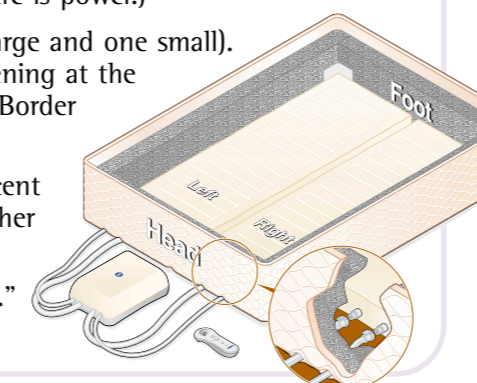

5 Inflate Air Chamber(s)


- Press any button on the remote to activate the hand control. (If using the wireless remote with L and R buttons, press L or R to choose a side.) Press the Δ arrow several times to set the firmness to "20." Inflation may take about 10 minutes.
- For dual chamber models, after the first chamber is inflated, repeat for second chamber. Then, insert the CENTER FOAM WALL between the chambers, centering it between the head and foot of the bed.
- Zip on the top portion of the bottom section and now the bottom section is complete.

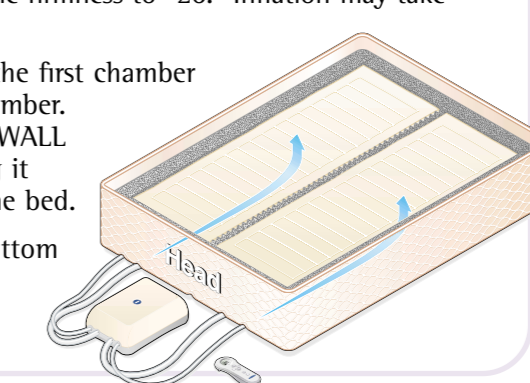

6 Install Foam Comfort Pads

- Set the DUVET section onto the bottom section with the zipper up.
- Carefully shake out pads prior to placing in position.
- Place the FOAM COMFORT PADS inside the Duvet section (3" Intralux™ Pad is positioned with the textured side up).

Each sleeper can customize their side of the mattress by choosing how to position the foam pads. Place the 1" Memory foam pad on top for a more firm, supportive surface. Place the 3" Intralux™ foam pad on top for a more plush surface.

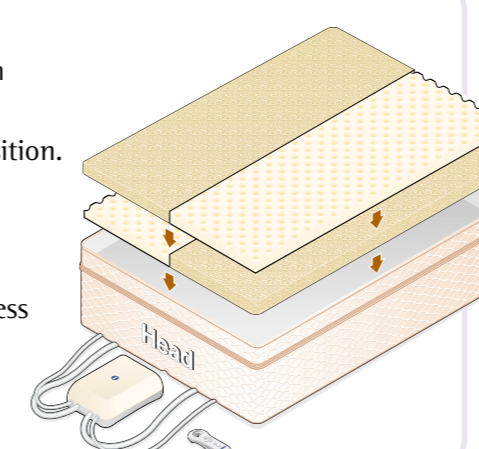


7 Final Steps

- Zip on the duvet cover.
- Move bed to your desired location.

You're Done!

On the back you will find more information on using the Firmness Control™ system.

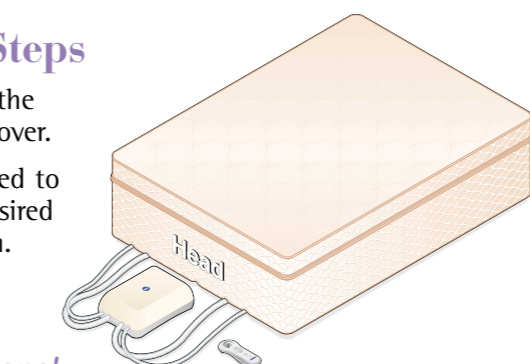

Note:
When flipping the reversible duvet, stand at the side of the bed and flip from side to side. You may need to unzip the Duvet section and reposition the foam topper pads so your desired pad is on top.

Where are the Caps for Air Chamber(s)?

The caps are in the Firmness Control™ system box. Please store these in case you should ever want to disassemble your bed and temporarily cap your air chamber(s).

What if my Foam Comfort Pads appear to be too small or irregular?

Gently shake the pads as you place them on your mattress and they will recover to full size overnight.

What do I do if the motor doesn't run?

Make sure the power cord is securely plugged into the pump and the wall outlet. Check to see if the power cord is plugged into an outlet which has power and is not connected to an on/off wall switch.

Will my bed deflate if there is a power surge or power loss?

No, your mattress will maintain its firmness. To protect your Firmness Control™ system, we do recommend using a surge protector.

What if I notice a rubber smell from the air chamber?

The odor you may smell is non-toxic and will fade over time. To minimize the smell, allow the air chamber to air out for a few hours and then lay a couple of dryer sheets on top of the air chamber.

What if I feel like I'm rolling toward the edge or toward the center of the mattress?

Although rare, these sensations could potentially be experienced if one side of the mattress is set quite firm and the other side quite soft. Call Customer Service for a remedy to this situation if it is bothersome to you.