

Siyabonga ngokuthenga kwakho ifoni ye-Sony Ericsson W595 Walkman™. Ifoni ezacile enesisheleli eyenzelwe wena nabanye ukuze zithokozele umculo wenu.

Ngokunye kwefoni okuqukethwe, yiya ku
www.sonyericsson.com/fun.

Bhalisa manje uthole isixhobo samathuluzi,
ukulondoloza mahhala kulayini, izipesheli, izindaba
nemincintiswano ku *www.sonyericsson.com/myphone*.

Ngesaphothi yomkhiqizo, yiya ku
www.sonyericsson.com/support.

Izesekeli – Okwengeziwe kwefoni yakho

I-Stereo Bluetooth™ Headset HBH-DS205

Jabulela umculo ongenawaya ngaphandle
kokuphuthelwa wucingo



Ispikha Esingenawaya Esiphathwayo MBS-200

Lalela umculo ongenawaya onomsindo onamandla



I-Bluetooth™ Music Receiver MBR-100

Thokozela umculo ogcinwe efonini yakho
ngamalawdispikha estiriyoo

Lezi sekeli zingathengwa zodwa kodwa kungenzeka
zingatholakali kuzo zonke izimakethe. Ukuhlola uhla
oluphelele yiya ku www.sonyericsson.com/accessories.



Okuqukethwe

| | |
|--|-----------|
| Ukuqalisa | 6 |
| Ukuhlanganisa | 6 |
| Ukuvula ifoni | 7 |
| Usizo | 8 |
| Ukushaja ibhethri | 8 |
| Uhlolojikelele Iwefoni | 9 |
| Uhlolojikelele Iwemenyu | 11 |
| Ukuhamba | 13 |
| Imemori | 14 |
| Ulimi Iwefoni | 16 |
| Ukfufaka umbhalo | 16 |
| I-Walkman™ | 17 |
| Ihendisfri ephathekayo yestiryro | 17 |
| Isidlali se-Walkman™ | 18 |
| I-PlayNow™ | 21 |
| I-TrackID™ | 21 |
| Umculo wakulayini namavidyo kliphu | 22 |
| Isidlali sevidyo | 22 |
| Umsakazo | 22 |
| I-MusicDJ™ | 23 |
| Rekhoda umsindo | 23 |
| Ukululisa nokusingatha okuqukethwe | 24 |
| Ukusingatha okuqukethwe ngaphakathi kwefoni | 24 |

| | |
|--|-----------|
| Ukuthumela okuqukethwe kwenye ifoni | 25 |
| Ukululisa okuqukethwe kuye noma kusuke kukhompyutha | 25 |
| Ukusebenzisa ikhebula le-USB | 26 |
| Igama lefoni | 27 |
| Ukusebenzisa i-Bluetooth™ wireless technology | 27 |
| Ukubhekapha nokubuyisela | 29 |
| Kushaywa ucingo | 31 |
| Ukushaya nokwamukela izingcingo | 31 |
| Oxhumene nabo | 33 |
| Uhla Iwezingcingo | 36 |
| Ukudayela okusheshayo | 37 |
| Imeyili yezwi | 37 |
| Ukulawula izwi | 37 |
| Ngaphezu kocingo olulodwa | 39 |
| Ukudayela okukalewe | 41 |
| Isikhathi sokufona nezindleko | 42 |
| Ukuveza noma ukufihla inamba yefoni yakho | 42 |
| Ukuthumela imibiko | 42 |
| Imibiko yombhalo | 42 |
| Imibiko yesithombe | 43 |
| Okukhethwa kukho imibiko | 44 |
| Izibonisi | 44 |

| | |
|--|-----------|
| Imibiko yezwi | 45 |
| I-imelyi | 45 |
| Abangani bami | 47 |
| Ulwazi lwendawo nolweselula | 49 |
| Ukufanekisa | 49 |
| Isitholi sokubonwayo namakhi ekhamera | 49 |
| Ukusebenzisa ikhamera | 50 |
| Ezinye izimpawu zekhamera | 50 |
| Ukuhlola nokufaka amathegi ezithombeni | 51 |
| I-PhotoDJ™ and VideoDJ™ | 53 |
| Ukubhloga | 53 |
| Ukuphrinta amafotho | 54 |
| I-Inthanethi | 55 |
| Amabhukumaka | 55 |
| Amakhasi omlando | 55 |
| Ezinye izimpawu zesipheqi | 55 |
| Ukuvikeleka kwe-inthanethi nezitifiketi | 56 |
| Ama-feed e-Web | 56 |
| Kuyavumelaniswa | 58 |
| Ukuvumelanisa usebenzisa ikhompyutha | 58 |
| Ukuvumelanisa ngokusebenzisa isevisi ye-Inthanethi | 59 |

| | |
|-----------------------------------|-----------|
| Ezinye izimpawu | 61 |
| I-Flight mode | 61 |
| I-Update service | 61 |
| Amasevisi ezindawo | 62 |
| Ama-alamu | 62 |
| Ikhalenda | 64 |
| Amanothi | 65 |
| Imisebenzi | 65 |
| Amaphrofayli | 66 |
| Isikhathi nosuku | 66 |
| Ingqikithi | 66 |
| Isakhiwo semenyu enkulu | 67 |
| Amaringithoni | 67 |
| Ukuma kwesibuko | 67 |
| Imidlalo | 67 |
| Izinhlelo | 68 |
| I-Walk Mate | 68 |
| Amalokhi | 69 |
| Imibuzo nezixazululo | 71 |
| Imibuzo evamile | 71 |
| Imibiko yamaphutha | 74 |
| Ulwazi olubalulekile | 76 |
| Uhla lwamagama | 87 |

I-Sony Ericsson W595

UMTS HSDPA 2100 GSM EDGE 850/900/1800/1900
Le Gaydi yokusebenzisa ifoni ishicilelwu ngabakwa-Sony Ericsson Mobile Communications AB noma inkampani yangakini esebezensisana nabo, ngaphandle kwearanti ethile. Ubungcono nezinguuko kule ncwadi yokusebenzisa ucingo okwenzewu amaphutha okuthaypha, ukungalungi kolwazi lwamaranje, noma ubungcono ezhinlelweni kanye/noma amathuluzi, kungensiwa ngu-Sony Ericsson Mobile Communications AB noma ingasiphi isikhathi ngaphandle kwesaziso. Izinguuko ezinjalo, ngakho, ziyoungeniswa kwizihumusho ezintsha zale Gaydi yokusebenzisa ifoni.

Wonke amalungelo agodliwe.

©Sony Ericsson Mobile Communications AB, 2008
Inamba yesishicilelo: 1215-6275.1

Sicela wazi:

Amanye amasevisi akule Gaydi yokusebenzisa ifoni awasekelwe yiwo wonke amanethiweli. *Lokhu kubandakanya iNombo ye-GSM yeZimo eziPhuthumayo eMhlabeni Jikelele u-112.*

Sicela uxhumane no-opharetha wenethiweki yakho noma umnikezelu wakho wesevisi uma ungabaza noma ungasebenzisa isevisi ethile noma qha.

Sicela ufunde izahluko ezithi *Ulwazi olusempqoka* ngaphambi kokusebenzisa iselula yakho.

Ifoni yakho inamandla okulanda, ukulonda nokudululisa okuqukethwe okwengezei, isb. amaringithoni. Ukugetshenziswa kokuqukethwe okufana nalokho kungaba nomkhawulo noma kunqatshelwu ngamalungelo abantu besithathu, okubandakanya kodwa kungakalelwu kumikhawulo engaphansi kwemithetho yamalungelo okushicilela efanele. Wena, hayti u-Sony Ericsson, unamandla apherele kokuqukethwe okwengezei okulanda noma okudululisa kuvela efonini yakho. Ngaphambi kokusebenzisa okuqukethwe okwengezei, sicela uqinisekise ukuthi ukusebenzisa okuhlosile kulayisensiwe noma kugunyaziwe. U-

Sony Ericsson akaqinisekisi ngokungabi naphutha, ubuqotho noma ikhwalithi yokuqukethwe okwengezei noma okunye okuqukethwe kwabantu besithathu. U-Sony Ericsson nege abekwe icala ngisho ngaphansi kwaziphizi izimo ngokusebenzisa kwakho okungalungile kokuqukethwe okwengezei noma okunye okuqukethwe kwabantu besithathu.

I-Smart-Fit Rendering wuphawu lokuhweba noma wuphawu lokuhweba olubhalisiwe Iwakwa-ACCESS Co., Ltd.

I-Bluetooth wuphawu lokuhweba noma wuphawu lokuhweba olubhalisiwe Iwe-Bluetooth SIG Inc. kanti ukusethenziswa kwaloli phawu ngu-Sony Ericsson kungaphansi kwelaiyisensi.

Ilogo ye-Liquid Identity, i-SensMe, i-PlayNow, i-TrackID, i-MusicDJ, i-PhotoDJ ne-VideoDJ yizimpawu zokuthengisa noma yizimpawu zokuthengisa ezibhalisiwe e-Sony Ericsson Mobile Communications AB.

I-TrackID™ inikwa amandla yi-Gracenote Mobile MusicID™, I-Gracenote ne-Gracenote Mobile MusicID yizimpawu zokuhweba noma yizimpawu zokuhweba ezibhalisiwe zakwa-Gracenote, Inc.

I-WALKMAN wuphawu lokuhheba noma wuphawu lokuhheba olubhalisiwe Iwakwa-Sony Corporation.

I-Lotus Notes wuphawu lokuhweba noma wuphawu lokuhweba olubhalisiwe Iwakwa-International Business Machines Corporation.

I-Sony, Memory Stick Micro™ ne-M2™ Yizimpawu zokuhweba noma yizimpawu zokuhweba ezibhalisiwe zakwa-Sony Corporation.

I-Google™ and Google Maps™ yizimpawu zokuhweba noma yizimpawu zokuhweba ezibhalisiwe zakwa-Google Inc.

I-SyncML wuphawu lokuhweba noma wuphawu lokuhweba olubhalisiwe Iwakwa-Open Mobile Alliance LTD.

I-Ericsson wuphawu lokuhweba noma wuphawu lokuhweba olubhalisiwe Iwakwa-Telefonaktiebolaget LM Ericsson.

I-Adobe Photoshop Album Starter Edition
iwuphawu lokuweba noma wuphawu lokuweba
olubhalisiwe Iwe-Adobe Systems Incorporated e-
United States kanye /noma kwamanye amazwe.
I-Microsoft, i-ActiveSync, iWindows, i-Outlook
neVista yizimpawu zokuthengisa ezibhalisiwe
noma izimpawu zokuthengisa ze-Microsoft
Corporation e-U.S nkwamanye amazwe.
I-T9™ Text Input iwuphawu noma inguphawu
lokudayisa olubhalisiwe Iwe- Tegic Communications.
I-T9™ Text Input inikwe ilayisense ngaphansi
kokukodwa noma ngaphezelu kokulandelayo: U.S.
Pat. Nos. 5,818,437, 5,953,541, 5,187,480,
5,945,928, no 6,011,554; Canadian Pat. No.
1,331,057, United Kingdom Pat. No. 2238414B; Hong
Kong Standard Pat. No. HK0940329; Republic of
Singapore Pat. No. 51383; Euro.Pat. No. 0 842
463(09627260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE,
GB; futhi amaphatheni engeziwe asazofika
emhlabeni jikelele.

Lo mkhiqizo uvikelwe ngamalungelo athile olwazi
akwa-Microsoft. Ukusebeniza nokusabalalisa
kwalo buchwephese ngaphandle kwalo mkhiqizo
akuvinwelye ngaphandle kwelaisensi yakwa-
Microsoft

Abanikazi bokuqukethwe basebenzisa i-Windows
Media digital rights management technology
(WMDRM) ukuvikela impahla yabo ecatshangiwe,
kubandakanya amalungelo okushicilela. Le
divaysi isebeenzisa isothiwe ye-WMDRM
ukuthola okuqukethwe ukuvikelwe nge-WMDRM.
Uma isothiwe ye-WMDRM yehulekha ukuvikela
okuqukethwe, abanikazi bokuqukethwe
bangacela uMicrosoft ukuba asule ikhono
lesothiwe lokusebenzisa i-WMDRM lokudala
noma lokupopisha okuqukethwe ukuvikelwe.
Ukusulwa akuphazamisi okuqukethwe
okungavikelwe. Uma ulanda malayisensi
okuqukethwe ukuvikelwe, uyavuma ukuthi
uMicrosoft angabandakanya ulhu lokusula
kumalayisensi. Abanikazi bokuqukethwe
bangakudinga ukuba ukukhule izinga le-

WMDRM ukuze uthole okuqukethwe kwabo.
Uma wenqaba ukukhuphula izinga, ngeke ukwazi
ukuthola okuqukethwwe okudinga ukukhushulwa
izinga.

I-Java kanye nazo zonke izimpawu zokuthengisa
ezigxile kwi-Java namalogo kuyizimpawu
zokuthengisa noma izimpawu zokuthengisa
ezibhalisiwe ze-Sun Microsystems, Inc. e-U.S.
nkwamanye amazwe.

Isivulumwano selayisense yomsebenzisi wokugcina
we-Sun™ Java™ J2ME™.

Lo mkhiqizo unelayisensi ngaphansi kwelaisensi
ye-MPEG-4 okubonwayo ne-AVC iphothfoliyo
yephatheni yokusebeniza komuntu siqu
nokungekonka kokuhweba koku (i) fakamakhodi
kuvido ngokuhambisana ne-MPEG-4 visual
standard ("MPEG-4 video") noma i-AVC standard
("AVC video") kanye/noma (ii) ukukhipha amakhodi
ku-MPEG-4 video noma AVC video ebifakwe
amakhodi wumthengi owenza izinto zakhe siqu
okungezonza zokuhweba kanye/noma etholwe
kumhlinzezi wamaividyo onelayisensi ye-MPEG
LA yokuhlinzeka i-MPEG-4 kanye/noma AVC
video. Ayikho ilayisensi enikwayo noma
ezothathwa njengekhona yanoma yikuphi okunye
ukusebenzisa. Ulwazi olwengenzevi kubandakanya
lolo oluhlobene nokusebenzisa kokugqugquzela,
kwangaphakathi nokokuhweba nokutholakala
kwamalaisensi lungatholakala ku-MPEG LA, LLC.
Bheka <http://www.mpega.com>. Ubuchwephese
bokukhipha amakhodi be-MPEG Layer-3
bunelaisensi ephuma kwa-Fraunhofer IIS and
Thomson.

Izivimbilo: I-Software ingulwazi Iwamalungelo
agodilive oluyimfiho lakwa-Sun futhi isihloko
kuwo wonke amakhophi agcine nge-Sun no/
noma abantu bakhe bamalayisense. Umthengi
ngeke aguqule, ahlakaze, ahlukanise, acacise,
akhiphe noma ahlehlise i-Software kanjiniyela.
I-Software ngeke yaqashiswa, yanikezelwa, noma
yalayisensa ngaphansi kwelaisense, iphelele
noma ingxenyen yayo.

Imithetho Yokuthekelisa: Lo makhqizo, kubandakanya noma iyiphi isofthiwe noma idatha yobuchwepheshes okuhambisana nawo, ungaba ngaphansi kwemithetho elawula ukuthelekisa yase-U.S., kubandakanya Umthetho Owengamele. Ukuthekelisa wase-U.S. kanye nemigomo yawo ehlobene nawo, kanye nezinhlelo zonswinyo zase-U.S. ezilawulwa yi-U.S. Treasury Department's Office of Foreign Assets Control, futhi ungaba ngaphansi kwemigomo yokuthekelisa noma yokungenisa kwamaraye amazwe. Umsebenzisi nanoma wubani ophethe umkhqizo bayavuma ukulandela ngokucophelela yonke le mitthetho futhi bayavuma ukuthi kuyisibopo sabo ukuthola amalaisensi adingekayo okuthekelisa, ukuthekelisa kabusha, noma ukungenisa lo makhqizo. Ngaphandle kwemikhawuko lo makhqizo, kubandakanya noma iyiphi isofthiwe ekubo, ngeke yalandwa, noma ithekeliswe noma ithekeliswe kabusha (i) ku, noma ezweni noma kumhlali wase, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (njengoba lolu hlu lungabuyekezwa ngezikathhi ezithile) noma kunoma iliphi izwe i-U.S. evimbele izimpahlia kulo; noma (ii) kunoma ubani osohlwini lwe-U.S. Treasury Department ye-Specially Designated Nationals noma (iii) noma yimuphi umuntu noma noma wubani noma utho okukunoma yiluphi olunye uhlulokunqabelu ukuthekelisa olungagcinwa ngezikathhi ezithile wuHulumeni wase-United States, kubandakanya kodwa kungagcini kwi-U.S. Commerce Department's Denied Persons List noma Entity List, noma i-U.S. State Department's Nonproliferation Sanctions List. Amalungelo Anomkhawuko: Ukuveshenziswa, ukuphindwa noma ukuvezwa nguhulumeni wase-United States kungaphansi kwezivimbalo njengoba zibekiwe ngaphambili kwi-Rights in Technical Data and Computer Software Clauses kwi-DFARS 252.227-7013(c) (1) (ii) ne FAR 52.227-19(c) (2) njengoba kufanele.

Amanye amagama omkhqizo nezinkampani abalwe lapha kungaba izimpawu zokuthengisa zabani kazi abafanele.

Noma imaphi amalungelo anganikiwe ngokubhalwa lapha agodiwe.


Yonke imiboniso ingeyekubonisa kuphela futhi kungenza ingakhombisi ngokungenaphutha ifoni uqobo lwayo.

Izimpawu zemiyalelo

Lezi mpawu zivela kwigaydi yoMsebenzisi.



Yazi

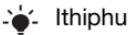

Ithiphu



Isexwayiso



Isevisi noma umsebenzi uncike kwinethiwekhi noma kokuthengiwe. Xhumana no-opharetha wenethiwekhi yakho ngemininingwane.

> Sebenzisa ikhi lokukhetha noma lokuhambisa ukupheqa bese ukhetha. Bheka *Ukuhamba* ekhasini 13.

Ukuqalisa

Ukuhlanganisa

Ngaphambili kokuqala ukusebenzisa ifoni yakho, kufanele uface i-SIM khadi nebhet'hri.

Ukfaka i-SIM khadi



Ukfaka ibhethri



- 1 Faka ibhethri isayidi lelebuli libheke phezelulu nezixhumi zibhekane.
- 2 Shelelisa ikhava yebhethri uyigaxe endaweni yayo.

- 1 Khipha ikhava yebhethri.
- 2 Sheleliza iSIM khadi kwisibambi sayo okokuthintana okusagolide kubheke phansi.

Ukuvula ifoni

Ukuvula ifoni



- 1 Cindezela bese ubamba ①
- 2 Faka iPIN yeSIM khadi yakho, uma iceliwe bese ukhetha **Kulungile**.
- 3 Khetha ulimi.
- 4 Khetha **Qhubek** ukusebenzisa isethaphu wizadi khathi kulandwa amasethingi e-Inthanethi nemibiko yezithombe.

! *Uma ufunu ukulungisa iphutha khathi ufaka i-PIN, cindezela ④.*

! *Ngaphambili kokucisha ifoni, kufanele ubuyele kokubekwe eceleni.*

I-SIM khadi

I-SIM (Subscriber Identity Module) khadi, oyithola ku-opharetha wenethiwekhi yakho, inolwazi

lokuthenga kwakho. Njalo ubocisha ifoni yakho futhi ukiphe ishaja ngaphambili kokufaka noma ukukhipha i-SIM khadi.

! *Ungagcina oxhumana nabo ku-SIM khadi ngaphambili kokuyikhipha efonini yakho. Bheka Ukukopishela amagama nezinombolo kwiSIM khadi ekhasini 34.*

I-PIN

Ungahle udinge i-PIN (Personal Identification Number) ukwenza kusebenze amasevisi nemisebenzi efonini yakho. I-PIN yakho ihlinezekwa wu-opharetha wenethiwekhi yakho. Idijithi ngayinye ye-PIN ivela njenge *, ngaphandle uma iqala ngamadijithi enamba yezimo eziphuthumayo, isibonelo, 112 noma 911. Ungabona futhi ushayele inamba yezimo eziphuthumayo ngaphandle kokufaka i-PIN.

! *Uma ufaka iPIN yakho ngokungeyikho izikhathi ezintathu zilandelana, iSIM khadi iyavimbeka. Bheka lloksi yeSIM khadi ekhasini 69.*

Okubekwe eceleni

Emva kokuba usuyivulile ifoni yakho wakafa ne-PIN yakho, igama lika-opharetha wenethiwekhi liyavela.

Lokhu kuthiwa okubekwe eceleni.
Manje ifoni yakho isilunglele
ukusebenza.

Usizo

Ngaphezu kwale Gaydi yomsebenzisi,
imikhombandlela yokuqlisa
nolunye uilwazi kuyatholakala ku
www.sonyericsson.com/support.

Usizo nolwazi kuyatholakala futhi
efonini yakho.

Ukuhlola amathiphu namasu

- 1 Kokubekwe eceleni khetha **Imenuy**
> **Izinhelo** > eye **Okujwayelekile**
ithebu > **Isethaphu wizadi**.
- 2 Khetha **Amathiphu namac**.

Ukuhlola ulwazi ngemisebenzi

- Pheqela kumsebenzi bese ukhetha **Ulwazi**, uma luhkona. Kokunye, i **Ulwazi** ivela ngaphansi kwe **Izinketh**.

Ukuhlola ukuboniswa kwefon

- Kokubekwe eceleni khetha **Imenuy**
> **Ukuzithokozisa** > **I-Demo tour**.

Ukuhlola izinga lefoni

- Kokubekwe eceleni cindezela
ukhuphule ikhi yevolu. Ulwazi
ngefoni, imemori nebhethri luyavezwa.

Ukushaja ibhethri

Ibhethri yefoni ishajeke kancane uma
uyithenga.

Ukushaja ibhethri




- 1 Xhuma ishaja kwifoni. Kuthatha cishe 2.5 amahora ukushaja ibhethri ngokugcwele. Cindezela ikhi ukuhlola isibuko.

- 2 Khipha ishaja ngokugobisela ipulaki phezulu.

-: *Ungayisebenzisa ifoni yakho ngesikhathi isashaja. Ungashaja ibhethri noma nini isikhathi esingaphezu noma esingaphansi kuka 2.5 amahora. Ungakumisa ukushaja ngaphandle kokulimaza ibhethri.*

Uhlolojikelele lwefoni

- 1 Ispikha sendlebe
- 2 Isibuko
- 3 Amakhi okukhetha
- 4 Ikhi yokushaya ucingo
- 5 Ikhi lemenu yomsebenzi
- 6 Ikhi yokukhetha, ukulawula isidlali se-Walkman™
- 7 Ikhi yevolumu
- 8 Ikhi ye-Walkman™
- 9 Ikhi yokuQeda, Ikhi yokuVula/ukuCisha
- 10 Ikhi ye-C (Sula)
- 11 Ikhi yokuuhambisa, ukulawula isidlali se-Walkman™
- 12 Ikhi lokuthulisa

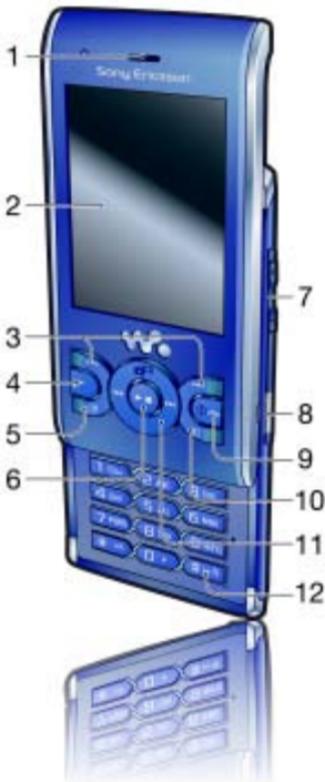

- 13 Ilensi yekhamera
- 14 Ispikha
- 15 Isixumi seshaja, ihendisfri nekhebulu le-USB
- 16 Isibambi sebhande



- 10 Ukuqalisa

This is the Internet version of the User guide. © Print only for private use.

Uhlolojikelele lwemenyu



I-PlayNow™*



I-inthanethi*



Ukuzithokozisa

Amasevisi akulaiy.*

TrackID™

Amasevisi ezindawo

Imidlalo

VideoDJ™

PhotoDJ™

I-MusicDJ™

Isiqhebeza buqama

Ophqa umsindo

I-Demo tour



Ikhamera



Imibiko ethunyel.

Bhalo okusha
Ibhokisi lokunge
I-imeyli
Izinhlaka
Ibhokisi lokuphu
Thumela izinhla
Izinhlamvu ezigc
Abangani bami*
Fonela isiqophha.
Izibonisi
Lawula imiyalezo
Izinhlelo



Imidiya

Ifoto

Umculo

Ividyo

Imidlalo

TV

Ama-feeds eWeb

Izinhlelo



Umsakazo



Ifonibhuku

Mina qobo
Oxhumene naye



I-WALKMAN



Lizingcingo**



Konke



Luphenduliwe



Ludayeliwe



Aluphendulwanga



Umhleli

Imenjenya yefayela**
 Ama-alamu
 Izcelo
 Ucingo lwevidyo
 Ikhalenda
 Imisebenzi
 Amanothi
 Ukw. kuhambi.
 Isikhathi
 Isimisa washi
 Umshi. wokubala
 Isiqophi sekhodi



Izinhlelo**



Okujwayelekile



Imisindo nezibonis
Ivolumu yeringith.



Khombisa



Izingcingo



Ukuxhumana
I-Bluetooth
I-USB
Igama lefoni
Ukuhan ngenethwek
Ukw. kuhambi.
Ukusingathwa kwedi.
Amanethiweki a
Ukuxhumana kweda.*
Izinhlelo ze-inthan
Izinhlelo zokuham
Izinhlelo zombiko*
Amasethingi e-SIP
Izesekeli

Amaphrofayli
Isikhathi nosuku
Ulimi
I-Update service
Lawula izwi
Izigamek. ezintsha
Oshothikhathi
I-Flight mode
Ezokuphepha
Isethaphu wizadi
Ukungeneka*
Izinga lefoni
Isihleli esikhulu

Iringithoni
Imodi ethule
Nyusa umsindo
Isixwa. sokudlikiza
Osungafundwa
Ikhi lomsindo

Iphepha lodonga
Isakh menyu enk
Inggikithi
Isibuko sokuqalisa
Londa isibuko
Usayizi wewashi
Ukuggqama
Hiela ulayini*


Dayela ngokushesh
Ukucinga lwe-Smart
Phambula
Phendulela ku-2*
Singatha izin.
Isikhathi nezindlek*
Kho.fihla ina.yami
Ihendisifri
Vula ukuphendula
Vala ukuqedha ucingo

* Amany amamenyu anicke ku-opharetha, kwinethiwekhi nasekuthengeni.

** Ungasebenzisa ikhi lokuhamba ukupheqa phakathi kwamathebhu kumamenyu amancane. Ngolunye ulwazi, bheka Ukuhamba ekhasini 13.

Ukuhamba

Ukuhamba kumamenyu efoní

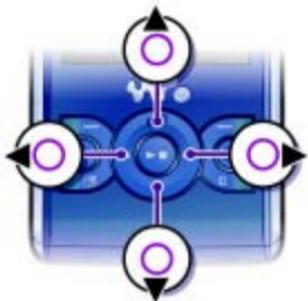

- 1 Kokubekwe eceleni khetha **lmenyu**.
- 2 Sebenzisa ikhi yokuhamba ukuhamba kumamenyu.

Ukukhetha izenzo esibukweni

- Cindezela ikhi yokukhetha esesinxeleni, ephakathi noma ekwesokudla.

Ukuhlola okukhethwa kukho kwento

- Khetha **lzinkefha** ukuze, isibonelo, uhlele.

Ukuqedha umsebenzi

- Cindezela **lzinkefha**.

Ukubuyela kokubekwe eceleni

- Cindezela **lzinkefha**.

Ukuhamba kwimidyá yakho

- 1 Kokubekwe eceleni khetha **lmenyu** > **lmidya**.
- 2 Pheqela kwinto yementu bese ucindzelala ikhi lokuhambisa esidleni.
- 3 Ukubuyela emuva, cindzelala ikhi lokuhambisa esinxelani.

Ukususa izinto

- Cindzelala **lzinkefha** ukususa izinto ezifana nezinamba, izinhlamvu, izithombe nemisindo.

Amathebhu

Amathebhu angatholakala. Isibonelo, **lzinhele** kunawo amathebhu.



Ukupheqa phakathi kwmathebhu

- Cindzelala ikhi yokuhambisa kwesokunsele noma kwesokudla.

Amashothikhathi

Ungasebenzisa amashothikhathi ekhiphedi ukuya ngqo kwimisebenzi.

Ukusebenzisa amashothikhathi ekhi lokuhambisa

- Kokubekwe ecele cindzelala **lzinkefha**, **lmidya**, **lmidya** noma **lzinkefha** ukuya ngqo kumsebenzi.

Ukuhlela ishothikhathi yekhi lokuhambis

- 1 Kokubekwe eceleni khetha **Imenu**
> **Izinhlelo** > eye **Okujwayelekile** ithebh
> **Oshothikhathi**.
- 2 Pheqela kokukhethwa kukho bese ukhetha **Hlela**.
- 3 Pheqela kokukhethwa kukho kwemenyu bese ukhetha **Shotkh**.

Amashothikhathi emenu enkulu

Ukfakwa kwezinamba kumamenyu kuqala kuphawu oluphezelu esinxeleni kunqamule kuye kolunye uhlangothi bese kwehla umugqa ngomugqa.

Ukuya ngqo kwimenu enkulu

- Kokubekwe eceleni khetha **Imenu** bese ucindeza **(1) – (9)**, **(*#A)**, **(0 +)** noma **(#~#)**.

- ! **Lokhu Isakh menu enk kufanele kusethelwe ku Igidi. Bheka Ukushintsha isakhwi semenu enkulu ekhasini 67.**

Imenu yomsebenzi

Imenu yomsebenzi yenza ufinyelele ngokushesha kwi:

- **Izig ezintsha** – izingcingo ezingabanjwanga nemibiko emisha.
- **Izinhlelo eziha**. – izinhlelo ezihambayo ngemuva kwisendlalelo.

- **Amashothikh. ami** – ngeza imisebenzi oyikhonzile ukuze ufinyelele kuyo ngokushesha.
- **I-inthanethi** – ukufinyelela ngokushesha kwi-Inthanethi.

Ukuvula imenu yomsebenzi

- Cindezela .

Imemori

Ungagcina okuquketwhe kumemori khadi, kumemori yrfoni naku-SIM khadi. Izithombe nomculo kugcinwa kumemori khadi uma ifakiwe imemori khadi. Uma ingekho, noma uma igcwele, kugcinwa kumemori yefoni. Imibiko noxhumana nabo kugcinwa kumemori yefoni, kodwa ungakhetha ukukugcina ku-SIM khadi.

Imemori khadi

Ifonu yakho isekela imemori khadi yeMemory Stick Micro™ (M2™) okwengeza esinye isikhala sokulondoloza efonini yakho. Ingasetshenziswa futhi njengememori khadi ephathekayo namanye amadivaysi afanelene.

Ungahambisa okuquketwhe phakathi kwememori khadi nemeori yefoni. Bheka *Ukusingatha* okuquketwhe *ngaphakathi* kfewoni ekhasini 24.

! Kungadingeka uthenge imemori khadi eceleni.

Ukufaka imemori khadi



Ukukhipha imemori khadi



- Vula ikhava bese ufaka imemori khadi ngendlela yokuthi okuthintanayo okusagolide kubheke phansi.

- Vula ikhava bese ukhipha imemori khadi.

Ukuhlola okukhethwa kukho kwememori khadi

- 1 Kokubekwe eceleni khetha **Imenu** > **Umhleli** > **Imenenja yefayela** > eye **Kwimemori khadi** ithebhу.
2 Khetha **Izinketh**.

Ulimi Iwefon

Ungakhetha ulwimi ozolusebenzisa efonini yakho.

Ukushintsha ulimi Iwefon

- 1 Kokubekwe eceleni khetha Imenu > Izinhlelo > eye Okuiwayelekile ithebhu > Ulimi > Ulimi Iwefon.
- 2 Khetha ongakhetha kukho.

Ukufaka umbhalo

Ungasebenzisa i-multitap text input noma i-T9™ Text Input  ukufaka umbhalo. Indlela ye-T9 Text Input isebeenzisa isichazamazwi esakhelwe ngaphakathi.

Ukushintsha indlela ye-text input

- Uma ufaka umbhalo, cindezela bese ubamba .

Ukushintsha pakathi kosonhlamvukazi abakhulu nabancane.

- Uma ufaka umbhalo, cindezela .

Ukufaka izinamba

- Uma ufaka umbhalo, cindezela bese ubamba  - .

Ukufaka amafulstophu namakhoma

- Uma ufaka umbhalo, cindezela .

Ukufaka uphawu

- 1 Uma ufaka umbhalo, khetha Izinketh > Faka uphawu.
- 2 Pheqela ophawini bese ukhetha Faka.

Ukufaka umbhalo usebeenzisa i-T9™ Text Input

- 1 Kokubekwe eceleni khetha, isibonelo, Imenu > Imibiko ethunyel. > Bhala okusha > Umbiko womb.
- 2 Uma  kungakhonjisiwe, cindezela bese ubamba  ukushintshela ku-T9 Text Input.
- 3 Cindezela ikhi ngayinye kanye kuphela, noma ngabe lolohlamvu olufunayo akulona olukuqala kwikhi. Isibonelo, ukubhala igama elithi “Jane”, cindezela , , ,  noma  ukuhlolola imibono.
- 5 Cindezela  ukwamukela umbono.

Ukufaka umbhalo ngokusebenzisa i-multitap

- 1 Kokubekwe eceleni khetha, isibonelo, Imenu > **Imibiko ethunyel.** > **Bhala okusha** > **Umbiko womb.**
- 2 Uma kukhonjiswa, cindezela bese ubamba ukushintshela ku-multitap text input.
- 3 Cindezela (2) – (9) ngokuphindelela kuze kuvele uhlamu olufunayo.
- 4 Uma igama libhalwa, cindezela (2) ukwengeza isikhala.

Ukwengeza amagama kwisichazamazwi esakhelwe ngaphakathi

- 1 Uma ufaka umbhalo ngokusebenzisa i-T9 Text Input, khetha **Izinketh** > **Pela igama**.
- 2 Bhala igama ngokusebenzisa i-multitap input bese ukhetha **Faka**.

I-Walkman™

Ungalalela umculo, amabhuku alalelwayo nama-podcasts.

Sebenzisa **iSony Ericsson Media Manager** ukudlulisa okuqukethwe kusuke noma kuye kwifoni yakho. Bheka **Ukudlulisa** okuqukethwe kuye noma kusuke kuhompyutha ekhasini 25 ngolunye ulwazi.

Ihendisfri ephathekayo yestiryo



Ukusebenzisa ihendisfri

- Xhuma ihendisfri ephathwayo. Umculo uyama uma wamukela ucingo bese uqhubeka uma usuqedile ngocingo.

Isidlali se-Walkman™

Ukudlala umculo

- 1 Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Umculo**.
- 2 Pheqa ngomkhakha ngokusebenzisa ikhi yokuhambisa.
- 3 Pheqela kwithrekhi bese ukhetha **Dlala**.

Ukumisa ukudlala umculo

- Cindezela ikhi yokuhlwaya ephakathi.

Ukusheshisa phambili nokusheshisa emuva

- Cindezela bese ubamba noma .

Ukuhamba phakathi kwamathrekhi

- Cindezela noma .

Ukunciphisa isidlali

- Uma kudlala umculo, cindezela .

Ukubuyela kusidlali

- Cindezela .

I-Shake control

Ukushintsha ithrekhi



- Uma umculo udlala, cindezela bese ubamba bese uyisa ifoni kwesokudla ngesihlakala sakho ukudlulela kwithrekhi elandelayo. Ukuya kwithrekhi eyandulele, yenza into efanayo esinxeleni.

Ukushova amathrekhi



- Uma kudala umculo, cindezela bese ubamba (WPS) bese uxukuza ifoni yakho.

Ukushintsha ivolumu



- 1 Uma umculo udlala, misa ifoni phambi kwakho ibheke phezulu.
- 2 Cindezela ubambe (WPS), bese ugobisela ingalo yakho phezulu ngakuwena ukuze wandise ivolumu. Ukunciphisa ivolumu, phinda leso senzo kodwa uphambanise.

Izinhla zokudlala

Ungakha izinhla zokudlala ukuhlela umculo wakho. Amathrekhi angongezwa ohlwini lokudlala olungaphezu kolulodwa.

Ukususa uhlu lokudlala, noma ithrekhi esohlwini lokudlala, akulisusi ithrekhi kwimemori, kuphela irefarensi yethrekhi.

- ! *Kungathatha imizuzu embalwa ukuba ifoni yakhe uhlu lokudlala.*

Ukwakha uhlu lokudlala

- 1 Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Umculo** > **Izinhla zokudlala**.
- 2 Pheqela ku **Uhlu lokudlala olus.** bese ukhetha **Engeza**.
- 3 Faka igama bese ukhetha **Kulungile**.
- 4 Kwithrekhi ngayinye ofuna ukuyimaka, pheqela kuyona bese uyayikhetha **Maka**.
- 5 Khetha **Engeza** ukwengeza amathrekhi ohlwini lokudlala.

 *Ungongeza amafolda ohlwini lokudlala.
Wonke amathrekhi akufolda engezwa
ohlwini lokudlala.*


***Ukwengeza amathrekhi ohlwini
lokudlala***

- 1 Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Umculo** > **Izhnla zokudlala**.
- 2 khetha uhla lokudlala.
- 3 Pheqela ku **Engeza umculo bese** ukhetha **Engeza**.
- 4 Kwithrekhi ngayinye ofuna ukuyimaka, pheqela kuyona bese uyayikhetha **Maka**.
- 5 Khetha **Engeza** ukwengeza amathrekhi ohlwini lokudlala.

Ukukhipha amathrekhi ohlwini lokudlala

- 1 Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Umculo** > **Izhnla zokudlala**.
- 2 khetha uhla lokudlala.
- 3 Pheqa kwingoma bese ucindezela .

I-SensMe™

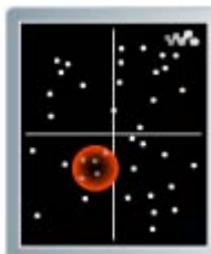

Nge-SensMe™ ungakha izinhla zokudlala ezihambisana nezimongqondo. Ngokusebenzisa iSony Ericsson Media Manager ukuhlaziya nokudlulisa umculo efonini yakho, ulwazi olufana nesimongqondo, isigqi namakhodi kuyengezwa kumathrethi akho. Amathrekhi avezwa njengamachashaza emephini enezimbazo ezimbili. Ungakha uhlu lokudlala ngokukhetha indawo yamatrekhi.

 *Ngolwazi olumayelana nokuhlaziya umculo wakho, bheka ku-Sony Ericsson Media Manager Online Help.*

***Ukwakha uhla lokudlala ngesimo
ngqondo***

- 1 Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Umculo**.
- 2 Pheqela ku **I-SensMe™** bese ukhetha **Vula**.

- 3 Cindezela nomá ukuhlola kuqala amathrekhi ehlukene.
- 4 Khetha **Engeza** bese ucindezela nomá ukukhetha indawo yamathekhi.
- 5 Khetha **Yakha** ukudlala uhlu lokudlala kusidlali se-Walkman®.
- 6 Khetha **Izinketh > Gcina uhlu lokud.** bese ukhetha igama qede ukhethet **Kulungile.**

Amabhuku alalelwayo

Ungalalela amabhuku alalelwayo
owadlulisele efonini yakho esuka
kwikhompyutha ngokusebenzisa
iSony Ericsson Media Manager.

- ! Kungathatha imizuzu embalwa ngaphambi kokuba ibhuku elilalelwayo elidluliselwe livele ohlwini lwamabhuku alalelwayo atholakalayo.

Ukungena kumabhuku alalelwayo

- Kokubekwe eceleni khetha **Imenuy** > **Imidiya** > **Umculo** > **Amabhuku e-audio.**

- Ungathola amabhuku alalelwayo
ngamafomathi okungewona e-M4B
nalawo amathegi ezahluko e-ID3v2
kweye-**Amathrekhi** ifolda.

I-PlayNow™

Ungaxhuma kwiPlayNow™ ukulanda amaringithoni, imidlalo, umculo, izingqikithi namaphepha odonga. Ungalalela noma uhlole okuqukethwe ngaphambi kokukuthenga bese ukulandela efonini yakho.

Uma ungeke ukwazi ukusebenzisa i-PlayNow™, bheka **Imibuzo nezixazululo** ehasini 71.

- ! Le sevisi ayitholakali kuwo wonke amazwe.

Ukusebenzisa iPlayNow™

- 1 Kokubekwe eceleni khetha **Imenuy** > **I-PlayNow™**.
- 2 Pheqela ku-Web saythi yePlayNow™ bese ulandela imiyalo ukuze uhlole bese uthenga okuqukethwe.

I-TrackID™

I-TrackID™ iyisevisi ekhumbula umculo. Ungacinga isihloko, umculi negama le-albhamu kwethrekhi oyizwa idlala ngelawdispikha noma emsakazweni.

Uma ungeke ukwazi ukusebenzisa i-TrackID™, bheka **Imibuzo nezixazululo** ehasini 71.

! Ngolwazi lwezindleko, xhumana nomnikezeli wakho wesevisi.

Ukucinga ulwazi Iweculo

- 1 Uma uzwa iculo ngelawudispikha, kokubekwe eceleni khetha **Imenu** > **Ukuzithokozisa** > **TrackID™** > **Qala**.
- 2 Uma umsakazo udlala khetha **Izinketh** > **TrackID™**.

💡 Ngemiphumela eyedlula yonke, sebenzisa **i-TrackID™** endaweni engenamsindo.

Umculo wakulayini namavidyo kliphu

Ungahlola amavidyo kliphu bese ulalela umculo ngokuwathuthela efonini yakho evela kwi-Inthanethi. Uma ungeke ukwazi ukusebenzisa i-Inthanethi, bheka **Imibuzo nezixazululo** ekhasini 71.

Ukukhetha i-akhawunti yedatha yokuthuthela

- 1 Kokubekwe eceleni khetha **Imenu** > **Izhinlelo** > eye **Ukuxhumana** ithebhу > **Izhinlelo zokuham** > **Xhuma ngo:**.
- 2 Khetha i-akhawunti yedatha ozoyisebenzisa.
- 3 Khetha **Gcina**.

Ukuthutha umculo namavidyo kliphu

- 1 Kokubekwe eceleni khetha **Imenu** > **I-inthanethi**.
- 2 Khetha **Izinketh** > **Yiya ku** > **Mabhukumaka**.
- 3 Khetha ukuxhumana ozothutha ususa kukho.

Isidlali sevidyo

Ukudlala amavidyo

- 1 Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Ividyo** > **Amavidyo**.
- 2 Pheqela kusihloko bese ukhetha **Dlala**.

Ukumisa ukudlala amavidyo

- Cindezela ikhi yokukhetha ephakathi.

Umsakazo

Ukulalela umsakazo

- 1 Xhuma ihendisfri kwifoni.
- 2 Kokubekwe eceleni khetha **Imenu** > **Umsakazo**.

Ukucinga amashaneli nge-othomathikhī

- Khetha **Cinga**.

Ukucinga amashaneli ngesandla

- Cindezela noma .

Ukushintsha ivolumu

- Cindezela amakhi evolumu aye phezulu noma ezansi.

Ukunciphisa umsakazo

- Uma umsakazo udlala khetha Izinketh > Nciphisa.

Ukubuyela kumsakazo

- Kokubekwe eceleni khetha Imenuy > Umsakazo.

Ukugcina amashaneli

Ungagcina kuze kufike kumashaneli angu 20 asethwe phambilini.

Ukugcina amashaneli

- 1 Uma usuthole ishaneli yomsakazo khetha Izinketh > Gcina.
- 2 Pheqela kwindawo bese ukhetha Faka.

Ukukhetha amashaneli agciniwe

- 1 Khetha Izinketh > Amashaneli.
- 2 Khetha ishaneli yomsakazo.

Ukushintsha phakathi kwamashaneli agciniwe

- Cindezela ⓘ noma ⓘ.

I-MusicDJ™

Ungaqamba bese uhlala imiculu yakho ukuyisebenzisa njengamarlingithoni. Amabholokhi aqukethe imisindo ehlelwe ngaphambilini anezakhi ezihlukene ayatholakala.

Ukuqamba umculo

- 1 Kokubekwe eceleni khetha Imenuy > Ukuzithokozisa > I-MusicDJ™.
- 2 Khetha uku Faka, Kopisha noma Namek imisindo.
- 3 Sebenzisa ⓘ, Ⓢ, ⓘ noma ⓘ ukupheqa phakathi kwemisindo.
- 4 Khetha Izinketh > Gcina umculo.

Rekhoda umsindo

Ungarekhoda imemo yezwi noma umsindo. Imisindo erekhodiwe ingasethwa njengamarlingithoni.

- ! Kwamanye amazwe noma izifundazwe kudingwa wumthetho ukuba wazise umuntu ngaphambi kokuqophha ucingo.

Ukurekhoda umsindo

- Kokubekwe eceleni khetha [Imenu](#) > [Ukuzithokozisa](#) > [Qophia umsindo](#) > [Rekhoda](#).

Ukurekhoda uringo

- 1 Ngesikhathi socingo, khetha [Izinketh](#) > [Rekhoda](#).
- 2 Khetha [Gcina](#) ukugcina okurekhodiwe.

Ukulalela okurekhodiwe

- 1 Kokubekwe eceleni khetha [Imenu](#) > [Umhleli](#) > [Imenenja yefayela](#).
- 2 Pheqela ku [Umculo](#) bese ukhetha [Vula](#).
- 3 Pheqela kokurekhodiwe bese ukhetha [Dlala](#).

Ukudlulisa nokusingatha okuqukethwe

Ungadlulisa futhi usingathe okuqukethwe njengezithombe nomculo.

- ! Awuvumeleklile ukushintshanisa enye impahlia enamatungelo avikelwe. Lokhu  kusho ifayela elivikelwe.

Ukusingatha okuqukethwe ngaphakathi kwefoni

Ungasebenzisa [Imenenja yefayela](#) ukusingatha okuqukethwe okugcincwe kwimemori yefoni noma kumemori khadi. Amathebhlu nezimpawu [Imenenja yefayela](#) kukhombisa lapho okuqukethwe kugcincwe khona. Uma imemori igcwele, susa okunye okuqukethwe ukwakha isikhala.

Ukuhlola izinga lememori

- 1 Kokubekwe eceleni khetha [Imenu](#) > [Umhleli](#) > [Imenenja yefayela](#).
- 2 Khetha [Izinketh](#) > [Izinga lesiqophi](#).
- 3 Khetha [Imemori](#) khadi noma [Ifoni](#).

Ukukhetha ngaphezu kwento eyodwa kwifolda

- 1 Kokubekwe eceleni khetha [Imenu](#) > [Umhleli](#) > [Imenenja yefayela](#).
- 2 Pheqela kwifolda bese ukhetha [Vula](#).

- 3 Khetha **Izinketh > Maka > Maka okuningi.**
- 4 Entweni ngayinye ofuna ukuyimaka, pheqela kuyona bese uayikhetha **Maka.**

- Ukuhambisa izinto phakathi kwememori yefoni nememori khadi***
- 1 Kokubekwe eceleni khetha **Imenuy > Umhleli > Imenenja yefayela.**
 - 2 Thola into bese ukhetha **Izinketh > Singatha ifayela > Hambisa.**
 - 3 Khetha **Imemori khadi** noma **Ifoni.**
 - 4 Pheqela kwifolda bese ukhetha **Vula.**
 - 5 Khetha **Namek.**

- Ukuhlola ulwazi ngokuqukehwe***
- 1 Kokubekwe eceleni khetha **Imenuy > Umhleli > Imenenja yefayela.**
 - 2 Thola into bese ukhetha **Izinketh > Ulwazi.**

Ukuthumela okuqukehwe kwenye ifoni

Ungathumela okuqukehwe, isibonelo, kumiylezo noma ngokusebenzia i-Bluetooth™ wireless technology.

- Ukuthumela okuqukehwe***
- 1 Pheqela entweni bese ukhetha **Izinketh > Thumela.**
 - 2 Khetha indlela yokudlulisa.

! *Qinisekisa ukuthi idivaysi eyamukelayo iyayisekela indlela yokudlulisa oyikhethayo.*

Ukudlulisa okuqukehwe kuye noma kusuke kuhompyutha

Ungasebenzia i-Sony Ericsson Media Manager ukudlulisa okuqukehwe phakathi kwefoni yakho nekhompyutha.

! *Isofthiwe ye-Sony Ericsson Media Manager ifakiye kwi-CD efika nefoni yakho futhi iyatholakala uma ilandwa ku www.sonyericsson.com/support.*

Uma ugudlula noma ukopisha okuqukehwe ukususa kukhompyutha ukuyisa efonini yakho okuqukehwe okungaziwa kugcinwa kweye *Okunye* ifolda kwimenenja yefayela.

Izinhlelo zokusebenzia ezidinge kayo
Udinga olunye lwalezi nhlelo zokusebenza ukusebenzia isofthiwe efakwe kwi-CD yakho:

- I-Microsoft® Windows Vista™ 32 bhithi no 64 bhithi izihumusho ze: I-Ultimate, i-Enterprise, i-Business, i-Home Premium, noma i-Home Basic
- I-Microsoft® Windows XP (i-Pro noma i-Home), iService Pack 2 noma ngapezulu

Ukufaka i-Sony Ericsson Media Manager

- 1 Vula ikhompyutha yakho bese ufaka i-CD. I-CD iqala nge-othomathikhii bese iwindi lokufaka liyavuleka.
- 2 Khetha ulimi bese uqhebeza OK.
- 3 Qhebeza *Install Sony Ericsson Media Manager* bese ulandela imiyalo.

Ukululisa okuqukethwe ngokusebenzisa i-Sony Ericsson Media Manager

- ! **Ungalikhaphi ikhebulu le-USB efonini noma kwikhompyutha yakho ngesikhathi sokudlulisa, njengoba lokhu kungonakalisa imemori yefoni.**

- 1 Xuma ifoni kwikhompyutha ngekehebulu le-USB elisekelwa yifoni yakho.
- 2 **Ikhompyutha:** Qala/Izhinlelo/ Sony Ericsson/Media Manager.
- 3 **Ifoni:** Khetha [Ukululisa imidiya](#).
- 4 **Ikhompyutha:** Linda ifoni ize ivele ku-Sony Ericsson Media Manager.
- 5 Hambisa amafayela phakathi kwefoni nekhompyutha kwakho kwi-Sony Ericsson Media Manager.
- 6 Ukuze unqamule ngokuphepha ikhebulu le-USB, qhebeza kwesokudla uphewu lwediski ekhiphekayo ku-Windows Explorer bese ukhetha Khipha.

-.- Ngemininingwane yokudlulisa umculo, bheka ku Media Manager Help. Qhebeza

② **ekhoneni lesidla phezulu lefasitela le-Sony Ericsson Media Manager.** Ungaya futhi ku www.sonyericsson.com/support ufunde imikhombandlela yokuQalisa.

Ukusebenzisa ikhebulu le-USB

Ungaxhuma ifoni yakho kwikhompyutha ngekehebulu le-USB ukuvumelanisa, ukululisa nokubhekapha okuqukethwe kwefoni nokusebenzisa ifoni yakho njengemodemua. Ukuze uthole ulwazi oluthe xaxa, yiya ku www.sonyericsson.com/support ufunde imikhombandlela yokuQalisa.



Ngaphambi kokusebenzisa ikhebulu le-USB

- **Bheka Izhinlelo zokusebenzisa ezidingekayo ekhasini 25.**

! Sebenzisa kuphela ikhebula le-USB elisekelwe yifoni yakho. Ungalikhaphi ikhebula le-USB efonini noma kwikhompyutha yakho ngesikhathi sokudlulisa njengoba lokhu kungonakalisa imemori yefoni.

Ukunqamula ukuxhuma ikhebula le-USB ngokuphophile

- 1 Qhafaza esidleni ophawini lwediski ekhiphekayo ku *Windows Explorer*.
- 2 Khetha u-Khipha.
- 3 Nqamula ikhebula le-USB uma kunomyalezo othi sekuphophile ukwenze njalo efonini.

! Ungawakopishi amafayela ngokushesha uma ubufomathe idrayivu yefoni ku-PC. Uma kunjalo, khiphia ikhebula le-USB bese uaqala kabusha ifoni kuqala.

Hudula bese uphonsa

Ungahudula bese uphonsa okuqukethwe phakathi kwememori yefoni yakho nekhompyutha ku *Microsoft Windows Explorer*.

Ukuhudula bese uphonsa okuqukethwe

- 1 Xhuma ifoni yakho kwikhompyutha usebenzise ikhebula le-USB.
- 2 **Ifoni:** Khetha Ukuhulisa imidiya.
- 3 **Ikhompyutha:** Linda ize imemori yefoni ivele njengamadiski angaphandle kwi-*Windows Explorer*.

4 Hudula bese uphonsa amafayela akhethiwe phakathi kwefoni nekhompyutha.

Igama lefoni

Ungafaka igama lefoni yakho elivezwa kwamanye amadvaysi uma usebenzisa, isibonelo, iBluetooth™ wireless technology.

Ukufaka igama lefoni

- 1 Kokubekwe eceleni khetha Imenuy > Izhinlelo > eye Ukuxhumana ithebhу > Igama lefoni.
- 2 Faka igama lefoni bese ukhetha Kulungile.

Ukusebenzisa i-Bluetooth™ wireless technology

Uhlelo lwe-Bluetooth lwenza ukuxhumana okungenanawa kwamanye amadivaysi e-Bluetooth enzeke. Isibonelo, unga:

- Xhuma kumadivaysi ehendisfri.
- Xhuma kumadivaysi amanangi ngesikhathi esisodwa.
- Xhuma kumakhompyutha bese ungena kwi-Inthanethi.
- Shintshanisa izinto.
- Dlala imidlalo yabadlali abaningi.

Kunconya ukusabalala okungaphakathi kwamamitha ayi-10 (33 amafidi), kungabi nezinto eziqinile phakathi kwalo, ngokuxhumana kwe-Bluetooth.

Ngaphambi kokuba usebenzise ubuchwepheshes obungenawaya be-Bluetooth

Kufanele uvule umsebenzi we-Bluetooth ukuxhumana namanye amadivaysi. Kungadingeka futhi ukuthi ubhangqe ifoni yakho namanye amadivaysi e-Bluetooth.

Ukuvula umsebenzi weBluetooth

- Kokubekwe eceleni khetha lmenu > Izinhlelo > eye Ukuxhumana ithebhу > I-Bluetooth > Vula.
- ! Qinisekisa ukuthi idivaysi ofuna ukuyibhangqa nefoni yakho inomsebenzi we-Bluetooth ocushiwe futhi nobonakala kweBluetooth okuvulwe ku.

Ukubhangqa ifoni nedivaysi

- 1 Kokubekwe eceleni khetha lmenu > Izinhlelo > eye Ukuxhumana ithebhу > I-Bluetooth > Imishini yami.
- 2 Pheqa ku Umsihini omusha bese ukhetha Engeza ukcinga amadivaysi atholakalayo.
- 3 Khetha idivaysi.
- 4 Faka iphasikhodi, uma kudingeka.

Ukuvumela ukuxhumana nefoni

- 1 Kokubekwe eceleni khetha lmenu > Izinhlelo > eye Ukuxhumana ithebhу > I-Bluetooth > Imishini yami.
 - 2 Khetha idivaysi ohlwini.
 - 3 Khetha Izinketh > Vumela ukuxhum.
 - 4 Khetha Cela njalo noma Vumela njalo.
- ! Lokhu kwenzeka kuhphela kumadivaysi adinga ukungena kwisevisi evikelekile.

Ukubhangqa ifoni nehendisfri ye-Bluetooth ngokokuqala

- 1 Kokubekwe eceleni khetha lmenu > Izinhlelo > eye Ukuxhumana ithebhу > I-Bluetooth > Ihendisfri.
- 2 Khetha idivaysi.
- 3 Faka iphasikhodi, uma kudingeka.

Ukonga amandla

Ungonga amandla ebhethri ngomsebenzi wokonga Amandla. Kwimodi yoKonga amandla ungax huma kuhphela ngedivaysi eyodwa ye-Bluetooth. Kufanele ucisile lo msebenzi uma ufuna ukuxhumana namadivaysi e-Bluetooth angapezu kweyodwa.

Ukuvula ukonga amandla

- Kokubekwe eceleni khetha lmenu > Izinhlelo > eye Ukuxhumana ithebhу > I-Bluetooth > Ukonga amandla > Vuliwe.

Ukudlulisa umsindo oya noma ovela kwhendifdisfri ye-Bluetooth

Ungadlulisa umsindo uye noma ovela kwhendifdisfri ye-Bluetooth ngokusebenzisa ikhi yefoni noma yehehendifdisfri.

Ukudlulisa umsindo

- 1 Kokubekwe eceleni khetha *Imenuy* > *Izinhlelo* > eye *Ukuxhumana* ithebhу > *I-Bluetooth* > *Ihendifdisfri* > *Ucingo olungenayo*.
- 2 Khetha okukhethwa kukho. I *Efonini* idlulisela umsindo efonini yakho. I *Kwhendifdisfri* idlulisela umsindo kwhendifdisfri.

Ukudlulisa umsindo ngesikhathi socingo

- 1 Ngesikhathi socingo, khetha *Umsind*.
- 2 Khetha ohlwini.

Ukubhekapha nokubuyisela

Ungabhekapha okuqukethwe kwefoni kwikhompyutha ngokusebenzisa *i-Sony Ericsson PC Suite* ne-
Sony Ericsson Media Manager.
Nge-Sony Ericsson PC Suite ungabhekapha ubuye ubuyisele oxhumene nabo, ikhalenda, imisebenzi, amanothi namabhukhmaka. *Nge-Sony Ericsson Media Manager*

ungabhekapha ubuye ubuyisele okuqukethwe okunjengomculo, izithombe namavidyo kliphu.

Ngaphambi kokubhekapha nokubuyisela, udinga ukufaka i- *Sony Ericsson PC Suite* kanye ne- *Sony Ericsson Media Manager*.

- !
- Njalo ubokwenza ibhekaphu ngaphambi kokukhuphula izinga lefoni yakho, ngoba uukuphphula izinga kungasula okuqukethwe komsebenzisi.*

Ukwenza ibhekaphu ngokusebenzisa i-Sony Ericsson PC Suite

- 1 **Ikhompyutha:** Qala i- *Sony Ericsson PC Suite* ku-*Qala/izinhlelo/Sony Ericsson/PC Suite*.
- 2 Landela imiyalo kwi-*Sony Ericsson PC Suite* ngendlela yokuxhuma.
- 3 **Ifoni:** Khetha *Imodi yefoni*.
- 4 **Ikhompyutha:** Yiya kubhekaphu bese ubuyisela ingxenye kwi-*Sony Ericsson PC Suite* bese wenza ibhekaphu.

- !
- I-Sony Ericsson PC Suite izobhala phezu kwako konke okuqukethwe ngesikhathi sokubuyisela. Ungalimaza ifoni yakho uma uphazamisa le nqubo.*

Ukubuyisela okuqukethwe kwefoni ngokusebenzisa i-Sony Ericsson PC Suite

- 1 **Ikhompyutha:** Qala i- Sony Ericsson PC Suite ku-Qala/izinhlelo/ Sony Ericsson/PC Suite.
- 2 Landela imiyalo kwi-Sony Ericsson PC Suite ngendlela yokuxhuma.
- 3 **Ifonyi:** Khetha **Imodi yefoni.**
- 4 **Ikhompyutha:** Yiya kwixene ye bhekhaphu nokubuyisela kwi- Sony Ericsson PC Suite bese ubuyisela ifoni yakho.

Ukwenza ibhekaphu ngokusebenzisa i-Sony Ericsson Media Manager

- 1 Xhuma ifoni yakho kwikhompyutha usebenzise ikhebulu le-USB.
- ! **Ungaxhuma futhi ifoni yakho kwikhompyutha ngokusebenzsa i-Bluetooth.**
- 2 **Ifonyi:** Khetha eye **Ukudlulisa imidiya imodi.**
- 3 **Ikhompyutha:** Qala i-Sony Ericsson Media Manager ngo-Qala/Izhinlelo/ Sony Ericsson/PC Suite.
- 4 Yiya kwixene ye bhekhaphu ku-Sony Ericsson Media Manager.

- 5 Khetha amafayela ofuna ukuwabhekapha bese wenza ibhekaphu.

! *I-Sony Ericsson Media Manager izoqhatanisa okuqukethwe kwefoni yakho nebhekaphu yekhompyutha yakho bese ibuyisela amafayela angekho efonini yakho. Ungalimaza ifoni yakho uma uphazamisa le nqubo.*

Ukubuyisela okuqukethwe kwefoni ngokusebenzisa i-Sony Ericsson Media Manager

- 1 Xhuma ifoni yakho kukhompyutha yakho.
- 2 **Ifonyi:** Khetha eye **Ukudlulisa imidiya imodi.**
- 3 **Ikhompyutha:** Qala i-Sony Ericsson Media Manager ngo-Qala/Izhinlelo/ Sony Ericsson/PC Suite.
- 4 Yiya kwixene ye bhekhaphu ku-Sony Ericsson Media Manager.
- 5 Khetha amafayela ofuna ukuwabuyisela bese uyawabuyisela.

! *Ngolunye ulwazi ngokubhekapha nokubuyisela ku-Sony Ericsson Media Manager bheka umkhombandlela woku Qalisa i-Sony Ericsson Media Manager ku-www.sonyericsson.com/support.*

Kushaywa ucingo

Ukushaya nokwamukela izingingo

Udinga ukuvula ifoni yakho bese uba sendaweni eyamukela inethiwekhi.

Ukushaya ucingo

- 1 Kokubekwe eceleni faka inamba yefoni (nekhodi lamazwe omhlaba jikelele nekhodi lendawo, uma kudingeka).

- 2 Cindezela .

Ungashayela izinamba ezikoxhumene nabo nasohlwini lwezingingo. Bheka Oxhumene nabo ekhasini 33, ne Uhla lwezingingo ekhasini 36. **Ungasebenzisa futhi izwi lakho ukushaya izingingo.** Bheka Ukulawula izwi ekhasini 37.

Ukuvala ucingo

- Cindezela .

Ukushaya izingingo zomhlaba jikelele

- 1 Kokubekwe eceleni cindezela bese ubamba kuze kuvele uphawu “+”.
- 2 Faka ikhodi lezwe, ikhodi lendawo (ngaphandle kukaziro wokuqala) nenamba yefoni.
- 3 Cindezela .

Ukudayela kabusha inombolo

- Uma [Phinda uzame?](#) kuvela khetha Yebo.

Ungayibeki ifoni yakho endlebeni ngenkathi usalindile. Uma ucingo lux huma, ifoni iniha isignalis enomsindo.

Ukuphendula ucingo

- Cindezela .

Ukudikila ucingo

- Cindezela .

Ukushintsha ivolumu yespikha sendlebe ngesikhathi socingo

- Cindezela ikhi yevolumu iye phezulu noma ezansi.

Ukuthulisa imakhrofoni ngesikhathi socingo

- 1 Cindezela bese ubamba .
- 2 Cindezela bese ubamba futhi ukuqhube ka.

Ukuvala ilawudispikha ngesikhathi socingo

- Khetha **Ispikha**.

Ungayibeki endlebeni ifoni yakho ngenkathi usebenzisa ilawudispikha. Lokhu kungalimaza izindlebe zakho.

Ukuhlola izingcingo ezingabanjwanga kokubekwe eceleni

- Cindezela ukuvula uhlu lwezingingo.

Amanethiwekhi

Ifonyakho izishintsha ngokwayo phakathi kwamanethiwekhi e-GSM nawe-3G (UMTS) kuncike ekutholakaleni. O-opharetha abathile bamanethiwekhi bakuvumela ukuba ushintshanise amanethiwekhi ngesandla.

Ukushintsha amanethiwekhi ngesandla

- 1 Kokubekwe eceleni khetha [Imenuy](#) > [Izhinlelo](#) > eye [Ukuxhumana](#) ithebhu > [Amanethiwekhi a](#) > [Amanet](#). e-GSM/3G.
- 2 Khetha ongakhetha kukho.

Izingingo eziphuthumayo

Ifonyakho ise kela izinombolo zamazwe omhlaba jikelele eziphuthumayo, isibonelo, u-112 no-911. Lezi zinombolo zingasetshenziswa ngokujwayelekile ukushayela inombolo ephuthumayo kunoma yiliphi izwe, kufakwe noma ingafakiwe i-SIM khadi, uma nje ukwazi ukwamukela inethiwekhi.

! *Kwamanye amazwe, ezinye izinombolo eziphuthumayo zingakhangiswa.
U-opharetha wakho kungenzeka ukuba uvele usezigcinile kwi-SIM khadi yakho izinombolo ezengenziwe eziphuthumayo zasekhaya.*

Ukushaya ucingo oluphuthumayo

- Kokubekwe eceleni faka 112 (inamba yezimo eziphuthumayo yomhlal awonke) bese ucindezela .

Ukuhlola izinombolo eziphuthumayo zakho zasekhaya

- 1 Kokubekwe eceleni khetha [Imenuy](#) > [Ifonibhuku](#).
- 2 Pheqela ku [Oxhumene naye](#) bese ukhetha [Izinketh](#) > [Izinombolo ezithile](#) > [Izinamba eziphuth.](#)

Ucingo Iwevidyo

Ungabona umuntu esibukweni ngesikhathi sezingingo. Womabilamaqembu adinga ukuthenga okwesekela isevisi ye-3G (UMTS), futhi udinga ukuba ukwazi ukwamukela inethiwekhi ye-3G (UMTS). Isevisi ye-3G (UMTS) iyatholakala uma kuvela.

Ukushaya ucingo lwevidyo

- 1 Kokubekwe eceleni faka inamba yefoni (nekhodi lamazwe omhlaba jikelele nekhodi lendawo, uma kudingeka).
 - 2 Khetha **Izinketh > Shaya ucingo lwe.**
- Ukusebenzisa i-zoom nocingo oluphumayo lwevidyo***
- Cindezela noma .
- Ukuhlola okukhethwa kukho kwezingcingo zevidyo***
- Ngesikhathi socingo, khetha **Izinketh.**

Oxhumene nabo

Ungagcina amagama, izinamba zefoni nolwazi oluqondene nawe ku **Ifonibhuku**. Ulwazi lungagcinwa kwimemori yefoni noma kwi-SIM khadi.

Ungavumelanisa oxhumene nabo ngokusebenzisa i-Sony Ericsson PC Suite.

Oxhumana nabo bedifolthi

Ungakhetha ukuthi yiluphi ulwazi loxhumene nabo olukhonjiswa njengedifolthi. Uma **Abangani** ekhethwe njengedifolthi, oxhumana nabo bakhombisa lonke ulwazi olugcinwe ku **Ifonibhuku**. Uma ukhetha

Izinombolo zeSIM njengedifolthi, oxhumana nabo bakhombisa amagama nezinamba okugcinwe kwiSIM khadi.

Ukukhetha oxhumene nabo bedifolthi

- 1 Kokubekwe eceleni khetha **Imenu** > **Ifonibhuku**.
- 2 Pheqela ku **Oxhumene naye** bese ukhetha **Izinketh > Kuthuthukile > Oxhumene nabo a.**
- 3 Khetha ongakhetha kukho.

Oxhumene nabo befoni

Oxhumana nabo befoni bangaba namagama, izinamba zefoni nolwazi oluqondene nabo. Bagcinwa kwimemori yefoni.

Ukwengeza oxhumene naye efonini

- 1 Kokubekwe eceleni khetha **Imenu > Ifonibhuku**.
- 2 Pheqela ku **Oxhumene naye** bese ukhetha **Engeza**.
- 3 Faka igama bese ukhetha **Kulungile**.
- 4 Pheqela ku **Inombolo entsha:** bese ukhetha **Engeza**.
- 5 Faka inamba bese ukhetha **Kulungile**.
- 6 Khetha okukhethwa kukho inamba.
- 7 Pheqa phakathi kwamatheбу wengeza ulwazi kuzindima.
- 8 Khetha **Gcina**.

- 3 Pheqela kokukhethwa kukho bese uhlela iminininingwane.
- 4 Khetha Gcina.

Ukwengeza ibhizinesi khadi lakho

- 1 Kokubekwe eceleni khetha Imenu > Ifonibhuku.
- 2 Pheqela ku Mina qobo bese ukhetha Vula.
- 3 Pheqela ku Iminin yokux nami bese ukhetha Engeza > Qamba okusha.
- 4 Pheqa phakathi kwamathebhu wengeza ulwazi kuzindima.
- 5 Faka ulwazi bese ukhetha Gcina.

Amaqembu

Ungakha iqoqo lezinamba zefoni namakheli e-imelyi nge Abangani ozothumela imibiko kuzo. Bheka *Ukuthumela imibiko* ekhasini 42. Ungasebenzisa futhi amaqembu (nezinamba zezingcingo) uma wakha uhlu lwabafonayo abamukelekile. Bheka *Amukela izingcingo* ekhasini 40.

Ukwakha iqoqo lezinamba namakheli e-imelyi

- 1 Kokubekwe eceleni khetha Imenu > Ifonibhuku.
- 2 Pheqela ku Oxhumene naye bese ukhetha Izinketh > Amaqembu.
- 3 Pheqela ku Igembu elisha bese ukhetha Engeza.

- 4 Faka igama leqembu bese ukhetha Qhubeka.
- 5 Pheqela ku Okusha bese ukhetha Engeza.
- 6 Kuleyo naleyo namba yoxhumana naye noma ikheli le-imelyi ofuna ukukumaka, pheqela kukona bese ukhetha Maka.
- 7 Khetha Qhubeka > Kwenziw.

Uhla Iwezingcingo

Ungahlola ulwazi mayelana nezingcingo zakamuva.

Ukushayela inombolo ohlwini Iwezingcingo

- 1 Kokubekwe eceleni cindezela ↗ bese upheqela kwithebhu.
- 2 Pheqela kwigama noma inamba bese ucindezela ↗.

Ukwengeza inombolo yohlu Iwezingcingo koxhumene nabo

- 1 Kokubekwe eceleni cindezela ↗ bese upheqela kwithebhu.
- 2 Pheqa enambeni bese ukhetha Gcina.
- 3 Khetha Oxhumene naye ukwakha oxhumene naye omusha noma ukukhetha oxhumene naye ovele ekhona ukwengeza inamba kuye.

Ukudayela okusheshayo

Ukudayela okusheshayo

kukuvumela ukhethe oxhumana nabo abayisihiyagalolunye ongabashayela ngokushesha. Oxhumana nayo bangagcinwa ezindaweni 1-9.

Ukwengeza oxhumana nabo kwizinamba zokudayela ngokushesha

- 1 Kokubekwe eceleni khetha **Imenu** > **Ifonibhuku**.
- 2 Pheqela ku **Oxhumene naye** bese ukhetha **Izinketh** > **Dayela ngokushesh**.
- 3 Pheqela kwinamba yesikhala bese ukhetha **Engeza**.
- 4 Khetha oxhumana naye.

Ukudayela ngokushesha

- Kokubekwe eceleni faka inamba yendawo bese ucinezela 

Imeyili yezwi

Uma ukuthenga kwakho kubandakanya isevisi yokuphendula, abakushayela ucingo bangashiya umbiko kwimeyili yezwi uma ungeke ukwazi ukuphendula ucingo.

Ukuhlela inamba yemeyili yezwi yakho

- 1 Kokubekwe eceleni khetha **Imenu** > **Imibiko ethunyel.** > **Izinhlelo** > **Inombolo yesiqoph**.
- 2 Faka inamba bese ukhetha **Kulungile**.

Ukushayela isevisi yemeyili yezwi yakho

- Kokubekwe eceleni cindezela bese ubamba 

Ukulawula izwi

Ngokwakha imiyalo yezwi unga:

- Dayela ngezwi – fonela umuntu ngokuthi usho igama lakhe.
- Phendula noma udikile izingcingo ngenkathi usebenzisa ihendisifri.

Ukurekhoda umyalo wezwi ngokusebenzisa ukudayela ngezwi

- 1 Kokubekwe eceleni khetha **Imenu** > **Izinhlelo** > eye **Okujwayelekile** ithebhу > **Lawula izwi** > **Ukudayela ngezwi** > **Cupha**.
- 2 Khetha **Yebo** > **Izwi elisha lomyalelo** bese ukhetha oxhumana naye. Uma oxhumana naye enezinamba ezingaphezu kweyodwa, khetha inamba ozofaka kuyo umyalo wezwi.
- 3 Rekhoda umyalelo wezwi njengokuthi “John mobile”.
- 4 Landela imiyalelo evelayo. Linda ithoni bese usho umyalelo ozowurekhoda. Umyalelo wezwi ubuye udialelwе wona.
- 5 Uma ukuqophapha kuzwakala kulungile, khetha **Yebo**. Uma kungenjalo, khetha **Cha** bese uphindha izinyathelo 3 no 4.

! *Imiyalo yezwi igcinwa kwimemori yefoni kuphela. Ayikwazi ukusetshenziswa kwenye ifoni.*

Ukudayela ngezwi

- 1 Kokubekwe eceleni cindezela bese ubamba ikhi yevolumu.
- 2 Lindela ithoni bese usho igama elirekhodiwe, isibonelo “John mobile”. Ifoni ikudlalela leli gama bese ifaka ucingo.

Ukuphendula ngezwi

Uma usebenzisa ihendisfri, ungaphendula noma udikile izingcingo ezingenayo ngezwi lakho.

Ukuvula uhlelo lokuphendula ngezwi bese ugopha imiyalelo yokuphendula ngezwi

- 1 Kokubekwe eceleni khetha **Imenyu** > **Izinhlelo** > eye **Okujwayelekile** ithebhу > **Lawula izwi** > **Ukuphendula ngezwi**.
- 2 Landela imiyalelo evelayo bese ukhetha **Qhubek**. Linda ithoni bese uthi “Phendula”, noma usho elinye igama olikhethayo.
- 3 Khetha **Yebo** ukwamukela noma **Changokurekhoda** okusha.
- 4 Landela imiyalelo evelayo bese ukhetha **Qhubek**. Linda ithoni bese uthi “Bhizi”, noma usho elinye igama olikhethayo.

- 5 Khetha **Yebo** ukwamukela noma **Changokurekhoda** okusha.
- 6 Landela imiyalelo evelayo bese ukhetha **Qhubek**.
- 7 Khetha izimo ofuna ukukucupha kuzo ukuphendula kwezwi.

Ukuphendula ucingo usebenzisa imiyalelo yezwi

- Yithi “Phendula”.

Ukudikila ucingo usebenzisa imiyalelo yezwi

- Yithi “Bhizi”.

Ukululiselala phambili izingcingo

Ungadluliselala phambili izingcingo, isibonelo, ziye kwisevisi yokuphendula.

! *Uma **Kholi alawuliwe** isetshenziswa, okunye okukhethwa kukho kokudluliselala phambili izingcingo akutholakali. Bheka Ukudayela okukalelwе ephasini 41.*

Ukululiselala phambili izingcingo

- 1 Kokubekwe eceleni khetha **Imenyu** > **Izinhlelo** > eye **Izingcingo** ithebhу > **Phambula**.
- 2 Khetha uhlolo locingo nokukhethwa kukho kokudluliselala phambili.
- 3 Khetha **Vuselela**.
- 4 Faka inamba ozodluliselala phambili kuyona izingcingo bese ukhetha **Kulungile**.



Ngaphezu kocingo olulodwa

Ungasingatha ngaphezu kocingo olulodwa ngesikhathi. Isibonelo, ungalindisa ucingo oluqhubekayo, khathi ushaya noma uphendula ucingo lwasibili. Ungashintshanisa futhi phakathi kwezingcingo ezimbili. Awukwazi ukuphendula ucingo lwasithathu ngaphandle kokuqedu olunye lwezingcingo ezimbili zokuqala. Ungahlanganisa futhi izilingcingo ezimbili.

Ucingo lulindile

Uzizwa ibhiphu uma wamukela ucingo lwasibili khathi ukulindisa ucingo kucushiwe.

Ukucupha ucingo olulindile

- Kokubekwe eceleni khetha [Imenyu](#) > [Izinhlelo](#) > eye [Izingcingo](#) ithebhу > [Singatha izin.](#) > [Azophendulwa](#) > [Vuselela.](#)

Ukushaya ucingo lwasibili

- Ngesikhathi socingo, cindezela . Lokhu kumisa ucingo olusaqhubeka.
- Khetha [Izinketh](#) > [Engeza ucingo.](#)
- Faka inamba ozoyifonela bese ucindezela .

Ukushaya ucingo lwasibili

- Ngesikhathi socingo, cindezela . Lokhu kumisa ucingo olusaqhubeka.

Ukudikila ucingo lwasibili

- Ngesikhathi socingo, cindezela bese uqhubeka nocingo oluqhubekayo.

Ukuqedu ucingo oluqhubekayo bese uphendula olwesibili

- Ngesikhathi socingo, khetha [Faka ucingo oluse.](#)


Ukuphatha izingcingo zezwi ezimbili
Ungaba nezingcingo eziqhubekeyo nezimile kanyekanye.

Ukushintsha phakathi kwezingcingo ezimbili

- Ngesikhathi socingo, cindezela .

Ukuhlanganisa izingcingo ezimbili

- Ngesikhathi socingo, khetha [Izinketh](#) > [Hlanganisa izingc.](#)

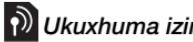

Ukuxhuma izingcingo ezimbili

- Ngesikhathi socingo, khetha [Izinketh](#) > [Dlulisa ucingo.](#) Unqanyuliwe kulezi zingcingo ezimbili.

Ukuqedu ucingo oluqhubekayo bese ubuyela ocingweni olulindile

- Qala ucindezele bese kuba .



Izingcingo zenkomfa

Ngoingo lwasigungu, ungaba nengxoxo ebanjiswene nabantu abafinyelela kwabahlanu.

Ukwengeza omusha umhlanganyeli

- 1 Ngesikhathi socingo, cindezela
- 2 Khetha Izinketh > Engeza ucingo.
- 3 Faka inamba ozoyifonela bese ucindezela
- 4 Khetha Izinketh > Hlanganisa izingc. ukwengeza umhlanganyeli omusha.
- 5 Phinda lo msebenzi ukwengeza abanye abahlanganyeli.

Ukudedela umhlanganyeli

- 1 Khetha Izinketh > Khulula iqembu.
- 2 Khetha umhlanganyeli ozomkhulula.

Ukuba nengxoxo yangasese

- 1 Ngesikhathi socingo, khetha Izinketh > Khuluma no bese ukhetha umhlanganyeli ozokhuluma naye.
- 2 Ukuquhubeka nocingo Iwenkomfa, khetha Izinketh > Hlanganisa izingc.

Izinombolo zami

Ungahlola, wengeze bese uhlela izinombolo zakho zefoni.

Ukuhlola izinombolo zefoni yakho

- 1 Kokubekwe eceleni khetha Imenu > Ifonibuku.
- 2 Pheqela ku Oxhumene naye bese ukhetha Oku.kukho > Izinombolo ezithile > Izinombolo zami.
- 3 Khetha ongakhetha kukho.

Amukela izingcingo

Ungakhetha ukwamukela izingcingo eziphuma kwizinamba ezithile kuperha.

Ukwengeza izinamba ohlwini Iwabashayi abemukelekile

- 1 Kokubekwe eceleni khetha Imenu > Izinhlelo > eye Izingingo ithebhu > Singatha izin. > Mkela izingcingo > Ezisohlwini kup.
- 2 Pheqela ku Okusha bese ukhetha Engeza.
- 3 Khetha oxhumana naye noma Amaqembu.

-- Bheka Amaqembu ekhasini 36.

Ukwamukela zonke izingcingo

- Kokubekwe eceleni khetha Imenu > Izinhlelo > eye Izingingo ithebhu > Singatha izin. > Mkela izingcingo > Bonke abafonile.



Ukudayela okukalelw

Ungakalela izingcingo eziphumayo nezingenayo. Iphasiwedi elivel a kumnikezeli wakho wesevisi liyadingeka.

- ! *Uma udlulisela phambili izingcingo ezingenayo, ngeke ukwazi ukusebenzia okunye okukhethwa kukho kokukalela izingcingo.*

Okukhethwa kukho kokukalela izingcingo

Okukhethwa kukho okujwayelekile yilokhu:

- *Eziphumayo* – zonke izingcingo eziphumayo.
- *Eziya emazweni* – zonke izingcingo zomhlaba jikelele eziphumayo.
- *Olumphumay uma uzul* – zonke izingcingo zomhlaba jikelele eziphumayo ngaphandle kwalezo eziya ezweni lakini.
- *Ezingenayo* – zonke izingcingo ezingenayo.
- *Olungenayo uma uzu* – zonke izingcingo ezingenayo uma uphesheya kwezilwandle.

Ukukalela izingcingo

- 1 Kokubekwe eceleni khetha *Imenu* > *Izinhlelo* > eye *Izingingo ithebh* > *Singatha izin.* > *Kholi alawuliwe.*
- 2 Khetha ongakhetha kukho.

3 Khetha *Vuselela.*

4 Faka iphasiwedi yakho bese ukhetha *Kulungile.*

Ukudayela okuheliwe

Ukudayela oluheliwe kukuvumela ukuthi ushayele izingcingo ezinambeni ezithile kuphela ezigcinwe kwiSIM khadi. Izinamba ezihleliwe zivikelwe yiPIN2 yakho.

Izinombolo ezingaphelele zingagcinwa. Isibonelo, ukugcina u-0123456 kuvumela izingcingo ukuba zishayelwe kuzo zonke izinombolo eziqala ngo-0123456.

! *Uma kusetsenziswa ukudayela okuheliwe, awukwazi ukuhlola noma ukuphatha zoma yiziphi izinamba zefoni ezigcinwe kwi-SIM khadi, kodwa usengakwazi ukushayela inamba yomhlaba yezimo eziphuthumayo, u-112.*

Ukusebenzisa ukudayela okuheliwe

- 1 Kokubekwe eceleni khetha *Imenu* > *Ifonibhuku.*
- 2 Pheqela ku *Oxhumene naye* bese ukhetha *Izinketh* > *Izinombolo ezithile* > *Ukudayela okuheli* > *Cupha.*
- 3 Faka i-PIN2 yakho bese ukhetha *Kulungile.*
- 4 Khetha *Kulungile* futhi ukuqinisekisa.

Ukugcina inamba ehleliwe

- 1 Kokubekwe eceleni khetha **lmenyu**
-> **Ifonibhuku**.
- 2 Pheqela ku **Oxhumene naye bese** ukhetha **Izinketh** > **Izinombolo ezithile**
-> **Ukudayela okuheli** > **Izinombolo eziheli** > **Inombolo entsha**.
- 3 Faka ulwazi bese ukhetha **Gcina**.

Isikhathi sokufona nezindleko

Ngesikhathi socingo, ifoni ikhombisa ukuthi usukhulume isikhathi esingakanani. Ungahlola isikhathi socingo lwakho lokugcina, izingcingo eziphumayo nesikhathi esiphelele sezingcingo zakho.

Ukuhlola isikhathi socingo

- Kokubekwe eceleni khetha **lmenyu**
-> **Izinhlelo** > **eye Izinggaingo ithebhу**
-> **Isikhathi nezindlek** > **Isilinganiso**.

Ukuveza noma ukufihla inamba yefoni yakho

Ungakhetha ukuveza noma ukufihla inamba yefoni yakho uma ushaya ucingo.

Ukufihla inombolo yefoni yakho

- 1 Kokubekwe eceleni khetha **lmenyu**
-> **Izinhlelo** > **eye Izinggaingo ithebhу**
-> **Kho./fihla ina.yami**.
- 2 Khetha **Fihla inombolo**.

Ukuthumela imibiko

Ukwamukela nokugcina imibiko

Uyaziswa uma wamukela umbiko. Imibiko igcinka nge-othomathikhì kwimemori yefoni. Uma imemori yefoni isigcwéle, ungasusa imibiko noma uyigcine kwi-SIM khadi.

Ukugcina umbiko kumemori khadi

- Kokubekwe eceleni khetha **lmenyu**
-> **Imibiko ethunyel**. > **Izinhlelo**
-> **Okujwayelekile** > **Gcina ku**
-> **Imemori khadi**.

Ukugcina umbiko kwi-SIM khadi

- 1 Kokubekwe eceleni khetha **lmenyu**
-> **Imibiko ethunyel**. bese ukhetha ifolda.
- 2 Pheqela kumbiko bese ukhetha **Izinketh** > **Gcina umbiko**.

Ukuhlola umbiko ovela ebhokisini lengenayo

- 1 Kokubekwe eceleni khetha **lmenyu**
-> **Imibiko ethunyel**. > **Ibhokisi lokunge**.
- 2 Pheqela kumbiko bese ukhetha **Hiola**.

Imibiko yombhalo

Imibiko ebhaliwe ingaqukatha izithombe, imiphumela yomsindo, izithombe zezilwane, nemiculo.

Ukubhala nokuthumela umbiko wombhalo

- 1 Kokubekwe eceleni khetha Imenuy > Imibiko ethunyel. > Bhala okusha > Umbiko obhaliwe.
 - 2 Bhala umbiko bese ukhetha Qhubeka > Bheka ifonibhku.
 - 3 Khetha umamukeli bese ukhetha Thumela.
- ! *Uma uthumela umbiko obhaliwe egenjini, uyakhokhiswa ngelungu ngalinye. Bheka Amaqembu ekhasini 36.*

Ukukopisha nokunamathisela umbhalo embikweni wombhalo

- 1 Uma ubhala umbiko, khetha Izinketh > Kopisha & unama.
- 2 Khetha Kopisha konke noma Maka & kopisha. Pheqela kumbhalo osembikweni bese uyawumaka.
- 3 Khetha Izinketh > Kopisha & unama. > Namathisela.

Ukulafaka into embikweni obhaliwe

- 1 Uma ubhala umbiko, khetha Izinketh > Engeza uhlamvu.
- 2 Khetha okukhethwa kukho kanye nento.

Ukushayela ucingo inamba esembikweni obhaliwe

- Uma uhlola umbiko, pheqela kwinamba yefoni bese ucindezela

Ukuvula imibiko emide

- 1 Kokubekwe eceleni khetha Imenuy > Imibiko ethunyel. > Izinhlelo > Umbiko obhaliwe.
- 2 Khetha Ubude bobukhulu b > Ubukhulu bukhon.

Imibiko yesithombe

Imibiko yesithombe ingaqukatha umbhalo, izithombe, izilaydi, umsindo orekhodiwe, amavidyo kliphu, izisayindyo nezinamathiselo. Ungathumela imibiko yesithombe efonini ehambayo noma kwikheli le-imeyli.

- ! *Kufanele ube namasethingi afanele ukuze uthumele umbiko wesithombe. Uma ungeke ukwazi ukusebenzisa imibiko yezithombe, bheka Imibuko nezixazululo ekhasini 71.*

Ukwakha nokuthumela umbiko wesithombe

- 1 Kokubekwe eceleni khetha Imenuy > Imibiko ethunyel. > Bhala okusha > Umbiko wesith.
- 2 Faka umbhalo. Ukwengeza izinto kumbiko, cindezela , pheqa bese ukhetha into.
- 3 Khetha Qhubeka > Bheka ifonibhku.
- 4 Khetha umamukeli bese ukhetha Thumela.

- Ukwengeza abanye abemukeli, pheqela ku **Ku**: bese ukhetha **Hlela**.
- Pheqela kokukhethwa kukho bese ukhetha **Engeza** > **Faka ikheli le-imeyli**. Faka ikheli le-imeyli bese ukhetha **Kulungile**. Uma usulungile, khetha **Kwenziw**.
- Khetha **Hlela** bese ufaka isihloko. Khetha **Kulungile**.
- Khetha **Hlela** bese ufaka umbhalo. Khetha **Kulungile**.
- Khetha **Engeza** bese ukhetha ifayela ozolinamathisela.
- Khetha **Qhubeka** > **Thumela**.

Ukwamukela nokufunda umbiko we-imeyli

- Kokubekwe eceleni khetha **Imenu** > **Imibiko ethunyel**. > **I-imeyli** > **Ibhokisi lokunge** > **Izinketh** > **Hlola** **imeyl entsha**.
- Pheqela kumbiko bese ukhetha **Hlola**.

Ukugcina umbiko we-imeyli

- Kokubekwe eceleni khetha **Imenu** > **Imibiko ethunyel**. > **I-imeyli** > **Ibhokisi lokunge**.
- Pheqela kumbiko bese ukhetha **Hlola** > **Izinketh** > **Gcina umbiko**.

Ukuphendula umbiko we-imeyli

- Kokubekwe eceleni khetha **Imenu** > **Imibiko ethunyel**. > **I-imeyli** > **Ibhokisi lokunge**.

- Pheqa kumbiko bese ukhetha **Izinketh** > **Phendula**.
- Bhala impendulo bese ukhetha **Kulungile**.
- Khetha **Qhubeka** > **Thumela**.

Ukuhlola isinamathiselo embikweni we-imeyli

- Uma uhlola umbiko, khetha **Izinketh** > **Izinamathiseli** > **Sebenzisa** > **Hlola**.

Ukugcina isinamathiselo embikweni we-imeyli

- Uma uhlola umbiko, khetha **Izinketh** > **Izinamathiseli** > **Sebenzisa** > **Gcina**.

I-akhawunti ye-imeyli esebenzayo
Uma ukhethe ama-akhawunti ambalwa e-imeyli, ungashintsha ukuthi yiliphi elisebenzayo.

Ukushintsha i-akhawunti ye-imeyli esebenzayo

- Kokubekwe eceleni khetha **Imenu** > **Imibiko ethunyel**. > **I-imeyli** > **Ama-akhawunti**.
- Khetha **i-akhawunti**.

I-Push imeyli

Ungamukela isaziso efonini yakho esiphuma kwiseva ye-imeyli yakho esithi unemibiko emisha ye-imeyli.

Ukuvula isaziso se-push email

- Kokubekwe eceleni khetha Imenuy
> Imibiko ethunyel. > I-meyli > Izinhlelo
> I-Push imeyli.

Abangani bami

Ungaxhuma bese ungena kwiseva ya Abangani bami ukuxhumana kulayini nemibiko yokuxoxa.

Uma ungeke ukwazi ukusebenzisa Abangani bami, bheka *Imibuzo nezixazulu* ekhasini 71.

Ngaphambi kokusebenzisa Abangani bami

Uma amasethingi achazwe ngaphambilini engekho efonini yakho, ngeke uwadinge amanye amasethingi. Umnikeyeli wakho wesevisi angakunika ulwazi lwamasethingi oluvamile njenge:

- Igama lomsebenzisi
- Iphasiwedi
- Ikheli leseva
- Iphrofayli ye-Inthanethi

Ukfaka amasethingi eseava ya Bangani bami

- 1 Kokubekwe eceleni khetha Imenuy
> Imibiko ethunyel. > Abangani bami
> Hlela.
- 2 Pheqela kwisethingi bese ukhetha Engeza.

Ukungena kwiseva yaBangani bami

- Kokubekwe eceleni khetha Imenuy
> Imibiko ethunyel. > Abangani bami
> Qalisa.

Ukuphuma kwiseva ya Bangani bami

- Khetha Izinketh > Qeda.

Ukwengeza oxbumana naye wengxoxo

- 1 Kokubekwe eceleni khetha Imenuy
> Imibiko ethunyel. > Abangani bami
> eye Oxbumene nabo ithebhу.
- 2 Khetha Izinketh > Engeza oxbumana.

Ukuthumela umbiko wengxoxo

- 1 Kokubekwe eceleni khetha Imenuy
> Imibiko ethunyel. > Abangani bami
> eye Ifonibhуku ithebhу.
- 2 Pheqela koxhumana naye bese ukhetha Ingxoxo.
- 3 Bhala umbiko bese ukhetha Thumela.

Izinga

Ungakhombisa izinga lakho, isibonelo, *Thokozile noma Bhizi*, koxhumana nabo kuphela.

Ungakhombisa futhi izinga lakho kubo bonke abasebenzisi kwiseva ya Abangani bami.

Ukukhombisa izinga lami

- 1 Kokubekwe eceleni khetha Imenuy
-> Imibiko ethunyel. > Abangani bami > Izinketh > Izinhlelo > Khombisa izinga la.
- 2 Khetha ongakhetha kukho.

Ukubuyekeza izinga lakho

- 1 Kokubekwe eceleni khetha Imenuy
-> Imibiko ethunyel. > Abangani bami
-> eye Izinga lami ithebhу.
- 2 Hlela ulwazi.
- 3 Khetha Izinketh > Gcina.

Iqembu lengxoxo

Iqembu lengxoxo lingaqaaliswa umnikezeli wakho wesevisi, ngumuntu ongumsebenzisi waBangani bami noma nguwe. Ungalonda amaqembu engxoxo ngokugcina isimemo sezingxoxo noma ngokucinga iqembu elithile lengxoxo.

Ukwakha iqembu lengxoxo

- 1 Kokubekwe eceleni khetha Imenuy
-> Imibiko ethunyel. > Abangani bami
-> eye Amaqembu engxo. ithebhу.
- 2 Khetha Izinketh > Engeza iqe. lengx.
-> Iqe. lengxo. elisha.
- 3 Khetha ozobamema ohlwini loxhumana nabo bese ukhetha Qhubeka.
- 4 Faka umbhalo wesimemo omfishane bese ukhetha Qhubeka > Thumela.

Ukwengeza iqembu lengxoxo

- 1 Kokubekwe eceleni khetha Imenuy
-> Imibiko ethunyel. > Abangani bami
-> eye Amaqembu engxo. ithebhу
-> Izinketh > Engeza iqe. lengx.
 - 2 Khetha ongakhetha kukho.
- ! *Umlando wengxoxo ulondwa phakathi kokuphuma nesikhathi sokungena futhi ukuvumela ukuthi ubuyele emibikweni yengxoxo eseizingxoxweni ezidlule.*

Ukugcina ingxoxo

- 1 Kokubekwe eceleni khetha **Imenuy**
 > **Imibiko ethunyel.** > **Abangani bami**
 > eye **Izingxoxo** ithebhу.
- 2 Faka ingxoxo.
- 3 Khetha **Izinketh** > **Okuthuthukile**
 > **Gcina ingxoxo**.



Ulwazi lwendawo nolweselula

Ulwazi lwendawo nolweselula yimbiko yombhalо, isibonelo, imibiko yokwenzeka emigwaqeni yendawo ethunyelwa kubathengi bendawo yenethiwekhi ethile


Ukuvula ulwazi lwendawo

- 1 Kokubekwe eceleni khetha **Imenuy**
 > **Imibiko ethunyel.** > **Izinhlelo** > **Ulwazi lwendawo**.
- 2 Pheqela ku **Ukwamukela** bese ukhetha **Hlela** > **Vuliwe**.

Ukufanekisa

Ungathatha izithombe futhi urekhode amavidyo kliphu ozowahlola, uwagcine noma uwathomle. Uthola izithombe namavidyo kliphu okugciniwe kwi **Imidiya** nakwi **Imenenja** yefayela.

Isitholi sokubonwayo namakhi ekhamera

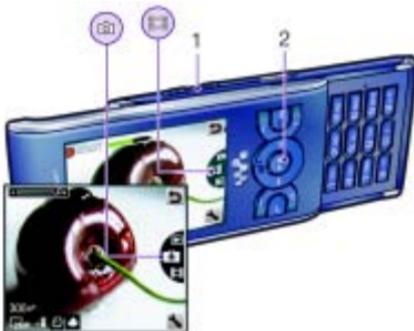

- 1 Sondeza noma hlehlisa
- 2 Thatha izithombe/Rekhoda amavidyo kliphu

Ukusebenzisa ikhamera

Ukucupha ikhamera

- Kokubekwe eceleni cindezela

Ukuthatha isithombe

- 1 Qalisa ikhamera bese ucinderezela ikhi lokuhambisa liye phezulu noma phansi ukupheqela ku
- 2 Cindezela ikhi lokuhambisa ukuthatha isithombe.
- 3 Isithombe sigcinwa nge-othomathiki.

Ukurekhoda ividylo kliphu

- 1 Qalisa ikhamera bese ucinderezela ikhi lokuhambisa liye phezulu noma phansi ukupheqela ku
- 2 Cindezela ikhi lokuhambisa eliphakathi ukuqala ukurekhoda.
- 3 Ukumisa ukurekhoda, cindezela ikhi yokuhambisa. Ividyo kliphu igcinwa nge-othomathiki.

Ungarekhodi uma kukhona umthombo wokukhanya onamandla ngemuva. Sebenzisa isaphothi noma i-timer ukugwema isithombe esilufifi.

Ukusebenzisa i-zoom

- Cindezela amakhi evolumu kwesokudla noma kwesobunxele.

! *Uma uthatha isithombe, i-zoom itholakala ngemodi ye-VGA kuphela.*

Ukuhlola ukuggama

- Cindezela ikhi yokuhambisa kwesokunsele noma kwesokudla.

Ukuhlola izithombe

- 1 Cupha ikhamera bese uyakhetha
- 2 Pheqela entweni.

Ezinye izimpawu zekhamera

Ungenxa ngcono isithombe esingacacile nge-Photo fix.

Izimpawu namasethingi kwekhamera

Izimpawu ezisesibukweni zazisa ngesethingi ekhona ngaleso sikhathi. Amanye amasethingi ekhamera ayatholakala ku Izinketh.

Ukushintsha amasethingi

- Cupha ikhamera bese uyakhetha

Ukuhlola ulwazi ngamasethingi

- Pheqela kwisethingi bese ukhetha

- 4 Cindezela bese ukhetha **Izinketh** > **Ithegi entsha**.
- 5 Faka igama bese ukhetha **Kulungile**.
- 6 Khetha uphawu.
- 7 Ukulengisa isithombe, cindezela ikhi ephakathi yokukhetha.

Ukufaka amathegi ezithombeni

- 1 Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Ifoto** > **I-albhamu yekhamera**.
- 2 Khetha inyanga.
- 3 Pheqela esithombeni bese ukhetha **Hlola**.
- 4 Cindezela bese upheqela kwithegi.
- 5 Cindezela ikhi yokukhetha ephakathi.
- 6 Ngesithombe ngasinye ofuna ukusifaka ithegi, pheqela kwisithombe bese ucindezela ikhi yokukhetha ephakathi.

Ukusebenzisa izithombe

Ungongeza isithombe koxhumana naye, sisebenzise ngesikhathi uqalisa ifoni, njengephepha lodonga kokubekwe eceleni noma njengesivikeli sibuko.

Ukusebenzisa izithombe

- 1 Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Ifoto** > **I-albhamu yekhamera**.

- 2 Khetha inyanga.
- 3 Pheqela esithombeni bese ukhetha **Hlola**.
- 4 Khetha **Izinketh** > **Sebenzisa njenge**.
- 5 Khetha ongakhetha kukho.

Ukusetha uhlelo Iwe-Java™ njengephepha lodonga

- 1 Kokubekwe eceleni khetha **Imenu** > **Izinhlelo** > eye **Khombisa** ithebu.
- 2 Khetha **Iphepha lodonga** > **Uhlelo**.
- 3 Khetha uhlelo Iwe-Java.

! *Ungabona kuphela izinhlelo ze-Java™ ezisekela iphepha lodonga.*

Ukusebenza ngezithombe

Ungahlola, uthuthukise futhi uhlele izithombe namavidyo kliphu kwakho kukhompyutha yakho ngokufaka *i-the Adobe™ Photoshop™ Album Starter Edition*. Lokhu kufakiwe kwi-CD efika nefoni yakho futhi kuyatholakala uma kulandwa ku www.sonyericsson.com/support.

Sebenzisa *iSony Ericsson Media Manager* ukudlulisa okuqukethwe kusuke noma kuye kwifoni yakho. Bheka *Ukudlulisa okuqukethwe kuye noma kusuke kukhompyutha* ehasini 25 ngolunye ulwazi.

I-PhotoDJ™ and VideoDJ™

Ungahlela izithombe namavidyo kliphu.

Ukuhlela nokugcina isithombe

- 1 Kokubekwe eceleni khetha **Imenuy** > **Imidiya** > **Ifoto** > **I-albhamu yekhamera**.
- 2 Khetha inyanga.
- 3 Pheqela esithombeni bese ukhetha **Hlola**.
- 4 Khetha **Izinketh** > **Hl. ku-PhotoDJ™**.
- 5 Hlela isithombe.
- 6 Khetha **Izinketh** > **Gcina** isithombe.

Ukuhlela nokugcina ividyo kliphu

- 1 Kokubekwe eceleni khetha **Imenuy** > **Umhleli** > **Imenenja yefayela** > **I-albhamu yekhamera**.
! Pheqela kwividyo kliphu bese ukhetha **Izinketh** > **Seb i-VideoDJ™**.
- 3 Hlela ividyo kliphu.
- 4 Khetha **Izinketh** > **Gcina**.

Ukunquma ividyo kliphu

- 1 Kokubekwe eceleni khetha **Imenuy** > **Umhleli** > **Imenenja yefayela** > **I-albhamu yekhamera**.
- 2 Pheqela kwividyo kliphu bese ukhetha **Izinketh** > **Seb i-VideoDJ™** > **Hlela** > **Nquma**.
- 3 Khetha **Setha** ukusetha indawo yokuqalisa bese ukhetha **Qala**.

- 4 Khetha **Setha** ukusetha indawo yokuqedha bese ukhetha **Vala**.
- 5 Khetha **Nquma** > **Izinketh** > **Gcina**.

Ukubhloga

I-blog yikhasi lakho siqu le-Web ongathumela kulo izithombe namavidyo kliphu ozoshiyelana ngako nabanye. Uma ukuthenga kwakho kuyisekela le sevisi, ungathumela izithombe nomamavidyo kliphu kwi-blog.

Uma ungeke ukwazi ukusebenzisa i-blog yesithombe nomamavidyo, bheka **Imibuzo nezixazululo** ekhasini 71.

! Amasevisi eWeb angadina isivumelwano selayisense esihlukile phakathi kwakho nomnikezeli wesevisi. Kungasebenza izilungiso namashaji engeziwe. Xhumana nomnikezeli wesevisi yakho.

Ukuthumela izithombe zekhamera kwi-blog

- 1 Kokubekwe eceleni khetha **Imenuy** > **Imidiya** > **Ifoto** > **I-albhamu yekhamera**.
- 2 Khetha inyanga.
- 3 Pheqela esithombeni bese ukhetha **Hlola**.
- 4 Khetha **Izinketh** > **Thumela** > **Ukubloga**.

- 5 Faka isihloko nombhalo bese ukhetha **Kulungile**.
- 6 Khetha **Shicilel**.

- Ungathumela futhi isithombe ku-blog emva nje kokusithatha ngokukhetha **Thumel > Ukubloga**.

Ukuthumela amavidyo kliphu kwi-blog

- 1 Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Ividiyo**.
- 2 Pheqela kwividyo kliphu bese ukhetha **Izinketh > Thumela > Ukubloga**.
- 3 Faka isihloko nombhalo bese ukhetha **Kulungile**.
- 4 Khetha **Shicilel**.

- Ungathumela futhi ividyo kliphu ku-blog emva nje kokuyirekhoda ngokukhetha **Thumel > Ukubloga**.

Ukuya ekhelini le-blog eliphuma koxhumana nabo

- 1 Kokubekwe eceleni khetha **Imenu** > **Ifonibhuku**.
- 2 Pheqela koxhumana naye bese ukhetha ikheli le-Web.
- 3 Khetha **Yiya ku**.

Ukuphrinta amafotho

Ungaphrinta izithombe zekhamera ngokusebenzisa ikhebulu le-USB elixhunywe kwiphrinta evumelana nayo.

- Ungaphrinta ngokusebenzisa iphrinta ehambisana ne-Bluetooth esekela i-Object Push Profile.

Ukuphrinta izithombe zekhamera ngokusebenzisa ikhebulu le-USB

- 1 Xhuma ikhebulu le-USB efonini.
- 2 Xhuma ikhebulu le-USB kwiphrinta.
- 3 Lindela ifidbhekhi efonini bese ukhetha **Kulungile**.
- 4 Faka amasethingi ephrinta (uma edingeke) bese ukhetha **Phrinta**.
- 5 Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Ifoto** > **I-albhamu yekhamera**.
- 6 Khetha inyanga.
- 7 Pheqela esithombeni bese ukhetha **Izinketh > Phrinta**.

- Kufanele unqamule ukuxhumana bese uxhuma kabusha ikhebulu le-USB uma kunephutha lephrinta.

I-Inthanethi

Uma ungeke ukwazi ukusebenzisa i-Inthanethi, bheka *Imibuzo nezixazululo* ekhasini 71.

Ukuqala ukupheqa

- 1 Kokubekwe eceleni khetha *Imenu* > *I-inthanethi*.
- 2 Khetha *Izinketh* > *Yiya ku*.
- 3 Khetha ongakhetha kukho.

Ukuphuma kwisipheqi

- Uma upheqa kwi-Inthanethi, khetha *Izinketh* > *Isipheqi sokuph*.

Amabhukumaka

Ungakha bese uhlela amabhukhumaka njengokuxhumana okusheshayo okuya kumakhasi akho athandwayo e-Web.

Ukwakha ibhukhumaka

- 1 Uma upheqa kwi-Inthanethi, khetha *Izinketh* > *Amathuluzi* > *Engeza ibhukuma*.
- 2 Faka isihloko nekheli. Khetha *Gcina*.

Ukukhetha ibhukhumaka

- 1 Kokubekwe eceleni khetha *Imenu* > *I-inthanethi*.
- 2 Khetha *Izinketh* > *Yiya ku* > *Mabhukumaka*.
- 3 Pheqela kwibhukhumaka bese ukhetha *Yiya*.

Amakhasi omlando

Ungahlola amakhasi e-Web owapheqile.

Ukuhlola amakhasi omlando

- Kokubekwe eceleni khetha *Imenu*> *I-inthanethi* > *Izinketh* > *Yiya ku* > *Umlando*.

Ezinye izimpawu zesipheqi

Ukusebenzisa i-pan ne-zoom ekhasini leWeb

- 1 Uma upheqa kwi-Inthanethi, cindezela .
- 2 Sebenzisa ikhi yokuhamba ukuhambisa ifremu.
- 3 Cindezela *Zoom*.
- 4 Ukubuyela kwi-pan, cindezela .

- ! *Ukusebenzisa i-pan ne-zoom, kudingeka ucishe iSmart-fit: Izinketh > Thuthukile > I-Smart-Fit > Valiwe.*

Ukushaya ucingo ngesikhathi upheqa

- Cindezela .

Ukugcina into ephuma kwikhasi le-Web

- 1 Uma upheqa kwi-Inthanethi, khetha *Izinketh* > *Amathuluzi* > *Gcina izithom*.
- 2 Khetha isithombe.

Ukuthola umbhalo ekhasini le-Web

- 1 Uma upheqa kwi-Inthanethi, khetha Izinketh > Amathuluzi > Thola ekhasini.
- 2 Faka umbhalo bese ucinddezela Thola.

Ukuthumela ukuxhumana

- 1 Uma upheqa kwi-Inthanethi, khetha Izinketh > Amathuluzi > Thumela ukuxh.
- 2 Khetha indlela yokudlulisa.

- **Qinisekisa ukuthi idivaysi eyamukelayo iyayisekela indlela yokudlulisa oyikhethayo.**

Amashothikhathi ekiphipedi e-Inthanethi
Ungasebenzisa ikhiphedi ukuya ngqo emsebenzini wesipheqi se-Inthanethi.

Ukukhetha amashothikhathi ekiphipedi ye-Inthanethi

- 1 Kokubekwe eceleni khetha Imenu > I-inthanethi.
- 2 Khetha Izinketh > Thuthukile > Imodi yekhiphedi > Amashothikhathi.

(* a/A)

Isibonisi esigcweli noma Isithom. sendawo noma Isibuko esijwayel.

(D +)

Zoom

(# - ⚡)

Yendlala uacisce (uma i I-Smart-Fit icishiwe).

Ukuvikeleka kwe-inthanethi nezitifiketi

Ifoni yakho isaphotha ukupheqa okuphephile. Amanye amasevisi e-Inthanethi, njengokubhenka, adinga izitifiketi efonini yakho. Ifoni yakho kungenzeka ibe nezitifiketi ngenkathi uyithenga noma ungazilanda izitifiketi ezintsha.

Ukuhlola izitifiketi efonini

- Kokubekwe eceleni khetha Imenu > Izinhlelo > eye Okujwayelekile ithebhу > Ezokuphepha > Izitifiketi.

Ama-feed e-Web

Ungathenga bese ulanda okuqukethwe okubuyekezwu njalo, njengezindaba, ama-podcasts, ngokusebenzisa ama-Web feeds.

Ukwengeza ama-feed amasha ekhasi le-Web

- 1 Uma upheqa ikhasi kwi-Inthanethi elinama-feed e-Web, okukhonjiswa ngalolu , khetha Izinketh > Ama-feed eWeb.
- 2 Kwi-feed ngayinye ofuna ukuyengeza, pheqela kuyona bese uyayikhetha Maka.
- 3 Khetha Izinketh > Qhubeka.

Ukulanda okuqukethwe ngama-feeds

- 1 Kokubekwe eceleni khetha Imenuy > Imidiya > Ama-feeds eWeb.
- 2 Pheqela kwi-feed ebukeziwe bese ukhetha Hlola noma .
- 3 Khetha isihloko ozoselula.
- 4 Khetha uphawu kuye ngokuqukethwe,  ukuvula ikhasi le-Web,  ukulanda i-podcast elaelwayo,  ukulanda i-podcast yevidyo noma  ukulanda ifotho.

 *Ungabuye futhi uthenge bese ulandela okuqukethwe kwikhompyutha ngama-feeds ngokusebenzisa iSony Ericsson Media Manager. Emva kwalokho ungalanda okuqukethwe okusha ukufake efonini yakho. Bheka Ukundlulisa okuqukethwe kuye noma kusuke kukhompyutha ekhasini 25.*

Ukubuyekeza amaWeb feeds

Ungazibuyekezelwa wena ama-feed akho, noma uholele ukuba abuyekezwe. Uma kunezibuyekezo, lokhu  kuvela esibukweni.

Ukuhlela izibuyekezo zamaWeb feeds

- 1 Kokubekwe eceleni khetha Imenuy > Imidiya > Ama-feeds eWeb.
- 2 Pheqela kwi-feed bese ukhetha Izinketh > Ukuvusele. okuh.
- 3 Khetha ongakhetha kukho.

! Izibuyekezo ezenziwa njalo zingabiza.

Ukuzibuyekezelwa amaWeb feeds

- 1 Kokubekwe eceleni khetha Imenuy > Imidiya > Ama-feeds eWeb.
- 2 Pheqela kwi-feed bese ukhetha Izinketh > Vuselela.
- 3 Khetha ongakhetha kukho.

AmaWeb feeds kokubekwe eceleni
Ungakhombisa izibuyekezo zezindaba esibukweni sokubekwe eceleni.

Ukuveza amaWeb feeds kokubekwe eceleni

- 1 Kokubekwe eceleni khetha Imenuy > Imidiya > Ama-feeds eWeb.
- 2 Pheqela kwi-feed bese ukhetha Izinketh > Amasethingi > Ithikha yokube. ecel. > Kho. kokub. eceleni.

Ukuthola amaWeb feeds kokubekwe eceleni

- 1 Kokubekwe eceleni khetha **Ticker**.
- 2 Uku funda kabanzi nge-feed, cindezela  noma  ukupheqela esihlokweni bese ukhetha **Yiya**.

Ama-podcasts

Ama-podcasts ngamafayela, isibonelo, izinhlelo zomsakazo noma okuqukethwe kevidyo, ongawalanda bese uyawadlala. Uthenga bese ulanda ama-podcasts ngokusebenzisa amaWeb feeds.

Ukuthola ama-podcasts alalelwayo

- Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Umcilo** > **Ama-podcasts**.

Ukuthola ama-podcasts evidyo

- Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Ividyo** > **Ama-podcasts**.

Ama-photo feeds

Ungathenga ama-photo feeds bese ulanda amafotho. Ukuqala ukusebenzisa ama-photo feeds, bheka *Ama-feed e-Web* ekhasini 56.

Ukuthola ama-photo feeds

- Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Ifoto** > **Ama-feed amafotho**.

Kuyavumelaniswa

Ungavumelanisa ngezindlela ezimbili ezihlukene: Ungavumelanisa ifoni yakho ngokusebenzisa uhlelo lwekhomypytha noma isevisi ye-Inthanethi.

-  **Sebenzisa kuphela eyodwa yezindlela zokuvumelanisa ngesikhathi nefoni yakho.**

Ukuze uthole ulwazi oluthe xaxa ngokuvumelanisa, yiya ku www.sonyericsson.com/support ufunde imikhombandlela yokuQalisa.

Ukvumelanisa usebenzisa ikhompyutha

Ungasebenzisa ikhebulu le-USB noma ubuchwepheshe obungenawayo be-Bluetooth ukvumelanisa oxhumana nabo befoni, ama-aphoyintimenti, amabhukhmaki, imisebenzi namanothi nohlelo lwekhompyutha olufana ne-Microsoft Outlook.

Ngaphambi kokuvumelanisa udinga ukufaka *iSony Ericsson PC Suite*.

- ! **Isoftwiye ye-Sony Ericsson PC Suite ifakiwe ku-CD ehambisana nefoni yakho futhi ingalandwa ku www.sonyericsson.com/support.**

Bheka *Izinhlelo zakusebenzisa ezidingekayo* ku 25.

Ukufaka i-Sony Ericsson PC Suite

- 1 Vula ikhompyutha yakho bese ufaka i-CD. I-CD iqala nge-othomathikhi bese iwindi lokufaka liyavuleka.
- 2 Khetha ulimi bese uqhebeza OK.
- 3 Qhebeza *Install Sony Ericsson PC Suite* bese ulandela imiyalo esesibukwemi.

Ukuvumelanisa ngokusebenzisa i-Sony Ericsson PC Suite

- 1 **Ikhompyutha:** Qala i-PC Suite ephuma ku Qala/Lzhinlelo/ Sony Ericsson/PC Suite.
- 2 Landela imiyalo kwi-Sony Ericsson PC Suite yendlela yokux huma.
- 3 **Ifonyi:** Khetha **lmodi yefoni**.
- 4 **Ikhompyutha:** Uma waziswa ukuthi i-Sony Ericsson PC Suite isithole ifoni yakho, ungaqala ukuvumelanisa.

 Ngeminiiningwane yokusebenzisa, bheka ingxenyen ethi Sony Ericsson PC Suite Help uma isothiwe isifakiwe kwikhomyutha yakho.

Ukuvumelanisa ngokusebenzisa isevisi ye-Inthanethi

Ungavumelanisa futhi nesevisi ye-Inthanethi ngokusebenzisa i-SyncML™ noma i-Microsoft® Exchange Server

ngokusebenzisa iMicrosoft Exchange ActiveSync. Uma ungeke ukwazi ukuvumelanisa nge-Inthanethi, bheka *Imibuzo nezixazululo* ekhasini 71.

I-SyncML

Ungavumelanisa okuqukethwe okukude nolwazi oluqondene nawe ngokusebenzisa iSyncML.

Ngaphambili kokuvumelanisa ngokusebenzisa iSyncML

Kufanele ufake amasethingi okuvumelanisa i-SyncML bese ubhalisa i-akhawunti yokuvumelanisa kulayini nomnikezeli wesevisi. Uyodinga:

- **Ikheli likanolwazi** – iseva i-URL
- **Igama ledathabhe.** – idathabheysi ozovumelanisa ngayo

Ukufaka amasethingi e-SyncML

- 1 Kokubekwe eceleni khetha **Imenu > Umhleli > Ukw. kuhambi.**
- 2 Pheqela ku **I-akhawunti ents.** bese ukhetha **Engeza > SyncML.**
- 3 Faka igama le-akhawunti entsha bese ukhetha **Qhubek.**
- 4 Khetha **Ikheli likanolwazi.** Faka ulwazi oludingekayo bese ukhetha **Kulungile.**
- 5 Faka **Igama lomsebenz.** ne **Iphasiwedi,** uma kudingeka.

- 6 Pheqela kweye **Izicelo** ithebhу bese ukhethа izinhlelo zivumelanise.
- 7 Pheqela kweye **Amasethingi** ohlelo ithebhу bese ukhethа uhlelo.
- 8 Khetha **lgama ledathabhe**, bese ufaka imininingwane edingekayo.
- 9 Pheqela kweye **Kuthuthukile** ithebhу ukufaka amanye amasethingi okuvumelanisa bese ukhethа **Gcina**.

Ukuvumelanisa ngokusebenzisa iSyncML

- 1 Kokubekwe eceleni khethа **Imenuy** > **Umhleli** > **Ukw.** **kuhambi**.
- 2 Pheqela kwi-akhawunti bese ukhethа **Qala**.

I-Microsoft® Exchange ActiveSync
Ungathola futhi uvumelanise ulwazi njenge-imeyli, okuxhunywana nabo nokwehalenda ngokusebenzisa iMicrosoft® Exchange Server ene- Microsoft® Exchange ActiveSync.

 **Ngeminje imininingwane ngamasethingi okuvumelanisa, xhumana nomphathi wakho we-IT.**

Ngaphambi kokuvunelanisa ngokusebenzisa iMicrosoft® Exchange ActiveSync
Kufanele ufake amasethingi e-Microsoft Exchange ActiveSync ukufinyelela kwi-Microsoft Exchange Server. Uyodinga:

- **Ikheli likanolwazi** – iseva i-URL
- **Inkundla** – idomeyni yeseva
- **lgama lomsebenz.** – igama lomsebenzisi we-akhawunti
- **Iphasiwedi** – iphasiwedi ye-akhawunti

! Ngaphambi kokuvumelanisa nge-

- **Exchange ActiveSync kufanele ufake izoni yesikhathi efanele efonini yakho.**

Ukfaka amasethingi eMicrosoft® Exchange ActiveSync

- 1 Kokubekwe eceleni khethа **Imenuy** > **Umhleli** > **Ukw.** **kuhambi**.
- 2 Pheqela ku **I-akhawunti ents.** bese ukhethа **Engeza** > **Exchange ActiveSync**.
- 3 Faka igama le-akhawunti entsha bese ukhethа **Qhubek**.
- 4 Faka amasethingi adingekayo.
- 5 Pheqa phakathi kwamathebhу ukufaka amanye amsethingi.
- 6 Khethа **Gcina**.

Ukuvunelanisa ngokusebenzisa iMicrosoft® Exchange ActiveSync

- 1 Kokubekwe eceleni khethа **Imenuy** > **Umhleli** > **Ukw.** **kuhambi**.
- 2 Pheqela kwi-akhawunti bese ukhethа **Qala**.

Ezinye izimpawu

I-Flight mode

Ku I-Flight mode ama-transceivers enethiwekhi nawomsakazo ayavalwa ukunqanda ukuphazamiseka empahleni ebucayi.

Uma kucushwa imenu ye-flight mode uyacelwa ukuba ukhethe imodi ngokuzayo uma uvula ifoni yakho:

- **Imodi ejwaye.** – ukusebenza okugcwele.
- **I-Flight mode** – okunomkhawuko.

Ukucupha imenu ye-flight mode

- Kokubekwe eceleni khetha **Imenu** > **Izinhlelo** > eye **Okujwayelekile** **ithebhу** > **I-Flight mode** > **Qhubek** > **Khombisa** **ekuqal**.

Ukukhetha i-flight mode

- 1 Uma kucushwa imenu ye-flight mode, cisha ifoni yakho.
- 2 Vula ifoni yakho bese ukhatha **I-Flight mode**.



I-Update service

Ungabuyekeza ifoni yakho ngesothiwe entsha sha ngokusebenzia ifoni noma i-PC yakho.

Ukuhlola isothiwe yamanje efonini

- 1 Kokubekwe eceleni khetha **Imenu** > **Izinhlelo** > eye **Okujwayelekile** **ithebhу** > **I-Update service**.
- 2 Khetha **Isihum.** sesothiwe.

I-Update service ngokusebenzia ifoni

Ungabuyekeza ifoni yakho emoyeni usebenzise ifoni yakho. Awulahlekelwa yimininingwane eqondene nave noma yefoni.

- !
- I-Update service usebenzisa ifoni yakho idinga uthole idatha efana ne-GPRS, 3G noma HSDPA.**

Ukukhetha amasethingi okubuyekeza

- Kokubekwe eceleni khetha **Imenu** > **Izinhlelo** > eye **Okujwayelekile** **ithebhу** > **I-Update service** > **Izinhlelo** > **Amaseth e-inthaneth**.

Ukusebenzia i-Update service ngokusebenzia ifoni

- 1 Kokubekwe eceleni khetha **Imenu** > **Izinhlelo** > eye **Okujwayelekile** **ithebhу** > **I-Update service**.
- 2 Khetha **Cinga ukuvuselela** bese ulandela imiyalelo evelayo.

I-Update service usebenzisa i-PC

Ungabuyekeza ifoni yakho usebenzisa ikhebula le-USB elihlunzekiwe ne-PC exhunye ku-Inthanethi.

! *Qiniseka ukuthi yonke idatha eqondene nawe egcinwe kumemori yakho yefoni inebhekaphu. Yonke idatha yomsebenzisi izocishwa ngesikhathi sokubuyekeza kusetshanziswa i-PC. Idatha egcinwe ku-memory stick ngeke iphazamiseke.*

Ukusebenzisa i-Update service usebenzisa i-PC

- Yiya ku www.sonyericsson.com/support.

Amasevisi ezindawo

Ungathola usizo lokuthola indlela yakho bese ugcina izindawo zakho ozithandayo. Ngolwazi oluvela kwimiboshongo ehambayo, ungahle ukwazi ukuhlolola indawo okuyona emephini.

! *Ungathola ulwazi olushaya emhloleni ngokuthe xaxa mayelana nendawo okuona ngesesekeli seGPS esisekelwe yifoni yakho.*

! *Ezinye izici zamasevisi eZindawo zisebenzisa i-Inthanethi.*

Uusebenzisa iGoogle Maps™ yeselula

- Kokubekwe eceleni khetha Imenu > [Ukuzithokozisa](#) > [Amasevisi ezindawo](#) > [I-Google Maps](#).

Ukufundu okunye ngeGoogle Maps

- Uma usebenzisa i-Google Maps, khetha Izinketh > [Usizo](#).

Ukuhlola indawo ongahle ube kuyona

- Uma usebenzisa i-Google Maps, khetha > [Usizo](#).

Ukuhlola indawo egciniwe

- 1 Kokubekwe eceleni khetha Imenu > [Ukuzithokozisa](#) > [Amasevisi ezindawo](#) > [Izintandokazi zami](#).
- 2 Pheqela endaweni bese ukhetha Yiya ku.

-! *Uma usebenzisa iGoogle Maps ungacindezela a/A ukuthola okuthandwayo kwakho.*

Ama-alamu

Ungasetha umsindo noma umsakazo njengesignalni ye-alamu. I-alamu ikhala noma ifoni icishiwe. Uma i-alamu ikhala ungayithulisa noma uycishe.

Ukusetha i-alamu

- 1 Kokubekwe eceleni khetha Imenu > [Umhleli](#) > [Ama-alamu](#).
- 2 Pheqela ku-alamu bese ukhetha [Hlela](#).

- 3 Pheqela ku **Isikhathi**: bese ukhetha **Hlela**.
- 4 Faka isikhathi bese ukhetha **Kulungile** > **Gcina**.

Ukusetha i-alamu yansukuzonke

- 1 Kokubekwe eceleni khetha **Imenu** > **Umhleli** > **Ama-alamu**.
- 2 Pheqela ku-alamu bese ukhetha **Hlela**.
- 3 Pheqela ku **Phindaphinda**: bese ukhetha **Hlela**.
- 4 Pheqela osukwini bese ukhetha **Maka**.
- 5 Ukukhetha olunye usuku, pheqela osukwini bese ukhetha **Maka**.
- 6 Khetha **Kwenziw.** > **Gcina**.

Ukusetha isignalni ye-alamu

- 1 Kokubekwe eceleni khetha **Imenu** > **Umhleli** > **Ama-alamu**.
- 2 Pheqela ku-alamu bese ukhetha **Hlela**.
- 3 Pheqela kweye  ithebhу.
- 4 Pheqela ku **Isignalni ye-alamu**: bese ukhetha **Hlela**.
- 5 Thola bese ukhetha isignalni ye-alamu. Khetha **Gcina**.

Ukuthulisa i-alamu

- 1 Uma i-alamu ikhala, cindezela noma iyiphi ikhi.
- 2 Ukuphinda i-alamu, khetha **Buthisa**.

Ukucisha i-alamu

- Uma i-alamu ikhala, cindezela noma iyiphi ikhi bese ukhetha **Cisha**.

Ukukhansela i-alamu

- 1 Kokubekwe eceleni khetha **Imenu** > **Umhleli** > **Ama-alamu**.
- 2 Pheqela ku-alamu bese ukhetha **Cisha**.

I-alamu kwimodi yokuthula

Ungasetha ukuthi i-alamu ingakhali uma ifoni ikwimodi yokuthula.

Ukusetha i-alamu ukuba ikhale noma cha kwimodi yokuthula

- 1 Kokubekwe eceleni khetha **Imenu** > **Umhleli** > **Ama-alamu**.
- 2 Pheqela ku-alamu bese ukhetha **Hlela**.
- 3 Pheqela kweye  ithebhу.
- 4 Pheqela ku **Imodi ethule**: bese ukhetha **Hlela**.
- 5 Khetha ongakhetha kukho.

Ukusetha ubude bokozela

- 1 Kokubekwe eceleni khetha **Imenu** > **Umhleli** > **Ama-alamu**.
- 2 Pheqela ku-alamu bese ukhetha **Hlela**.
- 3 Pheqela ku **Ubude be-snooze**: bese ukhetha **Hlela**.
- 4 Khetha ongakhetha kukho.

Ikhalenda

Ikhalenda lingavumelaniswa nelekhompyutha, nekhalenda elikwi-Web noma ne-Microsoft® Exchange Server (Microsoft® Outlook®).

Ngolunye ulwazi bheka
Kuyavumelaniswa ekhasini 58.

Ukubukeka kwedifolthi

Ungakhetha ukuthi yinyanga, yiviki noma wusuku oluzovela kuqala uma uvula ikhalenda.

Ukusetha ukubukeka kwedifolthi

- 1 Kokubekwe eceleni khetha [Imenuy](#) > [Umhleli](#) > [Ikhalenda](#).
- 2 Khetha [Izinketh](#) > [Okuthuthukile](#) > [Ukubuk okumisiw](#).
- 3 Khetha ongakhetha kukho.

Ama-aphoyintimenti

Ungongeza ama-aphoythimenti amasha noma usebenzise kabusha ama-aphoythimenti akhona.

Ukwengeza i-aphoyintimenti

- 1 Kokubekwe eceleni khetha [Imenuy](#) > [Umhleli](#) > [Ikhalenda](#).
- 2 Khetha usuku.
- 3 Pheqela ku [I-aphoyintimenti](#) bese ukhetha [Engeza](#).
- 4 Faka ulwazi bese uqinisekisa okufakile.
- 5 Khetha [Gcina](#).

Ukuhlola i-aphoyintimenti

- 1 Kokubekwe eceleni khetha [Imenuy](#) > [Umhleli](#) > [Ikhalenda](#).
- 2 Khetha usuku.
- 3 Pheqela kwi-aphoyintimenti bese ukhetha [Hlola](#).

Ukuhlela i-aphoyintimenti

- 1 Kokubekwe eceleni khetha [Imenuy](#) > [Umhleli](#) > [Ikhalenda](#).
- 2 Khetha usuku.
- 3 Pheqela kwi-aphoyintimenti bese ukhetha [Hlola](#).
- 4 Khetha [Izinketh](#) > [Hlola](#).
- 5 Hlola i-aphoyntimenti bese uqinisekisa okufakile ngakunye.
- 6 Khetha [Gcina](#).

Ukuhlola iviki lekhalenda

- 1 Kokubekwe eceleni khetha [Imenuy](#) > [Umhleli](#) > [Ikhalenda](#).
- 2 Khetha [Izinketh](#) > [Hlola](#) isonto.

Ukusetha ukuthi izikhumbuzi zikhale nini

- 1 Kokubekwe eceleni khetha [Imenuy](#) > [Umhleli](#) > [Ikhalenda](#).
- 2 Khetha usuku.
- 3 Khetha [Izinketh](#) > [Okuthuthukile](#) > [Izikhumuzi](#).
- 4 Khetha ongakhetha kukho.

! Okukhethwa kukho izikhumbuzi okusethwe ekhalendeni kupazamisa okukhethwa kukho izikhumbuzi okusethwe kwimisebenzi.

Amanothi

Ungenza amanothi bese uyawagcina. Ungakhombisa futhi inothi kokubekwe eceleni.

Ukwengeza inothi

- 1 Kokubekwe eceleni khetha Imenuy > Umhleli > Amanothi.
- 2 Pheqela ku Inothi entsha bese ukhetha Engeza.
- 3 Bhala inothi bese ukhetha Gcina.

Ukukhombisa inothi kokubekwe eceleni

- 1 Kokubekwe eceleni khetha Imenuy > Umhleli > Amanothi.
- 2 Pheqela kwinothi bese ukhetha Izinketh > Khombisa kokube.

UkuFihla inothi kokubekwe eceleni

- 1 Kokubekwe eceleni khetha Imenuy > Umhleli > Amanothi.
- 2 Pheqela kwinothi ekhonjiswe kokubekwe eceleni. Lokhu kuzomakwa ngophawu. Khetha Izinketh > Fihla kokubekwe.

Imisebenzi

Ungongeza imisebenzi emisha noma usebenzise kabusha imisebenzi ekhona.

Ukwengeza umsebenzi

- 1 Kokubekwe eceleni khetha Imenuy > Umhleli > Imisebenzi.
- 2 Khetha Umsebenzi omusha bese ukhetha Engeza.
- 3 Khetha ongakhetha kukho.
- 4 Faka imininingwane bese uqinisekisa uhu ngalunye.

UkuHlola umsebenzi

- 1 Kokubekwe eceleni khetha Imenuy > Umhleli > Imisebenzi.
- 2 Pheqela kumsebenzi bese ukhetha Hlola.

Ukusetha ukuthi izikhumbuzi zikhale nini

- 1 Kokubekwe eceleni khetha Imenuy > Umhleli > Imisebenzi.
 - 2 Pheqa kumsebenzi bese ukhetha Izinketh > Izikhumbuzi.
 - 3 Khetha ongakhetha kukho.
- !
- Okukhethwa kukho izikhumbuzi okusethwe kwimisebenzi kunomthelela kokukhethwa kukho izikhumbuzi okusethwe kwikhalenda.

Amaphrofayli

Ungashintsha amasethingi afana nevolumu yokukhala nesixwayisi esidlikizayo ukuze avumelane nezindawo ezihlukene. Ungasetha kabusha wonke amaphrofayli abuyele kumasethingi efon iasekuqaleni.

Ukukhetha iphrofayli

- 1 Kokubekwe eceleni khetha **Imenuy** > **Izinhlelo** > eye **Okujwayelekile** ithebhу > **Amaphrofayli**.
- 2 Khetha iphrofayli.

Ukuhlola nokuhlela iphrofayli

- 1 Kokubekwe eceleni khetha **Imenuy** > **Izinhlelo** > eye **Okujwayelekile** ithebhу > **Amaphrofayli**.
- 2 Pheqela kuphrofayli bese ukhetha **Izinketh** > **Hlola** bese **uhlela**.

! **Ngeke ukwazi ukuqamba kabusha eye-Jwayelekile iphrofayli.**

Isikhathi nosuku

Ukusetha isikhathi

- 1 Kokubekwe eceleni khetha **Imenuy** > **Izinhlelo** > eye **Okujwayelekile** ithebhу > **Isikhathi nosuku** > **Isikhathi**.
- 2 Faka isikhathi bese ukhetha **Gcina**.

Ukusetha usuku

- 1 Kokubekwe eceleni khetha **Imenuy** > **Izinhlelo** > eye **Okujwayelekile** ithebhу > **Isikhathi nosuku** > **Usuku**.
- 2 Faka usuku bese ukhetha **Gcina**.

Ukusetha izoni yesikhathi

- 1 Kokubekwe eceleni khetha **Imenuy** > **Izinhlelo** > eye **Okujwayelekile** ithebhу > **Isikhathi nosuku** > **Indawo yami yeskhati**.
- 2 Khetha umkhawuko wesikhathi okuwo.

! **Uma ukhetha idolobha, i Indawo yami yeskhati ibuyekeze isikhathi uma siguquka isikhathi sokonga emini.**

Ingqikithi

Ungashintsha ukubukeka kwesibuko ngezinto ezifana nemibala nephepha lodonga. Ungakha futhi izingqikithi ezintsha bese uyazilanda. Ukuze uthole ulwazi oluthe xaxa, yiya ku www.sonyericsson.com/fun.

Ukusetha ingqikithi

- 1 Kokubekwe eceleni khetha **Imenuy** > **Izinhlelo** > eye **Khombisa** ithebhу > **Ingqikithi**.
- 2 Pheqela kwinqikithi bese ukhetha **Hlela**.

Isakhiwo semenu enkulu

Ungashintsha isakhiwo sezimpawu kwimenu enkulu.

Ukushintsha isakhiwo semenu enkulu

- 1 Kokubekwe eceleni khetha **Imenu** > **Izinketh** > **Isakh menu enk.**
- 2 Khetha ongakhetha kukho.

Amaringithoni

Ukusetha iringithoni

- 1 Kokubekwe eceleni khetha **Imenu** > **Izinhlelo** > eye **Imisindo nezibonis ithebu** > **Iringithoni**.
- 2 Thola bese ukhetha iringithoni.

Ukusetha ivolumu yeringithoni

- 1 Kokubekwe eceleni khetha **Imenu** > **Izinhlelo** > eye **Imisindo nezibonis ithebu** > **Ivolumu yeringith.**
- 2 Cindezela  noma  ukushintsha ivolumu.
- 3 Khetha **Gcina**.

Ukucisha iringithoni

- Kokubekwe eceleni cindezela bese ubamba (#-#).

! *Wonke amasignalni ngaphandle kwasiganali ye-alamu ayaphazamiseka.*

Ukusetha isixwayisi sokudlikiza

- 1 Kokubekwe eceleni khetha **Imenu** > **Izinhlelo** > eye **Imisindo nezibonis ithebu** > **Isixa. sokudlikiza.**
- 2 Khetha ongakhetha kukho.

Ukuma kwesibuko

Ungashintsha phakathi kwe-landscape ne-portrait, noma khetha Zungezisa nge-otho ukwenza ukuma kushintshe uma uzungezisa ifoni.

Ukushintsha ukuma kwesibuko kwiMidya

- 1 Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Izinhlelo** > **Ukuma**.
- 2 Khetha ongakhetha kukho.

Imidlalo

Ifoni yakho iqukethe imidlalo esifikasiwe. Ungalanda futhi imidlalo. Imibhalo yosizo iyatholakala emidlalweni eminingi.

Ukuqala umdlalo

- 1 Kokubekwe eceleni khetha **Imenu** > **Imidiya** > **Imidlalo**.
- 2 Khetha umdlalo.

Ukuqedo umdlalo

- Cindezela .

Izinhlelo

Ungalanda bese usebenzisa izinhlelo ze-Java. Ungahlola futhi ulwazi nom ausethe amazinga emvume ahlukene.

Amaphrofayli e-Inthanethi ezinhlelo ze-Java

Ezinye izinhlelo ze-Java zidinga ukuxhuma kwi-Inthanethi ukwamukela ulwazi. Iningi lezinhlelo ze-Java zisebenzisa amasethingi e-Inthanethi njengesipheqi sakho se-Web. Uma ungeke ukwazi ukusebenzisa izinhlelo ze-Java, bheka *Imibuzo nezixazululo* ekhasini 71.

Ukukhetha uhlelo Iwe-Java

- 1 Kokubekwe eceleni khetha *Imenuy > Umhleli > Izicelo.*
- 2 Khetha uhlelo.

Ukuhlola ulwazi ngohlelo Iwe-Java

- 1 Kokubekwe eceleni khetha *Imenuy > Umhleli > Izicelo.*
- 2 Pheqela ohlelweni bese ukhetha *Izinketh > Ulwazi.*

Ukusetha izimvume zohlelo Iwe-Java

- 1 Kokubekwe eceleni khetha *Imenuy > Umhleli > Izicelo.*
- 2 Pheqela ohlelweni bese ukhetha *Izinketh > Izimvume.*
- 3 Setha izimvume.

Usayizi wesibuko sohlelo Iwe-Java

Ezinye izinhlelo ze-Java zenzelwe osayizi abathile besibuko. Ngolwazi oluthe xaxa, xhumana nomthengisi wohlelo.

Ukusetha usayizi wesibuko sohlelo Iwe-Java

- 1 Kokubekwe eceleni khetha *Imenuy > Umhleli > Izicelo.*
- 2 Pheqela ohlelweni bese ukhetha *Izinketh > Isibuko.*
- 3 Khetha ongakhetha kukho.

I-Walk Mate

I-Walk Mate wuhlelo oluvisibali zinyathelo. Ibalu izinyathelo osuzihamble nesezisele ukuze ufeze injongo yakho. Ungayifaka ephaketheni lakho ifoni uma usebenzisa i-Walk Mate. Ungayisetha futhi njengephepha lodonga i-Walk Mate uiyhlole kokubekwe eceleni.

Uuksetha i-Walk Mate njengephepha lodonga

- 1 Kokubekwe eceleni khetha *Imenuy > Izinhlelo > eye Khombisa ithebhу.*
- 2 Khetha *Iphepha lodonga > Uhlelo.*
- 3 Khetha *Walk Mate.*

Ukusebenzisa i-Walk Mate ngemuva
Ukuholola i-Walk Mate uma ufuno,
ungayivula njengohlelo, uyinciphise
bese uyiqhuba ngemuva.

! **Ngeke ukwazi ukunciphisa i-Walk Mate ubuye uyisebenzise njengethephetha lodonga kanyekanye. Ukunciphisa i-Walk Mate, kufanele uyikhiphe njengethephetha lodonga.**

Ukuvula i-Walk Mate

- Kokubekwe eceleni khetha **Imenuy > Umhleli > Izicelo > Walk Mate.**

Ukunciphisa i-Walk Mate

- 1 Kokubekwe eceleni khetha **Imenuy > Umhleli > Izicelo > Walk Mate.**
- 2 Cindezela  bese ukhetha **Nciphisa.**

Ukuvula i-Walk Mate uma incishisiwe

- 1 Cindezela .
- 2 Pheqela ku **Izhinlelo eziba.** bese ukhetha **Walk Mate.**
- 3 Khetha **Qhubek.**

Amalokhi

Ilokhi yeSIM khadi

Le lokhi ivikela kuphela ukuthenga kwakho. Ifoni yakho izosebenza ne-SIM khadi entsha. Uma ilokhi ivuliwe, kumele ufake i-PIN (Personal Identity Number).

Uma ufaka i-PIN yakho ngokungeyikho izikhathi ezintathu zilanelana, i-SIM khadi iyavinywa futhi udinga ukufaka eyakho i-PUK (Personal Unblocking Key). I-PIN ne-PUK yakho kuhlinzekwa ngu-opharetha wenethiwekhi yakho.

Ukuvula ukuvunjwa kwe-SIM khadi yakho

- 1 Uma **I-PIN ivinjiwe** kuvela, faka i-PUK yakho bese ukhetha **Kulungile.**
- 2 Faka iPIN entsha enamadijithi amane kuya kwayisishiyagalombili bese ukhetha **Kulungile.**
- 3 Phinda ufake i-PIN entsha bese ukhetha **Kulungile.**

Ukuhlela i-PIN

- 1 Kokubekwe eceleni khetha **Imenuy > Izinhlelo > eye Okujwayelekile ithebhu > Ezokuphephetha > Amalokhi > Ukuvikel. kweSIM > Shintsha uphini.**
- 2 Faka i-PIN yakho bese ukhetha **Kulungile.**
- 3 Faka iPIN entsha enamadijithi amane kuya kwayisishiyagalombili bese ukhetha **Kulungile.**
- 4 Phinda ufake i-PIN entsha bese ukhetha **Kulungile.**

- ! Uma Amakhodi awahambelani kuvela, ufake i-PIN entsha ngokungeyikho.
Uma IPIN okungesiyo kuvela, kulandelwa yi IPIN endala:, ufake IPIN yakho endala ngokungesikho.

Ukusebenzisa ilokhi ye-SIM khadi

- 1 Kokubekwe eceleni khetha lmenu > Izinhlelo > eye Okujwayelekile ithebhу > Ezokuphepha > Amalokhi > Ukuvikel. kweSIM > Vikel.
- 2 Khetha ongakhetha kukho.
- 3 Faka i-PIN yakho bese ukhetha Kulungile.

Ilokhi yefoni

Ungaqedu ukusetshenziswa okungagunyaziwe kwefonu yakho. Shintsha ikhodi yokukhiya ifoni (0000) ngokufaka noma iyiphi ikhodi eqondene nawe enezinombolo eziphakathi kwezine neziyisishiyagalombili.

- ! Kubalulekile ukuthi uyiikhumbule ikhodi yakho entsha. Uma uyiikhohlwa, kufanele uhambise ifoni yakho kumthengisi wakwa-Sony Ericsson oseduze nawe.

Ukusebenzisa ilokhi yefoni

- 1 Kokubekwe eceleni khetha lmenu > Izinhlelo > eye Okujwayelekile ithebhу > Ezokuphepha > Amalokhi > Ukuvike. kwefonu > Ukuvikeleka.
- 2 Khetha ongakhetha kukho.
- 3 Faka ikhodi yokukhiya ifoni bese ukhetha Kulungile.

Ukuvula ilokhi yefoni

- Faka ikhodi yakho bese ukhetha Kulungile.

Ukushintsha ikhodi yokukhiya ifoni

- 1 Kokubekwe eceleni khetha lmenu > Izinhlelo > eye Okujwayelekile ithebhу > Ezokuphepha > Amalokhi > Ukuvike. kwefonu > Shintsha ikhodi.
- 2 Faka ikhodi endala bese ukhetha Kulungile.
- 3 Faka ikhodi entsha bese ukhetha Kulungile.
- 4 Phinda ikhodi bese ukhetha Kulungile.

Ukukhiya ikhiphedi

Ungasetha lo kkiye ukugwema ukudayela ngengozi. Izingcingo ezingenayo zingaphendulwa ngaphandle kokuvula ikhiphedi.

! Izingcingo eziya kwinamba ephuthumayo yamazwe omhlaba u-112 zisengafakwa.

Ukusebenzisa ikhilokhi e-othomathiki

- 1 Kokubekwe eceleni khetha **Imenu**
> [Izhinlelo](#) > eye [Okujwayelekile](#) ithebhу
> [Ezokuphepha](#) > [I-thoma. khilokhi](#).
- 2 Khetha ongakhetha kukho.

Ukuvula ikhiphedi ngesandla

- Kokubekwe eceleni cindezela bese ukhetha [Vula](#) > [Kulungile](#).

Inamba ye-IMEI

Gcina ikhophi yenamba yakho ye-IMEI (International Mobile Equipment Identity) ukuze isize uma ifoni yakho yebiwa.

Ukuhlola inamba ye-IMEI yakho

- Kokubekwe eceleni cindezela **(*****a/b****)**, **(#****-****#****)**, **(****0****+****)**, **(****6****)**, **(#****-****#****)**.

Imibuzo nezixazululo

Izinkinga ezithile zizodinga ukuba ufonele u-opharetha wenethiwekhi yakho.

Ngesaphothi ethe xaxa yiya ku www.sonyericsson.com/support.

Imibuzo evamile

Angikwazi ukuvumelanisa ngesevisi ye-Inthanethi, ukusebenzisa i-Inthanethi, PlayNow™, TrackID™, My friends, Java, imibiko yezithombe, imeyli, noma i-blogging
Ukuthenga kwakho akubandakanyi ikhono ledatha. Izinhlelo ziyashoda noma azilungile.

Ungalanda amasethingi ngesethaphu wizadi noma ku-www.sonyericsson.com/support.

Ukulanda amasethingi ngokusebenzisa iwizadi ye Sethaphu

- 1 Kokubekwe eceleni khetha **Imenu**
> [Izhinlelo](#) > eye [Okujwayelekile](#) ithebhу
> [Isetaphu wizadi](#) > [Landa izinhlelo](#).
- 2 Landela imiyalelo evelayo.

- - - Xhumana no-opharetha wenethiwekhi yakho noma umnikezeli wesevisi ngolwazi oluthe xaxa.

***Nginezinkinga nomthamo wememori
noma ifoni isebenza ngokunensa***

Qala kabusha ifoni yakho zonke
izinsuku ukukhulula imemori noma
yenza i-**Isihleli esikhulu.**

I-Master reset

Uma ukhetha **Hlela izinhlelo**, izinguqukuo
ozenze kumasethingi zizocishwa.

Uma ukhetha **Hlela konke**, amasethingi
nokuqukethwe kwakho, njengoxhumene
nabo, imibiko, izithombe, imisindo
nemidlalo elandiwe, kuzosuswa.
Ungalahlekewa futhi okuqukethwe
obekusefonini khathi ithengwa.

Ukusetha kabusha ifoni

- 1 Kokubekwe eceleni khetha **Imenu**
> **Izinhlelo** > eye **Okujwayelekile**
ithebhu > **Isihleli esikhulu.**
- 2 Khetha ongakhetha kukho.
- 3 Landela imiyalelo evelayo.

Angikwazi ukushaja ifoni noma umthamo webhethri uphansi

Ishaja ayixhumekile kahle noma
uxhumano lwebhethri lubuthaka.
Khipha ibhethri bese uhlanza izixhumi.
Ibhethri igugile idinga ukushintshwa.
Bheka **Ukushaja ibhethri** ekhasini 8.

***Alukho uphawu lwebhethri oluvelayo
uma ngiqaala ukushaja ifoni***

Kungathatha imizuzu embalwa
ngaphambi kokuthi uphawu
lwebhethri luvele esibukweni.

Okunye okukhethwa kukho imenu kuvela kumpunga

Isevisi ayicushiwe. Xhumana no-
opharetha wenethiwekhi yakho.

Angikwazi ukusebenzisa imibiko yemibhalo/SMS efonini yami

Kufanele ube nenamba yesikhungo
sesevisi. Inamba ihlinzekwa
wumniikezeli wesevisi yakho futhi
ngokuvamile igcinya kwi-SIM khadi.
Uma inamba yesikhungo sesevisi
yakho ingagginiwe kwi-SIM khadi
yakho, kufanele uyifake wena inamba.

Ukufaka inamba yesikhungo sesevisi

- 1 Kokubekwe eceleni khetha **Imenu**
> **Imibiko ethunyel.** > **Izinhlelo** > **Umbiko
obhaliwe** bese upheqa ku **Isikhungo
sokuse.** Uma inamba yesikhungo
sesevisi igcinwe kwi-SIM khadi
iyakhonjiswa.
- 2 Uma ingekho inamba ekhonjisive,
khetha **Hlela.**
- 3 Pheqela ku **Isikhungo esisha s** bese
ukhetha **Engeza.**

- 4 Faka inamba, kubandakanya olwamazwe omhlaba uphawu oluthi “+” nekhodi yezwe.
- 5 Khetha [Gcina](#).

Angikwazi ukusebenzisa imibiko yesithombe efonini yami

Kufanele usethe iphofayili ye-MMS kanye nekheli leseva yemibiko yakho. Uma lingekho iphofayili le-MMS noma iseva yombiko ekhona, ungamukela amasethingi avela ku-opharetha wakho wenethiwelki noma ku www.sonyericsson.com/support.

Ukukhetha iphofayili ye-MMS

- 1 Kokubekwe eceleni khetha [Imenyu](#) > [Imibiko ethunyel.](#) > [Izinhlelo](#) > [Umbiko wesitho.](#) > [Iphofayili le-MMS](#).
- 2 Khetha iphofayili.

Ukusetha ikheli leseyal yemibiko

- 1 Kokubekwe eceleni khetha [Imenyu](#) > [Imibiko ethunyel.](#) > [Izinhlelo](#) > [Umbiko wesitho.](#)
- 2 Pheqela ku [Iphofayili le-MMS](#) bese ukhetha [Hlela](#).
- 3 Khetha [Izinketh](#) > [Hlela](#).
- 4 Pheqela ku [Unolwazi wombiko](#) bese ukhetha [Hlela](#).
- 5 Faka ikheli bese ukhetha [Kulungile](#) > [Gcina](#).

Ifoni ayikhali noma ikhalela phansi kakhulu

Qinisekisa ukuthi i- [Imodi ethule](#) ayisetheli ku-[Vuliwe](#). Bheka [Ukucisha](#) [iringithoni](#) ekhasini 67.

Hlola ivolumu yeringithoni. Bheka [Ukusetha](#) ivolumu yeringithoni ekhasini 67.

Hlola iphofayili. Bheka [Ukukhetha](#) [iphofayili](#) ekhasini 66.

Hlola okukhethwa kukho kokuchezukisa izingcingo. Bheka [Ukudlulisela](#) [phambili](#) izingcingo ekhasini 38.

Ifoni ayikwazi ukutholwa ngamanye amadivaysi ngobuchwephesho obungenawaya be-Bluetooth

Awukaluvuli uhlelo lwe-Bluetooth. Qinisekisa ukuthi ukubonakala kusethelwe ukukhombisa ifoni. Bheka [Ukuvula](#) [umsebenzi](#) weBluetooth ekhasini 28.

Angikwazi ukuvumelanisa noma ukudlulisa okuqukethwe phakathi kwefoni yami nekhompyutha yami, uma ngisebenzisa ikhebula le-USB.

Ikhebula noma isothiwe okufike nefoni yakho akufakwanga kahle. Yiya ku www.sonyericsson.com/support

ufunde amagadyi okuQalisa
anemiyalo egcwele yokufaka
namagaydi okuxazulula izinkinga.

Sengiyikholiwe iphasikhodi yekhodi memo yami

Uma ukhohlwa iphasikhodi yakho,
kufanele usethe kabusha ikhodi
memo yakho. Lokhu kusho ukuthi
konke okufakwe kwikhodi memo
kuyasuswa. Ngokuzayo uma ufaka
ikhodi memo, kufanele wenze
sengathi uyivula okokuqala.

Ukusetha kabusha ikhodi memo

- 1 Kokubekwe eceleni khetha **Imenuy > Umhleli > Isiqophi sekhodi**.
- 2 Faka iphasiwedi engeyiyio izikhathhi eziwu 3.
- 3 **Setha kabusha imemo yekhodi?** iyavela.
- 4 Khetha **Yebo**.

***Ngingalutholaphi ulwazi lokuqondisa
olunjengenamba yami ye-IMEI uma
ingavuleki ifoni yami?***



Imibiko yamaphutha

Faka ikhadi

Akukho SIM khadi efonini yakho noma
kungenzeka ukuba uyifake ngendlela
engalungile.

Bheka **Ukufaka i-SIM khadi ekhasini 8.**

Izixhumi zeSIM khadi zidinga
ukuhanzwa. Uma ikhadi lilimele,
xhumana no-opharetha wenethiwekhi
yakho.

Faka ikhadi o kuyilo le-SIM

Ifoni isethwe ukuthi isebezenze kuphela nama-SIM khadi athile. Hiola noma usebenzisa iSIM khadi ka-opharetha elunglele yini.

iPIN okungesiyo *noma* UPHINI 2 ayilungile

Ufake iPIN yakho noma iPIN2 ngokungesikho.

Faka i-PIN noma PIN2 efanele bese ukhetha **Yebo**. Bheka *I-PIN* ekhasini 6.

I-PIN ivinjiwe *noma* Pini-2uvalekile

Ufake iPIN noma iPIN2 ngokungesikho izikhathi ezintathu zilandelana.

Ukuvula ukuvunjwa, bheka *llokhi yeSIM khadi* ekhasini 69.

Amakhodi awahambelanı

Amakhodi owafakile awahambelanı. Uma ufunu ukushintsha ikhodi yokuphepha, isibonelo i-PIN yakho, kufanele uqinisekise ikhodi entsha. Bheka *llokhi yeSIM khadi* ekhasini 69.

Ayikho inethiwekhi

Ifoni yakho ikwi-flight mode. Bheka *I-Flight mode* ekhasini 61.

Ifoni yakho ayemukeli neyodwa isignalı yenethiwekhi, noma isignalı eyamukelwe ayinamandla. Thintana

no-opharetha wenethiwekhi yakho uqinisekise ukuthi inethiwekhi iyamukela lapho ukhona.

I-SIM khadi ayisabenzi kahle. Faka i-SIM khadi yakho kwenye ifoni. Uma lokhu kusebenza, kungenzeka kube yifoni ebangela inkinga. Sicela uxhumane nendawo eseduze yesevisi ye-Sony Ericsson.

Izingc. eziphu. kup.

Usendaweni lapho inethiwekhi itholakala khona kodwa awuvunyelwe ukuvisebenza. Kepha, esimeni esiphuthumayo, abanye o-opharetha benethiwekhi bayakuvumela ukuba ushayele inombolo ephuthumayo yomazwe omhlaba jikelele u-112. Bheka *Izingcingo eziphuthumayo* ekhasini 32.

IPuk ivaliwe. Xhumana no- opharetha.

Ufake ikhodi yakho yokuvula ukuvunjwa (iPUK) ngokungesikho izikhathi ezi-10 zilandelana.

Ulwazi olubarulekile

IWebhusaythi yaBathengi yakwa-Sony Ericsson

Ku www.sonyericsson.com/support kunengxenye yesaphothi/yokusekela lapho kutholakala khona usizo namathiphu. Lapha uthola ukuvuselelwa kwesofthiwe yekhompyutha yakamuva namathiphu okuthi ungawusebenzisa kanjani umkhqiqizo wakho ngokuyimpumelelo.

Isevsi nesaphothi

Ungathola inhlanganisa yosizo lwesevisi olukhethekile njenge:

- Ama Webhusaythi omhlabajikelele nawasekhaya anikezelza ngesaphothi.
- Inethiwekhi yomhlabajikelele yama-Call Center.

Inethiwekhi ebanzi yophathina besevisi yakwa-Sony Ericsson.

Isikhathi sewaranti. Funda kabanzi nezimizo zewaranti ku-Ukwazi olusemqoka.

Ku www.sonyericsson.com, uzothola amathulizi okwesekwa nolwazi okusha sha. Ngamasevisi nezimpawu eziqondene no-opharetha, sicela uxhumane no-opharetha wakho wenethiwekhi. Ungaxhumana futhi nama-Call Center ethu. Uma izwe/isifunda sakho singamelwe ohlwini olungezansi, sicela uxhumane nomthengisi wangakini. (Izingingo zishajwa ngokuhambisana namazinga kazwelonke, kubandakanya izintela zendawo, ngaphandle uma inamba yokufona kungeyamahala.)

Uma umkhqiqizo wakho udinga isevisi, sicela uxhumane nomthengisi lapho uthengwe khona, noma oyedwa wophathina bethu besevisi. Ngezinhloso zezibizo zewaranti, gcina ubufakazi bokuthenga.

Ukusekelwa

| | |
|-----------------|---------------------------------|
| Argentina | 800-333-7427 |
| Australia | 1-300650-600 |
| Belgique/België | 02-7451611 |
| Brasil | 4001-04444 |
| Canada | 1-866-766-9374 |
| Central Africa | +27 112589023 |
| Chile | 123-0020-0656 |
| Colombia | 18009122135 |
| Česká republika | 844550 055 |
| Danmark | 33 31 28 28 |
| Deutschland | 0180 534 2020 |
| Ελλάδα | 801-11-810-810 210-89 91 919 |
| España | 902 180 576 |
| France | 0 825 383 383 |
| Hong Kong/香港 | 8203 8863 |
| Hrvatska | 062 000 000 |

questions.AR@support.sonyericsson.com

questions.AU@support.sonyericsson.com

questions.BE@support.sonyericsson.com

questions.BR@support.sonyericsson.com

questions.CA@support.sonyericsson.com

questions.CF@support.sonyericsson.com

questions.CL@support.sonyericsson.com

questions.CO@support.sonyericsson.com

questions.CZ@support.sonyericsson.com

questions.DK@support.sonyericsson.com

questions.DE@support.sonyericsson.com

questions.GR@support.sonyericsson.com

questions.ES@support.sonyericsson.com

questions.FR@support.sonyericsson.com

questions.HK@support.sonyericsson.com

questions.HR@support.sonyericsson.com

| | | |
|--------------------------|--------------------------------------|---------------------------------------|
| India/भारत | 39011111 | questions.IN@support.sonyericsson.com |
| Indonesia | 021-2701388 | questions.ID@support.sonyericsson.com |
| Ireland | 1850 545 888 | questions.IE@support.sonyericsson.com |
| Italia | 06 48895206 | questions.IT@support.sonyericsson.com |
| Lietuva | 8 70055030 | questions.LT@support.sonyericsson.com |
| Magyarország | +36 1 880 4747 | questions.HU@support.sonyericsson.com |
| Malaysia | 1-800-889900 | questions.MY@support.sonyericsson.com |
| México | 01 800 000 4722 | questions.MX@support.sonyericsson.com |
| Nederland | 0900 899 8318 | questions.NL@support.sonyericsson.com |
| New Zealand | 0800-100150 | questions.NZ@support.sonyericsson.com |
| Norge | 815 00 840 | questions.NO@support.sonyericsson.com |
| Österreich | 0810 200245 | questions.AT@support.sonyericsson.com |
| Pakistan | 111 22 55 73 (92-21) 111 22 55 73 | questions.PK@support.sonyericsson.com |
| Philippines/Pilipinas | 02-6351860 | questions.PH@support.sonyericsson.com |
| Polska | 0 (prefiks) 22 6916200 | questions.PL@support.sonyericsson.com |
| Portugal | 808 204 466 | questions.PT@support.sonyericsson.com |
| România | (+4021) 401 0401 | questions.RO@support.sonyericsson.com |
| Россия | 8 (495) 787 0986 | questions.RU@support.sonyericsson.com |
| Schweiz/Suisse/Svizzera | 0848 824 040 | questions.CH@support.sonyericsson.com |
| Singapore | 67440733 | questions.SG@support.sonyericsson.com |
| Slovensko | 02-5443 6443 | questions.SK@support.sonyericsson.com |
| South Africa | 0861 6322222 | questions.ZA@support.sonyericsson.com |
| Suomi | 09-299 2000 | questions.FI@support.sonyericsson.com |
| Sverige | 013-24 45 00 | questions.SE@support.sonyericsson.com |
| Türkiye | 0212 473 77 71 | questions.TR@support.sonyericsson.com |
| Україна | (+0380) 44 590 1515 | questions.UA@support.sonyericsson.com |
| United Kingdom | 08705 23 7237 | questions.GB@support.sonyericsson.com |
| United States | 1-866-7669347 | questions.US@support.sonyericsson.com |
| Venezuela | 0-800-100-2250 | questions.VE@support.sonyericsson.com |
| الإمارات العربية المتحدة | 43 919880 | questions.AE@support.sonyericsson.com |
| 中国 | 4008100000 | questions.CN@support.sonyericsson.com |
| 台灣 | 02-25625511 | questions.TW@support.sonyericsson.com |
| ไทย | 02-2483030 | questions.TH@support.sonyericsson.com |

Imihlahlandlela Yokusebenzisa Okuphephile Nokufanele

Sicela ulandele le mihlahlandlela. Ukwelhuleka ukwenza lokho kungadala ingozi empilweni noma ukungasebenzi kahle komkhqiqizo. Uma ungabaza ngokusebenza kwavo okufanele, hambisa umkhqiqizo uyohlolwa wuphatthina wesevisi oqinisekisiwe ngaphambhi kokuwushaja noma ukuwusebenzisa.



Izincomo zokunakekelwa nokusetshenziswa ngokuphepha kwemikhqiqizo yethi

- Yiphande ngokunakekela futhi uyigcine endaweni ehlanzekili nengenalo uthuli.
- Isexwayiso! Ingaphuma uma lahlwa emililweni.
- Ungawubeki umkhqiqizo wakho endaweni emananzu noma eswakeme noma enomhwamuko.
- Ungayisondezhi emazingeni okushisha ashisa noma abanda ngokweqile. Ungalibeki ibhethri endaweni eshisa ngapehu kuka +60°C (+140°F).
- Ungabeki eduze kwamalangabhi noma ugwayi ovuthayo.
- Ungawuuni, ungawujikijeli noma uzame ukuvugobisa umkhqiqizo wakho.
- Ungawupendhi noma uzame ukuvuqaqa noma ukwuguquula umkhqiqizo wakho. Umuntu ogunyazwe u-Sony Ericsson kuphela okufanele akhande ifoni.
- Buza abasebenzi bezokwelapha abagunyaziwe futhi ufunde imiyalelo kamakhi wedivisye yezokwelapha ngaphambi kokusebenzisa umkhqiqizo wakho eduze kwam-pacemakers (imishini elekelela inhlizyo) noma amanye amadivaysi noma imishini kwezokwelapha.



- Nqamula ukusebenzisa amadivaysi e-elektronikhki noma cisha okuhambisa amagagasi omoya kedivaysi lapho kudingeka khona noma uma ucelwa ukuba wenze njalo.
- Ungayisebenzisi lapho kungaba neziqhume khona.
- Ungayibeki ifoni yakho noma ufake impahla engenawaya endaweni engaphezu kwezikhwama somoya emotweni yakho.
- Isexwayiso: Izibuko eziklayekile noma eziphukile zingadala okuseceleni okubukhali okungaba yingozi uma kuthintwa.
- Ungayisebenzisi iHedisethi yeBluetooth yakho ezindaweni lapho ingakuphathi kahle khona noma lapho izocindezeleka khona.



Izingane

Isexwayiso! Yigcine kude nezingane. Ungavumeli izingane zdiale ngamaselula noma ngezisekeli zawo. Zingazilimaza noma zilimaze abanye. Imikhqiqizo ingaba nezingxene ye zincirane ezingakhipheka bese zdala ingozi yokubindeka.



Amandla kagesi (Ishaja)

Xhuma ishaja emithonjeni yamandla njengoba kumakiwe kumkhqiqizo. Ungayisebenzisi emnyango noma ezindaweni eziswakeme. Ungayishintshi noma ulimaze noma ugqilaze intambo. Khipha iyunithi epulakini ngaphambi kokuyihlanza. Ungalokothi ushintshe ipulaki. Umaiplagi ingangeni kule ndawo yamandla, thola abasebenza ngogesi abaqegeeshi bakufakele lezo zinto ezifanale zokudonsa ugesi. Uma okuphakela amandla kuxhunykiye kunokusebenza okuncane kwamanadla. Ugkgwema loko kumosheka okuncane kwamanadla, nqamula okuphakela amandla uma umkhqiqizo usushajeke wagcwala. Ukusebenzisa amadivaysi okushaja angagunyaziwe wuSony Ericsson kungandisa izingozi zezokuphepha.

Ibhethri

Amabhetri amasha noma aheli isikhathi eside angaba nomthamo wesikhashana omncane.

Yishaje ngokugcwele ibhethri ngaphambi kokuyisebenzisa okokuqala. Yisebenzisele okuhloselwe yona kuphela. Shaja ibhethri emazingeni okushisa aphakathi kuka +5°C (+41°F) no +45°C (+113°F). Ungalfaki ibhethri emlonyeni wakho. Ungavumeli okothintana kwebhethri kuthintana neziyne izinsimbi. Icime ifoni yakho ngaphambi kokukhipha ibhethri. Ukusebenza kuncika emazingeni okushisa, amandla esignalni, izindlela zokusebenzisa, izimpawu ezikhethiwe kanye nokuanjiswa kwezwi noma kwedatha. Makube wophathina besevizi bakwaSony Ericsson kuphela abakhipha noma abashintsha amabhetri akhelwe ngaphakathi. Ukusebenzisa amabhetri izingunyaziwo wuSony Ericsson kungandisa izingozi zezokuphepha.

Izinto ezakhelwe wena zezokwelapha

Amaselula angaphazamisa imishinyana yezokwelapha efakwa kubantu. Nciphisia ingozi yokuphazamiseka ngokugcina ibanga okungenani elihu 15 cm (6 amayintshi) phakathi kwefonii nedivaysi. Sebenzisa ifoni endlebeni yakho yesokudla. Ungafaki ifoni ephaketheni elisesifubeni. Cisha ifoni uma usola ukuphazamiseka. Kuwo wonke amadivaysi ezokwelapha, buza udukotela nomakhi.

Ukushayela

Abakhi bezimoto ezithile bayakwenqabela ukusetshenziswa kwamafoni ezimotweni zabo ngaphandle uma kunekhithi eyihendsfri enothi lwangaphandle esekela ukufawa. Buza komele umakhi wemoto yakho ukuze uqinisekise ukuthi iselule yakho noma ihendsfri yeBluetooth ngake kuphazamise amasistimu e-elektronikh emotweni yakho. Gxilisa ngokugcwele umqondo ekushayeleni ngasosonke isikhathi

nasekuhlonipheni imithetho yangakini elawula ukusetshenziswa kwamadivaysi angenawayaya ngesikhathi sokushayela.

Imisebenzi esekeleke ku-GPS/Indawo

Eminye imikhiqizo ihlinzelza ngemisebenzi esekeleke ku-GPS/Indawo. Umsebenzi wokuthola indawo uhlinzekwa "Njengoba unjalo" futhi "Nawo wonke amaphutha". I-Sony Ericsson akukho ekuthembisayo noma ekuqinisekisayo mayelana nokunemba kwalolu lwazi lwandwo.

Ukusetshenziswa kolwazi olusekeleke kwindawo yidivaysi ngeke kungaphazamiseki noma kungabi namaphutha kuthi kungancika ekutholakaleni kwesevisi yenethiwekhi. Sicela uqaphele ukuthi ukusebenza kungancipha noma kuvimbeke ezindaweni ezithile njengaphakathi kwamabhiliidi noma eduze kwamabhiliidi.

Isexwayiso: Ungasebenzisi i-GPS ngendlela ezophazamisa ukushayela.

Izingingo eziphuthumayo

Izingingo ngake ziqinisekiswe ngaphansi kwazo zonke izimo. Ungalokothi nanini wethembele kuphela kumaselula ekuxhumani okusenqoka. Izingingo kungenze ka zingenzeki kuzo zonke izindawo, kuwo wonke amanethiwekhi, noma uma amasevisi kanye/noma izimpawu okuthile kwefonii kusebenza.

Uthi

Ukusetshenziswa kwamadivaysi ezinti angamakethwanga wuSony Ericsson angalmaza ifoni yakho, anganciphsa ukusebenza, akhiqize amazinga e-SAR angapezu kwemikhawulo ebekiwe. Ungalwembozi uthi ngesandla sakho ngoba lokho kuphazamisa izinga lezingcingo, amaqophelo amandla futhi kunganciphsa izikhathi zokukhuluma nezokubkwe eceleni.

Ukusondelana nefrikhwensi yomsakazo (RF) ne-Specific Absorption Rate (SAR)

Uma ifoni noma ihendsfri yeBluetooth yakho ivulwa, ikhipha amazinga aphansi amandla efrikhensi yegagasi lomoya. Imikhombandlela yokuphepha yamazwe omhlaba isithuthukisiwe ngokuhlaziya izingcwaniingo zezesayensi. Lemi khombandlela isungula amazinga avunyelwe okusondelana namagagasi omoya. La mazinga afaka nesilinganiso sokuphepha esiqinisekisa ukuphepha kwavo wonke umuntu kanye nokuphendula mayelana nanoma ikuphi ukuhluka okungenze ka umá kukalwa.

I-Specific Absorption Rate (SAR) issetshenziswa ukukala amandla efrikhensi yegagasi lomoya amuncwua wumzimba uma usebenzisa iselula. Inani leSAR likalwa ngezinga eliphakerne kunawowonke eliqinisekisiwe ezimweni zaselebhu, kodwa ngenxa yokuthi ifoni yakhelwe ukuba isebenzise amandla awubuncane bokugcina adingekayo ukuthola inethiwekhi ekhethiwe, izinga langempela leSAR lingaba ngaphansi kakhulu kwaleli nani. Abukho ubufakazi bornehluko ekuphepheni okusekeleke kumehluko wenani leSAR.

Imikhicizo enokukhipha amagagasi omoya edayisa e-US kufanele iqinisekisiwe ngabe Federal Communications Commission (FCC). Uma kudingeka, kwenziwa ukuhloka uma ifoni ibekwu endlebeni nalapho igqoke emzimbeni. Uma isetshenziswa ilenga emzombeni, ifoni ihlolwe khathi isebangeni okungenani elingu 15 mm ukusuka emzimbeni zingekho izingkenye zensimbi eduze kwefonii noma uma isetshenziswa nesisekeli esifanele sakwaSony Ericsson accessory futhi isemzimbeni.

Ngolonezi ulwazi mayelana neSAR nokusondelana nefrikhensi yamagagasi omoya yiya ku:
www.sonyericsson.com/health.

I-Flight mode

Ukusebenza kwe-Bluetooth ne-WLAN, uma kukhona efonini yakho, kungaqliswa ku-Flight mode kodwa kunganqatshelwa ezindizeni noma kwezinye izindawo lapho engavunyelwe khona amagagasi omoya. Kulezo ndawo, sicela ukuba ufune isigunyaizo esifanele ngaphambi kokualisa ukusebenza kwe-Bluetooth noma kwe-WLAN ngisho naku-Flight mode.

I-Malware

I-Malware (isifinyezo sika-malicious software) yisofthiwe engalimaza ifoni yakho noma aramye amakhompyutha. I-Malware noma izinhlelo ezilimazayo kungahlanganisa ama-virus, ama-worms, i-spyware, nezinye izinhlelo ezingafuneki. Phezu kubaka idivaysi yakho izisebenzisa izinyathelo zokuvikeleka zokulwa nale mizamo, uSony Ericsson akaqinisekisi noma akathembisi ukuthi idivaysi yakho ngeke ingenwe yi-malware. Nokho unganciphiswa ingozi yokuhlasedela yi-malware ngokuqaphela uma ulanda okuqukethwe noma warumukela izinhlelo, ukwengqaba ukuvula nomu ukuphendula imibiko ephuma kwimithombo engaziwa, ukusebenzisa amasevisi athembekile ukungena ku-Inthanethi, nokulanda kuphela uface efonini yakho okuqukethwe okuvela kwimithombo eyaziwayo netherenjwayo.

Izesekeli

Sebenzisa kuphela izesekeli eziyizo ezigunyazwe wuSony Ericsson nophathina besevisi abaqinisekisiwe. U-Sony Ericsson akazihilo izesekeli zamaqembu esithathu. Izesekeli zingaphazamisa i-RF Exposure, ukusebenza komsakazo, ubukhulu bomsimdo, ukuphepha kukagesi nezinye izindawo. Izesekeli nezingkenye zamaqembu esithathu zingabu yingozi empilweni noma ekuphepheni kwakho noma kunciphise ukusebenza.

Izixazululo Ezitholakalayo/Izidingo Ezikhethekile

E-US, amafoni akwaSony Ericsson ahambisanayo anganika ukuhambisana namatheminali eTTY (uma isetshenziswa nesisekeli esidingekeyo). Ngolunye ulwazi shayela kwaSony Ericsson Special Needs Center ku 877 878 1996 (TTY) noma 877 207 2056 (izwi), noma yiya ku www.sonyericsson-snc.com.

Ukulahlwa kwezinto ezindala ezisebenza ngogesi nange-elektronikhi

Impahla ye-elektronikhi namabhethri akufanele kufakwe kwimfucuza

yomndeni kodwa makushiyewe endaweni efanele yokujikeleza. Lokhu kusiza ekunkandeni imiphumela engaba mibi kwimvelo nasempilweni yabantu. Hlola imithetho yangakini ngokuthintana nehhovisi ledolobha langakini, isevisi ethwala imfucuza ngakini, isitolo owarethenga kuso umkhiqizo noma ngokufonela i-Call Center yakwa-Sony Ericsson.



Ukulahlha ibhethri

Hlola imithetho yangakini noma fonela i-Call Center yakwa-Sony Ericsson ngemininginwane. Ungalokothi usebenzise imfucuza kamaspila.



Imemori Khadi

Uma ifoni yakho ifike ne memory card esusekayo, nge njwayelo ivamise uku hambelana ne handset/ ifoni osuke uyithengile kodwya ku ngenzeka ukuthi ingahambisani nezinye izinto noma ikhono elikwi memory card yayo. Hlola ukuhambisana nememori khadi ngaphambi kokusebenza noma kokuthenga. Uma ifoni yakho ifakwe okofukunda imemori khadi, hlola ukuhambisana nememori khadi ngaphami kokuthenga noma kokusebenzisa.

Imemori khadi ifomathwa ngaphambi kokuthunyelwa. Ukuformetha kabusha imemori khadi, sebenzisa idivaysi efanelene. Ungasebenzisi uhlelo lokufometha oluvamile lokusebenzisa uma ufometha imemori khadi kwi-PC. Ngemininingwane, bheka imiyalelo yokusebenzisa yedivaysi noma uthintane nabasekela amakhastoma.

Isexwayiso!

Uma idivaysi yakho idinga i-adaptha ukuze ishuthekwe kwihendisethi noma kwenye idivaysi, ungashutheki ikhadi ngqo ngaphandle kwe-adaptha.

Okumele kuqashelwe Ngokusebenzisa iMemori Khadi

- Ungayibeki imemori khadi emhwamukeni.
- Ungazithinti izixhumi zetheminali ngezandia zakho noma ngento eyinsimbi.
- Ungayishayi, uyigobise, noma uyiwise imemori khadi.
- Ungazami ukuqaqa noma ukuguqula imemori khadi.
- Ungayisebenzisi noma ulonde imemori khadi ezindaweni ezinomswakama noma ezbolisa insimbi noma ekushiseni okweqile njengemoto evaliwe ehlobo, elangeni eliza ngqo noma eduze nehitsha, njili.
- Ungacindezelu futhi ungagobisi indawo esekucineni ye-adaptha yememori khadi ngamandla eqile.
- Ungavumeli ukungcola, idasti, noma izinto ezingaziwa zingene esikhaleni sokufaka se-adaptha yememori khadi.
- Hlola ukuthi uyishutheke kahle yini imemori khadi.
- Faka imemori khadi ingene yonke kwi-adaptha yememori khadi edingekeyo. Imemori khadi ngeke isebezenza kahle ngaphandle uma ifakwe ngokuphelele.

- Sincoma ukuthi wenze ikhophi yebhekaphu yedatha ebalulekile. Asingene ekulahlekeni noma ekulimeleni kokuukethwe okulonde kwimemori khadi.
- Idatha erekhodive ingalimala noma ilahleke uma ukhipha imemori khadi noma i-adaptha yememori khadi, noma uvala amandla kagesi ngenkathi ufometha, ufunda noma ubhala idatha, noma uma usebenzisa imemori khadi ezindaweni ezinogesi oqondile noma ekukhishweni kwezindima zikagesi ezinkulu.

Ukuvilvelwa kolwazi lwakho siqu

Sula idatha eqondene nawe ngaphambi kokulahlua umkhijizo. Ukususa idatha, yenza i-master reset. Ukususa idatha kwimemori yefoni akuquiniseksi ukuthi nege isabuyiseka. U-Sony Ericsson aqaqinisekisi ukungabuyiseki kwenmininingwane futhi akathwali cala ngokudalulwa kwanoma yiluphi ulwazi ngisho nangemuva kwe-master reset.

Isexwayiso somsindo!

Gwema amazinga evolumu angalimaza izindlebe.

Isivumelwano Selayisensi Yomsebenzisi Wokugcina

Isoftiwe efike nale divaysi nemidya yako kungokuka Sony Ericsson Mobile Communications AB, kanye/noma izinkampani ezisezbenzisana naye nabaphakeli bakhe nabanikezeli bakhe bamalayisensi.

U-Sony Ericsson ukunika ilayisensi okungeyona wakho wedwa futhi enomkhawuko yokusebenzisa iSoftiwe kuphela ngokujondene neDivaysi efakwe kuyo noma efike nayo. Ubunizaki beSoftiwe buyadawayisa, buyadululisa noma buyahanyiswa. Ungasebenzisi izindlela zokuthola ikhodi yomthombo noma iyiphi ingxenyi yeSoftiwe, ukukhijiza kabusha nokusabalalaisa iSoftiwe, noma ukuguqula iSoftiwe. Unelungelo lokudululisa

amalungelo nezibopho kweSoftiwe egenjini lesithathu, kuphela kuhambisane neDivaysi owathola nayo iSoftiwe, inqobo uma iqembu lesithathu livuma ngokubhala ukuba lizolhonipa imigomo yale Layisensi.

Le layisensi ikhona kuyo yonke impilo esebenzayo yale Divaysi. Ingayekiswa ngokudululisa amalungelo akho eDivaysi egenjini lesithathu ngencwadi.

Ukwehuleka ukuhambisana nanoma yimuphi wale mgimo nemibandela kuzoyekisa ilayisensi ngaleso sikhathi.

U-Sony Ericsson nabaphakeli bakhe bamaqembu esithathu nabanikezeli bamalayisensi bakhe bagodla wonke amalungelo, isihloko nomhlandla kweSoftiwe. U-Sony Ericsson, no, uma iSoftiwe iqukethe impahla noma ikhodi lesithathu, leso sitthathu, siyokuba umudlimawa wayezi zimiso.

Le layisensi ibuswa yimithetho yaseSweden. Lapho kusebenza khona, lokhu okwedule kusebenza kumalungelo abathengi asemthethweni.

Iwaranti Enomkhawuko

Sony Ericsson Mobile Communications AB, Nya Vattentornet, SE-221 88 Lund, Sweden, (Sony Ericsson) noma inkampani yasendaweni esebenzisana nayo, ihlinzeka ngale Waranti Enomkhawuko yefoni yakho ephathwayo, isesekeli sokugala esithuryelwe nefoni yakho, kanye/noma umkhijizo wakhi oyikhompyutha ophathekayo (ezobizwa emva kwalokhu ngo "Mkhijizo").

Uma uMkhijizo wakho udinga isevisi yesiqinisekiso, sicela uwubuvisele kulowo owuthenge kuye, noma xhumana ne-Call Center yakwa-Sony Ericsson yangakinji (amareythi kazwelonke angasebenza) noma vakashela ku www.sonyericsson.com ukuze uthole ulwazi oluthe xaxa.

Iwaranti Yethu

Kuncike kwizimo zeWaranti eneMikhawulo, u-Sony Ericsson uqinisekisa ukuthi lo Mkhqizo awutholanga kulimala ekwakhwiweni kwavo, kwizinto ezikuwo, noma kulabo abebewakha ngenkathi uthengwa umthengi okokuqala. IWaranti Enomkhawuko izothatha isikhathini esiwunyaka owoodwa (1) kusukela osukwini lokuqala lokuthenga uMkhqizo.

Esizokwenza

Uma ngalesi sikhathini sewaranti, lo Mkhqizo uhlileka ukusebenza ngokujwayelekile nakumasevisi ajwayelekile, ngenxa yokulimala ekwakhwiweni kwavo, kwizinto ezikuwo noma kubuchwepheshe bawo, abasabalalisi noma ophathina besevisi abagunyayazwe wu-Sony Ericsson, ezweni* la uthenge khona uMkhqizo, bazokhetha noma bayawukhanda noma bayawushintsha uMkhqizo ngokuhambisana nemigomi nemibandela echa Zwe lapha.

U-Sony Ericsson nasebenzisana naye bayaligodla ilungelo lokukohkhisa imali yokuphatha negezandla kwabo uMkhqizo, uma kungukuthi ubuyiswe nije awukho ngaphansi kwesiqinisekiso ngokwalezi zimo ezingezansi.

Sicela wazi ukuthi amanye amasethingi aqondene nawe, okulandwayo noma olunye ulwazi kungalahleka uma uMkhqizo wakho we-Sony Ericsson ukhandwa noma ushinhintsha ngomunye. Njengamanje u-Sony Ericsson angavinjewla umthetho osebenzayo, ezirye izimiselo noma imikhawulo yobuchwepheshe ekwakheni ikhophi yogukadla ingozi yokulandwayo okuthile. U-Sony Ericsson akazibophezelini olwazini olulahlekayo Iwanoma yiluphi uhlubo futhi ngeke akukhokhela ngokulahlekewla kwakho. Kufanele njalo wenze amakhophi agade ingozi alo lonke ulwazi olugciniwe eMkhqizweni wakho we-Sony Ericson njengokulandwayo, ikalenda noxhumene nabo ngaphambi kokuwuletha uMkhqizo wakho we-Sony Ericsson ukuzokhwandwa nokushintshwa.

Imibandela

- 1 Le Waranti enoMkhawuko isebezenza kuphela uma kukhishwe ubufakazi bokuthenga basekuqaleni obanikwa umthengi enikwa ngumdayisi ogunyaziwe wakwa-Sony Ericsson obuchaza usuku okwathengwa ngalo nesirili namba*, konke akuvezwe noMkhqizo iwofo ofuna ukulungiswa noma ukushintshwa. U-Sony Ericsson uyaligodla ilungelo lokunganikezelini ngesevisi yewaranti uma le mininingwane isusivu noma ishinhintshi emveni kokuba uMkhqizo wathengwa okokuqala kumthengisi.
- 2 Uma u-Sony Ericsson elungisa noma eshinhinta uMkhqizo, iwofo Mkhqizo olungisive noma oshinhintshi usa zoba nesiqiniseko esilingene isikhathini esisele sesiqiniseko, noma izinsuzu ezingamashumi ayisishiyagalolunye (90) emveni kokulungiswa noma kokushintshwa, kuye ngokuthi yisiphi isikhathini eside. UKulungisa noma ukushintsha kungasho ukusetshenzisa izingxene ezisebenza ngokufanayo kodwa eseziungliswe kabusha. Izingxene ayisikhishive kwafakwa ezinye esikhundleni sazo noma okuyakhile ifoni kuzoba impahla ka-Sony Ericsson.
- 3 Lesi siqiniseko asifaki ukhululeka kokusebenza koMkhqizo ngenxa yokuguga, noma ukugasetshenziswa kahle kwavo, kubandakanya, kodwa hhayi kuphela, ukwusebenzisa ngendlela engajwayelekile nengalungile futhi engahambisani nemithetho ka-Sony Ericsson yokusetshtenziswa nokukanekelwa koMkhqizo. Kanti futhi lesi siqiniseko asifaki ukhululeka koMkhqizo ukusebenza ngenxa yengozi, isofthiwe ukuguqulwa noma ukuhlela kabusha, ngokwenziwa nguMdali, ngokulimala okudalwa izinto eziwukethshezi. Ibhethri elishajekayo lingashajwa futhi lingashajwa izikhathini ezingaphezu kwekhulu. Nokho, liyogcina ligugile - lokhu akukona ukwephuka kuthi kuwukuguga okujwayelekile. Uma isikhathini sokukhuluma noma isikhathini sokumiswe isikhashana sisifishane ngokuphawulekayo, yisikhathini lesi

sokushintsha ibhethri lakho. U Sony Ericsson uncoma ukuthi usebenzise kuphela amabhethri kanye namashaja agunyazwe ngu Sony Ericsson. Izinguquko ezincane ekubonisweni kokugqama nombala kungenzeka phakathi kwamafoni. Kungaba namachaashazi amancane akhanyayo noma amnyama esibukweni. Lokhu kubizwa ngamaphikseli anenkinga kanti kwenzeka uma amachashazi engasebengenza kahle futhi engalungiseki. Amaphikseli amabili anenkinga kuthiwa amukelekile.

Izinguquko ezincane ekubukekeni kwekhamera zingenzeka phakathi kwamafoni. Lokhu akusyo into engawayelekile futhi akuthaththa njengemojuli yekhamera enesici.

- 4 Ngoba uhlelo lweselula lapho lo Mkhiqizo usebenza khona, lunikezelwa umnikezelu ongahlangene no-Sony Ericsson, u-Sony Ericsson negeke athweswe cala ngokusebenza, ukubakhona, ukwembozeka kwamasevisi kanye nokuhleleka kwalolo luhlelo.
- 5 Le waranti ayibandakanyi ukwehluleka koMkhiqizo okudalwe ukufaka, ukuhlela kabusha, ukukhanda noma ukuvulwa koMkhiqizo ngumuntu onagunyaziye ngu-Sony Ericsson.
- 6 Le waranti/lesi siqinisekiso asikubandakanyi ukwehluleka koMkhiqizo okudalwe ukusebenzisa izisekeli noma amanye amadivaysi okuxhuma ifoni okuyizisekeli okungesizo ezakhelwe lo Mkhiqizo ngu-Sony Ericsson.
- 7 Ukulimaza noma yiziphi izivalo (seals) zalo Mkhiqizo kuyobanga ukuthi isiqinisekiso singasebenzi.

- 8 AZIKHO EZINYE IZIQINISEKISO EZISHIWO, KUNGABA EZIBHALIWE NOMA ZOMLOMO, NGAPHANDLE KWALEZI EZINOMKHAWUKO EZIBHALWE LAPHA. ZONKE IZIQINISEKISO EZICATSHANGELWAYO KUBANDAKANYA KODWA HHAYI KUPHELA IZIQINISEKISO EZICATSHANGWAYO ZOKUFAKA IMPAHLA NOKULUNGELA KAHL E INHLOSO ETHILE, KONKE KUKALELWE ISIKATHI SALESI SIQINISEKISO ESINOMKHAWUKO. AKUKHO SIMO ESINGENZA U SONY ERICSSON NOMA ABANIKEZELI BAKHE BELAYISENSE, UKUBA BAKHOKHISWE NGOKULIMALA OKUYINGONZI NOMA OKWAMABOMU KWANOMA YILUPHI UHLOBO, KUBANDAKANYA, KODWA HHAYI KUPHELA, UKULAHLEKA KWENZUZO NOMA KOKUTHENGISA, NGOKUGCWELE NJE LOKHO KULIMALA KUNGACHITHWA NGUMTHETHO. Amanye amazwe/imibuso ayikuvumeli ukungabandakanywa noma ukunkunywa komonakalo wengozi noma wamabomu, noma umkhawukho wesikhathi esicatshangwayo, ngakho-ke lezi ziqiniseko ezbibalwe ngenhla noma okungeke kwensiwa, kungenzeka kungakuthinti wena. Iwaranti ehlizekwi ayiwakhinyabezi amalungelo umthengi anawo ngaphansi komthetho osebenzayo njengamanje, futhi asiwakhinyabezi amalungelo umthengi anawo kumthengisi avela ekuthengiselaneni kwabo/isivumelwano sokuthenga.

* Ukusabalala kwewaranti ngokomhlaba

Uma uthenge uMkhiqizo wakho ezweni eliyilungu le-European Economic Area (EEA) noma e-Switzerland noma e-Republic of Turkey, futhi lowo Mkhqizo wawuhloselwa ukudayiswa kwi-EEA noma e-Switzerland noma e-Turkey, uMkhiqizo wakho ungaseviswa kunoma iliphi izwe le-EEA noma e-Switzerland noma e-Turkey, ngaphansi kwemibandela yewarantti esebezena ezweni odinga kulo isevisi, ingobo uma uMkhiqizo ofanayo udayiswa kulelo zwe wumsabalalisi ogunyazwe ngu-Sony Ericsson. Uma ufuna ukuthola noma uMkhiqizo wakho uyadayiswa yini ezweni okulo, sicela ufoneli i-Call Center yakwa-Sony Ericsson yangakini. Sicelo wazi ukuthi amanye amasevisi ngeke enziwa noma yikuphi kuphela ezweni othenge kulo, isibonelo, ngenxa yokuthi uMkhiqizo wakho unengaphakathi noma ingaphandle elehlukelo kule nhlobo eanayo edayiswa kwamanye amazwe. Ucelwa ukuba wazi ngaphezu kwalokho ukuthi kwsinye isikhathi kungangenzeki ukukhanda iMkhiqizo ekhiywe ama-SIM.

** Kwamanye amazwe/izifunda ulwazi olwengeziziwe (njengekhadi lewaranti elisebenzayo) lungahle ludingeke.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference,
including interference that may cause undesired
operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for W595

We, Sony Ericsson Mobile Communications AB of
Nya Vattentornet
SE-221 88 Lund, Sweden
declare under our sole responsibility that our product
Sony Ericsson type AAD-3052111-BV
and in combination with our accessories, to which
this declaration relates is in conformity with the
appropriate standards EN 301 511:V9.0.2,
EN 301 489-7:V1.3.1, EN 301 908-1:V2.2.1,
EN 301 908-2:V2.2.1, EN 301 489-24:V1.3.1,
EN 300 328:V1.7.1, EN 301 489-17:V1.2.1,
EN 60 950-1:2006 following the provisions of,
Radio Equipment and Telecommunication
Terminal Equipment directive 1999/5/EC.

Lund, June 2008

CE 0682



Shoji Nemoto,
Head of Product Business Group GSM/UMTS

Siyazifeza izidingo zeMiyalelo ye-R&TTE
(1999/5/EC).

Uhla Iwamagama

A

| | |
|---|----|
| Abangani bami | 47 |
| ama-alamu | 62 |
| ama-aphoyintimenti | 64 |
| amabhathini okukhetha | 13 |
| amabhizinesi khadi | 36 |
| Amabhuku alalelwayo | 21 |
| amabhukumaka | |
| ukukhetha | 55 |
| ukwakha | 55 |
| Ama-feed e-Web | 56 |
| Amakhasi e-Web, umlando | 55 |
| amakhi | 9 |
| Amakhi ekhamera | 49 |
| amanothi | 65 |
| ama-photo feeds | 58 |
| amaphrofayli | 66 |
| ama-podcasts | 58 |
| amaqembu | 36 |
| amaringithoni | 67 |
| amaringithoni aqondene | |
| nomshayi lucingo | 34 |
| Amasethingi, amasethingi e-Inthanethi | 71 |
| Amasevisi ezindawo | 62 |
| amashothikhathi | 13 |
| amathegi ezithombe | 51 |
| Amavidyo kliphu akulayini, ukuhlola | 22 |

C

| | |
|-----------------------------|----|
| Cinga, kumakhasi eWeb | 56 |
|-----------------------------|----|

D

| | |
|---------------------------------|----|
| declaration of conformity | 86 |
|---------------------------------|----|

I

| | |
|--|------------|
| ibhethri | |
| kuyashajwa | 8 |
| ukufakwa | 6 |
| i-blog | |
| ikhamera | 53 |
| ividyo | 54 |
| I-Bluetooth™ wireless technology | 28 |
| idatha yendawo | 51 |
| i-flight mode | 61 |
| Ifoni, ukuyivula | 7 |
| igama lefoni | 27 |
| I-Google Maps | 62 |
| ihendisfri | 17, 28, 37 |
| i-imeyli | 45 |
| I-Inthanethi | |
| amabhukumaka | 55 |
| ukuphepha nezitifiketi | 56 |
| ikhalenda | 64 |
| ikhamera | 49 |
| amasethingi | 50 |
| amashothikhathi | 51 |

| | | | |
|---------------------------------------|--------|-------------------------------------|--------|
| i-blog | 53 | imisebenzi | 65 |
| ukucupha | 50 | Imiyalo yezwi | 37 |
| ukuphrinta | 54 | imodi yefoni | 59 |
| ukusebenzisa | 50 | I-MusicDJ™ | 23 |
| Ikhebula le-USB | 26 | Inamba ye-IMEI | 71 |
| ikhodi memo | 74 | ingqikithi | 66 |
| Ikhodi ye-PIN code, ukushintsha | 69 | i-pan ne-zoom, amakhasi e-Web | 55 |
| ilokhi | | I-PC Suite | 58 |
| ifoni | 70 | I-PhotoDJ™ | 53 |
| ikhiphedi | 70 | I-PlayNow™ | 21 |
| I-SIM khadi | 69 | I-PUK | 69 |
| imakhrofoni | 31 | i-push imeyli | 46 |
| i-master reset | 72 | I-SensMe™ | 20 |
| Imemori khadi | 14 | isevisi yokuphendula | 37 |
| imenenja yefayela | 24 | isibali zinyathelo | 68 |
| Imenenja yeMidiya | 25, 26 | isidlali sevidyo | 22 |
| Imenuy yomsebenzi | 14 | Isidlali se-Walkman™ | 17, 18 |
| imeyili yezwi | 37 | isikhathi | 66 |
| imibiko | | isikhathi socingo | 42 |
| i-imeyli | 45 | isilawuli sezwi | 37 |
| isithombe | 43 | I-SIM khadi | |
| izwi | 45 | kukopishelwa ku/kuvela ku | 34 |
| ulwazi lwendawo nolweselula | 49 | ukufakwa | 6 |
| umbhalo | 42 | ukulokha | 69 |
| imibiko yesithombe | 43 | ukuvula ukuvimba | 69 |
| imibiko yezwi | 45 | isiqophi msindo | 23 |
| imibiko yombhalo | 42 | i-smart search | 34 |
| imidlalo | 67 | I-SMS Bheka imibiko yezithombe | |
| imihlahlandlela yokuphepha | 78 | I-SMS Bheka imibiko yombhalo | |

| | |
|--|--------|
| I-SOS <i>Bheka</i> izinamba zesimo esiphuthumayo | 40 |
| I-T9™ Text Input | 19 |
| I-TrackID™ | 68 |
| I-Update service | 40 |
| I-VideoDJ™ | 51 |
| ividyo | 50 |
| i-blog | 53 |
| kuyahlelwa | 54 |
| ividyo rekhoa | 49 |
| ivolumu | 13 |
| iringithoni | 29 |
| ispikha sasendlebeni | 25 |
| I-Walk Mate | 25 |
| iwaranti | 29 |
| Izibonisi | 70 |
| izinamba zesimo esiphuthumayo | 71 |
| izinga lememori | 70 |
| izingcingo | 28 |
| eziphuthumayo | 58 |
| ezomhlaba jikelele | 58 |
| ividyo | 58 |
| kuyarekhodwa | 58 |
| ukulindisa | 58 |
| ukuphatha izingingo ezimbili | 58 |
| ukuphendula nokudikila | 58 |
| ukushaya nokwamukela | 58 |
| ukwamukela | 58 |
| izingcingo zenkomfa | 49 |
| izinhla zokudlala | 49 |
| izinhlelo | 61 |
| izinombolo zami | 61 |
| izithombe | 61 |
| i-zoom | 61 |
| K | |
| kuhanjwa kumamenyu | 13 |
| kuyadluliswa | 13 |
| izithombe zekhamera | 25 |
| umculo | 25 |
| umsindo | 29 |
| kuyavulwa/kuyavalwa | 29 |
| ilokhi yefoni | 70 |
| ukukhiya ikhiphedi | 70 |
| Ukuvikelwa kwelokhi yeSIM | 70 |
| Umsebenzi weBluetooth™ | 70 |
| kuyavumelaniswa | 70 |
| O | |
| okubekwe eceleni | 7 |
| oxhumana nabo | 33, 34 |
| amaqembu | 33 |
| kuyavumelaniswa | 33 |
| kwengezwa oxhumana nabo | 33 |
| efonini | 33 |
| oxhumana nabo bedifolthi | 33 |

| | | |
|------------------------------------|-----------------------|----|
| S | ukufihla inamba | 42 |
| shayela izinamba embikweni | 43 | |
| U | ukuhlanganisa | 6 |
| uhla lwezingcingo | 36 | |
| uhlolojikelele lwamamenyu | 11 | |
| ukonga amandla | 28 | |
| ukubhekapha nokubuyisel a | 29 | |
| ukudayela okuhleliwe | 41 | |
| ukudayela okukalelw e | 41 | |
| ukudayela okusheshayo | 37 | |
| ukudlulisa imidya | 26, 27 | |
| ukudlulisela phambili ucingo | 38 | |
| ukufaka umbhalo | 16 | |
| ukufanekisa | | |
| ikhamera | 49 | |
| ividyo rekhoda | 49 | |
| ukuhlanganisa | 6 | |
| ukukhiya ikhiphedi | 70 | |
| othomathikhi | 71 | |
| Ukulanda umculo | 21 | |
| ukuma kwesibuko | 67 | |
| ukuphendula ngezwi | 38 | |
| ukurekhosa, lalela | 24 | |
| Ukuthumela imibiko | 42 | |
| ukuzizungezel a | 67 | |
| ulimi | 16 | |
| Umculo okulayini, ukulalela | 22 | |
| umkhawuko wesikhathi | 66 | |
| Umsakazo | 22 | |
| usizo | 8 | |
| usuku | 66 | |