


SHARPER IMAGE

Wide Angle Full HD Wi-Fi Security Cam




User Guide
SVC660

In the Box

- Wi-Fi Camera
- Camera Base
- Metal Mount
- 2-Sided Foam Pad
- 5V USB Adapter
- Micro-USB Cable
- Reset Pin
- Screws (x2)
- Anchors (x2)

Location of Controls

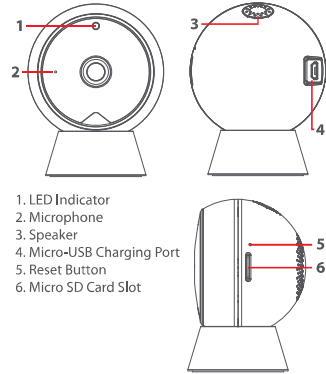


- LED Indicator
- Microphone
- Speaker
- Micro-USB Charging Port
- Reset Button
- Micro SD Card Slot

Setting Up the Camera

Inserting the Micro SD Card

Insert a micro SD card (not included) into the micro SD card slot on the side of the camera.


The camera will support up micro SD cards with up to 32GB of storage.

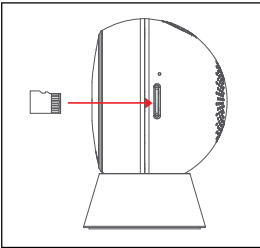

Keep the camera unplugged while when inserting or ejecting the micro SD card.

Plugging in the Camera

- Plug the micro-USB cable into the micro-USB charging port on the back of the camera.
- Attach the other end of the cable to the supplied 5V USB adapter and plug into a wall outlet, or attach the other end of the micro-USB cable to the USB port on a computer.

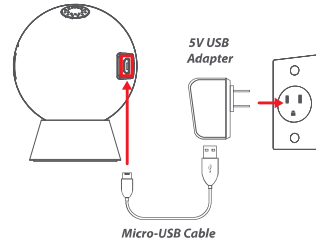


3. Wait ~30 seconds for the camera to boot up.

If using for the first time, the camera must be reset, please read the next section, **Resetting the Camera**, for more information.

Resetting the Camera

- Insert the reset pin into the Reset button on the back of the camera, as shown below.

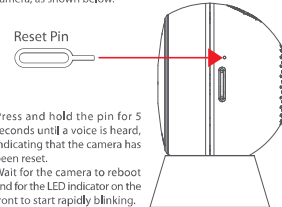


- Press and hold the pin for 5 seconds until a voice is heard, indicating that the camera has been reset.
- Wait for the camera to reboot and for the LED indicator on the front to start rapidly blinking.

Another voice will be heard, indicating that the camera is ready to begin the pairing process.

Downloading and Installing the App


Open the **App Store** (for iOS) or the **Google Play Store** (for Android) on your mobile device. Search for **Wi-Fi Cam** by Sharper Image, then download and install to your device.



The **Wi-Fi Cam** app is compatible with:

- iOS 6.0 and later
- Android 4.0 and later

Download on the **App Store** | GET IT ON **Google Play**




Setting up the App


Before You Begin...

- Make sure the Wi-Fi Cam app is installed to your device.
- Make sure that your device is connected to a 2.4GHz Wi-Fi network, **NOT** a 5GHz network.

- Launch the Wi-Fi Cam app on your device and tap **Add a Camera**.

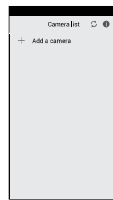

- Select **Setup Camera**.

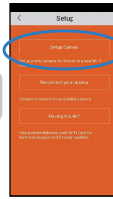



If you have multiple cameras, only setup one at a time.

- The LED indicator on the camera will rapidly flash and a voice will be heard, indicating that the camera is ready to pair.

If the camera does not do these things, it needs to be reset (please see the previous section, **Resetting the Camera**).

- The name of the Wi-Fi network will automatically be filled in. Enter the Wi-Fi password or leave it blank if there is none, then tap **Next**.

The camera will notify you if it fails to connect due to an incorrect Wi-Fi password.

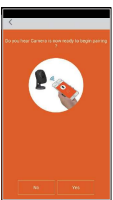

- Adjust the volume of your device to a reasonable level and keep it near your camera as it connects to the Wi-Fi network.

If your camera fails to connect, reset the camera and repeat all the steps (please see the previous section, **Resetting the Camera**).

Troubleshooting Tips

- Make sure that your device is connected to a 2.4GHz Wi-Fi network, **NOT** a 5GHz network.
- Make sure the camera is within range of the Wi-Fi network and has a strong signal.
- If you have trouble accessing your camera from a different network, open the following ports on your internet router:
UDP: 10001-10002, 10240-10241, 20001-20002
TCP: 80

- After a successful connection, you will be prompted to create a name and password for the your camera.

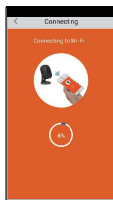



App Features

Camera List

A preview of your Wi-Fi camera will appear on the home screen.

Refresh all the camera previews at once

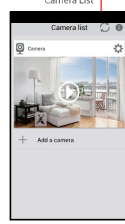


Refresh camera feed, edit list, or remove a camera

Tap the preview screen to view the live camera feed

For iOS Users: Swipe left to remove the camera and swipe down to refresh the feed.

Live Camera Feed

You may view your Wi-Fi Cam's live feed directly from your device. The live camera feed can be viewed from several connected devices simultaneously.

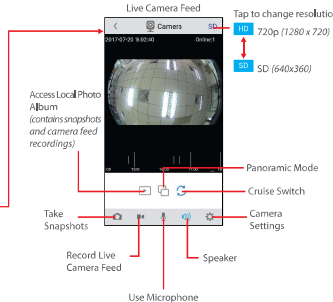

- Tap to change resolution: 720p (1280 x 720) or SD (640x360)
- Access Local Photo Album (contains snapshots and camera feed recordings)
- Panoramic Mode
- Cruise Switch
- Camera Settings
- Take Snapshots
- Record Live Camera Feed
- Speaker
- Use Microphone


If your camera is disconnected, reconnect the camera and wait for the voice indicating that Wi-Fi has connected.

Rotate your device to view your camera in landscape mode.

Recording History

The Wi-Fi Cam is equipped with a motion detection feature, allowing it to automatically record video to the installed micro SD card when it sense movement.

When the camera is done recording, the video will appear in a section of the recording time line, **highlighted in orange**, as below:

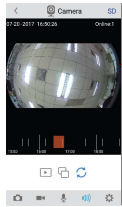

Tap the **Go Live** button to return to the camera's live feed


Each camera has its own individual recording history, to view another camera's history, go back to Camera List and select the camera whose recording history you wish to view.

Notifications

When motion detection is triggered, you will be notified immediately through the app on your device.

To enable/disable alarm notifications, go to **Advanced Settings** and turn on **Motion Alert**.

You may need to enable notifications on your device to receive notifications from the Wi-Fi Cam app.



Local Album

From the live camera feed you can take snapshots or videos that are saved them locally or to the micro SD card.

To access your snapshots and videos, go to your photo library on your mobile device.


Tap the **📷** button to take a snapshot, or tap the **📹** button to record video (tap the **📷** button again to stop recording).

Advanced Settings

The **Advanced Settings** page allows you to:

- Modify the camera settings
- Change the password
- Format the micro SD card
- Update the camera's firmware

To access the **Advanced Settings** page tap on the gear on the Live Camera feed screen:

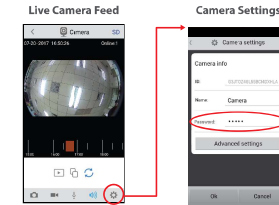

You will be prompted to input the password to the camera (if you set any up).

Advanced Settings




Tap **Check for Update** to update your Wi-Fi Cam. The camera will automatically reboot after an update.

View how much space is available on your Wi-Fi Cam's micro SD card (if the micro SD card is incorrect, reconnect the Wi-Fi Cam).

Resetting the Camera's Password

If you would like to reset the password on the camera, tap the **⚙️** button and select **Edit** then type in the correct password.

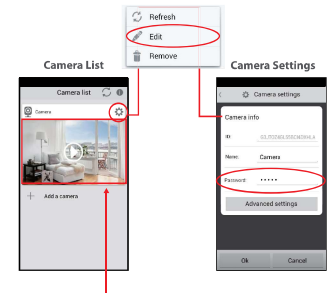


For the iOS version of the app, tap the preview to input the correct password.

You can also reset your password by resetting the camera, itself. See the **Resetting the Camera** section of this user guide.

Reconnecting the Camera

1. To connect a camera that has already been set up, tap **Reconnect Your Camera**. Make sure the LED is solid **BLUE** before connecting, the LED will flash **RED** if it is not connected to Wi-Fi.
2. Scan the QR code on the Wi-Fi Cam, or search for it via Wi-Fi.
3. Once your device is connected to the camera, you will be prompted to enter its password.

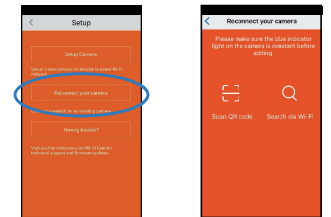

If you relocate your camera to a different Wi-Fi network, or your Wi-Fi settings have been changed, you will need to reset your camera and follow the **Setting up the Camera** section of this user guide.


Mounting the Camera

The camera can be mounted in several ways:


- The base is magnetic, allowing it to sit securely on a metal surface.
- The 2-sided foam pad can be placed on the bottom of the base and then stuck to a surface.
- The metal mount can be installed to a non-magnetic surface, allowing the camera base to stick to that.

Installing the Metal Mount

1. Find the location where you would like to mount the camera, then using a pencil, place the metal mount against the surface and mark where the two screw holes on the metal mount are, on the surface. These will be the location of where you will drill to place the plastic anchors.

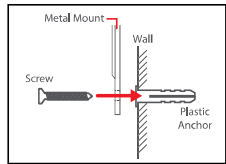

2. Drill two holes at the spot you marked, and push the plastic anchors into the wall.
3. Place the metal mount and align the holes with the anchors and drive or drill the mount screws in.

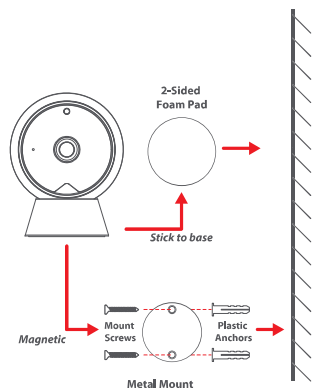

Legal Information

READ CAREFULLY AND KEEP THIS MANUAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment complied with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Rain/Moisture Warning

- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
- Do not submerge in water.
- Do not open this product or attempt to repair the unit yourself. Should it not be working.

Limited Warranty

90 Days Limited Warranty
In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

- TO OBTAIN WARRANTY SERVICE:**
- Go to our website portal to receive an SR0 number.
 - Provide proof of the date of purchase within the package (dated bill of sale).
 - Prepay all shipping costs to the authorized service center, and remember to insure your return.
 - Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit with the package.
 - Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:
 c/o Southern Telecom
 400 Kennedy Drive
 Sayreville, NJ 08872

Should you have any questions or problems concerning this product, please visit our website:
www.SouthernTelecom.com
 Click on **Product Support**

2017 Sharpier Image® name and logo are registered trademarks. Manufactured, marketed, and distributed under license by Southern Telecom, Inc. 6000Apt. NY 11220. © Sharpier Image - All Rights Reserved.

Android, Google and the Google Play store logo are registered trademarks of Google Inc., used with permission.
 Apple, iOS, and the App Store are registered trademarks of Apple Inc., registered in the U.S. and other countries.
 All other trademarks and trade names are those of their respective owners.

Warranty Service Not Provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty
THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AIT, INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THE DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.