

Adjusting the Audio Settings

The settings in the Audio Menu configure the player's digital audio outputs (HDMI, Coaxial, or Optical/SPDIF).

To access the Audio Menu:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.

The Settings menu is displayed.



2. Use the **Arrow** buttons on the remote to highlight **Audio** and press **OK**.

The Audio drop-down menu is displayed. Your current settings are displayed to the right of each menu option.



Changing the PCM Downsampling Rate

This setting should be adjusted if your home audio receiver can process high-bitrate PCM signals over the Optical/SPDIF or Coaxial port.



If you are unsure about how to adjust this setting, leave the PCM Downsampling rate at 48 kHz.




Changing this setting has no effect if your audio is connected via HDMI cable.

If you have the player connected to a home audio receiver and your receiver can process high-bitrate PCM signals:

1. From the Audio menu, use the **Up/Down Arrow** buttons on the remote to highlight **PCM Downsampling** and press **OK**.

The PCM Downsampling menu is displayed.

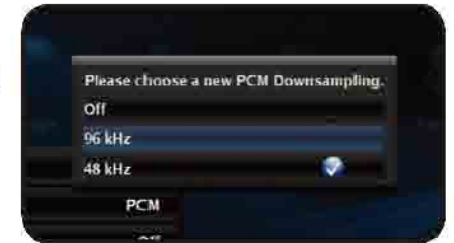

2. Highlight the highest downsampling rate your receiver can process and press **OK**. (Devices differ; see your receiver's user manual for details.)

Adjusting the Digital Audio Output

This setting changes the type of digital audio data the player outputs over HDMI, Optical/SPDIF, or Coaxial ports. Depending on your setup, you may need to try several settings.

1. From the Audio menu, use the **Up/Down Arrow** buttons on the remote to highlight **Digital Output** and press **OK**.

The Digital Output menu is displayed.



2. Highlight the digital audio format best suited to your home audio receiver and press **OK**:

- **PCM Stereo** - Use this setting if you do not have a receiver connected to the player, or if you have an "old-fashioned" stereo receiver.
- **Bitstream HD** - Use this setting if you have an HDMI-connected receiver capable of decoding DTS-HD Master Audio and Dolby TrueHD digital audio. When using this setting, you can only listen to the primary audio track on a disc (this is usually the movie's soundtrack).
- **Bitstream Legacy** - **If you are unsure about which setting to use, select this setting.** Use this setting if you have an Optical/SPDIF-connected receiver capable of decoding DTS, Dolby Digital, or Dolby Digital Plus audio.
- **Bitstream Mixed** - Use this setting if you have an Optical/SPDIF- or HDMI-connected receiver capable of decoding DTS, Dolby Digital, or Dolby Digital Plus audio and you would like to be able to hear secondary audio tracks on your discs (directors' commentaries, etc).

Activating or Deactivating Dynamic Range Control

When activated, this setting normalizes the volume of a disc's audio track. The loudest parts of the soundtrack will be quieter, and the quietest parts will be louder. This effect can be useful when viewing movies late at night, when others might be sleeping.




To use this setting, your player's audio must be connected with HDMI or Optical/SPDIF, and digital output must be set to **Bitstream Mixed** or **PCM**.

To activate or deactivate Dynamic Range Control:

1. From the Audio menu, use the **Up/Down Arrow** buttons on the remote to highlight **Dynamic Range Control** and press **OK**.

The Dynamic Range Control menu is displayed.

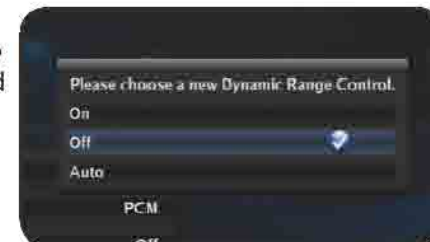

2. Use the **Arrow** buttons on the remote to highlight **On**, **Off**, or **Auto** and press **OK**.



Selecting **Auto** for this setting turns on Dynamic Range Control for all Blu-ray soundtracks except Dolby TrueHD.

Changing the Stereo Downmix Setting

This setting is only used when your Blu-ray Player is connected to an audio receiver with the L and R analog stereo outputs. When connected with these outputs, all audio is reduced to 2 channels.

To change the Stereo Downmix Setting:

1. From the Audio menu, use the **Up/Down Arrow** buttons on the remote to highlight **Stereo Downmix** and press **OK**.

The Stereo Downmix menu is displayed.

2. Use the **Arrow** buttons on the remote to highlight one of the following options and press **OK**:

- **Auto** - Select this option if you are unsure about which setting to choose. The player will select Stereo or Surround Encoded automatically based on the audio source.
- **Stereo** - When selected, the player reduces the audio output to a left and right channel. Select this option if your receiver does not feature Dolby Digital or DTS decoding.
- **Surround Encoded** - When selected, the player reduces the audio output to a left and right channel, but also sends additional simulated surround information for your receiver to decode. Select this option if your receiver can process Dolby Digital or DTS encoding.

Changing the On-Screen Menu Language

Your player can display on-screen menus and play audio in English, French, or Spanish.

To access the Language menu:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.

The Settings menu is displayed.



2. Use the **Arrow** buttons on the remote to highlight **Language** and press **OK**.

The Language drop-down menu is displayed. Your current settings are displayed to the right of each menu option.



Changing the Player's On-Screen Menu Language

Using this setting, you can change the player's menu language to the one you are most comfortable with.

To change the player's menu language:

1. From the Language menu, use the **Up/Down Arrow** buttons on the remote to highlight **OSD** and press **OK**.

The OSD menu is displayed.



2. Use the **Arrow** buttons on the remote to highlight **English**, **French**, or **Spanish** and press **OK**.

Changing the Disc's Menu Language

Using this setting, you can change the language that is displayed when a disc's main menu is displayed.



Not all languages are available on all discs. Most discs have only one menu language available.

To change the disc's menu language:

1. From the Language menu, use the **Up/Down Arrow** buttons on the remote to highlight **Menu** and press **OK**.



2. Use the **Arrow** buttons on the remote to highlight **Auto**, **English**, **French**, or **Spanish** and press **OK**.



Selecting **Auto** for this setting will result in the default menu language being displayed. This is determined by the setting on the disc.

Changing the Audio Language

This setting changes the spoken language on a played disc.



Not all languages are available on all discs. Most discs have only one or two audio languages available.

To change the disc's audio language:

1. From the Language menu, use the **Up/Down Arrow** buttons on the remote to highlight **Audio** and press **OK**.



2. Use the **Arrow** buttons on the remote to highlight **Auto**, **English**, **French**, or **Spanish** and press **OK**.



Selecting **Auto** for this setting will result in the default audio language being played. This is determined by the setting on the disc.

Changing the Subtitle Language

This setting changes the default subtitle language when playing a disc.

To change the subtitle language:

1. From the Language menu, use the **Up/Down Arrow** buttons on the remote to highlight **Subtitle** and press **OK**.

The Subtitle menu is displayed.



2. Use the **Arrow** buttons on the remote to highlight **None**, **English**, **French**, or **Spanish** and press **OK**.

Changing the BD-Live Settings

The BD-Live menu can be used to change BD-Live network access, or to allocate memory for the service.




To enjoy BD Live, a USB thumb drive with at least 1GB of free memory must be connected to the player's USB port.

To access the BD-Live menu:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.

The Settings menu is displayed.

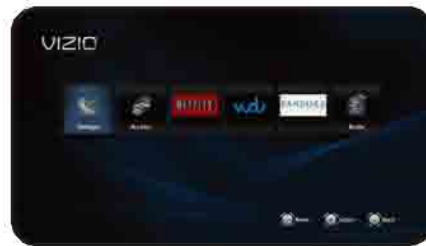

2. Use the **Arrow** buttons on the remote to highlight **Language** and press **OK**.

The Language drop-down menu is displayed. Your current settings are displayed to the right of each menu option.




Changing BD-Live Access

This setting allows you to set limitations on the player's ability to access BD-Live content on the internet.

To change BD-Live access:

1. From the BD-Live menu, use the **Up/Down Arrow** buttons on the remote to highlight **BD-Live Internet Access** and press **OK**.

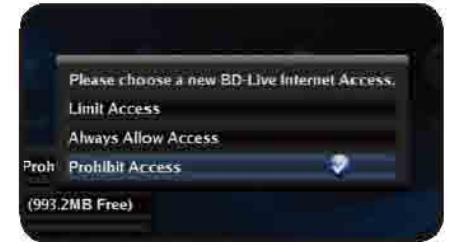

2. Highlight one of the following options and press **OK**:


- **Limit Access** - This setting only allows the player to download content from validated BD-Live websites. This reduces the chances of malicious content being downloaded to the player.
- **Always Allow Access** - This setting allows the player to download content from any BD-Live internet sites. There is little danger of downloading malicious content from commercial Blu-ray discs, but playing illegally-authored or pirated discs may carry an increased risk.
- **Prohibit Access** - This setting blocks the player from accessing any BD-Live content over the internet.

Viewing BD-Live Storage Settings

When a USB thumb drive is connected to the USB port, the player can use its memory for BD-Live storage.

To view the available BD-Live storage:

1. From the BD-Live menu, use the **Up/Down Arrow** buttons on the remote to highlight **BD-Live Storage** and press **OK**.

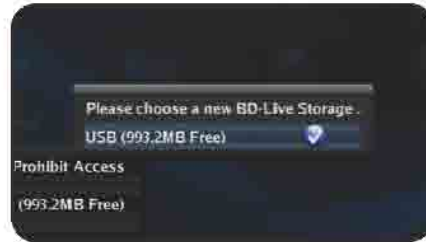

Erasing Blu-ray Memory Storage

Selecting this menu option clears the portion of the player's internal memory used to store BD-Live content and disc bookmarks. Disc bookmarks are used by the player to resume playback at the point the disc was halted.




You cannot "undo" a memory erase, but it will not damage the player in any way.

To erase the player's memory storage:

1. From the BD-Live menu, use the **Up/Down Arrow** buttons on the remote to highlight **Erase Blu-ray Storage** and press **OK**.

A confirmation message is displayed.

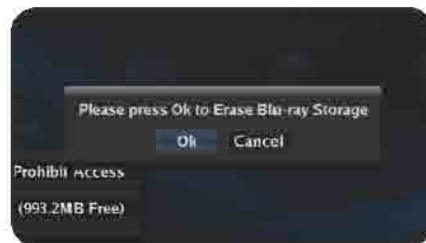

2. To proceed and clear the player's memory, highlight **OK** and press **OK**.

Setting the Parental Controls

The player's parental controls allow you to prevent the player from displaying certain rated content without a password.

To access the Parental Controls menu:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.

The Parental Controls menu is displayed.



2. Use the **Arrow** buttons on the remote to highlight **Parental** and press **OK**.

The Parental drop-down menu is displayed. Your current settings are displayed to the right of each menu option.



Setting the Parental Country

Because countries have their own rating systems, if you are going to use the Parental Controls, you should set the parental country to match the country in which you live.



Some discs do not support multiple country-based rating systems.



You may be prompted to enter your Parental Code. If you have not yet set the code, enter **0000**.

To set the parental country:

1. From the Parental Controls menu, use the **Up/Down Arrow** buttons on the remote to highlight **Parental Country** and press **OK**.



2. Use the **Up/Down Arrow** and **OK** buttons to highlight the country in which you live:

- **USA**
- **Canada**
- **China**
- **Japan**

Activating or Deactivating the Parental Controls


Use this setting to turn the parental controls on or off.



You may be prompted to enter your Parental Code. If you have not yet set the code, enter **0000**.

To activate/deactivate the parental controls:

1. From the Parental Controls menu, use the **Up/Down Arrow** buttons on the remote to highlight **Parental Controls** and press **OK**.

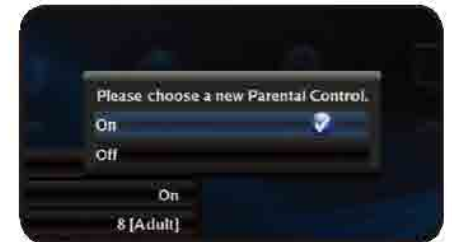

2. Use the **Up/Down Arrow** buttons to highlight **On** or **Off** and press **OK**.

Setting the Parental Restriction Level

Use this setting to restrict the playback of discs encoded with a rating level equal to or higher than the level you choose.




The Parental Controls must be set to **On** for this setting to work.



You may be prompted to enter your Parental Code. If you have not yet set the code, enter **0000**.

To set the parental level:

1. From the Parental Controls menu, use the **Up/Down Arrow** buttons on the remote to highlight **Parental Level** and press **OK**.

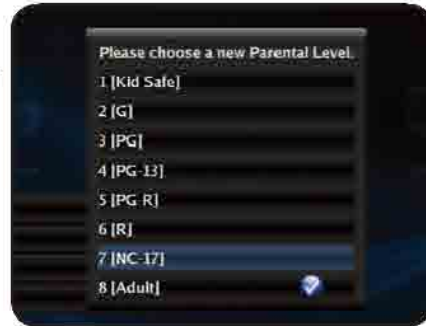

2. Using the **Arrow** buttons on the remote, highlight the highest rating level you wish to allow, then press **OK**.

For example, if you only want the player to display content rated PG or below, select **PG**.

Content ratings will vary according to your country.

Changing the Parental Code


If you use the parental controls, you should change the passcode from the default to prevent children from accessing inappropriate material.



You may be prompted to enter your Parental Code. If you have not yet set the code, enter **0000**.

To change the parental code:

1. From the Parental Controls menu, use the **Up/Down Arrow** buttons on the remote to highlight **Parental Password** and press **OK**.

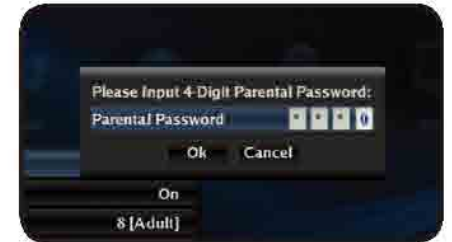

2. Using the **Keypad** on the remote, enter a new 4-digit parental passcode, then highlight **OK** and press **OK**.
3. Write down your passcode and store it in a secure location.


Changing the System Settings

The System menu allows you to customize autoplay, power, screen saver, and network settings. From this menu, you can also reset the player to its factory defaults.

To access the System menu:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.

The Settings menu is displayed.

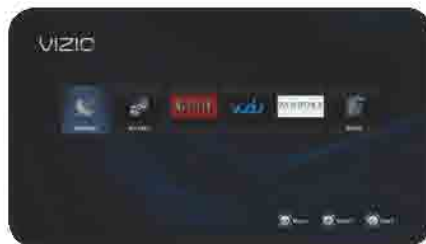

2. Use the **Arrow** buttons on the remote to highlight **System** and press **OK**.

The System drop-down menu is displayed. Your current settings are displayed to the right of each menu option.



Activating or Deactivating Disc Autoplay

When this option is activated, the player will automatically play an inserted disc.


When this option is deactivated, you will need to select **Play Disc** to play a disc.



Autoplay does not mean that the player will start a movie. The disc will load and usually the disc's main menu will be displayed.

To Activate/Deactivate Disc Autoplay:

1. From the System menu, use the **Up/Down Arrow** buttons on the remote to highlight **Optical Disc Autoplay** and press **OK**.

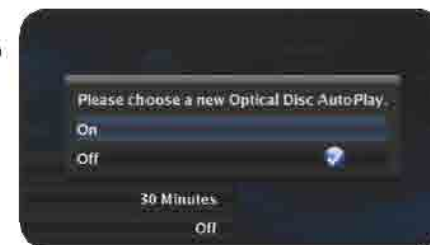


2. Using the **Up/Down Arrow** buttons on the remote, highlight **On** or **Off** and press **OK**.

Setting Auto Power Down

The player has a power-saving feature that turns it off after a set period of inactivity.

To customize the period before auto power down:

1. From the settings menu, use the **Up/Down Arrow** buttons on the remote to highlight **Auto Power Down** and press **OK**.

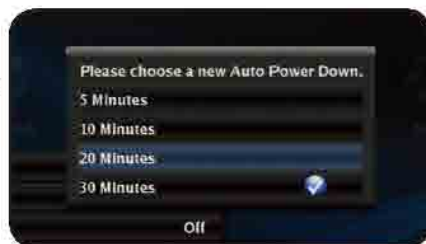

2. Use the **Arrow** buttons to highlight the duration after which you want the player to shut down, then press **OK**:


- **5 Minutes**
- **10 Minutes**
- **20 Minutes**
- **30 Minutes**

Setting the Screen Saver Duration

The player features a screen saver that will blank the screen after a set period of inactivity. This can prevent image “burn in” on your TV.

To set the screen saver:

1. From the settings menu, use the **Up/Down Arrow** buttons on the remote to highlight **Screen Saver Duration** and press **OK**.

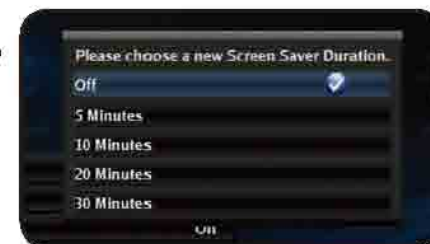

2. Use the **Arrow** buttons to highlight the duration after which you want the player to shut down, then press **OK**:
 - **Off** (The screen saver will not activate)
 - **5 Minutes**
 - **10 Minutes**
 - **20 Minutes**
 - **30 Minutes**

Enabling or Disabling CEC Support

When enabled, CEC (Consumer Electronic Control), allows you to control your Blu-ray player using your TV remote. For CEC to work, your player must be connected to your TV with an HDMI cable, and your TV must support CEC. (Not all manufacturers enable CEC for all products.)

To enable to disable CEC support:

1. From the settings menu, use the **Up/Down Arrow** buttons on the remote to highlight **CEC Support** and press **OK**.
2. Use the **Arrow** buttons to highlight **On** or **Off**, then press **OK**.

Updating the Player's Firmware Via Your Home Network

To ensure your player has the most current firmware, you should occasionally update via your network.



To use this function, your player must be connected to your home network and to the internet.

To update your player's firmware:

1. From the settings menu, use the **Up/Down Arrow** buttons on the remote to highlight **Update Via Network** and press **OK**.
2. Confirm that you want to update the player. Highlight **OK** and press **OK**.

Restoring the Player's Factory Defaults

This setting allows you to restore menu and Internet App options to their factory defaults.

To restore a setting to the factory default:

1. From the settings menu, use the **Up/Down Arrow** buttons on the remote to highlight **Restore Factory Defaults** and press **OK**.
2. Use the **Arrow** and **OK** buttons to select the setting you wish to restore to the factory default:



- **Restore factory settings and deactivate all connected applications** - Restore the player and all of its Internet Apps to their factory settings.
- **Restore factory settings** - Restore the player to its factory settings, but retain Internet App settings.
- **Deactivate all connected applications** - Restore all Internet Apps to their factory settings and remove all account information.
- **Deactivate Netflix/Pandora/Vudu** - Remove all account information and restore to factory settings.


Adjusting the Network Settings

In order to access BD-Live or Internet Apps, your player must be connected to your home network and to the internet.

To access the Network menu:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.

The Settings menu is displayed.

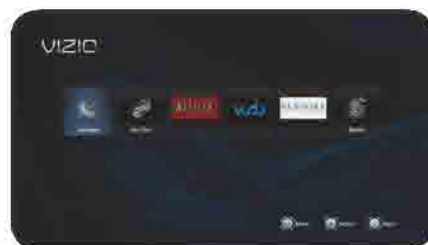

2. Use the **Arrow** buttons on the remote to highlight **Network** and press **OK**.

The Network drop-down menu is displayed.



Adjusting the Wired Settings

If your player is connected to your home network with an ethernet cable, the player will automatically detect the connection. You can manually adjust the settings, but VIZIO recommends this for advanced users only.

To adjust the wired settings:

1. From the Network Menu, use the **Arrow** buttons on the remote to highlight **Wired** and press **OK**.

The Wired menu is displayed.



2. Use the **Arrow** buttons on the remote to highlight **IP Mode** and press **OK**.

Use the **Arrow** buttons to select **Off**, **Dynamic**, or **Manual** and press **OK**.



To change the individual IP settings, IP Mode must be set to **Manual**.

3. Use the Arrow and OK buttons on the remote to change each of the IP Mode settings:
 - **IP Address**
 - **Subnet Mask**
 - **Gateway**
 - **Primary DNS**
 - **Secondary DNS**



If you are unsure what values to enter, contact your Internet Service Provider (ISP) for assistance.

4. When you are finished, highlight **Apply** and press **OK**.

Setting Up a Wireless Connection Manually

If you have a wireless home network, including a wireless router or modem and an internet connection, you can set up the player to connect wirelessly.

To set up a wireless connection manually:

1. From the Network Menu, use the **Arrow** buttons on the remote to highlight **Wireless** and press **OK**.

The Wireless menu is displayed.



2. Use the **Arrow** buttons on the remote to highlight **Network List** and press **OK**.

A list of available wireless networks is displayed.



3. Use the **Arrow** buttons on the remote to highlight the name of your home wireless network, then press **OK**.



If your network is password-protected, you are prompted to enter a password. Enter your password using the remote.

When finished, highlight **Connect** and press **SELECT**.



Setting Up a Wireless Connection Using WPS

Many newer routers feature WiFi Protected Setup, which allows you to setup a wireless network without manually entering connection information. Follow the instructions in this section if your WPS-enabled router has a WPS button.

To set up a wireless connection using a WPS button:

1. From the Network Menu, use the **Arrow** buttons on the remote to highlight **Wireless** and press **SELECT**.

The Wireless menu is displayed.



2. Use the **Arrow** buttons on the remote to highlight **WiFi Protected Setup (WPS)** and press **SELECT**.

The WPS screen is displayed.








3. When prompted by the player, press the **WPS button** on your router.

When the router and player have established a connection, the WPS screen will display **Success**.



Using the Wireless Network List

The Wireless Network List uses a series of symbols to give you all the information you need at a glance. Use the table below to familiarize yourself with these symbols:

Category	Icon	Definition
Connection		Displayed when the player is connected to the associated network.
Saved		Displayed when the network properties, including password, have been saved in the player's memory.
Security		Indicates whether the associated network is encrypted or not. If the "Locked" symbol is overlaid with a red cross, it means the encryption type is unsupported by the player.
Protocol		Indicates the network protocols supported by the associated network.
Signal Strength		Indicates the signal strength of the associated network. The more green bars, the better the network strength.

Viewing the Info Screen


The info screen displays the following information:

- Software Version
- Software Date
- Interface
- Link Status
- MAC Address
- IP Address

To access the info screen:

1. Turn on the player and your TV. Use the **Arrow** buttons on the remote to highlight **Settings** and press **OK**.

The Settings menu is displayed.

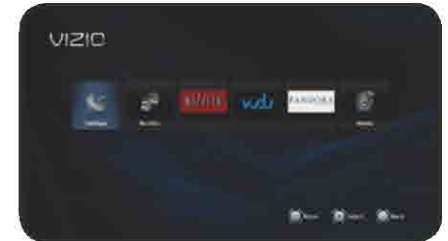

2. Use the **Arrow** buttons on the remote to highlight **Info** and press **OK**.

The info screen is displayed.



Using the Netflix App

Your player has the Netflix App built-in. With it, you can stream movies, television shows, and other content from the internet to your TV.

To use Netflix, you must first:

- Have a high-speed internet connection and a home computer.
- Connect your player to your home network.
- Have a valid Netflix account.

Opening a Netflix Account

To use Netflix, you must first open an account. This can be completed using the on-screen menu and your home computer.

To open a Netflix account:

1. Turn on your player and the TV.

Using the **Arrow** buttons on the remote, highlight **Netflix** and press the **SELECT** button on the remote.

2. Follow the on-screen instructions until your code is displayed.

3. Go to your computer and navigate to **www.netflix.com/VIZIO**

Sign up using the code displayed on the TV screen.

For Netflix support, go to **www.netflix.com/help** or call **1-866-579-7113**.



Using the VUDU App

Your player has the VUDU App built-in. With it, you can stream high-definition movies and TV programs from the internet to your TV. VUDU also features popular applications like Facebook and Twitter.

To use VUDU, you must first:

- Have a high-speed internet connection and a home computer.
- Connect your player to your home network. See XX.
- Have a valid VUDU account.

Opening a VUDU Account

To use VUDU, you must first open an account. This can be completed using the on-screen menu and your home computer.

1. Turn on your player and the TV.

Using the **Arrow** buttons on the remote, highlight **VUDU** and press the **SELECT** button on the remote.

The VUDU Apps screen is displayed.



2. Using the **Arrow** buttons on the remote, highlight **VUDU Movies** and press **SELECT**.

The VUDU home screen is displayed.



- Highlight **Free HD Rental** and press **SELECT**.



- Using the **Arrow** and **SELECT** buttons, enter your e-mail address, then highlight **OK**.

An e-mail is sent to your e-mail address.



- Use your home computer to read the VUDU e-mail. Click the **Complete Account Setup** button in the body of the e-mail.

Complete the account setup by following the instructions on the VUDU website.

For VUDU support, go to www.VUDU.com/support or call 1-888-554-8838.



Using VUDU to Watch a Movie

VUDU offers thousands of HD-quality movies and TV programs. Before you begin:

- Ensure your player is connected to your home network and to the internet.
- Ensure you have a valid VUDU account.

To watch a movie or program on VUDU:

- Turn on your player and the TV.

Using the **Arrow** buttons on the remote, highlight **VUDU** and press the **SELECT** button on the remote.

The VUDU Apps screen is displayed.



- Using the **Arrow** buttons on the remote, highlight **VUDU Movies** and press **SELECT**.

The VUDU home screen is displayed.



Remember, you can access Facebook, Twitter, and other Apps from the VUDU home screen.

- Use the **Arrow** and **SELECT** buttons on the remote to choose from the main menu options:
 - Most Watched** - Displays a list of movies most watched by VUDU users.
 - New on VUDU** - Displays a list of newly available movies.
 - Explore Catalog** - Allows you to search for movies by genre, actor, director, or title.
 - My VUDU** - Displays a list of your purchased rentals, movies, TV shows, your Wish List, and also displays your VUDU settings.

- Use the **Arrow** buttons to highlight the movie you want to watch, then press **SELECT**.

The Movie Details screen is displayed.

Highlight **Rent/Own** and press **SELECT**.

- Use the **Arrow** buttons to highlight the purchase option you would like, then press **SELECT**:
 - HDX** - Highest quality 1080p HD video.
 - HD** - 720p HD video.
 - SD** - 480p (DVD-quality) video.
- Confirm your selection and press **SELECT**.

Your movie plays.

Using the Pandora App

Pandora is a personalized internet-based radio service that is designed to help you discover new music while you listen to music you already know and enjoy.

To use Pandora, you must first:

- Have a high-speed internet connection and a home computer.
- Connect your player to your home network. See XX.
- Have a valid Pandora account.

Opening a Pandora Account

To use Pandora, you must first open an account. This can be completed using the on-screen menu and your home computer.

To open a Pandora account:

- Turn on your player and the TV.

Using the **Arrow** buttons on the remote, highlight **Pandora** and press the **SELECT** button on the remote.

The Pandora App Welcome screen is displayed.



- Using the **Arrow** buttons on the remote, highlight **I am new to Pandora** and press **SELECT**.

Follow the on-screen instructions.

You will need to go to the Pandora web site using your home computer.

For Pandora support, go to www.pandora.com/support



Logging Into Your Pandora Account

If you already have a Pandora account, you can sign in and listen to your personalized stations.

To log into your Pandora account:

1. Turn on your player and the TV.

Using the **Arrow** buttons on the remote, highlight **Pandora** and press the **SELECT** button on the remote.

The Pandora App Welcome screen is displayed.



2. Using the **Arrow** buttons on the remote, highlight **I have a Pandora account** and press **SELECT**.

The User Login screen is displayed.



3. Use the **Arrow** and **SELECT** buttons on the remote to enter your e-mail address and Pandora password.

When you are finished with each entry, highlight **next >>** and press **SELECT**.

After a successful login, the Station List screen is displayed.



Listening to Music Using Pandora

Log into Pandora. At the Station List screen, you are presented with several options for listening to music:


- **QuickMix** - This option will shuffle a selection of music from your personalized stations.
- **Create Station** - Select this option then enter the name of an artist, song, or composer, and Pandora will create and play a station based upon your entry.
- **Your Station List** - Select an already-created station from the list on the right side of the Station List screen to play it.

Thumbs Up and Thumbs Down

While your station plays, you can give feedback on which songs you like or don't like.


- To tell Pandora you **do** like a song, highlight the **Thumbs Up** icon and press **SELECT**.

That song will play more often, and Pandora will play similar songs.

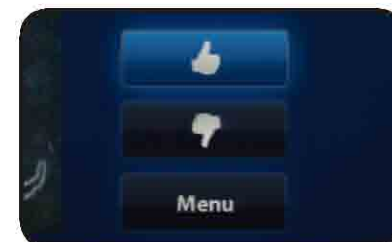

- To tell Pandora you **don't** like a song, highlight the **Thumbs Down** icon and press **SELECT**.

That song will never play again on that station, and if you have previously thumbed down a song by the same artist, songs by that artist will no longer play on that station.

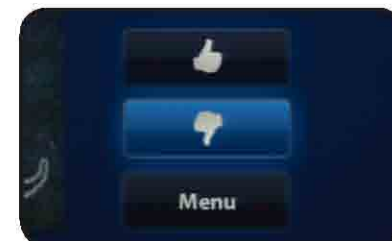

Additional Pandora Menu Options



Additional Menu Options

If you highlight the **MENU** button and press **SELECT**, you are presented with additional menu options:

- **Bookmark This Artist** - Select this option to save the currently-playing artist to a list of bookmarks. You can view your bookmarks at www.pandora.com.
- **Bookmark This Song** - Select this option to save the currently-playing song to a list of bookmarks. You can view your bookmarks at www.Pandora.com.
- **I'm Tired of This Song** - Select this option to prevent the currently-playing song from playing on any of your personalized stations. Pandora will eventually play the song again, but not anytime soon.
- **Delete This Song** - Select this option to remove the currently-playing station from your list of stations. Once you confirm that you want to delete the station, it is permanently removed.
- **Rename This Station** - Select this option to rename the currently-playing station. Use the **Arrow** and **SELECT** buttons to enter the new name. When you are finished, highlight **rename>>** and press **SELECT**.
- **Why Is This Song Playing** - Select this option to see a detailed explanation of why Pandora chose the currently-playing song or artist.
- **Return to Station List** - Select this option to return to your personalized station list.
- **Close Menu** - Close the menu.

Using the HULU App

Hulu is an online video service that offers a selection of hit shows, clips, movies and more.

To use VUDU, you must first:

- Have a high-speed internet connection and a home computer.
- Connect your player to your home network. See XX.
- Have a valid VUDU account.

To open a HULU account:

1. Turn on your player and the TV.

Use the **Arrow** buttons on the remote to highlight **HULU**. Press the **OK** button.

You are asked if you are already a **HULU** subscriber. Highlight **No** and press **OK**.

2. A welcome screen is displayed. Write down the Referral Code.
3. On your home computer, go to www.HULU.com/plus and follow the account setup instructions.

Enter the Referral Code when prompted.

Products are often returned due to a technical problem rather than due to a defect. If you are experiencing a problem when using your TV, try to fix the issue using this troubleshooting guide.

If, after using this troubleshooting guide, you are still experiencing an issue with your TV, contact VIZIO's Support Department. Quality customer support and service are integral parts of VIZIO's commitment to service excellence.

Phone: (877) 698-4946

Web: www.VIZIO.com

Fax: (949) 585-9563

Hours of operation:

Email: techsupport@vizio.com


Monday - Friday: 6 am to 9 pm (PST)

Saturday - Sunday: 8 am to 4pm (PST)

There is no power.

- Ensure the power cord is securely connected to a working electrical outlet.
- Press the Power/Standby button on the remote or touch the Power/Standby control on the player.
- Try plugging the power cord into a different electrical outlet.

Nothing happens when I press buttons on the remote.

- Place new batteries in the remote. Ensure the batteries are inserted correctly.
- Ensure no objects are blocking the front of the Blu-ray Player
- When using the remote, point it directly at the Blu-ray Player.
- If you see , the action you are trying to perform is not allowed by the Player or disc.

My Blu-Ray or DVD disc does not play.

- Ensure the disc is clean and free of scratches.
- If you are using parental controls, the disc may not play.

I cannot connect the Player to my network.

- Unplug the modem/router and the Player. Wait 10 seconds, then turn them back on.
- Ensure the ethernet cable is securely connected to both the Player and your modem/router.
- Refer to your modem/router user guide.

The picture quality seems low.

- Connect the Player to your TV using an HDMI cable for the best picture quality.
- Connect the Player to an HDTV capable of displaying 720p or 1080p for the best picture quality.
- Ensure the cables connecting the Player to your TV are securely connected.
- Watch Blu-ray discs for the best picture quality. DVD discs are limited to 480p resolution.
- To view streaming video (Netflix, VUDU), a high-speed wired/wireless Internet connection is required.

I am having trouble with Internet Apps.

- If you experience issues with Apps, please contact:

Netflix: www.netflix.com/help or 1-866-579-7113

Pandora: www.pandora.com/support

VUDU: www.VUDU.com/support or 1-888-554-8838

Amazon: Select the **Contact Us** button in the right-hand column of the Help page in the App.

Blockbuster: www.blockbuster.com/help or 1-866-692-2789

HULU Plus: www.hulu.com/help

Dimensions:	12.60" x 1.77" x 8.23" 320 x 45 x 209mm
Weight:	4.96 lbs 2.25 kg
Resolutions Supported:	Blu-ray Disc Resolutions of 1080p (HDMI Out) 1080i / 720p / 480i / 480p (HDMI / Component Out) DVD, DVD-R, DVD-RW Selectable Reso- lutions of 1080p (HDMI) 1080i / 720p / 480i / 480p (HDMI / Component Out)
Audio:	CD, CD-R, CD-RW, MP3, WMA Support 5.1, 7.1 PCM Digital Audio via HDMI 24-bit / 192KHz Audio DAC
Dolby:	Dolby Digital / Dolby Digital Plus / Dolby Digital TrueHD
DTS:	DTS Digital Surround / DTS HD Advanced Digital Out
Ethernet Ports:	1
WiFi:	802.11n
USB 2.0 Inputs:	1
HDMI Ports:	1
Digital Audio Ports:	2 (Optical/SPDIF, Coaxial)
OSD Languages:	3 (English, Spanish, French)
Energy Star Qualified:	Yes
Warranty:	1 Year

ON PARTS AND LABOR

Covers units purchased as new in United States and Puerto Rico Only.

VIZIO provides a warranty to the original purchaser of a new Product against defects in materials and workmanship for a period of one (1) year of non-commercial usage and ninety (90) days of commercial use. If a Product covered by this warranty is determined to be defective within the warranty period, VIZIO will either repair or replace the Product at its sole option and discretion.

To obtain warranty service, contact VIZIO Technical Support via e-mail: TechSupport@VIZIO.com or via phone at 877 MY VIZIO (877.698.4946) from 6:00AM to 9:00PM Monday through Friday and 8:00AM to 4:00PM Saturday and Sunday, Pacific Time, or visit www.VIZIO.com. PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO A VIZIO SERVICE CENTER. Proof of purchase in the form of a purchase receipt or copy thereof is required to show that a Product is within the warranty period.

Parts and Labor

There will be no charge for parts or labor during the warranty period. Replacement parts and Products may be new or recertified at VIZIO's option and sole discretion. Replacement parts and Products are warranted for the remaining portion of the original warranty or for ninety (90) days from warranty service or replacement, whichever is greater.

Type of Service

Defective Products must be sent to a VIZIO service center to obtain warranty service. VIZIO is not responsible for transportation costs to the service center, but VIZIO will cover return shipping to the customer. PRE-AUTHORIZATION IS REQUIRED BEFORE SENDING ANY PRODUCT TO A VIZIO SERVICE CENTER FOR WARRANTY SERVICE.

Product returns to VIZIO's service centers must utilize either the original carton box and shipping material or packaging that affords an equal degree of protection. VIZIO Technical Support will provide instructions for packing and shipping the covered Product to the VIZIO service center.

Limitations and Exclusions

VIZIO's one-year limited warranty only covers defects in materials and workmanship. This warranty does not cover, for example: cosmetic damage, normal wear and tear, improper operation, improper voltage supply or power surges, signal issues, damages from shipping, acts of God, any type of customer misuse, modifications or adjustments, as well as installation and set-up issues or any repairs attempted by anyone other than by a VIZIO authorized service center. Products with unreadable or removed serial numbers, or requiring routine

maintenance are not covered. This one year limited warranty does not cover Products sold "AS IS", "FACTORY RECERTIFIED", or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. VIZIO'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING VIZIO'S NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT. VIZIO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, LOSS OF INFORMATION OR DATA, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

CHECK WWW.VIZIO.COM FOR THE MOST CURRENT VERSION.

Personal Data

If your VIZIO product is capable of storing personal data and other information, ALL CONTENTS AND INFORMATION WILL BE DELETED IN THE COURSE OF SOME IN-HOME AND ALL SHIP-IN WARRANTY SERVICE. If this occurs, your product will be restored to you configured as originally purchased. You will be responsible for restoring all applicable data and passwords. Recovery and reinstallation of user data is not covered under this Limited Warranty. In order to protect your personal information, VIZIO recommends that you always clear all personal information from the unit before it is serviced, regardless of the servicer.

FCC Class B Radio Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

RF Exposure Information

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

DHHS and FDA safety certification

This product is made and tested to meet safety standards of the FCC, requirements and compliance with safety performance of the U.S. Department of Health and Human Services, and also with FDA Radiation Performance Standards 21 CFR Subchapter J.

IC Statement

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IC Radiation Exposure Statement

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Copyrights

Because AACS (Advanced Access Content System) is approved as content protection system for BD format, similar to use of CSS (Content Scramble System) for DVD format, certain restrictions are imposed on playback, analog signal output, etc., of AACS protected contents. The operation of this product and restrictions on this product may vary depending on your time of purchase as those restrictions may be adopted and/or changed by AACS after the production of this product. Furthermore, BD-ROM Mark and BD+ are additionally used as content protection systems for BD format, which imposes certain restrictions including playback restrictions for BD-ROM Mark and/or BD+ protected contents. To obtain additional information on AACS, BD-ROM Mark, BD+, or this product, please contact an authorized Customer Service Center.

Many BD-ROM/DVD discs are encoded with copy protection. Because of this, you should only connect your player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected discs.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, BD-ROM discs, DVDs, CDs and other materials may subject you to civil and/or criminal liability.

Licenses

- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending.
- DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.
- "DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.
- This product is licensed under the AVC patent portfolio license and VC-1 patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard and VC-1 Standard ("AVC/VC-1 Video") and/or (ii) decode AVC/VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC/VC-1 Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.
- Blu-ray Disc™, Blu-ray™, Blu-ray 3D™, BD-Live™, BONUSVIEW™, and the logos are trademarks of the Blu-ray Disc Association.

Open Source Software Notice

Your VIA device may contain GPL executables and LGPL libraries that are subject to the PL2.0/LGPL2.1 License Agreements. VIZIO offers to provide source code to you on CD-ROM for a processing fee covering the cost of performing such distribution, such as the cost of media, shipping and handling upon request made to VIZIO at www.vizio.com.

This offer is valid for a period of three (3) years from the date of the distribution of this VIA device by VIZIO. You can obtain a copy of the GPL, LGPL licenses from <http://www.gnu.org/licenses/old-licenses/gpl-2.0.html> and <http://www.gnu.org/licenses/oldlicenses/lgpl-2.1.html>. You can also obtain a copy of gSOAP public license from <http://www.cs.fsu.edu/~engelen/license.html>. Please visit www.vizio.com for attribution of copyrights to any open source software on your VIZIO VIA device. Permission is hereby granted, free of charge, to any person obtaining a copy of any such software and associated documentation files (the "Open Source

Software"), to deal in the Open Source Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Open Source Software, and to permit persons to whom the Open Source Software is furnished to do so, subject to the following conditions:

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

VIZIO Internet Applications (VIA) Policy

VIZIO Internet Applications ("VIA") affords the opportunity to access third party Internet product offerings or services ("VIA Services") on certain VIZIO devices incorporating the VIA functionality. The VIA Services accessible herein are provided as per our agreement with these third parties. These agreements are subject to change, interruption, suspension (including termination) at any time and for various reasons. VIZIO makes no warranties or representations that any particular VIA Service will be accessible, available, function in any particular manner or function at all.

Internet Access Required for VIA Services and Updates

To use these VIA Services, you must obtain high-speed/broadband access to the Internet (such as DSL, cable or T1 lines), either directly or through devices that access the Internet and pay any service fees associated with such access. In addition, you must provide all equipment necessary to make such connection to the Internet including a modem or other Internet access device. Each individual third party Internet product may require a different minimum Internet connection speed. The usability and availability of a functional VIA device and its Internet connected feature may highly be dependent and varied based on high-speed/broadband Internet access, connection speed, bandwidth, other equipment(s), third party applications, firmware updates and other factors outside of VIZIO's control and/or responsibility which may also be independent of the actual operation of the device. It is further understood that VIA enabled devices are integrated with sophisticated technologies (software and hardware) which may exhibit delayed boot-up/shutdown time and/or interrupted services. You further understand that the VIA Services specifications and functionality are constantly evolving and that we may directly, or indirectly via third parties, update or change the VIA Services, in whole or in part, at any time and without notice to you. Such updates may be required for you to use certain aspects of the VIA services or to continue to connect to the VIA Services.

Availability of Content on VIA Services

VIZIO or said third parties providing VIA Services reserve the right to delete data from their servers, or prevent access to their servers or to change data categories, product offerings or service levels for any reason that VIZIO or said third parties deem sufficient in their sole discretion at any time, without notice. VIZIO may also impose additional or different limits on the use of or access to certain VIA Services, in any case and without notice or liability. Some or all of the data or functionality of VIA Services may require additional payment and/or subscription by you. However, in no event will you be charged for any VIA Services unless those charges are made known to you in advance. VIZIO makes no warranties or representations of any kind as to the accuracy, currency, or completeness of any information contained on the data servers of such third party providers of any VIA Services. Furthermore, we do not review, control, or endorse the content, products or services of VIA Services or their data servers.

VIA SERVICES ARE PROVIDED "AS IS" AND "AS AVAILABLE," WITHOUT WARRANTY OF ANY KIND (INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR A PARTICULAR PURPOSE), TO THE MAXIMUM EXTENT PERMITTED BY LAW. USE OF THE VIA SERVICES IS AT YOUR SOLE RISK. THIS MEANS, FOR EXAMPLE, THAT VIZIO DOES NOT GUARANTEE THAT THE VIA SERVICES WILL ALWAYS WORK PROPERLY OR WORK AT ALL. THIS ALSO MEANS WE DO NOT GUARANTEE THAT THE VIA SERVICES, CONTENT OR PRODUCTS WILL BE FREE FROM VIRUSES, HACKS, OR OTHER POTENTIALLY HARMFUL INTRUSIONS. PLEASE NOTE THAT SOME STATES DO NOT ALLOW SUCH WARRANTY LIMITATIONS, SO THESE LIMITATIONS MAY NOT APPLY TO YOU.

VIA Services Content Disclaimer

Certain VIA Services may include materials from third parties or links to certain third party data servers. You acknowledge and agree that VIZIO is not responsible for examining or evaluating the content or accuracy of any VIA Services, their data servers or related third-party materials. VIZIO does not warrant or endorse and does not assume and will not have any liability or responsibility for any third-party materials or web sites, or for any other materials, products, or services of third parties. Links to VIA Services and any associated links to other data servers are provided solely as a convenience to you. To the extent provided, content types or descriptions of VIA Services are provided for convenience, and you acknowledge and agree that VIZIO does not guarantee their accuracy. You understand that by using any of the VIA Services, you may encounter content that may be deemed offensive, indecent, or objectionable, which content may or may not be identified as having explicit language. Nevertheless, you agree to use the VIA Services at your sole risk and that VIZIO shall have no liability to you for content that may be found to be offensive, indecent, or objectionable.

You agree that you will not use any third-party materials in a manner that would infringe or violate the rights of any other party, and that VIZIO is not in any way

responsible for any such use by you.

VIZIO Privacy Policy and VIA Software License Agreement

Your right to use the widget links to access VIA Services is also governed by VIZIO's Privacy Policy and the VIZIO Internet Applications Software License Agreement ("VIA Software License Agreement"), the terms of which are incorporated herein by this reference. The terms of both the Privacy Policy and VIA Software License Agreement may be found in your Product Guide and on VIZIO's website. In the event of a conflict between the VIZIO Internet Applications (VIA) Policy and the VIA Software License Agreement, the VIA Software License Agreement shall control. BY YOUR USE OF THE VIA SERVICES, YOU EXPRESSLY AGREE TO ALL THE TERMS AND CONDITIONS OF THE FOREGOING POLICIES AND AGREEMENT.

VIZIO may change the terms and conditions of this VIA Policy, the VIZIO Privacy Policy and/or the VIA Software License Agreement, at any time and without prior notice. The most up to date versions are available on the Internet at: www.vizio.com. If you do not have Internet access, you should periodically contact our customer service department and we will mail you a current version, free of charge. IF YOU DO NOT AGREE TO ALL OF THE TERMS AND CONDITIONS OF THE VIA POLICY, THE VIZIO PRIVACY POLICY AND/OR THE VIA SOFTWARE LICENSE AGREEMENT OR ANY CHANGES THERETO, YOU MUST IMMEDIATELY CEASE USE OF THE VIA SERVICES.





ENTERTAINMENT FREEDOM FOR ALL

© 2011. ALL RIGHTS RESERVED. THE V, VIZIO, VIZIO INTERNET APPS, THEATER 3D, FULL ARRAY TRULED, EDGE LIT RAZOR LED, 240HZ SPS, 480HZ SPS, ENTERTAINMENT FREEDOM AND ENTERTAINMENT FREEDOM FOR ALL NAMES, LOGOS AND PHRASE ARE REGISTERED OR UNREGISTERED TRADEMARKS OF VIZIO, INC. OTHER LOGOS AND TRADEMARKS ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS. SUBJECT TO CHANGE WITHOUT NOTICE.

110331ST-NC