



TEKTELIC Communications Inc.
7657 10th Street NE Calgary, Alberta
Canada, T2E 8X2

KONA MICRO PoE GATEWAY

USER GUIDE

Document Type:	User Guide
Document Number:	T0006600_UG
Document Issue:	1.4
Document Status:	Approved
Product Name:	Kona Micro PoE Gateway
Product Code:	See Table 1
Issue Date:	February 12, 2020

PROPRIETARY:

The information contained in this document is the property of TEKTELIC Communications Inc. Except as specifically authorized in writing by TEKTELIC, the holder of this document shall keep all information contained herein confidential, and shall protect the same in whole or in part from disclosure to all third parties.

© 2020 TEKTELIC Communications Inc., all rights reserved.

All products, names, and services are trademarks and registered trademarks of their respective companies.

TEKTELIC Communications Inc.
7657 10th Street NE
Calgary, AB, Canada T2E 8X2
Phone: (403) 338-6900

Document Revision

Revision	Issue Date	Status	Editor	Comments
0.1	Oct. 8, 2019	Obsolete	Z. Herasymiuk	First release
1.0	Oct. 17, 2019	Obsolete	S. Morrison	Updated to new format
1.1	Nov. 6, 2019	Obsolete	Z. Herasymiuk	Updated Sec. 1.2, Figure 2, Table 2
1.2	Dec. 20, 2019	Approved	S. Morrison	Final updates & corrections
1.3	February 12, 2020	Approved	T. Danshin	Simplified Table 1 (NA products only), updated FCC minimum distances.
1.4	February 12, 2020	Approved	T. Danshin	Corrected ISED notice T-code, clarified antenna statements and included French translation

Table of Contents

List of Tables	4
1 Product Description	5
1.1 Overview	5
1.2 Physical Interfaces.....	7
1.3 Specifications.....	7
2 Installation	9
2.1 Overview	9
2.2 Unpacking and Inspection	9
2.3 Kona Micro PoE Gateway Mounting	9
2.4 DC Power Cable Installation	11
2.5 Battery Installation.....	12
2.6 RF Cable Installation.....	13
2.7 Copper Ethernet Cable Installation	13
3 Radio Compliance Statements	14

List of Tables

Table 1: Kona Micro Gateway Models.....	5
Table 2: Kona Micro PoE Gateway Interface Connector Types	7
Table 3: Kona Micro PoE Gateway Specifications.....	8

1 Product Description

1.1 Overview

The Kona Micro PoE Gateway is a LoRaWAN IoT gateway that supports the full range of LoRa WAN channels. The Gateway supports one external LoRa antenna, copper Ethernet backhaul, and optional 3G/4G wireless backhaul. All Gateway models are powering from an AC-DC power adapter and may optionally have an internal backup battery provisioned.

Table 1 presents the currently available Kona Micro PoE Gateway models. Any model may have a backup battery provisioned.

Table 1: Kona Micro PoE Gateway Models

Model	3G/4G modem	Region	Frequency Band	Supports Battery Backup
T0006268	Yes	North America	915	Yes
T0006267	No	North America	915	Yes

Figure 1 illustrates the Kona Micro PoE Gateway external form-factor with the front view on the top and rear view on the bottom. All models share the same mechanical form-factor.

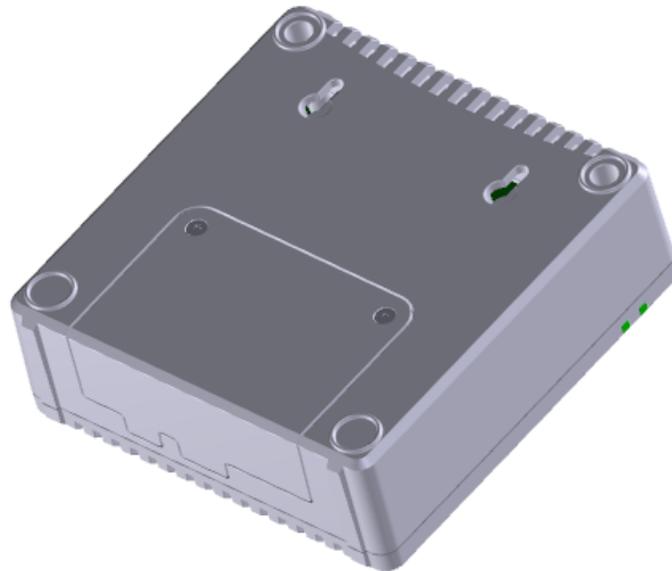


Figure 1: Kona Micro PoE Gateway

1.2 Physical Interfaces

Figure 2 illustrates the connector layout for the Kona Micro PoE Gateway.

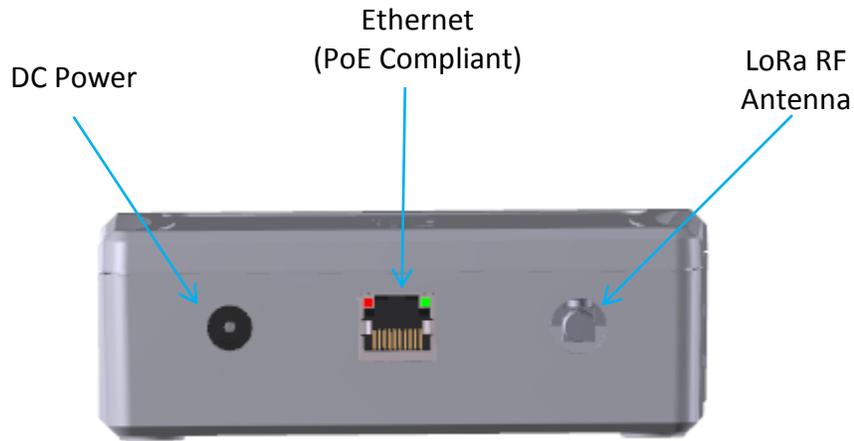


Figure 2: Kona Micro Gateway Bulkhead Layout

The Gateway connectors are listed in Table 2.

Table 2: Kona Micro PoE Gateway Interface Connector Types

Interface	Connector Type	Mating Connector
LoRa Antenna Ports	Reverse SMA female	Industry standard Reverse SMA male
DC Power Input Port	Barrel Jack	DC Barrel plug 2.1 mm (inner), 5.5 mm (outer)  Center positive
Ethernet Port	RJ-45	Industry standard RJ45 plug (PoE compliant)

1.3 Specifications

The Kona Micro PoE Gateway specifications are listed in Table 3.

Table 3: Kona Micro PoE Gateway Specifications

Attribute	Specification
Dimensions	120 (L) x 118 (W) x 41.5 (H) mm
Weight	336 g (0.74 lbs) with battery, 245 g (0.54 lbs) without battery
Operating Temperature	0°C to 40°C without battery 0°C to 38°C with battery
Relative Humidity	5 to 95 %RH
Operating Altitude	-60 m to 4,000 m (-197 ft to 13,123 ft)
Power Input, DC Port	12 VDC +/-10%
Power Input, PoE	IEEE 802.3af, IEEE 802.3at, IEEE 802.3bt, Mode A or Mode B or 4-pair Mode 48 VDC nominal, 37 to 57 VDC operating range
Power Consumption	12 W maximum DC input, 13 W maximum PoE input
Battery	7.4 V Lithium Ion
Ingress Protection	Indoor use only
Regulatory Compliance	IEC 62368-1, EN 62368-1, CE FCC Pt. 15, RSS-247, EN 301 489-1

2 Installation

2.1 Overview

- The Kona Micro PoE Gateway is intended for indoor use only.
- The Kona Micro PoE Gateway has no internal field serviceable parts other than the battery. Other than installing or replacing the battery, the Gateway module must only be opened by an approved TEKTELIC service center.
- All installation practices must be in accordance with the local and national electrical codes.
- Ensure that the Kona Micro PoE Gateway is located to eliminate any physical hazard to people or property.
- The Kona Micro PoE Gateway shall be powered from the supplied AC-DC power adaptor or through Power over Ethernet (PoE). Simultaneous application of power to both inputs may result in unexpected operation and shall be avoided.
- Do not cover the Gateway or in any way obstruct airflow through the enclosure openings.
- The Kona Micro PoE Gateway may as an option contain a built-in battery. The Gateway may continue to operate after the DC power or PoE connection is removed. To completely power down the Gateway when battery backup is present, the DC power source, the PoE source, and the battery must all be disconnected.
- If the battery needs replacement, use only a replacement battery provided by Tektelic Communications Inc. After battery installation, ensure that the battery cover is secured using the supplied battery cover securement screws. Dispose of old batteries in accordance with regulatory requirements.

2.2 Unpacking and Inspection

The following should be considered during the unpacking of a new Kona Micro PoE Gateway.

1. Inspect the shipping carton and report any significant damage to TEKTELIC.
2. Unpacking should be conducted in a clean and dry location when possible.
3. Do not discard the shipping box or foam inserts as they will be required if a unit is returned for repair or re-configuration.

2.3 Kona Micro PoE Gateway Mounting

Kona Micro PoE Gateway can be placed on a flat surface or can be mounted to a wall with M3 screws to the locations on the back of the module illustrated in Figure 3.

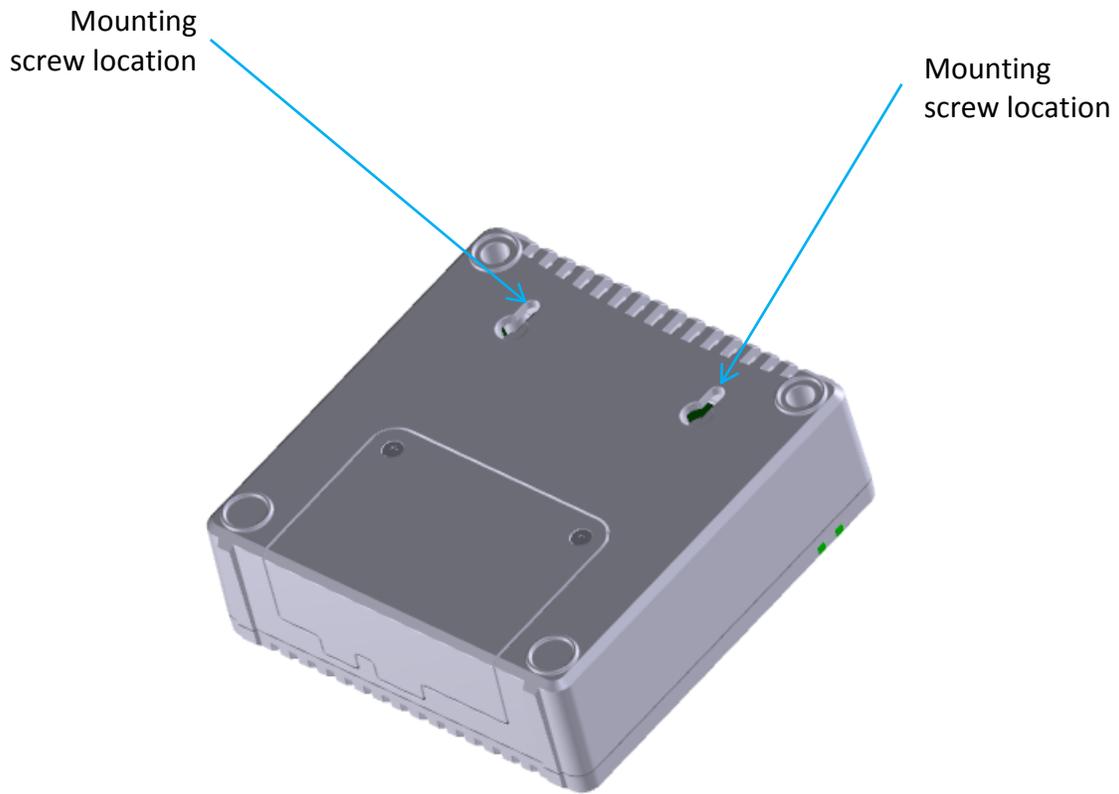


Figure 3: Kona Micro PoE Gateway Mounting Screw Locations

While wall mounted, the Gateway module must be oriented with the TEKTELIC logo horizontal, parallel to the earth as shown in Figure 4.



Figure 4: Kona Micro PoE Gateway Module Wall Mounting Orientation

Ensure that the wall on which the Gateway is being mounted is secure, flat and able to support a load of at least 0.5 kg (1.1 lbs).

The Kona Micro PoE Gateway wall mounting procedure is as follows:

1. Install the M3 screws into the wall.
2. Install 2 site supplied M3 screws into the wall at 60 mm (2.4”) center spacing, leaving the screw heads protruding with a 3 mm gap from the wall surface.
3. Hang the Kona Micro PoE Gateway by mounting the two to keyhole slots onto the screws.

2.4 DC Power Cable Installation

The Kona Micro PoE Gateway may be powered from the supplied AC power adaptor. The AC adaptor provides 12 VDC with positive inner tip as shown below in Figure 5. The connector tip is a standard DC Barrel connector-straight plug with 2.1 mm (inner), 5.5 mm (outer) diameters.



Figure 5: DC Power Connection Polarity


2.5 Battery Installation

Use only the battery provided by Tektelic Communications Inc.

CAUTION: Risk of explosion if the battery is replaced by an incorrect type.

Remove the battery cover by removing the two battery cover securement screws. Connect the 3-pin battery connector to the connector at the bottom of the battery compartment and then insert the battery into the battery compartment as illustrated in Figure 6. After the battery is connected and inserted, reinstall the battery cover and secure it in place using the two battery cover securement screws.

Dispose of old batteries in accordance with regulatory requirements.

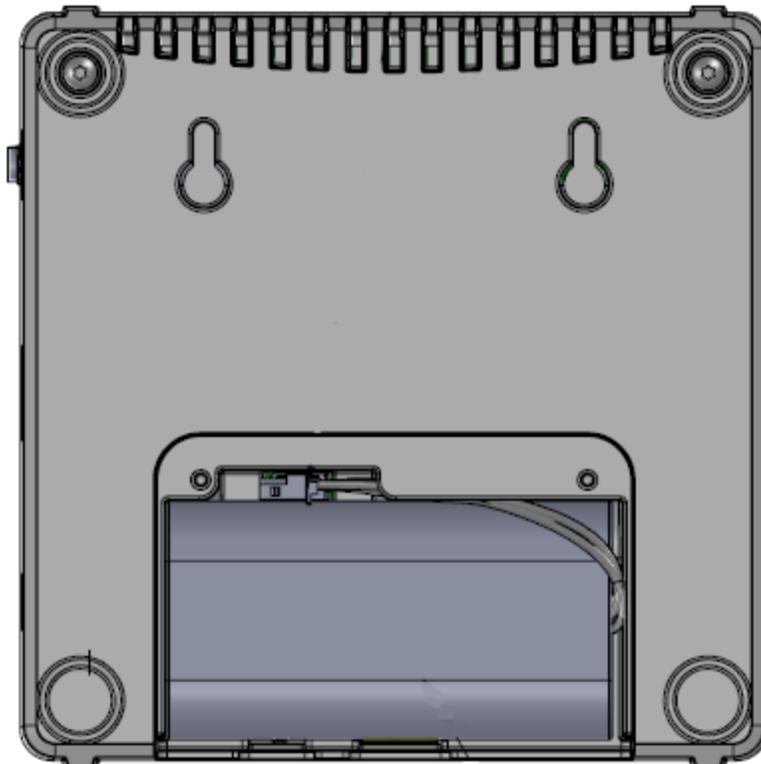

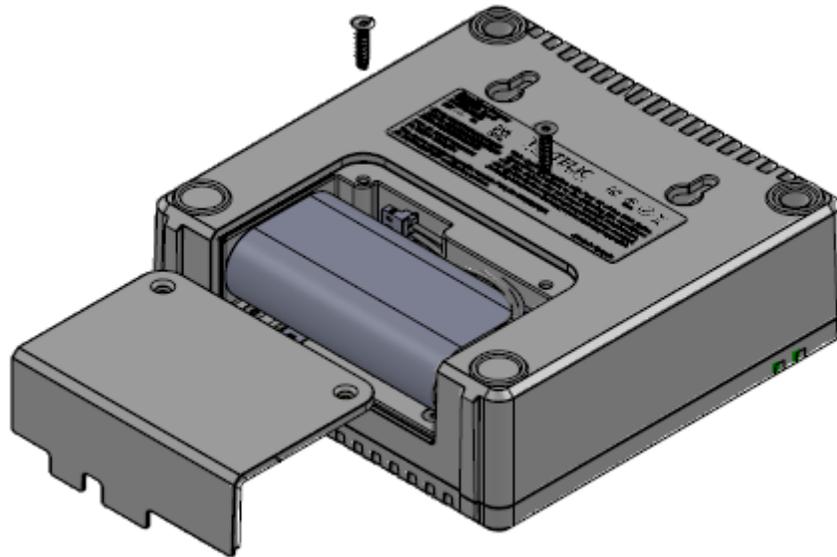


Figure 6: Battery Installation

2.6 RF Cable Installation

The Kona Micro PoE Gateway installation requires connection to an RF antenna. The antenna attaches to the reverse SMA connector located on the side of the Gateway. Torque the connector to 5 in·lbs. The Kona Micro PoE is not protected from lightning surge as it is intended for Indoor use. Do not connect directly to an outdoor antenna.

2.7 Copper Ethernet Cable Installation

The Kona Micro PoE Gateway Ethernet port may be used on a temporary basis for commissioning and maintenance or may be permanently connected for backhaul and optionally Power over Ethernet.

The Ethernet cable must have minimum 24 AWG conductors and shall be rated for indoor application according to local and national electrical codes.

3 Radio Compliance Statements

Federal Communications Commission

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To comply with FCC/IC RF exposure limits for general population / uncontrolled exposure, the antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada

This Device complies with Industry Canada License-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This radio transmitter 22504-T0006600 has been approved by Industry Canada to operate with the antenna listed below with the maximum permissible gain or lesser and required antenna impedance for the antenna indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

This device complies with IC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 0.2 m between the radiator and your body.

This device has been designed to operate with an omni-directional antenna having a maximum gain of 0 dBi in the 923-928MHz transmit band. Antennas having a gain greater than 0 dBi are strictly prohibited for use with this device. The required antenna impedance is 50 ohms.

During product operation, always keep a separation distance of at least 0.2 m from any connected antenna(s). Before servicing the product, the antenna(s) or cables, turn off the transmission function or the unit power if you have to get closer than the minimum separation distance.

Industrie Canada

Cet appareil est conforme aux normes RSS exemptes de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes:

1. Cet appareil ne doit pas provoquer d'interférences, et
2. Cet appareil doit accepter toute interférence, y compris les interférences pouvant entraîner un fonctionnement indésirable de l'appareil.

Cet émetteur radio 22504-T0006600 a été approuvé par Industrie Canada pour fonctionner avec l'antenne indiquée ci-dessous avec le gain maximal autorisé ou inférieur et l'impédance d'antenne requise pour l'antenne indiquée. Les types d'antennes non inclus dans cette liste, ayant un gain supérieur au gain maximum indiqué pour ce type, sont strictement interdits pour une utilisation avec cet appareil.

Cet appareil est conforme aux limites d'exposition aux rayonnements IC définies pour un environnement non contrôlé. Cet appareil doit être installé et utilisé à une distance minimale de 0,2 m entre le radiateur et votre corps.

Cet appareil a été conçu pour fonctionner avec une antenne omnidirectionnelle ayant un gain maximum de 0 dBi dans la bande de transmission 923-928MHz. Les antennes ayant un gain supérieur à 0 dBi sont strictement interdites pour une utilisation avec cet appareil. L'impédance d'antenne requise est de 50 ohms.

Pendant le fonctionnement du produit, gardez toujours une distance de séparation d'au moins .2 m de toute antenne connectée. Avant de réparer le produit, les antennes ou les câbles, désactivez la fonction de transmission ou l'alimentation de l'unité si vous devez vous rapprocher de la distance de séparation minimale.

Proposition 65

⚠ WARNING: This product can expose you to chemicals including lead, beryllium, cobalt oxide, nickel oxide, carbon black and lithium nickelate & nickel, which is known to the State of California to cause cancer, birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.