

EXHIBIT A

[FCC Ref. 2.1033(b)(3)]

"Installation and Operating Instructions
Furnished to the User"

21005



**40-Channel 2.4 GHz Call Waiting
Caller ID Cordless Telephone
User's Guide**



We bring good things to life.

EQUIPMENT APPROVAL INFORMATION

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.

2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

HEARING AID COMPATIBILITY


This telephone system meets FCC standards for Hearing Aid Compatibility.

US NUMBER IS LOCATED ON THE CABINET BOTTOM
REN NUMBER IS LOCATED ON THE CABINET BOTTOM

TABLE OF CONTENTS

EQUIPMENT APPROVAL INFORMATION	2	CORDLESS PHONE BASICS	17
INTERFERENCE INFORMATION	2	CHARGE/VWMI INDICATOR	17
INTRODUCTION	5	MAKING A CALL	17
BEFORE YOU BEGIN	7	ANSWERING A CALL	17
CHECKING THE PACKAGE CONTENTS	7	DURATION COUNTER	17
MODULAR JACK REQUIREMENTS	7	AUTO STANDBY	18
IMPORTANT INSTALLATION INFORMATION	8	RINGER VOLUME SWITCH	18
IMPORTANT INSTALLATION GUIDELINES: .	8	FLASH/CALL WAITING	18
INSTALLING THE PHONE	9	LAST NUMBER REDIAL	18
CONNECTING THE AC (ELECTRICAL)		HOLD	19
POWER	9	EXIT	19
CONNECTING THE TELEPHONE LINE	10	FINDING/PAGING THE HANDSET	19
WALL MOUNTING	10	PAGING FROM THE HANDSET	19
TELEPHONE SETUP	11	PAGING FROM THE BASE/GROUP	
PROGRAMMABLE MENUS	12	PAGE	20
MENU MODE	12	MUTE	20
LANGUAGE SETTING	12	TEMPORARY TONE DIALING	20
LOCAL AREA CODE SETTING	13	RECEIVER VOLUME CONTROL	21
TONE/PULSE SETTING	13	INTERCOM	21
HANDSET REGISTRATION	14	MAKING AN INTERCOM CALL	21
HANDSET DE-REGISTRATION	15	RECEIVING AN INTERCOM CALL ...	21
RINGER TONE SETTING	15	ADVANCED INTERCOM FEATURES	22
WALKIE TALKIE FEATURE	16	RECEIVING AN INCOMING	
DEFAULT SETTING	16	TELEPHONE CALL DURING	
MENU/SOFT KEY FUNCTIONS	16	AN INTERCOM CALL	22

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

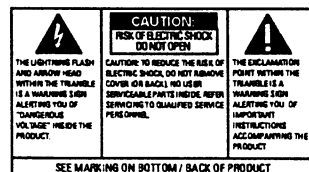

USING INTERCOM WITH	
EXTERNAL TELEPHONE CALLS .	22
TWO-WAY CALLING	22
THREE-WAY CALLING	23
TRANSFERRING EXTERNAL CALLS TO	
OTHER HANDSETS	23
MEMORY	24
STORING NAMES AND NUMBERS IN	
MEMORY	24
STORING A REDIAL NUMBER	25
INSERTING A PAUSE IN THE DIALING	
SEQUENCE	25
REVIEWING, CHANGING, OR DELETING	
INFORMATION STORED IN MEMORY	25
DIALING A NUMBER FROM MEMORY ...	26
CHAIN DIALING FROM MEMORY	27
CALLER ID	27
CALLER ID ERROR CODES	28
RECEIVING AND STORING CALL	
RECORDS	28
REVIEWING THE CALLER ID LIST	28
STORING CALLER ID RECORDS IN THE	
PHONE'S MEMORY	29
DIALING A CALLER ID NUMBER	30
STORING THE CURRENT CALLER ID	
RECORD IN THE PHONE'S MEMORY	31
DELETING THE CURRENT CALLER ID	
RECORD	31
DELETING ALL CALLER ID RECORDS ..	32
CHANGING THE BATTERY	33
BATTERY SAFETY PRECAUTIONS	33
BELT CLIP AND OPTIONAL HEADSET	34
CONNECTING AN OPTIONAL HEADSET	
TO THE HANDSET	34
CONNECTING THE BELT CLIP	34
CALLER ID DISPLAY MESSAGES	35
HANDSET SOUND SIGNALS	36
TROUBLESHOOTING GUIDE	36
GENERAL PRODUCT CARE	39
CAUSES OF POOR RECEPTION	39
SERVICE	40
INDEX	41
ACCESSORY ORDER FORM	43
LIMITED WARRANTY	44

INTRODUCTION



CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the **IMPORTANT SAFETY INSTRUCTIONS** provided with this product and save them for future reference.

Congratulations on purchasing the this GE Multi Handset Telephone System. This system is unique to conventional cordless telephones. When the base is connected to electrical power and a telephone line, it can support up to four handsets, and you can place a fully featured cordless handset anywhere where electrical power and a telephone line is available.

Features:

- 2.4 GHz technology
- Handset to handset Intercom
- 2-way and 3-way Conference/Call Transfer
- Call Waiting and Caller ID Compatible
- Tone/Pulse Dialing
- Up to 50 Name and Number Memory Dialing

This telephone has been designed to be simple to use, however, you can reach its full potential more quickly by taking a few minutes to read this Instruction Book. This telephone is a multifunction product for use with Call Waiting and Caller ID services available from your local telephone company.

Your Caller ID Call Waiting phone allows you to:

- View the name and telephone number of a caller (Call Waiting Caller ID).
- Identify callers before you answer the phone.
- View the time and date of each incoming call.
- Record up to 40 Caller ID messages sequentially.
- Know who called while you are on the other line or when you were away.
- Screen unwanted calls, eliminate harassment from annoying calls, or to get prepared before answering a call.

IMPORTANT: Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.

IMPORTANT: In order to use all of the features of this telephone, you must subscribe to two separate services available from your local telephone company: the standard Name/Number Caller ID Service to know who is calling when the phone rings and Caller ID with Call Waiting Service to know who is calling while you are on the phone.

INSTALLATION NOTE: Some cordless telephones operate at frequencies that may cause interference to nearby TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave ovens, or VCR. If such interference continues, move the cordless telephone farther away from these appliances. Certain other communications devices may also use the 2.4 GHz frequency for communication, and, if not properly set, these devices may interfere with each other and/or your new telephone. If you are concerned with interference, please refer to the owner's manual for these devices on how to properly set channels to avoid interference. Typical devices that may use the 2.4 GHz frequency for communication include wireless audio/video senders, wireless computer networks, multi-handset cordless telephone systems, and some long-range cordless telephone systems.

BEFORE YOU BEGIN

CHECKING THE PACKAGE CONTENTS

Make sure your package includes the items shown here. If any of these items are missing or damaged, contact the Thomson multimedia Inc. Mail Order Department at 1-800-338-0376.

**PLACE LINE ART
HERE**

Base

Handset

Belt clip

**Mounting
bracket**



**AC power
supply**




**Telephone
line cord**

Also included:

- Instruction book
- Product registration card
- Other printed materials

MODULAR JACK REQUIREMENTS

You need an RJ11C type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.



IMPORTANT INSTALLATION INFORMATION

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Temporarily disconnect any equipment connected to the phone such as faxes, other phones, or modems.

IMPORTANT INSTALLATION GUIDELINES:

- Install telephone near both a telephone (modular) jack and an electrical power outlet.
- Avoid sources of noise, such as a window by a busy street, and electrical noise, such motors, microwave ovens, and fluorescent lighting.
- Avoid heat sources, such as heating air ducts, heating appliances, radiators, and direct sunlight.
- Avoid areas of excessive moisture or extremely low temperature.
- Avoid dusty locations.
- Avoid other cordless telephones or personal computers.

INSTALLING THE PHONE

Choose the best location to install your phone. Your cordless telephone should be placed on a level surface such as a desk or table top, or you can mount it on a wall.

PLACE
LINE ART
HERE

CONNECTING THE AC (ELECTRICAL) POWER

Plug the power supply cord into the power jack on the ^{back}~~bottom~~ of the base and the other end into an electrical outlet. The charge/~~power~~ indicator turns on to indicate the battery is charging. Page

Allow the phone to charge for 12 hours prior to first use. If you don't properly charge the phone, battery performance is compromised.



CAUTION: Use only the ATLINKS USA, Inc. power supply ²⁴⁸⁹~~5-2501~~ that came with this unit. Using other power supplies may damage the unit.

NOTE: Additional handsets include their own charging cradles.

CONNECTING THE TELEPHONE LINE

1. Remove the battery compartment door on the handset, insert the battery pack, plug the cord into the jack (inside the compartment), and replace the compartment door.
2. Plug the one end of the telephone line cord into the jack on the bottom of the base and the other end into a modular wall phone jack.
3. Set the ringer ~~switch (on the handset)~~ programme to ON, and place the handset in the cradle.

WALL MOUNTING

NOTE: For best results, leave the phone on a flat surface during initial charging before you hang the phone on the wall.

If you want to mount the phone on a wall, slip the mounting holes (on the back of the base) over the wall plate posts and slide the unit down into place. (Wall plate not included.)

NOTE: One base unit can support maximum 4 handsets only.

TELEPHONE SETUP

PLACE
LINEART
HERE

PROGRAMMABLE MENUS

There are eight programmable menus available on the handset: Language, Area Code, Ringer Tone, Tone/Pulse, Registration, De-registration, Walkie Talkie and Default Setting.

1. Language Setting: Choose from 1English, ^{2French, or 3Spanish.} ~~2Spanish, or 3French.~~
2. Local Area Code Setting: Use the handset number pad to enter area codes.
3. Ringer Tone Setting: Choose from six ringer tones.
4. Tone/Pulse Setting: Select tone or pulse dialing
5. Handset Registration: Register and name extra handsets.
6. Handset De-registration: Cancel handset registrations.
7. Walkie Talkie Feature: Handset may be used as a walkie talkie.
8. Default Setting: Choose YES or NO. Yes to keep default setting or No to use your selections.

MENU MODE

Make sure your phone is Off. Two menu software keys show in the display < Menu > and < DIR >. Press the < Menu > button to go to the setup sub-menu screen.

LANGUAGE SETTING

Make sure your handset is in the menu mode.

1. Press the CID/Vol up and down arrow button to select "Language."
2. Press the < OK > ^{menu} button to go to the language sub menu.
3. Use the handset number pad to select 1/~~ENG~~ ^{ENG}, 2/~~FRA~~ ^{FRA}, 3/~~ESP~~ ^{ESP}, or use the CID/Vol up or down arrow button to scroll to your selection (English is the default setting).
4. Press the < OK > menu button to save and store your selection.

NOTE: Press the < EXIT > menu button once to keep the previous setting and return to the sub-menu.

LOCAL AREA CODE SETTING

If you enter a 3-digit area code in the area code menu, your local area code will not appear in Caller ID messages you receive. Instead, you will see only the local seven digit number. Calls you receive from outside your local area code will show the full ten-digit number.

Make sure your handset is in the menu mode.

1. Press the CID/VOL up and down arrow button until "~~SET~~ AREA CODE - - -" shows in the display; then press the < OK > menu button. "- - -" is the default setting,
2. Use the handset number pad to enter your 3 digit area code.
3. Press the < OK > menu button to store your selection.

NOTE: Press the < EXIT > menu button once to keep the previous setting and return to the sub-menu.

TONE/PULSE SETTING

Most telephone systems use tone dialing, however, some may still use pulse dialing. This phone's default setting is tone dialing. Depending on your telephone system, set the dialing mode as follows:

Make sure your handset is in the menu mode.

1. Press the CID/VOL up and down arrow buttons until "*Tone/Pulse*" shows in display.
2. Press the < OK > menu button to go to the Tone/Pulse sub-menu.
3. Use the handset number pad to select 1 for tone dialing or 2 for pulse dialing. Or use the CID/Vol up and down arrow button to scroll to tone or pulse dialing.
4. Press the < OK > menu button to confirm setting.

NOTE: Press the < EXIT > menu button once to keep the previous setting and return to the sub-menu.

If you aren't sure which dialing system you have, set the telephone to tone dialing and make a test call. If the call connects, the setting is correct. If the call does not connect, set the telephone to pulse dialing.

HANDSET REGISTRATION

When you purchase additional handsets, you must register those handsets before use. This telephone is expandable up to four handsets. Follow the steps below to register a handset:

During the registration process, keep the handset near the base. Make sure your handset is in the menu mode.

1. Press the CID/VOL up and down arrow buttons until "*Registration*" shows in the display.
2. Press the < OK > menu button to go to the registration sub-menu.
3. Press the < OK > menu button to register the handset.
4. Press and hold Page button on base to confirm the registration. You will hear a long beep at the base, and the handset display shows "*Confirm Registration?*"
5. Press the < OK > menu button on the handset to confirm the registration. When handset registration is complete, *ENTER NAME* shows in the display.
6. Enter the name to whom you want to register the handset.

NOTE: If you make a mistake, press the < DEL > menu button to backspace and erase the wrong characters .

7. Press the < OK > menu button to confirm. You will hear a confirmation tone.

NOTE: Press the < EXIT > menu button once to keep the previous setting and return to the sub-menu. Or press and hold the < EXIT > menu button on the handset to return to standby mode.

HANDSET DE-REGISTRATION

During the de-registration process, keep the handset near the base. Make sure your handset is in menu mode.

1. Press the CID/VOL up and down arrow button until "Deregistration" shows in the display.
2. Press the < OK > menu button to go to the deregistration sub-menu.
3. Press the < OK > menu button to de-register the handset.
Handset displays "Confirm Deregistration?". Press <OK> menu button to confirm it.
4. Press and hold the page button on the base. You will hear a long beep at the base.

~~Then the handset displays "De-register handset?". Press the < OK > menu button on the handset to confirm the handset is de-registered.~~

NOTE: Press the < EXIT > menu button once to keep the previous setting and return to the sub-menu.

RINGER TONE SETTING

There are six different ringer tones to choose from.

Make sure your handset is in the menu mode.

1. Press the CID/VOL up or down arrow button until "RINGER TONE" shows in the display. "1" is the default setting.
2. Use the handset number pad to enter a ringer tone number (1 through 6), or use the CID/VOL up or down arrow buttons to scroll to your selection.
3. Press the < OK > menu button to store selection.

NOTE: Press the < EXIT > menu button once to keep the previous setting and return to the sub-menu.

WALKIE TALKIE FEATURE

Make sure your handset is in the menu mode. This feature is activated when a pair of handsets is used like walkie talkies.

1. Press CID/VOL up or down arrow button until "Walkie Talkie" shows on the display.
2. Press the < OK > menu button to go to the walkie talkie sub-menu.
3. Press <OK> to enable the walkie talkie mode.
4. Press the page/int button, and use CID up and down buttons to select the handset you want to talk to. Or press handset number 1, 2, 3, or 4.
5. Press the page/int button on the receiving handset to activate the walkie feature, and use the page button to answer a call.
6. To deactivate the walkie talkie feature, press the < Exit > menu button on both handsets.

DEFAULT SETTING

Make sure your handset is in the menu mode.

1. Press the CID/VOL up and down arrow button until "DEFAULT SETTING" shows in the display. "2NO" is the default setting.
2. Press the <OK > menu button to go to the default setting sub-menu.
3. Use the handset number pad to select 1 (YES) or 2 (NO), or use the CID/VOL (up or down arrow) button to scroll to 1YES or 2NO.

NOTE: If you choose "YES" all the settings in the programmable menu are returned to factory default setting.

4. Press the < OK > menu button to store the selection.

NOTE: Press the < EXIT > menu button once to keep the previous setting and return to the sub-menu.

MENU/SOFT KEY FUNCTIONS

There are three menu buttons under the display box which represent software keys and show as icons on the display. They are used to access the built-in features of this unit.

1. Press the < Menu > menu button.
2. Press the CID/Vol up or down button to scroll through the functions.
3. Press the < OK > menu button to go to the sub-menu.
4. Use the handset number pad to enter your selection, then press the < OK > menu button to save and confirm the setting.

NOTE: If you don't want to save the setting, press the < Exit > menu button to return to the sub-menu.

CORDLESS PHONE BASICS

CHARGE/^{Page} VOLUME INDICATOR

When the charge/^{Page} VOLUME indicator is lit, the handset is correctly seated in the cradle and is charging. The indicator flashes when the base pages the handset.

MAKING A CALL

1. Pick up the handset and press the TALK/callback button. Listen for a dial tone.
2. Dial desired number.
3. When finished, press the TALK/callback button to hang up.

ANSWERING A CALL

1. Pick up the handset and press the TALK/callback button on the handset. Or press number first, than press Talk/Callback button.
The new in-use/^{Page} indicator on the base comes on whenever the handset it on. ^{vwm}
2. When finished, press TALK/callback to hang up.

NOTE: Adjust the handset volume by pressing the CID/Vol up or down arrow buttons during a call.

DURATION COUNTER

After you press the TALK/callback on the handset, the built-in call duration counter shows on the display and begins counting the length of time of the call.

AUTO STANDBY

Placing the handset in the cradle while the handset is off the hook (during a call), automatically hangs up the handset.

RINGER VOLUME SWITCH

You may select from High, Medium, Low or Off. Press the Ringer button to ~~turn the ringer on or off. Each time you make a selection, you will hear the corresponding ringer volume.~~ ^{and hold} ^{go to ringer mode, then press Ringer button to select ringer situation (ON or OFF). Then press <OK> menu button to confirm it.}

FLASH/ CALL WAITING

If you subscribe to the combined Call Waiting Caller ID service from your local telephone company, you will receive Caller ID information (if available) on Call Waiting calls. During a phone call, you will hear a beep to indicate another call is waiting on the line and Caller ID information for the waiting call shows on the handset display. To connect to the waiting call, press the flash button on the handset and your original call is put on hold. You may switch back and forth between the two calls by pressing the flash button.

TIP: Don't press the TALK/callback button on the cordless handset to activate a custom calling service, such as call waiting, or you'll hang up the phone.

LAST NUMBER REDIAL

To quickly redial the last number you dialed:

1. Press the TALK/callback button.
2. Press the redial/~~delete~~ button.
-OR-
3. Press the redial/~~delete~~ button first, then press the TALK/callback button. If you get a busy signal and want to keep dialing the number, press the redial/delete button to quickly redial the number.

HOLD

Press the < Hold > menu button on handset to put a call on hold. The handset displays "*Line On Hold.*" Your phone stays on hold until you press the < Exit > menu button and release the line, or press the Talk/Callback to return to standby mode. If you continue the call on a separate extension phone, your cordless phone will release the line to the extension phone.

EXIT

Press the < Exit > menu button to end operation and return to the previous screen, or press and hold the < Exit > menu button to go back to standby mode.

FINDING/PAGING THE HANDSET

This feature helps to locate a misplaced handset. All handsets must be registered. (If your handset is not registered, follow the instructions in the Handset Registration Setting section of this manual.

PAGING FROM THE HANDSET

Make sure the phone is OFF (not in TALK mode).

1. Press and release the page/int button on the handset.
2. Use the handset number pad to page a specific handset, or press the CID/vol up and down arrow button to choose the handset you want to page. Or press the #5 key to page all registered handsets.
3. Press the < OK > menu button to confirm.
4. To cancel the page, press the < END > menu button, or press the page/int button to cancel the page. Or press Talk/Callback on the receiving handset.

PAGING FROM THE BASE/GROUP PAGE

Use the base-only to page all registered handsets at the same time.

1. Press the page button on the base. All handsets beep for two minutes and "Paging from base" shows on the handset display.
2. To cancel the page, press the page button on the base, or press the Talk/Callback button on the individual handsets.

MUTE

To have a private, off-line conversation, use the MUTE feature. The party on the other end of the line cannot hear you, but you can still hear them.

1. Press the < Mute > menu button. The handset display shows "MUTE ON!"
2. Press the < ~~Off~~ MUTE > menu button to cancel mute and return to your phone conversation.

TEMPORARY TONE DIALING

This feature is useful only if you have pulse dialing service. Temporary Tone Dialing enables pulse (rotary) service phone users to access touch-tone services offered by banks, credit card companies, etc. For example, when you call your bank you may need to enter your bank account number. Temporarily switching to Touch Tone mode allows you to send your number.

1. Dial the telephone number and wait for the line to connect.
2. When your call is answered, press the * tone button on the handset number pad to temporarily change from PULSE dialing to TONE dialing.
3. Follow the automated instructions to get the information you need. When you hang up,
4. Hang up the handset and the phone automatically returns to PULSE (rotary) dialing mode.

RECEIVER VOLUME CONTROL

Adjust the cordless handset receiver volume by pressing the CID/VOL up or down arrow button on the cordless handset. There are four volume levels, and each press of the CID/VOL up or down button adjusts the receiver volume by one level. When the maximum or minimum volume level is reached, the phone beeps twice.

INTERCOM

The intercom feature allows you to have a conversation with another handset without tying up the telephone line. And since the telephone line is not being used, you can still receive incoming calls.

MAKING AN INTERCOM CALL

1. Make sure the phone is OFF (not in TALK mode).
2. Press the page/int button on the handset.
3. Press CID/VOL up or down arrow button to select the handset you want to intercom with, then press the < OK > menu button.

NOTE: To cancel intercom, press the page/int on the sending handset.

4. Wait for the person at the receiving handset to press the page/int button.

NOTE: To cancel the intercom, press the page/int button.

NOTE: If the receiving handset does not answer within two minutes, the intercom call is automatically canceled. The originating handset rings back and *NO ANSWER* shows in the display.

5. When finished, press the < Exit > menu button or page/int button on each receiving handset to deactivate the intercom.

RECEIVING AN INTERCOM CALL

When an intercom call is received, the handset rings. To answer the intercom call, press the page/int button.

ADVANCED INTERCOM FEATURES

RECEIVING AN INCOMING TELEPHONE CALL DURING AN INTERCOM CALL

During an intercom call, if a telephone call is received, both intercom users are alerted with a ringing tone. To take the line, press the TALK/callback button. (The intercom connection is discontinued).

USING INTERCOM WITH EXTERNAL TELEPHONE CALLS

During a telephone call, you may use the intercom/paging function to page another handset and have an off line, private (two-way) intercom conversation. You may also have a three-way conversation between the external caller and the handsets, or you may transfer the external telephone call to another handset.

NOTE: Before you intercom/page another handset, you must decide whether you want to create a two-way or a three-way conversation.

TWO-WAY CALLING

1. During an external call, press the < Hold > menu button on the handset to place the external call on hold. *LINE ON HOLD* shows in the display on the sending handset.
2. Press <TRANS> menu button.
3. Use the CID/Vol up and down arrow button to select the handset number you want to conference with. Or press handset number 1, 2, 3 or 4.
4. Press the < OK > menu button.

NOTE: The receiving handset presses the page/int button to answer the intercom. Both intercom users may speak privately. The external caller is unable to hear the conversation.

5. When finished, press the < Exit > menu button to end the intercom call, return to the talk mode, and resume your conversation with the external call.

THREE-WAY CALLING

1. During an external call, press the <Hold> menu button on the handset to place external call on hold.
2. Press the < Conf > menu button on the handset.
3. Use the CID/Vol up and down arrow buttons to select the handset number you want to conference with. Or press the handset number 1, 2, 3 or 4.
4. Press the < OK > menu button to confirm. A paging tone sounds at both handsets. ~~LINE ONE HOLD~~ *PAGING . . .* shows in the display on the originating handset. *PAGING FROM . . .* shows in the display on the receiving handset.

NOTE: The receiving handset presses the page/int button to answer the intercom.

5. Then press the ^{Conference/format}< CONF > menu button to conference with the receiving handset the external caller. *CONFERENCE* shows in the display on the originating handset.

NOTE: Press the < Exit > menu button to cancel the conference. Press TALK/Callback to cancel the conference and speak to the external caller independently.

TRANSFERRING EXTERNAL CALLS TO OTHER HANDSETS

You may transfer the line from handset to handset.

1. Press the < HOLD > menu button on the handset to put the line on hold.
2. Press the <TRANS > menu button
3. Use the CID/VOL up and down arrow buttons to select the handset to which you want to transfer (or press handset number 1, 2, 3, or 4 for selection.)
4. Press the < OK > menu button to confirm and transfer.

NOTE: To cancel the call, press the < END > menu or the page/int button.

Press the < EXIT > menu button to return to the talk mode. Press and hold the < EXIT > menu button to return to the standby mode.

5. When the receiving handset had been connected, then press Talk/Callback button to transfer the line to receiving handset.

MEMORY

The handset and base each have separate memory dialing storage areas. Ten 15-character names and 24-digit telephone numbers may be stored in the handset memory. Ten 15-character names and 24-digit telephone numbers may be stored in the base memory.

STORING NAMES AND NUMBERS IN MEMORY

1. Make sure the phone is **OFF** (not in TALK mode).
2. Press the < DIR > menu button.
3. Press the desired memory location button (1 through 50). If the memory location is occupied, the memory location and stored name and number appear on the display. If the memory location is empty, *EMPTY* appears in the display.
4. Press the < ^{EDIT} ~~Exit~~ > menu button. The display shows *ENTER NAME*.
5. Use the handset number pad to enter a name (up to 15 characters). More than one letter is stored in each of the number keys. For example, to enter Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter l. Press the 5 key 3 times for the letter L. Press the 5 key 3 times for the second letter L, and press the 1 key to insert a space between the first and last name. Press the 7 key 4 times for the letter S; press the 6 key once for the letter M; press the 4 key 3 times for the letter l; press the 8 key for the letter T; press the 4 key twice for the letter H.
6. Press the < OK > menu button to confirm and save your selection. The display shows *ENTER TEL NUMBR*.
7. Use the number pad to enter the area code followed by the telephone number (up to 24 digits, including pauses) and press the < OK > menu button again to save your selection. The unit beeps to confirm.
8. To enter another name and number in a different memory location, please follow step 1 and repeat the process.

STORING A REDIAL NUMBER

1. Make sure the phone is **OFF** (not in TALK mode).
2. Press the < DIR > menu button.
3. Press any number key (1-50) to store the phone number in that memory location, or press CID/Vol up and down arrow button to scroll the memory location.
4. Press the < EDIT > menu button and *ENTER NAME* shows on the display.
5. Use the handset number pad to enter the name, then press the < OK > menu button and *ENTER TEL NUMBR* shows on the display.
6. Press the redial/delete button to display the redial number and name.
7. Press the < OK > menu button again to confirm.

NOTE: If the redial number has more than 24 digits, the redial number cannot be stored in memory.

INSERTING A PAUSE IN THE DIALING SEQUENCE

Press the # button on the handset number pad to insert a delay in dialing sequence (of a stored telephone number) when a pause is needed to wait for a dial tone (for example, after you dial 9 for an outside line, or to wait for a computer access tone.) Each pause counts as one digit in the dialing sequence.

REVIEWING, CHANGING, OR DELETING INFORMATION STORED IN MEMORY

To Review:

1. Make sure the phone is **OFF** (not in TALK mode).
2. Press the < DIR > menu button to display the stored information.
3. Press the CID/Vol up or down arrow buttons to scroll the stored names and numbers, or use the handset number pad to enter the memory location number.

To Change:

Use the same procedure to change a stored number as you do to store a number and just replace one stored phone number with a different one.

To Delete:

1. Make sure the phone is **OFF** (not in TALK mode).
2. Press the < DIR > menu button to display the stored information.
3. Press the CID/Vol up or down arrow buttons to scroll to the record you want to delete.
4. Press the < DEL > menu button to mark the record for deletion. The display shows *DELETE?*
5. Press the < OK > menu button to delete the record. *DELETED* shows in the display.

NOTE: If you don't want to change or delete a number, simply press the < EXIT > menu button, or wait for one minute to exit the review mode automatically.

DIALING A NUMBER FROM MEMORY

1. Make sure the phone is ON by pressing the TALK/callback button.
2. Press the < DIR > menu button to display the stored information.
3. ~~Press CID/Vol up or down arrow button to scroll to the number you want to dial,~~ or use the handset number pad to enter the memory location number. The number dials automatically.

-OR-

1. Make sure the phone is OFF (not in TALK mode).
2. Press the < DIR > menu button.
3. Press the number key (1-50) for the memory location of the phone number you want to dial, or use the CID/Vol up or down arrow buttons to scroll to the stored number you want to dial.
4. Press the TALK/callback button. The number dials automatically.

CHAIN DIALING FROM MEMORY

Use this feature to make calls that require a sequence of numbers, such as a calling card number used for a frequently called long distance number. The following example shows how you can store each part of the dialing sequence and use chain dialing to make a call through a long distance service:

<i>The Number For</i>	<i>Memory Location</i>
Long Distance Access Number	7
Authorization Code	8
Frequently called long distance number	9

1. Make sure the phone is ON by pressing the TALK/callback button.
2. Press the < DIR > menu button, and then press ~~7~~07
3. When you hear the access tone, press the < DIR > menu button, and then press ~~8~~08
4. At the next access tone, press the < DIR > menu button and then ~~9~~09

CALLER ID

Caller ID (CID) is a service available from your local telephone company. For Caller ID to work on this system, you must subscribe to Caller ID service. To receive Caller ID information for a Call Waiting call, you must subscribe to the combined Caller ID Call Waiting service.

When your telephone rings, and you are subscribed to Caller ID Call Waiting service, you will receive information (if available) transmitted by your local telephone company. You will also receive Caller ID information from Call Waiting calls. If you receive an incoming call and you are already on the phone, a beep indicates the presence of a Call Waiting Call on the line, and Caller ID information for the Call Waiting call shows on the display. This information may include the phone number, date and time; or the name, phone number, and date and time.

PLACE CALLER ID
DISPLAY BOX LINE ART
HERE

CALLER ID ERROR CODES

Various Caller ID error messages may appear in the display. Refer to the Caller ID Display Messages section for more information.

RECEIVING AND STORING CALL RECORDS

When you receive a call, the Caller ID information is transmitted between the first and second ring. The Caller ID information appears on the display while the phone rings, giving you a chance to monitor the information and decide whether or not to answer the call.

If you are not at home or cannot answer, your telephone's Caller ID memory automatically stores the call number, date, time, phone number, and name for the 40 most recent calls received so you can see who called while you were unavailable. Caller ID records are stored sequentially, in the order they are received. When the 41st call is received, the oldest Caller ID record is automatically deleted.

You may review the stored information for the most recent 40 calls at any time. Calls received since your last review show as *NEW* in the display.

REVIEWING THE CALLER ID LIST

As calls are received and stored, the display is updated to let you know how many calls have been received. To scroll through Caller ID list:

1. Press the CID/Vol ~~up~~ down arrow button to review the newest Caller ID record.
2. Press the CID/Vol up arrow button to review the oldest Caller ID record first.

As you review calls stored in Caller ID memory, the display shows you the following information for each call:

- The telephone number of the caller.
- The number of the call, with regard to the order received.
- The name of the caller, if this service is available in your area.

NOTE: If a name is received which exceeds 15 characters, the extra characters are displayed for 3 seconds.

- Time and date the call was received.
- **NEW** appears for all calls that have not been previously reviewed.

NOTE: Check with your local phone company regarding name service availability.

STORING CALLER ID RECORDS IN THE PHONE'S MEMORY

You may store Caller ID information in the phone's memory.

TIP: To prevent the CID information from automatically being deleted, you may want to store it in the phone's memory.

NOTE: It is important that you format CID records correctly before storing in memory.

It is not possible to reformat CID records stored in memory.

1. Use the CID/Vol up or down arrow button to scroll to the desired Caller ID record.
2. Press the < SAVE > menu button.

- Use the handset number pad to enter a memory location number (for example, press the number one key to store the record in memory location one). If the memory location had an existing memory record, you must confirm replacement by pressing the < OK > menu button.

NOTE: Press the < EXIT > menu button once to keep the previous setting and return to the sub-menu, or press and hold the < EXIT > menu button on the handset to return to the standby mode.

DIALING A CALLER ID NUMBER

While reviewing the Caller ID list, you may call the phone number showing in the display.

- Make sure the phone is OFF (not in talk mode).
- Press CID/Vol up or down arrow buttons until the desired call record shows in the display.

Depending on (a) how the incoming caller's phone number is formatted when it is received, and (b) whether or not you previously pre-programmed your local area code into memory, you may need to adjust the format of the incoming caller's stored phone number before making the call.

Use the format button to edit the format of the displayed telephone number.

Available formats include:

<i>Number of digits</i>	<i>Explanation</i>	<i>Example</i>
Eleven digits	long distance code "1 " +3-digit area code +7-digit telephone number.	1-317-888-8888
Ten digits	3-digit area code + 7-digit telephone number.	317-888-8888
Seven digits	7-digit telephone number.	888-8888

NOTE: If the phone company does not supply all ten digits of an incoming caller's number, you will not be allowed to adjust the format of that number.

3. If the number will not dial as shown, press the format/conference button. Repeat if necessary, until the correct number of digits show in the display.
4. Press the TALK/callback button on the handset. The number dials automatically.

NOTE: If the number is corrupted, such as a number in a name or an alphabetical character in a number, you will hear an error tone at the handset and the number won't dial.

STORING THE CURRENT CALLER ID RECORD IN THE PHONE'S MEMORY

1. Make sure the phone is OFF (not in talk mode).
2. Use the CID/Vol up or down arrow button to display the Caller ID record you want to store in memory.
3. Press the < SAVE > menu button.
4. Use the handset number pad to enter a memory location number, or use the CID/Vol up or down arrow button to select a memory location.
5. Press the < OK > menu button to store the CID record.

NOTE: Press the < EXIT > menu button once to return to the CID review menu, or press and hold the < EXIT > menu button on handset to return to the standby mode.

DELETING THE CURRENT CALLER ID RECORD

To delete a Caller ID message:

1. Make sure the phone is OFF (not in talk mode).
2. Use the CID/Vol up or down arrow button to display the Caller ID record you want to delete.

3. Press the < DEL > menu button. The display shows *DELETE CALL ID?*
4. Press the < OK > menu button to erase the record. The display shows *DELETED.*

NOTE: Press < EXIT > menu button once to return to CID review menu, or press and hold the <EXIT> menu button on handset to return to the standby mode.

DELETING ALL CALLER ID RECORDS

To delete all the Caller ID names and numbers from the Caller ID memory:

1. Make sure the phone is OFF (not in talk mode).
2. Use the CID/Vol up or down arrow button to scroll to any Caller ID record.
3. Press and hold the < DEL > menu button for two seconds. The display shows *DELETE ALL?*
4. Press and hold the < OK > menu button for about two seconds to erase all of the current CID records. The display shows *NO CALLS.*

NOTE: Press the < EXIT > menu button once to return to the CID review menu, or press and hold the < EXIT > menu button on the handset to return to the standby mode.

CHANGING THE BATTERY

Make sure the telephone is OFF before you replace battery.

1. Remove the battery compartment door.
2. Disconnect the cord attached to the battery pack from the jack inside the battery compartment and remove the battery pack from the handset.
3. Insert the new battery pack and reconnect the battery plug.
4. Put the battery compartment door back on.
5. Place handset in the base to charge. If you don't charge the handset battery properly (for 12 hours) when you first set up the phone and/or when you install a new battery pack, the battery's long-term performance will be compromised.

**PLACE BATTERY
COMPARTMENT
LINE ART HERE**

BATTERY SAFETY PRECAUTIONS

- Do not burn, disassemble, mutilate or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.



CAUTION: To reduce the risk of fire or personal injury, use only the battery listed in the instruction book.

BELT CLIP AND OPTIONAL HEADSET

CONNECTING THE BELT CLIP

To attach the belt clip, insert the sides of the belt clip into the slots on each side of the handset. Snap the ends of the belt clip into place.

CONNECTING AN OPTIONAL HEADSET TO THE HANDSET

Each handset can be used with an optional headset hands free operation.

1. Connect the headset to the HEADSET jack on the side of the handset. The handset receiver and microphone are disabled when the headset is connected.
2. Adjust the headset to rest comfortably on top of your head and over your ear. Move the microphone to approximately two to three inches from your mouth.
3. Press the TALK callback button to answer a call or make calls using the headset.
4. To return to normal operation, unplug the headset from the jack.

**PLACE
HEADSET
AND
BELTCLIP
LINE ART
HERE**

CALLER ID DISPLAY MESSAGES

The following indicators show the status of a message or of the unit.

ERROR	Caller ID information has been interrupted during transmission or the phone line is excessively noisy.
ENTER NAME	Prompt telling you to enter the name in one of the 10 memory locations.
DELETE ALL?	Prompt asking if you want to erase all Caller ID records.
DELETE CALL ID?	Prompt asking if you want to erase the current Caller ID record that is shown on the display.
DELETE?	Prompt asking if you want to erase one of the 10 numbers stored in the phone's outgoing memory.
END OF LIST	Indicates that there is no additional information in Caller ID memory.
NEW	Indicates call or calls have not been reviewed.
UNKNOWN CALL	The incoming call is from an area not serviced by Caller ID or the information was not sent
PAGING	Someone has pressed the page/int button on the base or handset.
BLOCKED NUMBER	The person is calling from a number that has been blocked from transmission.
REPT	Repeat call message. Indicates that a new call from the same number was received more than once.
NO DATA	No Caller ID information was received, you are not subscribed to Caller ID service, or Caller ID service is not working.

HANDSET SOUND SIGNALS

<i>Signal</i>	<i>Meaning</i>
A long warbling tone (with ringer on)	Signals an incoming call
Three short beeps	Page signal
One short beep (every 7 seconds)	Low battery warning

TROUBLESHOOTING GUIDE

TELEPHONE

<i>Problem</i>	<i>Solution</i>
No dial tone	<ul style="list-style-type: none"> • Check installation: <ul style="list-style-type: none"> — Is the base power cord connected to a working outlet? — Is the telephone line cord connected to the base unit and the wall jack? • Connect another phone to the same jack; the problem might be your wiring or local service. • Is the cordless handset out of range of the base? • Make sure the battery is properly charged (12 hours). • Is the battery pack installed correctly? • Did the handset beep when you pressed the TALK/callback button? Did the ^{in use} charge indicator on the base come on? The battery may need to be charged. • Place handset in charge cradle for at least 20 seconds.
Dial tone is OK, but can't dial out	<ul style="list-style-type: none"> • Make sure the TONE/PULSE dialing mode is set to the type of phone service you are subscribed to.

Handset/Base does not ring

- Make sure the handset ringer switch is turned to on and the base ringer is programmed to HI.
- Move closer to the base. The handset may be out of range.
- You may have too many extension phones on your line. Try unplugging some phones.
- Check for dial tone.

You experience static, noise, or fading in and out

- Move closer to base (cordless handset might be out of range).
- Does the base need to be relocated? Make sure base is not plugged into an outlet with another household appliance.
- Charge battery.

Unit beeps

- Place the handset in the cradle for 20 seconds. If it still beeps, charge battery for 12 hours.
- Clean charging contacts on cordless handset and charger with a soft cloth, remove comma or an eraser.
- See solutions for "No dial tone " on previous page.
- Replace battery.

Memory Dialing doesn't work

- Did you program the memory location keys correctly?
- Did you follow proper dialing sequence?

Unit locks up and no communication between the base and cordless handset

- Unplug the AC power supply from the wall outlet and the back of the base. Remove the handset battery. Wait for 30 seconds and plug the power adapter back into the base and wall outlet. Reconnect the battery and charge for 12 hours.

CALLER ID

<i>Problem</i>	<i>Solution</i>
No Display	<ul style="list-style-type: none">• Is battery fully charged? Try replacing the battery.• Make sure that the unit is connected to a non-switched electrical outlet. Disconnect the AC power supply from the base and reconnect it.
Caller ID Error Message	<ul style="list-style-type: none">• The unit displays this message if it detects anything other than valid Caller ID information during the silent period after the first ring. This message indicates the presence of noise on the line.
No Caller ID	<ul style="list-style-type: none">• Did you order Caller ID service from your phone company?

BATTERY

If you experience any of the following problems, even after fully recharging the battery, you may need to replace the battery pack:

- Short talk time
- Poor sound quality
- Limited range
- Charge/page or handset antenna indicator fails to light

GENERAL PRODUCT CARE

To keep your unit working and looking good, follow these guidelines:

- Avoid dropping the handset, as well as other rough treatment to the phone.
- Clean the phone with a soft cloth.
- Never use strong cleaning agents, paint thinner, abrasive powder, alcohol, or other chemical products to clean the unit. Doing so will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.
- Periodically clean the charge contacts on the handset and base with a clean pencil eraser.

CAUSES OF POOR RECEPTION

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction that can shield radio signals.
- You're too close to appliances such as microwaves, stoves, computers, etc.
- Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into AC outlet with other electronic devices.
- Baby monitor is using the same frequency.
- Handset battery is low.
- You're out of range of the base.

SERVICE

This product may be serviced only by the manufacturer or its authorized service agents. Changes or modifications not expressly approved by ATLINKS USA, Inc. could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this guide or call customer service at 1-800-448-0329.

Or refer inquiries to:
ATLINKS USA, Inc.
Manager, Consumer Relations
P O Box 1976
Indianapolis, IN 46206

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date _____
Name of store _____

INDEX

A

- Accessory Order Form 43
- Advanced Intercom Features 22
- Answering a Call 17
- Auto Standby 18

B

- Battery Safety Precautions 33
- Before You Begin 7
- Belt clip and Optional Headset 34

C

- Caller ID 27
- Caller ID Display Messages 35
- Caller ID Error Codes 28
- Causes of Poor Reception 39
- Chain Dialing from Memory 27
- Changing the Battery 33
- Charge/VWMI Indicator 17
- Checking the Package Contents 7
- Connecting an Optional Headset to the Handset 34
- Connecting the AC (Electrical) Power 9
- Connecting the Belt clip 34
- Connecting the Telephone Line 10
- Cordless Phone Basics 17

D

- Default Setting 16
- Deleting All Caller ID Records 32
- Deleting the Current Caller ID Record 31
- Dialing a Caller ID Number 30
- Dialing a Number from Memory 26
- Duration Counter 17

E

- Equipment Approval Information 2
- Exit 19

F

- Finding/Paging the Handset 19
- Flash/Call Waiting 18

G

- General Product Care 39

H

- Handset De-Registration 15
- Handset Registration 14
- Handset Sound Signals 36
- Hold 19

I

- Important Installation Guidelines 8
- Important Installation Information 8
- Inserting a Pause in the Dialing Sequence 25
- Installing the Phone 9
- Intercom 21
- Interference Information 2
- Introduction 5

L

- Language Setting 12
- Last Number Redial 18
- Limited Warranty 44
- Local Area Code Setting 13

M

- Making a Call 17
- Making an Intercom Call 21
- Memory 24
- Menu Mode 12
- Menu/Soft Key Functions 16
- Modular Jack Requirements 7
- Mute 20

P

- Paging from the Base/Group Page 20
- Paging from the Handset 19
- Programmable Menus 12

R

- Receiver Volume Control 21
- Receiving an Incoming Telephone Call During an Int 22
- Receiving an Intercom Call 21
- Receiving and Storing Call Records 28
- Reviewing the Caller ID List 28
- Reviewing, Changing, or Deleting Information Store 25
- Ringer Tone Setting 15
- Ringer Volume Switch 18

S

- Service 40
- Storing a Redial Number 25
- Storing Caller ID Records in the Phone's Memory 29
- Storing Names and Numbers in Memory 24
- Storing the Current Caller ID Record in the Phone' 31

T

- Telephone Setup 11
- Temporary Tone Dialing 20
- Three-Way Calling 23
- Tone/Pulse Setting 13
- Transferring External Calls to Other Handsets 23
- Troubleshooting Guide 36
- Two-Way Calling 22

U

- Using Intercom with External Telephone Calls 22

W

- WalkieTalkie Feature 16
- Wall Mounting 10

ACCESSORY ORDER FORM

CUSTOMER: CUT ALONG DOTTED LINE. ✂

DESCRIPTION	CATALOG NUMBER	PRICE*	QUANTITY	TOTAL
AC power supply adapter	5-2489??			
Belt Clip	??			
Headset	??			
Replacement Handset Battery	??			

To order, call 1-800-338-0376 (for accessories only) or complete this order form.
 *Prices are subject to change without notice.

For credit card purchases
 Your complete charge card number, its expiration date and your signature are necessary to process all charge card orders.

Copy your complete account number from your VISA card.

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

My card expires:

<input type="text"/>	<input type="text"/>
----------------------	----------------------

Copy your complete account number from your Master Card or Discover.

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

Copy the number above your name on the Master Card

<input type="text"/>	<input type="text"/>
----------------------	----------------------

My card expires:

<input type="text"/>	<input type="text"/>
----------------------	----------------------

Total Merchandise.....\$
 Sales Tax.....\$

We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent. Duties will apply for shipments to Canada.

Use VISA or Master Card or Discover preferably. Money order or check must be in U.S. currency only. No COD or Cash. All accessories are subject to availability. Where applicable, we will ship a superseding model.

Shipping/Handling.....\$ **\$5.00**
 Total Amount Enclosed.....\$

Mail order form and money order or check (in U.S. currency) made payable to Thomson multimedia Inc. to:

Thomson multimedia Inc.
 Mail Order Department
 P.O. Box 8419
 Ronke, PA 17573-8419

Name _____
 Address _____
 City _____ State _____ Zip _____ Apt. _____
 Daytime Phone Number () _____

Authorized Signature _____

Please make sure that this form has been filled out completely.

LIMITED WARRANTY

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year, from date of purchase.

(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

What we will do:

- Provide you with a new or, at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

How you get service:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- "Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period, must be presented to obtain warranty service. "For rental firms, proof of first rental is also required. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

ATLINKS USA, Inc.
c/o Thomson multimedia Inc.
11721 B Alameda Ave.
Soconco, Texas 75927

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment for loss or damage. ATLINKS accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. Any additional information, should be obtained from your dealer.)
- Installation and setup service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY ATLINKS USA, INC., ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ATLINKS USA, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. If you purchased your product outside the USA:
- This warranty does not apply. Contact your dealer for warranty information.

Model 21005
45744016 (Rev. 0-0-06)
21003

02-16
Printed in China

ATLINKS USA, Inc.
101 West 103rd Street
Indianapolis, IN 46290
© 2002 ATLINKS USA, Inc.
Trademark(s) ® Registered
Marca(s) Registrada(s)