

EXHIBIT A

[FCC Ref. 2.1033(b)(3)]

"Installation and Operating Instructions
Furnished to the User"

26965GE1/3



**32-Channel 900 Mhz
Cordless Flip Phone with Caller ID
User's Guide**

We bring good things to life.

FCC ID: G9H2-6965
Marstech Report No. 20362D
EXHIBIT A(1)-1

FCC REGISTRATION INFORMATION

Your telephone equipment is registered with the Federal Communications Commission and is in compliance with parts 15 and 68 FCC Rules and Regulations.

1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the FCC Registration number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.

2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate the equipment to increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00393-4 when ordering copies.


HEARING AID COMPATIBILITY

This telephone system meets FCC standards for Hearing Aid Compatibility.

FCC NUMBER IS LOCATED ON THE CABINET BOTTOM
REN NUMBER IS LOCATED ON THE CABINET BOTTOM

TABLE OF CONTENTS

FCC REGISTRATION INFORMATION	2	DELETING RECORDS	17
INTERFERENCE INFORMATION	2	DELETING THE CURRENT RECORD	17
HEARING AID COMPATIBILITY	2	DELETING ALL RECORDS	18
INTRODUCTION	4	DIALING A CALLER ID NUMBER	18
BEFORE YOU BEGIN	5	CHANGING THE NUMBER FORMAT	19
PARTS CHECKLIST	5	MEMORY	21
MODULAR JACK REQUIREMENTS	5	STORING A NUMBER IN MEMORY	21
DIGITAL SECURITY SYSTEM	5	STORING CALLER ID RECORDS	24
INSTALLATION	6	CHANGING A STORED NUMBER	25
BASE UNIT	6	DIALING A STORED NUMBER	25
DESKTOP INSTALLATION	7	CHAIN DIALING FROM MEMORY	27
WALL MOUNT INSTALLATION	8	THE NUMBER FOR MEMORY	27
CORDLESS PHONE BASICS	9	LOCATION	27
RECEIVING A CALL	9	INSERTING A PAUSE IN THE DIALING	28
MAKING A CALL	9	SEQUENCE	28
REDIAL	9	REVIEWING AND DELETING STORED	29
FLASH	10	NUMBERS	29
RINGER ON/OFF	10	DELETING ALL STORED NUMBERS	29
TO NE/PULSE DIALING	11	REPLACING THE COLOR CAPS	30
TO NE	11	REMOVING THE CAPS	30
PULSE	12	REPLACING THE CAPS	30
HANDSET VOLUME	12	REPLACING THE CAPS	31
CALLER ID FEATURES	13	HANDSET SOUND SIGNALS	32
CALLER ID WITH CALL WAITING	13	TROUBLESHOOTING TIPS	32
SETTING THE AREA CODE	14	GENERAL PRODUCT CARE	37
RECEIVING AND STORING CALLS	15	SERVICE	37
REVIEWING RECORDS	16	INDEX	38
		LIMITED WARRANTY	40

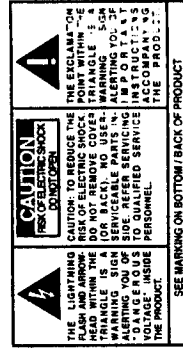

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

SEE MARKING ON BOTTOM / BACK OF PRODUCT

INTRODUCTION

Your Caller ID phone stores and displays specific information, provided by your local telephone company, to subscribers of Caller ID or similar caller identification services. You must subscribe to one of these services in order to use this unit.

Your Caller ID phone enables you to:

- Identify callers before you answer the phone.
- View the time and date of each incoming call.
- Record up to 40 Caller ID messages sequentially.
- Know who called while you were away.

To get the most from your new phone, we suggest that you take a few minutes right now to read through this user's guide.

REMINDER: This product requires a subscription to Caller ID service from your telephone company. Check for name service availability.


IMPORTANT: Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.

BEFORE YOU BEGIN

PARTS CHECKLIST

Your cordless phone may feature color-tinted replaceable caps that allow you to change the look of your handset. These plastic caps are removable and allow you to customize the appearance of your flip phone. The color-tinted caps are only available with the GE3 model.

Make sure your package includes the items shown here.

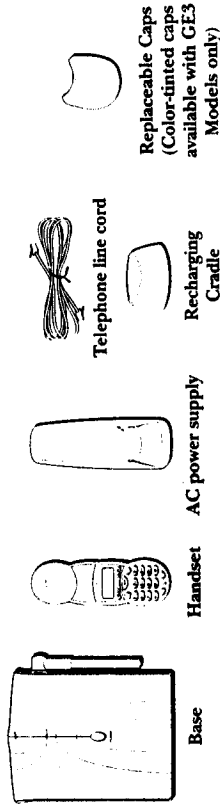

MODULAR JACK REQUIREMENTS


You need an RJ11 type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.

INSTALLATION NOTE: Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If such interference continues, move the cordless telephone farther away from the TV or VCR.

DIGITAL SECURITY SYSTEM

Your cordless phone uses a digital security system to provide protection against false ringing, unauthorized access, and charges to your phone line.

INSTALLATION

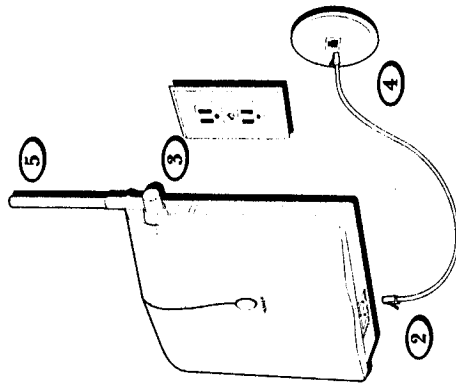


BASE UNIT

1. Find a location for the base unit where both an electrical wall receptacle and a RJ11 telephone jack are available.
2. Uncoil the long phone cord and plug one end into one of the two phone jacks on the bottom of the base unit.
3. The base unit has a retractable AC plug. Pull down the retractable AC power blades and plug the base unit into the electrical receptacle.
4. Plug the other end of the long telephone cord into the modular telephone jack.
5. Raise the antenna on the base unit and position it where it will not be damaged.

DESKTOP INSTALLATION

The AC power supply plugs securely into any AC outlet. The charge cradle is connected to the AC power supply with 6 feet of telephone cord.

1. Find a location for the AC power supply where a wall electrical receptacle is available.
2. Plug the AC power supply into the electrical receptacle.
3. Place the recharge cradle on a desktop or flat surface (within 6 feet of the AC power supply) and place the closed handset in the recharge cradle. For the first use, charge the handset for 12 hours. When the unit is charging, the indicator (on the handset) will come on to indicate that the battery is charging. **If the handset battery is not charged properly (for 12 hours), battery performance will be compromised.**

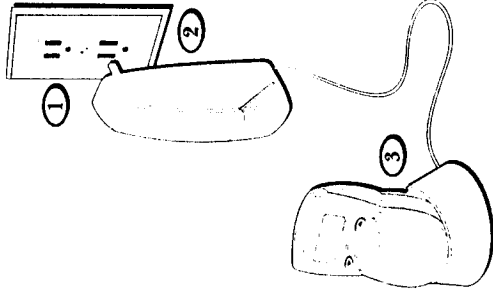


CAUTION: Use only the ATLINKS USA 5-2493 power supply that came with this unit. Using other power supplies may damage the unit.

WALL MOUNT INSTALLATION

The AC power supply plugs securely into any AC outlet.

1. Find a location for the AC power supply where an electrical wall receptacle is available.
2. Plug the AC power supply into the electrical receptacle.
3. Slide the recharge cradle onto the AC power supply unit and store the 6ft telephone cord in the storage compartment located on the back of the AC power supply.
4. Place the closed handset in the recharge cradle. For the first use, charge the handset for 12 hours. When the unit is charging, the indicator (on the handset) turns on to indicate that the battery is charging. **If the handset battery is not charged properly (for 12 hours), battery performance will be compromised.**

NOTE: The phone automatically defaults to touch-tone dialing. To change to pulse (rotary) dialing, see "Tone/Pulse Dialing." If you don't know which type of service you have, check with the phone company.

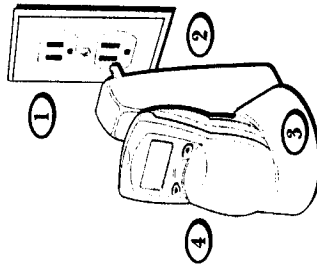

CORDLESS PHONE BASICS

RECEIVING A CALL


1. Check the display to see who is calling.
2. Press the TALK button. The timer is displayed.

MAKING A CALL

To make a call, open the flip cover on the phone. Press the TALK button before you dial and press it again or close the flip cover to disconnect.

REDIAL

While the phone is on, press the REDIAL/CALL BACK button to redial the last number you dialed (up to 24 digits). If you get a busy signal and want to keep dialing the number, just press REDIAL again (you don't have to turn the phone off and back on).

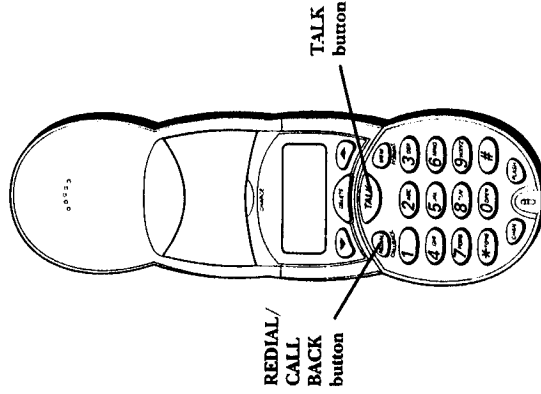

CAUTION: Use only the ATLINKS USA 5-2493 power supply that came with this unit. Using other power supplies may damage the unit.


FLASH

Use the FLASH button to activate custom calling services such as call waiting or call transfer, which are available through your local phone company.

RINGER ON/OFF

The RINGER must be ON for the handset to ring during incoming calls.

1. Make sure the phone is OFF.
2. Press the FLASH button for 2 seconds until RINGER SETTING shows on the second line of the display. The * or # will flash to show the current setting.
3. To turn the ringer on, press *.
4. To turn the ringer off, press #.

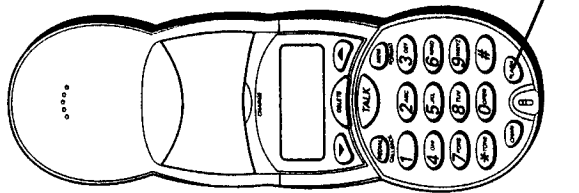


TONE/PULSE DIALING

This adjustment allows you to select tone (touch-tone) or pulse (rotary) mode dialing. The phone is automatically set for touch-tone use.

TONE

1. Make sure the phone is OFF.
2. Press the CHANNEL button for 2 seconds until *TONE #=PULSE shows on the third line of the display. The * or # will flash to show the current setting.
3. To set the phone to tone, press *.

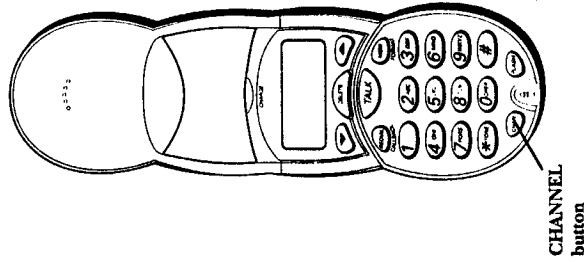


PULSE

1. Make sure the phone is **OFF**.
2. Press the **CHANNEL** button for 2 seconds until ***=TONE #=PULSE** shows on the third line of the display. The * or # will flash to show the current setting.
3. To set the phone to pulse, press #.

HANDSET VOLUME

The **VOLUME** feature controls the volume of the handset's earpiece.

1. Press the arrow keys to adjust the volume during conversation. The display will show the current volume level.
2. The default volume level is 1.

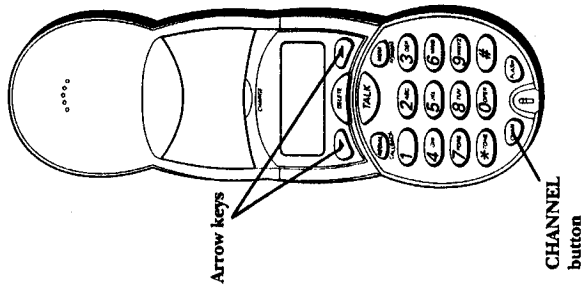


CALLER ID FEATURES

This unit receives and displays information transmitted by your local phone company. This information can include the phone number, date, and time; or the name, phone number, date, and time. The unit can store up to 40 calls for later review.

CALLER ID WITH CALL WAITING

Provided you subscribe to Caller ID with Call Waiting service from your phone company, you are able to see who is calling when you hear the call waiting beep. The caller identification information appears in the display after you hear the tone.

- Press the **FLASH** button to put the current person on hold so that you can answer the incoming call.

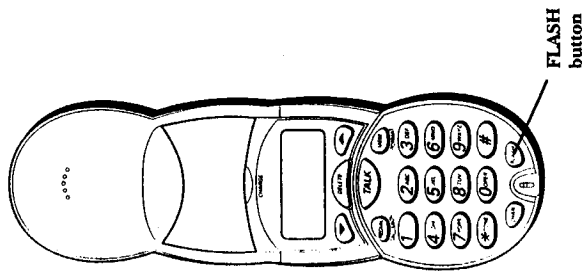


IMPORTANT: In order to use this unit you must subscribe to either the standard Name/Number Caller ID Service or Caller ID with Call Waiting Service. To know who is calling while you are on the phone, you must subscribe to Caller ID with Call Waiting Service.

SETTING THE AREA CODE

IMPORTANT: For proper Caller ID operation, you must enter your area code.

1. Make sure the phone is **OFF**.
2. Press and hold the **CHANNEL** button for two seconds. **AREA CODE=** will show on the second line of the display.
3. Enter your 3-digit area code using the number keys.
4. Press **CHANNEL** to confirm and store the area code.

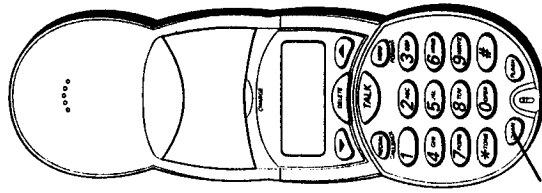

CHANNEL
button

RECEIVING AND STORING CALLS

When you receive a call, the information is transmitted by the phone company to your Caller ID telephone between the first and second ring.


When the memory is full, a new call automatically replaces the oldest call in memory. **NEW CALLS** appears in the display for calls received that have not been reviewed.

NOTE: Check with your local phone company regarding name service availability.

REVIEWING RECORDS

As calls are received and stored, the display is updated to let you know how many calls have been received.

- Press the arrow down button to scroll through the call records from the most recent to the oldest.
- Press the arrow up button to scroll through the call records from the oldest to the newest.
- If the number is long distance, both *LONG DISTANCE* and *NAME* will alternately flash, indicating the call is a toll call, and the number will be displayed.

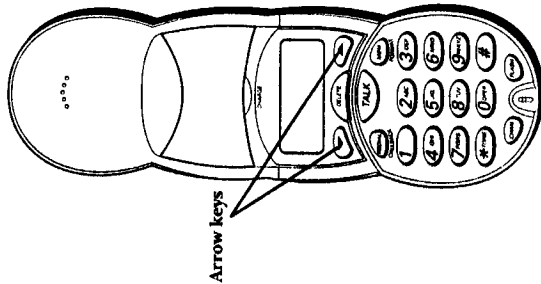


Arrow keys

DELETING RECORDS

Use the DELETE button to erase either the record currently shown in the display or all records.

DELETING THE CURRENT RECORD

1. Make sure the phone is **OFF**.
2. Use the arrow buttons to display the desired Caller ID record.
3. Press **DELETE**. The display shows *DELETE?*
4. Press **DELETE** again to erase the record.

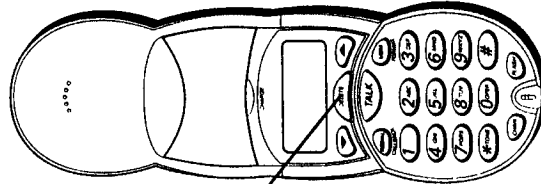

DELETE button

DELETING ALL RECORDS


1. Make sure the phone is **OFF**.
2. Use the arrow buttons to display the desired Caller ID record.
3. Press and hold **DELETE**. The display shows **DELETE ALL?**
4. Press **DELETE** again to erase all records.

DIALING A CALLER ID NUMBER

1. Make sure the phone is **OFF**.
2. Use the arrow buttons to display the desired Caller ID record.
3. Press **CALL BACK**. The number dials automatically.

-OR-

1. Make sure the phone is **OFF**.
2. Press **FORMAT**. The last Caller ID record is displayed.
3. Press **CALL BACK**. The number dials automatically.

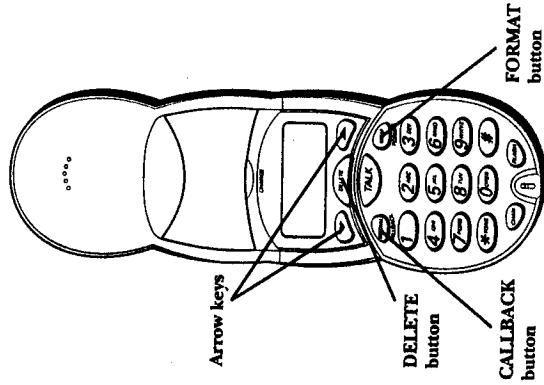


CHANGING THE NUMBER FORMAT

The **FORMAT** button lets you change the format of the displayed number. The available formats are as follows:

- 7-digit** 7-digit telephone number.
- 10-digit** 3-digit area code + 7-digit telephone number.
- 11-digit** long distance code "1" + 3-digit area code + 7-digit telephone number.


1. Use the arrow buttons to scroll to the number you want to call back.

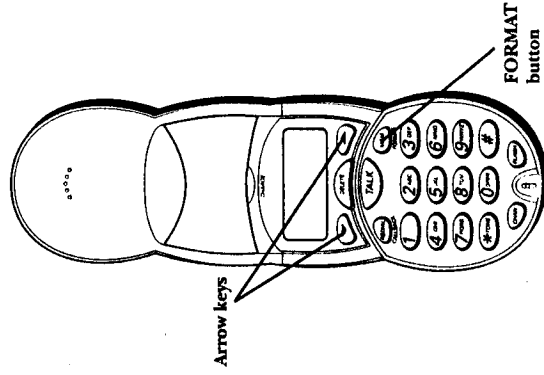

2. If the number will not dial as shown, press the **FORMAT** button once to add an area code.
3. Press the **FORMAT** button twice to add a 1 plus the area code.
4. Press the **FORMAT** button a third time to return to a 7 digit number.

5. Press **CALL BACK**. The number dials automatically.

NOTE: To clear the local area code, press and hold **CHANNEL** until **AREA CODE** appears. Then enter "000".

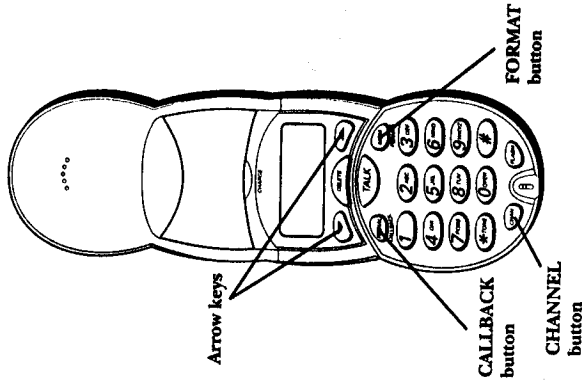


MEMORY


STORING A NUMBER IN MEMORY

1. Make sure the phone is **OFF**.
2. Press the **MEM** button.
3. Press the memory location number (1-9) or use the arrow buttons to find the location.
4. Press **MEM** again. The display shows **ENTER NAME**.


NOTE: If you don't want to enter the name, skip step 5.

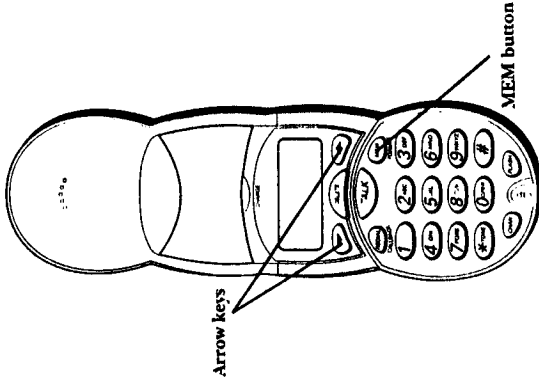

- Use the keypad to store a name (up to 15 characters). More than one letter is stored in each of the number keys. For example, to enter Joe Smith, press 5 for J; press 6 three times for O; press 3 two times for E; press 1 to enter a space before you start entering the last name; press 7 four times for S; press 6 for M; press 4 three times for I; press 8 for T; and 4 two times for H. If you're using two letters consecutively that are stored in the same number key, you must press **FORMAT** between the letters. For example, if you enter Barb, press 2 two times for B; press **FORMAT**; press 2 for A; 7 three times for R; and 2 two times for B.

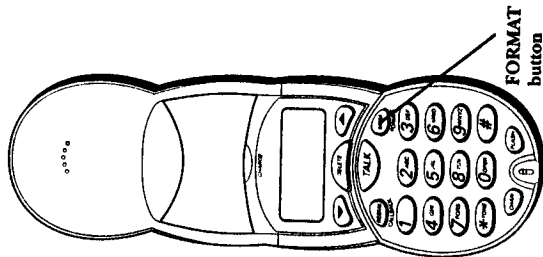


- Press **MEM**. The display shows **ENTER NUMBER**.
- Use the keypad to enter the number you want to store (up to 24 digits). To add a pause, press the **REDIAL** button. For example, if you wanted to insert a pause after dialing 9 for an outside line or for a computer access tone, you would press 9 then **REDIAL**. Each pause counts as 1 digit in the dialing sequence.
- Press **MEM** again to store the number.
- Record whose number is stored in the location on the memory label provided. You will also be able to view the name and number in the phone's display.

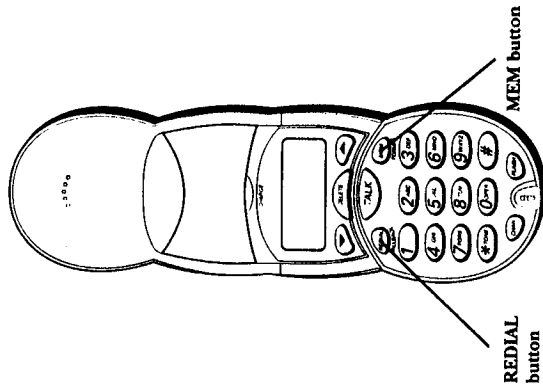

STORING CALLER ID RECORDS

You can also store Caller ID records in memory. Rather than re-entering the information the traditional way, you can store the record in a memory location.

1. Make sure the phone is **OFF**.
2. Use the arrow buttons to scroll to the Caller ID record you want to store.
3. Press and release **FORMAT** until the number is displayed in the proper dialing format. This must be done before the number is stored or it will not dial properly.
4. Press **MEM**.
5. Press the number (1-9) for the memory location.
6. Press **MEM** again to store the record.

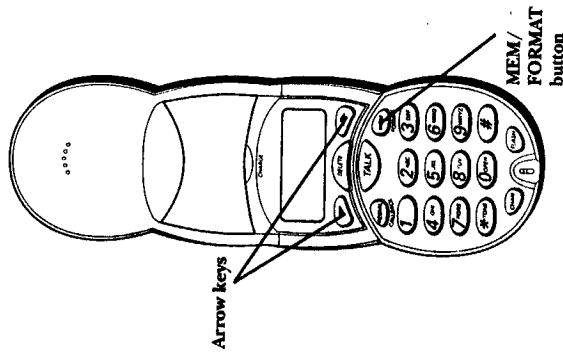


CHANGING A STORED NUMBER

Use the same procedure to change a stored number as you do to store a number - you're just replacing the phone number with a different one.


DIALING A STORED NUMBER

1. Make sure the phone is **ON** by pressing the **TALK** button.
 2. Press **MEM**.
 3. Press the number (1-9) for the desired memory location. The number dials automatically.
- OR -
1. Make sure the phone is **OFF**.
 2. Press **MEM**.

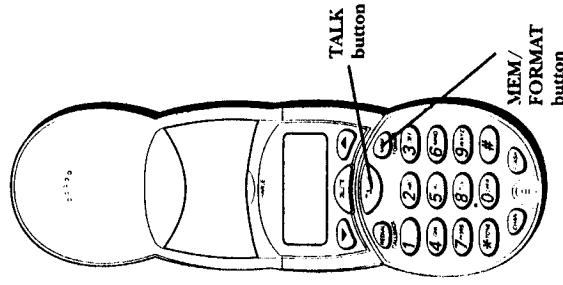

3. Use the arrow buttons to scroll through the numbers stored in memory until the desired number is shown.
4. Press REDIAL/CALL BACK. The number dials automatically.

IMPORTANT: If you make test calls to emergency numbers stored in memory, remain on the line and briefly explain the reason for the call to the dispatcher. Also, it's a good idea to make these calls in off-peak hours, such as early morning or late evening.

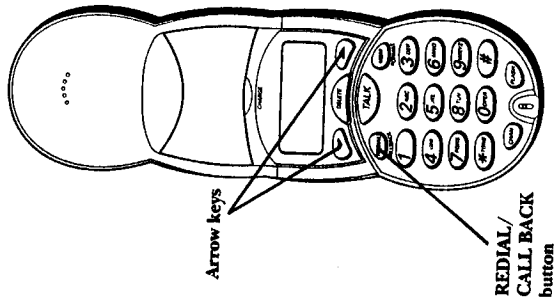

CHAIN DIALING FROM MEMORY

Use this feature to make calls which require a sequence of numbers such as using a calling card for a frequently called long distance number. Basically, you dial each part of the sequence from memory. The following example shows how you can use chain dialing to make a call through a long distance service:

THE NUMBER FOR MEMORY LOCATION


Long distance access number	7
Authorization code	8
Frequently called long distance number	9

1. Make sure the phone is **ON**.
2. Press **MEM** and then press 7.
3. When you hear the access tone, press **MEM** and then press 8.
4. At the next access tone, press **MEM** and then 9.

TIP: Wait for the access tones before pressing the next memory button, or your call might not go through.


INSERTING A PAUSE IN THE DIALING SEQUENCE

Press the **REDIAL/CALL BACK** button to insert a delay in the dialing sequence of a stored telephone number when a pause is needed to wait for a dial tone (for example after you dial 9 for an outside line, or to wait for a computer access tone). Each pause counts as 1 digit in the dialing sequence.

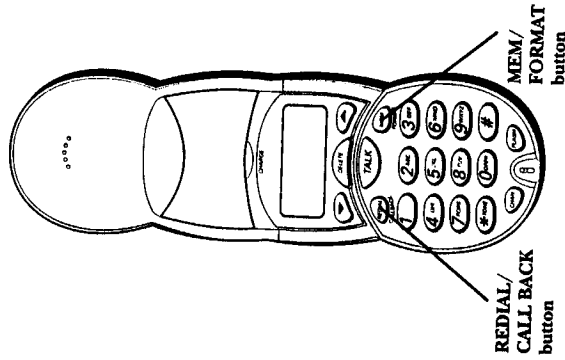

REVIEWING AND DELETING STORED NUMBERS

1. Make sure the phone is **OFF**.
2. Press **MEM**.
3. Use the arrow buttons to scroll through the numbers stored in memory until the desired number is shown.
4. While the entry is displayed, press **DELETE** to delete the entry. The display shows **DELETE?**
5. Press **DELETE** a second time to delete the entry.

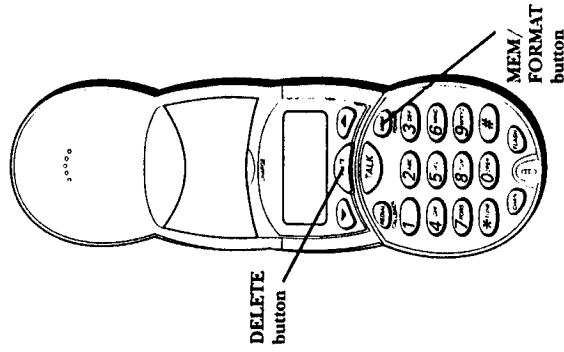

DELETING ALL STORED NUMBERS


1. Make sure the phone is **OFF**.
2. Press **MEM**.
3. Use the arrow buttons to scroll to any stored number.
4. Press and hold **DELETE**. The display shows **DELETE ALL?**
5. Press **DELETE** again to erase all stored numbers.

REPLACING THE COLOR CAPS

Your cordless flip phone with Caller ID includes a non-replaceable white plastic cap. GE3 models feature removable and replaceable color-tinted caps that allow you to customize the appearance of your flip phone.

REMOVING THE CAPS:

1. Remove the flip phone/handset from the recharge cradle.
2. With the flip phone closed, use your thumb and forefinger to gently lift off the replaceable cap.

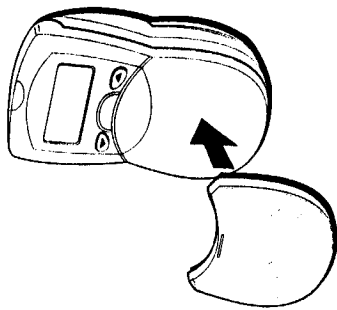

REPLACING THE CAPS:

1. Position the replaceable cap so that the tab on the cap is facing and aligned with the groove on the handset.
2. Gently press the replaceable cap onto the flip phone handset. The cap will snap into place.

HANDSET SOUND SIGNALS

<i>Signal</i>	<i>Meaning</i>
A long warbling tone (with ringer on)	Signals an incoming call
Four short beeps (in the "Talk" mode)	Out of range
Two short beeps (in the "Talk" mode)	Low battery warning

TROUBLESHOOTING TIPS

Problem	Solution
No Display	<ul style="list-style-type: none">•Is battery fully charged? Try replacing the battery.•If you are using AC power, make sure that the unit is connected to a non-switched electrical outlet. Disconnect the unit from the plug and plug it in again.•Did you order Caller ID service from your local telephone company?
Caller ID Error Message	<ul style="list-style-type: none">•The unit displays this message if it detects anything other than valid Caller ID information during the silent period after the first ring. This message indicates either the presence of noises on the line, or that an invalid message has been sent from the telephone company.

TELEPHONE

Problem	Solution
No dial tone	<ul style="list-style-type: none">•Check installation:<ul style="list-style-type: none">- Is the base unit plugged into a working outlet?- Is the telephone line cord connected to the base unit and the wall jack?•Disconnect the base from the wall jack and connect another phone to the same jack. If there is no dial tone in the second phone, the problem might be your wiring or local service.•Is the handset out of range of the base?•Make sure the battery is properly charged (12 hours).•Is the battery pack installed correctly?•Did the handset beep when you pressed the TALK button? Did the POWER/IN USE indicator come on? The battery may need to be charged.

Problem	Solution
Dial tone is OK, but dial out	<ul style="list-style-type: none"> •Make sure the tone/pulse setting is can't programmed correctly.
Handset does not ring	<ul style="list-style-type: none"> •Make sure the RINGER on the handset is set to ON. •You may have too many extension phones on your line. Try unplugging some phones. •See solutions for "No dial tone."
Cannot hear phone conversation	<ul style="list-style-type: none"> •Press the arrow buttons to adjust the volume to the desired listening level.
You experience static,	<ul style="list-style-type: none"> •Change channels. •Is handset out of range? Move closer to the base. •Does the base need to be relocated? •Charge battery. •Make sure base is not plugged into an outlet with another household appliance.

Problem	Solution
Battery will not hold a charge or is fully charged and the phone displays RECHARGE	<ul style="list-style-type: none"> •Be sure you are sufficiently charging the battery. When the battery has been charged for 12 hours, you can expect approximately 6 hours of talk time. •Check to be sure battery contacts on both the handset and the cradle are making contact and are clean; free of dirt or lint. •When the handset is placed on the cradle, check that the handset CHARGE indicator is on. •Replace battery.
Phone displays RECHARGE	<ul style="list-style-type: none"> •Place handset on the cradle for 10 seconds to reset the phone. If that doesn't work, charge battery for 12 hours.

Problem	Solution
Unit beeps	<ul style="list-style-type: none"> •Place handset in base for 20 seconds to reset the security code. If that doesn't work, charge battery for 12 hours. •Clean charging contacts on handset and base with a soft cloth, or an eraser. •See solutions for "No dial tone." •Replace battery.
Memory Dialing doesn't work	<ul style="list-style-type: none"> •Did you program the memory location keys correctly? •Did you follow proper dialing sequence? •Make sure the tone/pulse setting is programmed correctly. •Did you reprogram numbers into memory after power outage or battery replacement?

GENERAL PRODUCT CARE

To keep your telephone system working and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping and other rough treatment to the answerer.
- Clean with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship it at a later date.

SERVICE

FCC requires this product to be serviced only by the manufacturer or its authorized service agents. In accordance with FCC requirements, changes or modifications not expressly approved by ATLINKS USA could void the user's authority to operate this product. For instructions on how to obtain service, call Consumer Information, 1-800-448-0329.

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date _____ Name of store _____

INDEX

- B** Base Unit 6
Before You Begin 5
- C** Caller ID Features 13
Caller ID With Call Waiting 13
Chain Dialing from Memory 27
Changing a Stored Number 25
Changing the Number Format 19
Cordless Phone Basics 9
- D** Deleting All Records 18
Deleting All Stored Numbers 29
Deleting Records 17
Deleting the Current Record 17
Desktop Installation 7
Dialing a Caller ID Number 18
Dialing a Stored Number 25
Digital Security System 5
- F** FCC Registration Information 2
Flash 10
- G** General Product Care 37
- H** Handset Sound Signals 31
Handset Volume 12
Hearing Aid Compatibility 2
- I** Inserting a Pause in the Dialing Sequence 28
Installation 6
Interference Information 2
Introduction 4
- L** Limited Warranty 40
- M** Making A Call 9
Memory 21
Modular Jack Requirements 5
- P** Parts Checklist 5
Pulse 12
- R** Receiving A Call 9
Receiving And Storing Calls 15
Redial 9
Removing The Caps: 30
Replacing The Caps: 30
Replacing the Color Caps 30
Reviewing and Deleting Stored Numbers 29
Reviewing Records 16
Ringer On/Off 10
- S** Service 37
Setting The Area Code 14
Storing a Number in Memory 21
Storing Caller ID Records 24
- T** The Number For Memory Location 27
Tone/Pulse Dialing 11
Troubleshooting Tips 32
- W** Wall Mount Installation 8

LIMITED WARRANTY

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- One year.

(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

What we will do:

- Provide you with a new or, at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Thomson Consumer Electronics, Inc.
11721 B Alameda Ave.
Socorro, Texas 79927

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment for loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
- A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

Model 26965GE1/3
15576920 (Rev. 0 E/S)
00-40
Printed in China
P/N:480-19330-00000

ATLINKS USA, Inc.
10330 North Meridian Street
Indianapolis, IN 46290
© 2000 ATLINKS USA, Inc.
Trademark(s) ® Registered
Marca(s) Registrada(s)