


EXHIBIT A

(FCC Ref. 2.1033(b)(3))

"Installation and Operating Instructions
Furnished to the User"

27600/27601

**30-Channel 2.4GHz
Cordless Telephone
User's Guide**




We bring good things to life.

INTRODUCTION


Your Cordless Telephone is designed to give you flexibility in use and high quality performance. To get the most from your new cordless telephone, we suggest that you take a few minutes right now to read through this instruction manual.

IMPORTANT! Because cordless phones operate on electricity, you should have at least one phone in your home that is not cordless, in case the power in your home goes out.

BEFORE YOU BEGIN


PARTS CHECKLIST

Make sure your package includes the items shown here.

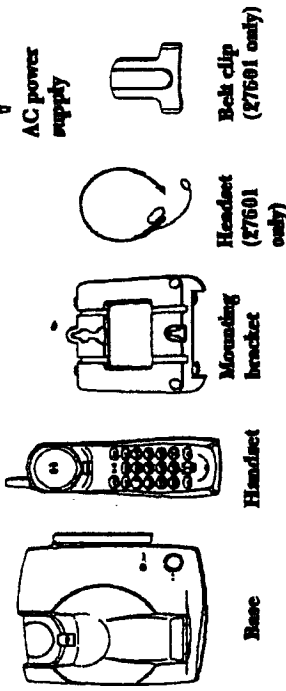

MODULAR JACK REQUIREMENTS

You need an RJ11 type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.




DIGITAL SECURITY SYSTEM

Your cordless phone uses a digital security system to provide protection against false ringing, unauthorized access, and charges to your phone line.


When you place the handset in the base, the unit verifies its security code. After a power outage or battery replacement, you should place the handset in the base for about 20 seconds to reset the code.

INSTALLATION NOTE: Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference continues, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

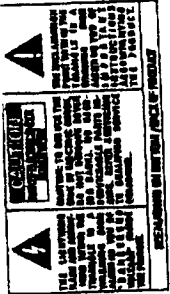

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

INSTALLATION

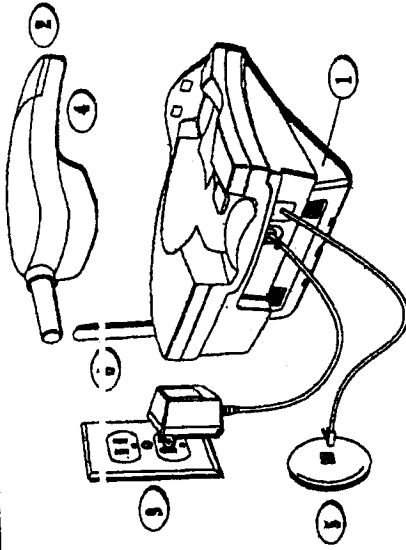

DESKTOP INSTALLATION

1. Make sure the mounting bracket is securely fastened.
2. Set the RINGER switch (on the handset) to ON.
3. Plug the power supply into an AC outlet.
4. Place handset in the base to charge for 12 hours. The CHARGE/IN USE indicator (on the base) comes on to indicate that the battery is charging. If you don't charge the handset battery properly (for 12 hours) when you first set up the phone, performance of the battery will be compromised.
5. Plug the telephone line cord into a modular jack.
6. Raise the base antenna.

NOTE: The phone automatically defaults to touch-tone dialing. To change to pulse (rotary) dialing, see "Tone/Pulse Dialing". If you don't know which type of service you have, check with the phone company.

CAUTION: Use only the ATLINKS USA 5-2199 power supply that came with this unit. Using other adapters may damage the unit.

FCC REGISTRATION INFORMATION

Your telephone equipment is registered with the Federal Communications Commission and is in compliance with parts 15 and 68, FCC Rules and Regulations.

1. Identification in this User's Telephone Company. On the bottom of this equipment is a label indicating, among other information, the FCC Registration number and Hearing Equivalence Number (REN) for the equipment. We trust, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and will have all of the services coming to your telephone number is called. In most cases, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

- Notes**
- This equipment may not be used on cash services provided by the telephone company.
 - Party lines are subject to area limits, and therefore, you may not be able to use your own telephone equipment if you are in a party line. Check with your local telephone company.
 - Notices must be given to the telephone company upon permanent discontinuation of your telephone from your line.

2. Rights of the Telephone Company. The telephone company reserves the right to suspend service to any premises where parties use their telephone equipment in a manner that is not in accordance with the telephone company's terms and conditions of service. The telephone company may temporarily discontinue service to any premises where parties use their telephone equipment in a manner that is not in accordance with the telephone company's terms and conditions of service. The telephone company may temporarily discontinue service to any premises where parties use their telephone equipment in a manner that is not in accordance with the telephone company's terms and conditions of service. The telephone company may temporarily discontinue service to any premises where parties use their telephone equipment in a manner that is not in accordance with the telephone company's terms and conditions of service.

INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the distance between the telephone communication equipment and receiving antenna.
 - Consult the dealer or an experienced radio/television technician for additional suggestions.

HEARING AID COMPATIBILITY

This telephone system meets FCC standards for Hearing Aid Compatibility.

Model 2700VZ7601AM
13045070 (Rev. 0 E/S)
00-31
Printed in Korea

ATLINKS USA, Inc.
1630 North Meridian Street
Indianapolis, IN 46208
© 2000 ATLINKS USA, Inc.
Trademark(s) Registered
Marcale Registered

FCC NUMBER IS LOCATED ON THE CABINET BOTTOM
REN NUMBER IS LOCATED ON THE CABINET BOTTOM

WALL MOUNT INSTALLATION

Because it is necessary to charge the handset for 12 hours prior to connecting the phone for use the first time, it is better to leave the unit on a flat surface during initial charge before attempting to hang it on the wall.

1. Make sure the mounting bracket is securely fastened.

2. Set the **RANGE** switch to **DN**.

3. Place the handset in the case.

4. Connect the power supply into an AC outlet. The **CHARGE/IN USE** indicator comes on, indicating the battery is charging.

Allow the phone to charge for 12 hours before using the first time. If you don't charge the phone properly when you first set up the phone, performance of the battery will be compromised.

5. Remove the mounting bracket. Rotate it so that the bottom of the phone is flat.

Reattach the mounting bracket by inserting the tabs into the slots on the top of the unit first, and then snapping the bottom tabs into place.

6. Plug the telephone line cord into a modular wall jack. Then stuff the excess line cord into the mounting bracket.

7. Slip the mounting hole over the wall plate posts and slide the unit down firmly into place. (Wall plate not included.)

8. Remove the handset lock; turn it upside down, and put it back in the slot. You need to do this so the handset doesn't fall out of the base.

9. Raise the base antenna.

NOTE: The phone automatically defaults to touch-tone dialing. To change to pulse (rotary) dialing, see "Tone/Pulse Dialing". If you don't know which type of service you have, check with the phone company.

CAUTION: Use only the ATLINKS USA 5-2499 power supply that came with this unit. Using other adapters may damage the unit.

CORDLESS PHONE BASICS

MUTE

Use the **MUTE** button to interrupt a phone conversation to talk privately with someone else in the room.

1. Press **MUTE** to activate mute feature (the **BAT LOW/MUTE** indicator blinks).
2. Press **MUTE** again to turn it off.

TOPE/PULSE DIALING

This adjustment allows you to select tone (touch-tone) or pulse (rotary) mode dialing.

TOPE

1. Make sure the phone is **OFF**.
2. Press and hold the **CHAN** button for 2 seconds until the phone beeps.
3. Press **TOPE**.

PULSE

1. Make sure the phone is **OFF**.
2. Press and hold the **CHAN** button for 2 seconds until the phone beeps.
3. Press **P**.

TEMPORARY TONE


This feature enables pulse (rotary) service phone users to access touch-tone services offered by banks, credit card companies, etc., by pressing the **TOPE** button to temporarily make the phone touch-tone compatible. To get information about your bank account, for example, you would:

1. Press the **TALK** button.
2. Call the bank's information line.
3. Press the **TOPE** button after your call is answered.
4. Follow the voice instructions to complete your transaction.
5. Hang up when finished. The phone returns to pulse (rotary) service.

PAGING THE HANDSET

Press the **PAGE** button on the base to locate a misplaced handset. When you press the **PAGE** button, the handset beeps. Press the **TALK** button when you locate the handset.

NOTE: You can still page the handset with the

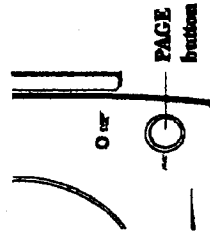

MAKING A CALL

After initial set-up, put handset in the base for 12 hours to charge the battery.

- The only two things you need to know to make a call are:
- Press the TALK button before you dial.
- Press TALK or place the handset in the base to hang up.

IN USE INDICATOR

You know the phone is on when you see the IN USE indicator on the handset light.

REDIAL

Press the TALK button, then press the RE/PA (redial/pause) button to redial the last number you called (up to 32 digits).

RECEIVING A CALL

To answer a call, you must press the TALK button before you can talk.

FLASH

Use the FLASH button to activate custom calling services such as Call Waiting or Call Transfer, which are available through your local phone company.



TIP: If you press the TALK button to activate custom calling services such as call waiting, you'll hang up the phone. Press FLASH instead.

VOLUME

The VOL button controls the volume of the handset's earpiece.

RINGER SWITCH

The hand/ringer switch can be set to ON or OFF if the switch is off, the unit will not ring.

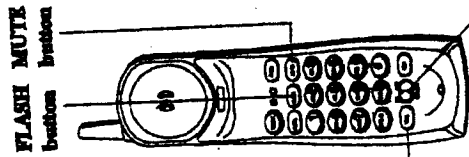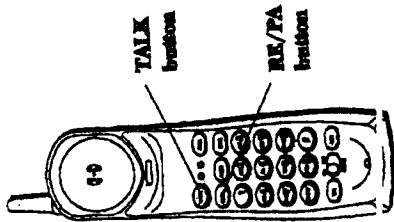

CHANNEL BUTTON

If you ever experience any interference or don't have clear voice quality, press the CHAN button on the handset to advance to another channel.

MEMORY

Store up to 10 numbers in memory for quick dialing.

STORING A NUMBER IN MEMORY

1. Make sure the phone is OFF.
2. Press the MEM button.
3. Dial the number (up to 10 digits).
4. Press MEM.
5. Press any number key (0-9) to store the phone number in that memory location.


CHANGING A STORED NUMBER

Use the same procedure to change a stored number as you do to store a number—you're just replacing the phone number with a different number.

STORING A REDIAL NUMBER

1. Make sure the phone is OFF.
2. Press MEM.
3. Press RE/PA.
4. Press MEM.
5. Press any number key (0-9) to store the phone number in that memory location.

CHAN button



STORING A PAUSE IN MEMORY

Use the RE/PA button to insert a pause when a delay is needed in the dialing sequence (for example, when you must dial a 9 to get an outside line or when you must enter codes to access your bank's information line). Each pause counts toward the 20-digit limit.

If you need to dial 9 to get an outside line and want to store a number in memory without having to dial 9 each time, you would:

1. Make sure the phone is OFF.
2. Press RE/PA.
3. Press 9.
4. Press RE/PA.
5. Dial the phone number you want to store in memory.
6. Press MEM.
7. Press any number key (0-9) to store the phone number in that memory location.

TIP If you need a longer pause, press RE/PA button more times.

DIALING A STORED NUMBER

1. Make sure the phone is ON by pressing the TALK button.
2. Press MEM.
3. Press the number (0-9) for the desired memory location. The number dials automatically.

IMPORTANT: If you make test calls to emergency numbers stored in memory, remain on the line and briefly explain the reason for the call to the dispatcher. Also, it's a good idea to make these calls in off-peak hours, such as early morning or late evening.

HEADSET AND BELT CLIP OPERATION


CONNECTING A

HEADSET TO THE

HANDSET

For hands free conversation, connect this

Headset plug

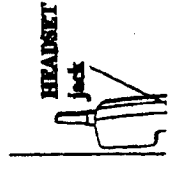

BATTERY SAFETY PRECAUTIONS

- Do not burn, disassemble, mistreat, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the battery listed in the User's Guide.
- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.

NOTE: The ERBC seal on the battery used in your ATLINES USA product indicates that we are participating in a program to collect and recycle Nickel Cadmium batteries throughout the United States. Please call 1-800-8-BATTERY for information or contact your local recycling center.

TROUBLESHOOTING GUIDE

In case of difficulty, please check the following Troubleshooting Guide before seeking service.

Problem	Solution
No dial tone	<ul style="list-style-type: none"> • Check installation: <ul style="list-style-type: none"> - Is the base power cord connected to a working outlet? - Is CHARGE/IN USE indicator on? - Is the telephone line cord connected to the baseunit and the wall jack? • Disconnect the base from the walljack and connect another phone to the same jack. If there is no dial tone in the second phone, the problem might be your wiring or local service. • Is the handset out of the baseunit's range? Move closer to the baseunit. • Make sure the battery is properly charged (12 hours). • Is the battery pack installed correctly? • If the phone still does not work, disconnect the power cord and remove the battery pack. Then reconnect the power cord and reinstall the battery pack. Place handset in the base for 10 seconds to allow it to reinitialize.

MAKING A CALL


... base for 12 hours to



CHANNEL BUTTON


... experience any interference or don't have clear voice quality, press the

number out.

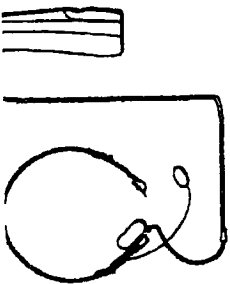

Adjust the handset to rest comfortably on top of your head and over your ear. Move the microphone to approximately 2 to 3 inches from your mouth.

- Press the TALK button to answer or place a call before using the handset.

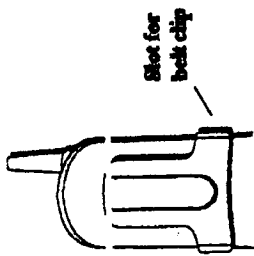

CONNECTING THE BELT CLIP

REAR CLIP


There are two slots, one on each side of the handset.

- Attach the belt clip by inserting the sides of the belt clip into the slots. Snap the ends of the belt clip into place.

CHANGING THE BATTERY

Make sure the telephone is OFF before you replace battery.

1. Remove the battery compartment door.
2. Disconnect the cord attached to the battery pack and remove the battery pack from the handset.
3. Insert the new battery pack and connect the cord into the jack inside the handset.
4. Put the battery compartment door back on.
5. Place handset in the base to charge. If you don't charge the handset battery properly (for 12 hours) when you first set up the phone and/or when you install a new battery pack, the battery's long-term performance will be compromised.

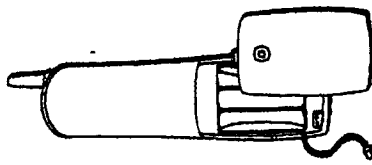

Dial tone is OK, but can't dial out	<ul style="list-style-type: none"> • Make sure the tone/pulse setting is programmed correctly. • Make sure the RINGER switch on the handset is turned to ON. • You may have too many extension phones on your line. Try unplugging some phones. • See solutions for "No dial tone."
Handset does not ring	<ul style="list-style-type: none"> • Press the VOL button to adjust the volume to the desired ringing level.
Cannot hear phone conversation	<ul style="list-style-type: none"> • Change channels. • Is handset out of range? Move closer to the base. • Does the base need to be relocated? • Charge handset battery. • Make sure base is not plugged into an outlet with another household appliance.
Range is shorter than normal	<ul style="list-style-type: none"> • Press the CHAN button during the conversation to select a new channel. • Position the base antenna upward.
Battery will not hold a charge or is fully charged and the BATTERY LOW lights	<ul style="list-style-type: none"> • Be sure you are sufficiently charging the battery. When the battery has been charged for 12 hours, you can expect approximately 4 hours of talk time. • Check to be sure battery contacts on both the handset and the base are making contact and are clean; free of dirt or lint. • When the handset is placed in the base, check that the base CHARGE/IN USE indicator is on.

ACCESSORY ORDER FORM

DESCRIPTION	CATALOG NUMBER (white)	CATALOG NUMBER (black)	PRICE*	QUANTITY	TOTAL
Belt clip	5-2452	5-2451	\$5.61		
Headset	5-2444	5-2405			
Replacement Battery		5-2450	\$21.35		

To order, call 1-800-338-8376 (for accessories only) or complete this order form.

For credit card purchases
Your complete charge card number, its expiration date and your signature are necessary to process all charge card orders.
Copy your complete account number from your VISA card.

My card expires:

My card expires:

Copy your complete account number from your Master Card or Discover.

Copy the number above your name on the Master Card

Copy the number above your name on the Master Card

My card expires:

My card expires:

Authorized Signature

*Prices are subject to change without notice.

Dial tone is OK, but can't dial out
• Make sure the tone/pulses setting is programmed correctly.

- | Problem | Solution |
|--|---|
| BAT LOW indicator stays on | <ul style="list-style-type: none"> Place handset in base for 10 seconds to reset the phone. If that doesn't work, charge battery for 12 hours. |
| Memory Dialing doesn't work | <ul style="list-style-type: none"> Did you program the memory location keys correctly? Did you follow proper dialing sequence? Make sure the tone/pulses setting is programmed correctly. |
| Unit locks up and communication between the base and the handset | <ul style="list-style-type: none"> If the phone still does not work, disconnect the power cord and remove the battery pack. Then reconnect the power cord and reinsert the battery pack. Place handset in the base for 10 seconds to allow it to reinitialize. If a power outage occurs while the handset is away from the base, the handset must be returned to the base when the power returns. |

LIMITED WARRANTY

- What your warranty covers:
- Any defect in materials or workmanship.
- For how long after your purchase:
- One year.
- (The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)
- What we will do:
- Provide you with a new or, at our option, a refurbished unit.
 - The exchange unit is under warranty for the remainder of the original product's warranty period.
- How to make a warranty claim:
- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
 - Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:
- Thomson Consumer Electronics, Inc.
11721 B Alameda Ave.
Beesboro, Texas 79827



Warranty.

- Insure your shipment for loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
- A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

SERVICE

The FCC requires this product to be serviced only by the manufacturer or its authorized service agents. In accordance with FCC requirements, changes or modifications not expressly approved by ATLINKS USA could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this Guide or call Consumer Information, 1-800-446-0322.

Attach your sales receipt to this booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date _____ Name of store _____

Sales Tax.....\$
 We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.

Use VISA or MasterCard or Discover, preferably. Money order or check must be in U.S. currency only. No C.O.D. or Cash. All accessories are subject to availability. Where applicable, we will ship a replacement model.

Shipping/Handling.....\$ **55.00**

Total Amount Enclosed.....\$

Mail order form and money order or check (in U.S. currency) made payable to Thomson Consumer Electronics, Inc. Inc.

TCE

Mail Order Department

P.O. Box 8419

Reids, PA 17533-9419

Name _____ Apt. _____

Address _____

City _____ State _____ ZIP _____

Daytime Phone Number (_____) _____

Please make sure that this form has been filled out completely.

CUSTOMER: CUT ALONG DOTTED LINE ✂