

***EXHIBIT D***

***User Manual***

1ST PROOF



2-911SST/2-912SST/2-913SST

**Digital Spread Spectrum 900MHz  
Cordless Telephone  
User's Guide**

*We bring good things to life.*

Checked by:

ELECT ENGR:

DATE:

11/1/94

h. m. j. m. s.



## FCC REGISTRATION INFORMATION

Your GE telephone equipment is registered with the Federal Communications Commission and is in compliance with parts 15 and 68, FCC Rules and Regulations.

### 1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the FCC Registration number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

#### Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.

### 2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

## INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.


## HEARING AID COMPATIBILITY

This telephone system meets FCC standards for Hearing Aid Compatibility.

FCC NUMBER IS LOCATED ON THE CABINET BOTTOM  
REN NUMBER IS LOCATED ON THE CABINET BOTTOM


## GETTING STARTED

Make sure your package includes the items shown here:

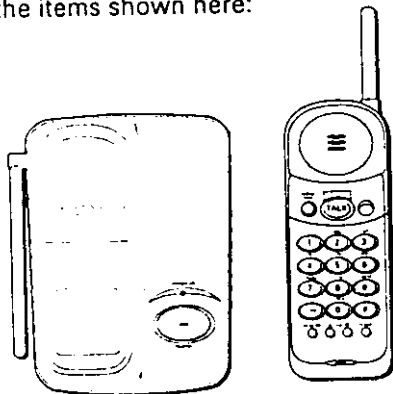

Base


Handset



Nickel-Cadmium  
Battery



Telephone line cord

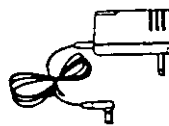


AC power adapter




Recharge cradle  
(optional for  
2-911 and 2-913)



Short telephone  
line cord

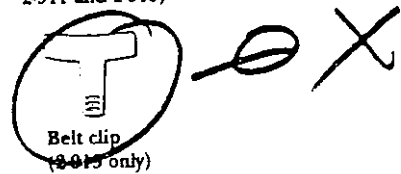

Belt clip  
(2-913 only)




Base plate for wall  
mount installation




Headset  
(2-913SST only)

## MODULAR JACK REQUIREMENTS

You need an RJ11 type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.

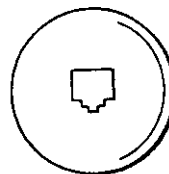

## DESKTOP INSTALLATION

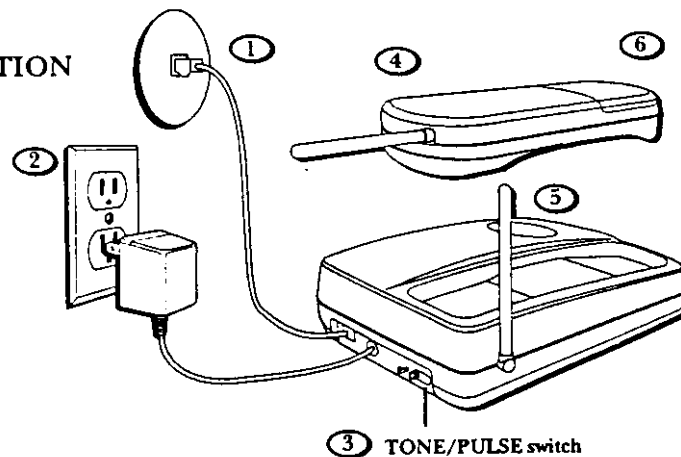

1. Plug the telephone line cord into the PHONE LINE jack on the back of the base and into a modular jack.
2. Plug the power supply cord into the 9V DC jack on the base and into an AC outlet.
3. Set the TONE/PULSE switch to TONE for touch-tone service, or PULSE for rotary service. If you don't know which type of service you have, check with the phone company.
4. Select RINGER ON or OFF (on the side of handset). When you select OFF, the handset doesn't ring.
5. Raise the base antenna.
6. Place handset in the base to charge for 12 hours. The CHARGE/IN USE light comes to indicate that the battery is charging.

If you don't charge the handset battery properly (for 12 hours) when you first set up the phone, the battery's long-term performance will be compromised.

**NOTE:** Use only the Thomson AC power adapter that came with this unit (5-2416). Using other adapters may damage the unit.

## ANYROOM™ RECHARGE CRADLE

(optional for 2-911 and 2-913)

In addition to recharging the cordless telephone, batteries in the base unit, you can use the Anyroom™ recharge cradle anywhere there is an AC power outlet.


When fully charged, the battery pack provides sufficient power to enable the cordless phone to be left out of the recharge cradle for prolonged periods and still function properly. However, to maintain adequate power, you will need to charge the battery pack every few days by returning the cordless phone to the Anyroom™ recharge cradle or to the base unit.

Periodically clean the charging contacts on the cordless phone, Anyroom™ recharge cradle, and base unit with a soft cloth.

### CHARGING THE BATTERY IN THE RECHARGE CRADLE

1. Plug the AC line cord into an AC outlet.
2. Place handset in the Recharge Cradle to charge for 12 hours. The CHARGE indicator light comes on indicating that the battery is charging.

(If need to alter  
the art so the  
antenna is on the  
right side.)

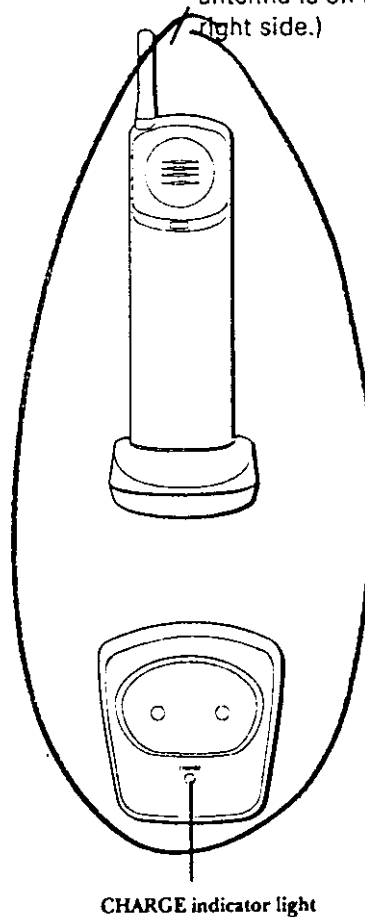

CHARGE indicator light

## CORDLESS PHONE BASICS

### MAKING A CALL

After initial set up, the handset battery should be charged for at least 12 hours.

The only two things you need to know to make a call are:

- Press the TALK button before you dial. If you try to make a call when you're too far away from the base, the handset beeps.
- Press TALK or place the handset in the base to hang up.

### TALK LIGHT


You know the phone is on when you see the TALK button on the handset light. The CHARGE/IN USE light on the base blinks.

### REDIAL

Press the TALK button, then press the REDIAL/PAUSE button to redial the last number (up to 32 digits) you called.

### RECEIVING A CALL


To answer a call when the handset is out of the base, you must press the TALK button before you can talk.

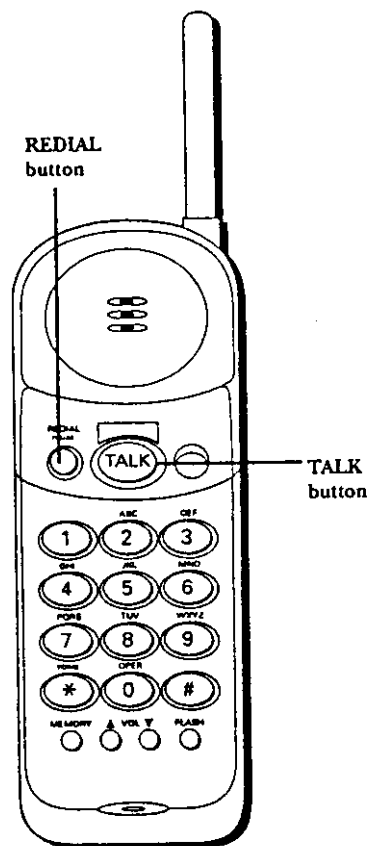

## TEMPORARY TONE

This feature enables people who have pulse (rotary) service to access touch-tone services offered by banks, credit card companies, etc., by pressing the tone button to temporarily make the phone touch-tone compatible. To get information about your bank account, for example, you would:


1. Press the TALK button.
2. Call the bank's information line.
3. Press the TONE button after your call is answered.
4. Follow the bank's voice instructions to complete your transaction.
5. Hang up when finished. The phone returns to pulse (rotary) service.

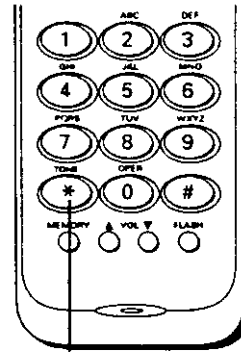

Tone button

## PAGING THE HANDSET

Press the PAGE/FIND button on the base to get the attention of somebody who is using the handset or to locate a misplaced handset. When you press PAGE/FIND on the base, the handset beeps (the CHARGE/IN USE light on the base blinks). Press the TALK button when you locate the handset to stop the PAGE/FIND feature. Remember that the RINGER switch on the side of the handset must be ON in order for the handset to beep.

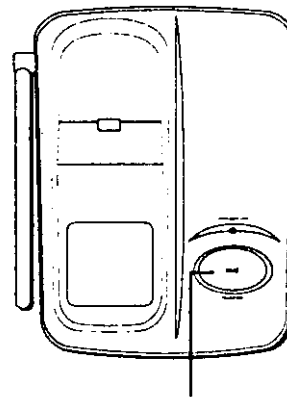

PAGE/FIND button

**DIALING A STORED NUMBER**

1. Press the TALK button to get a dial tone.
2. Press MEMORY.
3. Press any number key (01-20) to store the dialed number in that memory location.

**ADDING A PAUSE WHEN YOU STORE A NUMBER IN MEMORY**

Use the REDIAL/PAUSE button to insert a pause in the dialing sequence when you store a number (for example, when you must dial 9 to get an outside line or enter codes to access your bank's information line).

To add a pause because you must dial 9 to get an outside line:

1. Press MEMORY.
2. Press 9.
3. Press REDIAL/PAUSE button two times.
4. Dial the phone number.
5. Press MEMORY.
6. Use the keypad to enter a 2-digit number (01-20) to store the number in that memory location (the phone beeps).

## HANDSET BATTERY INFORMATION

---

### BATTERY SAFETY PRECAUTIONS

- Don't disassemble, mutilate, puncture, wet, or dispose of battery in fire. Like other batteries of this type, if it is burned or punctured, it could release toxic materials which can cause injury.
- Keep batteries out of the reach of children.



**NOTE:** The RBRC seal on the battery used in your Thomson Consumer Electronics product indicates that we are participating in a program to collect and recycle Nickel Cadmium batteries throughout the United States of America. Please call 1-800-8-BATTERY for information or contact your local recycling center.

## TROUBLESHOOTING GUIDE

In case of difficulty, please check the following Troubleshooting Guide before seeking service.

<i>Problem</i>	<i>Solution</i>
No dial tone	<ul style="list-style-type: none"> <li>• Check installation:               <ul style="list-style-type: none"> <li>— Is the base power cord connected to a working outlet?</li> <li>— Is TALK light on?</li> <li>— Is the telephone line cord connected to the base unit and the wall jack?</li> </ul> </li> <li>• Disconnect the base from the wall jack and connect another phone to the same jack. If there is no dial tone in the second phone, the problem might be your wiring or local service.</li> <li>• Is the handset out of range of the base?</li> <li>• Make sure the battery is properly charged (12 hours).</li> <li>• Is the battery pack installed correctly? See page 3.</li> <li>• Did the handset beep when you pressed the TALK button? Did the TALK light come on? The battery may need to be charged.</li> <li>• Place handset in base for 10 seconds to reset the phone.</li> <li>• If the phone still does not work, disconnect the power cord and remove the battery pack. Then reconnect the power cord and reinstall the battery pack. Place handset in the base for 10 seconds to allow it to reinitialize.</li> </ul>
Dial tone is OK, but can't dial out	<ul style="list-style-type: none"> <li>• Make sure the TONE/PULSE switch on the base is set correctly (see pp. 4-5).</li> </ul>
Handset does not ring	<ul style="list-style-type: none"> <li>• Make sure the RINGER ON/OFF switch on the base is turned to ON.</li> <li>• You may have too many extension phones on your line. Try unplugging some phones.</li> <li>• See solutions for "No dial tone."</li> </ul>
Cannot hear phone	<ul style="list-style-type: none"> <li>• Press VOL up button on the handset.</li> </ul>
You experience noise, or fading in and out	<ul style="list-style-type: none"> <li>• Charge battery.</li> <li>• Is handset out of range? Move closer to the base.</li> <li>• Does the base need to be relocated?</li> <li>• Make sure base is not plugged into an outlet with another household appliance.</li> </ul>

## **GENERAL PRODUCT CARE**

---

To keep your telephone working and looking good, follow these guidelines:

- Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the handset, as well as other rough treatment to the phone.
- Clean the phone with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.
- Periodically clean the charge contacts on the handset and base with a soft cloth.

## INDEX

---

### A

Accessory Order Form 23

### B

Battery 16

Belt Clip 9

#### Buttons

FLASH 11

MEMORY 12, 13, 14, 15

PAGE/FIND 12

PHONE ON/OFF 10

REDIAL 10

TONE 12

### C

Chain Dialing 15

Chain Dialing from Memory 15

Changing a Stored Number 13

CHARGE/IN USE light 6, 7, 8

Charging the Battery in the Recharge  
Cradle 8

Cleaning the Phone 20

Connecting a Headset to the Handset 9

Connecting the Belt Clip 9

### D

Dialing a Stored Number 14

### F

FLASH button 11

### H

Handset Setup 5

Headset 9

### I

Installation 6

Installation, desktop 6

Installation, wall mount 7

### M

Making a Call 10

MEMORY button 12, 13, 14, 15

Memory feature 13

Memory location 14, 15

### O

Order form 23

### P

PAGE/FIND button 12

Paging the Handset 12

PHONE ON/OFF 10

Poor Reception 21

Product Care 20

### R

Receiving a Call 10

Recharge Cradle 8

REDIAL 10

Ringer switch 12

### S

Service 21

Storing a Number in Memory 13

### T

Temporary Tone 12

TONE button 12

Troubleshooting Guide 18

### V

Volume Button (VOL) 11

### W

Wall Mount Installation 7

Warranty 24

## LIMITED WARRANTY

---

### What your warranty covers:

- Any defect in materials or workmanship.

### For how long after your purchase:

- One year.  
(The warranty for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

### What we will do:

- Provide you with a new, or at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

### How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:

Thomson Consumer Electronics, Inc.

Product Exchange Center

328 Spur Drive

El Paso, Texas 79906

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you prepaid freight.

### What your warranty *does not* cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

### Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

### How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

### If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

Model 2-911SST/9-12SST/9-13SST  
20929210 (Rev. 0 E/S)  
98-29  
Printed in Malaysia

 **THOMSON CONSUMER ELECTRONICS**

© 1998 Thomson Consumer Electronics, Inc.  
P.O. BOX 1976, Indianapolis, IN 46206  
Trademark(s) ® Registered  
Marca(s) Registrada(s)

***EXHIBIT D***

***User Manual***

1ST PROOF



2-911SST/2-912SST/2-913SST  
**Digital Spread Spectrum 900MHz  
Cordless Telephone  
User's Guide**

*We bring good things to life.*

Checked by:

ELECT ENGR:

DATE:

AM 11/21/11

W.L. THOMAS

## FCC REGISTRATION INFORMATION

Your GE telephone equipment is registered with the Federal Communications Commission and is in compliance with parts 15 and 68, FCC Rules and Regulations.

### 1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the FCC Registration number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

#### Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.

### 2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

## INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.


## HEARING AID COMPATIBILITY

This telephone system meets FCC standards for Hearing Aid Compatibility.

FCC NUMBER IS LOCATED ON THE CABINET BOTTOM  
REN NUMBER IS LOCATED ON THE CABINET BOTTOM


## GETTING STARTED

Make sure your package includes the items shown here:

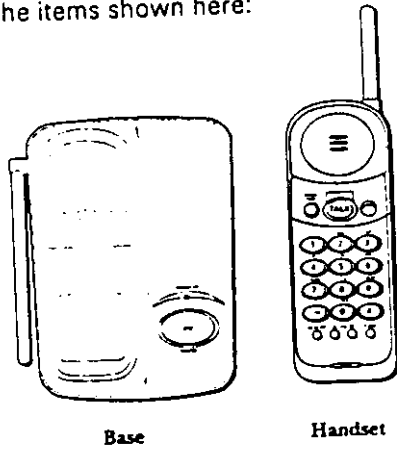

Base


Handset



Nickel-Cadmium  
Battery



Telephone line cord

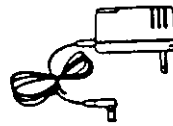


AC power adapter




Recharge cradle  
(optional for  
2-911 and 2-913)



Short telephone  
line cord

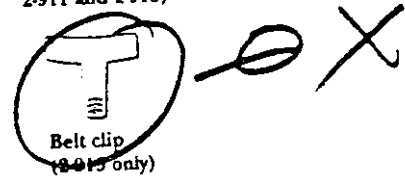

Belt clip  
(2-913 only)




Base plate for wall  
mount installation




Headset  
(2-913SST only)

## MODULAR JACK REQUIREMENTS

You need an RJ11 type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.

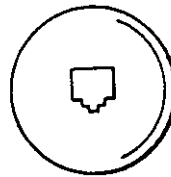

## DESKTOP INSTALLATION

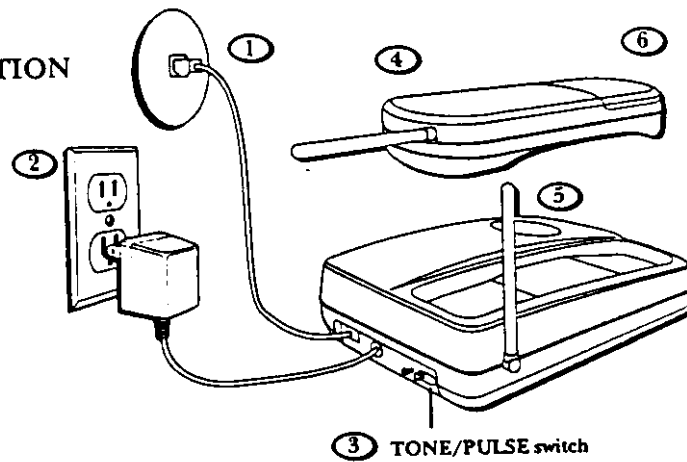

1. Plug the telephone line cord into the PHONE LINE jack on the back of the base and into a modular jack.
2. Plug the power supply cord into the 9V DC jack on the base and into an AC outlet.
3. Set the TONE/PULSE switch to TONE for touch-tone service, or PULSE for rotary service. If you don't know which type of service you have, check with the phone company.
4. Select RINGER ON or OFF (on the side of handset). When you select OFF, the handset doesn't ring.
5. Raise the base antenna.
6. Place handset in the base to charge for 12 hours. The CHARGE/IN USE light comes to indicate that the battery is charging.

If you don't charge the handset battery properly (for 12 hours) when you first set up the phone, the battery's long-term performance will be compromised.

**NOTE:** Use only the Thomson AC power adapter that came with this unit (5-2416). Using other adapters may damage the unit.

## ANYROOM™ RECHARGE CRADLE

(optional for 2-911 and 2-913)

In addition to recharging the cordless telephone, batteries in the base unit, you can use the Anyroom™ recharge cradle anywhere there is an AC power outlet.


When fully charged, the battery pack provides sufficient power to enable the cordless phone to be left out of the recharge cradle for prolonged periods and still function properly. However, to maintain adequate power, you will need to charge the battery pack every few days by returning the cordless phone to the Anyroom™ recharge cradle or to the base unit.

Periodically clean the charging contacts on the cordless phone, Anyroom™ recharge cradle, and base unit with a soft cloth.

### CHARGING THE BATTERY IN THE RECHARGE CRADLE

1. Plug the AC line cord into an AC outlet.
2. Place handset in the Recharge Cradle to charge for 12 hours. The CHARGE indicator light comes on indicating that the battery is charging.

(If need to alter the art so the antenna is on the right side.)

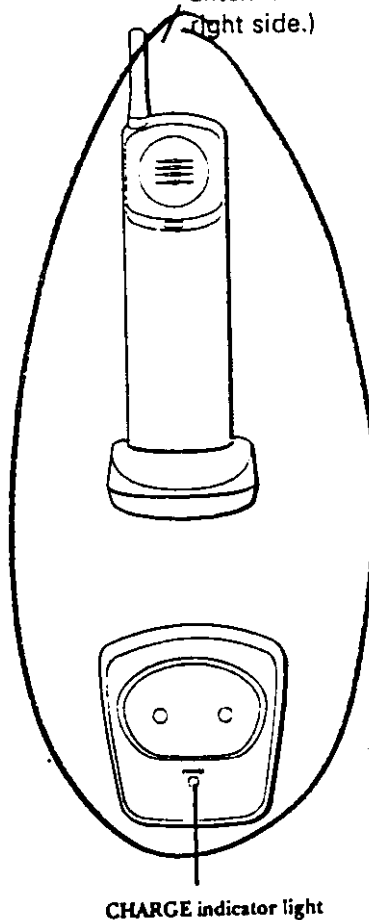

## **CORDLESS PHONE BASICS**

---

### **MAKING A CALL**

After initial set up, the handset battery should be charged for at least 12 hours.

The only two things you need to know to make a call are:

- Press the TALK button before you dial. If you try to make a call when you're too far away from the base, the handset beeps.
- Press TALK or place the handset in the base to hang up.

### **TALK LIGHT**


You know the phone is on when you see the TALK button on the handset light. The CHARGE/IN USE light on the base blinks.

### **REDIAL**

Press the TALK button, then press the REDIAL/PAUSE button to redial the last number (up to 32 digits) you called.

### **RECEIVING A CALL**


To answer a call when the handset is out of the base, you must press the TALK button before you can talk.

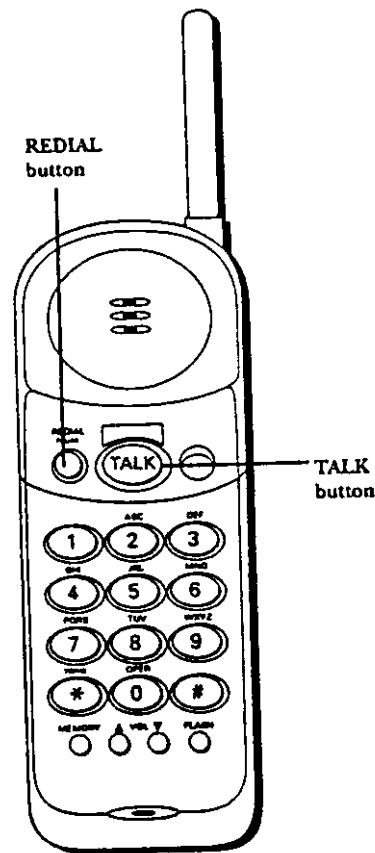

## TEMPORARY TONE

This feature enables people who have pulse (rotary) service to access touch-tone services offered by banks, credit card companies, etc., by pressing the tone button to temporarily make the phone touch-tone compatible. To get information about your bank account, for example, you would:


1. Press the TALK button.
2. Call the bank's information line.
3. Press the TONE button after your call is answered.
4. Follow the bank's voice instructions to complete your transaction.
5. Hang up when finished. The phone returns to pulse (rotary) service.

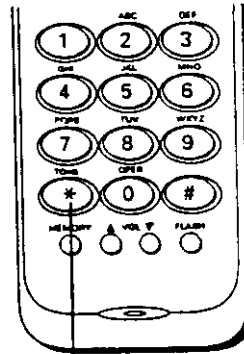

Tone button

## PAGING THE HANDSET

Press the PAGE/FIND button on the base to get the attention of somebody who is using the handset or to locate a misplaced handset. When you press PAGE/FIND on the base, the handset beeps (the CHARGE/IN USE light on the base blinks). Press the TALK button when you locate the handset to stop the PAGE/FIND feature. Remember that the RINGER switch on the side of the handset must be ON in order for the handset to beep.

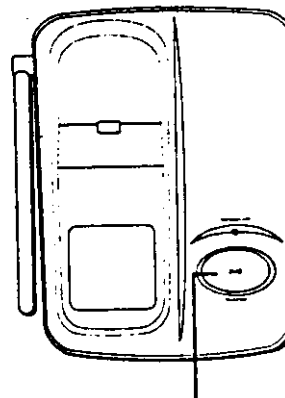

PAGE/FIND button

#### **DIALING A STORED NUMBER**

1. Press the TALK button to get a dial tone.
2. Press MEMORY.
3. Press any number key (01-20) to store the dialed number in that memory location.

#### **ADDING A PAUSE WHEN YOU STORE A NUMBER IN MEMORY**

Use the REDIAL/PAUSE button to insert a pause in the dialing sequence when you store a number (for example, when you must dial 9 to get an outside line or enter codes to access your bank's information line).

To add a pause because you must dial 9 to get an outside line:

1. Press MEMORY.
2. Press 9.
3. Press REDIAL/PAUSE button two times.
4. Dial the phone number.
5. Press MEMORY.
6. Use the keypad to enter a 2-digit number (01-20) to store the number in that memory location (the phone beeps).

## HANDSET BATTERY INFORMATION

---

### BATTERY SAFETY PRECAUTIONS

- Don't disassemble, mutilate, puncture, wet, or dispose of battery in fire. Like other batteries of this type, if it is burned or punctured, it could release toxic materials which can cause injury.
- Keep batteries out of the reach of children.



**NOTE:** The RBRC seal on the battery used in your Thomson Consumer Electronics product indicates that we are participating in a program to collect and recycle Nickel Cadmium batteries throughout the United States of America. Please call 1-800-8-BATTERY for information or contact your local recycling center.

## 4

## TROUBLESHOOTING GUIDE

In case of difficulty, please check the following Troubleshooting Guide before seeking service.

<i>Problem</i>	<i>Solution</i>
No dial tone	<ul style="list-style-type: none"><li>• Check installation:<ul style="list-style-type: none"><li>— Is the base power cord connected to a working outlet?</li><li>— Is TALK light on?</li><li>— Is the telephone line cord connected to the base unit and the wall jack?</li></ul></li><li>• Disconnect the base from the wall jack and connect another phone to the same jack. If there is no dial tone in the second phone, the problem might be your wiring or local service.</li><li>• Is the handset out of range of the base?</li><li>• Make sure the battery is properly charged (12 hours).</li><li>• Is the battery pack installed correctly? See page 3.</li><li>• Did the handset beep when you pressed the TALK button? Did the TALK light come on? The battery may need to be charged.</li><li>• Place handset in base for 10 seconds to reset the phone.</li><li>• If the phone still does not work, disconnect the power cord and remove the battery pack. Then reconnect the power cord and reinstall the battery pack. Place handset in the base for 10 seconds to allow it to reinitialize.</li></ul>
Dial tone is OK, but can't dial out	<ul style="list-style-type: none"><li>• Make sure the TONE/PULSE switch on the base is set correctly (see pp. 4-5).</li></ul>
Handset does not ring	<ul style="list-style-type: none"><li>• Make sure the RINGER ON/OFF switch on the base is turned to ON.</li><li>• You may have too many extension phones on your line. Try unplugging some phones.</li><li>• See solutions for "No dial tone."</li></ul>
Cannot hear phone	<ul style="list-style-type: none"><li>• Press VOL up button on the handset.</li></ul>
You experience noise, or fading in and out	<ul style="list-style-type: none"><li>• Charge battery.</li><li>• Is handset out of range? Move closer to the base.</li><li>• Does the base need to be relocated?</li><li>• Make sure base is not plugged into an outlet with another household appliance.</li></ul>

## **GENERAL PRODUCT CARE**

---

To keep your telephone working and looking good, follow these guidelines:

- Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the handset, as well as other rough treatment to the phone.
- Clean the phone with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.
- Periodically clean the charge contacts on the handset and base with a soft cloth.

## INDEX

---

### A

Accessory Order Form 23

### B

Battery 16

Belt Clip 9

#### Buttons

FLASH 11

MEMORY 12, 13, 14, 15

PAGE/FIND 12

PHONE ON/OFF 10

REDIAL 10

TONE 12

### C

Chain Dialing 15

Chain Dialing from Memory 15

Changing a Stored Number 13

CHARGE/IN USE light 6, 7, 8

Charging the Battery in the Recharge  
Cradle 8

Cleaning the Phone 20

Connecting a Headset to the Handset 9

Connecting the Belt Clip 9

### D

Dialing a Stored Number 14

### F

FLASH button 11

### H

Handset Setup 5

Headset 9

### I

Installation 6

Installation, desktop 6

Installation, wall mount 7

### M

Making a Call 10

MEMORY button 12, 13, 14, 15

Memory feature 13

Memory location 14, 15

### O

Order form 23

### P

PAGE/FIND button 12

Paging the Handset 12

PHONE ON/OFF 10

Poor Reception 21

Product Care 20

### R

Receiving a Call 10

Recharge Cradle 8

REDIAL 10

Ringer switch 12

### S

Service 21

Storing a Number in Memory 13

### T

Temporary Tone 12

TONE button 12

Troubleshooting Guide 18

### V

Volume Button (VOL) 11

### W

Wall Mount Installation 7

Warranty 24

## LIMITED WARRANTY

---

### What your warranty covers:

- Any defect in materials or workmanship.

### For how long after your purchase:

- One year.

(The warranty for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

### What we will do:

- Provide you with a new, or at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

### How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:

Thomson Consumer Electronics, Inc.  
Product Exchange Center  
328 Spur Drive  
El Paso, Texas 79906

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you prepaid freight.

### What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

### Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

### How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

### If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

Model 2-911SST/9-12SST/9-13SST  
20929210 (Rev. 0 E/S)  
98-29  
Printed in Malaysia

 **THOMSON CONSUMER ELECTRONICS**  
© 1998 Thomson Consumer Electronics, Inc.  
P.O. BOX 1976, Indianapolis, IN 46206  
Trademark(s) ® Registered  
Marca(s) Registrada(s)

Microsoft Mail V3.0 (FPM)Microsoft Mail Note  
4 Ng Baby  
Ng Susan (Mac)  
ect: 2-911/12/13SST Instruction Book  
: 1998-02-11 11:28  
rity:  
sage ID: B46A85E1  
nt message ID: E5A08468  
versation ID: 2-911/12/13SST Instruction Book

-----  
baby

-----  
n: Goh King Hoe  
Levine Mary; Watts Grahame; Mohan Chandra (Indy); Riedl Bill (INDY);  
vlas Robert  
DeRuntz Paula (SOVA); Gan Tia Seng; Kok Marn Lay; Ng Baby; Thong Wei  
ng  
ject: RE: 2-911/12/13SST Instruction Book  
e: Wednesday, February 11, 1998 11:14AM

Mary,

me comments :

Pg 8 - The Recharge Cradle picture looks different. 2-912SSTA RC is flat  
e and HS is face down during charging. Non  
standing type.

Pg 9 - Headset jack of 2-913SSTA is at the bottom near base of HS(near  
ttery cover area) opposite the antenna side.

believe Jim Porter's Mech Engr has all the drawing.

L, Thong and Baby - Pse feedback to Mary by today if you have comments.

egards  
oh  
-----

om: Levine Mary  
o: Riedl Bill (INDY); Goh King Hoe; Mohan Chandra (Indy); Watts Grahame;  
owles Robert  
c: Gan Tia Seng; DeRuntz Paula (SOVA)  
ubject: 2-911/12/13SST Instruction Book  
ate: Friday, February 06, 1998 2:05PM

<File Attachment: 2-911121.PDF>>

Please review the attached IB. Your comments are due back to me by the  
close of business, Wednesday, 11-Feb-97. Please review graphics as well as  
ext. No spell checking necessary.

Please let me know immediately should you have any problems opening the  
file.

Regards,

DESCRIPTION	CATALOG NUMBER	PRICE*	QUANTITY	TOTAL
Replacement handset battery	5-2419	\$25.25		
AC power adapter (white) for Model 2-913SST	5-2416	\$13.35		
Handset for Model 2-913SST	5-2360	\$12.60		
Belt Clip for Model 2-913SST				
Recharge Cradle	5-4082	?		


**Please make sure that this form has been filled out completely.**

23

## **CAUSES OF POOR RECEPTION**

---

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction can shield radio signals.
- You're too close to appliances such as microwaves, stoves, computers, etc.
- Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into an AC outlet with other electronic devices.
- Handset battery is low.
- You're out of range of the base.

## **SERVICE**

---

The FCC requires this product to be serviced only by the manufacturer or its authorized service agents. In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Consumer Electronics could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this Guide or call Consumer Information, 1-800-448-0329.

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date \_\_\_\_\_ Name of store \_\_\_\_\_


<i>Problem</i>	<i>Solution</i>
Unit beeps	<ul style="list-style-type: none"> <li>• You may be receiving an out-of-range alert, move closer to the base.</li> <li>• Place handset in base for 10 seconds to reset the phone. The CHARGE/IN USE light blinks one time when reset is successful.</li> <li>• Put handset in base for 12 hours to recharge battery.</li> <li>• Clean charging contacts on handset and base with a soft cloth or an eraser.</li> <li>• See solutions for "No dial tone."</li> <li>• Replace battery.</li> </ul>
TALK light keeps flashing	<ul style="list-style-type: none"> <li>• The base unit and the handset aren't connecting with each other. Place the handset in the base for 10-15 seconds (the CHARGE/IN USE light on the base blinks one time).</li> </ul>
Cannot hear the PAGE/FIND tone	<ul style="list-style-type: none"> <li>• Set the RINGER to ON.</li> </ul>
Range is shorter than normal	<ul style="list-style-type: none"> <li>• Position the base antenna upward.</li> </ul>
Battery will not hold a charge	<ul style="list-style-type: none"> <li>• Be sure you are sufficiently charging the battery. When the battery has been charged for 12 hours</li> <li>• Make sure battery contacts on both the handset and the base are making contact and are clean; free of dirt or lint.</li> <li>• When the handset is placed in the base, make sure that the base CHARGE/IN USE light is on.</li> </ul>
Memory Dialing does not work	<ul style="list-style-type: none"> <li>• Memory location must be 2 digits (i.e., 01,02, etc.).</li> <li>• Did you program the memory location keys correctly? See p. 9.</li> <li>• Did you follow proper dialing sequence? See pp. 10-11.</li> <li>• Make sure TONE/PULSE switch is correctly set. See pp. 4-5.</li> </ul>

### CHANGING THE BATTERY

Your cordless handset is powered by a nickel cadmium battery pack. The battery pack needs to be recharged periodically. A fully charged battery gives you approximately 4 hours of talk time or 7 days of stand-by time. Return the handset to the base whenever possible to keep the battery adequately charged.

The handset runs on a consumer-replaceable, nickel-cadmium battery pack. If you experience any of the following problems, you may need to replace the battery pack: short talk time, poor sound quality, limited range, CHARGE/IN USE light fails to light. Make sure phone is OFF before you replace battery.

1. Remove the battery compartment door.
2. Remove the battery pack.
3. Insert the new battery into the compartment on the back of the handset.
4. Replace the battery compartment door.
5. Return the handset to the base unit for at least 12 hours to adequately charge a new battery pack.

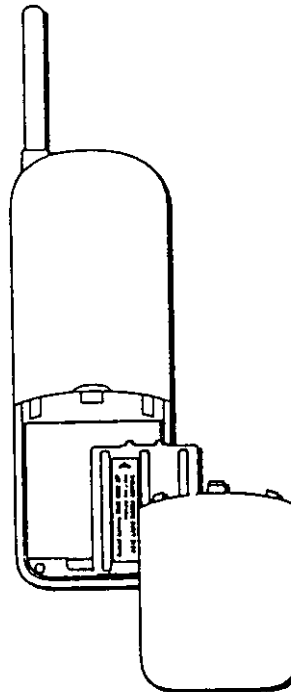

#### STORING A TEMPORARY TONE NUMBER IN MEMORY

1. Press the MEMORY button.
2. Dial the number (up to 16 digits).
3. Press the TONE button to switch to tone dialing. (The TONE counts as one digit.)
4. Enter authorization code/access numbers.
5. Press MEMORY.
6. Press any number key (01-20) to store the dialed number in that memory location.

#### CHAIN DIALING FROM MEMORY

Use this feature to make calls which require a sequence of numbers, for instance if you use a calling card for a frequently called long distance number. Basically, you dial each part of the sequence from memory. The following example shows how you can use chain dialing to make a call through a long distance service:

<i>The Number For</i>	<i>Memory Location</i>
Long distance access number	07
Authorization code	08
Frequently called long distance number	09

1. Press the TALK button to get a dial tone.
2. Press the MEMORY button and then press 07.
3. When you hear the access tone, press MEMORY and then press 08.
4. At the next access tone, press MEMORY and then 09.

## ADVANCED FEATURES

### THE MEMORY FEATURE

Store up to 20 numbers in memory for quick dialing.

#### STORING A NUMBER IN MEMORY


The phone must be OFF when you store numbers.

1. Press the MEMORY button (TALK light blinks).
2. Dial the number (up to 16 digits).
3. Press MEMORY.
4. Use the keypad to enter a 2-digit number (01-20) to store the number in that memory location (the phone beeps).

You'll hear an error tone if you press a button, such as FLASH, that can't be stored in memory or if you've tried to store more than 16 digits.

#### CHANGING A STORED NUMBER

Use the same procedure to change a stored number as you do to store a number—in a sense, you're just moving the phone number to a different memory location.

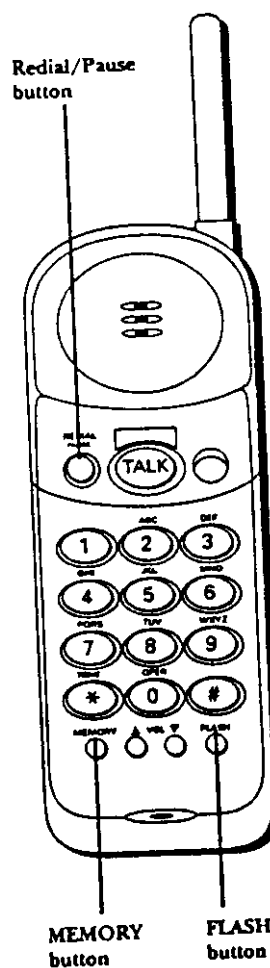

## FLASH BUTTON

Use the FLASH button to activate custom calling services such as call waiting or call transfer, which are available through your local phone company.

**IMPORTANT:** Don't use the TALK button to activate custom calling services such as call waiting, or you'll hang up the phone.

## ADJUSTING THE VOLUME

The VOL up and down buttons on the handset control the volume of the handset's earpiece and the ringer volume.

### HANDSET EARPIECE VOLUME


To change the volume of the handset's earpiece, press VOL up or down while you're talking on the phone.

### RINGER VOLUME

To adjust the ringer volume, press the VOL up or down buttons when the phone is on-hook (phone is inactive, TALK light is off).

## SELECTING A RING TONE

There are 4 ring tones built into your phone. To choose a ring tone, press FLASH followed by either 1, 2, 3, or 4 when the phone is on-hook (phone is inactive, TALK light is off).

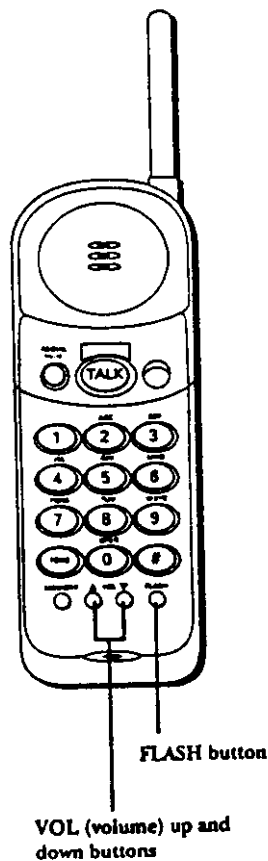

## HEADSET AND BELT CLIP OPERATION


(for use with the 2-913 only)

### CONNECTING A HEADSET TO THE HANDSET

For hands free conversation, connect the headset to the HEADSET jack as shown. The handset receiver and microphone are disabled when the headset is connected.

Adjust the headset to rest comfortably on top of your head and over your ear. Move the microphone to approximately 2 to 3 inches from your mouth.


- Press the TALK button to answer or place a call before using the headset.

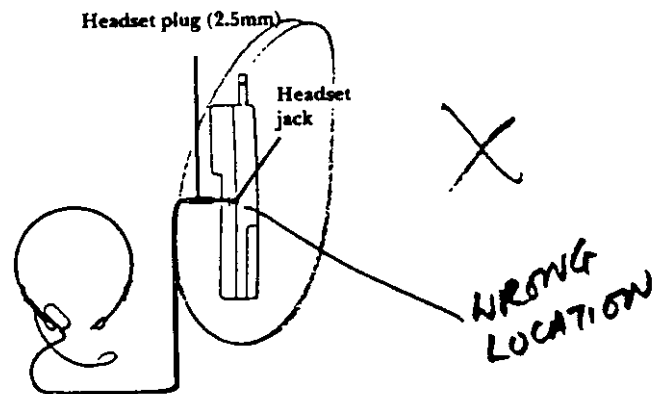

### CONNECTING THE BELT CLIP

There are two slots, one on each side of the handset.


- Attach the belt clip by inserting the sides of the belt clip into the slots. Snap the ends of the belt clip into place.

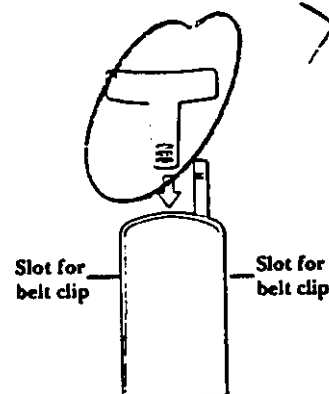

## WALL MOUNT INSTALLATION

1. Plug the short telephone line cord into the PHONE LINE jack on the back of the base and into a modular jack.
2. Plug the power supply cord into the 9V DC jack on the base and into an AC outlet.
3. Install the base plate by putting the tabs into the slots on the top of the unit first, and then snapping the bottom tabs into place.
4. Slip the mounting holes over the wall plate posts and slide the unit down firmly into place. (Wall plate not included.)
5. Set the TONE/PULSE switch to TONE for touch-tone service, or PULSE for rotary service. If you don't know which type of service you have, check with the phone company.
6. Select RINGER ON or OFF (on the side of handset). When you select OFF, the handset doesn't ring.
7. Raise the base antenna.
8. Place handset in the base to charge for 12 hours. The CHARGE/IN USE light comes on indicating that the battery is charging.

If you don't charge the battery properly (for 12 hours) when you first set up the phone, the battery's long-term performance will be compromised.

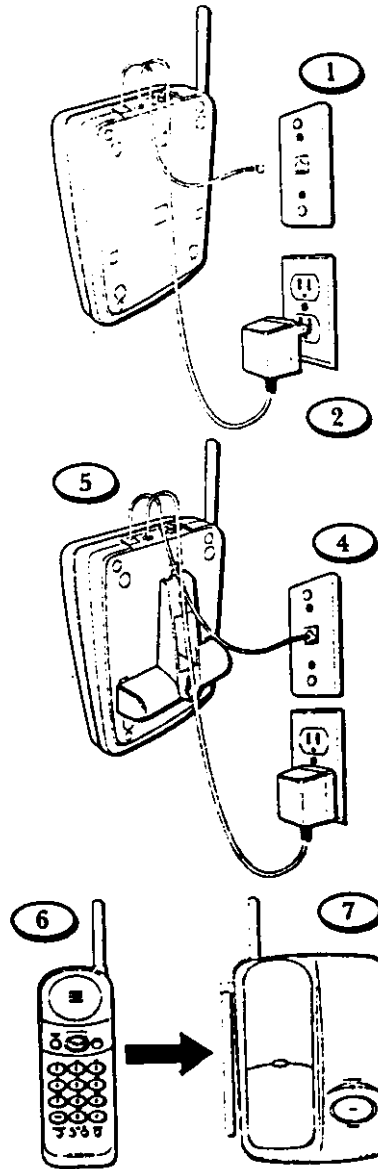


## HANDSET SETUP

1. Insert the battery into the compartment.
2. Install the battery compartment door.

**IMPORTANT:** If you don't charge the handset battery properly (for 12 hours) when you first set up the phone, the battery's long-term performance will be compromised.

**TIP:** In order to maximize your battery's use, we recommend that you periodically use the handset without returning it to the base to drain the battery completely, then recharge for 12 hours.

**NOTE:** Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless in case the power in your home goes out.

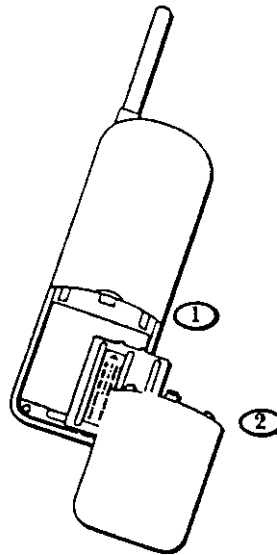

**INSTALLATION NOTE:** Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference continues, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

## INTRODUCTION

Your GE cordless telephone is designed to give you flexibility in use and high quality performance. To get the most from your new cordless telephone, we suggest that you take a few minutes right now to read through this instruction manual:

### TABLE OF CONTENTS

FCC REGISTRATION INFORMATION .....	2	SELECTING A RING TONE .....	11
INTERFERENCE INFORMATION .....	2	FLASH BUTTON .....	11
HEARING AID COMPATIBILITY .....	2	TEMPORARY TONE .....	12
GETTING STARTED .....	4	PAGING THE HANDSET .....	12
MODULAR JACK REQUIREMENTS .....	4	THE MEMORY FEATURE .....	13
HANDSET SETUP .....	5	STORING A NUMBER IN MEMORY ...	13
DESKTOP		CHANGING A STORED NUMBER .....	13
INSTALLATION .....	6	ADVANCED FEATURES .....	13
WALL MOUNT INSTALLATION .....	7	DIALING A STORED NUMBER .....	14
CHARGING THE BATTERY		ADDING A PAUSE WHEN YOU STORE A	
IN THE RECHARGE CRADLE .....	8	NUMBER IN MEMORY .....	14
ANYROOM™ RECHARGE CRADLE .....	8	STORING A TEMPORARY TONE NUMBER	
HEADSET AND BELT CLIP OPERATION ...	9	IN MEMORY .....	15
CONNECTING A HEADSET TO THE		CHAIN DIALING FROM MEMORY .....	15
HANDSET .....	9	HANDSET BATTERY INFORMATION .....	16
CONNECTING THE BELT CLIP .....	9	BATTERY SAFETY PRECAUTIONS .....	16
CORDLESS PHONE BASICS .....	10	CHANGING THE BATTERY .....	17
MAKING A CALL .....	10	TROUBLESHOOTING GUIDE .....	18
TALK LIGHT .....	10	GENERAL PRODUCT CARE .....	20
REDIAL .....	10	CAUSES OF POOR RECEPTION .....	21
RECEIVING A CALL .....	10	SERVICE .....	21
ADJUSTING THE VOLUME .....	11	INDEX .....	22
HANDSET EARPIECE VOLUME .....	11	ACCESSORY ORDER FORM .....	23
RINGER VOLUME .....	11	LIMITED WARRANTY .....	24





Microsoft Mail v3.0 IPM.Microsoft Mail.Note  
From: Ng Baby  
To: Ng Susan (Mac)  
Subject: 2-911/12/13SST Instruction Book  
Date: 1998-02-11 11:28  
Priority:  
Message ID: B46A85E1  
Content message ID: E5A08468  
Conversation ID: 2-911/12/13SST Instruction Book

---

..baby

---

From: Goh King Hoe  
To: Levine Mary; Watts Grahame; Mohan Chandra (Indy); Riedl Bill (INDY);  
Howles Robert  
Cc: DeRuntz Paula (SOVA); Gan Tia Seng; Kok Marn Lay; Ng Baby; Thong Wei  
Subject: RE: 2-911/12/13SST Instruction Book  
Date: Wednesday, February 11, 1998 11:14AM

Mary,

Some comments :

Pg 8 - The Recharge Cradle picture looks different. 2-912SSTA RC is flat  
top and HS is face down during charging. Non  
standing type.

Pg 9 - Headset jack of 2-913SSTA is at the bottom near base of HS(near  
battery cover area) opposite the antenna side.

Believe Jim Porter's Mech Engr has all the drawing.

Bill, Thong and Baby - Please feedback to Mary by today if you have comments.

Regards  
Bob

---

From: Levine Mary  
To: Riedl Bill (INDY); Goh King Hoe; Mohan Chandra (Indy); Watts Grahame;  
Howles Robert  
Cc: Gan Tia Seng; DeRuntz Paula (SOVA)  
Subject: 2-911/12/13SST Instruction Book  
Date: Friday, February 06, 1998 2:05PM

<<File Attachment: 2-911121.PDF>>

Please review the attached IB. Your comments are due back to me by the  
close of business, Wednesday, 11-Feb-97. Please review graphics as well as  
text. No spell checking necessary.

Please let me know immediately should you have any problems opening the  
file.

Regards,



## **CAUSES OF POOR RECEPTION**

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction can shield radio signals.
- You're too close to appliances such as microwaves, stoves, computers, etc.
- Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into an AC outlet with other electronic devices.
- Handset battery is low.
- You're out of range of the base.

## **SERVICE**

The FCC requires this product to be serviced only by the manufacturer or its authorized service agents. In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Consumer Electronics could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this Guide or call Consumer Information, 1-800-448-0329.

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date \_\_\_\_\_ Name of store \_\_\_\_\_


<i>Problem</i>	<i>Solution</i>
Unit beeps	<ul style="list-style-type: none"> <li>• You may be receiving an out-of-range alert, move closer to the base.</li> <li>• Place handset in base for 10 seconds to reset the phone. The CHARGE/IN USE light blinks one time when reset is successful.</li> <li>• Put handset in base for 12 hours to recharge battery.</li> <li>• Clean charging contacts on handset and base with a soft cloth or an eraser.</li> <li>• See solutions for "No dial tone."</li> <li>• Replace battery.</li> </ul>
TALK light keeps flashing	<ul style="list-style-type: none"> <li>• The base unit and the handset aren't connecting with each other. Place the handset in the base for 10-15 seconds (the CHARGE/IN USE light on the base blinks one time).</li> </ul>
Cannot hear the PAGE/FIND tone	<ul style="list-style-type: none"> <li>• Set the RINGER to ON.</li> </ul>
Range is shorter than normal	<ul style="list-style-type: none"> <li>• Position the base antenna upward.</li> </ul>
Battery will not hold a charge	<ul style="list-style-type: none"> <li>• Be sure you are sufficiently charging the battery. When the battery has been charged for 12 hours</li> <li>• Make sure battery contacts on both the handset and the base are making contact and are clean; free of dirt or lint.</li> <li>• When the handset is placed in the base, make sure that the base CHARGE/IN USE light is on.</li> </ul>
Memory Dialing does not work	<ul style="list-style-type: none"> <li>• Memory location must be 2 digits (i.e., 01,02, etc.).</li> <li>• Did you program the memory location keys correctly? See p. 9.</li> <li>• Did you follow proper dialing sequence? See pp. 10-11.</li> <li>• Make sure TONE/PULSE switch is correctly set. See pp. 4-5.</li> </ul>

### CHANGING THE BATTERY

Your cordless handset is powered by a nickel cadmium battery pack. The battery pack needs to be recharged periodically. A fully charged battery gives you approximately 4 hours of talk time or 7 days of stand-by time. Return the handset to the base whenever possible to keep the battery adequately charged.

The handset runs on a consumer-replaceable, nickel-cadmium battery pack. If you experience any of the following problems, you may need to replace the battery pack: short talk time, poor sound quality, limited range, CHARGE/IN USE light fails to light. Make sure phone is OFF before you replace battery.

1. Remove the battery compartment door.
2. Remove the battery pack.
3. Insert the new battery into the compartment on the back of the handset.
4. Replace the battery compartment door.
5. Return the handset to the base unit for at least 12 hours to adequately charge a new battery pack.

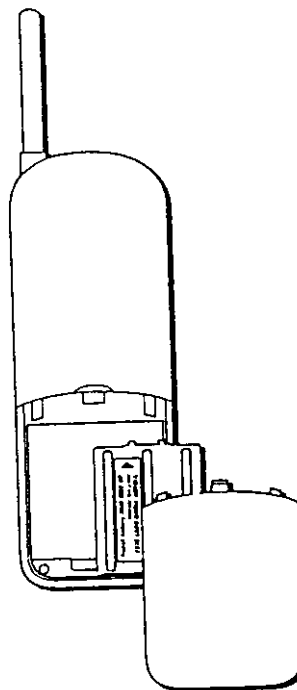

### STORING A TEMPORARY TONE NUMBER IN MEMORY

1. Press the MEMORY button.
2. Dial the number (up to 16 digits).
3. Press the TONE button to switch to tone dialing. (The TONE counts as one digit.)
4. Enter authorization code/access numbers.
5. Press MEMORY.
6. Press any number key (01-20) to store the dialed number in that memory location.

### CHAIN DIALING FROM MEMORY

Use this feature to make calls which require a sequence of numbers, for instance if you use a calling card for a frequently called long distance number. Basically, you dial each part of the sequence from memory. The following example shows how you can use chain dialing to make a call through a long distance service:

<i>The Number For</i>	<i>Memory Location</i>
Long distance access number	07
Authorization code	08
Frequently called long distance number	09

1. Press the TALK button to get a dial tone.
2. Press the MEMORY button and then press 07.
3. When you hear the access tone, press MEMORY and then press 08.
4. At the next access tone, press MEMORY and then 09.

## ADVANCED FEATURES

### THE MEMORY FEATURE

Store up to 20 numbers in memory for quick dialing.

#### STORING A NUMBER IN MEMORY

The phone must be OFF when you store numbers.

1. Press the MEMORY button (TALK light blinks).
2. Dial the number (up to 16 digits).
3. Press MEMORY.
4. Use the keypad to enter a 2-digit number (01-20) to store the number in that memory location (the phone beeps).

You'll hear an error tone if you press a button, such as FLASH, that can't be stored in memory or if you've tried to store more than 16 digits.

#### CHANGING A STORED NUMBER

Use the same procedure to change a stored number as you do to store a number—in a sense, you're just moving the phone number to a different memory location.



## FLASH BUTTON

Use the FLASH button to activate custom calling services such as call waiting or call transfer, which are available through your local phone company.

**IMPORTANT:** Don't use the TALK button to activate custom calling services such as call waiting, or you'll hang up the phone.

## ADJUSTING THE VOLUME

The VOL up and down buttons on the handset control the volume of the handset's earpiece and the ringer volume.

### HANDSET EARPIECE VOLUME


To change the volume of the handset's earpiece, press VOL up or down while you're talking on the phone.

### RINGER VOLUME

To adjust the ringer volume, press the VOL up or down buttons when the phone is on-hook (phone is inactive, TALK light is off).

## SELECTING A RING TONE

There are 4 ring tones built into your phone. To choose a ring tone, press FLASH followed by either 1, 2, 3, or 4 when the phone is on-hook (phone is inactive, TALK light is off).

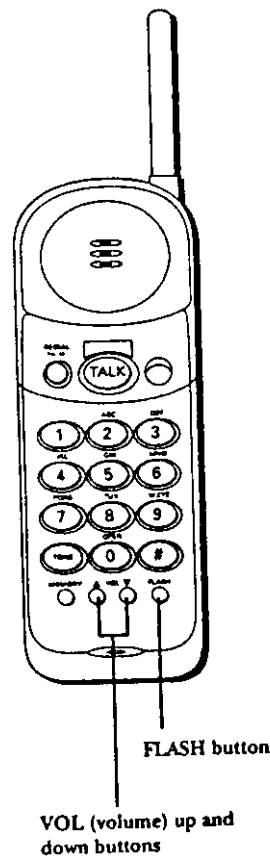

## HEADSET AND BELT CLIP OPERATION


(for use with the 2-913 only)

### CONNECTING A HEADSET TO THE HANDSET

For hands free conversation, connect the headset to the HEADSET jack as shown. The handset receiver and microphone are disabled when the headset is connected.

Adjust the headset to rest comfortably on top of your head and over your ear. Move the microphone to approximately 2 to 3 inches from your mouth.


- Press the TALK button to answer or place a call before using the headset.

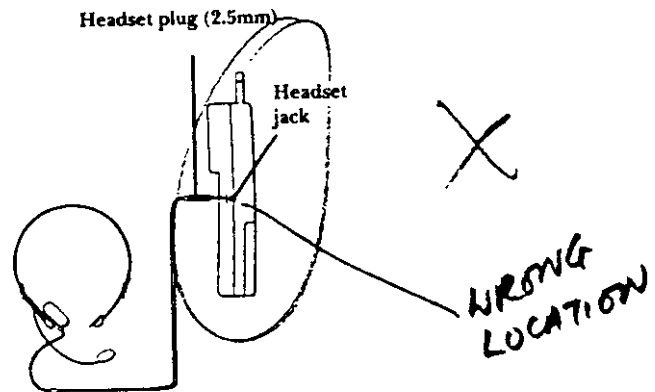

### CONNECTING THE BELT CLIP

There are two slots, one on each side of the handset.


- Attach the belt clip by inserting the sides of the belt clip into the slots. Snap the ends of the belt clip into place.

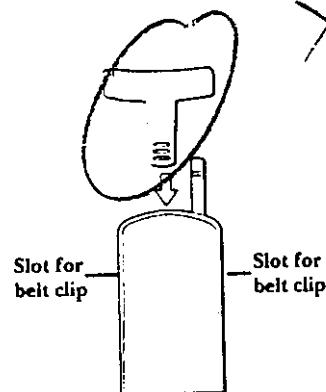

## WALL MOUNT INSTALLATION

1. Plug the short telephone line cord into the PHONE LINE jack on the back of the base and into a modular jack.
2. Plug the power supply cord into the 9V DC jack on the base and into an AC outlet.
3. Install the base plate by putting the tabs into the slots on the top of the unit first, and then snapping the bottom tabs into place.
4. Slip the mounting holes over the wall plate posts and slide the unit down firmly into place. (Wall plate not included.)
5. Set the TONE/PULSE switch to TONE for touch-tone service, or PULSE for rotary service. If you don't know which type of service you have, check with the phone company.
6. Select RINGER ON or OFF (on the side of handset). When you select OFF, the handset doesn't ring.
7. Raise the base antenna.
8. Place handset in the base to charge for 12 hours. The CHARGE/IN USE light comes on indicating that the battery is charging.

If you don't charge the battery properly (for 12 hours) when you first set up the phone, the battery's long-term performance will be compromised.

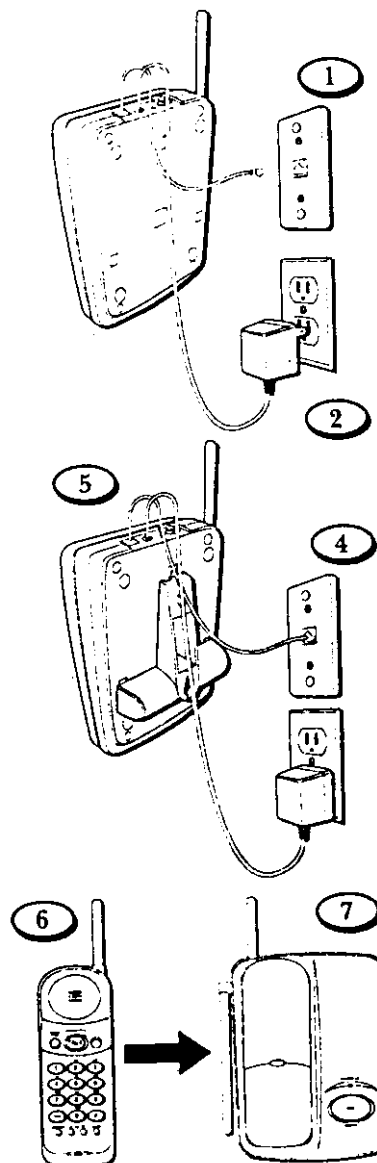


## HANDSET SETUP

1. Insert the battery into the compartment.
2. Install the battery compartment door.

**IMPORTANT:** If you don't charge the handset battery properly (for 12 hours) when you first set up the phone, the battery's long-term performance will be compromised.

**TIP:** In order to maximize your battery's use, we recommend that you periodically use the handset without returning it to the base to drain the battery completely, then recharge for 12 hours.

**NOTE:** Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless in case the power in your home goes out.

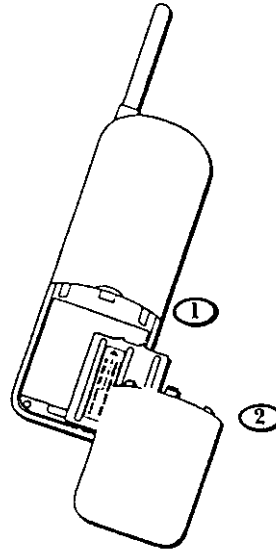

**INSTALLATION NOTE:** Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference continues, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

## INTRODUCTION

---

Your GE cordless telephone is designed to give you flexibility in use and high quality performance. To get the most from your new cordless telephone, we suggest that you take a few minutes right now to read through this instruction manual:

### TABLE OF CONTENTS

FCC REGISTRATION INFORMATION.....	2	SELECTING A RING TONE .....	11
INTERFERENCE INFORMATION .....	2	FLASH BUTTON .....	11
HEARING AID COMPATIBILITY .....	2	TEMPORARY TONE .....	12
GETTING STARTED .....	4	PAGING THE HANDSET .....	12
MODULAR JACK REQUIREMENTS .....	4	THE MEMORY FEATURE .....	13
HANDSET SETUP.....	5	STORING A NUMBER IN MEMORY ...	13
DESKTOP		CHANGING A STORED NUMBER.....	13
INSTALLATION .....	6	ADVANCED FEATURES.....	13
WALL MOUNT INSTALLATION .....	7	DIALING A STORED NUMBER .....	14
CHARGING THE BATTERY		ADDING A PAUSE WHEN YOU STORE A	
IN THE RECHARGE CRADLE .....	8	NUMBER IN MEMORY .....	14
ANYROOM™ RECHARGE CRADLE.....	8	STORING A TEMPORARY TONE NUMBER	
HEADSET AND BELT CLIP OPERATION ...	9	IN MEMORY .....	15
CONNECTING A HEADSET TO THE		CHAIN DIALING FROM MEMORY .....	15
HANDSET .....	9	HANDSET BATTERY INFORMATION .....	16
CONNECTING THE BELT CLIP .....	9	BATTERY SAFETY PRECAUTIONS .....	16
CORDLESS PHONE BASICS .....	10	CHANGING THE BATTERY .....	17
MAKING A CALL .....	10	TROUBLESHOOTING GUIDE .....	18
TALK LIGHT .....	10	GENERAL PRODUCT CARE .....	20
REDIAL .....	10	CAUSES OF POOR RECEPTION .....	21
RECEIVING A CALL .....	10	SERVICE .....	21
ADJUSTING THE VOLUME .....	11	INDEX .....	22
HANDSET EARPIECE VOLUME .....	11	ACCESSORY ORDER FORM .....	23
RINGER VOLUME .....	11	LIMITED WARRANTY .....	24

THIS CHECK/PAPER CONTAINS A CHAIN WATERMARK. DO NOT ACCEPT WITHOUT NOTING WATERMARK. HOLD TO LIGHT TO VERIFY WATERMARK.



**TAIPEI BANK**

Taipei, Taiwan  
Republic of China

420DD0000085332

PAY AGAINST THIS DRAFT ON DEMAND

CHECK NO. 251585332

CLIENT NO. 85003

10-86  
220

APR. 10, 1998

TO THE ORDER OF FEDERAL COMMUNICATIONS COMMISSION

US\$895.00

SAY US DOLLARS EIGHT HUNDRED NINETY FIVE ONLY  
For TAIPEI BANK

TO CITIBANK (NEW YORK STATE):  
BUFFALO, NEW YORK, U.S.A.

MOORE USA

*[Signature]*  
AUTHORIZED SIGNATURE(S)  
10831  
201537

⑈ 251585332⑈ ⑆ 02000868⑆

99⑈85003

