

REMOTE DISPLAY

RD-100W

Thank you for purchasing the TOPCON RD-100W.
For the best performance of the instruments, please read these instructions carefully and keep them in a convenient location for future reference.

GENERAL HANDLING PRECAUTIONS

Before starting work or operation, be sure to check that the system is functioning properly.

Affection of the radio waves



When using the instrument in the following place, the strong radio wave may cause faulty operation.

- Near the instrument occurring strong radio waves. (e.g. Transceiver)
- Near the radio wave towers such as television or radio.

DISPLAY FOR SAFE USE

In order to encourage the safe use of products and prevent any danger to the operator and others or damage to properties, important warnings are put on the products and inserted in the instruction manuals.

We suggest that everyone understand the meaning of the following displays and icons before reading the "Safety Cautions" and text.

| Display | Meaning |
|--|---|
|  WARNING | Ignoring or disregard of this display may lead to death or serious injury. |
|  CAUTION | Ignoring or disregard of this display may lead to personal injury or physical damage to the instrument. |


- Injury refers to hurt, burn, electric shock, etc.
- Physical damage refers to extensive damage to buildings or equipment and furniture.


HANDLING PRECAUTIONS

Guarding the instrument against shock

When transporting the instrument, provide some protection to minimize risk of shock. Heavy shock may affect beam accuracy.

SAFETY CAUTIONS

|  WARNING |
|--|
| <ul style="list-style-type: none"> • There is a risk of fire, electric shock or physical harm if you attempt to disassemble or repair the instrument yourself. This is only to be carried out by TOPCON or an authorized dealer, only! |
| <ul style="list-style-type: none"> • Risk of fire or electric shock. Do not use damaged power cable, plug and socket. |
| <ul style="list-style-type: none"> • Risk of fire or electric shock. Do not use a wet battery. |
| <ul style="list-style-type: none"> • May ignite explosively. Never use an instrument near flammable gas, liquid matter, and do not use in a coal mine. |
| <ul style="list-style-type: none"> • Do not hold the RD-100W magnetic clamp near anyone who uses a pace maker or other electronic medical devices. The strong magnetic field can disrupt the normal operation of such devices. |
| <ul style="list-style-type: none"> • Battery can cause explosion or injury. Do not dispose in fire or heat. |
| <ul style="list-style-type: none"> • The short circuit of a battery can cause a fire. Do not short circuit battery when storing it. |

|  CAUTION |
|--|
| <ul style="list-style-type: none"> Risk of injury to fingers. Do not place fingers on magnet while mounting to equipment. |
| <ul style="list-style-type: none"> Strong magnetic field. Do not place RD-100W magnetic clamp near any sensitive electronic devices or magnetic storage media such as computer disk. |
| <ul style="list-style-type: none"> Do not allow skin or clothing to come into contact with acid from the batteries, if this does occur then wash off with copious amounts of water and seek medical advice. |


EXCEPTIONS FROM RESPONSIBILITY

- 1)The user of this product is expected to follow all operating instructions and make periodic checks of the product's performance.
- 2)The manufacturer, or its representatives, assumes no responsibility for results of a faulty or intentional usage or misuse including any direct, indirect, consequential damage, and loss of profits.
- 3)The manufacturer, or its representatives, assumes no responsibility for consequential damage, and loss of profits by any disaster, (an earthquake, storms, floods etc.).
A fire, accident, or an act of a third party and/or a usage any other usual conditions.
- 4)The manufacturer, or its representatives, assumes no responsibility for any damage, and loss of profits due to a change of data, loss of data, an interruption of business etc., caused by using the product or an unusable product.
- 5)The manufacturer, or its representatives, assumes no responsibility for any damage, and loss of profits caused by usage except for explained in the user manual.
- 6)The manufacturer, or its representatives, assumes no responsibility for damage caused by wrong movement, or action due to connecting with other products.

Standard Set Composition

- 1 RD-100W Instrument 1pc.
- 2 AA-size dry cells..... 3pcs.
- 3 Instruction manual..... 1pc.

Nomenclature and Functions

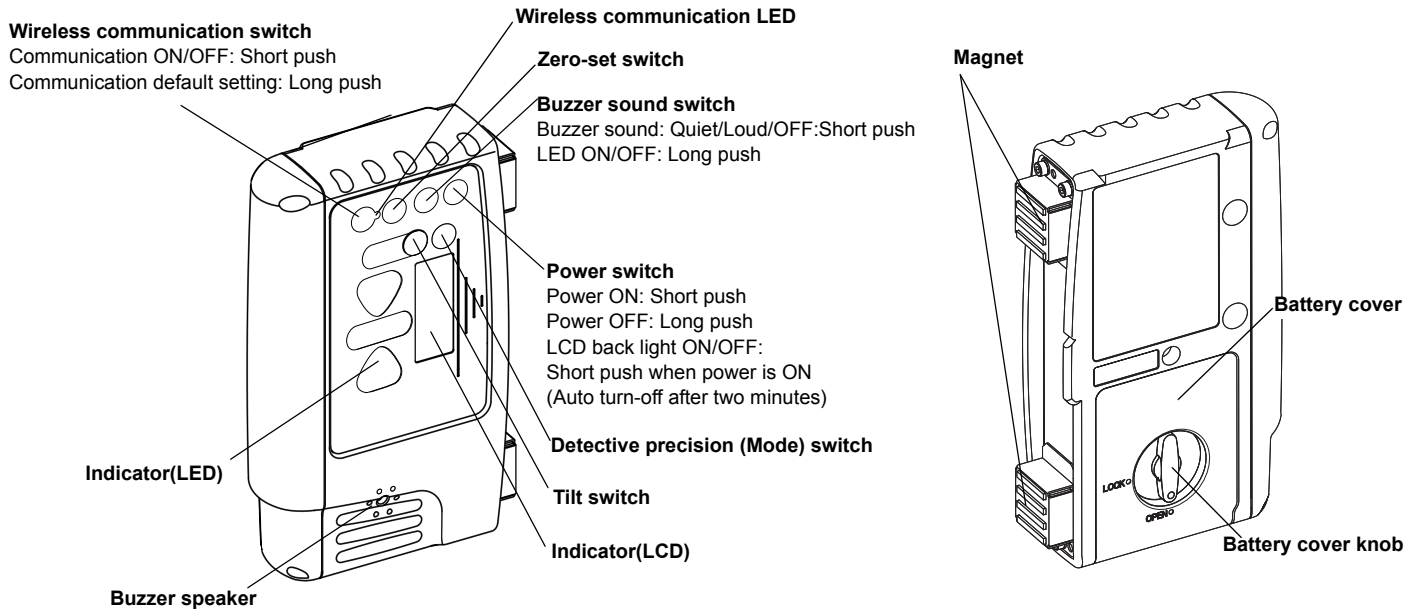

Risk of damage to installation surface of machine, because it uses a strong magnet.
See [Laser beam positions and display patterns] in the Instruction manual for the display area and display pattern.
This instrument is able to perform wireless communication with the LS-B110W/LS-B10W, sold separately.
See the LS-B110W/LS-B10W Instruction manual for details on the LS-B110W/LS-B10W.

How to set up the wireless communication default setting

Place the LS-B110W/LS-B10W and RD-100W in close position, so that they will not be affected by other wireless communications.

- 1** Turn on the power for both the LS-B110W/LS-B10W and RD-100W.
- 2** Long-push the wireless communication switch for the LS-B110W/LS-B10W and RD-100W. While setting up, the wireless communication LED (yellow light) will turn on.
- 3** When the instrument is ready to be used, a buzzer will sound (buzzer sound: peep) and the communication will begin.



- If the communication fails, a buzzer will sound (buzzer sound: pi, pi, pi). Eliminate any influence from other wireless instrument and redo the communication default setting.
- While setting up the default, only the default OFF (short-push of the wireless communication switch) is operable.

How to use wireless communication

- 1** When power for both the LS-B110W/LS-B10W and RD-100W are turned ON, communication will automatically begin.

During communication, the wireless communication LED will flash quickly.

During communication preparation, the wireless communication LED will flash slowly



- When beginning the communication with LS-B110W, detective precision, tilt direction, tilt precision and ON-GRADE position setting will be changed to the same setting as the LS-B110W.
- When the detective precision, tilt direction, tilt precision or ON-GRADE position settings are changed while communicating with LS-B110W, the setting for the LS-B110W will also change in conjunction with the RD-100W.
- When beginning the communication with LS-B10W, detective precision, buzzer sound, LED ON/OFF setting will be changed to the same setting as the LS-B10W.
- When the detective precision, buzzer sound or LED ON/OFF settings are changed while communicating with LS-B10W, the setting for the LS-B10W will also change in conjunction with the RD-100W.
- If you wish to change the LS-B110W/LS-B10W to communicate, redo the communication default setting.


Lighting/Flashing pattern of wireless communication LED

| | |
|-----------------|---|
| Lights | While setting up the default |
| Flashes quickly | While LS-B110W/LS-B10W is communicating |
| Flashes slowly | Communication is in preparation |

Indicator

Height alert warning of rotating laser


A flash and a buzzer sound signifies that the height alert function of rotating laser is operating.
(This function is not usable to the rotating laser which does not have the height alert and the function to output alarm signal.)

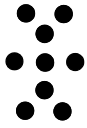

Indicator(LED)
Flashes slowly

Rotating laser battery warning

A flash shows that the rotating laser power is low.
(This function is not usable to the rotating laser which does not have the function to output alarm signal.)

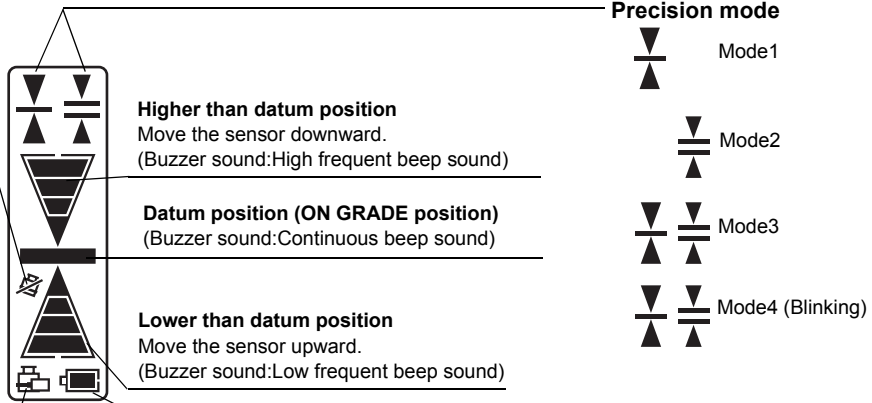


Higher than datum position
Move the sensor downward.
(Buzzer sound:High frequent beep sound)

Datum position (ON GRADE position)
(Buzzer sound:Continuous beep sound)

Lower than datum position
Move the sensor upward.
(Buzzer sound:Low frequent beep sound)

Battery remaining display

Indicates the battery remaining of remote display as follows.

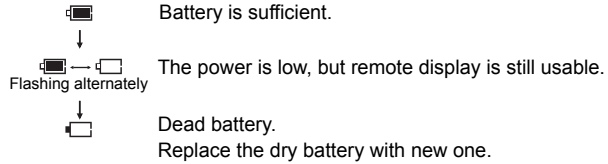

Auto-cut off function

The power will be turned off automatically after not communicating with LS-B110W/LS-B10W for more than approx. 5 minutes.
(To turn on the power, press the power switch again.)

Laser beam positions and display patterns

During communication with LS-B110W

| Indicator(LCD) | Indicator(LED) | Detective precision |
|-------------------------------------|--------------------------------|--|
| | | Mode1:±3mm Mode2:±6mm Mode3:±15mm Mode4:±30mm |
| No display when in Mode 3 and 4 | | ±15mm/±0.05ft (30mm/0.1ft width) |
| No display when in Mode 4 | Flashes quickly | ±30mm/±0.1ft (60mm/0.2ft width) |
| | | ±50mm/±0.16ft (100mm/0.33ft width) |
| | Flashes slowly | ±70mm/±0.23ft (140mm/0.46ft width) |
| | | ±125mm/±0.41ft (250mm/0.82ft width) |
| No display when in Mode 3 and 4 | Flashes more slowly | When the laser beam is off to the top or to the bottom |

Laser beam positions and display patterns

During communication with LS-B10W


| Indicator(LCD) | Indicator(LED) | Detective precision |
|-------------------------------------|--------------------------------|--|
| | | Mode1:±2mm Mode2:±6mm Mode3:±12mm Mode4:±30mm |
| No display when in Mode 4 | Flashes quickly | ±15mm/±0.05ft (30mm/0.1ft width) |
| No display when in Mode 4 | | ±25mm/±0.08ft (50mm/0.16ft width) |
| | Flashes slowly | ±35mm/±0.11ft (70mm/0.23ft width) |
| | | ±60mm/±0.2ft (120mm/0.39ft width) |
| No display when in Mode 3 and 4 | Flashes more slowly | When the laser beam is off to the top or to the bottom |

Tilt detection function (During communication with LS-B110W only)

Switching the tilt direction

The tilt direction can be changed.

- Long-push the detective precision switch and the tilt switch at the same time. The tilt direction mode setting changes in the following order: "Back and Forth," "OFF" and "Right and Left." At this time, the LED above the mark indicating the tilt direction will flash. The LED will not flash when the tilt detection function is switched OFF.

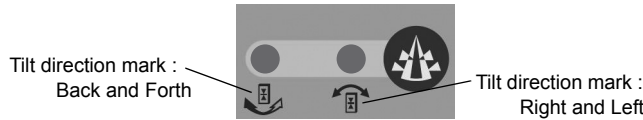

Switching the tilt precision

- Short-push the tilt switch. The tilt precision will change. At this time, the LED below the mark indicating the tilt precision will light up.





Zero position setting for the tilt sensor

Before using the tilt detection function, set the zero position of the tilt sensor according to the directions below. The tilt direction must be set before setting the zero position.

- Raise or lower the machine blade or arm where the LS-B110W is installed to position the cutting edge or bucket at the desired slope.

- Long-push the tilt switch on RD-100W. The tilt angle for the LS-B110W will set to 0°.

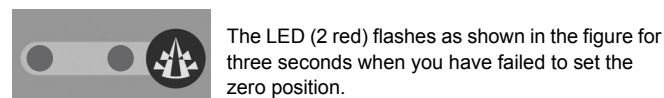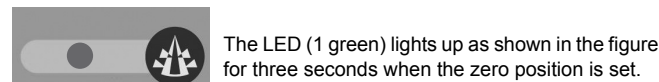

Tilt angles and display patterns

Tilt directions : Right and Left

| | |
|--|--|
| | High precision : $\pm 1^\circ$ Normal precision : $\pm 2.5^\circ$ |
| | $\pm 5^\circ$ |
| | More than $\pm 5^\circ$ |

Tilt directions : Back and Forth

| | |
|--|--|
| | High precision : $\pm 1^\circ$ Normal precision : $\pm 2.5^\circ$ |
| | High precision : More than $\pm 1^\circ$ Normal precision : More than $\pm 2.5^\circ$ |



Tilt indication will be displayed during laser detection and for 20 seconds after switch operation.

Changing the ON-GRADE position function


(During communication with LS-B110W only)

The ON-GRADE position can be changed to the position where laser beam is detected. Using this function when installing the LS-B110W on the pole of the machine allows easy setting of the height at which the ON-GRADE will be displayed on the LS-B110W. The range in which the ON-GRADE position can be changed is $\pm 75\text{mm}$ (total of 150mm) from the center of the detective range.

- Long-push the zero-set switch while detecting the laser beam.

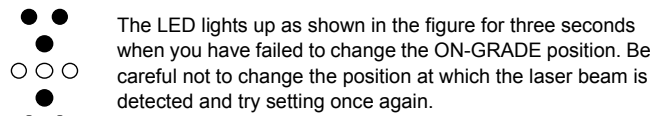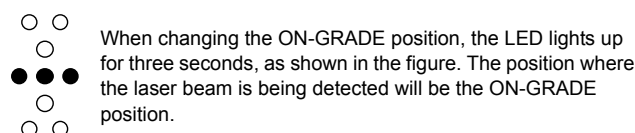


The LED display and LCD display while changing the ON-GRADE position

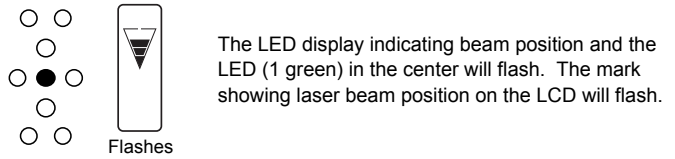

Cancellation the ON-GRADE position change

- Long-push the zero-set switch when not detecting the laser beam. The ON-GRADE position will be reset.

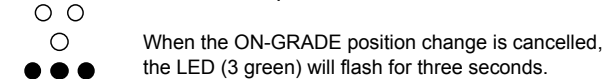

FCC WARNING

Changes or modifications not expressly approved by the manufacturer for compliance could void the user's authority to operate the equipment.

In order to comply with FCC radio-frequency radiation exposure guidelines for an uncontrolled exposure, this device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.


This equipment complies with FCC/IC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it is deemed to comply without testing of specific absorption ratio (SAR).

This device complies with Part 15 of FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions : (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Specifications

| | |
|---|---|
| Wireless communication range | : 20m (May vary depending on obstacles between the two instruments and other conditions) |
| Power source | : AA-size dry cells 3pcs. |
| Continuous operating time (+20°C/+68°F) | : Approximately 40 hours (Using alkaline manganese dry cells) |
| Operating temperature | : -20°C~+50°C(-4°F~+122°F) |
| Water proof | : IP66 (Based on the standard IEC60529) |
| Dimensions (W/D/H) | : 110x36x176(mm) (4.3"x1.4"x6.9") |
| Weight (Without cells) | : 0.5kg (1.2lbs) |

Detective angle, Detective precision and Laser detecting range may vary depending on rotating laser being used or atmospheric conditions.

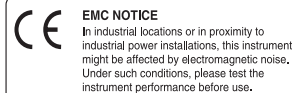

JSIMA
Japan Surveying Instruments Manufacturers' Association

TOPCON POSITIONING SYSTEMS, INC.
7400 National Drive, Livermore, CA 94551, U.S.A.
Phone: 925-245-8300 Fax: 925-245-8599 www.Topconpositioning.com

TOPCON CALIFORNIA
3380 Industrial Blvd, Suite 105, West Sacramento, CA 95691, U.S.A.
Phone: 916-374-8575 Fax: 916-374-8329

TOPCON EUROPE POSITIONING B.V.
Essebaan 11, 2908 LJ Capelle a/d IJssel, The Netherlands.
Phone: 010-458-5077 Fax: 010-294-4941 www.topcon.europa.com

IRELAND OFFICE
Unit 69 Western Parkway Business Center
Lower Ballymount Road, Dublin 12, Ireland
Phone: 01-460-0021 Fax: 01-460-0129

TOPCON DEUTSCHLAND G.m.b.H.
Giesserallee 31, 47877 Willich, GERMANY
Phone: 02154-885-100 Fax: 02154-885-111 info@topcon.de www.topcon.de

TOPCON S.A.R.L.
89, Rue de Paris, 92585 Clichy, Cedex, France.
Phone: 33-1-41069499 Fax: 33-1-47390291 topcon@topcon.fr

TOPCON SCANDINAVIA A. B.
Neorgatan 2 S-43151 Mölndal, SWEDEN
Phone: 031-7109200 Fax: 031-7109249

TOPCON (GREAT BRITAIN) LTD.
Topcon House Kennet Side, Bone Lane, Newbury, Berkshire RG14 5PX U.K.
Phone: 44-1635-551120 Fax: 44-1635-551170
sales@topcon.co.uk laser_sales@topcon.co.uk

TOPCON SOUTH ASIA PTE. LTD.
Blk 192 Pandan Loop, #07-01 PanTech Industrial Complex, Singapore 128391
Phone: 65-6778-3456 Fax: 65-6773-6550 www.topcon.com.sg

TOPCON INSTRUMENTS (THAILAND) CO., LTD.
77/62 Sirm Saltern Tower, 37th Fl.
Krungthornrai Rd., Krungthorn, Krungthorn, Bangkok 10600 Thailand.
Phone: 66-2-4401152-7 Fax: 66-2-4401158

TOPCON INSTRUMENTS (MALAYSIA) SDN. BHD.
No.D1, (Ground, Lower Ground & 1st Floor), Jalan Excella 2, Off Jalan Ampang
Putra, Taman Ampang Hill, 55100 Kuala Lumpur, Malaysia
Phone: 60-3-42708866 Fax: 60-3-42709766

TOPCON KOREA CORPORATION
2F Yoooseoung Bldg., 1595-3, Seocho-Dong, Seocho-gu, Seoul, 137-876, Korea.
Phone: 82-2-2055-0321 Fax: 82-2-2055-0319 www.topcon.co.kr

TOPCON CORPORATION BEIJING OFFICE
Block No.9, Kangding Street
Beijing Economic-Technological Development Area, Beijing, 100176, China
Phone: 86-10-6780-2799 Fax: 86-10-6780-2790

TOPCON CORPORATION DUBAI OFFICE
P. O. Box239705, Office C-25(pw C-2), Dubai Airport Free Zone, Dubai, UAE
Phone: 971-4-2995900 Fax: 971-4-2995901 marketing@Topcon.ae