




## Battery Status

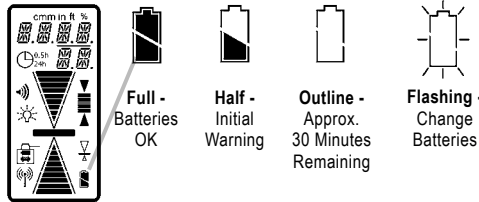

## Move clamp position

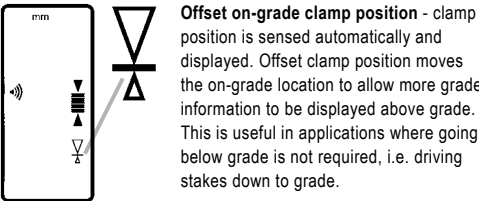

## Rod Clamp

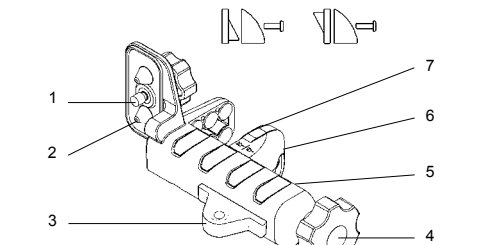

1. Captive Rod Clamp Screw - attaches to the back of detector.
2. Alignment Points (2) - help secure and align rod clamp.
3. Level Vial - can be viewed from above or below to verify that the rod is plumb.
4. Clamping Screw Knob - secures clamp to rods by moving the traveling jaw. Clockwise tightens; Counterclockwise loosens.
5. Reference Bar - top of bar is aligned with on-grade.
6. Traveling Jaw - moving jaw grips tightly to rods.
7. Reversible Face - slanted face for round and oval rods; flat face for rectangular and square rods.

## Specifications

|                           |   |         |         |
|---------------------------|---|---------|---------|
| Working Radius:           | 1 m - 460 m (3 ft - 1500 ft)  |         |         |
| (Laser dependent):        |   |         |         |
| Laser Detection Height:   | 127.0 mm  | (5")    |         |
| Numeric Readout Height:   | 102.0 mm  | (4")    |         |
| Internal Radio:           | Full 2-way communication, operation and security lock with paired device          |         |         |
| Radio Working Radius:     | 40 - 100 m (130 - 330 ft), depending on orientation, conditions and paired device |         |         |
| Accuracy (Dead band):     |   |         |         |
| Ultra Fine                | 0.5 mm  | 0.02 in | 1/32 in |
| Super Fine                | 1.0 mm  | 0.05 in | 1/16 in |
| Fine                      | 2.0 mm  | 0.10 in | 1/8 in  |
| Medium                    | 5.0 mm  | 0.20 in | 1/4 in  |
| Coarse                    | 10.0 mm   | 0.50 in | 1/2 in  |
| Calibration               | 0.1 mm  | 0.01 in | 1/64 in |
| Reception Angle:          | ± 45° minimum   |         |         |
| Detectable Spectrum:      | 610 nm ... 780 nm   |         |         |
| Beeper Volumes:           | Loud = 110 dBA<br>Medium = 95 dBA<br>Low = 65 dBA                                 |         |         |
| LED Grade Indicators:     | Front, Green on-grade,<br>Red Hi, Blue Low  |         |         |
| Power Supply:             | 2 x 1.5 Volt "AA" batteries   |         |         |
| Battery Life:             | 60+ hours   |         |         |
| Automatic Shut Off:       | Selectable, 30 min, 24 h, Off   |         |         |
| Environmental:            | Waterproof, Dustproof to IP67   |         |         |
| Weight without clamp:     | 371 g (13.1 oz.)  |         |         |
| Dimensions without clamp: | 168.0 x 76.0 x 36.0 mm<br>(6.6" x 3.0" x 1.4")                                    |         |         |
| Operating Temperature:    | -20°C...+60°C (-4°F... +140°F)  |         |         |
| Storage Temperature:      | -40°C...+70°C (-40°F...+158°F)  |         |         |

\*Specifications subject to change without notice.

## Warranty

Trimble warrants the HL750 to be free of defects in material and workmanship for a period of three years. Trimble or its authorized service center will repair or replace, at its option, any defective part, or the entire product, for which notice has been given during the warranty period. If required, travel and per diem expenses to and from the place where repairs are made will be charged to the customer at the prevailing rates. Customers should send the product to Trimble Navigation Ltd. or the nearest authorized service center for warranty repairs or exchange, freight prepaid. Any evidence of negligent, abnormal use, accident, or any attempt to repair the product by other than factory-authorized personnel using Trimble certified or recommended parts, automatically voids the warranty. The foregoing states the entire liability of Trimble regarding the purchase and use of its equipment. Trimble will not be held responsible for any consequential loss or damage of any kind. This warranty is in lieu of all other warranties, except as set forth above, including any implied warranty merchantability of fitness for a particular purpose, are hereby disclaimed. This warranty is in lieu of all other warranties, expressed or implied.

### Notice to Our European Union Customers

For product recycling instructions and more information, please go to: [www.trimble.com/environment/summary.html](http://www.trimble.com/environment/summary.html)

#### Recycling in Europe

To recycle Trimble WEEE, call: +31 497 53 2430, and ask for the "WEEE associate," or



Mail a request for recycling instructions to:  
Trimble Europe BV c/o Menlo Worldwide Logistics  
Meerheide 45 5521 DZ Eersel, NL





Trimble Construction Division  
5475 Kellenburger Road  
Dayton, Ohio 45424-1099  
U.S.A.  
+1-937-245-5600 Phone

[www.trimble.com](http://www.trimble.com)




© 2011 Trimble Navigation Limited. All rights reserved.  
PN 1277-5370 (04/09)

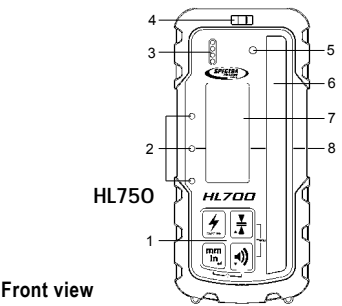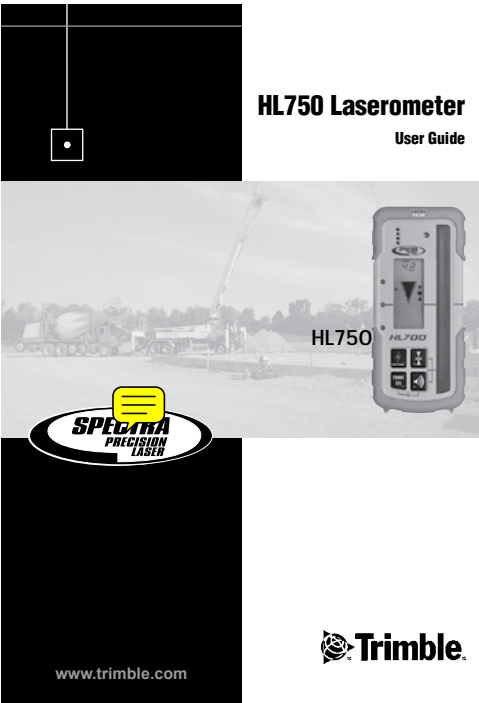

Front view


1. Keypad - Power, Accuracy, Units & Volume switches.
2. LED Display - Green for on-grade, Red for high, Blue for low
3. Beeper output - Fast, solid & slow audible signal.
4. Bubble Vial - aids in keeping level.
5. Anti-strobe sensor - Reduces false indication from strobe lights.
6. SuperCell Reception Window - 5.0 in / 127.0 mm of height.
7. Front LCD - Displays elevation, settings and status.
8. On-grade Mark - Aligned with laser center on-grade reading.

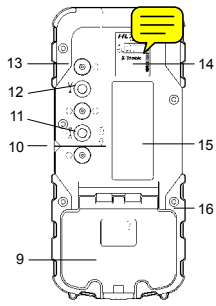

Rear view

9. Battery Door & Latch for two "AA" batteries.
10. Marking Notch (3.15 in / 80.0 mm from top).
11. Captive Screw Thread, Center on-grade clamp position.
12. Captive Screw Thread, Offset on-grade clamp position.
13. Clamp Guides - Dimples align rod clamp.
14. Serial Number / ID Label.
15. Rear LCD - repeats indications of front LCD.
16. Rubber over mold - Protects the unit from drops

## Installing the Batteries



1. Open the battery door using a coin or similar pry device to release the battery door tab.
2. Insert two AA batteries noting the plus (+) and minus (-) diagrams inside the battery housing.
3. Close the battery door. Push down until it "clicks" into the locked position.

## EMC Declaration of Conformity

This receiver has been tested and found to comply with the limits for a Class B digital device for radio noise for digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communication, and is pursuant to part 15 of the Federal Communication Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This receiver generates radio frequency. If it's not used in accordance with the instructions, it may cause harmful interference to radio or television reception. Such interference can be determined by turning the receiver off and on. You are encouraged to try eliminating the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the laser and the receiver.

For more information, consult your dealer or an experience radio/television technician.

**CAUTION:** Changes or modifications to the receiver that are not expressly approved by Trimble could void authority to use the equipment.

## Declaration of Conformity

Application of Council Directive(s): 89/336/EEC  
Manufacturer's Name: Trimble Navigation Ltd.  
European Representative Address: Trimble GmbH Am Prime Parc 17  
65479 Raunheim, Germany

Conformance to Directive(s): EC Directive 89/336/EEC using EN55022 and EN50082-1

Equipment Type/Environment: ITE/residential, commercial & light industrial

Product Standards: Product meets the limit B and methods of EN55022  
Product meets the levels and methods of IEC 801-2, 8 kV air, 4 kV contact IEC 801-3, 3 V/m 26 to 1000 MHz 80%, @ 1 kHz



**Action**      **Display**      **Remarks**

**Turn power ON/OFF**

Press to turn power ON. Press and hold for 2 seconds to turn power OFF.

Initialization:  
 1. Test of LCD, LED and beeper  
 2. CAL: Calibration (3 sec.)  
 3. Unit is ready for use.

(Do not power up the unit in a laser beam or strobe. If detected, the unit will display "E200" and revert to the previous calibration.)

**Select accuracy**

Press once to change current setting (A beep confirms the selected volume.)

Accuracy in mm:  
 0.5 1.0 2.0 5.0 10.0

The selected unit of measure determines the displayed deadband (accuracy).  
 The current accuracy is stored in memory and will be retained when the unit is turned off or when batteries are replaced.

**Select beeper volume**

Press once to display current setting; push again to scroll through options.

Beeper Loud    Beeper Medium    Beeper Low    Beeper Off

The current beeper volume is stored in memory and will be retained when the unit is turned off or when batteries are replaced.

**Select units of measure**

Press once to display current setting, additional pushes to scroll through options.

mm - cm - in - frac - ft

The current unit of measure is stored in memory and will be retained when the unit is turned off or when batteries are replaced.

**Select brightness of LEDs**

Press together to cycle the selection.

LEDs Bright    LEDs Dim    LEDs OFF

The current brightness of LEDs is stored in memory and will be retained when the unit is turned off or when batteries are replaced.

**Action**      **Display**      **Remarks**

**CAPTURE Function**

A) HL750 is in the laser beam and the power is on:

1 x quick

The current elevation reading will be held. A flashing display will confirm the reading has been captured.

Press any switch to return to normal operation.

B) HL750 is out of the laser beam and power is on:

1.

1 x quick

A short intermittent beep (The beeper will turn on to Low if turned off.)

2. Place the HL750 in the beam. (Example: Fasten it to a measuring rod, bring the HL750 into the laser beam. You now have 5 seconds to plumb the rod and get the reading captured.)

The beeper will chirp rapidly after approximately 5 seconds to confirm beam capture. A flashing display will also indicate the reading has been captured.

Press any switch to return to normal operation.

**NOTE:** The CAPTURE function is disabled when the HL750 is radio linked and operating with a paired device.

**Special Menu Functions**

Press switches together for 2 sec.

How to change Menu functions:

1. Scrolling up or down.  
 2. Enter Change mode.  
 3. Change selected items.  
 4. Confirm change.  
 5. To Exit.

**MENU** (for 2 Sec., then RDIO)

- RDIO    Radio Functions - MODE - PAIR - TEST
  - SENS    Sensitivity Medium\* - High - Low
  - AVG    Averaging algorithm Medium\* - High - Low
  - D.R.O.    Numeric display ON\* - OFF - 1mm
  - UNIT    Units of measure MM\* - CM - IN - FRAC - FT
  - FRC.R.    Fractional Reduction ON\* - OFF
  - ARRW    Arrow Display DB\* (deadband) - PR (prop.)
  - O.O.B.    Out-of-Beam Display ON\* - OFF
  - GRD.A.    Grade Alarm ON - OFF\*
  - A.S.O.    Automatic shutoff 0.5h\* - 24h - OFF
  - TX.O.L.    Transmitter Out-of-Level OFF\* - RPS
  - TX.O.B.    Transmitter Low Battery OFF\* - RPS
  - INFO    Information about the Laserometer
- \* Default setting

**Out-of-Beam Display**  
**O.O.B. (Out-of-Beam Display):**  
 Sequence to show direction to get back in the laser beam ( for 25 s)  
 ON - Out-of-Beam Display ON\*  
 OF - Out-of-Beam Display OFF

**Automatic Shutoff**  
**A.S.O. (Automatic Shut Off):**  
 0.5 - After 30 Minutes\*  
 OF - Off (Unit is permanently on)  
 24 - 24 hour shutoff.

**Special Menu Functions**

**RADIO Function**

**RDIO (Radio)** - Selects the 2-way radio operating conditions.  
**MODE** -  
**OF** - Off, No radio operation  
**GL** - Grade Laser, radio is set to operate with a GL5X2 grade laser (see the GL5X2 operator's manual for using these features)  
**HL** - Handheld Laserometer, the 2-way radio is set to operate with another HL750

**PAIR** - Configures the radio to work with a specific GL5X2 grade laser or HL750 Laserometer. Identification code of the paired device is stored in memory.

**TEST** - Displays the value of communication packets (Service Use Only)

**1. Pair the Two HL750's**  
 (NOTE: The Pair operation is only required once)  
 Turn on both HL750 Laserometers that are to be paired and follow below directions for both units. Enter the MENU of the HL750's. The RDIO functions will be shown. Enter the RDIO functions to display the MODE selection. If HL is not displayed, Enter the MODE function and scroll up or down to select HL for each HL750 and ENTER. Scroll down to PAIR function. ENTER to activate pairing. The PAIR symbol will rotate briefly until both units complete the PAIR operation. PAIR OK indicates function complete.

**2. Remote Operation**  
 Turn both HL750's Off.  
 The first HL750 turned on becomes the laser SENSOR (receiver). The second HL750 turned on becomes the REMOTE DISPLAY / CONTROL PANEL.  
 Turn on the SENSOR HL750 first. Mount at the desired elevation so that it can receive the laser beam. Turn on the REMOTE DISPLAY / CONTROL PANEL HL750 second. RMT.D - OK will be displayed. Press ENTER to operate this HL750 as the REMOTE DISPLAY / CONTROL PANEL.

NOTE: If ENTER is not pressed, both HL750's will revert to standard operation.

During REMOTE DISPLAY / CONTROL PANEL operation, RMT.D is displayed. The Unit will remotely display the elevation readings of the SENSOR as long as the Antenna symbol shows the two are within radio range of each other: 40 - 100 meters (130 - 330 ft).

The RMT.D unit can remotely adjust the Accuracy and Units of Measure of the SENSOR.

Change special Menu Functions only in the case of special job requirements!

**Sensitivity of reception**  
**SENS (Sensitivity):**  
 Selects reception sensitivity to laser and other light sources.  
**MD** - Medium\*: for most applications.  
**HI** - High: When laser beam is weak, or at very long distances.  
**LO** - Low: If outside sources are disturbing elevation readings.

**Grade Alarm**  
**GRD.A. (Grade Alarm):**  
 When turned ON, disables the audible signal when on-grade. When moved out of the on-grade deadband, the beeper activates as normal:  
 ON - Alarm on (Solid beeper OFF)  
 OF - Alarm off (Solid beeper ON)\*

For more information about special Menu Function contact the manufacturer, importer or your local dealer.