

Owners Manual

Preliminary Draft (without drawing)

Model: DCT648

2.4GHz ISM band Frequency Hopping
cordless with Caller ID / Answering features

Step 1 Checking the Package Contents

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact the Uniden Parts Department.

- Base Unit - 1
- Handset - [1 for DCT648] and [2 for DCT648-2]
- AC Adapter - [1 for DCT648] and [2 for DCT648-2]
- Rechargeable Battery Pack - [1 for DCT648] and [2 for DCT648-2]
- Telephone Cord - 1
- Beltclip - [1 for DCT648] and [2 for DCT648-2]
- Extra Charger - 1 for DCT648-2 only
- Owner's Manual - 1
- Other Printed Material

Uniden Parts Department at (800) 554-3988
Hours: M-F 8:00 a.m. to 5:00 p.m. CST.
We can also be reached on the web at
www.uniden.com

www.uniden.com

Step 2 Install and Charge the Handset Battery

TO INSTALL THE HANDSET BATTERY

- Remove the cover.
- Connect the battery pack connector with the correct polarity and listen for a click to insure connection.
- Replace the cover.
- Plug the AC adapter cord into the base unit and then into a 120V AC outlet.
- Place the handset in the base and charge continuously for 17 - 20 hours before using the phone.

QRG_battery_pack

QRG_AC_cord

Step 3 Connect to Phone Line

When the handset battery pack is fully charged, after 17-20 hours of charging, plug the telephone cord into the base unit and then into a telephone wall jack.

QRG_TEL_line

Your phone is set for tone dialing. If your local network requires pulse dialing, please see "D. Choose the dialing mode" on page 13.

Step 4 Setting Caller ID & Language Display Options

TO SET CALLER ID ON CALL WAITING AND CALL WAITING DELUXE

- A** Press *menu/del* in the standby mode.
- B** Press *ring/vol/∧* or *ring/vol/∨* to select "Global Setup", and then *select/☒*.
- C** Press *ring/vol/∧* or *ring/vol/∨* to select "CI DCW", and then *select/☒*.
- D** Press *ring/vol/∧* or *ring/vol/∨* to select "CW On/CWDX On", "CW On/CWDX Off", or "CW Off/CWDX Off", and then *select/☒*.

TO SET LANGUAGE

- A** Press *menu/del* in the standby mode.
- B** Press *ring/vol/∧* or *ring/vol/∨* to select "Handset Setup", and then *select/☒*.

QRG_setup

- C** Press *ring/vol/∧* or *ring/vol/∨* to select "Language", and then *select/☒*.
- D** Press *ring/vol/∧* to choose a Language, and then *select/☒*.

Step 5 Setting Up the Answering System

TO TURN THE ANSWERING SYSTEM ON/OFF

Each time *answer on/off* is pressed, the answer mode is switched between On and Off.

TO SET GREETING MESSAGE

- A** Press and hold *greeting*.
- B** Start recording your message.
- C** Position yourself as near to the base as possible.
- D** When finished, press *greeting* or *play/stop*.

QRG_answering

Contents

QUICK REFERENCE GUIDE		
WELCOME/FEATURES		
CONTROLS AND FUNCTIONS		
DISPLAY AND ICONS		
GETTING STARTED		
Setting up the Phone	9	
Mounting the Base Unit on a Wall	14	
Main Menu Flow Chart	16	
About the Menu Setup Options	18	
Setting Up the Menu Setup Options	22	
BASICS	30	
Making and Receiving Calls	30	
Placing a Call on Hold	31	
Redialing a Call	32	
Adjusting the Handset Ringer and Earpiece Volume	33	
Do Not Disturb (DND)	33	
Mute Microphone	34	
Tone Dialing Switch-over	34	
Traveling Out-of-Range	34	
Clarity Booster	35	
Privacy Mode	35	
Intercom/Call Transfer Feature	35	
3-Way Conferencing	36	
Flash and Call Waiting	36	
PHONEBOOK	37	
Steps for Entering Names and Special Characters	39	
Viewing the Phonebook	41	
Making Calls Using the Phonebook	42	
Speed Dialing	42	
Editing or Erasing a Stored Name,	43	
Phone Number, Distinctive Ring, and Speed Dial	43	
Chain Dialing	44	
1 CALLER ID AND CIDCW		45
Viewing the Caller ID List		46
Deleting a Caller ID Message		47
6 USING THE CALLER ID MESSAGE LIST		48
Call Waiting Deluxe Features		49
8 THE INTEGRATED ANSWERING DEVICE		50
Turning the Answering System On/Off		51
Setting Up your Answering System		51
Using your Answering System		59
Remote Option		62
EXPANDING YOUR PHONE		65
Connecting the Charger		65
Register the Handset		66
Using the DirectLink Mode		67
4-Way Conferencing		68
Intercom/Call Transfer Feature		68
Replacing the Base		70
ADDITIONAL INFORMATION		71
Changing the Digital Security Code		71
Installing the Beltclip		71
Headset Installation		71
Note on Power Sources		72
Maintenance		72
General Information		73
TROUBLESHOOTING		74
Liquid Damage		77
PRECAUTIONS & WARRANTY		78
I.C. NOTICE		80
INDEX		81
MEMORY LIST		82

www.uniden.com

[3]

Welcome

Congratulations on your purchase of the Uniden Multi Handset Cordless System telephone. This unit is different from conventional cordless telephones. When the base unit is connected to AC power and a telephone line, it can support up to 4 handsets. Using extra handsets, you can establish a 3-way conference call (2 handsets and an outside line), while two other handsets are making an intercom call. You can now place a fully featured cordless handset anywhere in your home or office where AC power is available to connect the handset chargers.

Note: Some illustrations in this manual may differ from the actual unit for explanation purposes.



As an Energy Star® Partner, Uniden has determined that this product or product models meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark.

Note: Energy Star® applies to DCT646 only.

Features

- 2.4GHz Frequency Hopping Spread Spectrum
- Integrated Answering Device (Trilingual Announcement Option)
- 4 Multi-Handset Expandability
- Hands Free Speakerphone in the Handset
- Call Waiting Deluxe
- Caller ID/Caller ID On Call Waiting
- 100 Dynamic Memory Location (Phonebook & Caller ID)
- Trilingual Function Menus (English-French-Spanish)
- Intercom/Call Transfer
- 20 Distinctive Ring Options (10 ringer tones and 10 melody ringers)
- Mute Feature
- Flash and Pause
- 88 Channel Auto Scan
- Handset to Handset Intercoming
- DirectLink™ Mode
- Room Monitoring Feature
- Battery Level Indicator
- Clock Display

This series features include **AutoTalk™** and **AutoStandby™**. AutoTalk allows you to answer a call by just removing the handset from the cradle so you don't have to waste time pushing buttons. AutoStandby allows you to hang up by simply returning the handset to the cradle.

To protect you against mis-billed calls, which might result from your phone being activated by other equipment, this series has **Random Code™** digital security, which automatically selects one of over approx. 130,000 digital security codes for the handset and base.

Frequency Hopping Spread Spectrum (FHSS) technology improves calling range and clarity, and eliminates cross talk. Because it rapidly changes transmission frequencies within the 2.4GHz bandwidth, this cordless phone helps reduce the possibility of eavesdropping.

DirectLink mode is used when you have 2 or more handsets. You can use your handsets as transceivers.

Be sure to visit our web site: www.uniden.com

Uniden® is a registered trademark of Uniden America Corporation.

AutoTalk, AutoStandby, DirectLink, and Random Code are trademarks of Uniden America.

- **Standby Mode** - The handset is not in use, The handset may be on or off the base, but **talk/flash** key has been pressed.
- **Talk Mode** - The handset is not in the cradle and **talk/flash** or **speaker** has been pressed enabling a dial tone. "Talk" appears on the display.

Controls & Functions

1. Handset Antenna
2. Headset Jack Cover
3. Beltclip Hole
4. Hands Free Speaker
5. Handset Battery Compartment
6. New Message LED
7. Handset Earpiece
8. LCD Display
9. **Menu/del** (delete) Key (P. 22 / P. 32, 47)
10. **△/vol** and **∨/v** (P. 16-17, P. 33 / 37)
 - a. ringer and volume control
 - b. scroll keys for display screen
11. **◀◀**(repeat)/**1** Key
12. **∅**(delete) (for remote operation)/**4** Key
13. ***/tone/←** Key (P. 30, 35 / P. 67-68)
14. **↶** **redial/pause** Key (P. 32/ P. 24)
15. **⊕** **speaker** Key (P. 24, 30, 42)
16. **Select/☑** (voice mail) Key (P. 22-29, 37-49)
17. **Call id** (Caller ID) key (P. 45-49)
18. **Talk/flash** Key (P. 30 / P. 36)
19. **End** Key (P. 30, 35-36)
20. **▷** (play)/**2** Key
21. **▶▶**(skip)/**3** Key
22. **□**(stop)/**5** Key
23. **#/➤** Key (P. 30 / P. 39)
24. **☎**(Phonebook) Key (P. 37-41)
25. **Hold/transfer/int'com** (Intercom) Key (P. 31 / P. 69 / P. 68)
26. Handset Microphone
27. Handset Charging Contacts

- 28. Base Speaker
- 29. **∅/delete** Key (P. 52, 60)
- 30. Charge LED
- 31. Message Counter Display
- 32. In use LED
- 33. **Play/stop** Key (P. 53)
- 34. Base Antenna
- 35. **|<<(repeat)/SELECT** Key (P. 60)
- 36. **Clock/MENU** Key (P. 53)
- 37. **Greeting** Key (P. 51)
- 38. **Answer on/off** Key (P. 51)
- 39. **△/vol** and **∧/v** (P. 52)
- 40. Base Charging Contacts
- 41. **>>(skip)/SELECT** Key
- 42. **SET** Key (P. 53)
- 43. **Do not disturb** Key (P. 33)
- 44. **Memo record** Key (P. 61)
- 45. **Mute** Key (P. 34)
- 46. **Hold** Key (P. 31)
- 47. **Intercom/find handset** Key (P. 35)
- 48. **Speaker** Key/speaker LED (P. 30)
- 49. Microphone
- 50. DC Power Input
- 51. Telephone Input

For DCT648-2 only

- 52. DC Power Input
- 53. Charging Contacts
- 54. Charge LED

www.uniden.com

CONTROLS & FUNCTIONS [7]


Setting up the Phone

Do the following steps:

- A. Choose the best location
- B. Install the battery pack into the handset
- C. Install the rechargeable battery pack into the handset
- D. Choose the dialing mode

A. Choose the best location

Before choosing a location for your new phone, read "Installation Considerations" on page 79. Here are some important guidelines you should consider:

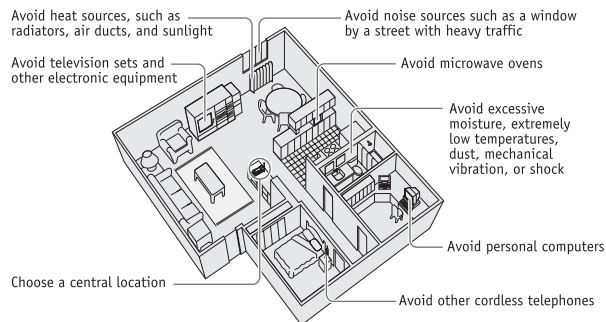

www.uniden.com



If your home has specially wired alarm equipment connected to the telephone line, be sure that installing the system does not disable your alarm equipment.

If you have questions about what will disable alarm equipment, contact your telephone company or a qualified installer.



• Use only the Uniden (BT-446) rechargeable battery pack supplied with your cordless telephone.

• Replacement battery pack are also available through the Uniden Parts Department at (800) 554-3988, Monday thru Friday from 8:00 a.m. to 5:00 p.m. or online at www.uniden.com

B. Install the rechargeable battery pack into the handset

The handset is powered by a rechargeable battery pack. The battery recharges automatically when the handset is placed in the base unit.

Charge the handset battery pack for at least 17-20 hours before using your new cordless telephone for the first time! To maximize the charge capacity of your battery pack, DO NOT plug the telephone cord into the base unit and wall jack until the battery is fully charged.

- 1) Press down on the handset battery case cover (use the finger indentation for a better grip) and slide the cover downward to remove.
- 2) Plug the battery pack connector (red & black wires) into the small, black jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one-way.) Match the wire colors to the polarity label in the battery compartment, connect the battery, and listen for a click to insure connection.
- 3) Make sure you have a good connection by slightly pulling on the battery wires. If the connection is secure, the battery jack will remain in place.
- 4) Place the battery case cover back on the handset by sliding it upwards until it clicks into place.
- 5) Place the handset in the base unit for 17-20 hours without interruption. The base unit's LED light (labeled charge) illuminates once the handset is placed in the base. The LED light will illuminate whether the battery pack is connected or not.

If the base **charge/in use** LED light does not illuminate:

- Check to see if the AC adapter is plugged into the base unit and the electrical wall outlet properly. (Use only the supplied AC adapter. Do not use any other AC adapter.)
- Check to see if the handset is sitting correctly in the base and making good contact with the base unit's charging contacts.

battery_pack


Low battery alert

When the battery pack is very low and need to be charged, the phone is programmed to eliminate functions in order to save power.

The battery pack needs to be charged when:

- The empty battery icon appears.
- "Low Battery" appears in the display.

If the phone is in the standby mode, none of keys will operate. If you are on a call, complete your conversation as quickly as possible, and return the handset to the cradle.



Cleaning the battery charging contacts

To maintain a good charge, it is important to clean the charging contacts on both the handset and the base unit once a month. Using water only, dampen a cloth to clean the charging contacts. Then make sure to go back over the charging contacts with a dry cloth before returning the handset to the base to charge.



Caution: Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.



- Even when the battery pack is not being used, it will gradually discharge over a long period of time. For optimum performance, be sure to return the handset to the base unit after a telephone call.
- Standby Mode - The handset is not in use. The handset may be on or off the base, but *talk/flash* key has been pressed.
- Talk Mode - The handset is not in the cradle and *talk/flash* or *speaker* has been pressed enabling a dial tone. "Talk" appears on the display.



- Use only the supplied [AD-xxxx] AC adapter. Do not use any other AC adapter.
- Place the power cord so that it does not create a trip hazard or where it could become chafed and create a fire or electrical hazard.

C. Connect the base unit

- 1) Connect the AC adapter to the **DC IN 9V** jack and to a standard 120V AC wall outlet.
- 2) Set the base on a desk or tabletop, and place the handset in the base unit.
- 3) Raise the antenna to a vertical position.
- 4) Make sure that the **charge/in use** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and the handset makes good contact with the base charging contacts.




- Connect the AC adapter to a continuous power supply.
- Place the base unit close to the AC outlet so that you can unplug the AC adapter easily.

- After installing the battery pack in the handset, charge your handset at least **17-20 hours before plugging into the phone line.**
- 5) Once the handset battery pack is fully charged, connect the telephone line cord to the **TEL LINE** jack and to a telephone outlet.



- If your telephone outlet isn't modular, contact your telephone company for assistance.

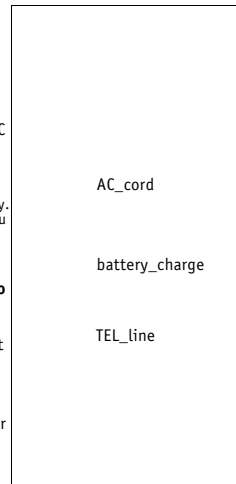

D. Choose the dialing mode

Most phone systems use tone dialing, which sends DTMF tones through the phone lines. However some phone systems still use pulse dialing such as in rural areas. The default setting is tone dialing. Depending on your dialing system, set the dial mode. To set the dial mode, see "Setting the Dial Mode" on page 26.

- If you are not sure of your dialing system, set the unit to tone dialing. Make a trial call. If the call connects, leave the setting as is, otherwise set the unit to pulse dialing.
- If your phone system requires pulse dialing and you need to send DTMF tones in certain situations during a call, you may Switch Over to tone dialing. (Refer to "Tone Dialing Switch-over" on page 34.)




DO NOT use an AC outlet controlled by a wall switch.

Mounting the Base Unit on a Wall

Standard wall plate mounting

This phone can be mounted on any standard wall plate.

- 1) Snap the wall mount adapter into the notches on the base top.
- 2) Plug the AC adapter into the **DC IN 9V** jack.
- 3) Wrap the AC adapter cord inside the molded wiring channel as shown.
- 4) Plug the AC adapter into a standard 120V AC wall outlet.
- 5) Plug the telephone line cord into the **TEL LINE** jack. Wrap the cord inside the molded wiring channel as shown.
- 6) Plug the telephone line cord into the telephone outlet.
- 7) Raise the antenna to a vertical position.
- 8) Align the mounting slots on the base with the mounting posts on the wall. Then push in and down until the phone is firmly seated.

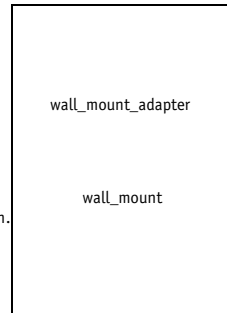


Direct wall mounting

If you don't have a standard wall plate, you can mount your phone directly to the wall. Before doing this, consider the following:


- Avoid electrical cables, pipes, or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- Try to mount your phone within 5 feet of a working phone jack to avoid excessive lengths.
- Make sure the wall material is capable of supporting the weight of the base and handset.
- Use #10 screws (minimum length of 1-3/8 inches) with anchoring devices suitable for the wall material where the base unit will be placed.


- 1) Insert two mounting screws into the wall (with their appropriate anchoring device), 3-15/16 inches apart. Allow about 1/8 of an inch between the wall and screw heads for mounting the phone.
- 2) Refer to steps 1 through 8 on page 14 to mount the telephone.

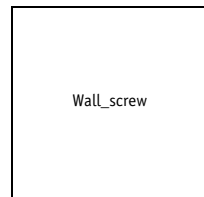

Main Menu Flow Chart

• From the standby mode:

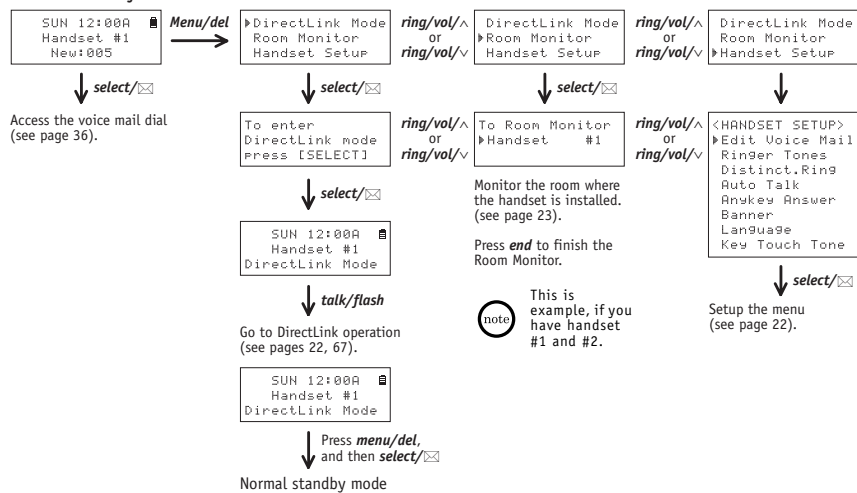

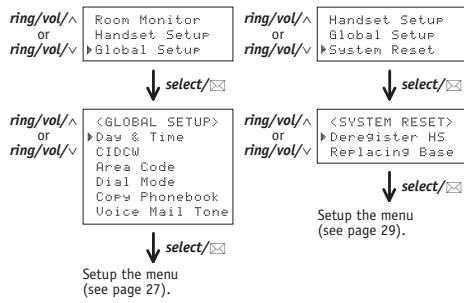

www.uniden.com

• From the Talk mode:

Talk
 1234567890
 100:59

menu/del

Mute
 Clarity Boost
 Call Record
 Privacy Mode
 CW Deluxe

select/☒

Perform the operation.



The "CWCX" appears only when the caller ID setup is set to "CW On / CWDX On".



For Global Setup, and System Reset menu setup option, make sure the line is not in use, and the handsets are within the range limits of the base.

About the Menu Setup Options

There are 6 main menu setup options, (**DirectLink Mode, Room Monitor, Handset Setup, Answ. Setup, Global Setup, and System Reset**) and 16 submenu setup options.

Summary of Main Menu Setup Options and Submenu Setup Option

DirectLink Mode

DirectLink Mode allows a pair of handsets to work without the base unit, allowing handset-to-handset communication. Use them at sporting events or while shopping to stay in contact with family members or friends. You must set the two handsets to DirectLink Mode to utilize this feature.

Room Monitor

This feature only works if you have two or more handsets, allowing you to monitor sounds in another room, (see page 23 for setup). One handset is placed in the desired room to monitor (acts as remote mic), and the other is placed near listener (remote speaker). This is useful for monitoring child activities.

Handset Setup

The following submenu options must be set separately for each handset.

Submenu option	Description
Ringer Tones	Adjusting the ringer tone (see page 23).
Distinct. Ring	Set the distinctive ring (see page 24). "Distinctive Ringer" allows you to (Distinctive ring) preset memory locations with a designated ring tone. When an incoming call is received and the Caller ID information matches the information in one of the memory locations, the distinctive ring that has been stored for that particular Caller will sound. If you have set multiple memory locations with distinctive rings, switching the setting to "Distinctive Off" will result in no distinctive ringing. All incoming calls will have a normal ring tone. Switching to "Distinctive On" will activate all programmed distinctive ring memory locations.
AutoTalk	Allows you to answer the phone without pressing <i>talk/flash</i> or <i>speaker</i> . When the AutoTalk is set to On, simply remove the handset from the cradle and the phone automatically answers the call (see page 24).
Anykey Answer	Allows you to answer the phone without pressing <i>talk/flash</i> or <i>speaker</i> . When the Anykey Answer is On, you can answer a call by pressing any number key, <i>*/tone/<</i> , or <i>*/></i> on the handset (see page 24).
Banner (True Banner)	Customize the name of your handset, and display it in the LCD. While intercom, intercom hold, Room Monitor, and Copy Phonebook operation, your banner will be displayed on the receiving handset. (see page 24).
Language	Language option can be used to choose the language of your display. You can select from English, French, or Spanish (see page 25).
Key Touch Tone	Set your phone's key touch-tone to On or Off (see page 25).

Answering Setup

This menu allows you to set up TAD settings from your handset. You can also set these setup menus from the base (see page 51).

Submenu option	Description
Security Code	Select a two-digit Personal Identification Number (PIN) code. A PIN code is required to play your messages from a remote location, you will need to enter a two-digit PIN code (see page 25).
Ring Time	Allows you to set the number of rings the caller hears before your answering system plays the outgoing message. You can set the ring time to answer after two, four, or six rings. Setting "TS" (Toll Saver), the answering system picks up after two rings if you have new messages, and after four rings if there are none (see page 26).
Record Time	Set the duration for recording the incoming messages. You have three record time options. The options "1 minute" or "4 minutes" set the duration for recording the incoming messages. "Announce only" answers the call with the preset greeting or your personal greeting but prevents the caller from leaving a message (see page 26).
Message Alert	Lets you know when you have a new incoming message by sounding a short alert tone (see page 26).
Language	Select the Language of your answering system announcements from English, French, or Spanish (see page 26).
Language	Language option can be used to choose the language of your display. You can select from English, French, or Spanish (see page 25).
Call Screen	Set the call-screening feature to On or Off (see page 26).

Global Setup

If you change one of the Global settings, you change the setting for all additional handsets. Only one handset can change Global settings at a time.

Submenu option	Description
Day & time	Set the day and time of your display (see page 27).
CIDCW	Set the Caller ID on Call Waiting (CIDCW) setting. CIDCW performs the same as regular Caller ID on call waiting number (see page 25). Call Waiting Deluxe allows you to handle call waiting calls in seven different ways (see page 27).
Area Code	Store or edit the area code. If you enter a 3-digit area code number in the "Area Code" option, your local area code does not appear in the Caller ID message. For calls received from outside your local area code, you will see a full 10-digit number (see page 28). Note: If your calling area requires 10-digit dialing, do not program this option.
Dial Mode	Set the dial mode to tone or pulse (see page 28).
Copy Phonebook	Allow you to transfer the phonebook data stored in one handset to another handset (see page 28).
Voice Mail Tone	If your service does not support SDT message signal, it allows you to set your VMWI (Visual Message Waiting Inculcator) not to detect SDT message signal (see page 29).


System Reset

System Reset is used to clear the handset's ID from the main base unit, or the base ID from the handset.

Submenu option	Description
Deregister HS	Clear the handset ID from the base. Use this option, for example when you change the digital security code (see page 29).
Replacing Base	Clear the base ID. Use this option, for example, if you wish to deregister the base to use the handset with another base of the DSS series (DCT646/DCT6465/DCT648/DCT6485 series) (see page 29).


Setting Up the Menu Setup Options

Entering Menu Setup Option

- 1) Press the **menu/del** key in the standby mode.
- 2) Use **ring/vol/▲** or **ring/vol/▼** to move the pointer to a desired main menu setup option (DirectLink Mode, Room Monitor, Handset Setup, Answ. Setup, Global Setup, and System Reset).

- 3) Press **select/☒** to select the desired main menu setup option.
- 4) Use **ring/vol/▲** or **ring/vol/▼** to select a desired submenu setup option, and then press **select/☒** to enter.
In the submenu setup option, **ring/vol/▲** or **ring/vol/▼** is used to select an item. Press **select/☒** to confirm your selection. For detailed instructions, see the following sections for the desired submenu.
- 5) To exit the menu, press **end** or place the handset to the cradle.

DirectLink Mode

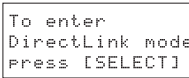Using the DirectLink Mode

- 1) Enter the "DirectLink Mode" menu option (see "Entering Menu Setup Option" on page 22). "To enter DirectLink mode press SELECT" appears.

- 2) Press **select/☒** to enter the DirectLink mode. You will hear a confirmation tone, and "DirectLink Mode Complete" appears.
- 3) To return back to the normal mode, exit the DirectLink mode. To exit the DirectLink mode, press **menu/del**, and then **select**, or return the handset to the cradle.

Room Monitor

- 1) Enter the "Room Monitor" menu option (see "Entering Menu Setup Option" on page 22). "To Room Monitor" appears.
- 2) Select the handset you want to monitor by using **ring/vol/Λ** or **ring/vol/v**.
- 3) Press **select/☒**.
"RoomMonitor" appears and you hear sounds in the room where the handset is installed.
- 4) To finish the Room Monitor, press **end** or return the handset to the cradle.

```
To Room Monitor
▶Handset #2
```



This is an example, if you have handset #1 and #2.

Handset Setup

Selecting a Ringer Tone

- 1) Enter the "Handset Setup" menu option, and then the "Ringer Tones" submenu option (see "Entering Menu Setup Option" on page 22).
There are 10 ringer tones or 10 melodies to choose from.
 - Ringers [Flicker, Clatter, Soft Alert, Wake Up, Light Bug, Beep Boop, Tone Board, Chip Chop, Party Clap, Reminder]
 - Melodies [Beethoven's Symphony #9 (Beethoven9), For Elise (Elise), We Wish You A Merry Christmas (Merry- Xmas), Home Sweet Home (Hm Swt Hm), Lorri Song #6 (Lorri Song), When the Irish Eyes Are Smiling (Irish Eyes), Aura Lee, Let Me Call You Sweet Heart (Sweetheart), Star Spangled Banner(Star Spangle), Old MacDonald(Old MacDld)]
- 2) Press **ring/vol/Λ** or **ring/vol/v** to move the pointer. You will hear the ringer or melody as you scroll through the options.
- 3) Press **select/☒**. You will hear a confirmation tone.

```
Ringer Tones
▶Flicker
Clatter
```

Distinctive Ringer Setup

- 1) Enter the "Handset Setup" menu option, and then the "Distinct. Ring" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press *ring/vol/▲* or *ring/vol/▼* to select "On" or "Off".
- 3) Press *select/☒*. You will hear a confirmation tone.

```
Distinctive Ring
▶ On
Off
```

Setting the AutoTalk

- 1) Enter the "Handset Setup" menu option, and then the "Auto Talk" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press *ring/vol/▲* or *ring/vol/▼* to change the selection, "On" or "Off".
- 3) Press *select/☒*. You will hear a confirmation tone.

```
Auto talk
On
▶ Off
```

Setting the Anykey Answer

- 1) Enter the "Handset Setup" menu option, and then the "Anykey Answer" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press *ring/vol/▲* or *ring/vol/▼* to change the selection, "On" or "Off".
- 3) Press *select/☒*. You will hear a confirmation tone.

```
Anykey Answer
On
▶ Off
```

Setting the True Banner

- 1) Enter the "Handset Setup" menu option, and then the "Banner" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Use the number keypad (0-9), **/tone/<*, **/>*, or *menu/del* to enter or edit the name.
- 3) Press *select/☒*. You will hear a confirmation tone.

```
Banner
█ #1
```


Selecting a Language

- 1) Enter the "Handset Setup" menu option, and then the "Language" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press *ring/vol/∧* or *ring/vol/∨* to choose English, French (Français), or Spanish (Español).
- 3) Press *select/☒*. You will hear a confirmation tone.

```

Language
▶English
Français

```

Setting the Key Touch Tone

- 1) Enter the "Handset Setup" menu option, and then the "Key Touch Tone" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press *ring/vol/∧* or *ring/vol/∨* to change the selection, "On" or "Off".
- 3) Press *select/☒*. You will hear a confirmation tone.

```

Key Touch Tone
▶On
Off

```

Answering System Setup**Setting a PIN Code**

- 1) Enter the "Answ. Setup" menu, and then the "Security Code" submenu (see "Entering Menu Setup Option" on page 22).
- 2) Enter a two-digit PIN code (01-99) using the number keypad (*0-9*).
- 3) Press *select/☒*. You will hear a confirmation tone.

```

Security Code
00

```



For Answering Setup menu, you can also set them from the base (see page 51).

Setting the Ring Time

- 1) Enter the "Answ. Setup" menu option, and then the "Ring Time" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press *ring/vol/Λ* or *ring/vol/√* to select a Ring Time (Toll Saver, 2 Times, 4 Times, or 6 Times).
- 3) Press *select/☒*. You will hear a confirmation tone.

```
Ring Time
▶ Toll Saver
  2 Times
```

Setting the Record Time

- 1) Enter the "Answ. Setup" menu option, and then the "Record Time" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press *ring/vol/Λ* or *ring/vol/√* to select Record Time (1 Minute, 4 Minutes, or Announce Only).
- 3) Press *select/☒*. You will hear a confirmation tone.

```
Record Time
▶ 1 Minute
  4 Minutes
```

Setting the Message Alert On or Off

- 1) Enter the "Answ. Setup" menu option, and then the "Message Alert" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press *ring/vol/Λ* or *ring/vol/√* to choose "On" or "Off".
- 3) Press *select/☒*. You will hear a confirmation tone.

```
Message Alert
On
▶ Off
```

Setting the Language of your Answering System

- 1) Enter the "Answ. Setup" menu option, and then the "Language" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press *ring/vol/Λ* or *ring/vol/√* to choose English, French (Français), or Spanish (Español).
- 3) Press *select/☒*. You will hear a confirmation tone.

```
Language
▶ English
  Français
```

Setting the Call Screen

- 1) Enter the "Answ. Setup" menu option, and then the "Call Screen" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press **ring/vol/Λ** or **ring/vol/∇** to choose "On" or "Off".
- 3) Press **select/☒**. You will hear a confirmation tone.

```

▶ Call Screen
  On
  Off
  
```

Global Setup

Setting Day and Time

- 1) Enter the "Global Setup" menu option, and then the "Day & Time" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press **ring/vol/Λ** or **ring/vol/∇** to select the day of the week, and then press **select/☒**.
- 3) Press **ring/vol/Λ** or **ring/vol/∇** to set the time, and then press **select/☒**.
- 4) Press **ring/vol/Λ** or **ring/vol/∇** to set minute, and then press **select/☒**.
- 5) Press **ring/vol/Λ** or **ring/vol/∇** to choose "AM" or "PM", and then press **select/☒**. You will hear a confirmation tone.

```

Day & Time
SUN 12:00 AM
[←/↑/↓/→/SELECT]
  
```

note

- When a Global setting is changed from one handset, this affects all registered handsets.
- For setting the Day and Time, the idle time-out is extended to 2 minutes.

Setting CIDCW (Caller ID on Call Waiting)

- 1) Enter the "Global Setup" menu option, and then the "CIDCW" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press **ring/vol/Λ** or **ring/vol/∇** to select "CW On/CWDX On", "CW On/CWDX Off", or "CW Off/CWDX Off", and then press **select/☒**. You will hear a confirmation tone.

```

CIDCW
▶ CW On /CWDX On
  CW On /CWDX Off
  
```




•When the area code has already been stored in memory, the stored area code will be displayed. To change it, use **menu/del** and number keys to enter the new area code.

•If you receive a call, the transfer will be canceled.
•If an error occurs, the phonebook locations transferred before the error were stored in the receiving handset. "Unavailable" appears on the display.


Setting the Area Code

- 1) Enter the "Global Setup" menu option, and then the "Area Code" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press the number keypad (0-9) to enter a 3-digit area code.
- 3) Press **select**/. You will hear a confirmation tone.




Setting the Dial Mode

- 1) Enter the "Global Setup" menu option, and then the "Dial Mode" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press **ring/vol/Λ** or **ring/vol/∇** to change the selection, "Tone" or "Pulse" (the initial setting is Tone).
- 3) Press **select**/. You will hear a confirmation tone.



Copy Phonebook

- 1) Enter the "Global Setup" menu option, and then the "Copy Phonebook" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press **ring/vol/Λ** or **ring/vol/∇** to choose "One memory" or "All Memory", and then press **select**/. If you choose "All Memory", "Are you sure?" appears on the handset. Go to step 4.
- 3) Press **ring/vol/Λ** or **ring/vol/∇**, or the number keypad (0-9) to select the phonebook location you want to export, and then press **select**/.
- 4) Press **ring/vol/Λ** or **ring/vol/∇** to select the handset to which you want transfer the phonebook locations, and then press **select**/. The phonebook locations will be transferred to the handset. On the receiving handset, "Receiving Handset" appears. When the transfer complete, "Done!" appears on the handset.



Voice Mail Tone (Block from SDT message signal)

- 1) Enter the "Global Setup" menu option, and then the "Voice Mail Tone" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press *ring/vol/Λ* or *ring/vol/∇* to set the voice message indication (SDT message signal) to "On" or "Off".
- 3) Press *select/☒*. You will hear a confirmation tone.

```
Voice Mail Tone
▶ On
Off
```

System Reset**De-register the Handset**

- 1) Enter the "System Reset" menu option, and then the "Deregister HS" submenu option (see "Entering Menu Setup Option" on page 22).
- 2) Press *ring/vol/Λ* or *ring/vol/∇* to select the handset ID to be de-registered from the list, and then press *select/☒*. "Deregister HS?" appears.
- 3) Press *select/☒*. You will hear a confirmation tone. When de-registration is complete, "Deregistration Complete" appears.
- 4) After de-registering the handset, move to "Replacing the Base Setting" below.

```
Which Handset?
▶ Handset #1
Handset #2
```

```
Deregister HS?
Yes
▶ No
```

Replacing the Base Setting

- 1) Enter the "System Reset" menu option, and then the "Replacing Base" submenu option (see "Entering Menu Setup Option" on page 22). "Replace Base?" appears.
- 2) Press *select/☒*. You will hear a confirmation tone. The base information will be deleted. When replacing the base is complete, "Place the handset on main base to register" appears, register the handset(s) to the new base (see page 66).


```
Replace base?
Yes
▶ No
```



- To set "Autotalk", see page 24 or "Anykey Answer" see page 24.
- The handset microphone is located at the bottom of the handset (see "Controls and Functions" on page 6). Position yourself as near to the handset as possible and speak clearly.
- If the line is in use by another handset(s), "Line In Use" appears in all registered handset's display, that are not in use.

Making and Receiving Calls

From the Handset

This handset has a built-in speakerphone that allows you to have a "hands-free conversation." This feature allows you to easily communicate while performing other tasks, such as cooking.  (speaker icon) appears during hands-free conversations.

You can easily switch a call from normal conversation to "hands-free conversation". To switch a call, press **speaker** during the call.

	From the Handset	
	Normal conversation	Hands-free conversation
To answer a call	Handset On the Cradle Pick up the handset (AutoTalk) or pick up the handset and press talk/flash . Handset Off the Cradle Press any number key, */tone/< , or */> (Any Key Answer), or press talk/flash .	Handset Off the Cradle Press speaker .
To make a call	Handset Off the Cradle 1) Press talk/flash . 2) Listen for the dial tone. 3) Dial the number. OR Dial the number, and then press talk/flash .	Handset Off the Cradle 1) Press speaker . 2) Listen for the dial tone. 3) Dial the number. OR Dial the number, and then press speaker .
To hang up	Press end , or return the handset to the cradle (AutoStandby).	
To enter a pause within the dialing sequence	When you dial the number in the standby mode, press redial/pause . "P" appears in the display, which represents a pause.	

From the Base (Receiving calls only)

- 1) Press **speaker** and begin speaking.
- 2) To hang up, press **speaker**.

```
Receiving_call
```

Placing a Call on Hold

- 1) During a call, press **hold/transfer/int'com**. The call will be put on hold.

```
Hold, to transfer  
▶ Handset #2  
Handset #3
```

tip Once 10 seconds has passed or when you press the **end** key, the call will be put on hold.

- 2) To talk to the caller, press **talk/flash** or **speaker** on a handset. The phone will return back to the call.

```
SUN 12:00A  
Handset #1  
Line on Hold
```



- The base microphone is located under the base (see "Controls and Functions" on page 7). Position yourself as near to the base as possible.
- You can hold a call for 5 minutes, when 5 minutes has passed, the call is disconnected and the phone returns to the standby mode.
- While a call is on hold, CIDCW can not be received.



- If the number exceeds 32 digits, only the first 32 digits are retained in redial memory.
- If the redial memory is empty, you will hear a beep.

Redialing a Call

The last three phone numbers dialed can be quickly redialed.

Redialing from Standby Mode

- 1) Press **redial/pause** in the standby mode.
- 2) Press **redial/pause** again. Each press of **redial/pause** will display one of the last three number redialed.
- 3) Press **talk/flash** or **speaker**. The selected number is dialed.
- 4) To hang up, press **end**.

Redialing from Talk Mode


- 1) Press **talk/flash** or **speaker**.
- 2) Press **redial/pause**. The last number dialed will be displayed and redialed. To hang up, press **end**.

Deleting a Redial Record

- 1) Press **redial/pause** in the standby mode.
- 2) Press **redial/pause** repeatedly to display the number to be deleted.
- 3) Press **menu/del**.
- 4) Press **ring/vol/∧** or **ring/vol/∨** to choose "Yes."
- 5) Press **select/☒**. The redialed number is deleted.

Storing a Redial Record


- 1) Press **redial/pause** in the standby mode.
- 2) Press **redial/pause** repeatedly to display the number to be stored.
- 3) Press **select/☒**. "Store/Edit Name" appears.
- 4) To complete the setting, follow the steps 5-9 in "Storing Phone Numbers, Names, Distinctive Rings, and Speed dial" on page 37.

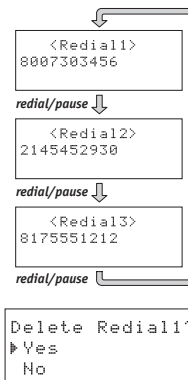

Adjusting the Handset Ringer and Earpiece Volume


Handset ringer tone and volume

Press the volume up key or volume down key (labeled as *ring/vol/▲* or *ring/vol/▼* in standby mode to select one of three ringer volume (Off, Low, or High).



Earpiece volume

Pressing the volume up key or volume down key (labeled as *ring/vol/▲* or *ring/vol/▼* key) during a call will change the earpiece volume of the handset. This setting will remain in effect after the telephone call has ended.



Do Not Disturb (DND)

DND allows you to mute the ringer of the handset and the base at once. Additionally, if you have more than one handset, ringer for all handsets will be muted. To do this, In the standby mode, press **do not disturb** on the base. You will hear a confirmation tone and the DND LED light. To cancel ringer mute, Press **do not disturb** again. You can also mute the ringer tone while the phone is ringing by pressing **do not disturb** on the base.

To mute the ringer tone temporarily, when the phone is ringing:

- Press **end** on a handset, or
- Press **pla /stop** on the base.

The ringer tone will return to the previous setting starting with the next incoming call.

www.uniden.com



- **Standby Mode** - The handset is not in use. The handset may be on or off the base, but **talk/flash** key has not been pressed.

- When you press volume up key (*ring/vol/▲*) in the maximum volume level or volume down key (*ring/vol/▼*) in the lowest volume level, an error tone sounds.

- Setting the DND to On while the answering system Off, turns the Answering system on automatically. The Answering system setting will return to the original setting when you cancel the DND.

- If you press **ans er on/off** when the DND and the answering system is On, both of the DND and the answering system will turn Off.


BASICS [33]



- The tone feature only applies when the dial mode is set to pulse.
- This special number can be stored in a memory location. This is referred to as Chain Dialing (see page 44).

Mute Microphone

With the handset

You can temporarily turn Off the microphone so that the person you are talking with cannot hear you. During a telephone call press **menu/del** to turn Off the microphone. "Mute On" and  (mute icon) appear in the display. To cancel muting, repeat above step again when Mute is set to On, "Mute Off" appears.

With the base

While using the base speakerphone, press **mute** on the base to turn Off the microphone. Press **mute** again or press **speaker** to cancel muting.

Tone Dialing Switch-over

Some telephone companies use equipment that requires pulse dialing (sometimes referred to as rotary dialing). If you need to enter tone dialing digits, you can switch-over to tone dialing during the call. For example, entering your bank account number after you have called your bank.

Initially make your call with the pulse dialing mode. Once your call connects, press ***/tone/<**. Enter the desired number. These digits will be sent as tone dialing. Once the call ends, the tone mode is canceled and pulse dialing mode resumes.

Tone_dial

Traveling Out-of-Range

During a call, as you begin to move your handset too far from your base unit, noise may increase. If you pass the range limits of the base unit, you will hear a beep and "Out of Range" appears, and then the handset returns to the standby mode. You may return back to the call if you move your handset within the range limits of the base, and press **talk/flash** or **speaker** within 30 seconds.

Clarity Booster


If you encounter interference while using your phone, you can manually improve the sound quality by pressing the Clarity Booster. This works only when the phone is in use.



- 1) Press **menu/del**.
- 2) Select **ring/vol/▲** or **ring/vol/▼** to move the pointer to "Clarity Booster", and then **select/☒**.
"Booster On" and "B" appear in the display.
To turn Off the Clarity Booster, repeat above step again when the Clarity Booster is On, "Booster Off" appears.

Privacy Mode

Privacy Mode allows you privacy, and guarantee of no interruption from other registered handsets.



- 1) Press **menu/del**.
- 2) Select **ring/vol/▲** or **ring/vol/▼** to move the pointer to "Privacy Mode", and then **select/☒**.
"Privacy Mode On" and "P" appear in the display. Other handsets will display which handset is set to Privacy Mode.
To exit the Privacy Mode, repeat above step again when the Privacy Mode is On. "Privacy Mode Off" appears.

Intercom/Call Transfer Feature

Intercom and transfer features are available for your phone. See "Intercom/Call Transfer Feature" on page 68 for details.

www.uniden.com

3-Way Conferencing

The phone permits 3-way conversations between the handset, base, and an outside line.

When speaking on the handset

- 1) Press **speaker** on the base to initiate the 3-way conversation.
- 2) To hang up, press **speaker** on the base. The handset will still be connected to the call.

Receiving_call

When speaking on the base

- 1) Press **talk/flash** or **speaker** on the handset to initiate the 3-way conversation.
- 2) To hang up, return the handset to the cradle, or press **end** key on the handset. The base will still be connected to the call.

3_way_hand

If you have more than one handset, the phone permits 4-way conversations, see "4-way Conferencing" on page 68 for details.



You must subscribe through your local telephone company to receive Call Waiting or Caller ID on call waiting service.

Flash and Call Waiting

If you have Call Waiting service and a call waiting tone sounds while you are on a call, press **talk/flash** to accept the waiting call. There is a short pause, and then you will hear the new caller. To return to the original caller, press **talk/flash** again.

talk_flash

New Message LED

The new message LED on the handset is designed to work with your answering system. The LED flashes when you have new messages in your answering system. The LED stops flashing when all new messages are played back (see "Using your Answering System" on page 59)

Phonebook

Phonebook allows you to dial a number using just a few key presses. Your phone stores names/numbers in the phonebook memory location, and you can search names in alphabetical order. You have a total of 100 locations that can be used for the phonebook (including the Speed dials) and Caller ID messages.

- 1) When the phone is in the standby mode, press **phonebook**.
The handset displays the following items:
(1st line) The number of the phonebook locations used
(2nd line) How to search (press the number keypad, **ring/vol/∧** or **ring/vol/v**)
(3rd line) How to enter the storing operation (press the **select/☒** key)

```
Phonebook :100
Search [A-Z/↑/↓]
Store [SELECT]
```

- 2) Press **select/☒**, "Store/Edit Name" appears.
- 3) Enter the name (up to 16 characters) by using the number keypad (see the "Steps for Entering Names and Special Characters" on page 39).
If a name is not required, go to step 5. <No Name> will be used as the name.
- 4) Press **select/☒** to store the name, "Store/Edit No." appears.
- 5) Press the number keypad to enter the phone number (up to 20 digits), press **select/☒** to store the number.
- 6) "Distinctive Ring" appears. Press **ring/vol/∧** or **ring/vol/v** to move the pointer to one of the Distinctive Ring options, and then press **select/☒**.


```
Store/Edit Name
Movies■
```

```
Store/Edit No.
8007303456■
```

```
Distinctive Ring
▶No Selectn
Flicker
```




- You have a total of 100 locations. However, Caller ID messages and Phonebook share the memory locations.
- Selecting a speed dial location where a number is already stored, releases the old number's speed dial setting. The new number will be stored in the speed dial location.
- When the memory is full, you will hear a beep and "Memory Full" appears. You cannot store names and numbers.
- The pause key counts as one digit. Pressing **redial/pause** more than once increases the length of the pause between numbers. Each pause represents a 2 second delay.

 If you choose not to store a "Distinctive Ring", simply select the "No Selectn" option.

7) "Speed Dial" appears. Press *ring/vol/▲* or *ring/vol/▼* to move the pointer to select the Speed dial location (10 locations: SPD1-SPD0).

```
Speed Dial
No Selectn
SPD1:<Empty>
```

 If you choose not to store the name/number as a Speed Dial, simply select the "No Selectn" option.

8) Press *select/☑*. You will hear a confirmation tone and "Done!" appears in the display.

```
Movies
800-730-3456
♪Beethoven9/SPD1
```

Steps for Entering Names and Special Characters

Refer to the letters on the number keys to select the desired characters. With each press of a number key (0-9), the displayed character appears in the following order: Upper case letters first, lower case letters next and finally the number corresponding to the key.

keys	Number of times key is pressed								
	1	2	3	4	5	6	7	8	9
1	1								
2 abc	A	B	C	a	b	c	2		
3 def	D	E	F	d	e	f	3		
4 ghi	G	H	I	g	h	i	4		
5 jkl	J	K	L	j	k	l	5		
6 mno	M	N	O	m	n	o	6		
7 pqrs	P	Q	R	S	p	q	r	s	7
8 tuv	T	U	V	t	u	v	8		
9 wxyz	W	X	Y	Z	w	x	y	z	9
0 oper	&	<	>	<	>	/	(blank)	-	_
	.	*	:	?	!	@	'	"	#
	#	0							



If the next character uses the same number key, you must press **#/>** to move the cursor over. Otherwise the next time you press the number key, it changes the character that was previously set.

If you make a mistake while entering a name

Use ***/tone/<** or **#/>** to move the cursor to the incorrect character. Press **menu/del** to erase the wrong character, and then enter the correct character. To delete all characters, press and hold **menu/del**.

For example, to enter **Movies**:

- 1) When the phone is in the standby mode, press **phonebook**.
- 2) Press **select/☒**, "Store/Edit Name" appears.
- 3) Press **6** once, and then press **#/>** to move the cursor to the right.
- 4) Press **6** six times.
- 5) Press **8** six times.
- 6) Press **4** six times.
- 7) Press **3** five times.
- 8) Press **7** eight times.
- 9) When finished, press **select/☒**.

To continue to store the telephone number, proceed to step 5 on page 37.

Viewing the Phonebook

Your phone stores names/numbers in the phonebook memory locations, and you can search names in alphabetical order. You can view the phonebook even while the phone is in use.

- 1) Press **phonebook**.
If you recall the phonebook during a call, "Store [SELECT]" will not appear.

```
Phonebook : 100
Search [A-Z/↑/↓]
Store [SELECT]
```

- 2) Press **ring/vol/∧** or **ring/vol/∨**, or the number keypad to scroll through the phonebook locations. Phonebook locations appear in alphabetical order (from first to last when you press **ring/vol/∨**, from last to first when you **ring/vol/∧**).

Or, refer to the letters on the number keys to select the first letter of the desired name. Press a number key (**2-9** and **0**) once for the first letter, press twice for the second letter, and so on. The first location that begins with the letter you entered appears.

For example, to search for "Movies", press **6** once. Press **ring/vol/∧** or **ring/vol/∨**, until the phonebook location is displayed.

- 3) To finish the viewing operation, press **end** (or **phonebook** during a call).



During a call, don't press **end** or the call will be disconnected.


Making Calls Using the Phonebook

From Standby Mode

- 1) When the phone is in the standby mode, view the phonebook location to dial (see "Viewing the Phonebook" on page 41).
- 2) Press *talk/flash* or *speaker*. The displayed number is dialed.
- 3) To hang up press *end*.

Movies 800-730-3456 ♪Beethoven9/SPD1
--

From Talk Mode

- 1) Press *talk/flash* or *speaker*.
- 2) View the phonebook location to dial (see "Viewing the Phonebook" on page 41).
- 3) Press *select*/. The number in the displayed phonebook location is dialed.
- 4) To hang up press *end*.

Speed Dialing

If you store a phone number in a speed dial memory location (10 locations: SPD1 - SPD0), you can use the speed dialing feature. When the phone is in the standby mode, press and hold a number key (0-9) associated with the speed dial until the phone number appears, and then press *talk/flash* or *speaker*. The number stored in the speed dial (SPD1 - SPD0) is dialed.

Editing or Erasing a Stored Name, Phone Number, Distinctive Ring, and Speed Dial

- 1) When the phone is in the standby mode, Press **phonebook**.
- 2) Press **ring/vol/λ** or **ring/vol/v**, or the number keypad to view the phonebook locations (see "Viewing the Phonebook" on page 41).

```
Phonebook :100
Search [A-Z/↑/↓]
Store [SELECT]
```

a. Editing the Stored Data

- 1) When the phonebook location to be edited appears, press **select/☒**. "Store/Edit Name" appears.
- 2) Follow the steps 3 to 7 under "Storing Phone Numbers, Names, Distinctive Rings, and Speed Dial" on page 37 to complete the editing operation.
- 3) Press **select/☒**. You will hear a confirmation tone.

```
Store/Edit Name
Movies■
```


b. Deleting the Stored Data

- 1) When the phonebook location to be deleted appears, press **menu/del**. "Delete Memory?" appears.
- 2) Press **ring/vol/λ** or **ring/vol/v** to move the pointer to "Yes".
- 3) Press **menu/del**. You hear a confirmation tone. "Deleted" appears in the display.

```
Delete Memory?
Yes
▶ No
```

Chain Dialing

The memory locations in the handset are not limited to phone numbers. You can also store a group of numbers (up to 20 digits), that you need to enter once your call connects. This is referred to as Chain Dialing.

An example of this is a bank account number. Store the account or special number in one of the phonebook locations. (refer to "Storing Phone Numbers, Names, Distinctive Rings and Speed Dial" on page 37). When you call your bank, and you are prompted to enter the account number, scroll through your phonebook locations until you find your account or special number, then press **select**/.

Caller ID and CIDCW (Call ID on Call Waiting)

You must subscribe to Caller ID services through your local telephone provider to use these features.

When the telephone rings, the Caller ID feature allows you to view the caller's name, phone number, date and time of call. With CIDCW (Caller ID on call waiting), you will hear a call waiting tone while you are on a call, and the Caller ID data is displayed. To accept the waiting call, press *talk/flash* (see page 27). Additionally, you can dial a number stored in the Caller ID list or save data to your Phonebook locations.

Important:

Memory locations for Caller ID messages and Phonebook locations (including Speed Dials) are common, you can store up to 100 in total. A Caller ID message is not stored when you have stored 100 of the phonebook locations. The earliest Caller ID message is overwritten when you have stored 100 of the phonebook locations and Caller ID messages in total.

The date and time received	10/12 11:20AM
Caller's name	Jane Smith
Caller's phone number	214-555-1234

- 1) When the call is via a private branch exchange (PBX), the caller's phone number and name may not appear. 1) When the Caller ID message is received, the display shows the caller's phone number along with the date and time. The incoming call information is stored in the Caller ID record. If the Caller ID service includes the caller's name, the name will appear in the display (up to 15 characters).

You may receive any one of the following messages:

When invalid data is received	"Incomplete Data"
When a private name is received	"Private Name"
When a private number is received	"Private Number"
When an unknown name is received	"Unknown Name"
When an unknown number is received	"Unknown Number"

www.uniden.com




- If you answer a call before the Caller ID message is received (for example, before the second ring), the Caller ID message will not appear.
- When the call is received via a telephone company that does not offer Caller ID service, the caller's phone number and name does not appear. (This includes some international calls.)



•The number of calls from the same Caller ID appears next to the received time. Once you view the new message, the number will be cleared and disappear.

•During a call, don't press **end** or the call will be disconnected.

2) When you pick up the phone, the display changes to "Talk."
(AutoTalk feature is set to on).

 Data errors appear as "■."


Viewing the Caller ID List

The Caller ID list stores information for incoming calls - even unanswered calls. You can store 100 of the Caller ID messages and Phonebook locations (including SpeedDials) in total. You can view the Caller ID list during a call or when the phone is in the standby mode.

1) Press **call id**.

The summary screen appears. The screen shows the number of new messages and total messages.

2) To view the Caller ID messages in historical order (from new to old or from old to new), repeatedly press **ring/vol/▲** to scroll through the messages from the latest to the earliest, or **ring/vol/▼** to scroll back through the messages.
Or, to view the Caller ID messages with alphabetical search, press the number key pad (**2-9** and **0**) with the letter associated with the first letter of the desired message.

 Once you view the Caller ID list with alphabetical search, you cannot switch back to historical order (from new to old or from old to new) unless you exit and re-enter the operation.

3) To finish the viewing operation, press **call/id** (or **end** during a call).

Deleting a Caller ID Message

Deleting Information from the Caller ID List

- 1) When the phone is in the standby mode, view the Caller ID information to be deleted (see "Viewing the Caller ID List" on page 46).
- 2) Press **menu/del**. "Delete Caller ID" appears.
- 3) Press **ring/vol/∧** or **ring/vol/∨** to choose "Yes."
- 4) Press **select/☒**. You will hear a confirmation tone.

Deleting all Caller ID names/numbers

- 1) When the phone is in the standby mode, press **call id**. "Caller ID", and then press the **OK** soft key. The number of new and total records appears.
- 2) Press **ring/vol/∧** or **ring/vol/∨** to choose "Yes."
- 3) Press **select/☒**. You will hear a confirmation tone.

```
Delete Caller ID
▶ Yes
  No
```

```
Caller ID
New : 5
Total: 25
```

```
Delete All?
  Yes
▶ No
```



•Once the Caller ID data has been deleted, the information cannot be retrieved.

•Standby Mode - The handset is not in use. The handset may be on or off the base, but **talk/flash** key has been pressed.

•Talk Mode - The handset is not in the cradle and **talk/flash** or **speaker** has been pressed enabling a dial tone. "Talk" appears on the display.



- You cannot make a call from the Caller ID list if your phone is connected to a private branch exchange (PBX).
- When a long distance call has been set, "1" appears in the display.
- If a call comes in via a telephone system that does not offer Caller ID service, no information is stored.
- If the Caller ID message was received as a private/unknown number, or the message does not have the number, you cannot store the message in the Phonebook. Or it was received as private/unknown name, the message will be stored as <No Name>.
- Even if the 100 memory locations are full, the message will be stored in the Phonebook. However, the message will be erased from the Caller ID list.

[48] CALLER ID

Using the Caller ID Message List

Calling a party from the Caller ID list

From Standby mode

- 1) When the phone is in the standby mode, view the Caller ID message (see "Viewing the Caller ID List" on page 46).
- 2) Press **talk/flash** or **speaker**. The displayed phone number dials automatically.

10/12 11:20AM Jane Smith 214-555-1234

From Talk mode

- 1) Press **talk/flash** or **speaker**.
- 2) View the Caller ID message you want to dial (see "Viewing the Caller ID List" on page 46).
- 3) Press **select**/. The displayed phone number will be dialed.

Long Distance calls and Area Code Setting/Cancellation

While the present Caller ID information is displayed, pressing ***/tone/<** will place or remove the prefix "1" in the display to set the call for a long distance call, or pressing **#/>** will set or cancel an area code (see page 28).

Storing Caller ID messages in the Phonebook

Messages shown in the Caller ID list can be stored in the phonebook. The phone number and name of the party on the Caller ID list can be stored in memory.

- 1) When the phone is in the standby mode, view the Caller ID message to be stored. Then press **select**/. "Store/Edit Name" appears.
- 2) To complete the setting, follow the steps 4-8 in "Storing Phone Numbers, Names, Distinctive Rings, and Speed dial" on page 37.

www.uniden.com

Call Waiting Deluxe Features

Your phone gives you new options for call waiting. At the touch of a button, you can place the caller on hold, send them to your voice mail service, or conference them into your current call. You may be required to subscribe to Call Waiting and Call Waiting Deluxe to use these features. Not all features are available in all areas. Check with your local telephone company for details.

- 1) When you receive a Call Waiting call, press **menu/del** for a list of options.
- 2) Press **ring/vol/∧** or **ring/vol/∨** to select "CW deluxe", and then press **select/☒**.
- 3) Press **ring/vol/∧** or **ring/vol/∨** or the number keypad (1-7) to select an option.

For example:

press **ring/vol/∨** 4 times press **ring/vol/∨** 2 times

1▶Ask to Hold	3 Forward Call	5 Conference
2 Tell Busy	4 Answer/Drop 1	6 Drop First
3 Forward Call	5▶Conference	7▶Drop Last

- 3) Press **select/☒**. A confirmation screen will appear, and returns back to the call.

Your phone is pre-programmed with seven call waiting options. You may select to ask the calling party to hold, send them a busy message, forward them to your voice mail, or answer and drop the first caller. You may also select to conference them into the current call or, at any time, choose to drop the first or drop the last caller. Check with your local telephone company for a full list of options.



- To activate features, select "CW On/CWDX On" in the CIDCW option. See page 27.
- You can also answer a waiting call immediately by pressing **talk/flash**, the first caller will be placed on hold. To return to the original caller, press **talk/flash** again.
- If you don't press a key within 30 seconds while in the operation, the phone back to a call.

The Integrated Answering Device

The phone has a built-in answering system that answers and records incoming calls. You can also use your answering system to record a conversation, leave a voice memo message, or to announce a special outgoing message to callers when you're away from your phone.

Features

- Digital Tapeless Recording
- Approx. 12 Minutes of Recording Time
- Call Screening On/Off
- Selectable Outgoing Messages
- Voice Prompts for Menu Setup Guidance
- Time and Day Announcement
- Remote Message Retrieval
- Toll Saver
- Conversation Recording
- Voice Memo
- Trilingual Language Option
- Message Alert
- Remote Operation from the Handset

Digital Tapeless Recording allows you to quickly review, save, or delete the messages you choose. You will never have to worry about a tape wearing out, jamming, or resetting improperly.

The Integrated Answering System is easy and convenient to use, but please read through all of the instructions carefully.

Turning the Answering System On/Off

- 1) To turn the answering system On, press **answer on/off** in the standby mode. After the announcement "Answering System is on", the current greeting message will be played and you will hear a confirmation tone. The message counter displays the number of messages stored in memory. If the display flashes, then there are new messages waiting for you.
- 2) To turn the answering system Off, press **answer on/off**. After the announcement "Answering System is off", the message counter display will no longer be illuminated. You can also turn the Answering System On or Off from the handset using the menu mode (see page 20).

Setting up your Answering System

Setting your outgoing message (Greeting)

When you receive a call, the answering system automatically plays either the pre-recorded message or your own greeting.

Pre-recorded message

The following message is pre-recorded:

"Hello, no one is available to take your call. Please leave a message after the tone."

Recording a personal outgoing message (Greeting)

You can record a greeting up to 30 seconds long (must be more than 2 seconds long).

- 1) When the phone is in the standby mode, press and hold **greeting**.
- 2) Start your recording after the announcement "Record greeting". The message counter displays " - - ", then begins to count down.
- 3) When you have finished recording your greeting, press **greeting**, or **set**. You will hear a confirmation tone and your recorded greeting plays back for you.



- When the answering system is full, "FL" appears on the base. You should delete some messages so that the system can record new messages.
- Position yourself as near to the base as possible and speak clearly when recording your outgoing message.
- If you make an outside call, or a call is received on the base during the operation, the operation is canceled.

Choosing between the two outgoing messages

When the phone is in the standby mode, press *greeting*. Press *greeting* again when the outgoing message is played. Each time *greeting* is pressed, the outgoing message is switched between the pre-recorded and the personal outgoing message.

Deleting an outgoing message

To delete the personal outgoing message, press *delete* while the message is playing. The system announces "Greeting has been deleted".

Setting the base ringer volume

You have four ringer volume options. One allows you to turn the base ringer off. The other three are volume levels.

- 1) When the phone is in the standby mode, press *ring/vol/∧* or *ring/vol/∨*. You hear the ringer at the current volume level ("3" High, "2" Medium, "1" Low, or "0" Off) (if you set the base ringer volume to off "Ringer Off" is announced), and it appears on the base.
- 2) Press *ring/vol/∧* or *ring/vol/∨* repeatedly until the desired ringer volume appears. You will hear a ringer at the selected volume level. The system returns to the standby mode. You can also set the base ringer volume or while the phone is ringing, press *ring/vol/∧* or *ring/vol/∨* repeatedly to select the desired ringer volume.

Adjusting the speaker volume level

When the base speaker is in use, press *ring/vol/∧* or *ring/vol/∨* on the base to adjust the volume. Press *ring/vol/∧* for louder or *ring/vol/∨* for softer.


The number 1-10 appears on the base indicating the volume levels. 1 being the softest and 10 being the loudest.

Using the menu mode

The Menu mode allows you to set the following Answering System functions.

- To scroll through the menu options, repeatedly press **clock/MENU** on the base in the standby mode. The system returns to standby after the last menu option. A confirmation tone sounds to indicate the standby mode.
- When you have completed the setting, press **play/stop** to exit the menu mode, or **clock/MENU** to move to the next menu option.
- You can also set these menus from the handset. See "Answering System Setup" on page 25 for instructions.

note For your convenience, voice prompts will guide you through the menu setup mode.

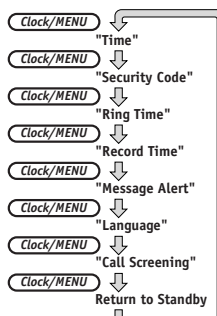



Time stamp will not be heard until you have set the time.

Setting the Time

Follow these steps to set the clock on the answering system to the correct time.

- 1) Press **clock/MENU**.
- 2) Press **skip/SELECT** or **repeat/SELECT** until the correct day is announced and the corresponding number (from "1" Sunday to "7" Saturday) appears.
- 3) Press **SET** to select the day.
- 4) Press **skip/SELECT** or **repeat/SELECT** until you hear the correct hour setting. The numbers "1" through "12" appear on the base as each hour is announced.
- 5) Press **SET** to select the hour.
- 6) Press **skip/SELECT** or **repeat/SELECT** until you hear the correct minute setting. The numbers "00" through "59" appears on the base as each minute is announced.
- 7) Press **SET** to select the minute.
- 8) Press **skip/SELECT** or **repeat/SELECT** until you hear the correct AM or PM setting. The message counter displays "A" or "P".
- 9) Press **SET** to select the AM/PM setting. A confirmation tone sounds, the day and time you set are announced for your review.

Setting a PIN code

To play your messages from a remote location, you will need to enter a two-digit Personal Identification Number (PIN) code (- -). To select a PIN code, perform the following steps:

- 1) Press **clock/MENU** twice. The current PIN code appears on the base and it is announced.
- 2) Press **skip/SELECT** or **repeat/SELECT** until the desired number appears. Press and hold **skip/SELECT** or **repeat/SELECT** to quickly scroll through the numbers on the display.
- 3) Press **SET** to select the PIN code. A confirmation tone sounds, the system announces the new PIN code.

Setting the ring time

The ring time setting allows you to set the number of rings the caller hears before your answering system plays the outgoing message. You can set the ring time to answer after two, four, or six rings. Setting "TS" (Toll Saver), the answering system picks up after two rings if you have new messages, and after four rings if there are none. This way, if you make a long distance call to check your messages, you can hang up after the second ring to avoid billing charges.

- 1) Press **clock/MENU** three times.
The current ring time setting ("2" 2, "4" 4, "6" 6, "TS" Toll saver) appears on the base and it is announced.
- 2) Press **skip/SELECT** or **repeat/SELECT** until the desired ring time appears.
- 3) Press **SET** to select the new ring time.
A confirmation tone sounds, the system announces the new ring time.

Selecting the message record time

You have three record time options. The options "1 minute" or "4 minutes" set the duration for recording the incoming messages. "Announce only" answers the call with the preset greeting or your personal greeting but prevents the caller from leaving a message.

- 1) Press **clock/MENU** four times.
The current recording time ("1" 1 minute, "4" 4 minutes, "A" Announce only) appears on the base and it is announced.
- 2) Press **skip/SELECT** or **repeat/SELECT** until the desired message record time appears.
- 3) Press **SET** to select the new recording time.
A confirmation tone sounds, the system announces the new record time.

Announce only feature

The Announce only feature plays a pre-recorded outgoing message or your own personal outgoing message, but it will not allow the caller to leave a message. To set "Announce only", follow the steps on page xx. To choose between the pre-recorded message or your own personal greeting, press *greeting*, when the outgoing message is played. Press *greeting* to select the greeting of your choice.

If you want to use your own greeting, you may want to change your greeting to omit the prompt to leave a message. Refer to "Recording a Personal outgoing message (Greeting)" on page 51.

The following message is pre-recorded:

"Hello, no one is available to take your call. Please call again."

Setting the message alert

Message Alert feature lets you know when you have a new incoming message by sounding a short alert tone.

If you set the Message Alert On, and when a new message is received, the alert tone will sound every 15 seconds. Set the Message Alert to On or Off by using the *clock/MENU* key.

1) Press *clock/MENU* five times. The current setting (On or Off) appears on the base and it is announced.

2) Press *skip/SELECT* or *repeat/SELECT* to choose "On" or "Off".

3) Press *SET*.

A confirmation tone sounds, the system announces the current setting you have selected. When the first new message is received, the alert tone will begin to sound.

Turning the message alert tone Off by pressing any key

To quickly turn Message Alert tone to Off, press any key on the base unit and the tone will automatically deactivate.

Turning the message alert tone Off when you are away from your phone

When all new messages are played back using the remote playback feature (see pages xx-xx) the Message Alert tone will automatically deactivate. The tone will not deactivate until all new messages are played back.

Selecting the language

You can select the Language of your answering system announcements to English, French, or Spanish.

1) Press **clock/MENU** six times.

The current setting ("E" English, "F" French, or "S" Spanish) appears on the base, and it is announced ("English" English, "Français" French, or "Español" Spanish).

2) Press **skip/SELECT** or **repeat/SELECT** to select the language.

3) Press **SET**.

A confirmation tone sounds, the system announces the new setting in the selected language.

Setting the call screen

You can screen calls when the Call Screen function is set to On.

1) Press **clock/MENU** seven times.

The current Call Screen setting (On or Off) appears on the base.

2) Press **skip/SELECT** or **repeat/SELECT** to choose "On" or "Off".

3) Press **SET**. A confirmation tone sounds, and the system announces the new setting.



•If you mute the ringer for an incoming call, you can not screen the call.

•If you press **talk/flash**, call screen will be canceled and the handset is put in talk mode.

•If you press **select/☒** while another handset is screening a call, you will hear a beep and you can not screen a call.

Screening a call

From the base

To screen an incoming call, do the steps as follows:

- 1) After the answering system answers, the base speaker will let you hear the calls as the machine records the message. To adjust the volume, press *ring/vol/∧* or *ring/vol/∨*. If you set the answering system to Off, you cannot screen a call.
- 2) To answer the call, press **speaker** (talk) or pick up the handset from the base (when AutoTalk is set to On). If the handset is away from the base, press *talk/flash, speaker* or any number key, **/tone/<*, or *#/>* (when AutoTalk is set to On). The answering system will disconnect automatically.

From the handset

Press *select/☒* when the system is answering. To answer the call, press *talk/flash*, otherwise press *end* to cancel the call screen and the system return to the standby mode.

Muting the Call Screen

You can mute the Call Screen. To do this, press *DND* on the base. To cancel the Call Screen, press *ring/vol/∧* or *ring/vol/∨* on the base. To mute the Call Screen again, press *play/stop*. The Call Screen function resumes when the system is no longer in answering mode.

Using your Answering System

The message counter displays the number of messages stored in memory. If the display flashes, then there are new messages waiting for you. The answering system is designed to play your new messages first. After you play all your new messages, you can then play your old messages.

Playing your messages

- 1) When the phone is in the standby mode, press **play/stop**.
The system announces the number of new and old messages while the message counter displays only the number of new messages. The time and day that each message was received is announced after the message is played. The message counter will then display the number of current stored messages.
- 2) When all new messages have been played, you hear a confirmation tone and the system announces "End of message". The system returns to standby. After you have reviewed your new messages, you can play your old messages by again pressing. Once you have listened to a new message, it then becomes an old message. The old messages will be played in the order in which they were received.

Repeating a message

- 1) Press **play/stop** to review your messages. The number of stored messages is announced.
- 2) To repeat the current message, press **repeat/SELECT** after a few seconds of beginning the message. To quickly scroll backwards through a message, press and hold **repeat/SELECT**. To repeat the previous message, press **repeat/SELECT** within a few seconds (about 4 seconds during remote operation) after a message begins playing. If you have several messages, press **repeat/SELECT** repeatedly until you return to the message you want to replay. If the current message is the first new message, the system plays back from the beginning of the current message (it does not go back into the old message group).
- 3) Press **play/stop** at any time to stop reviewing messages and return to standby. The message counter shows the number of messages stored in memory.



- Time stamp will not be heard until you have set the time.

- When the answering system is full, "FL" appears on the base. You should delete some messages so that the system can record new messages. (Refer to "Deleting a message" on page 60.)

Skipping a message

- 1) Press to review your messages. The number of stored messages is announced.
- 2) Press **skip/SELECT** at anytime to skip to the next message.
Each time **skip/SELECT** is pressed, the system scans forward one message. If you have several messages, press **skip/SELECT** repeatedly to find the message you want to play. To quickly scroll through a message, press and hold **skip/SELECT**. The system advances through the playback at double speed.
- 3) Press **play/stop** at anytime to stop reviewing your messages and return to standby. The message counter shows the number of messages stored in memory.

Deleting a message

To maintain maximum record time, delete the old messages.

- 1) Press to review your messages.
- 2) Press **delete** at anytime during the message to delete the message. You hear a confirmation tone and the message is deleted.
- 3) To delete all messages, press **delete** in the standby mode. Press **delete** again after the announcement "To delete all message, press delete again."

When you try to delete all messages without first listening to your new messages, you hear several short beeps followed by an announcement "Please playback all messages". This protects you from accidentally erasing messages you have not yet reviewed.

Important:

When you press **del**, you are permanently deleting the message. Once deleted, the message cannot be replayed or retrieved.

Voice memo

The voice memo function allows the user to record messages (more than 2 seconds and within 4 minutes).

- 1) Press and hold **memo record**. You hear a beep.
- 2) Start your recording after the announcement "Record Memo Message" and a confirmation tone. The message counter displays "- -".
- 3) When you have finished, press **memo record**, **play/stop**, or **set** to stop recording. The system returns to standby.

Recording a conversation

You can record a conversation from the handset or the base (more than 2 seconds and within 10 minutes).

From the handset

- 1) During a conversation, press **menu/del** on the handset.
- 2) Press **ring/vol/∧** or **ring/vol/∨** to select "Call Record", and then press **select/voice mail** key.
"Recording a Call" appears on the handset, and "- -" flashes on the base. A confirmation tone, that can be heard by both parties, sounds during recording.
- 3) To stop recording, press **menu/del** and **ring/vol/∧** or **ring/vol/∨** to select "Call Record", and then press **select/☒**. You will hear a confirmation tone.

From the base

- 1) During a conversation using the base speaker phone, press and hold **memo record** on the base until you hear a confirmation tone. The unit begins recording and "- -" flashes on the display. A confirmation tone, that can be heard by both parties, sounds during recording.
- 2) To stop recording, press **play/stop** or **memo record**. You hear a confirmation tone.



- The voice memo messages are recorded as an incoming messages.
- When the answering system is full, "FL" appears on the display and recording is terminated.
- If an outside call is received during the operation, the operation is canceled.
- Every state has different regulations governing the recording of conversations over the telephone. Make sure to check your local, state and federal laws before using this product to record any telephone conversation in order to determine that your use is in compliance with such laws or guidelines.
- You cannot record 3-way or intercom conversations.
- When the answering system becomes full, "FL" appears on the display and recording is terminated.



- Time stamp will not be heard until you have set the time. See "Setting the Time" on page 54.
- The system will only playback messages for four minutes and then it returns to the command waiting mode. To continue playing your messages, press 0 then 2 again within 15 seconds.
- If you enter an incorrect PIN code three times, you will hear a beep and the system will return to standby.
- During the remote operation, "L" appears on the base.
- If the answering system is recording an incoming message, the recording operation is canceled when you start remote operation.
- For your convenience a remote operation card is provided for you to use while away from home (refer to page 82).

Remote Operation

You can check, play, or delete messages, even record a new greeting message from a remote location (when you are away from home, or from another room using a handset). Additionally, you can turn On or Off your answering system remotely.

Remote access away from home

You can operate your answering system from a remote location using any touch-tone telephone .

- 1) Call your telephone number and wait for the system to answer. If the answering system is off, it will answer after about 10 rings and sounds a series of beeps.
- 2) During the greeting message (or a series of beeps when the answering system is off), press 0 and enter your PIN code within 2 seconds (see "Setting a PIN Code" on page 25 or 54).
- 3) The answering system announces the current time and the number of messages stored in memory. You hear "To play incoming messages, press zero-two. For help, press one-zero". You will hear a beep.
- 4) Enter a command within 15 seconds, each command there after must be entered within 2 seconds. You may select a command from the following chart:

Command	Function	Command	Function
0 then 1	Repeat a Message*	0 then 6	Answering System On
0 then 2	Playing incoming Messages	0 then 7	Memo Record/Stop**
0 then 3	Skipping a Message	0 then 8	Greeting Message Record/Stop**
0 then 4	Deleting a Message	0 then 9	Answer System Off
0 then 5	Stop Operation	1 then 0	Help Guidance

- * For Repeat a Message function, press **0** then **1** within about four seconds to repeat the previous message, or press **0** then **1** after about four seconds to repeat the current message.
 - ** For Memo Record and Greeting Message Record function, the first time you enter the corresponding command, it starts the Recording function. If you want to stop the recording, press **0** then **7** or **8**.
- 5) After the command has finished, you hear intermittent beeps indicating that the system is in the command waiting mode. You may enter another command at this time from the chart above.
 - 6) When you are finished, hang up to exit the system. The answering system automatically returns to standby.

Remote access with the handset

You can operate your answering system from another room using a handset.

- If you press **end** before the answering system answers, the phone will return to standby.
 - When the answering system does not answer within 6 seconds, you hear a beep and the phone will return to standby.
 - The base's keypad is disabled during remote operation.
 - When you receive a call, the remote operation is canceled.
 - You can change the handset volume during a remote operation.
 - During the remote operation "Lr" appears on the base.
 - If you have new messages and old messages, only the new messages will be played. After you have reviewed your new messages, you can play your old messages by again pressing 2.
- 1) When the phone is in the standby mode, press **select/voice mail** on the handset. "Remote Answering Machine Operation" appears on the handset display. The answering system announces the current time and the number of messages stored in the memory.

- Messages will be played in the order in which they were received. The time and day that each message was received is announced after the message is played. To switch to the handset speaker phone, press **speaker** on the handset.
- 2) The answering system announces the current time and the number of messages stored in memory. You hear "To play incoming messages, press two. For help, press zero". You will hear a beep.
 - 3) Enter a command within 15 seconds, each command there after must be entered within 2 seconds. You may select a command from the following chart:

Remote Key Function

<</1	Repeat a Message*	6	Answering System On
>/2	Playing incoming Messages	7	Memo Record/Stop**
>>/3	Skipping a Message	8	Greeting Message Record/Stop**
Ø/4	Deleting a Message	9	Answer System Off
□/5	Stop Operation	0	Help Guidance

- * For Repeat a Message function, press **1** within about four seconds to repeat the previous message, or press **1** after about four seconds to repeat the current message.
- ** For Memo Record and Greeting Message Record function, the first time you enter the corresponding command, it starts the Recording function. If you want to stop the recording, press **7** or **8**.
- 5) After the command has finished, you hear intermittent beeps indicating that the system is in the command waiting mode. You may enter another command at this time from the chart above.
 - 6) When you are finished, hang up or press **end** to exit the system. The answering system automatically returns to standby.

Expanding Your Phone

4 Multi-Handset Expandability

Your phone supports up to 4 handsets (including the handset(s) supplied with your phone). You can now place a fully featured cordless handset anywhere AC power is available to connect the handset charger.

Up to 2 handsets can be used for an outside and/or intercom call.

For example, the phone permits 3-way conferencing (2 handsets and an outside line).

Multi_Handset

IMPORTANT:

- If you purchase a DCX640 extra handset, please register the handset to the original base before use. The DCX640 will not operate until it is registered.
- If you change a Global setting in one handset, you change that particular setting for all registered handsets. All other settings (not included under Global Setup), must be set separately through each handset.

Connecting the Charger

- 1) Connect the AC adapter to the **DC IN 9V** jack and to a standard 120V AC wall outlet.
- 2) Set the charger on a desk or tabletop, and place the handset in the charger with the keypad facing forward.
(See "B. Install the battery pack into the handset" on page 10).

Charger_AC_cord

www.uniden.com

EXPANDING YOUR PHONE [65]



- To use the DCX640, register it to the original base.
- Save this manual for detailed operation.
- All of the handsets ring when a call is received.



•An extra handset can be registered when the main base is in the standby mode.

•**Standby Mode** - The handset is not in use. The handset may be on or off the base, but *talk/flash* key has been pressed.

Register the Handset

If you purchase an extra handset, you need to register the handset before use. Only one handset can be registered at a time.

The handset ID for the supplied handset(s) was assigned at the factory, which has #1 (#1 and #2 for 2 handsets bundled model) in the display. When you register additional handset to the base, the handset ID will be assigned.

SUN 12:00A	□
Handset #1	
New:005	

- 1) Before registering the extra handset, charge the phone's battery for 10 minutes.
- 2) Place the extra handset in the main base unit to begin registration.
- 3) While the handset is registering, "Handset Registering" will appear in the LCD. When "Registration Complete" is displayed, the handset has been registered to the base. If "Registration Failed" appears, please try these steps again.
- 4) Place the handset back in the charging cradle and fully charge the phone's battery.


Using the DirectLink Mode


To use this feature, you must enter the two handsets into the DirectLink mode first.


To enter the DirectLink mode, see page 22


3waycall

DirectLink call

- 1) When the phone is in the DirectLink standby mode, press **talk/flash** (example of DirectLink from handset #1).
- 2) Select the handset to which you wish to DirectLink with by pressing the number keys (1-4). Your handset will then page the other handset.
- 3) On the receiving handset, press **talk/flash**, or if Any Key Answer is On, press any number key, ***/tone/←**, or **#/→**.
- 4) When you finish your conversation, press **end** on either handset. Return the handset to the cradle, or press **menu/del**, and then **select**/ to return to normal standby mode (canceling DirectLink mode).

SUN 12:00A 
Handset #1
DirectLink Mode

To DirectLink 
a handset
press [1-4]

DirectLink 
<< Handset #1



Two handsets can be in Direct Link mode while other handsets are in use.



- If the party is busy or out of range, the handset returns to the standby mode.
- If any of the following occurs while selecting the other handset, the operation will be canceled.
 - Press **talk/flash** or **speaker**.
 - Receive an outside/intercom call or page.
- When the party does not answer within one minute, the operation is canceled.
- **Standby Mode** - The handset is not in use. The handset may be on or off the base, but **talk/flash** key has been pressed.

4-Way Conferencing

Fourth person, at either the handset or the base, may be added to the conference call. For example, to add a fourth party to an ongoing conference call at the base or another handset, press **talk/flash** on the fourth party's handset (or **speaker** on the base). To remove either caller from your conversation, press **end** on the party's handset (or **speaker** on the base). The other parties will still be connected to the call.

Intercom/Call Transfer Feature

Intercom and Call Transfer features are available for your phone.

Intercom

From handset to handset or to the base

- 1) Press **hold/transfer/int'com** in the standby mode.
- 2) Select the base or the handset you want to talk with from the selection list within 30 seconds. To select the handset (or the base), press **ring/vol/∧** or **ring/vol/∨**, and then press **select/☑**. If you select "All", all handsets and the base will be paged. An intercom tone sounds.
- 3) On the receiving handset (or the base), to answer the call, press **talk/flash, hold/transfer/int'com** (or **intercom/find handset** or **speaker** on the base). Or press any number key, ***/tone/<**, or ***/>** (when Any Key Answer is On), or pick up the handset from the cradle (when AutoTalk is On).
- 4) To hang up the intercom call, press **end** on either handset (or intercom on the base).

Hold, to transfer
▶ Handset #2
Handset #3

Hold, to transfer
▶ Handset #2
Handset #3

From the base to a handset

- 1) Press **intercom/find handset** on the base in the standby mode.
- 2) All the handsets will be paged.
- 3) On the receiving handset, to answer the call, press **talk/flash** or **hold/transfer/int'com**. Or press any number key, ***/tone/<**, or **#/>** (when Any Key Answer is On), or pick up the handset from the cradle (when AutoTalk is On).
- 4) To hang up the intercom call, press **end** on **intercom/find handset** on the base.

Call Transfer Feature

From handset to handset or to the base

- 1) During a call, press **hold/transfer/int'com** on the handset.
- 2) Select a handset or the base to transfer the call within 10 seconds. (Refer to step 2 in the intercom section on page 68). The call will automatically be placed on hold, and an intercom tone sounds. To cancel the transfer, press **talk/flash** or **speaker** on the initiating handset.

Hold, to transfer	
▶ Handset	#2
Handset	#3
- 3) On the receiving handset, to answer the page, press **talk/flash** or **hold/transfer/int'com** (or **speaker** or **intercom/find handset** on the base). Or press any number key, ***/tone/<**, or **#/>** (when Any Key Answer is On), or pick up the handset from the cradle (When Auto Talk is On).
- 4) To speak to the caller, press **talk/flash** or **speaker** (or **speaker** on the base) on the receiving handset.



For model number verification, contact Uniden Customer Service or visit our website www.uniden.com

From the base to a handset

- 1) During a call, press *intercom/find handset* on the base. The call will automatically be placed on hold, and an intercom tone sounds. All the handset(s) will be paged.
- 2) On the receiving handset, to answer the call, press *talk/flash* or *hold/transfer/int'com*. The intercom mode is activated, but the caller is still on hold. Or press any number key, **/tone/<*, or **/>* (when Any Key Answer is On), or pick up the handset from the cradle (when AutoTalk is On).
- 3) To speak to the caller, press *talk/flash* or *speaker* on the receiving handset.

Replacing the Base

When you replace the base with a different base of the DCT6 series model (DCT646, DCT6465, DCT648, or DCT6485 series), you need to clear the handset(s) and base ID. To do this, perform the "System Reset" menu options ("De-register the Handset" and "Replacing the Base Setting") (see page 29), then register all the handsets you have (see page 66).

Changing the Digital Security Code

The digital security code is an identification code used to connect the handset and the base unit. Normally, setting the code is not necessary. In the rare situation that you suspect another cordless telephone is using the same security code, you can change the code. To change the digital security code:

1. Perform the "System Reset" menu options ("De-register the Handset" and "Replacing the Base Setting") for all the handsets you have (see page 29).

2. To register all the handsets do the following steps:

1) Place a handset, one at a time in the base.

2) Registration starts automatically.

While registering "Handset Registering" appears in the display.

3) When the registration is complete, "Registration Complete" appears in the display.

4) Repeat steps 1 - 3 for another handsets.

If the registration fails, "Registration Failed" appears in the display. Try the steps above again.

Installing the Beltclip

To attach the beltclip

Insert the beltclip into the holes on each side of the handset.

Press down until it clicks.


To remove the beltclip

Pull both sides of the beltclip to release the tabs from the holes.



Headset Installation

Your phone may be used with an optional headset, the Uniden HS910. To use this feature, insert the headset plug into the headset jack. Your phone is ready for hands-free conversations (headset may be purchased by calling the Uniden Parts Department or visiting the web site. See page 1).

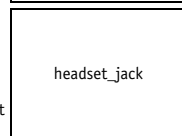

www.uniden.com

ADDITIONAL INFORMATION [71]

Note on Power Sources

Battery replacement and handling

When the operating time becomes short, even after a battery is recharged, please replace the battery. With normal usage, your battery should last about one year. Please contact your place of purchase or the Uniden Parts Department for a replacement battery.

Warning

To avoid the risk of personal injury or property damage from fire or electrical shock, only use the Uniden battery model and Uniden adapter model specifically designated for this product.

Power Failure

During the period that the power is off, you will not be able to make or receive calls with the telephone.

Caution

- Use only the specified Uniden battery pack (BT-446).
- Do not remove the batteries from the handset to charge them.
- Never throw the battery into a fire, disassemble them, or heat them.
- Do not remove or damage the battery casing.

Maintenance

To maintain a good charge, it is important to clean the charging contacts on both the handset and the base unit once a month. Using water only, dampen a cloth to clean the charging contacts. Then make sure to go back over the charging contacts with a dry cloth.

Caution

Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.

General Information

The phone complies with FCC Parts 15 and 68. Operating temperature: 0 °C to +50 °C (+32 °F to +122 °F)

AC Adapter Information

AC Adapter part number:	AD-xxx for the base	AD-xxx for the charger (2 handsets included model only)
Input Voltage:	120 AC 60Hz	120V AC 60Hz
Output Voltage:	9V DC xxxmA	9V DC xxxmA

Battery Information

Battery part number:	BT-446
Capacity:	xxxxmAh, xxxV



- To avoid damage to the phone use only Uniden AD-xxx and BT-446 with your phone.
- If the handset is left off of the base, the actual Talk mode duration will be reduced respective to the amount of time the handset is off the base.

Recharge your phone on a regular basis by returning the handset to the base after each phone call. When the operating time becomes short, even after the battery is recharged, please replace the battery. With normal usage, the battery should last about one year.

A replacement Uniden adapter or battery may be purchased by contacting the Uniden Parts Department (800) 554-3988. Hours are from 8:00 a.m. to 5:00 p.m. Central Time, Monday through Friday. We can also be reached on the web at www.uniden.com.

Specifications, features, and availability of optional accessories are all subject to change without prior notice.

Troubleshooting

If your phone is not performing to your expectations, please try these simple steps first.

Symptom	Suggestion
The charge/in use (or charge) LED won't illuminate when the handset is placed in the cradle.	<ul style="list-style-type: none"> • Make sure the AC adapter is plugged into the base (or the charger (for DCX640 only)), and wall outlet. • Make sure the handset is properly seated in the cradle. • Make sure the charging contacts on the handset and the base (or the charger (for DCX640 only)) are clean.
The audio sounds weak.	<ul style="list-style-type: none"> • Move the handset and/or base to a different location away from and/or scratchy metal objects or appliances and try again. • Make sure that you are not too far from the base.
Can't make or receive calls.	<ul style="list-style-type: none"> • Check both ends of the base telephone line cord. • Make sure the AC adapter is plugged into the base and wall outlet. • Disconnect the AC adapter for a few minutes, and then reconnect it. • Remove the base ID (see "Replacing the Base Setting" on page 29) and register the handset (see "Register the Handset" on page 66). • Make sure that you are not too far from the base. • If an outside call is already established, you may not be able to make another outside call.
The handset doesn't ring or receive a page.	<ul style="list-style-type: none"> • Charge the batteries in the handset for 17-20 hours by placing the handset on the base or charging cradle. • The handset may be too far away from the base unit. • Place the base unit away from appliances or metal objects. • Remove the base ID (see "Replacing the Base Setting" on page 29) and register the handset (see "Register the Handset" on page 66).
"Unavailabl e" appears in the display.	<ul style="list-style-type: none"> • Make sure that another handset(s) or the base is not in use, and try the phone again. • Make sure that you are not too far from the base.

Symptom	Suggestion
Severe noise interference.	<ul style="list-style-type: none"> Keep the handset away from microwave ovens, computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances. Move to another location or turn off the source of interference.
The Caller ID does not display.	<ul style="list-style-type: none"> The handset was picked up before the second ring. The call was placed through a switchboard. Call your local telephone company to verify your Caller ID service is current.
You cannot register the handset at the base.	<ul style="list-style-type: none"> Please make sure your batteries are charged at least 10 minutes (see "Register the Handset" on page 66). Remove the base ID (see "Replacing the Base Setting" on page 29) and register the handset (see "Register the Handset" on page 50).
The handset doesn't communicate with the other handsets.	<ul style="list-style-type: none"> Remove the base ID (see "Replacing the Base Setting" on page 29) and register the handset (see "Register the Handset" on page 66). Make sure that you have registered all handsets.
An extra handset can't join the conversation.	<ul style="list-style-type: none"> Make sure there are not 2 handsets already using the 3-way conference feature.
The handset or the base can't join the conversation	<ul style="list-style-type: none"> Make sure that more than 3 handsets (or 2 handsets when the base is used for the conference) are not in use. When recording a conversation, the 2nd handset (or the base) cannot join the conversation.
The answering system does not work.	<ul style="list-style-type: none"> Make sure the base unit is plugged in. Make sure that the answering system is turned On. Make sure that the message record time is not set to Announce only (see page 56).
Messages are incomplete.	<ul style="list-style-type: none"> The incoming messages may be too long. Remind callers to leave a brief message. The memory may be full. Delete some or all of the saved messages.
After a power failure, the outgoing message is deleted.	<ul style="list-style-type: none"> Record your greeting again. The default message should remain.

Symptom	Suggestion
No sound on the base unit speaker during call monitoring or message playback.	<ul style="list-style-type: none"> • Adjust the speaker volume on the base unit. • Make sure the call screen feature is set to On.
Cannot access remote call-in features from another touch-tone phone.	<ul style="list-style-type: none"> • Make sure you are using the correct PIN number. • Make sure that the touch-tone phone you're using can transmit the tone for at least two seconds. If it cannot, you may have to use another phone to access your phone.
Time stamp cannot be heard.	<ul style="list-style-type: none"> • Make sure you have set the time (see "Setting Day and Time" on page 27 or "Setting the Time" on page 54).
If you still have a problem.	<ul style="list-style-type: none"> • Call our customer hotline at 1-800-297-1023.

Liquid Damage

Moisture and liquid can damage your cordless phone. In case of accidental submersion, please read the following steps.

Case	Action
If the handset or base is exposed to moisture or liquid, but the liquid only affects the exterior plastic housing.	Wipe off the liquid, and use as normal.
If moisture or liquid has entered the plastic-housing (i.e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base).	<p>Handset:</p> <ol style="list-style-type: none"> 1) Remove the battery cover and leave it off for ventilation. 2) Remove the battery pack by disconnecting. 3) Leave the battery cover off and the battery pack disconnected for at least 3 days. 4) Once the phone is completely dry, reconnect the battery pack and the battery cover. 5) Recharge the handset's battery pack for 20 hours in the base unit before using the phone. <p>Base:</p> <ol style="list-style-type: none"> 1) Disconnect the AC adapter from the base unit, cutting off electrical power. 2) Disconnect the telephone cord from the base unit. 3) Let dry for at least 3 days. <p>IMPORTANT: You must unplug the telephone line while recharging the batteries to avoid charge interruption.</p> <p>CAUTION: DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven.</p> <p>After following these steps, if your cordless telephone does not work, please send to:</p> <p style="text-align: center;">Uniden America Corporation Parts and Service Division 4700 Amon Carter Blvd. Ft. Worth TX 76155 1-800-554-3988, Monday through Friday 8 a.m. to 5 p.m. CST</p>

Precautions!

Before you read anything else, please observe the following:

Warning!

Uniden America Corporation DOES NOT represent this unit to be waterproof. To reduce the risk of fire, electrical shock, or damage to the unit, DO NOT expose this unit to rain or moisture.

Rechargeable Nickel-Metal-Hydride Battery Warning

- This equipment contains a rechargeable Nickel-Metal-Hydride battery.
- Nickel is a chemical known to state of California to cause cancer.
- The rechargeable Nickel-Metal-Hydride battery contained in this equipment may explode if disposed of in a fire.
- Do not short-circuit the battery.
- Do not charge the rechargeable Nickel-Metal-Hydride battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode.

Rechargeable Nickel-Metal-Hydride Batteries Must Be Recycled or Disposed of Properly



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Uniden works to reduce lead content in our PVC coated cords in our products and accessories.

Warning!

The cords on this product and/or accessories contain lead, a chemical known to the State of California to cause birth defects or other reproductive harm. **Wash hands after handling.**

Important Safety Instructions

When using your telephone equipment, these basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Use a dry cloth for cleaning without liquid or aerosol cleaners.
4. Do not use this product near water; for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The telephone may fall, causing serious damage to the unit.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect the product from overheating, these openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be damaged by persons walking on it.
9. Do not overload wall outlets and extension cords, as this can result in the risk of fire or electrical shock.
10. Never push objects of any kind into this product through cabinet slots, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product. Take it to qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally when following the operating instructions. (Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive repair work by a qualified technician.)
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
13. Do not use the telephone to report a gas leak in the vicinity of the leak.

Additional Battery Safety Precautions

Caution! To reduce the risk of fire or injury to persons by the battery, read and follow these instructions:

1. Use only the Uniden battery pack specified in the owner's manual.
2. Do not dispose of the battery pack in a fire. The cell may explode. Check the Nickel Metal Hydride battery disposal package insert for disposal instructions.
3. Do not open or mutilate the battery pack. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling the battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
5. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the owners manual provided for this product.
6. Observe proper polarity orientation between the battery pack and battery charger.

SAVE THESE INSTRUCTIONS!

Important Electrical Considerations

Unplug all electrical appliances when you know an electrical storm is approaching. Lightning can pass through your household wiring and damage any device connected to it. This phone is no exception.

The FCC Wants You To Know

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product. Your telephone complies with Part 68 of FCC Rules. You must, upon request, provide the FCC registration number and the REN to your telephone company. Both numbers are on the base unit.

Note: You must not connect your phone to:

- coin-operated systems
- most electronic key telephone systems

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications, may not be ensured when using this phone.

Range

Your new phone is designed to achieve the maximum possible range by transmitting and receiving according to the highest specifications set forth by the FCC. We have rated this phone to operate at a maximum distance with the qualification that the range depends upon the environment in which the telephone is used. Many factors limit range, and it would be impossible to include all the variables in our rating. The Maximum Range rating of this phone is meant to be used as a means of comparison against other range claims.

Telephone Line Problems

The FCC has granted the telephone company the right to disconnect service in the event that your phone causes problems on the telephone line. Also, the telephone company may make changes in facilities and services which may affect the operation of your unit. However, your telephone company must give adequate notice in writing prior to such actions to allow you time for making necessary arrangements to continue uninterrupted service. If you are having trouble with your telephone service, you must first disconnect your phone to determine if it is the cause of your problem. If you determine that it is the cause, you must leave it disconnected until the trouble has been corrected.

Radio Interference

Radio interference may occasionally cause buzzing and humming in your cordless handset, or clicking noises in the base. This interference is caused by external sources such as TV, refrigerator, vacuum cleaner, fluorescent lighting, or electrical storm. Your unit is NOT DEFECTIVE. If these noises continue and are too distracting, please check around your home to see what appliances may be causing the problem. In addition, we recommend that the base not be plugged into a circuit that also powers a major appliance because of the potential for interference. Be certain that the antenna on the unit is fully extended when needed. In the unlikely event that you consistently hear other voices or distracting transmissions on your phone, you may be receiving radio signals from another cordless telephone or other source of interference. If you cannot eliminate this type of interference, you need to change to a different channel.

Finally, it should be noted that some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

More than One Cordless Telephone

If you want to use more than one cordless telephone in your home, they must operate on different channels. Press the channel key to select a channel that provides the clearest communication.

Cordless Telephone Privacy

Cordless telephones are radio devices. Communications between the handset and base of your cordless telephone are accomplished by means of radio waves which are broadcast over the open airways. Because of the inherent physical properties of radio waves, your communications can be received by radio receiving devices other than your own cordless telephone unit. Consequently, any communications using your cordless telephone may not be private.

Installation Considerations

Selecting a Location

Before choosing a location for your new phone, there are some important guidelines you should consider:

- The location should be close to both a phone jack and continuous power outlet. (A continuous power outlet is an AC outlet which does not have a switch to interrupt its power.)
- Keep the base and handset away from sources of electrical noise such as motors or fluorescent lighting.
- Be sure there is sufficient space to fully extend the base antenna.
- The base can be placed on a desk or tabletop or mounted on a standard telephone wall plate.
- You should charge your new phone for 17-20 hours before completing the installation or using the handset.

Telephone Line Outlets

There are two types of phone outlets:

Modular Jacks

Most phone equipment available now uses modular jacks. Phone cords are fitted with a molded plastic connector which plugs into this type of jack. If you do not have modular phone jacks, contact your local telephone company for information about their installation.

Hardwired Jack

Some equipment is wired directly to a phone jack, and these types of installations require a modular jack converter. This type of installation is not difficult; however, you should contact your Uniden telephone dealer or a telephone supply store for advice about the proper adapter or converter for your particular situation.

Connecting the Telephone Cords

Consider these safety guidelines before connecting the telephone cords:

Caution!

- Never install telephone wiring during a lightning storm.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected.
- Use caution when installing or modifying telephone lines.

Applying Power to the Base

This phone requires an AC outlet, without a switch to interrupt power, and the included AC adapter. To relieve strain on the DC plug when the phone is placed on a desk or table, wrap the power cord around the strain relief notch on the bottom of the base.

NOTE: Place the power cord so that it does not create a trip hazard, or where it could become chafed and create a fire or other electrical hazards.

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service. WARRANTY: UNIDEN AMERICA CORPORATION ("Uniden") ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada. PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Corporation
Parts and Service Division
4700 Amon Carter Blvd.
Fort Worth, TX 76155

(800) 297-1023, 8 a.m. to 5 p.m. CST, Monday through Friday

www.uniden.com

PRECAUTIONS & WARRANTY [79]

PRECAUTIONS & WARRANTY

I.C. Notice

TERMINAL EQUIPMENT

- NOTICE:** This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.
- NOTICE:** The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

RADIO EQUIPMENT

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

Index

0 - 9

- 3-way conferencing 36
- 4-way conferencing 68
- 16 ring options 23

A

- Announce only feature 56
- Answering system
 - Deleting a message 60
 - Playing your messages 59
 - Recording a conversation 61
 - Remote access 62
 - Repeating a message 59
 - Skipping a message 60
 - Turning On/Off 51
- Anykey answer 24
- Area code 28
- AutoTalk 24

B

- Banner 24
- Battery
 - Preparing and charging 10
 - Replacement and handling 72
- Beltclip 71
- Booster 35

C

- Caller ID
 - Caller ID service 45
 - Calling 48
 - Call Waiting 36
 - Deleting 47
 - Setting 48

www.uniden.com

- Storing 48
- Using 48
- Viewing 46
- Call transfer feature 69
- Chain dialing 44
- Clock 27

D

- Deluxe Call Waiting features 49
- De-register the handset 28
- Dialing mode 13
- Digital security code 71
- Distinctive ringer 24

E, F, G, H

- Earpiece volume 33
- Expanding your phone 65
- General information 73
- Hands-free conversation 30
- Headset installation 71

I, J, K, L

- I.C. Notice 80
- Important safety instructions 78
- Intercom 68
- Key touch tone 25
- Language
 - handset 25
 - base 57
- Liquid damage 77

M, N, O

- Maintenance 72
- Making a call 30
- Mute 34
- New message LED 36
- Outgoing message 51

P, Q

- Phonebook
 - Editing 43
 - Erasing 43
 - Making calls 42
 - Storing 37
 - Viewing 41
- Precautions 78

R

- Receiving a call 30
- Redialing a call 32
- Register the handset 66

Remote access

- away from home 62
- from your handset 63

Replacing the base 70

Ringer

- Adjust, base 52
- Adjust, handset 33
- mute 33
- DND 33

Room Monitor 23

S

- Setting up
 - base unit 12
 - extra handset 66
 - handset 19
- Speed dialing 42

T, U, V, W, X, Y, Z

- Transferring a call 69
- Voice memo 61
- Warranty 79

At Uniden, we'll take care of you!

If you need any assistance with this product, please call our Customer Hotline at

1-800-297-1023

PLEASE DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

Our Uniden representatives will be happy to help you with any matters regarding the operation of this unit, available accessories, or any other related matters.

Thank you for purchasing a Uniden product.
Hours: M-F 8:00 AM to 5:00 PM CST.



For information on the accessibility features of this product, please call
1-800-874-9314 (V/TTY)

Uniden®
www.uniden.com

May be covered under one or more of the following U.S. patents:

4,523,058	4,595,795	4,797,916	5,381,460	5,426,690	5,434,905
5,491,745	5,493,605	5,533,010	5,574,727	5,581,598	5,650,790
5,660,269	5,661,780	5,663,981	5,671,248	5,696,471	5,717,312
5,732,355	5,754,407	5,758,289	5,768,345	5,787,356	5,794,152
5,801,466	5,825,161	5,864,619	5,893,034	5,912,968	5,915,227
5,929,598	5,930,720	5,960,358	5,987,330	6,044,281	6,070,082
6,125,277	6,253,088	6,314,278	6,418,209		