


Multiple handset use


Handset locator

The handset locator feature is useful if you misplace any handset.




To start the paging tone:

- Press  **HANDSET LOCATOR** at the telephone base to start the paging tone on all handsets for 60 seconds.



NOTE: If you press  **OFF/CLEAR** or **MUTE/DELETE** on a handset, the ringer of the handset is off, but the page tone does not stop.

To stop the paging tone:



- Press  **PHONE/FLASH**,  **SPEAKER**, or any dial pad key (0-9, *, or #) on the handset(s),
-OR-
- Press  **HANDSET LOCATOR** on the telephone base.




NOTE: The handset ringer volume also determines the volume of the paging tone. If the handset ringer volume level is set to off, that handset is silent for all calls and paging (page 11).



Join a call in progress (not available on model CL81109)

You can conference with another system handset while on a call. If a handset is already on a call and you would like to join the call, press  **PHONE/FLASH** or  **SPEAKER** on another system handset.

Press  **OFF/CLEAR** or place the handset in the telephone base or charger to end the call. The call does not terminate until all handsets hang up.



NOTE: You can only use two system handsets at the same time on an outside call.

Intercom

Use the intercom feature for conversations between handsets. This feature is not available for model CL81109 unless you have purchased additional handsets (CL80109).

You can buy additional expansion handsets (model AT&T CL80109) for this telephone base. You can register up to 12 handsets to the telephone base.


The first nine handsets that you register are named Handsets 1-9. Use the handset number to initiate intercom and transfer calls.

Although the names for handsets 10-12 appears in their displays as 10-12, when you intercom or transfer to one of them, you must use ***0** for Handset 10, ***1** for handset 11, and ***2** for Handset 12.

1. Press **INT** on your handset when not in use.

- If you have a two-handset system, your handset screen shows **CALLING OTHER HANDSET**.
- If you have more than two handsets, your screen shows **INTERCOM TO:** Use the dialing keys to select the other handset. Your handset screen shows **CALLING HANDSET X**.



The other handset rings and its screen shows either **OTHER HANDSET IS CALLING** or **HANDSET X IS CALLING**.

2. To answer the intercom call, press  **PHONE/FLASH**, **INT**, or any dial pad keys (0-9, #, *) on the other handset. Both handsets now show **INTERCOM**.

3. To end an intercom call, press **INT**, , **OFF/CLEAR**, or place the handset back in the telephone base or charger.





NOTES:

1. Before the intercom call is answered, you can cancel the intercom call by pressing  **OFF/CLEAR** or **INT** on the calling handset.
2. If the called handset is not answered within 100 seconds, or if it is in the directory or call log mode, or is out of range, the calling handset shows the message **UNABLE TO CALL TRY AGAIN**.
3. Pressing  **OFF/CLEAR** or **MUTE/DELETE** temporarily silences the intercom ringer.
4. You can use a maximum of four handsets at a time. When you use two handsets on an intercom call, others can use two other system handsets for an outside call.


Intercom

Answer an incoming call during an intercom call

If you receive an incoming outside call during an intercom call, there is an alert tone.





- To answer the call, press  **PHONE/FLASH**. The intercom call ends automatically.
- To end the intercom call without canceling the incoming call, press  **OFF/CLEAR**.

Call transfer using intercom

1. During a call, press **INT**. The outside call is put on hold.
 - If you have a two-handset system, your handset screen shows **CALLING OTHER HANDSET**. The other handset rings and its screen shows **OTHER HANDSET IS CALLING**.
 - If you have more than two handsets, your screen shows **TRANSFER TO:** Use the dialing keys to select the other handset. Your screen then shows **CALLING HANDSET X**. The other handset rings and its screen shows **HANDSET X IS CALLING**.
2. To answer the call on the other handset, press  **PHONE/FLASH**, **INT**, or any dial pad keys (0-9, #, *). The outside call is still on hold and both handsets now show **INTERCOM**. You can now have a private conversation between the system handsets.



NOTES:

1. Before the intercom call is answered, you can cancel the transfer and return to the external call by pressing  **OFF/CLEAR**,  **PHONE/FLASH**, or **INT** on your handset.
 2. If the other handset does not answer the intercom call within 100 seconds, or if the other handset is in the directory or call log mode, or is out of range, the calling handset shows **UNABLE TO CALL TRY AGAIN** on its screen and automatically returns to the external call.
3. From this intercom call, you have the following options:
 - You can let the other handset join you on the outside call in a three-way conversation. Press and hold **INT** on your handset.
 - You can transfer the call. Press  **OFF/CLEAR**, or place your handset back in the telephone base or charger. Your screen shows **CALL TRANSFERED**. The other handset automatically connects to the outside call.
 - You can alternate between the outside call (**OUTSIDE CALL** appears on the screen) and the intercom call (**INTERCOM** appears on the screen). Press **INT** on your handset to alternate.
 - The other person can end the intercom call by pressing  **OFF/CLEAR**, or by placing the other handset back in the telephone base or charger. The outside call continues with the original system handset.




About the directory

Shared directory

The directory is in the telephone base and is common for all handsets. Changes made to the directory from any handset apply to all.



NOTE: Only one handset can review the directory at a time. If another handset tries to enter the directory, the screen shows **NOT AVAILABLE AT THIS TIME**.

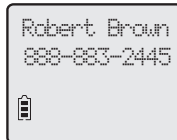



Capacity

The directory can store up to 50 entries, with a maximum of 15 alphanumeric characters (including spaces) for names and 30 digits for telephone numbers. A convenient search feature can help you find and dial numbers quickly (page 28).

If there are already 50 entries, the screen shows **LIST FULL**. You cannot store a new number until you delete one.

Exiting the directory

Press  **OFF/CLEAR** to cancel an operation, back up to the previous menu, or exit the menu display. Press and hold  **OFF/CLEAR** to return to the idle mode.

If you pause for too long while creating or reviewing an entry, the procedure times out and you have to begin again.


Create directory entries

To create a new directory entry

1. Press **MENU/SELECT** in idle mode to enter the main menu.
2. Press **▼CID** or **DIR▲** to scroll to **>DIRECTORY**, then press **MENU/SELECT**.
3. Press **▼CID** or **DIR▲** to highlight **STORE**.
4. Press **MENU/SELECT**.
5. Enter the telephone number when prompted.
 - Use the dial pad to enter up to 30 digits.
 - Press **▼CID** or **DIR▲** to move the cursor to the left or right.
 - Press **MUTE/DELETE** to erase digits.
 - Press and hold **MUTE/DELETE** to erase all digits.
 - Press and hold **REDIAL/PAUSE** to enter a three-second dialing pause.
 - OR-**
 - Copy a number from the redial list by pressing **REDIAL/PAUSE** then press **▼CID** or **DIR▲**, or pressing **REDIAL/PAUSE** repeatedly to locate the number to copy. Press **MENU/SELECT** to copy the number.
6. Press **MENU/SELECT** to save the number in the display.



The display shows **ALREADY SAVED** if the number is already in the directory. You cannot save the same number twice.

 **NOTE:** Each line can hold 11 digits, so if you enter a number longer than 11 digits, the top line shows the entire number.

Create directory entries

7. Enter the name when prompted.

- Use the dial pad to enter a name (up to 15 characters). Each time you press a key, the character on that key appears. Additional key presses produce other characters on that key. See the chart below.
 - Press **▼CID** or **DIR▲** to move the cursor to the left or right.
 - Press **MUTE/DELETE** to erase letters.
 - Press and hold **MUTE/DELETE** to erase all letters.



Dial Key	Characters by number of key presses								
	1	2	3	4	5	6	7	8	9
1	1	#	'	,	-	.	&		
2	A	B	C	2	a	b	c		
3	D	E	F	3	d	e	f		
4	G	H	I	4	g	h	i		
5	J	K	L	5	j	k	l		
6	M	N	O	6	m	n	o		
7	P	Q	R	S	7	p	q	r	s
8	T	U	V	8	t	u	v		
9	W	X	Y	Z	9	w	x	y	z
0	0								
*	*	?	!	/	()	@		
#	space								

8. Press **MENU/SELECT** to store your new directory entry. The name and the telephone number appear. To change them later, see page 29.



Review directory


To review directory entries

1. Press **DIR▲** when in idle mode to show the first entry in the directory. **DIRECTORY EMPTY** appears if there are no directory entries.

-OR-

You can also show the first entry in the directory by pressing **MENU/SELECT** when in idle mode, then press **▼CID** or **DIR▲** to scroll to **>DIRECTORY**, then press **MENU/SELECT** twice.

2. Press **▼CID** or **DIR▲** to browse through the directory. Entries appear alphabetically by the first letter in the name.

 **NOTE:** If the telephone number in the directory exceeds 15 digits, <* appears in front of the telephone number. Press * to move towards the end of the telephone number or press # to move towards the beginning of the telephone number.

Search directory

To search by name

1. Press **DIR▲** in idle mode to show the first listing in the directory.
DIRECTORY EMPTY appears if there are no directory entries.
2. When a name entry appears, press the dial pad keys (2-9) to start a name search.

The directory shows the first name beginning with the first letter associated with the dial pad key if there is an entry in the directory beginning with that letter.

3. To see other names starting with the letters on the same dial pad key, keep pressing the key. The names appear in alphabetical order.

For example, if you have the names **Jennifer**, **Jessie**, **Kevin** and **Linda** in your directory:

- If you press **5 (JKL)** once, you see **Jennifer**.
- If you press **5 (JKL)** twice, you see **Jessie**.
- If you press **5 (JKL)** three times, you see **Kevin**.
- If you press **5 (JKL)** four times, you see **Linda**.
- If you press **5 (JKL)** five times, you see **Jennifer** again.





NOTES:

1. If there is no name matching the first letter of the key you press, the directory shows a name matching the following letters of the key.
2. If you press a key (2-9) and no name starts with the letters on that key, the directory shows the entry matching the next letter in the directory.

To dial, delete or edit entries

To dial, delete or edit a directory entry (name and number), the entry must be on the handset. Use the directory review or search (pages 27-28) to show an entry.

Display dial

To dial a displayed number from the directory, press  **PHONE/FLASH** or  **SPEAKER**.

To delete an entry


When a directory entry appears, press **MUTE/DELETE** to delete the displayed entry from the directory. You cannot retrieve a deleted entry.

To edit an entry

When a directory entry appears:

1. Press **MENU/SELECT** to modify the entry. You need to **EDIT NUMBER**.

- Press the dial pad keys to add digits.
- Press **MUTE/DELETE** to erase digits.
- Press **▼CID** or **DIR▲** to move the cursor to the left or right.
- Press and hold **REDIAL/PAUSE** to add a three-second pause, if desired.
- Copy a number from the redial list by pressing **REDIAL/PAUSE**. Then press **▼CID** or **DIR▲** or press **REDIAL/PAUSE** repeatedly to locate the number to copy. Press **MENU/SELECT** to copy the selected number.

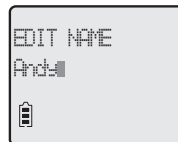

2. Press **MENU/SELECT**. You need to **EDIT NAME**.

- Press the dial pad keys to add characters (page 26).
- Press **MUTE/DELETE** to erase characters.
- Press **▼CID** or **DIR▲** to move the cursor to the left or right.

3. Press **MENU/SELECT** to confirm.

About caller ID

This product supports caller ID services that most local telephone service companies provide. Depending on your service subscription, you might see the caller's number, or the caller's name and number from the telephone company after the first or second ring. Caller ID allows you to see the name, number, date, and time of calls.

Information about caller ID with call waiting

Caller ID with call waiting lets you see the name and telephone number of the caller before answering the telephone, even while on another call.

It might be necessary to change your telephone service to use this feature. Contact your telephone company if:

- You have both caller ID and call waiting, but as separate services (you might need to combine these services).
- You have only caller ID service, or only call waiting service.
- You don't subscribe to caller ID or call waiting services.

There are fees for caller ID services. In addition, services may not be available in all areas.

This product can provide information only if both you and the caller are in areas offering caller ID service and if both telephone companies use compatible equipment. The time and date are from the telephone company along with the call information.

Caller ID information might not be available for every incoming call. Callers may intentionally block their names and/or telephone numbers. To view call log entries with numbers between 16 and 23 digits, you must save the entry to the directory (see page 34)



i **NOTE:** You can use this product with regular caller ID service, or you can use this product's other features without subscribing to caller ID or combined caller ID with call waiting service.

Caller ID history

How the caller ID history (call log) works

The telephone stores caller ID information about the last 50 incoming calls in the telephone base. Entries are stored in reverse chronological order. The phone deletes the oldest entry when the log is full to make room for new calls. This information is common to all handsets, so changes made using any handset are reflected in all other handsets. If you answer a call before the information appears on the screen, it does not show in the caller ID history.


Review the caller ID history to find out who called, to easily return the call, or to copy the caller's name and number into your directory.

XX MISSED CALL(S) appears if there are new call log entries (including missed and unreviewed calls). **CALL LOG EMPTY** appears if there are no records in the call log.



NOTES:

1. Only one handset can review the caller ID history at a time. If another handset tries to enter the directory or caller ID history, it shows **NOT AVAILABLE AT THIS TIME**.
2. Each entry can have up to 24 digits for the phone number and 15 characters for the name.

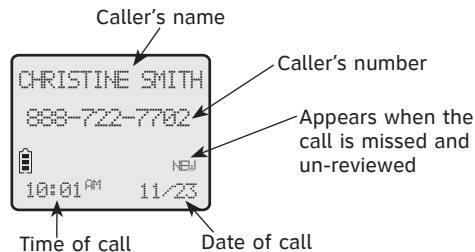

Caller ID operation

Memory match

If the incoming telephone number exactly matches a telephone number in your directory, the name that appears on the screen matches the corresponding name in your directory.

For example, if Christine Smith calls, her name appears as Chris if this is how you entered it into your directory.



NOTE: The number you see on your caller ID is in the format from the phone company. The phone company usually delivers ten-digit phone numbers (area code plus phone number). If the telephone number of the caller does not exactly match a number in your directory, the name appears the same from the phone company. For example, if the phone company includes the area code and the directory number does not, the name is the one which the phone company sends.




Missed (new) calls indicator

When a handset is in idle mode and has unreviewed calls, its screen shows **XX MISSED CALLS**.

All unreviewed entries are counted as missed calls. Each time you review a call log entry with the icon **NEW**, the number of missed calls decreases by one.

If you do not want to review the missed calls one by one, but you still want to keep them in the caller ID history, you can press and hold **OFF/CLEAR** for four seconds when the handset is idle. All the entries in the caller ID history become old (have been reviewed), and the missed calls counter shows 0.

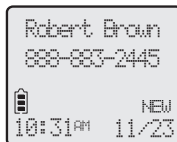

Caller ID history

To review the caller ID history

1. When a handset is in idle mode, press **▼CID** to review the caller ID history in reverse chronological order starting with the most recent call.

-OR-

You can also review the caller ID history by pressing **MENU/SELECT**, then press **▼CID** or **DIR▲** to scroll to **>CALL LOG**, then press **MENU/SELECT** twice to **REVIEW**.

2. Press **▼CID** or **DIR▲** to scroll through the list as shown on the right.

3. Press **☎ OFF/CLEAR** to exit the caller ID history.

You hear a double beep when the list reaches the beginning or end of the call log.

Make a call log entry ready to dial


Although the incoming call log entries have 10 digits (the area code plus the seven-digit number), in some areas, you might need to dial only the seven digits, 1 plus the seven digits, or 1 plus the area code plus the seven digits. You can change and store the number of digits that you dial in the call log.

While reviewing the call log, press **#** repeatedly to show different dialing options for local and long distance numbers before dialing or saving the telephone number in the directory.

Press **1** repeatedly if you need to add or remove 1 in front of the telephone number before dialing or saving it in the directory.



When the number shows in the correct format for dialing, press

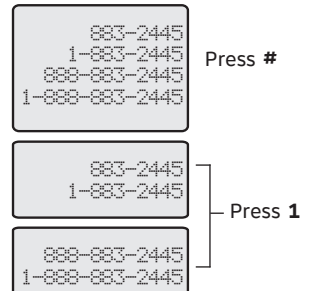☎ PHONE/FLASH or **🔊 SPEAKER** to call the number.




Caller ID history

Dial a call log entry

1. When in the call log, press ▼**CID** or **DIR▲** to browse.
2. Press  **PHONE/FLASH** or  **SPEAKER** to dial the entry.

Delete entries

- Press **MUTE/DELETE** to delete the shown entry from the caller ID history.
- When an entry from the caller ID history is shown, press and hold **MUTE/DELETE** to delete all entries from the caller ID history. When the screen shows **DELETE ALL CALLS?** press **MENU/SELECT** to clear the caller ID history of all entries, or press  **OFF/CLEAR** to exit and leave all entries in the caller ID history intact.

Save a call log entry to the directory

1. When in the call log, press ▼**CID** or **DIR▲** to browse.
2. Press **MENU/SELECT** to select an entry. The screen displays **EDIT NUMBER**.
3. Use the dialing keys to edit the number.
 - Press **MUTE/DELETE** to backspace and erase a digit.
 - Press and hold **MUTE/DELETE** to erase the entire entry.
 - Press ▼**CID** or **DIR▲** to move the cursor to the left or right.
 - Press and hold **REDIAL/PAUSE** to insert a dialing pause (p appears).
 - Copy a number from the redial list by pressing **REDIAL/PAUSE** and then ▼**CID**, **DIR▲** or **REDIAL/PAUSE** to select a number. Press **MENU/SELECT** to copy the number.
4. Press **MENU/SELECT** to move to the name. The screen displays **EDIT NAME**.
 - Use the dialing keys (page 26) to edit the name using the method explained in step 3 above. Press # to insert a space.
5. Press **MENU/SELECT** when done and the handset shows **SAVED**.
 - If the entry is already saved in the directory, the handset shows **ALREADY SAVED**.
 - If there is no caller ID information, the handset shows **UNABLE TO SAVE**.



NOTES:

1. You might need to change how a caller ID number is dialed if the entry does not appear in the correct format. Caller ID numbers might appear with an area code that might not be necessary for local calls, or without a 1 that might be necessary for long distance calls (page 33).
2. If neither the name nor number is available, **UNABLE TO SAVE** appears.






Reasons for missing caller ID information

There are also occasions when other information or no information shows for various reasons:

On-screen message	Reason
PRIVATE NUMBER	The caller prefers not to show the phone number.
PRIVATE NAME	The caller prefers not to show the name.
PRIVATE CALLER	The caller prefers not to show the phone number and name.
UNKNOWN NUMBER	Your local telephone company cannot determine the caller's number.
UNKNOWN NAME	Your local telephone company cannot determine the caller's name.
UNKNOWN CALLER	Your local telephone company cannot determine the caller's name and telephone number. Calls from other countries may also generate this message.

Alert tones and lights

Screen icons

	Battery status - battery is charging (animated display).
	Battery status - low battery (flashing); place handset in telephone base or charger to recharge.
	SPEAKERPHONE - the speakerphone is in use.
	Ringer off - the handset ringer is off.
	NEW VOICEMAIL - there are new voicemail from the local telephone company.
NEW	Missed and unreviewed calls.
MUTE	Microphone is off.



Handset alert tones

Two short beeps	You are pressing the ▼CID or DIR▲ keys when the volume is already at its highest or lowest setting.
Four short beeps	Low battery warning.
Two beeps	Out of range while the handset is on a call.
Three rising tones	The system has completed the command successfully.


Lights

IN USE

On when the handset is in use or when you are registering a handset.

Flashes when another telephone is in use on the same line, or when you are de-registering handset(s) from the telephone base.

Flashes quickly when there is an incoming call.

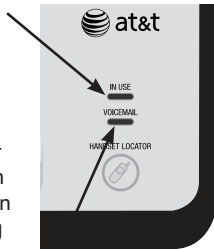

VOICEMAIL

Flashes when you have new voicemail. Voicemail service is from your local telephone company.

CHARGE

On when the handset is charging in the telephone base or charger.

Lighted display

Lighted dial pad

▶ SPEAKER

On when the speakerphone is on.



Handset display screen messages

Screen display messages

ALREADY SAVED	The telephone number you have entered is already in the directory.
CALL LOG EMPTY	You are trying to reach an empty caller ID history.
CALL TRANSFERED	You are transferring an outside call from one handset to another handset.
CALLING HANDSET X (For systems with three or more handsets)	The handset is calling the other handset (for intercom calls).
CALLING OTHER HANDSET (For system with two handsets)	The handset is calling the other handset (for intercom calls). The handset is going to transfer an outside call to another handset.
CHARGING	A handset with a low battery is in the telephone base or charger.
DIRECTORY EMPTY	There are no directory entries.
ENDED	You have just ended a call.
HANDSET X IS CALLING (For systems with three or more handsets)	Another system handset is calling.
HANDSET X REGISTERED	The handset registration is successful, with X being the handset number.
INCOMING CALL	There is a call coming in.
INTERCOM	The handset is on an intercom call.
INTERCOM ENDED	The intercom call has just ended.
INTERCOM TO: (For systems with three or more handsets)	You have started the intercom process, and need to enter the number of the handset you wish to call.
LINE IN USE	An extension phone or one of the handsets is in use.
LIST FULL	The directory is full. You cannot save any new entries unless you delete some current entries.
LOW BATTERY	You should charge the battery.

Handset display screen messages

Screen display messages

MICROPHONE ON	Mute is off so the other party can hear your voice.
XX MISSED CALLS	There are new calls in the caller ID history.
MUTED	The microphone is off.
NEW VOICEMAIL	There are new voicemail messages.
NO LINE	There is no telephone line connection.
NO SIGNAL, CALL ENDED	The handset is out of range while on a call.
NOT AVAILABLE AT THIS TIME	Someone else is already using the directory or caller ID history.
OTHER HANDSET IS CALLING (For system with two handsets)	The other handset is calling.
OUTSIDE CALL	You are on the external call during call transfer.
** PAGING **	The telephone base is paging handset(s).
PHONE	The handset is in use.
PLACE IN CHARGER	The battery is very low. The handset should be in the telephone base or charger.
RINGER MUTE	The ringer is off temporarily during an incoming call.
SAVED	The entry in caller ID history is now in the directory.
SEARCHING FOR BASE	The handset has lost communication with the telephone base.
SPEAKER	The handset speakerphone is in use.
TRANSFER TO: (For systems with three or more handsets)	You have started transferring a call, and need to enter the desired handset number.
UNABLE TO CALL TRY AGAIN	Failed intercom or conference call (there are already two handsets being used).
UNABLE TO SAVE	You are trying to save an entry with no name and number from the caller ID history.

Expansion handset

Your new AT&T CL81109/CL81209/CL81309 telephone system can accommodate up to 12 handsets. You can add new handsets (AT&T CL80109, available separately) to your telephone system, you must register each device with the telephone base before use. To register a new handset, see page 40.

The handset with the CL81109 comes as **HANDSET 1**. You can register up to 11 additional handsets to the telephone base, and the handset numbers are in numerical order (**HANDSET 2, HANDSET 3, HANDSET 4** and so on).

The handsets that come with the CL81209 are **HANDSET 1, HANDSET 2**. You can register up to 10 additional handsets to the telephone base, and they are assigned numbers in sequential order (**HANDSET 3, HANDSET 4, HANDSET 5** and so on).

The handsets that come with the CL81309 are **HANDSET 1, HANDSET 2** and **HANDSET 3**. You can register up to nine additional handsets to the telephone base, and they are in sequential order (**HANDSET 4, HANDSET 5, HANDSET 6** and so on).

Expansion handset

Adding and registering handsets (optional)

Handsets that you purchase separately (AT&T CL80109) need to synchronize with the telephone base before use. When new, all expansion handsets show **NOT REGISTERED** on the screen. You might need to charge the new handsets for five minutes before registering to the telephone base.

**To register a handset to your telephone base**

1. Place the unregistered handset into the telephone base. If **PRESS HNDST LOC 4 SEC ON BASE** does not appear on the handset screen after a few seconds, remove the handset and place it in the telephone base again.
2. On the telephone base, press and hold **HANDSET LOCATOR** for about four seconds (until the red **IN USE** light on the telephone base is on) and then release the button. The handset shows **PLEASE WAIT...** and it takes 10 seconds to complete the registration. The handset shows **HANDSET X REGISTERED**, with X being the handset number (1-12). There is a beep sound when the registration is successful.

**NOTES:**

1. If the registration is not successful, the screen shows **NOT REGISTERED**. To reset the handset, remove the handset from the telephone base and place it back in. Try the registration process again.
2. You cannot register a handset if any other system handset is in use.

Expansion handset

De-registering a handset

You can de-register handsets. You may need to de-register your handsets if:
You have twelve registered handsets and need to replace a handset.





-OR-

You wish to change the designated handset number of your registered handsets.

You must first de-register ALL the handsets, and then re-register each handset you wish to use.



Please read carefully through all the instructions on this page before beginning the de-registration process.

To de-register all handsets

1. Press and hold  **HANDSET LOCATOR** on the telephone base for about 10 seconds (until the **IN USE** light starts to flash), then release the  **HANDSET LOCATOR** button.
2. Immediately press and release  **HANDSET LOCATOR** again. You must press  **HANDSET LOCATOR** while the **IN USE** light is still flashing. (The light flashes for about seven seconds. If the light stops flashing, pick up the handset and place it back into the telephone base, then start again with step one above.)
3. The handset(s) shows **SEARCHING FOR BASE** and it takes about 10 seconds to complete the de-registration process. ALL handsets shows **NOT REGISTERED** when de-registration is successful.
4. To re-register the handset(s) to the telephone base, follow the registration instructions on page 40.



NOTES:

1. If the de-registration process is not successful, you might need to reset the system and try again. To reset: pick up the handset and press the  **PHONE/FLASH** button, then press the  **OFF/CLEAR** button and place the handset back into the telephone base. You can also reset by unplugging the power from the telephone base and plugging it back in.
2. You cannot de-register the handset(s) if any other system handset is in use.

Troubleshooting

If you have difficulty with your phone, please try the suggestions below. For Customer Service, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

My phone doesn't work at all.

- Make sure the power cord is securely plugged in.
- Make sure you plug the battery connector securely into the cordless handset.
- Make sure you plug the telephone line cord securely and firmly into the telephone base and the telephone wall jack.
- Charge the battery in the cordless handset for at least 16 hours. For optimum daily performance, return the cordless handset to the telephone base or charger when not in use.
- If the battery is depleted, it might take approximately four minutes to charge the handset before it can resume display on the screen.
- Reset the telephone base. Unplug the electrical power. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
- You may need to purchase a new battery. Please refer to **Battery installation & charging** in this user's manual.

I cannot get a dial tone.

- First try all the suggestions above.
- Move the cordless handset closer to the telephone base. You might have moved out of range.
- If the previous suggestions do not work, disconnect the telephone base from the telephone jack and connect to a different phone. If there is no dial tone on that phone either, the problem is in your wiring or local service. Contact your local telephone company.
- Your line cord might be malfunctioning. Try installing a new line cord.

Appendix D Troubleshooting

I cannot dial out.

- First try all the suggestions above.
 - Make sure you have a dial tone before dialing. The cordless handset might take a second or two to find the telephone base and produce a dial tone. This is normal. Wait an extra second before dialing.
 - Eliminate any background noise. Noise from a television, radio or other appliances might cause the phone to not dial out properly. If you cannot eliminate the background noise, first try muting the cordless handset before dialing, or dialing from another room with less background noise.
 - If the other phones in your home are having the same problem, contact your local telephone company (charges might apply).
-

My cordless handset isn't performing normally.

- Make sure you plug the power cord securely into the telephone base. Plug the power adapter into a different, working electrical outlet without a wall switch.
 - Move the cordless handset closer to the telephone base. You might have moved out of range.
 - Reset the telephone base. Unplug the electrical power. Wait for 15 seconds then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
 - Other electronic products can cause interference to your cordless phone. Try installing your phone as far away from these types of electronic devices as possible: television sets, VCRs, or other cordless telephones.
-

SEARCHING FOR BASE appears on my cordless handset.

- Ensure you plug the telephone base in properly and the power is on.
- Place the cordless handset in the telephone base for one minute to allow the cordless handset and base to synchronize.

Appendix D Troubleshooting

- Move the cordless handset closer to the telephone base. You might have moved out of range.
 - Reset the telephone base. Unplug the electrical power. Wait for 15 seconds then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
 - Other electronic products can cause interference with your cordless phone. Try installing your phone as far away from these types of electronic devices as possible: television sets, VCRs, or other cordless telephones.
-

The batteries does not hold a charge.

- If the cordless handset is in the telephone base or charger and the charge light is not on, refer to The charge light is off in this Troubleshooting guide.
 - Charge the battery in the cordless handset for at least 16 hours. For optimum daily performance, return the cordless handset to the telephone base or charger when not in use.
 - If the battery is depleted, it might take approximately four minutes to charge the handset before it can resume display on the screen.
 - You might need to purchase a new battery. Please refer to **Battery installation & charging** in this user's manual.
-

I get noise, static, or weak signals even when I'm near the telephone base.

- If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack. The filter prevents noise and caller ID problems as a result of DSL interference. Please contact your DSL service provider for more information about DSL filters.
- You may be able to improve the performance of your cordless phone by installing your new telephone base as far as possible from any other existing cordless telephone system that may already be installed.

Troubleshooting

- Other electronic products can cause interference to your cordless phone. Try installing your phone as far away from the following electronic devices as possible: television sets, VCRs, or other cordless telephones.
- Do not install this phone near a microwave oven or on the same electrical outlet. You might experience decreased performance while the microwave oven is operating.
- If you plug your phone in with a modem or a surge protector, plug the phone (or modem/surge protector) into a different location. If this does not solve the problem, re-locate your phone or modem farther apart from one another, or use a different surge protector.
- Relocate your phone to a higher location. The phone might have better reception in a high area.
- If the other phones in your home are having the same problem, contact your local telephone company (charges may apply).

I experience poor sound quality when using the speakerphone.

- For increased sound quality while using the speakerphone, place the handset on a flat surface with the dial pad facing up.

I hear other calls while using my phone.

- Disconnect the telephone base from the telephone jack, and plug in a different telephone. If you still hear other calls, call your local telephone company.

My cordless handset does not ring when I receive a call.

- Make sure that the ringer is not off. Refer to the section on ringer selection in this user's manual.
- Make sure you plug in the telephone line cord securely into the telephone base and the telephone jack. Make sure you plug in the power cord securely.
- The cordless handset may be too far from the telephone base.

Troubleshooting

- Charge the battery in the cordless handset for at least 16 hours. For optimum daily performance, return the cordless handset to the telephone base or charger when not in use.
- You may have too many extension phones on your telephone line to allow all of them to ring simultaneously. Try unplugging some of the other phones.
- The layout of your home or office might be limiting the operating range. Try moving the telephone base to another location, preferably on an upper floor.
- If the other phones in your home are having the same problem, contact your local telephone company (charges might apply).
- Test a working phone at the phone jack. If another phone has the same problem, contact your local telephone company (charges might apply).
- Other electronic products can cause interference with your cordless phone. Try installing your phone as far away as possible from electronic devices such as television sets, VCRs, or other cordless telephones.
- Re-install the battery, and place the cordless handset in the telephone base. Wait for the cordless handset to re-establish its connection with the telephone base. Allow up to one minute for this to take place.
- Your line cord might be malfunctioning. Try installing a new line cord.

My calls cut in and out while I'm using my cordless handset.

- Other electronic products can cause interference with your cordless phone. Try installing your phone as far away from the following electronic devices as possible: television sets, VCRs, or other cordless telephones.
- Do not install this phone near a microwave oven or on the same electrical outlet. You might experience decreased performance while the microwave oven is operating.

Troubleshooting

- If you plug your phone in with a modem or surge protector, plug the phone (or modem/surge protector) into a different location. If this does not solve the problem, re-locate your phone or modem farther apart from one another, or use a different surge protector.
- Relocate your telephone base to a higher location. The phone might have better reception when installed in a high area.
- If the other phones in your home are having the same problem, contact your local telephone company (charges may apply).

The charge light is off.

- Make sure you plug the power and line cords in correctly and securely.
- Unplug the electrical power. Wait for 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
- Clean the cordless handset and telephone base charging contacts each month with a pencil eraser or cloth.

My caller ID isn't working.

- Caller ID is a subscription service. You must subscribe to this service from your local telephone company for this feature to work on your phone.
- The caller must be calling from an area that supports caller ID.
- Both you and your caller's telephone companies must use caller ID compatible equipment.
- If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack. The filter prevents noise and caller ID problems resulting from DSL interference. Please contact your DSL service provider for more information about DSL filters.

Troubleshooting

System does not receive caller ID when on a call.

- Make sure you subscribe to caller ID with call waiting features from your local telephone company. Caller ID features works only if both you and the caller are in areas offering caller ID service, and if both telephone companies use compatible equipment.

Common cure for electronic equipment.

If the telephone does not seem to be responding normally, try putting the cordless handset in the telephone base or charger. If it does not seem to respond, do the following (in the order listed):

- Disconnect the power to the telephone base.
- Disconnect the cordless handset battery, and spare battery, if applicable.
- Wait a few minutes.
- Connect power to the telephone base.
- Re-install the battery, and place the cordless handset into the telephone base.
- Wait for the cordless handset to re-establish its connection with the telephone base. Allow up to one minute for this to take place.

Maintenance

Taking care of your telephone

- Your cordless telephone contains sophisticated electronic parts, so you must treat it with care.
- Avoid rough treatment.
- Place the handset down gently.
- Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

- You can damage your telephone if it gets wet. Do not use the handset in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

- Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

Cleaning your telephone

- Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap.
- Do not use excess water or cleaning solvents of any kind.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL. Then pull the unit out by the unplugged cords.

Important safety information



This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

Safety information

- Read and understand all instructions in the user's manual. Observe all markings on the product.
- Avoid using a telephone during a thunderstorm. There may be a slight chance of electric shock from lightning.
- Do not use a telephone in the vicinity of a gas leak. If you suspect a gas leak, report it immediately, but use a telephone away from the area where the gas is leaking. If this product is a cordless model, make sure the telephone base is also away from the area.
- Do not use this product near water, or when you are wet. For example, do not use it in a wet basement or shower, or next to a swimming pool, bathtub, kitchen sink, or laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquid, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
- Install this product in a protected location where no one can trip over any line or power cords. Protect cords from damage or abrasion.
- If this product does not operate normally, see the **Troubleshooting** section on pages 42-48 of this user's manual. If you cannot solve the problem, or if the product is damaged, refer to the **Limited warranty** on pages 55-56. Do not open this product except as directed in your user's manual. Opening the product or reassembling it incorrectly may expose you to hazardous voltages or other risks.
- Replace batteries only as described in your user's manual. Do not burn or puncture batteries — they contain caustic chemicals.
- This power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.



Caution: Use only the power adapter provided with this product. To obtain a replacement, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Important safety information

Especially about cordless telephones

- **Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the handset by radio waves, so there is a possibility that your cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- **Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet which is not controlled by a wall switch. Calls cannot be made from the handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- **Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to TVs and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.
- **Rechargeable batteries:** This product contains nickel-metal hydride rechargeable batteries. Exercise care in handling batteries in order not to create a short circuit with conductive material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- **Nickel-metal hydride rechargeable batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.



The RBRC™ Seal means that the manufacturer is voluntarily participating in an industry program to collect and recycle nickel-metal hydride rechargeable batteries when taken out of service within the United States. These batteries may be taken to a participating local retailer of replacement batteries or recycling center. Or you may call 1 (800) 8-BATTERY for locations accepting spent Ni-MH batteries.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

Should keep wireless telephones at least six inches from the pacemaker.

Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.

Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

SAVE THESE INSTRUCTIONS

FCC part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with the applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable the alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

Remain on the line and briefly explain the reason for the call before hanging up.

Perform such activities in off-peak hours, such as early morning or late evening.

FCC part 68 and ACTA

Industry Canada

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This product meets the applicable Industry Canada technical specifications.

FCC part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian ICES-003.

Limited warranty

The AT&T brand is used under license - any repair, replacement or warranty service, and all questions about this product should be directed to: In the United States of America, visit **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, call **1 (866) 288-4268**.

1. What does this limited warranty cover?

The manufacturer of this AT&T-branded product warrants to the holder of a valid proof of purchase (“CONSUMER” or “you”) that the product and all accessories provided in the sales package (“PRODUCT”) are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the PRODUCT operating instructions. This limited warranty extends only to the CONSUMER for products purchased and used in the United States of America and Canada.

2. What will be done if the PRODUCT is not free from defects in materials and workmanship during the limited warranty period (“materially defective PRODUCT”)?

During the limited warranty period, the manufacturer’s authorized service representative will repair or replace at the manufacturer’s option, without charge, a materially defective PRODUCT. If the manufacturer repairs the PRODUCT, they may use new or refurbished replacement parts. If the manufacturer chooses to replace the PRODUCT, they may replace it with a new or refurbished PRODUCT of the same or similar design. The manufacturer will retain defective parts, modules, or equipment. Repair or replacement of the PRODUCT, at the manufacturer’s option, is your exclusive remedy. The manufacturer will return repaired or replacement products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

3. How long is the limited warranty period?

The limited warranty period for the PRODUCT extends for ONE (1) YEAR from the date of purchase. If the manufacturer repairs or replaces a materially defective PRODUCT under the terms of this limited warranty, this limited warranty also applies to repaired or replacement PRODUCT for a period of either (a) 90 days from the date the repaired or replacement PRODUCT is shipped to you or (b) the time remaining on the original one-year limited warranty; whichever is longer.

4. What is not covered by this limited warranty?

This limited warranty does not cover:

- PRODUCT that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water, or other liquid intrusion; or
- PRODUCT that has been damaged due to repair, alteration, or modification by anyone other than an authorized service representative of the manufacturer; or
- PRODUCT to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or
- PRODUCT to the extent that the problem is caused by use with non-AT&T accessories; or
- PRODUCT whose warranty/quality stickers, PRODUCT serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- PRODUCT purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to products used for rental purposes); or

Limited warranty

- PRODUCT returned without valid proof of purchase (see item 6 below); or
- Charges for installation or setup, adjustment of customer controls, and installation or repair of systems outside the unit.

5. How do you get warranty service?

To obtain warranty service in the United States of America, visit

www.telephones.att.com or call **1 (800) 222-3111**. In Canada, call **1 (866) 288-4268**. NOTE: Before calling for service, please review the user's manual; a check of the PRODUCT controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the PRODUCT(s) to the service location. The manufacturer will return repaired or replaced PRODUCT under this limited warranty to you. Transportation, delivery or handling charges are prepaid. The manufacturer assumes no risk for damage or loss of the PRODUCT in transit. If the PRODUCT failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, the manufacturer will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of products that are not covered by this limited warranty.

6. What must you return with the PRODUCT to get warranty service? You must:

- Return the entire original package and contents including the PRODUCT to the service location along with a description of the malfunction or difficulty; and
- Include "valid proof of purchase" (sales receipt) identifying the PRODUCT purchased (PRODUCT model) and the date of purchase or receipt; and
- Provide your name, complete and correct mailing address, and telephone number.

7. Other limitations

This warranty is the complete and exclusive agreement between you and the manufacturer of this AT&T branded PRODUCT. It supersedes all other written or oral communications related to this PRODUCT. The manufacturer provides no other warranties for this PRODUCT. The warranty exclusively describes all of the manufacturer's responsibilities regarding the PRODUCT. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the PRODUCT is fit for ordinary use) are limited to one year from date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall the manufacturer be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the PRODUCT or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this PRODUCT. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase.

Technical specifications

RF frequency band	1921.536 MHz — 1928.448 MHz
Channels	5
Operating temperature	32°F — 122°F 0°C — 50°C
Telephone base voltage (AC voltage, 60Hz)	96 — 130 Vrms
Telephone base voltage (AC adapter output)	6VAC @300mA
Handset voltage	2.4 — 3.2 VDC
Charger voltage (AC adapter output)	6VAC @300mA
Replacement battery	2.4V 750MAH

Operation	Operating time*
Talk time (handset)	Up to eight hours
Talk time (speakerphone)	Up to five hours
Standby	Up to six days

* Operating times varies depending on your actual use and the age of the battery.

DECT 6.0 digital technology

The AT&T DECT 6.0 products offer unsurpassed range performance and sound clarity. This is achieved through a unique antenna design and advances in noise-filtering technology. An independent laboratory has confirmed that AT&T DECT 6.0 products perform up to 45% better in range competitions. Now calls can be taken in the basement, backyard and garage with exceptional sound quality.

Telephone operating range

This cordless telephone operates within the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance — which can vary with the locations of the telephone base and handset, the weather, and the construction of your home or office.

Extended range and clarity

This telephone base comes with an antenna which gives much better clarity and covers a longer range than before.

Index

A

Alert, 36
Alert tones, 36
Answering calls, 16
Auto off, 16

B

Battery charging, 8
Battery installation, 7

C

Caller ID (CID),
 add entries to phone directory, 34
 delete entries, 34
 dial entries, 34
 review entries, 33
Caller ID, 30
Call transfer using intercom, 23
Call waiting, 18
Chain dialing, 19
Charger installation, 6
Clear voicemail indication, 14
Clock, 13

D

Day and time, 13
De-registration, 41
Delete redial entries, 17
Dialing,
 directory dialing, 29
 from a record in the caller ID history,
 34
Directory,
 dial number, 29
 edit entries, 29
 name search, 28
 new entries, 25
Display dial, 29

DSL, 4, 5

E

Elapsed time, 16
Ending calls, 16
Expansion handset, 39

F

Flash (switchhook flash), 18

H

Handset,
 de-registration, 41
 expansion, 39
 key tone, 12
 language, 12
 locator, 20
 quick reference guide, 1
 registration, 40
 ringer tone, 12
 ringer volume, 11
 screen display message, 37
 settings, 11
 speakerphone, 17
 status icons, 36
 temporary ringer silencing, 16
 voicemail indicator, 14

I

Important safety information, 50
Incoming caller ID history, 33
Incoming calls, answering, 16
Installation, 4
Intercom, 21

K

Key tone, 12

Index

L

Language, 12
Last number redial, 17
Lights, 36
Limited warranty, 55

M

Maintenance, 49
Making call, 16
Memory match, 32
Mute, 18

N

Names,
 enter into directory, 26
 search for, 28

O

On-hook dialing, 16

P

Paging tone, 20
Power adapter, 5, 6
Predialing, 16

Q

Quick reference guide, 1

R

Receiving calls, 16
Recharging, 8
Redial, 17
Registration, 40
Ringer silencing, 16
Ring tone options, 12

S

Safety information, 50
Search by name, 28
Speakerphone, 17

T

Technical specifications, 57
Telephone operating range, 57
Temporary ringer silencing, 16
Time, setting, 13
Troubleshooting, 42

V

Visual message waiting indicator, 14
Voicemail, 14
Volume control, 11

W

Wall-mount installation, 9
Warranty, 55



www.telephones.att.com