TR707+ UHF Transceiver

A Member of the BWIN™ Family of Products

INTALLATION AND OPERATION GUIDE



Document: tr707_ml_r01_sd

Approved: **G.V.**

Proprietary to Vecima Networks Inc.

All rights reserved.

No part of this publication may by reproduced in any form or by any means or used to make any derivative work (such as translation, transformation or adaptation) without written permission from Vecima Networks Inc.

Vecima Networks Inc. reserves the right to revise this publication and to make changes in content from time to time without obligation on the part of Vecima Networks Inc. to provide notification of such revision or change.

Vecima Networks Inc. provides this guide without warranty of any kind, either implied or expressed, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Vecima Networks Inc. may make improvements or changes in the product(s) described in this manual at any time.

Specifications subject to change without notice. Printed in Canada

SAFETY PRECAUTIONS

- 1. Before installing and operating this equipment, read all Safety, Installation and Operating sections. Retain this manual for future reference.
- 2. Follow all instructions Failure to do so may result in damage to the unit or severe personal injury.
- 3. Servicing should not be attempted by the user. There are no user serviceable parts inside. Refer all servicing to factory qualified personnel.
- 4. Shock Hazard An electrical shock hazard exists when the chassis cover is removed as is required to set internal controls. Always disconnect power from the unit before removing the cover.
- 5. Cleaning Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.

Warning Do not work on the system or connect or disconnect cables during periods of lightning activity.

CAUTION: To comply with FCC RF exposure requirements in section 1.1307, a minimum separation distance of 1.5 meters is required between this antenna and all persons.

LES PRÉCAUTIONS DE SÉCURITÉ

- 1. Avant d'installer ou d'opérer cet équipement, lisez, toutes les sections de sécurités, d'installations et d'opérations. Gardez ce manuel comme source de référence.
- Suivez toutes instructions si non, vous risquez d'endommager la machine ou de vous blesser sérieusement.
- 3. N'essayez, pas de réparer cet équipement vous même. Référez toutes révisions nécessaire au personnel qualifié de la manufacture.
- 4. Risque de choc Il y a un risque de décharge électrique qui existe quand la couverture du châssis est enlevée, comme est nécessaire pour ajuster les contrôles internes. Il faut toujours couper l'électricité avant d'enlever le couvercle pour faire aucun ajustage.
- 5. Le nettoyage n'utilisez pas de nettoyeurs aérosols ou liquides. Utilisez un tissu humide pour nettoyer.

Attention Ne pas travailler sur le système ni brancher ou débrancher les câbles pendant un orage du foudre.

INDEX

1.0 GENERAL INFORMATION	
1.1 Functional Overview	1
1.2 Module Features	1
1.3 Specifications	
Transmitter Specifications	
Receiver Specifications	
RF port specifications	
IF Port Specifications	
General	
2.0 INSTALLATION	3
2.1 Unpacking the Unit	3
2.2 Mounting the Unit	3
2.2.1 Mounting the TR707+	3
2.2.2 Mounting the Antenna	3
2.4 Connection to the Antenna	5
2.4 Connection to the Power Inserter and Cable Modem	6
2.5 Waterproofing Connections	7
Step 1	
Step 2	7
Step 3	7
4.0 WARRANTY STATEMENT AND SERVICE POLICY	8
4.1 Warranty Statement	8
4.2 Service Policies: How to Return an Item for Service:	8
4.3 Repair Charges and Warranty Exemptions	9

1.0 GENERAL INFORMATION

1.1 Functional Overview

The Vecima Networks TR707+ is a subscriber transceiver for use in wireless systems. The TR707+ and antenna are situated outdoors and connected to a cable modem indoors by standard RG-59 cable. A single RF connector on the weatherproofed enclosure provides the interface to the transmit/receive antenna for rapid setup. The transceiver is configured to work with standard cable modem frequency plans and levels, permitting direct connection. The transceiver also includes an RF mute function to reduce power consumption and broadband noise emissions.

1.2 Module Features

- +24 dBm output for high reverse channel system gain
- Low phase noise
- Automatic transmit RF mute (transmits only when an IF signal is present)
- Fully weatherized unit, suitable for outdoor mounting

1.3 Specifications

TRANSMITTER SPECIFICATIONS

IF Input Frequency 24-42 MHz RF Output Frequency 698-716 MHz Linear Output Power +24 dBm QPSK +24 dBm 16QAM

Output P1dB +27 dBm Spectral Mask FCC CFR 47 Part 27.53 . Gain 18 ± 2 dB at 20°C Gain Flatness (Frequency Response) ± 1.5 dB over 698-716 MHz Gain Stability ± 1 dB over -40 to +60°C

< -93 dBc/Hz @ 10 kHz Phase Noise IF Level for RF Activation -46 dBm +/- 3dB RF Activation Response Time < 2 microseconds

RECEIVER SPECIFICATIONS

RF Input Frequency 728-746 MHz Gain 12 ± 2 dB at 20°C

Gain Flatness (Frequency Response) ± 1.5 dB over 728-746 MHz 3.0 dB typical, 5.0 dB maximum Noise Figure

RF PORT SPECIFICATIONS

≤ -9 dB in transmit and receive RF bands RF Return Loss

RF Spurious Emissions FCC CFR Part 27

IF PORT SPECIFICATIONS

IF Return Loss ≤ -12 dB in transmit and receive IF bands

IF Spurious Emissions ≤ -40 dBm from 100-860 MHz excluding 728-746 MHz

≤ -85 dBm over 728-746 MHz

GENERAL

Frequency Stability ± 20 kHz (-40 to +60°C) Frequency Stability over time < ±30 kHz over 10 years RF Connector F female, 75 ohms IF Connector F female, 75 ohms

+18 to 28 V, (+24V nominal), +10W DC Supply Operating Ambient Temperature -40 to +60°C

Size 6.0" x 8.0" x 1.5" (15.2 x 20.3 x 3.8 cm) Mounting Pole mount, 1" to 1.75" diameter pole

Note: Specifications subject to change without notice.

2.0 INSTALLATION

2.1 Unpacking the Unit

Carefully remove the equipment from its packing material and set it on a solid surface, such as a table or desk. If it appears damaged in any way, notify the carrier, and keep all packing materials for inspection by the carrier's agent.


2.2 Mounting the Unit

2.2.1 Mounting the TR707+

The following hardware is included in the box for mounting the TR707+ to the pole:

- One V-bolt to secure the TR707+ to the mounting pole
- Two 1/4" flange locknuts to secure the V-bolt

The TR707+ was designed for mounting to a pole with a diameter of 1.0" to 1.75". Please ensure that the pole used is attached securely to the building or other mounting location. Secure the TR707+ unit to a pole as shown in Figure 2.2A with F-Connector on the bottom.

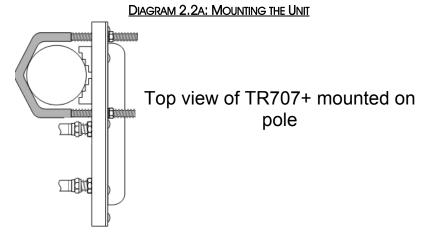

2.2.2 Mounting the Antenna

Mount the antenna according to the manufacturer's instructions.



The TR707+ is intended for use with planar arrays and Yagi antennas. Please consult table 2.2B for further information.


TABLE 2.2B: ANTENNA LIST

Transceiver Power Antenna Type		Antenna Gain	
[Watts]	[dBm]		[dBi]
0.25	+24	Yagi	10 dBi
0.25	+24	Flat planar array	9 dBi
0.25	+24	Window mount planar array	7 dBi

•

Included with the TR707+ unit is a self-adhesive label for application to the antenna. To operate the TR7007+ in compliance with FCC regulations, you must apply the included label to the antenna. Peel off the protective backing from the label and affix it to the antenna such that the label is readable from a distance of 5 feet.


DIAGRAM 2.2C: APPLYING THE SELF-ADHESIVE LABEL

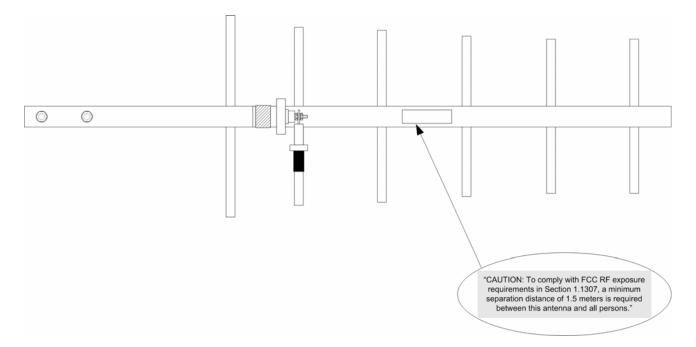

2.4 Connection to the Antenna

Connect the TR707+ to the Antenna via the F-Connector

DIAGRAM 2.3A: CONNECTION TO THE ANTENNA

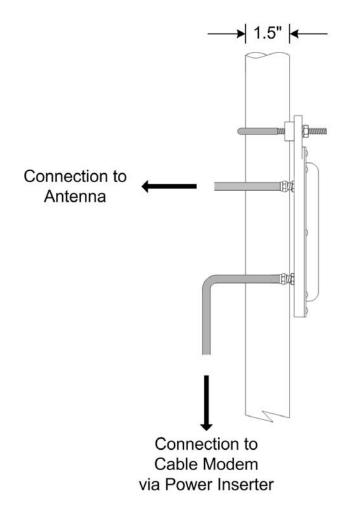

2.4 Connection to the Power Inserter and Cable Modem

Connections to the TR707+ are made as shown in Diagrams 2.3A and 2.4A.

The power inserter has three connections:

DC POWER Connect to wall adapter with RG-59 cable with F connectors

TO MODEM Connect to cable modem
TO TRANSCEIVER Connect to TR707+

WARNING!



If the power inserter is not connected correctly, the TR707+ will not operate, and there is the potential to damage the cable modem.

Ensure that all wires and cables are hooked up before plugging into the AC adapter/power supply (i.e. hook up to the power supply last).

After connection, both connectors **MUST** be waterproofed with the supplied rubber sealing tape. See Section 2.5 for details.

Vecima strongly suggests securing the power cable to the power inserter as shown. This will help to prevent unintentional disconnection.

CPE/PSI-01 Power Supply & Inserter

CPE/PSI-01 Power Supply & Inserter

Connection to Transceiver

VPNPWRCORD-xxx
(xxx designates the country that he power cord is made for)

To building ground

DIAGRAM 2.4A: CONNECTION TO CABLE MODEM VIA POWER INSERTER

tr707_ml_r01_sd Approved: G.V. 6

Vecima Networks Inc

2.5 Waterproofing Connections

Many transceiver problems can be attributed to environmental conditions (including vibration), which can loosen cables and permit moisture to penetrate the connectors. It is highly recommended to seal the connectors using a technique similar to the one described below. This will provide moisture protection and keep the connections tight. For your convenience, Vecima Networks has provided two 6 inch lengths of rubber self-amalgamating sealing tape to use on the two connections of the TR707+.

STEP 1

Use one 6" section of rubber sealing tape. Starting at the TR707+ end, stretch the tape and wrap it around the connector as close as possible to the wall of the TR707+. Overlap the tape by approximately one-half of its width so that it can form a seal with itself. Extend the wrapping to approximately one inch past the end of the connector.

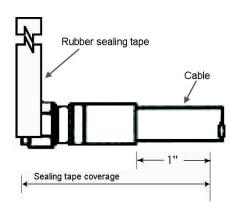


DIAGRAM 2.5A: WATERPROOFING CONNECTION - STEP 1

STEP 2

Cover the sealing tape with electrical tape (not provided). Start approximately one inch further down the cable, and stretch the tape, overlapping by one-half. Wrap to the TR707+ end and without breaking the tape, wrap back down to the cable end.


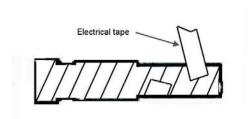


DIAGRAM 2.5B: WATEPROOFING CONNECTION - STEP 2

STEP 3

When done, the connection should be tightly wrapped with tape, with a good seal to the cable.



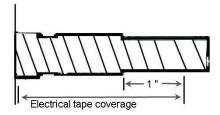

4.0 WARRANTY STATEMENT AND SERVICE POLICY

4.1 Warranty Statement

Vecima Networks warrants its products to be free from defects in workmanship or materials for a period of two years. The warranty begins on the date of the original shipment from Vecima Networks to its customer. No claim may be allowed for expenses incurred in installation or use. No other expressed or implied warranties shall apply to the goods sold. Vecima Networks is not responsible for delayed shipments, other loss beyond Vecima Networks' control, or consequential damages of any kind arising in connection with the use of its products. This warranty is a return-to-factory warranty only. During the warranty period Vecima Networks will at its option, replace, repair, or refund the price paid for any item which is returned for service. This warranty does not apply to units that have been physically or environmentally abused.

4.2 Service Policies: How to Return an Item for Service:

Before returning any item for service, an R.M.A. (Returned Material Authorization) number must be assigned by Vecima Networks. A unique R.M.A. number will be assigned for each item being returned. When requesting an R.M.A. number, please be prepared to provide the model, Vecima Networks serial number, original invoice number, your purchase order number and an adequate fault description. The serial number of a unit can be found on a barcode label similar to the one pictured below. R.M.A. service is available Monday to Friday from 8:30 a.m. to 4:30 p.m. CST (statutory holidays excepted).



To obtain an R.M.A. number you may:

Call: (306) 955-7075, press '0' for Operator, or '3' for Service Dept.

Fax: (306) 384-0086 — Attention: R.M.A. Request

Email: support@vecimanetworks.com

Once an R.M.A. number has been assigned, please refer to it in all correspondence and make certain that all applicable R.M.A. numbers are clearly marked on the outside of each package being returned. You must also ensure that each product is shipped to Vecima Networks in its original shipping container (or equivalent) via Prepaid carrier, with appropriate insurance and customs documentation (where required). Vecima Networks will not accept collect shipments, damaged shipments or shipments unaccompanied by an R.M.A. number.

For items still under Warranty – Items will be returned from Vecima Networks Inc. to its customer via prepaid ground carrier. The customer is responsible for any additional costs incurred, including custom clearance and duties. Any alternate means of shipment must be requested by the customer and will be subject to additional charges.

For items no longer under Warranty – Items will be returned from Vecima Networks Inc. to its customer via prepaid ground carrier at the customer's expense. The customer is responsible for any additional costs incurred, including custom clearance and duties. Any alternate means of shipment must be requested by the customer and will be subject to additional charges.

Shipping Instructions will be provided by the repair center when the RMA number is sent to the customer.

Vecima Networks Inc

4.3 Repair Charges and Warranty Exemptions

Items returned beyond the warranty period or items that do not qualify for warranty service are subject to additional out-of-warranty repair charges. Descriptions of these charges and warranty exemptions are below:

- 1) Repair turnaround time is typically 5-14 business days after receipt of the item at Vecima Networks. A Flat Rate Repair Charge will apply to all out-of-warranty items. Flat Rate Repair Charges are subject to change without notice.
- 2) Any faults due to customer error (i.e. incorrect set-up or configuration settings) are subject to the current Test Fee and will be exempt from warranty.
- 3) Items returned with inadequate fault descriptions are subject to the current Test Fee and are exempt from warranty.
- 4) In the event that no fault is found, the item is subject to the current Test Fee and will be exempt from warranty.
- 5) Any product exhibiting external damage (either from shipping, improper handling or use) will be subject to inspection. If said damages are determined to be the cause of failure, the item will be exempt from warranty.
 - All repairs to correct the external damage are subject to Time & Materials Charges (parts and labor at current rates).
- 6) Items with damage caused by unauthorized repairs or by external devices are subject to current out-ofwarranty Flat Rate Repair Charges and are exempt from warranty.
- 7) All products returned for Factory Optioning are subject to the applicable current Option Charge plus Test Fee. Factory-optioned products carry the balance of the original warranty or a 90 day warranty, whichever is greater.

All out-of-warranty repairs must be approved by the customer in writing. No repairs will be made until the customer's Purchase Order or Out-Of-Warranty Repair Authorization is received.



150 Cardinal Place Saskatoon, Saskatchewan, Canada S7L 6H7

Tel: (306) 955-7075 Fax: (306) 955-9919

Web: www.vecimanetworks.com Email: sales@vecimanetworks.com