



WBS-2400 & WBS-5800

Outdoor Wi-Fi Sector Base Station

Installation Guide

Rev. 3

February 2009



Note: To better reflect the value of Wavion products we are changing the name of our product family from Access Points (AP) to Wireless Base Stations (WBS), consequently the existing **WS-410** product name will be changed to **Wavion WBS-2400**.

The new product name emphasizes the difference in architecture (Multiple Radio system) and the value to customer, superiority in performance (coverage, capacity, indoor penetration and immunity to interference) of Wavion WiFi base station over any other standard outdoor WiFi access point products available in the market.

All references in Wavion's documentation to WS-410 refer also to the WBS-2400, and vice versa. Both products are exactly the same except for the name change.

Copyright Notice

©2006, 2007, 2008 Wavion, Inc. All rights reserved. Wavion is a registered trademark of Wavion in the United States and certain other jurisdictions. Specifications are subject to change without notice.

FCC Notice to Users and Operators

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by using one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician.



Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Note: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Note: According to the FCC rules the WBS-5800 unit must only be used for fixed point to point applications with fixed clients.

R&TTE Compliance Statement

This equipment (ETSI-models only) complies with all the requirements of DIRECTIVE 1999/5/CE OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal Equipment and the mutual recognition of their conformity (R&TTE)

Contents

Chapter 1	About This Guide	5
	Preface	5
	Conventions	5
	Contacting Technical Support	6
Chapter 2	Introduction	7
Chapter 3	Package Content	8
Chapter 4	Installing the Wavion WBS-2400/5800 Sector Base Station ..	10
	Important Safety Instructions.....	11
	Preparing for Installation.....	12
	Choosing a Location	13
	Preparing the Site	13
	Mounting Strategies.....	14
	Using Hose Clamps.....	14
	Mounting on a Pole/Streetlight	15
	Grounding the Data Protection Device	18
	Connecting Power and DATA.....	20
	Safety Information for the Wavion WBS-2400/5800.....	24
	Service Instructions	25
Chapter 5	Product Specification WBS-2400 Sector	26
Chapter 6	Antenna 2.4GHz Specifications and Patterns	30
	MT-343037/CV 2.4GHz Sector Antenna	30
Chapter 7	Product Specification WBS-5800	33
Chapter 8	Antenna 5.8GHz Specifications and Patterns	39
	MT-463009CV 5.8GHz Antenna Azimuth Patterns directional Antenna	39
Chapter 9	Installation Accessories	41
	Ethernet Cables	42
	Sun Protection	42
	Lightning Protection	42
	Power Over Ethernet	42
Chapter 10	Wind Loading Considerations	43
Chapter 11	Acronyms.....	44
Chapter 12	Appendix A: WBS-2400/5800 Product list.....	46

Chapter 1

About This Guide

Preface

This guide details the Wavion WBS-2400/5800 Sector installation procedures. The intended audience of this document is trained technical professionals.

Conventions



The exclamation point within a triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



The lightning flash with an arrowhead symbol within a triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The notebook is intended to alert the user of a note containing further information.

Contacting Technical Support

For technical support, contact Wavion using these methods:

Address:	Wavion Technical Support Wavion 6 Hayetzira Street, PO BOX 580 Yoqneam Illit, 20692 Israel
Telephone:	+972-4-9097300
Fax:	+972-4-9097322
Email:	support@wavionnetworks.com
Web:	www.wavionnetworks.com

Chapter 2

Introduction

WBS-2400/5800 Sector is a high capacity, IP services oriented Broadband Wireless access system. WBS-2400/5800 Sector is a new category of Broadband Wireless Base Station designed from the ground up for metro-Wi-Fi deployments. The system employs wireless packet switched data technology to support high-speed IP services including fast Internet and Virtual Private Networks. WBS-2400/5800 Sector users are provided with a network connection that is always on, supporting immediate access to the Internet and other IP services at high data rates. The system is designed for cellular-like deployment, enabling the system architecture to vary in size and structure. A system can include any number of cells, each containing several base station access units for better coverage of densely populated areas.

It is based on three antennas and radios and custom-built ASICs, utilizes Wavion's powerful multi-antenna signal processing technologies, and provides significant performance gains to off-the-shelf 802.11 standards-based

The WBS-2400/5800 Sector may be mounted on streetlights or rooftops and may be easily interfaced with wired internet connections, wireless mesh or backhaul equipment.

Complete management of the WBS-2400/5800 Sector is provided through SNMP, a graphical user interface, and SYSLOG services.

Chapter 3

Package Content

Check that the package contains:

- POE injector unit with wall mounting kit
- Outdoor Unit
- Pole mounting bracket for the outdoor unit
- Allen head wrench with 4 screws
- Waterproof sealing tape for IP67 (band to sealing rubber)

Additional Equipment and Tools required for Installation

- Ethernet cable (straight for connecting to a hub/switch)
- Crimping tool for RJ-45 connectors.
- Ground cable with an appropriate termination.
- Mains plug adapter or termination plug (if the power plug on the supplied AC power cord does not fit local power outlets).
- Portable PC with Ethernet card and Telnet software and a straight Ethernet cable.



WARNING: Use straight Ethernet (POE) cable connecting the injector to AF unit in order to have all the features work properly (reset button and Link LED). Using cross cable might cause turn Link led to "ON" permanently and also may be the cause software reset. DATA cable connecting the injector to the network can be cross cable as well.

- Addition tools and materials, including appropriate means (e.g. a pole) for installing the outdoor equipment.
- 1/4-inch flat blade screwdriver



WARNING: ONLY experienced installation professionals who are familiar with local building and safety codes and, wherever applicable, are licensed by the appropriate government regulatory authorities should install outdoor units and antennas. Failure to do so may void the WBS-2400/5800 product warranty and may expose the end user or Service Provider to legal and financial liabilities. Wavion and its resellers or distributors are not liable for injury, damage or regulation violations associated with the installation of Outdoor Units or antennas

Chapter 4

Installing the Wavion WBS-2400/5800 Sector Base Station

This guide explains how to safely install the Wavion WBS-2400/5800 Sector Base Station. The following topics are covered in this chapter:

- [Important Safety Instructions](#)
- [Preparing for Installation](#)
- [Mounting Strategies](#)
- [Using Hose Clamps](#)
- [Mounting on a Pole, or Streetlight](#)
- [Grounding the Wavion WBS-2400/5800](#)
- [Connecting Power and Data](#)
- [Safety Information for the Wavion WBS-2400/5800](#)
- [Service Instructions](#)

Important Safety Instructions



WARNING: It is illegal to modify the construction of this product. Modifying the operating frequency or enhancing the transmit output power through the use of external amplifiers or other equipment is specifically disallowed by the "Telecommunications Act."



WARNING: This device is for outdoor or indoor use with conditions that no harmful interference to authorized radio stations results from the operation of this device. This device shall not influence aircraft security and/or interfere with legal communications as defined in the "Telecommunications Act." If this device is found to cause interference, the operator of this equipment shall cease operating this device immediately until no interference is achieved.



Note: This device must be installed by a trained professional, value added reseller or systems integrator who is familiar with RF planning issues and the regulatory limits in the United States of America.



Caution: Read and save these instructions. Heed all warnings. Follow all instructions. Do not defeat the safety purpose of the grounding.

Caution: Only use attachments/accessories specified by the manufacturer.



Caution: Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way. For example, if the power-supply cord or plug is damaged, liquid has been spilled on the apparatus, objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, it does not operate normally, or has been dropped.



Warning: Risk of personal injury or death when installing this device! There is a risk of personal injury or death if the WBS-2400/5800 antennas come near electric power lines. Carefully read and follow all instructions in this manual. By nature of the installation, you may be exposed to hazardous environments and high voltage. Use caution when installing the outdoor system.



Warning: This apparatus must be connected to earth ground



Warning: Do not open the unit. There is a risk of electric shock inside.



Caution: You are cautioned that any change or modification not expressly approved in this manual could void your authority to operate this equipment.



Caution: There are no user-serviceable parts inside. All service must be performed by qualified personnel.

Caution Only UL listed parts and components will be used for installation. Use UL listed devices having an environmental rating equal to or better than the enclosure rating to close all unfilled openings.



Caution To maintain Overvoltage (Installation) Category II, install a suitable surge suppressor device in the branch circuit to limit expected transients to Overvoltage Category II values. The limits are based on IEC60664 and are also located in Table 2H of UL60950 (for mains 110V, the transient rating is 1500V).

Caution The WBS-2400/5800 must be installed only with the equipped antennas.



Caution A minimum distance of 40cm from the WBS-2400/5800X's antenna should be kept when the system is operated.



Caution Read and save these instructions. Heed all warnings. Follow all instructions

Preparing for Installation

ONLY experienced installation professionals who are familiar with local building and safety codes and, wherever applicable, are licensed by the appropriate government regulatory authorities should install outdoor units and antennas.

The following lists the equipment required for installation and explains how to prepare the installation site.



WARNING: Do not modify the construction of this product. Modifying the operating frequency or enhancing the transmit output power through the use of external amplifiers or other equipment is illegal.



WARNING This device is for use outdoors or indoors on the condition that operation of this device causes no harmful interference to authorized radio stations. This device shall not influence aircraft security and/or interfere with legal communications. If this device is found to cause interference, the operator of this equipment shall cease operating this device immediately.

Choosing a Location

To ensure the optimal performance select the locations for the equipment using the following guidelines:

- The antenna (integrated on the front panel of the outdoor unit) should provide a direct, or near line of sight, with the sector location that need to be covered.
- The antenna should be aligned to face the CPEs that aim to be in service, higher the placement of the antenna, the better the achievable link quality (but not in all cases).
- Average rooftop (depend on the topology of the location) should be
- The location of the outdoor unit should enable easy access to the unit for installation and testing
- Avoid installations in locations that devices operating in the same frequency range.
- The outdoor unit should be installed at the highest point of a metal pole that there will be no interference caused by RF reflections. If this is not possible, it should be installed at least 3 meters from the metal pole.
- It is recommended to use maximum distance possible from an RF radiating source.

Preparing the Site

1. Follow the appropriate electrical and building codes to ensure safe and durable wiring.
2. Follow the National Electrical Code (NEC) requirements, unless local codes in your area take precedence over the NEC code
3. The length of the indoor-to-outdoor Ethernet cable should not exceed 90 meters. The length of the Ethernet cable connecting the indoor unit to the user's equipment, together with the length of the Indoor-to-Outdoor cable, should not exceed 100 meters.
4. An appropriate ground cable should be available. Connect a grounding cable between the Ground terminal of the outdoor unit and a good ground connection.

Please refer to standards for building entrance protection.

Mounting Strategies

Consider the available mounting structures and antenna clearance when choosing a mounting location. Wavion outdoor unit WBS-2400/5800 Sector should be mounted on horizontal pole only the antennas pointing vertically and clear of obstruction.

It is recommended to attach ground and data cables to the WBS-2400/5800 Sector prior to mounting. Before mounting the WBS-2400/5800 Sector, read the wiring instructions in [Grounding the Wavion WBS-2400/5800](#) and [Connecting Power and Data](#).



Note: The WBS-2400/5800 should be mounted with at least 4 ft/3 Meter of clearance around the antennas to eliminate potential interference from the mounting structure.



Figure 4.1 Pole mounting kit for the Outdoor Unit & Sealing kit

Using Hose Clamps

Special hose clamps that include threaded holes are used by the mounting assembly to secure the WBS-2400/5800 Sector to the mounting structure. [Figure 4.2](#) demonstrate how to correctly use the hose clamps. The bands must be threaded through holes in the pole bracket, and then attached horizontal pole and tightened.

There are two pairs of threaded holes on the back of the unit, enabling to use the special clamps for mounting the unit on diverse pole diameters.



Figure 4.2 Using Special Hose Clamps & Screwing the Clamps

Mounting on a Pole/Streetlight

WBS-2400/5800 Sector can be mounted on a pole, tower, or streetlight. It is recommended to mount the WBS-2400/5800 Sector on aluminum or galvanized steel structures.



Note Before mounting the WBS-2400/5800, read the wiring instructions in [Grounding the Wavion WBS-2400/5800](#) and [Connecting a Data Port](#) chapter.

To mount the Wavion WBS-2400/5800 on a metal/wood/streetlight pole:

1. Choose a mounting location. You can attach the WBS-2400/5800 Sector outdoor unit to any pole or pipe with diameter of 3-10 inches. Wooden poles of larger diameter require different types of clamps (any streetlight arm with diameter of 3 to 10 inches will fit for this installation).
2. Slip the bands of the hose clamps through the slots of the pole bracket
3. Use the hose clamps to fasten the pole bracket to the pole.
4. Insert the WBS-2400/5800 Sector onto the pole bracket, obtain the correct position and tighten 4 bolts using 4mm Allen wrench.



Figure 4.3 Attaching the WBS-2400/5800 to the pole bracket



Note: The WBS-2400/5800 unit must be parallel to the ground. The unit can be rotated to obtain the correct position.



Note Installations on large wooden poles require band clamps such as those supplied by Panduit, www.panduit.com. Such a product is listed as "Metal, Locking Tie Extra Heavy Duty 304 Stainless Steel". The tie and the installation tool are shown below

To continue installing the WBS-2400/5800, see [Grounding the Wavion WBS-2400/5800](#) chapter

Grounding WBS-2400/5800 Sector is shown in the figure below.

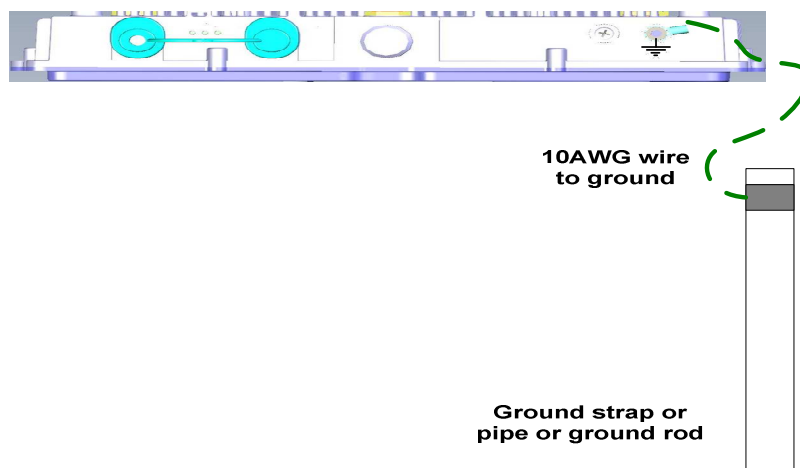


Figure 4.4 Grounding Method



Caution: You must always install an external grounding wire. You must also ground the outdoor data protection device to a ground rod or a bonded pipe. Make sure you have completed grounding before you connect power to the WBS-2400/5800.



Warning: Transient or electrostatic discharges that may occur at the WBS-2400/5800, for example a lightning strike, may damage your network equipment connected to the WBS-2400/5800 and cause personnel injury or death of persons touching the exposed metal connectors of the equipment. You must install a properly grounded lightning surge protector. Carefully follow the installation instructions provided by the manufacturer of the protection device. See

To ground the Wavion WBS-2400/5800:

The Grounding screw is located on the side panel of the outdoor unit.

To connect the grounding cable:

1. Connect one end of a grounding cable to the grounding terminal and tighten the grounding screw firmly.

Do the following steps:

- a. Remove the nut and star washers from the grounding screw.
 - b. Attach one star washer to the grounding screw.
 - c. Attach #10 AWG bare copper wires with an M6 terminal ring to the grounding screw.
 - d. Attach the second star washer and tighten the nut.
2. Connect the other end of the grounding cable to a good ground (earth) connection. (For example, a grounding rod).



Figure 4.5 Grounding

Grounding the Data Protection Device

The grounding method for an indoor data protection device is shown in [Figure 4.6](#).

To ground an indoor data protection device:

1. Position the protection device as close to the building entrance as possible.
2. Attach a length of #10 AWG bare copper wires to the ground post on the data protection device.
3. Attach the other end of the grounding wire to the ground connection of an electrical outlet or a grounded water pipe.

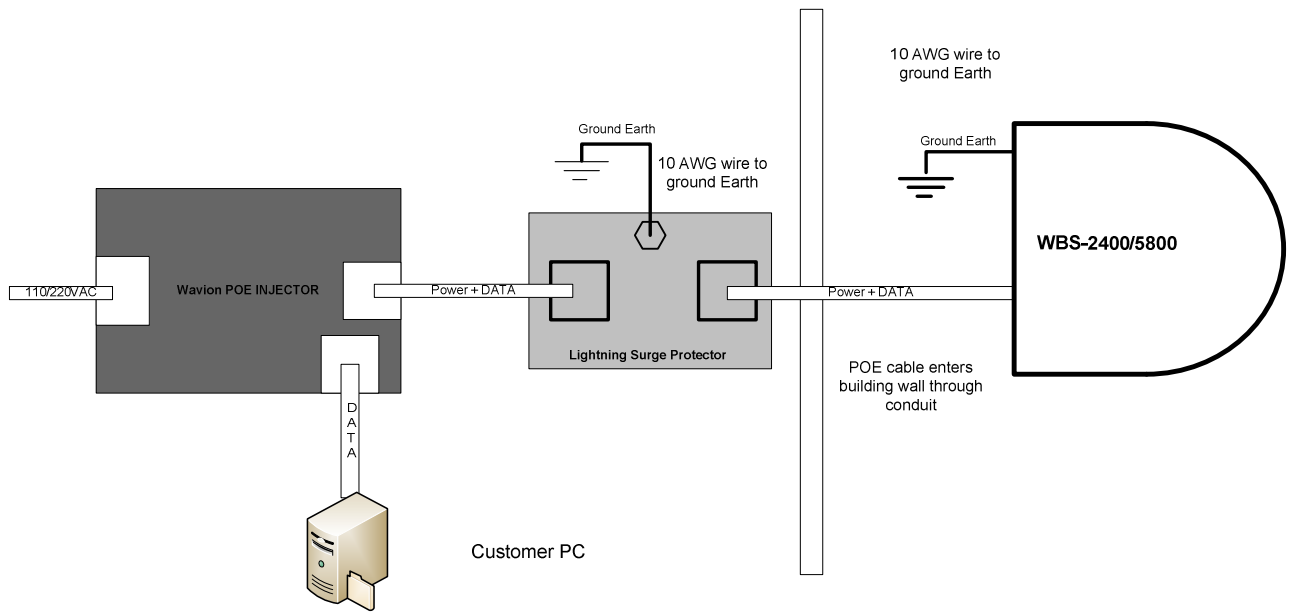


Figure 4.6 Grounding indoor injector by Network Protection Unit

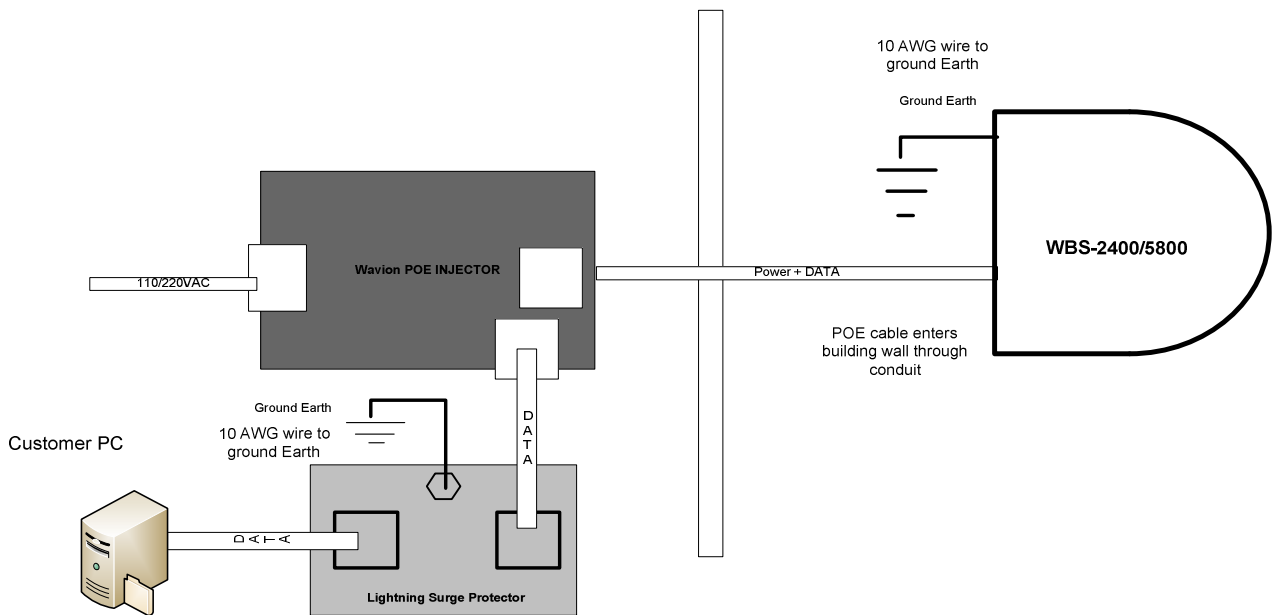


Figure 4.7 Grounding injector that located outdoor by Network Protection Unit

Connecting Power and DATA

The following describes how to apply power and data to the WBS-2400/5800X



Caution: You must always install an external grounding wire. Perform a simple continuity check between the WBS-2400/5800 and the ground termination point to confirm. You must also ground the outdoor data protection device to a ground rod or a bonded pipe. Make sure you have completed grounding before you connect power to the WBS-2400/5800X.

The Wavion WBS-2400/5800 is equipped with two RJ45 connectors. The right hand port named "TEST" is for engineering use only (!) and has to be sealed with the sealing rubber. Use the ETH port to connect data and power cable.



Figure 4.8 Connecting PoE cable



WARNING: The port named "TEST" is for engineering use only. **In any case do not connect PoE source to "TEST" port (!)**



WARNING: The shields of the Cat5 cable must be properly terminated and bonded to the unit and to the protective earth (PE) at the building entrance. This provides protection against the risk of fire, electrical hazard and ensures the reliable operation of this equipment.



Note: National Electrical Codes (NEC) Article 800 requires the use of an Agency Listed (UL/CSA) Building Entrance Protector for all power and communications cables entering a building. Article 800 is intended to protect the building and occupants from fires caused by transient voltage and current surges.



Note: This is not a mid-span powered device. Do not attempt to daisy-chain Power Over Ethernet devices.

When connecting to the Ethernet port, if you need to terminate the Ethernet cable, use a standard RJ45 termination. Use a shielded RJ45 plug and be sure to connect the shield of the Ethernet cable to the shield of the RJ 45 plug.

To connect to the data port:

1. Make sure that the power is turned off for the designated circuits.
2. Run shielded Category 5 Ethernet cable appropriate for outdoor use from a POE injector to the Wavion WBS-2400/5800 through the lightning protection device. See "Grounding the Data protection device" section for connection diagram.
3. Connect one end of the Category 5 cable to the "RADIO" port of the Wavion POE injector.
4. Connect the other cable end to ETH port on the WBS-2400/5800. Use a shielded RJ45 8-pin modular plug to terminate the cables at the desired lengths.
5. Place the sealing rubber on the cable and push it towards RJ45 connector on WBS-2400/5800
6. This port must be sealed with the provided rubber seal, make sure that the waterproof Seal strip is also attached.

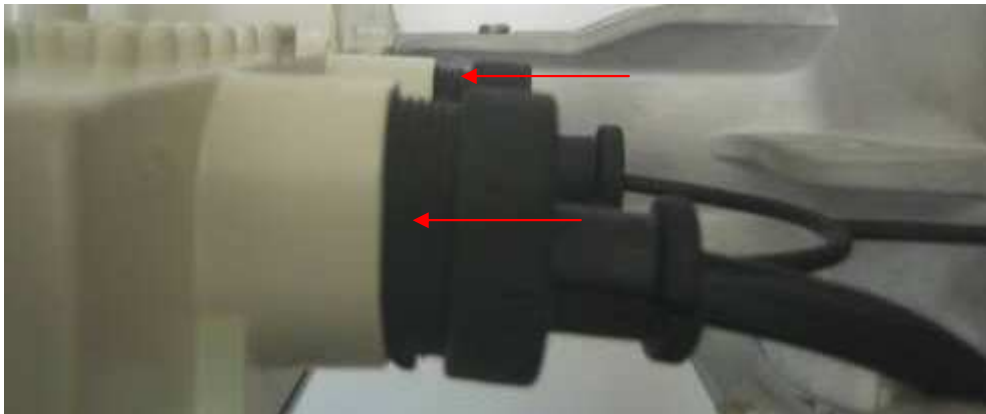


Figure 4.9 Sealing rubber

7. Remove the strip nylon cover



Figure 4.10 Sealing rubber

8. Tighten the band on sealing rubber for better sealing or using weatherproof Stripe.



Note: Use high quality sealing material such as Scotch® 130C Linerless Rubber (attached to the product) Splicing Tape from 3M to ensure IP-67 compliant protection against dust and water.

Figure 4.11 Weatherproof Stripe sealing

9. Connect the data cable from the network to "Ethernet" port of POE injector.
10. Connect POE injector to AC power source to power WBS-2400/5800 unit.

POE port RJ45 Pin Descriptions

Pin	T/R	Signal	Color	Description
1	T	TXD+	Orange-White	TX Data 10/100BaseT
2	R	TXD-	Orange	TX Data 10/100BaseT
3	T	RXD+	Green-White	RX Data 10/100BaseT
4	R	PoE+	Blue	Power input, 55 VDC (+)
5	T	PoE+	Blue-White	Power input, 55 VDC (+)
6	R	RXD-	Green	RX Data 10/100BaseT
7	T	PoE-	Brown-White	Power input, 55 VDC (-)
8	R	PoE-	Brown	Power input, 55 VDC (-)

Safety Information for the Wavion WBS-2400/5800

The Federal Communications Commission (FCC) with its action in ET Docket 96-8 has adopted a safety standard for human exposure to RF electromagnetic energy emitted by FCC certified equipment. Proper operation of the Wavion WBS-2400/5800 according to the instructions found in this manual, results in user exposure that is substantially below the FCC recommended limits.

Follow these guidelines to ensure safe operation of the Wavion WBS-2400/5800X:

- Do not touch or move the antennas while the unit is transmitting or receiving.
- Make sure the antennas are connected when operating the radio or attempting to transmit data, otherwise, the radio may be damaged.
- Do not hold the antenna to be close to or touching any exposed parts of the body, especially the face or eyes, while transmitting.
- The use of wireless devices on airplanes is governed by the Federal Aviation Administration (FAA).
- The use of wireless devices in hazardous locations is limited to the constraints posed by the safety directors of such environments.
- The use of wireless devices in hospitals is restricted to the limits set forth by each hospital.
- Do not operate a portable transmitter near unshielded blasting caps or in an explosive environment.
- The Wavion WBS-2400/5800 must be used only with Wavion approved components and antennas.

Service Instructions

The Wavion WBS-2400/5800 contains no user serviceable parts inside.

Chapter 5

Product Specification WBS-2400 Sector

The tables in this chapter contain specifications for the Wavion WBS-2400.

Wireless Specifications

compliant	IEEE 802.11b/g
Frequency band	2.4 - 2.483 GHz
Modulation	<ul style="list-style-type: none">• 802.11b: DSSS (DBPSK, DQPSK, CCK)• 802.11g: OFDM (64QAM, 16QAM, QPSK, BPSK)
TX Power Maximum	802.11b and 802.11g
Beamformer Directed Power	EIRP + Beamforming gain: 42.5dBm
EIRP Calculations	Antenna Gain - 10.5 dBi Total EIRP - 34.5 dBm
RX Sensitivity*	802.11b and 802.11g
Antenna Array	three 10.5 dBi directional antennas

* RX Sensitivity

-105.5 dBm @	1 Mbps
-103 dBm @	2 Mbps
-100.5 dBm @	5.5 Mbps
96 dBm @	11 Mbps
-102.5 dBm @	6 Mbps
-100.5 dBm @	9 Mbps
-99.5 dBm @	12 Mbps
-98 dBm @	18 Mbps
-95	24

dBm @	Mbps
-92	36
dBm @	Mbps
-88	48
dBm @	Mbps
-86	54
dBm @	Mbps

Security Specifications

Packet filtering via layer 2 & 3

WEP (64 bit or 128 bit)

WPA:

Encryption: WEP or TKIP

Authentication: Pre-Shared Key or 802.1x with RADIUS Server (EAP-TLS, PEAP, EAP-TTLS)

VPN pass-through and tagging

HTTPS for web-based management tools

Management Specifications

Web based configuration and management tool

SNMPv2 with standard and Wavion MIB support

Configuration save and restore

Network and client statistics

Networking and QoS Specifications

Full 802.11b/g client compatibility

16 VLANs

16 SSIDs

Physical Specifications

Network Interfaces	<ul style="list-style-type: none">• Auto-sensing 10/100 Ethernet• Input from Wavion Injector
Power Input	<ul style="list-style-type: none">• Power from a Wavion POE Injector.
Indicator Lights	<ul style="list-style-type: none">• Ethernet port LED Link/Act indicator• System Status LED indicator• RF channel status indicator
Physical Dimensions	<ul style="list-style-type: none">• Height: 9 cm• Length: 39 cm• Width: 36 cm• Weight: 4.6 Kg without mounting brackets

Power Specifications

Power Input	<ul style="list-style-type: none">• 55VDC, supplied over Ethernet from Wavion injector.
Input Power Consumption	<ul style="list-style-type: none">• Power from Wavion Injector max.0.8A @ 55VDC• Input power consumption for units is max. 0.45A@55V; maximal power 25W.

Environmental Specifications

Operating Temperature Range	-40°C to +55°C (without Sun Shield) -40°C to +60°C (with Sun Shield)
Storage Temperature Range	-45°C to +85°C
Weather Rating	IP67
Wind Survivability	165 mph
Salt and Fog Rust Resistance	MIL-STD-810F 509.4
Shock and Vibration	ESTI 300-192-4 spec T41.E
Transportation	ISTA2A

Approvals

RF	FCC CFR 47 part 15, Sub Part C ETSI 300 328 V1.7.1 (2006)
Safety	TUVus EN 60950-1:2001+A11:2004 IEC 60950-1:2001 First Edition Information Technology equipment – Safety – Part 1
EMC	FCC CFR 47 Part 15, Sub Part B, Class B (USA) ETSI 301 489-4 V1.3.1 (2002), ETSI 301 489-1 V1.5.1 (2003)
Regulatory Compliance	RoHS , CE 0682 - TBD!


Chapter 6

Antenna 2.4GHz Specifications and Patterns

The chapter describes antenna specifications and patterns for the antennas supplied with the Wavion WBS-2400.

MT-343037/CV 2.4GHz Sector Antenna

Single port radiation patterns in azimuth and elevation including cross-pol at 2437MHz

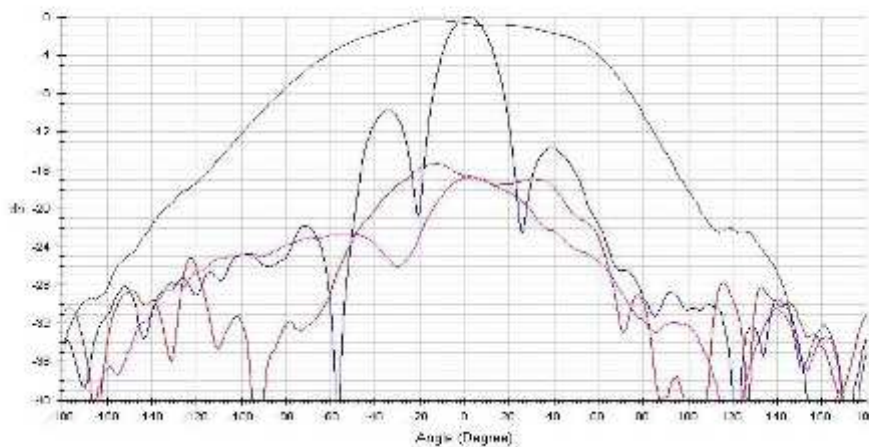

2.4GHz Flat Panel Base Station Antenna

Antenna Electrical Specifications

Number of antennas	3
Frequency Range	2.4 - 2.4835 GHz
Peak Gain	10.5 dBi (min)
2.4-2.4835 GHz	0 dBi (max) design goal at all directions -8 dBi (max) design goal at all directions
VSWR	1.5 :1 (max) R.L. -14 dB (max)
Azimuth 3 dB Beamwidth	120°± 3°
Azimuth Ripple	3 dB (max)
Azimuth Squint	± 3°
Polarization	Linear Vertical
Elevation 3 dB Beamwidth	20°± 1°
Elevation Tilt	± 2° (max)
Side Lobes Level	- 12 dB (max)
Side Lobes Level @ ±120° azimuth (0 degree elevation)	- 20 dB (max)
Cross Polarization	- 15 dB (max)
Front to Back Ratio	- 25 dB (max)
Isolation antennas	between 10 to 20 dB
Input Impedance	50 Ohms
Input Power	6 W (max)
Lighting protection	DC Grounded

Mechanical

Dimensions (Lx W x D)	346.5 x 344.7x 44 mm (max) The antenna contour per Wavion enclosure
Weight	1.2 kg (max), 1.0 kg design goal
RF Connector	3x MCX female
Radome	Plastic color- RAL 9002
Base Plate	Aluminum with chemical conversion coating
Outline Drawing	See attached drawing.
Spacing elements	between 90 mm
Antenna service life	10 Years (min)

Antenna ENVIRONMENTAL TEST				
TEST	STANDARD	DURATION	TEMPERATURE	NOTES
Water Tightness	IEC 529	-	-	IP67***
Internal pressure				TBD ****
Solar Radiation	ASTM G53	1000 h	-	-
Flammability	UL 94	-	-	Class HB
Salt Spray	IEC 68-2-11 Ka	500 h	-	-
Ice And Snow	-	-	-	25mm Radial
Wind Speed	-	-	-	266 Km/h
Survival Operation	-	-	-	160 Km/h
Regulatory Compliance	RoHS , CE 0682			
Low Temperature	IEC 68-2-1	72 h	-45°C	-
High Temperature	IEC 68-2-2	72 h	+90°C	-
Temp. Cycling	IEC 68-2-14	1 h	-45°C +90°C	3 Cycles
Vibration	IEC 60721-3-4	30 min/axis	-	Random 4M5
Shock Mechanical	IEC 60721-3-4	-	-	4M5
Humidity	ETSI EN300-2-4 T4.1E	144 h	-	95%

Chapter 7

Product Specification WBS-5800

The tables in this chapter contain specifications for the Wavion WBS-5800.

Wireless Specifications

compliant	IEEE 802.11b/g
Frequency band	5.725–5.850 GHz
Modulation	802.11a: OFDM (64QAM, 16QAM, QPSK, BPSK)
TX Power Maximum	Max. power per antenna: 19dBm (FCC version - Maximum transmit power will vary by channel and data rate)
Beamformer Directed Power	EIRP + Beamforming gain: 43dBm
EIRP Calculations	Antenna Gain – 12.5 dBi Total EIRP - 35.5 dBm
RX Sensitivity*	802.11a
Antenna Array	Three 12.5 dBi omni-directional antennas

* RX Sensitivity

-102.5 dBm @	6 Mbps
-100.5 dBm @	9 Mbps
-99.5 dBm @	12 Mbps
-98 dBm @	18 Mbps
-95 dBm @	24 Mbps
-92 dBm @	36 Mbps
-88 dBm @	48 Mbps
-86 dBm @	54 Mbps

Management Specifications

Web based configuration and management tool
SNMPv2 with standard and Wavion MIB support
Configuration save and restore
Network and client statistics

Security Specifications

Packet filtering via layer 2 & 3
WEP (64 bit or 128 bit)
WPA:
Encryption: WEP or TKIP
Authentication: Pre-Shared Key or 802.1x with RADIUS Server (EAP-TLS, PEAP, EAP-TTLS)
VPN pass-through and tagging
HTTPS for web-based management tools

Networking and QoS Specifications

Full 802.11b/g client compatibility
16 VLANs
16 SSIDs

Physical Specifications

Network Interfaces	<ul style="list-style-type: none">• Auto-sensing 10/100 Ethernet• Input from Wavion Injector
Power Input	<ul style="list-style-type: none">• Power from a Wavion POE Injector.
Indicator Lights	<ul style="list-style-type: none">• Ethernet port LED Link/Act indicator• System Status LED indicator• RF channel status indicator
Physical Dimensions	<ul style="list-style-type: none">• Height: 9 cm• Length: 39 cm• Width: 36 cm• Weight: 4.6 Kg without mounting brackets

Power Specifications

Power Input	<ul style="list-style-type: none">• 55VDC, supplied over Ethernet from Wavion injector.
Input Power Consumption	<ul style="list-style-type: none">• Power from Wavion Injector max.0.8A @ 55VDC• Input power consumption for units is max. 0.45A@55V; maximal power 25W.

Environmental Specifications

Operating Temperature Range	-40°C to +55°C (without Sun Shield) -40°C to +60°C (with Sun Shield)
Storage Temperature Range	-45°C to +85°C
Weather Rating	IP67
Wind Survivability	165 mph
Salt and Fog Rust Resistance	MIL-STD-810F 509.4
Shock and Vibration	ESTI 300-192-4 spec T41.E
Transportation	ISTA2A

Approvals

	FCC CFR 47 part 15, Sub Part C
RF	
	TUVus
	EN 60950-1:2001+A11:2004
Safety	IEC 60950-1:2001
	First Edition
	Information Technology equipment – Safety – Part 1
EMC	FCC CFR 47 Part 15, Sub Part B, Class B (USA)

Water Tightness	IEC 529	-	-	IP67***
-----------------	---------	---	---	---------

Antenna Electrical Specifications

Number of antennas	3	
Frequency Range	5.7 - 5.9 GHz	
Peak Gain 5.7 - 5.9 GHz	12.5 dBi	
VSWR	1.5 :1 (max)	R.L. -14 dB (max)
Azimuth 3 dB Beamwidth	120° ± 3°	
Azimuth Ripple	3 dB (max)	
Azimuth Squint	± 3°	
Polarization	Linear Vertical	
Elevation 3 dB Beamwidth	20° ± 1°	
Elevation Tilt	± 2° (max)	
Side Lobes Level	- 12 dB (max)	
Side Lobes Level @ ±120° azimuth (0 degree elevation)	- 20 dB (max)	
Cross Polarization	- 15 dB (max)	
Front to Back Ratio	- 25 dB (max)	
Isolation between antennas	10 to 20 dB	
Input Impedance	50 Ohms	
Input Power	6 W (max)	
Lighting protection	DC Grounded	

Mechanical

Dimensions (Lx W x D)	346.5 x 344.7x 44 mm (max) The antenna contour per Wavion enclosure
Weight	1.2 kg (max), 1.0 kg design goal
RF Connector	3x MCX female
Radome	Plastic color- RAL 9002
Base Plate	Aluminum with chemical conversion coating
Outline Drawing	See attached drawing.
Spacing between elements	90 mm
Antenna service life	10 Years (min)

**ENVIRONMENTAL
TEST****STANDARD****DURATION****TEMPERATURE****NOTES**

ENVIRONMENTAL TEST	STANDARD	DURATION	TEMPERATURE	NOTES
Internal pressure				TBD ****
Solar Radiation	ASTM G53	1000 h	-	-
Flammability	UL 94	-	-	Class HB
Salt Spray	IEC 68-2-11 Ka	500 h	-	-
Ice And Snow	-	-	-	25mm Radial
Wind Speed	-	-	-	266 Km/h
Survival Operation	-	-	-	160 Km/h
Regulatory Compliance	RoHS , CE 0682			
Low Temperature	IEC 68-2-1	72 h	-45°C	-
High Temperature	IEC 68-2-2	72 h	+90°C	-
Temp. Cycling	IEC 68-2-14	1 h	-45°C +90°C	3 Cycles
Vibration	IEC 60721-3-4	30 min/axis	-	Random 4M5
Shock Mechanical	IEC 60721-3-4	-	-	4M5
Humidity	ETSI EN300-2-4 T4.1E	144 h	-	95%


Chapter 8

Antenna 5.8GHz Specifications and Patterns

The chapter describes antenna specifications and patterns for the antennas supplied with the Wavion WBS-5800.


MT-463009CV 5.8GHz Antenna Azimuth Patterns directional Antenna

Single port azimuth radiation pattern including cross-pol at 5.8GHz

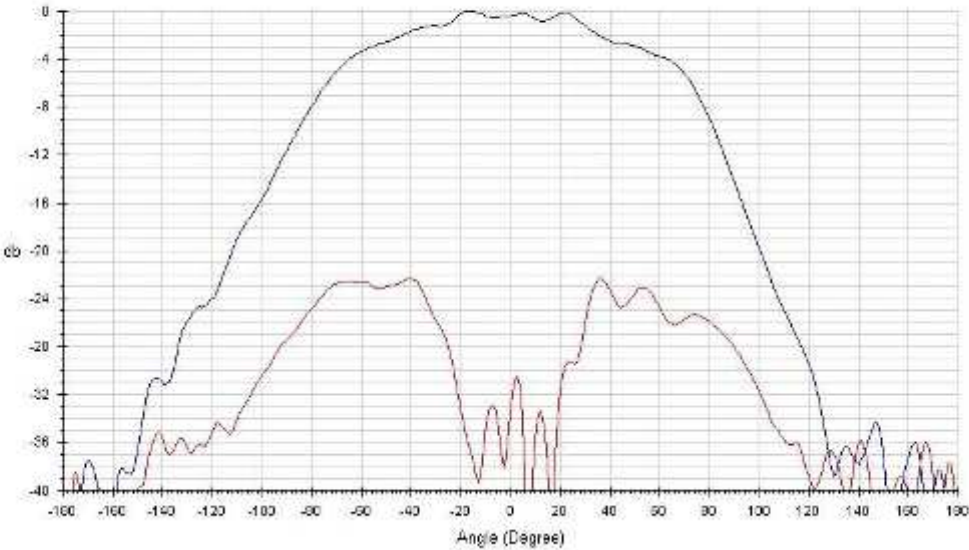

MT-463009CV 5.8GHz Antenna Elevation Patterns

Single port elevation radiation pattern including cross-pol at 5.8GHz

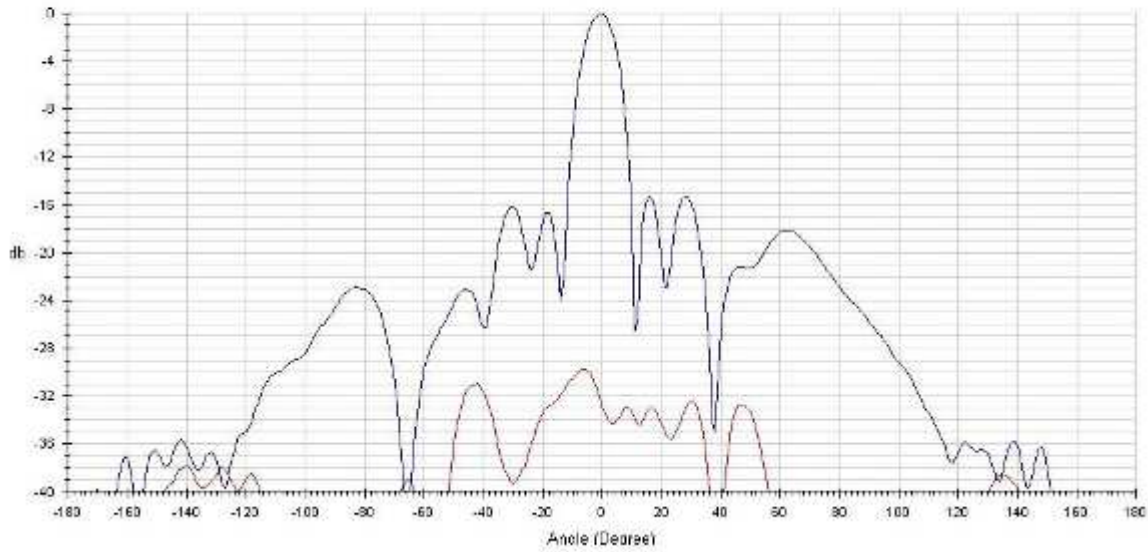

Chapter 9

Installation Accessories

This chapter describes the accessories available for the WBS-2400 and ordering information. The following topics are covered in this chapter:

- [Ethernet Cables](#)
- [Sun Protection](#)
- [Lightning Protection](#)
- [Power Over Ethernet](#)

Ethernet Cables

Description	Manufacturer	Part Number	Distributor	Contact Information
Outdoor CAT5e double jacket 4-pair data cable	Teldor	8393204101	G.Bares	Tel: +972-(4)-8215450

Sun Protection

Description	Product Name	Part Number
Sun Shield for WBS-2400/5800X, extends upper operation temperature range to +60°C	WA-SUN-SH	27009023

Lightning Protection

Description	Manufacturer	Part Number	Contact Information
Data protection device	Hyperlink	HGLN-CAT5-2	www.hyperlinktech.com

Power Over Ethernet

Description	Product Name	Part Number
Wavion Injector for powering the WBS-2400/5800over an Ethernet cable. Output 55VDC, 1A.	WPI-AC-55W	27002213

Chapter 10

Wind Loading Considerations

This chapter describes wind loading considerations for the WBS-2400/5800X.



Note: It is recommended to evaluate the static and dynamic load bearing capabilities for each assembly and installation individually. It is your responsibility to evaluate the load bearing capabilities of the structure.

The Wavion WBS-2400/5800 weighs approximately 16 lbs, including all mounting hardware. When the Wavion WBS-2400/5800 is mounted on a pole, the sail area of the WBS-2400/5800 is approximately 1 square foot. The Wavion WBS-2400/5800 can load a pole with a maximum load of 3400 Newton in wind conditions of 165mph.

Chapter 11

Acronyms

Acronym	Description
2P	Two-Phase or Split Phase
2W	Two-Wire
3W	Three-Wire
AC	Alternating Current
ANSI	American National Standards Institute
AWG	American Wire Gauge
C	Celsius
CAT	Category
CCK	Complementary Code Keying
CFR	Code of Federal Regulations
CSA	Canadian Standard Association
dB	Decibels
dBi	Decibels Relative to an Isotropic Radiator
DBPSK	Differential-Binary Phase-Shift Keying
DC	Direct Current
DQPSK	Differential-Quadrature Phase-Shift Keying
DSSS	Direct-Sequence Spread Spectrum
EMC	Electromagnetic Compatibility
EN	IEC standard
ESD	Electrostatic Discharge
FCC	Federal Communications Commission
Hz	Hertz
HPoE	High Power over Ethernet
IEEE	Institute of Electrical and Electronics Engineers
IP67	Ingress Protection Standard
ISTA	International Safe Transit Association
LAN	Local Area Network

Mbps	Megabits Per Second
MHz	Megahertz
MIL-STD	Military Standard
N	Neutral
NEC	National Electrical Codes
NEMA	National Electrical Manufacturers Association
OFDM	Orthogonal Frequency Division Multiplexing
P	Phase
PE	Protective Earth
PoE	Power over Ethernet
RJ45	Registered Jack 45
RSS	Received Signal Strength
Rx	Receive
RXD	Receive Data
TUV	Technical Inspection Association
Tx	Transmit
TXD	Transmit Data
UL	Underwriters Laboratories
VAC	Voltage (Alternating Current)
VCCI	Voluntary Control Council for Interference
VDC	Voltage (Direct Current)
W	Watts

Chapter 12

Appendix A: WBS-2400/5800 Product list

Part Number	Product name	Product description
TBD 12406101	WBS-2400-FCC	Spatially adaptive, multi radio 2.4GHz WiFi base station, 6 antenna FCC/TUV compliant
12406102	WBS-2400-EU	Spatially adaptive, multi radio 2.4GHz WiFi base station, 6 antenna ETSI / CE compliant
12406104	WBS-2400-IL	Spatially adaptive, multi radio 2.4GHz WiFi base station, 6 antenna Israel compliant
15806101	WBS-5800-FCC	Spatially adaptive, multi radio 5.8GHz WiFi base station, 6 antenna FCC/TUV compliant