

**Connect 3G-X™
Cellular Signal Booster**


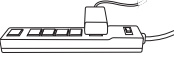

Need help?



www.weboost.com



Customer Support 866-294-1660
Mon.- Fri. Hours: 7 am to 6 pm MST

  <p>FAILURE TO DO THIS WILL VOID YOUR WARRANTY IN THE EVENT OF A POWER SURGE OR LIGHTNING STRIKE.</p>	<p>IT IS VERY IMPORTANT TO POWER YOUR SIGNAL BOOSTER USING A SURGE PROTECTED AC POWER STRIP WITH AT LEAST A 1000 JOULE RATING.</p>	 <p>THE SIGNAL BOOSTER UNIT IS DESIGNED FOR USE IN AN INDOOR, TEMPERATURE-CONTROLLED ENVIRONMENT (LESS THAN 150 DEGREES FAHRENHEIT). IT IS NOT INTENDED FOR USE IN ATTICS OR SIMILAR LOCATIONS SUBJECT TO TEMPERATURES IN EXCESS OF 150°F.</p>
--	--	---

Installation Instructions for the Following weBoost Signal Booster:

**Connect 3G-X™ In-Building Wireless 800/1900 MHz
SmarTech III® Signal Booster
Model # 470005 FCC ID: PWO460005 IC:4726A-460005**

The term "IC" before the radio certification number only signifies that Industry Canada technical specifications were met.

Contents

Package Contents3
 Before Getting Started3
 Find the Strongest Signal3
 Installation Details4
 Quick Install5
 Outside Antenna Installation5
 Inside Antenna Installation5
 Signal Booster Installation6
 Powering Up The Signal Booster6
 Troubleshooting & Understanding Lights6
 Additional FAQ7
 Available Kit Options8
 Safety Guidelines10
 Signal Booster Specifications11
 Guarantee12



Package Contents



Connect 3G-X™



AC Power Supply
6V / 2.5A
(Not included with some models)
(859912)



Outside Antenna Kit
50 Ohm Wide Band Antenna
75' LMR Cable
(314411-40075)




Panel Antenna Kit
Panel Antenna
60' LMR Cable
(311135-40075)


Upgrade Option (311155-0630)



Panel Antenna
w/F-Female Connectors
RG6 30' Coax Cable
w/F-Male Connectors
*Required F-Female to N-Male
adapter*



Pole Mount Bracket



Wall Mount Bracket

Tools Required for Installation:

(depending on your particular installation, you will need the following tools)

1. Pole mount - 10 mm open-end wrench or adjustable wrench
2. Wall mount - Drill and 3/16 inch bit, Phillips-head screwdriver

Before Getting Started

Before you install your Connect 3G-X and start enjoying improved cellular reception in your facility, please do the following:

1. Read through all the installation steps. This will help you know what to expect from start to finish.
2. Watch the YouTube video demonstrating the Connect 3G-X installation at weboost.us/connect3G-Xvideo.
3. Familiarize yourself with all materials in your product package. This will allow you to know which pieces are referenced in the instructions.
4. Identify the location of your best available cellular signal. See instructions that follow.
5. Determine the best installation locations for your Outside Antenna, Signal Boost, and Inside Antenna. Test the function of your Connect 3G-X system before finalizing installation.

Find the Strongest Cellular Signal

Before you install your Connect 3G-X signal booster, you must determine the location of the best available cellular signal. This will affect the location of your Outside Antenna and will help you get the best performance from your Connect 3G-X. You can find the strongest signal outside your building, typically at the highest point available, using any of the following methods:

1. Best method:


Connect the Outside Antenna to the Connect 3G-X signal booster, and the Connect 3G-X to the Inside Antenna. Have one person outside (on the roof for best results) rotate the Outside Antenna with a second person inside the building near the Inside Antenna watching the signal strength on a phone. This allows you to read the signal strength from nearby cell towers.

- a. The person inside should have the phone in test mode so the numerical signal strength can be read. This is more accurate than




the bar indicator. Go to www.weboost.us/test-mode-instructions for help in finding the test mode for your phone.

- b. The person on the roof should turn the Outside Antenna 45 degrees at a time. Allow 30 seconds for the phone to register with each turn.

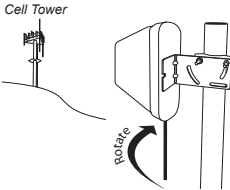

- c. The person inside should note the readings on the phone with each turn. Signal readings usually appear as a negative number. The closer the number gets to zero, the stronger the signal (for example, -86 dB would be a moderately good reading while -55 dB would be an excellent reading, and -110 dB would be a weak, or unusable signal).

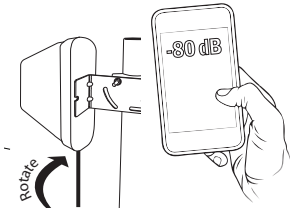

- d. Once you have determined which direction provides the strongest outside signal, you can install the Outside Antenna in that general direction.

2. **Good methods:**

- a. Place calls from several locations outside your building. As you move to different locations, note where you get the best reception.
- b. If you have a smart phone, you can download apps that help you identify locations of cell phone towers or the strongest signal. Go to the App Store and search for "cell signal" to find available apps for your device.



3. **Acceptable method:** Check the bar indicator on your cell phone display and note where the signal appears the strongest. (Note: cell phone bars are only an approximation of signal strength and vary from phone to phone.) Phones can take up to 30 seconds to reset to a new reading. Be patient and repeat your signal check several times.

WAIT 30 SECONDS




For additional instructions on finding the strongest cellular signal, watch the installation video at: weboost.us/connect3G-Xvideo.

Installation Details

As you plan your installation, keep the following guidelines in mind to maximize your signal strength:

1. Maintain a vertical distance of at least 20 feet or a horizontal distance of at least 50 feet between the Outside Antenna to the Inside Antenna.

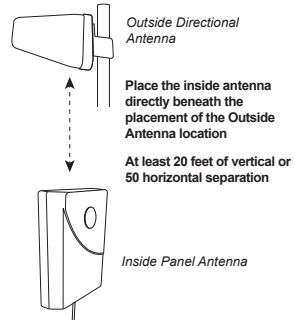

2. Be sure the Inside Antenna is NOT facing toward the Outside Antenna. This creates potential oscillation or feedback and reduces the effectiveness of the Connect 3G-X.
3. If you do not know how to mount hardware or run coax cable through walls, ceilings and floors, get help from a weBoost Certified Installer



at www.weboost.com/us/installers or from a qualified contractor or electrician.


We recommend you install a Lightning Surge Protector (**859902 sold separately**). Attach the cable from the Outside Antenna to the surge protector and ground the surge protector. See diagram on page 10 for more details.

Quick Install

For more detailed instructions on installation, read the description later in this guide or watch the video at weboost.us/connect3G-Xvideo.

NOTE: Create a “soft” install first by testing components in your proposed locations before securing them with hardware.

1. Select a location on the roof of the building to install the Outside Antenna. Make sure the antenna is clear of obstructions that could block the signal from the nearest cellular tower.
2. Select a location to install the Signal Booster that is well ventilated and away from excessive heat, moisture, and direct sunlight.
3. Select a location for the Inside Antenna that is in the center of the area where the signal needs to be amplified and a minimum of 20 vertical feet or 50 horizontal feet from the Outside Antenna.

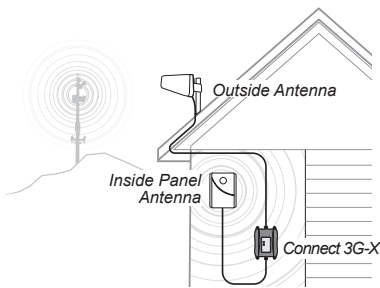

4. Run the coax cable from the Outside Antenna to the Signal Booster and attach it to the connector labeled “Outside Antenna.” Connect another coax cable to the connector labeled “Inside Antenna” and run it to the Inside Antenna. NOTE: Be careful not to bend the center pins on the connectors when securing connections.

5. Once you have ensured all connections are tight, connect the Signal Booster to a surge protected power strip with at least a 1000 Joule rating to protect your equipment from power surges and lightning strikes (See page 10 for information on lightning protection).
6. If your Connect 3G-X is working correctly, the lights will be green. If the lights are orange or red, see the “Troubleshooting” section starting on page 6.

Outside Antenna Installation

1. Select a location on the roof or an outside wall where the Outside Antenna can be mounted without obstruction (at least three feet of clearance in all directions) and with at least 20 feet of vertical or 50 feet of horizontal separation from the Internal Antenna.
2. After connecting the coax cable to the antenna, run it underneath the down side of your roof’s flashing if mounted on the roof. Tip: Often you can follow the route used by satellite TV cables. If you attach the Outside Antenna to a wall, run the cable along the outside of the wall to the area where you want the cable to appear on the inside of the building, then drill a hole through the wall where the cable will enter the building. Caution: Before drilling holes for the cable, be sure there are no electrical outlets, wiring, sewer, or water pipes you could puncture or sever.
3. Seal any holes with silicone, cable bushings or other waterproof sealant.

Inside Antenna Installation


1. Select a location in the center of the area where you want cellular signals improved to mount the Inside Antenna. If you have multiple rooms with poor signal, you may need multiple Inside Antennas. These can attach to the Signal Boost by using a splitter (sold separately). Contact Wilson Electronics for more information.
2. Ensure a minimum of 20 feet vertical or 50 horizontal feet separation from the Outside Antenna.

3. Inside Antennas can be mounted above ceiling drywall, on a ceiling inside a room, or on a wall inside a room. Ensure the Inside Antenna is facing AWAY from the Outside Antenna to avoid oscillation (feedback).
4. Use the mounting hardware included in the package to secure the Inside Antenna to the selected location.
4. If you know that only one frequency band (800 MHz or 1900 MHz) is available in your coverage area, reduce the gain control on the frequency band that is NOT in use to the lowest setting. This will reduce power consumption of the Signal Booster.

For illustrations of these installation steps, view the install video at weboost.com/us/connect3G-Xvideo.

Signal Booster Installation


1. Select a location for the Signal Booster that is away from excessive heat, direct sunlight, moisture and well ventilated. The enclosure must NOT be air tight. Also, be sure the location is near a power source.
2. Connect the cables to the Signal Booster from the Outside Antenna and Inside Antenna at the designated ports.

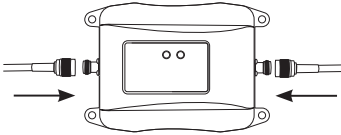

3. Do NOT connect the Signal Booster to the power source until all cables are connected.

Powering Up The Signal Booster


1. Ensure the cables to both the Outside Antenna and Inside Antenna are securely connected before powering up the Signal Booster.
2. Plug the power supply into the Signal Booster input marked "POWER" and then into a surge protector power strip with a minimum 1000 Joule rating.



3. The lights on the Signal Booster should remain green. If the lights are red or orange, see the "Troubleshooting" section on page 6.

Troubleshooting & Understanding Lights

The Home 4G includes four indicator lights, one for each band (see FAQ for explanation of MHz bands). Each indicator light will either be green, orange or red.

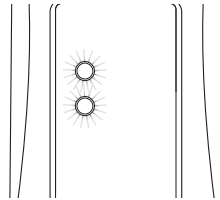

Green indicates that the booster is powered and operating at maximum gain.

Solid Red indicates that the booster has shut off on the associated frequencies to prevent oscillation (feedback).

Solid Orange indicates that the booster has shut off on the associated frequencies due to close proximity of a cell tower.

Green/Orange Blinking indicates that the booster is operating at a reduced gain due to close proximity of a cell tower.

Green/Red Blinking indicates that the booster is operating at a reduced gain to prevent oscillation (feedback).


Note: All red light issues must be resolved before orange light issues.



Fixing Red Light Issues

If one or more lights on the Signal Booster are red:

1. Make sure all connections are tight.
2. Increase the distance between the outside antenna and the inside antenna, by moving them horizontally and/or vertically farther apart until the light(s) change to green.

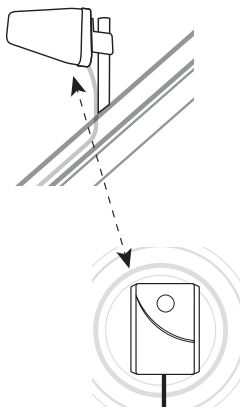

3. Follow the same steps for a green/red blinking light until the light goes solid green.
4. If more separation is not possible and the coverage of the booster is too small with a green/red blinking light indicating reduced gain, contact the weBoost Customer Support Team for assistance: 866-294-1660.

Lights Off

If one or more of the lights on the Signal Booster are off verify power to your surge protected power strip.

NOTE: The Signal Booster can be reset by disconnecting and reconnecting the power supply.

For additional descriptions on troubleshooting, see the install video at weboost.com/us/connect3G-Xvideo.

Additional FAQ:

What hours can I contact tech support?

Customer Support can be reached from 7:00am to 6:00pm MST, by calling (866-294-1660), or by email, at support@weboost.com

How does weather affect the performance of my Outside Antenna?

Water vapor (e.g. rain, fog, snow or other precipitation) creates an effective filter to cellular signal. In times of heavy precipitation, you may see less performance.

What's the difference between the 800 MHz and the 1900 MHz bands? How do I know which MHz band my cell phone uses?

The Connect 3G-X works with all major North American cellular providers on the 800 & 1900 MHz frequencies. Traditionally, 800/1900MHz are associated with voice and 3G data; while 700MHz and 1700/2100MHz are associated with 4G data. For more detail, refer to wirelessadvisor.com.

Carrier Frequency Use

We recommend visiting www.wirelessadvisor.com (United States) or <http://bit.ly/1mQf2GI> (Canada) for information regarding the frequency band used by your cell service provider in a specific geographical location.



INSIDE ANTENNA EXPANSION KITS**Kit 309900-50N**

2- Wall Panel antennas
1- 50 ohm 3-Way Splitter

Kit 309905-50N

3- Wall Panel Antennas
3- 2-Way 50 Ohm Splitters

Kit 309902-75F

2- Wall Panel Antennas
1-3-Way 75Ohm Splitter

Kit 309903-75F

3- Wall Panel Antennas
3- 2-Way 75Ohm Splitters

Kit 309904-75F

1- Wall Panel Antenna
1- 2-Way 75 Ohm Splitter

Kit 301213

Desktop Antenna w/ 5' RG174

INSIDE ANTENNAS**Kit 301121-40010**

50 Ohm Dome Antenna
10' LMR400

Kit 301151-0610

75 Ohm Dome Antenna
10' RG6 Cable

Kit 311155-0630

75 Ohm Wall Mount Panel Antenna
30' RG6 Cable

Kit 311135-5820

50 Ohm Wall Mount Panel Antenna
20' RG58 Cable

Kit 311135-40060

50 Ohm Wall Mount Panel Antenna
60' LMR400 Cable

Kit 301151-1110

75 Ohm Dome Antenna
10' RG11 cable

Kit 311155-1150

75 Ohm Wall Mount Panel Antenna
50' RG11 Cable

Kit 311155-40060

75 Ohm Wall Mount Panel Antenna
60' LMR400 Cable

Kit 304412-40010

50 Ohm 4G Dome Antenna
10' Wilson400 Cable

Kit 304412-5810

50 Ohm 4G Dome Antenna
10' RG58 cable

Kit 304419-1110

75 Ohm 4G Dome Antenna
10' RG 11 cable

Kit 304419-17410

75 Ohm 4G Dome Antenna
10' RG174 cable

*May need separate adapter

Kit 304419-0610

75 Ohm 4G Dome Antenna
10' RG6 cable

50 OHM OUTSIDE ANTENNA KITS**Kit 314453-5825**

50 Ohm Pole Mount Panel Antenna
25' RG58 Cable

Kit 314411-5825

50 Ohm Wide Band Directional
25' RG58 Cable

Kit 301111-5850

Yagi Directional Antenna
50' RG58 Cable

Kit 311129 - 5840

800 MHz Yagi Directional
40' RG58 Cable

Kit 311203-5820

Omni-Directional Antenna
20' RG58 Cable

Kit 311124-5830

1900 MHz Yagi Antenna
30' RG58 Cable

Kit 314411-40075

50 Ohm Wide Band Directional
75' LMR400 Cable

Kit 311203-40020

Omni-Directional Antenna
30' LMR400 Cable

Kit 301111-400170

Yagi Directional w/ N-Female
170' LMR400

Kit 311124 - 400100

1900 MHz Yagi Directional
100' LMR400 Cable

Kit 311129-400100

800 MHz Yagi Antenna
100' LMR400 Cable

Kit 314453-40075

50 Ohm Pole Mount Panel Antenna
75' LMR400 Cable

Kit 304422-40020

50 Ohm 4G Omni Antenna
20' Wilson400 cable

Kit 304422-5810

50 Ohm 4G Omni Antenna
10' RG58 cable

*May need separate adapter

Kit 304422-1120

50 Ohm 4G Omni Antenna
20' RG11 cable

*May need separate adapter

Mini-Mag

301126 w/ 12.5 RG174 cable- SMA

75 OHM OUTSIDE ANTENNA KITS**Kit 301111 - 0675**

Yagi Directional Antenna
75' RG6 Cable

N-Male to F-Female adapter

Kit 311201-0620

Omni Directional w/ F-Female
20' RG6 Cable

Kit 311129-0660

800 MHz Yagi Directional
60' RG6 Cable

N-Male to F-Female adapter

Kit 311124-0650

1900 MHz Yagi Directional
50' RG6 Cable

N-Male to F-Female adapter

Kit 314473 -0640

75 Ohm Pole Mount Panel Antenna
RG6 Cable

Kit 314475 - 0630

75 Ohm Wide Band Directional
30' RG6 Cable

Kit 311141 - 0620

75 Ohm Grey Brick Antenna
20' RG6 Cable

Kit 301111 - 11140

Yagi Directional Antenna
140' RG11 Cable

N-Male to F-Female adapter

Kit 311201-1120

Omni Directional w/ F-Female
20' RG11 Cable

Kit 311129-11110

800 MHz Yagi Directional
110' RG11 Cable

N-Male to F-Female adapter

Kit 311124-1180

1900 MHz Yagi Directional
80' RG11 Cable

N-Male to F-Female adapter

Kit 314473 -1175

75 Ohm Pole Mount Panel Antenna
75' RG11 Cable

Kit 314475 - 1175

75 Ohm Wide Band Directional
75' RG11 Cable

Kit 311141 - 1120

75 Ohm Grey Brick Antenna
20' RG11 Cable

Kit 304421-1120

75 Ohm 4G Omni Antenna
20' RG 11 cable

Kit 304421-17410

75 Ohm 4G Omni Antenna
10' RG174 cable

*May need separate adapter

Kit 304421-0610

75 Ohm 4G Omni Antenna
10' RG6 cable







Kit 304421-5810

75 Ohm 4G Omni Antenna
10' RG58 cable

*May need separate adapter



Safety Guidelines

-  **WARNING:** To uphold compliance with network protection standards, all active cellular devices must maintain at least 6 feet of separation distance from Panel and Dome antennas and 4 feet of separation distance from desktop antennas.
-  **WARNING:** Connecting the Signal Booster directly to the cell phone with use of an adapter will damage the cell phone.
-  **WARNING:** Use only the power supply provided in this package. Use of a non-Wilson Electronics product may damage your equipment.
-  **WARNING:** The Signal Booster unit is designed for use in an indoor, temperature-controlled environment (less than 150 degrees Fahrenheit). It is not intended for use in attics or similar locations subject to temperatures in excess of that range.
-  **WARNING:** Take care to ensure that neither you nor the pole comes near any power lines during installation.
-  **RF SAFETY WARNING:** Any antenna used with this device must be located at least 8 inches from all persons.

This is a CONSUMER device.

BEFORE USE, you **MUST REGISTER THIS DEVICE** with your wireless provider and have your provider's consent. Most wireless providers consent to the use of signal boosters. Some providers may not consent to the use of this device on their network. If you are unsure, contact your provider.

You **MUST** operate this device with approved antennas and cables as specified by the manufacturer. Antennas **MUST** be installed at least 20 cm (8 inches) from any person.


You **MUST** cease operating this device immediately if requested by the FCC or a licensed wireless service provider.

WARNING. E911 location information may not be provided or may be inaccurate for calls served by using this device.

This device complies with Part 15 of FCC rules. Operation is subject to two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by weBoost could void the authority to operate this equipment.



Lightning Surge Protector (sold separately)



RECOMMENDED: INSTALLING THE LIGHTNING SURGE PROTECTOR (SOLD SEPARATELY)

INSTALL THE LIGHTNING SURGE PROTECTOR (LSP) CLOSE TO THE SIGNAL BOOSTER. ATTACH THE CABLE FROM THE OUTSIDE ANTENNA TO THE SURGE PROTECTOR. **ENSURE THE LSP IS PROPERLY GROUNDED.** #859992-75 OHM MAY BE PURCHASED AT WWW.WEBOOST.COM OR BY CALLING 800-204-4104.



Signal Booster Specifications

Connect 3G-X™			
Model Number	472005		
Connectors	F-Female		
Antenna Impedance	50 Ohms		
Frequency	824-894 MHz / 1850-1990 MHz		
Passband Gain (nominal)	800 MHz Band 5	1900 MHz Band 2	
	60.3	60.4	
20 dB Bandwidth (MHz)	800 MHz Band 5	1900 MHz Band 2	
	Typical	40.8	74.7
	Maximum	41.1	75.0
Power output for single cell phone (dBm)	800 MHz Band 5	1900 MHz Band 2	
	Uplink	24.9	22.5
	Downlink	-2.2	-2.1
Power output for multiple received channels (Uplink) dBm	800 MHz Band 5	1900 MHz Band 2	
	No. Tones		
	2	24.8	20.2
	3	21.3	16.7
	4	18.8	14.2
	5	16.9	12.3
	6	15.3	10.7
Power output for multiple received channels (Downlink) dBm	800 MHz Band 5	1900 MHz Band 2	
	No. Tones		
	2	1.3	3.5
	3	-2.2	-0.1
	4	-4.7	-2.6
	5	-6.6	-4.5
	6	-8.2	-6.1
Noise Figure (typical downlink/uplink)	3 dB nominal / 6 dB nominal		
Isolation	> 90 dB		
Power Requirements	AC / DC 6V, 2.5A, w/2.5x5.5mm Jack		

The Manufacturer's rated output power of this equipment is for single carrier operation. For situations when multiple carrier signals are present, the rating would have to be reduced by 3.5 dB, especially where the output signal is re-radiated and can cause interference to adjacent band users. This power reduction is to be by means of input power or gain reduction and not by an attenuator at the output of the device.

Each Signal Booster is individually tested and factory set to ensure FCC compliance. The Signal Booster cannot be adjusted without factory reprogramming or disabling the hardware. The Signal Booster will amplify, but not alter incoming and outgoing signals in order to increase coverage of authorized frequency bands only. If the Signal Booster is not in use for five minutes, it will reduce gain until a signal is detected. If a detected signal is too high in a frequency band, or if the Signal Booster detects an oscillation, the Signal Booster will automatically turn the power off on that band. For a detected oscillation the Signal Booster will automatically resume normal operation after a minimum of 1 minute. After 5 (five) such automatic restarts, any problematic bands are permanently shut off until the Signal Booster has been manually restarted by momentarily removing power from the Signal Booster. Noise power, gain, and linearity are maintained by the Signal Booster's microprocessor.



2-Year Warranty

weBoost Signal Boosters are warranted for two (2) years against defects in workmanship and/or materials. Warranty cases may be resolved by returning the product directly to the reseller with a dated proof of purchase.

Signal Boosters may also be returned directly to the manufacturer at the consumer's expense, with a dated proof of purchase and a Returned Material Authorization (RMA) number supplied by weBoost. weBoost shall, at its option, either repair or replace the product.

This warranty does not apply to any Signal Boosters determined by weBoost to have been subjected to misuse, abuse, neglect, or mishandling that alters or damages physical or electronic properties.

Failure to use a surge protected AC Power Strip with at least a 1000 Joule rating will void your warranty.

RMA numbers may be obtained by contacting Customer Support at 1-866-294-1660.

Disclaimer: The information provided by weBoost is believed to be complete and accurate. However, no responsibility is assumed by weBoost for any business or personal losses arising from its use, or for any infringements of patents or other rights of third parties that may result from its use.

Copyright © 2015 weBoost. All rights reserved.

weBoost products covered by U.S. patent(s) and pending application(s)

For patents go to: weboost.com/us/patents



3301 East Deseret Drive, St. George, UT 84790
web: www.weboost.com | email: support@weboost.com
phone: 866-294-1660 | local: 435-673-5021 | fax: 435-656-2432

