


YOKO

(model number here)
2.4ghz Wireless A / V Sender

Instruction Manual

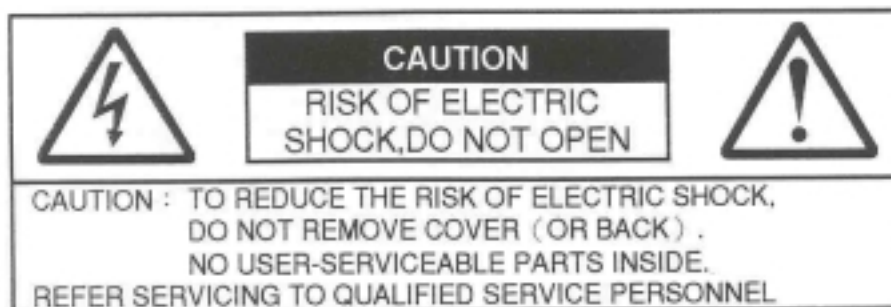

SA 1965

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.



SA 1966

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING : TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Warning

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.


Caution

Any changes or modifications in construction of this device, which are not expressly approved by the party responsible for compliance, could void the user's authority to operate the equipment.

Wireless CCD Camera

Operational instruction

- 1) External power supply operation. A 12v.d.c. output terminated with a 2.5mm coaxial plug with positive center pin.
- 2) Plug the adapter into the DC INPUT socket on the back panel, please see fig. 1 (A) . A camera lens protective cap, installed when the CCD camera is not in used or while transporting the unit, remove it.
- 3) You should notice a bright Power ON LED indicator, see fig. 1 (B), this means the unit is operating.
- 4) Select channel 1 , channel selector slide switch on the front panel of PATCH antenna. Fig. 1 (B), direct the PATCH antenna to the RECEIVER`S point of area where the choice of location you wish to put. The PATCH antenna SWIVELS 340 degrees and TILT angle 90 degrees, fig. 2 (A) and (B). Alignment and realignment of the PATCH antenna is important to achieve RECEIVER`S audio/video significant output quality. Especially more than one CCD camera are to be installed from different locations, as shown below.

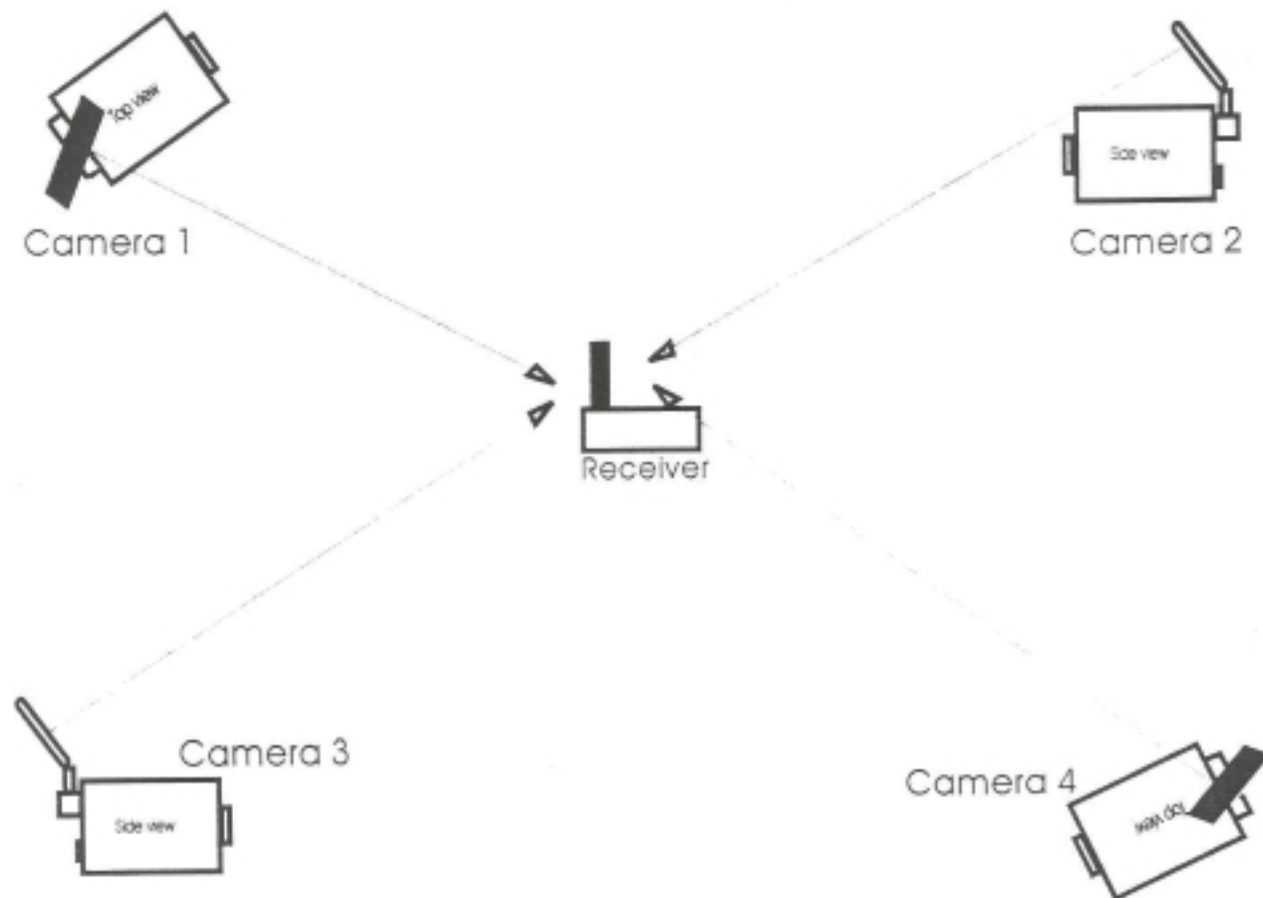

1. Power ON LED indicator
2. Back panel of PATCH antenna
3. Antenna swivel mounting
4. D.C. input socket
5. Front panel PATCH antenna
6. Channel selection switch
7. CCD camera / transmitter
8. Camera lens
9. Electret Microphone built-i
10. Wall bracket support

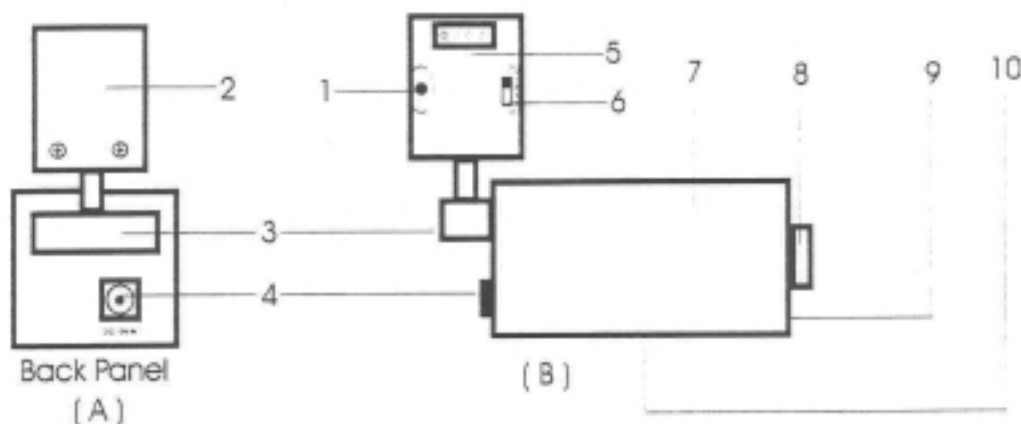


Fig. 1

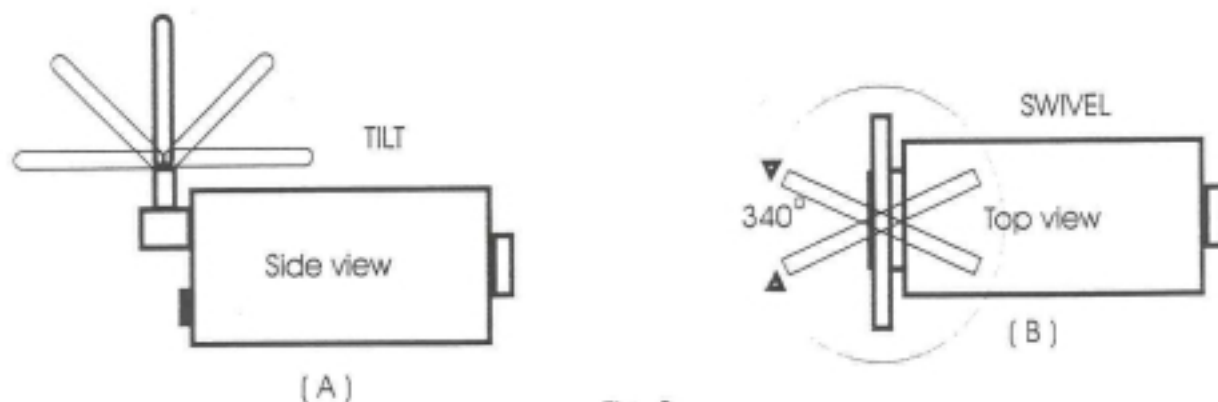


Fig. 2

Color CCD /Transmitter (model number here)

CCD Camera

Resolution

Lens

Illumination

R.F. Transmitter

Channel Frequencies

Transmit Range

Weight

Size

Power Voltage

1/3 inch SONY

510 line

3.5mm (standard)

0.02 Lux

2.4ghz Audio / Video

1, 2, 3, or 4

300 ft. Radius

xxx

xxx

12v.d.c. Adapter 500ma.